


HOROW

Installation Instructions

For toilet with L-bar screw set



Tools

1. Adjustable Wrench
2. Cross Screwdriver

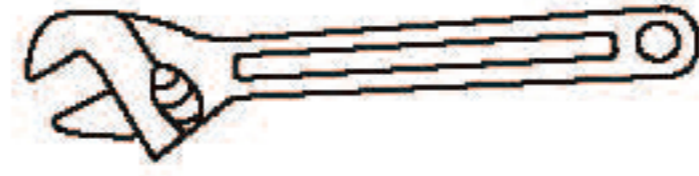


Installation Steps

1 Install the floor bolts and L-bar

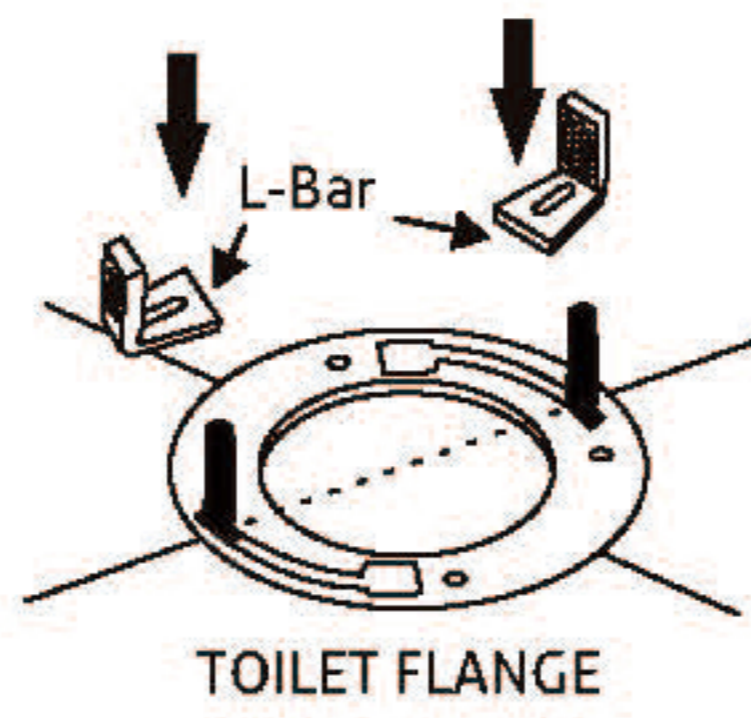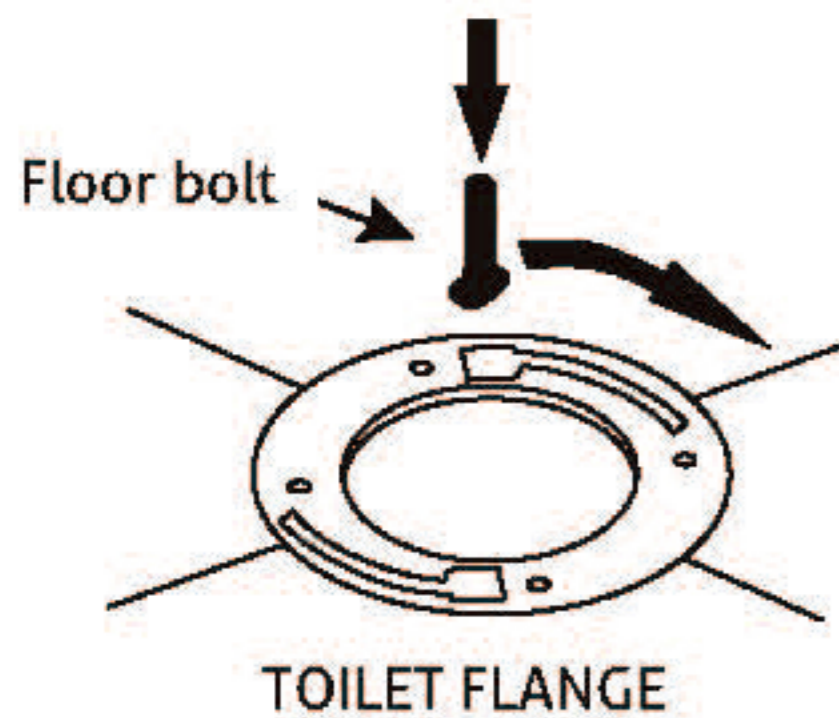


Note: The two screws and the center of the flange must be in a straight line


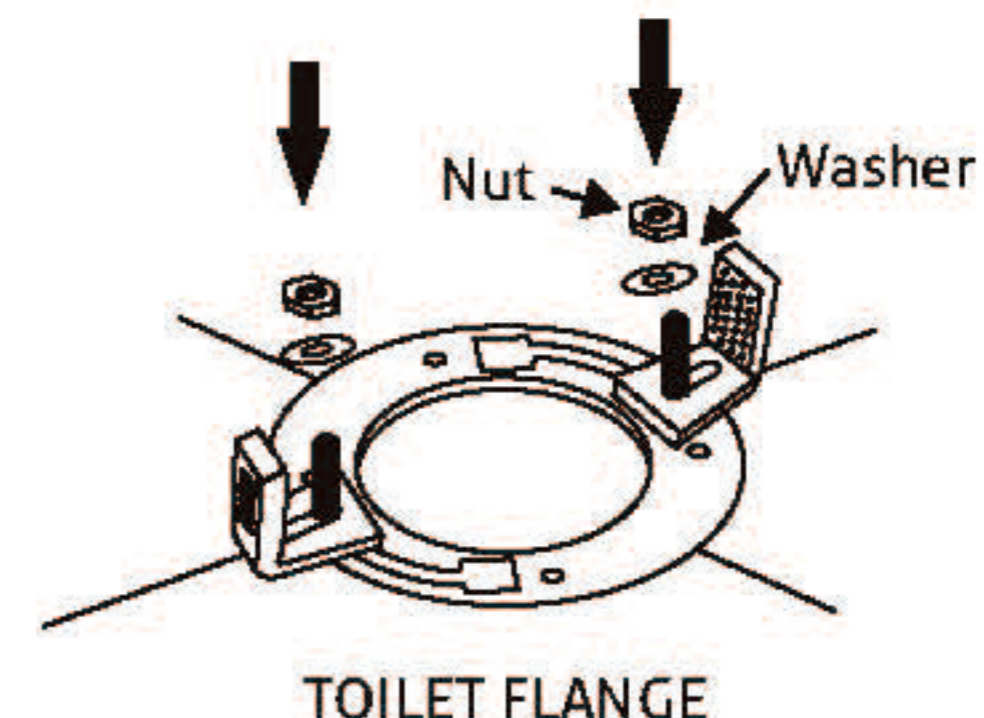


2 Install the wax ring.

Pull the L-bar to max distance, then tighten the nuts.

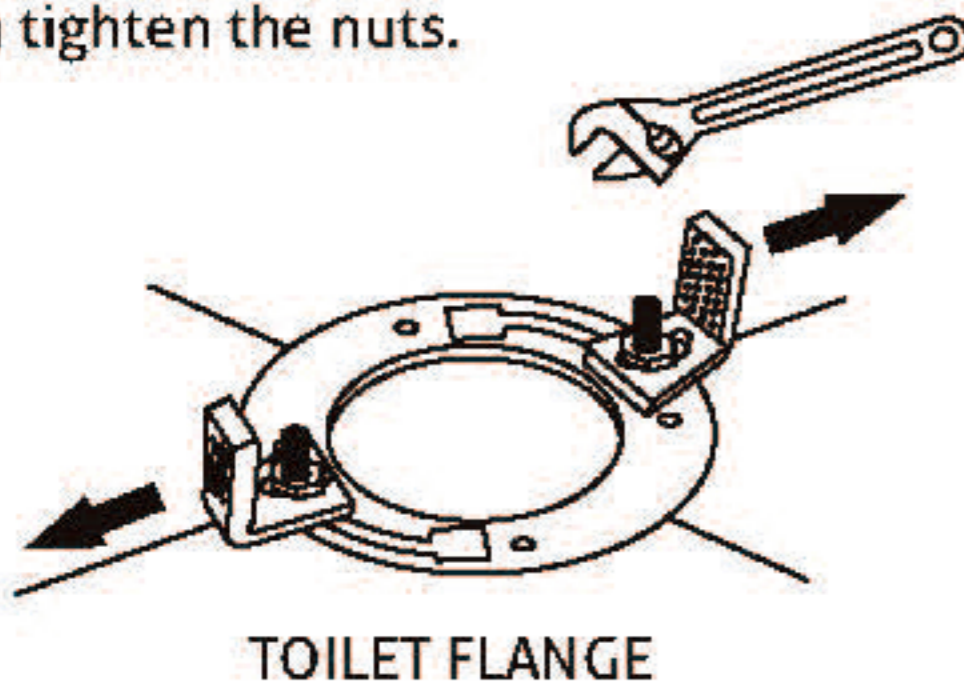


Put the wax ring on the flange

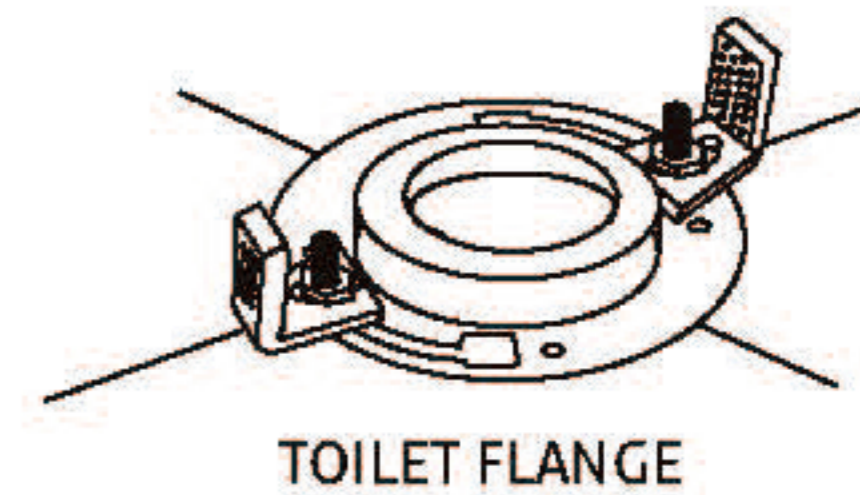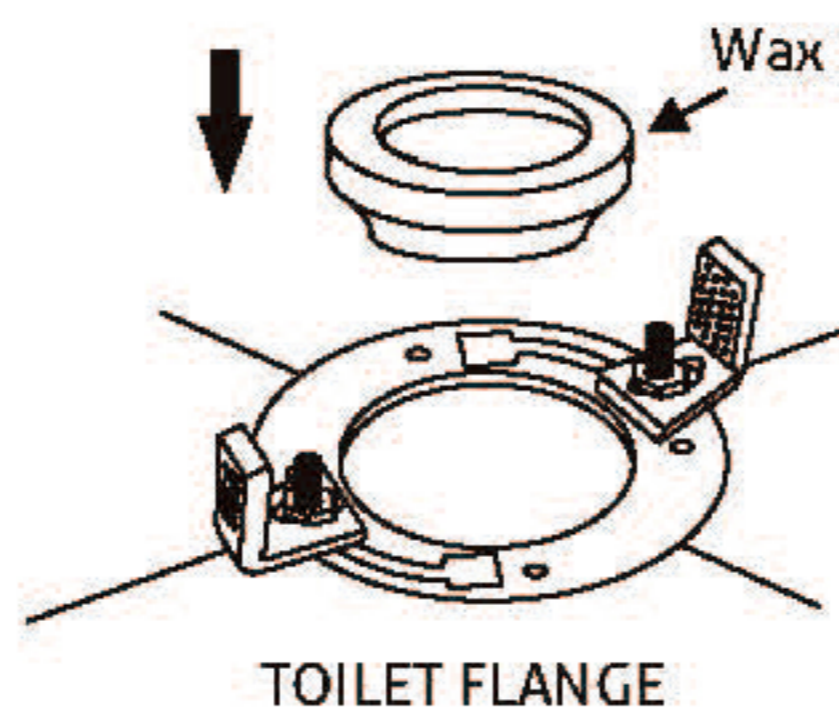

3 Install the toilet

Put the toilet on the flange and push it tight

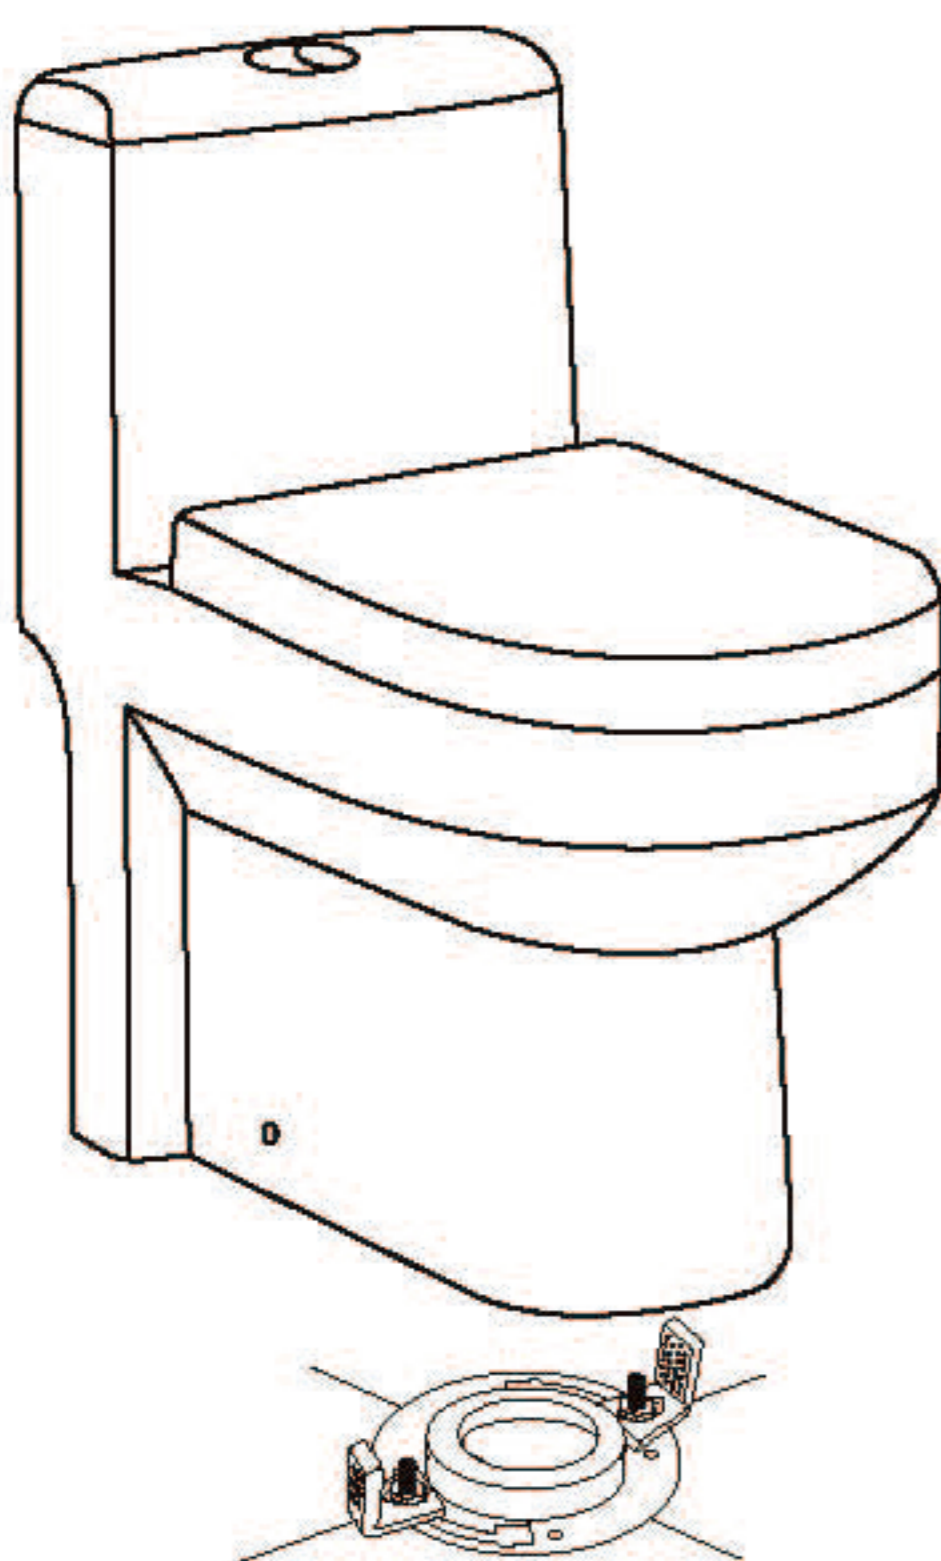

Install the screws from two small holes with screwdriver

