

Polybird




**OVAL END
TABLE**
P52


TOOLS




HARDWARE



PARTS

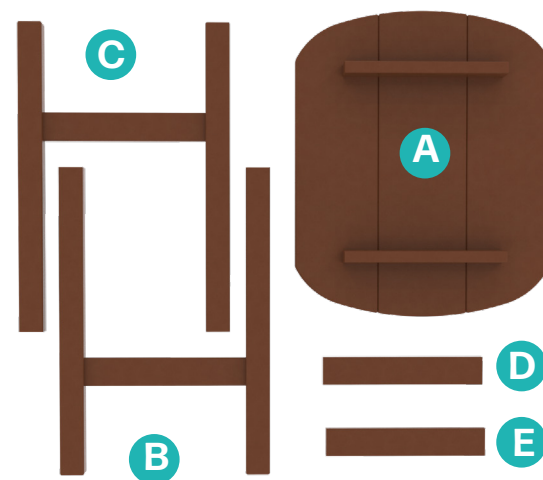


1

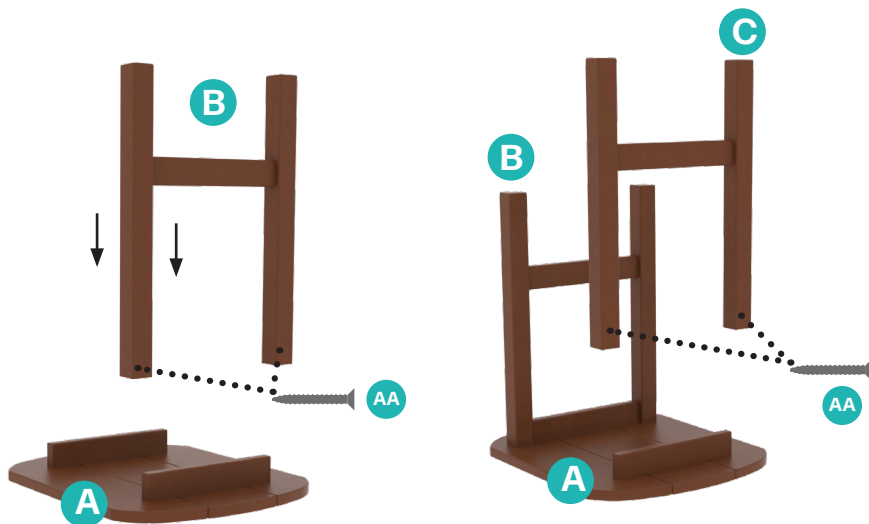

Slide legs of part B against short ends of braces on bottom of table top A using one #8 x 2 1/2" screw (AA) per leg. Rotate assembly and repeat for leg C.

2

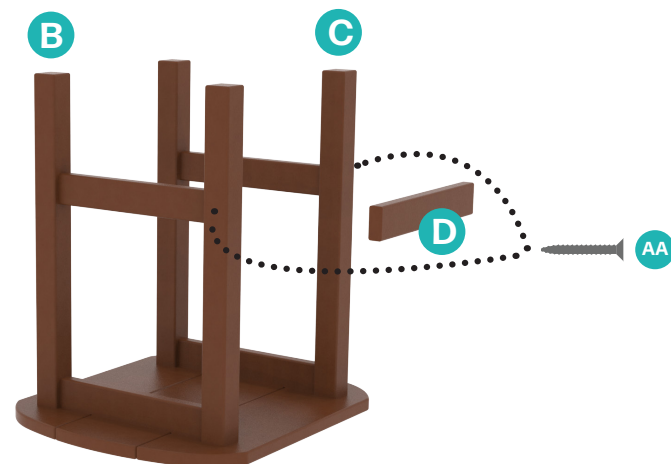

Attach brace D to legs C & B using one #8 x 2 1/2" screw (AA) per corner, as shown. Repeat for brace E.