



Installation Instructions for Bathroom Mirror Cabinet

Note: To ensure the general use of the product, please carefully follow the manual instructions. Must be installed indoors and on suitable load-bearing walls, etc. The installation must be carried out by qualified professional installers, and can only be cleaned with a soft cloth.

Tools used

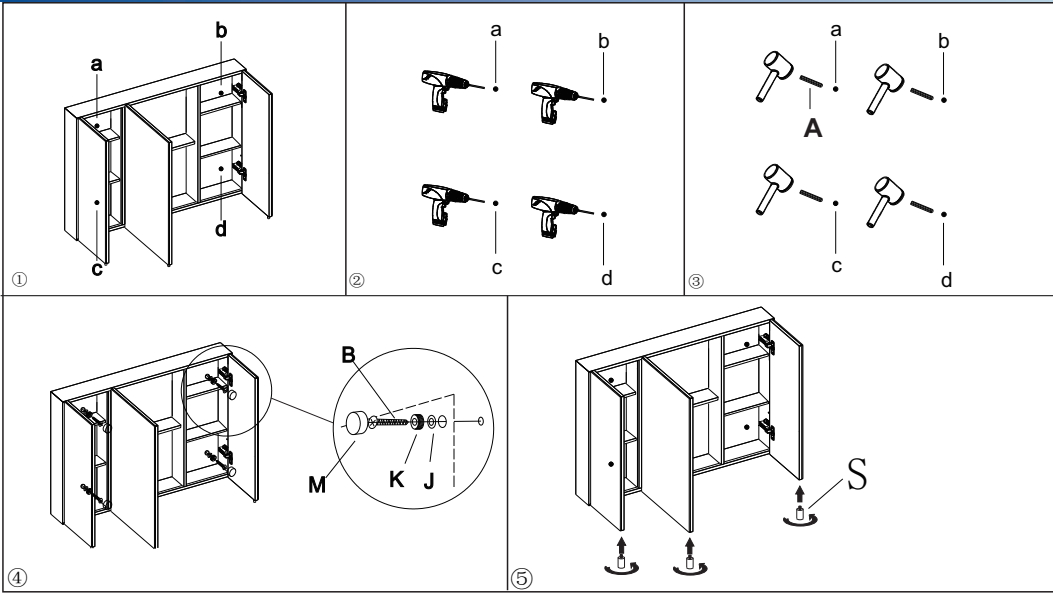

Wall&Anchors to Apply

Thickness of Wall	Recommended Drill Bit:	
>5/8"(16mm)	1/4"(6mm)drill bit, drilling depth in 131/32"(50mm)	
5/16"(8)-5/8"(16mm)	25/64"(10mm) drill bit	
<5/16"(8mm)	Unapplicable	

Fig①: Position the cabinet, mark the a/b/c/d mounting holes from inside onto the wall.


Fig②: Use the marks to pre-drill holes.

Fig③: Hammer “A” anchors into the pre-drilled holes.

Fig④: Hold the mirror cabinet and install mounting hardware “B”“J”“K”,and “M” as shown in the illustration.

Fig⑤: Pre-positioned the hole at the bottom of the door, just screw the handle "S" in it.

Hydraulic hinge adjustment method:

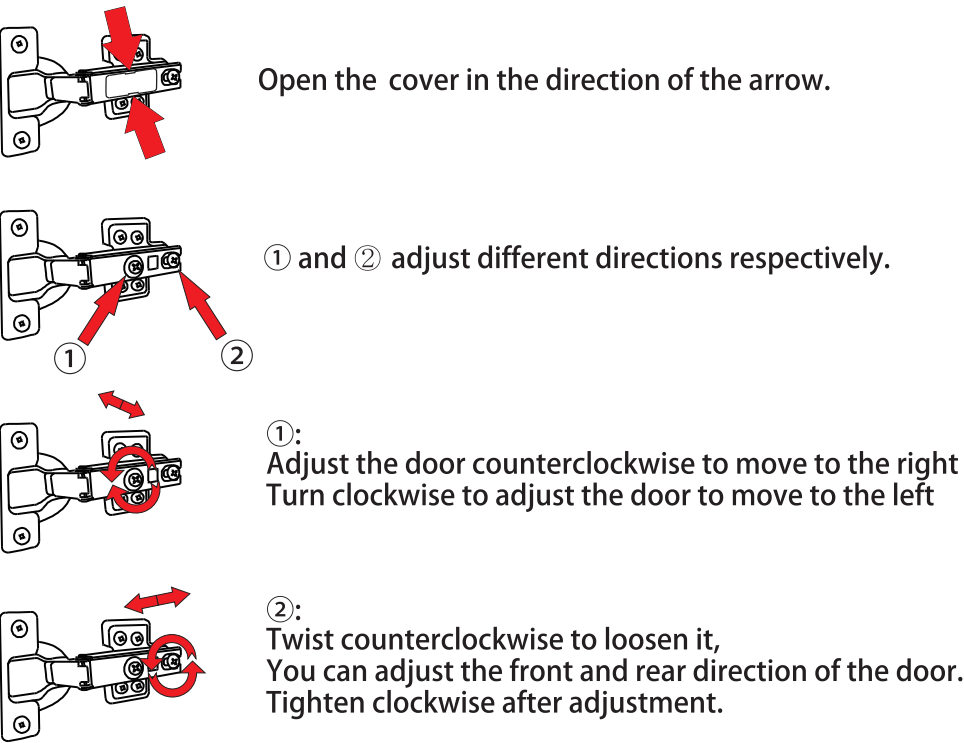

- CAUTION**
- 1.Do not scratch or strike the mirror surface with hard, sharp objects during use, as this may cause mirror damage and even lead to personal injury.
 - 2.Clean the product with a soft cloth and mild detergent. Avoid abrasive or corrosive cleaners, and never leave corrosive substances such as shower gel on the surface.
 - 3.Plastic bags and mounting hardware pose potential hazards. Keep these items out of reach of infants and children at all times to prevent choking risks.