
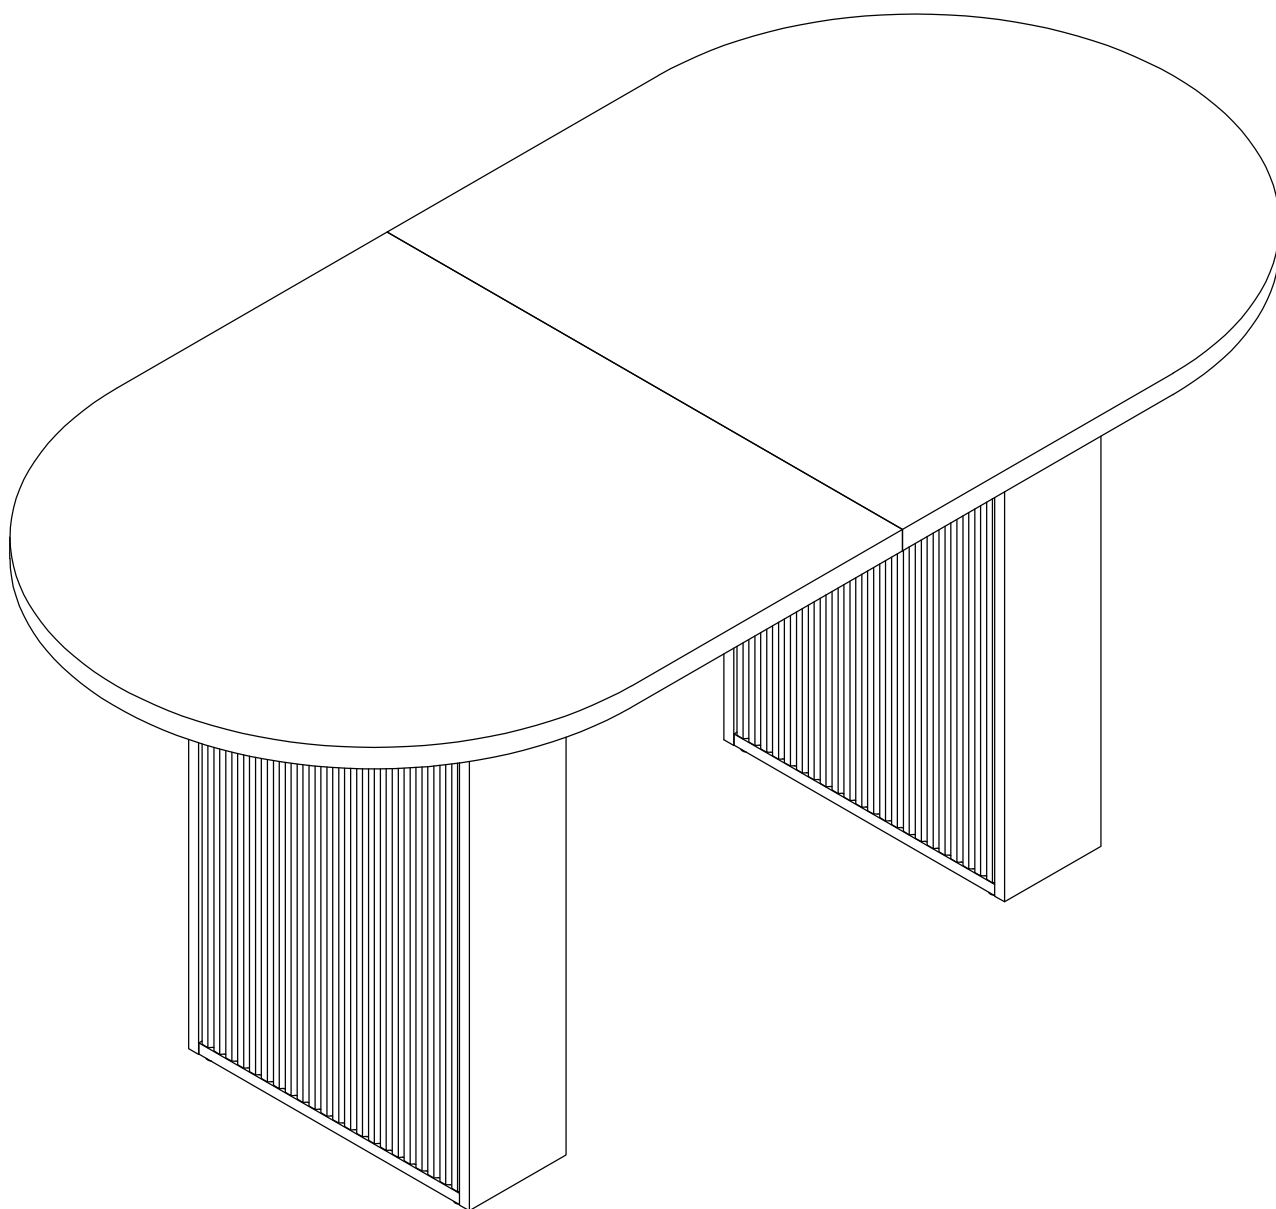





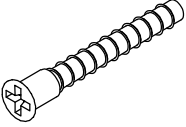



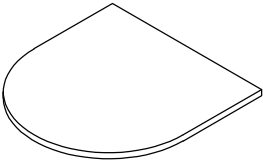
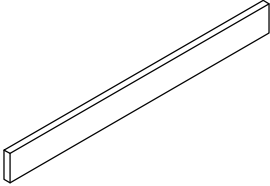
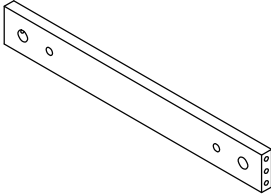
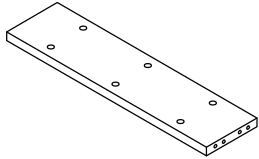
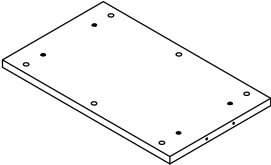
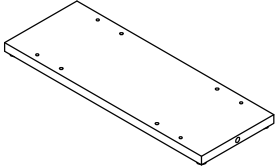







HARDWARE LIST


A  6×35mm 8(+2) PCS	B  8(+2) PCS	C  6×30mm 44(+2)PCS	D  8×30mm 3 PCS	E  M3.5×14mm 8(+2) PCS
F  M5×40mm 24(+2) PCS	G  28(+2) PCS	H  2 PCS	J  M6×30mm 22(+1) PCS	

PANEL LIST

1  2PCS	2  2PCS	3  2PCS	4  1PC
5  2PCS	6  2PCS	7  2PCS	8  2PCS
9  4PCS			


Installation method of three
in one rod and buckle

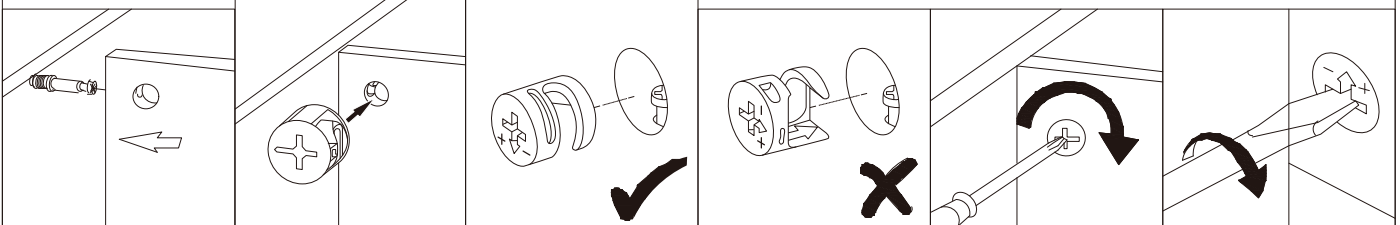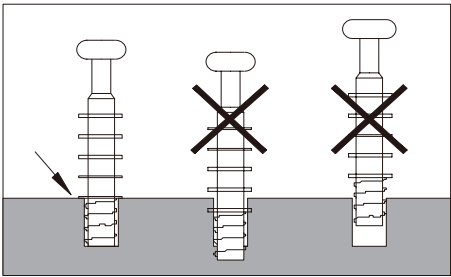

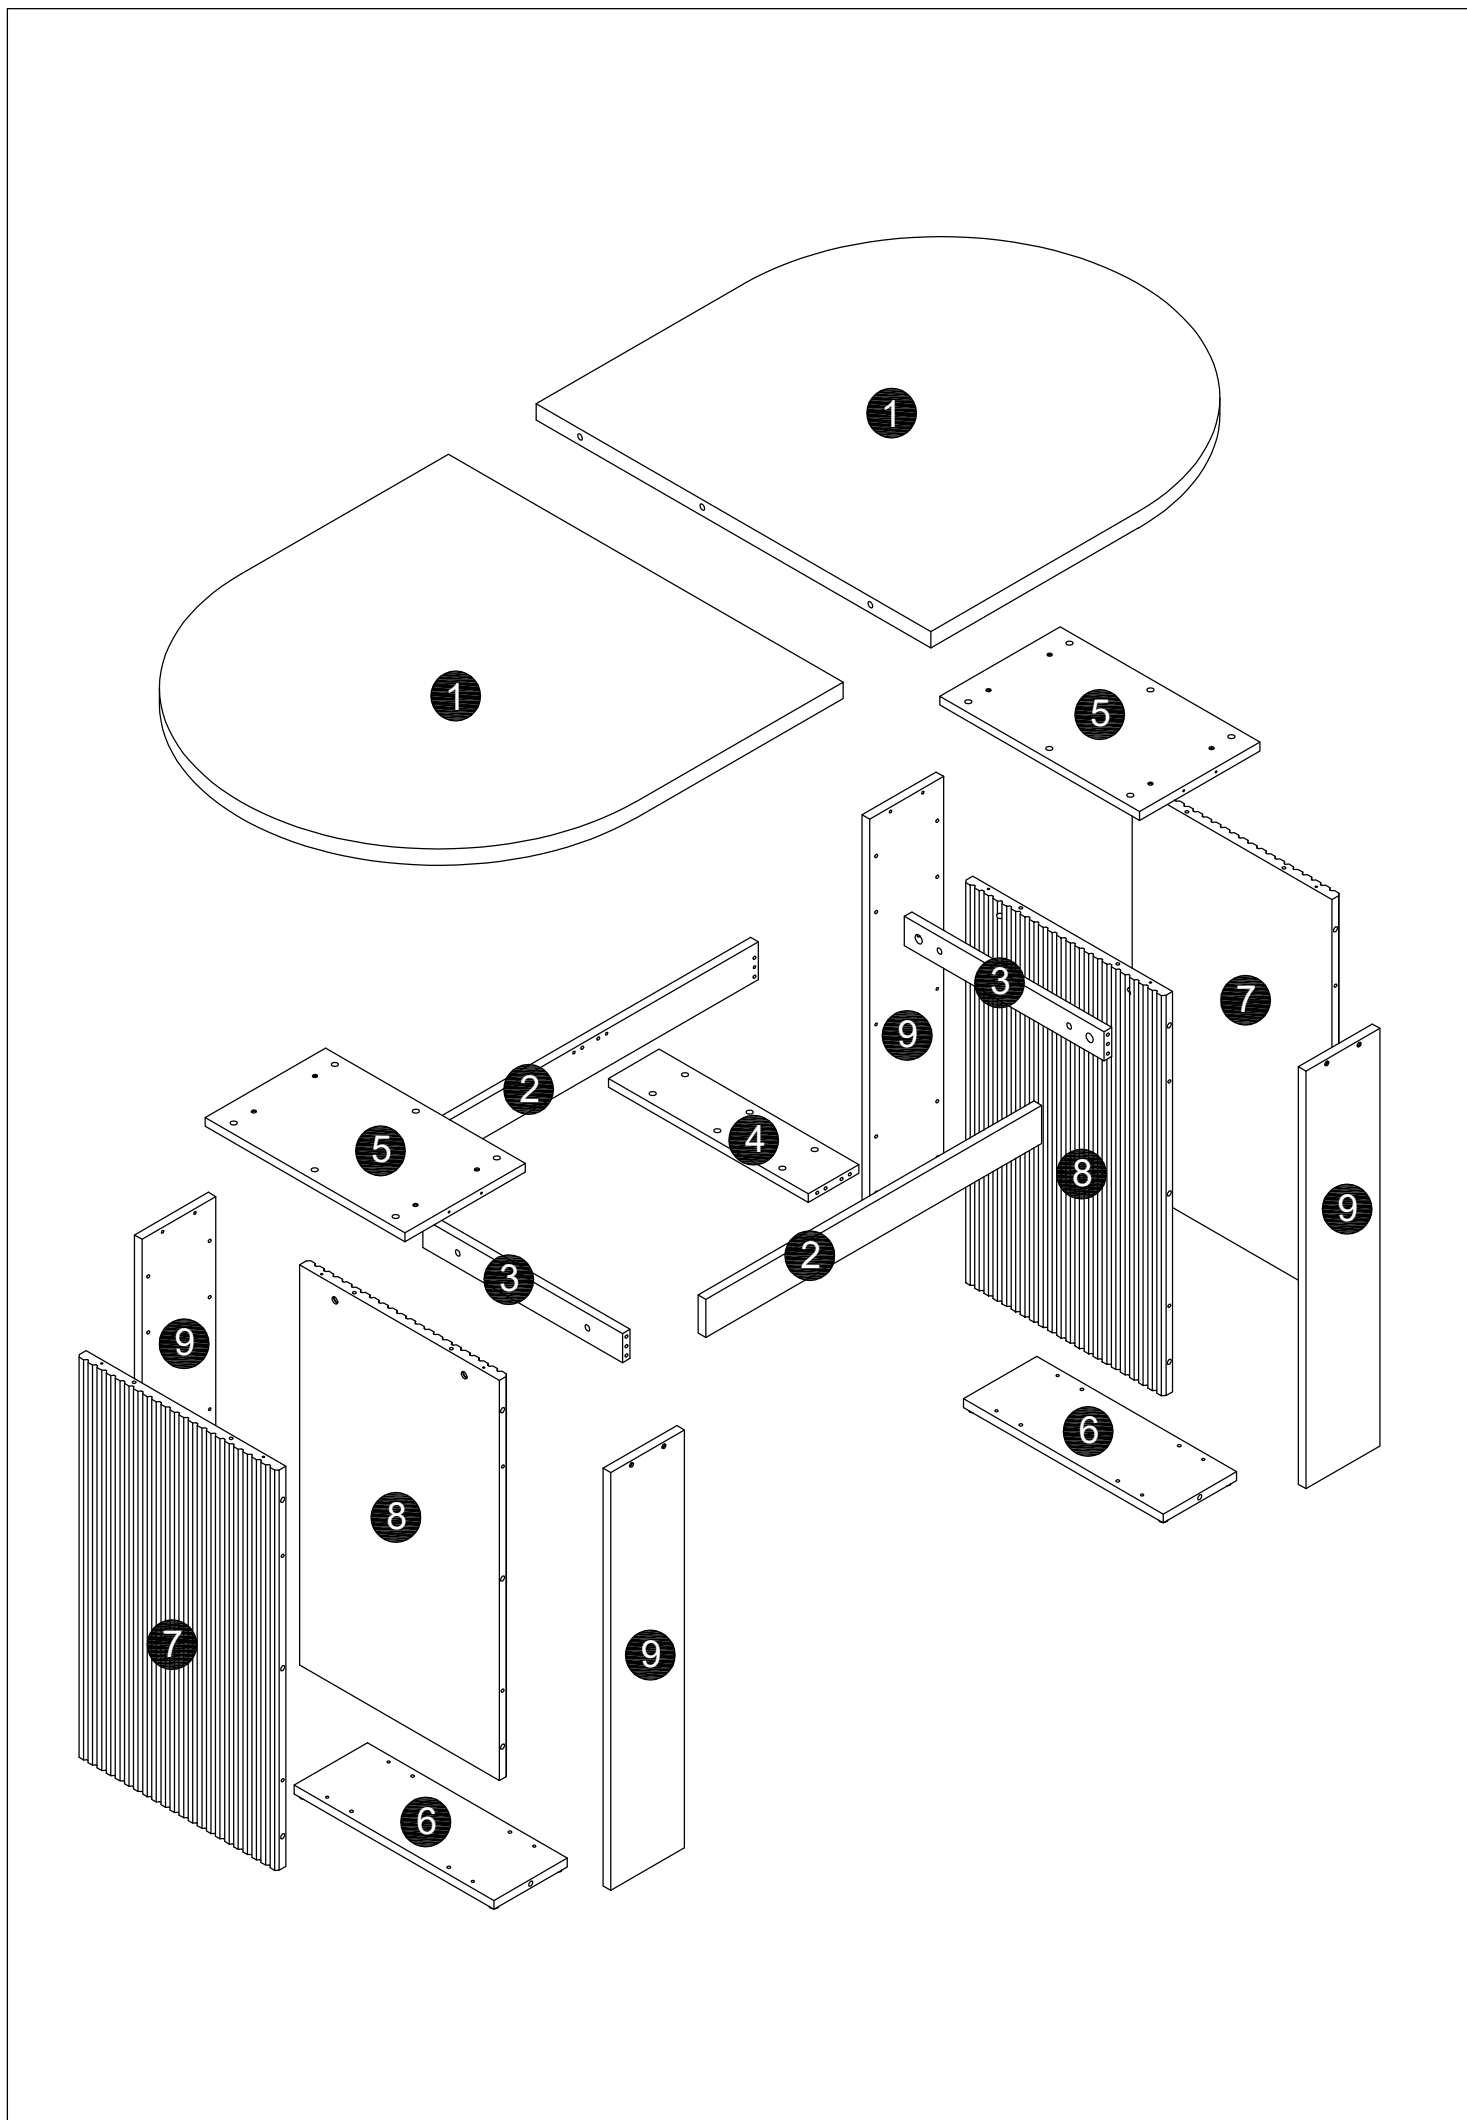


01


INSTALLATION STEPS

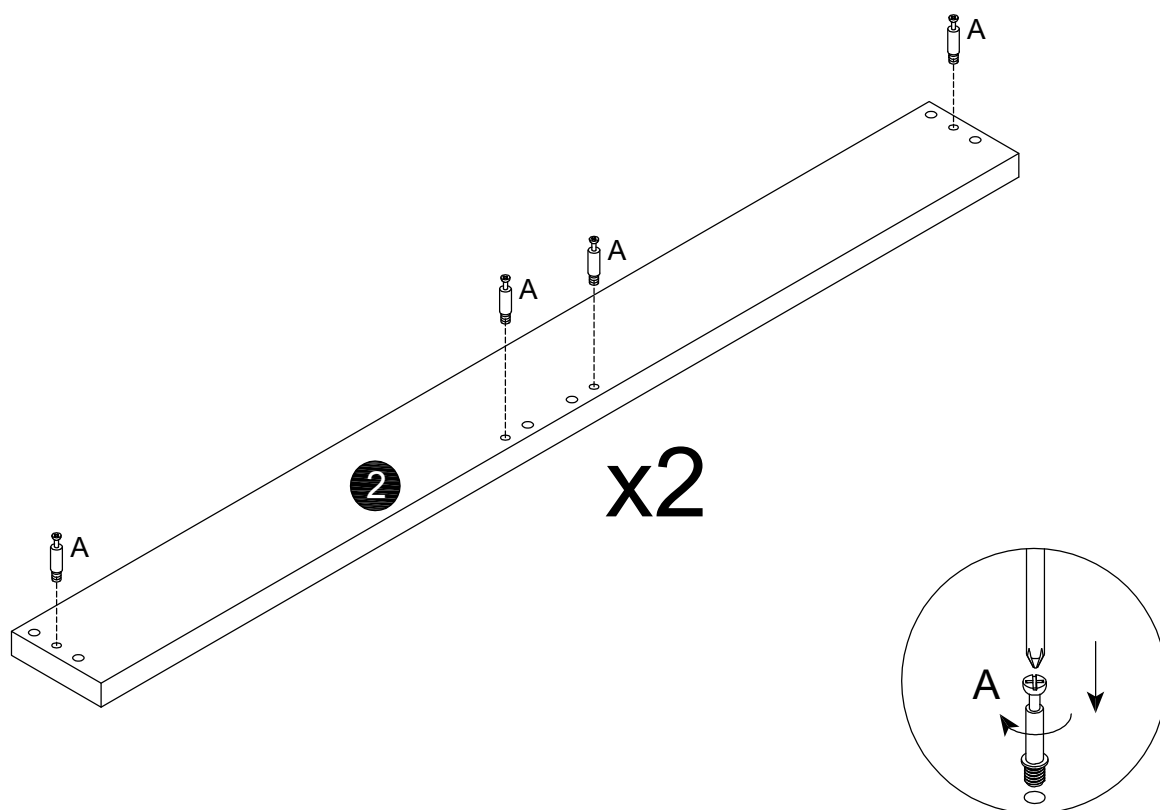Ax8 


02

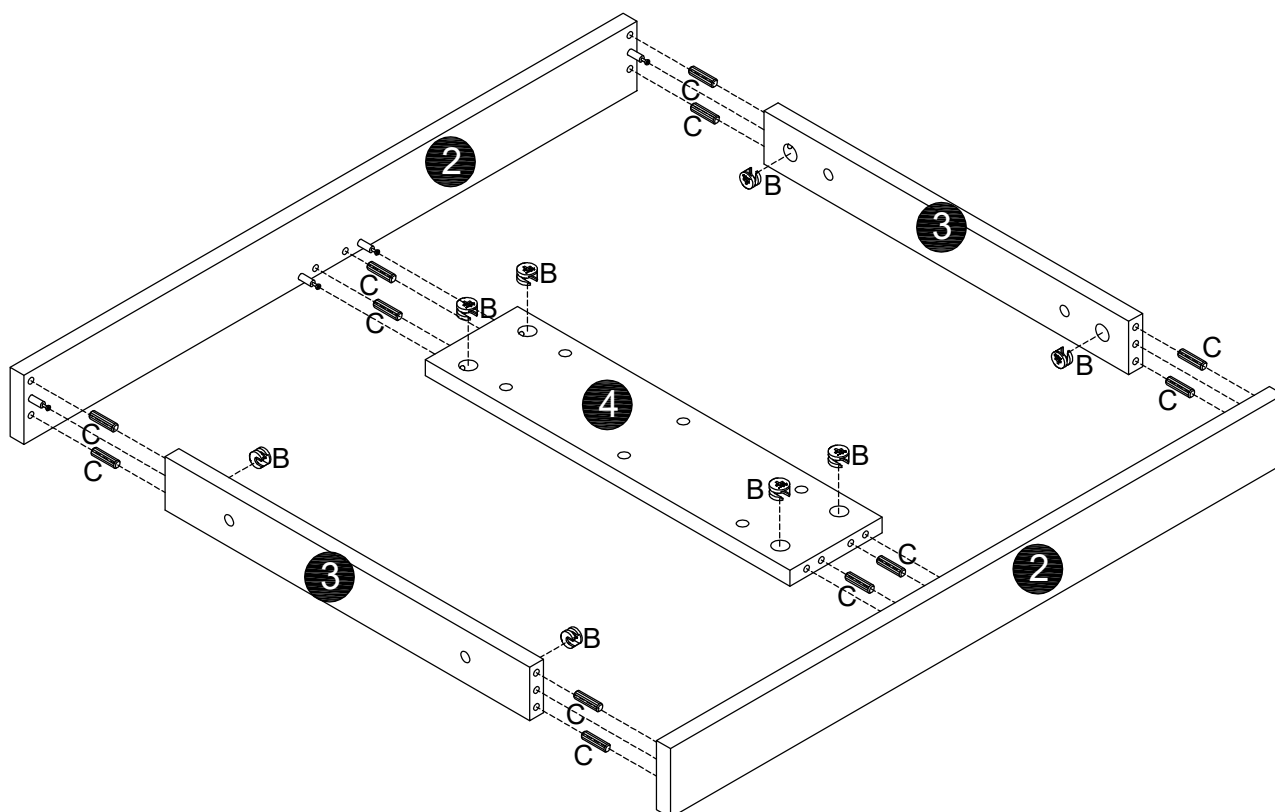Bx8 
Cx12 


03

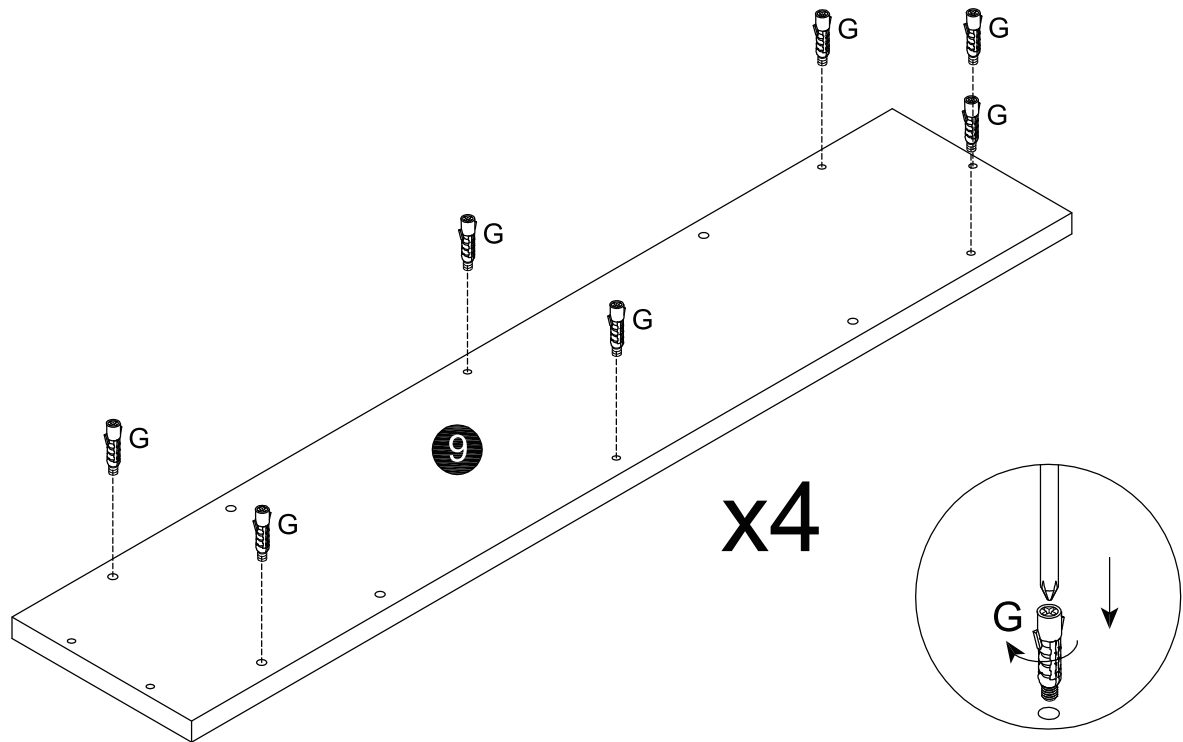Gx28 


04

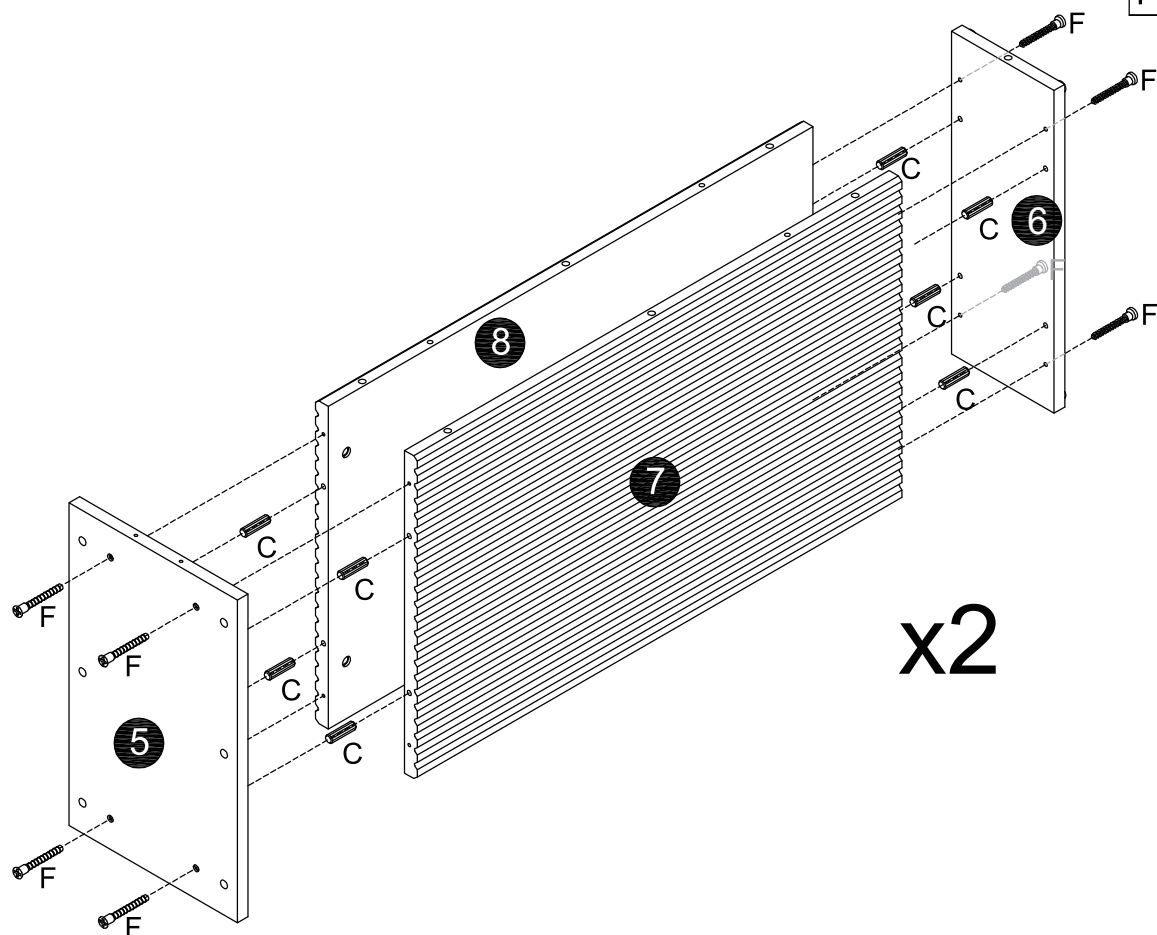Cx16 Fx16 

05

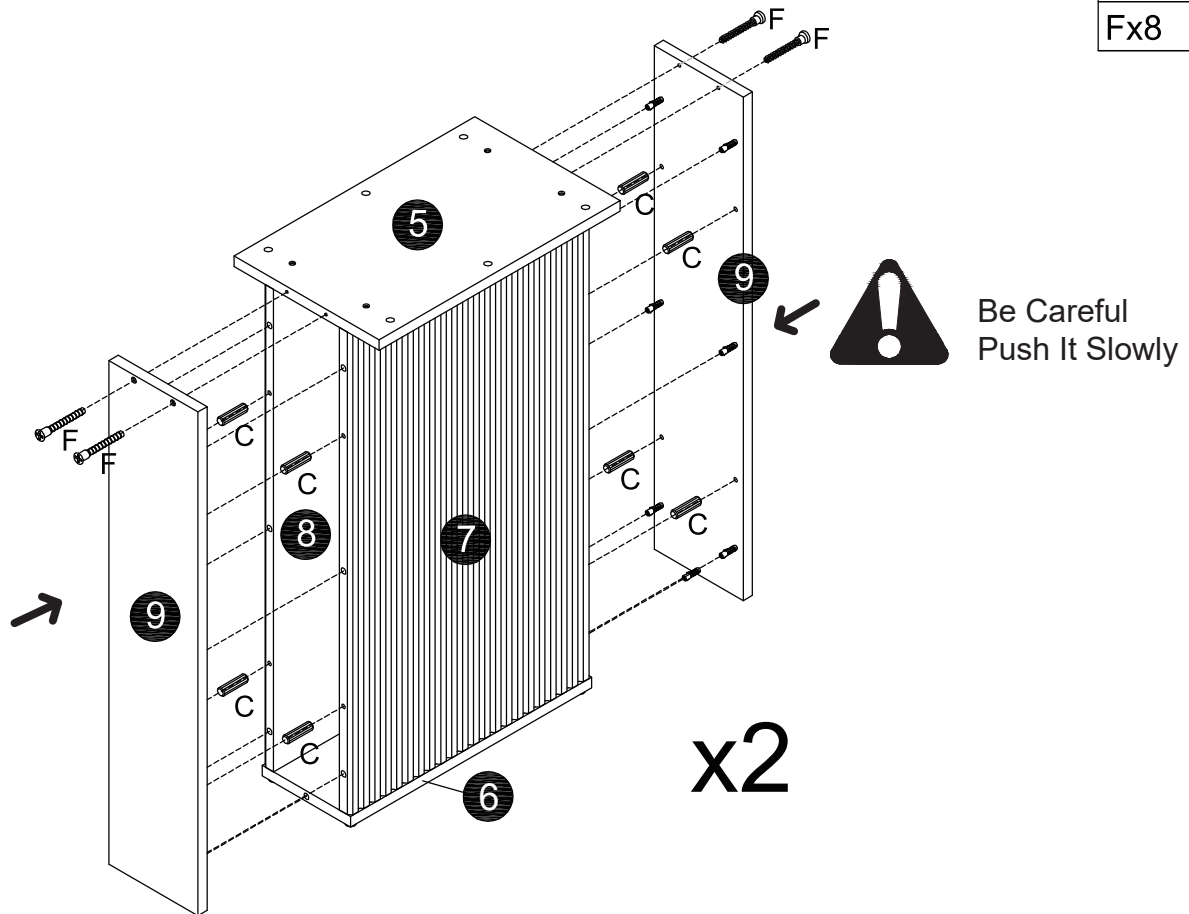
Cx16 Fx8 

06

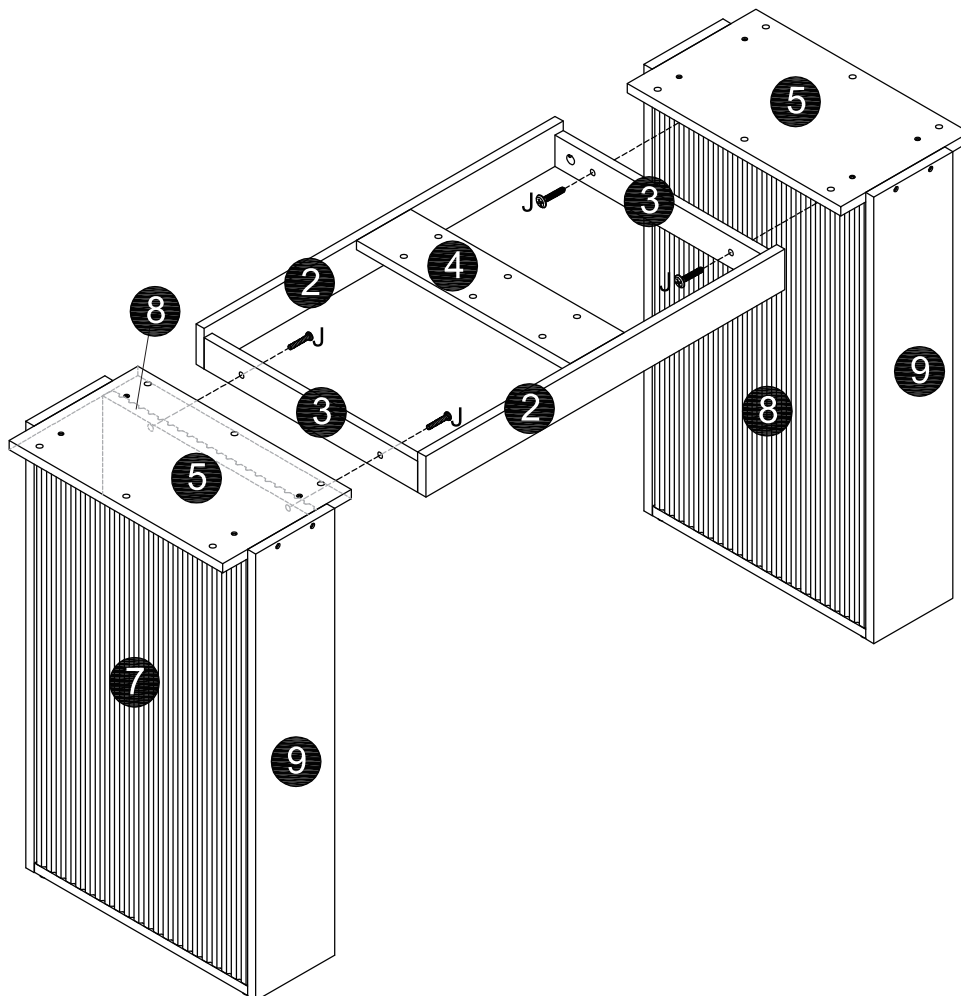Jx4 

07

Dx3

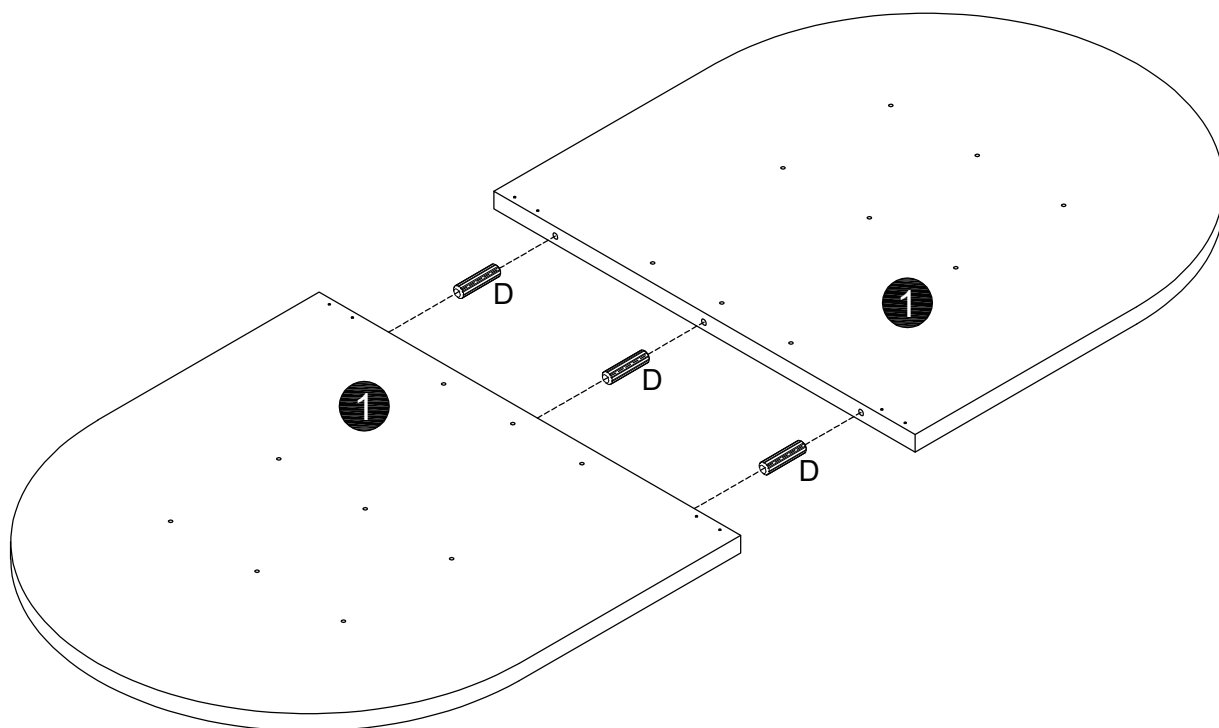

08

Ex8



Hx2

