



**STEP 1**  
Rotate legs to down position

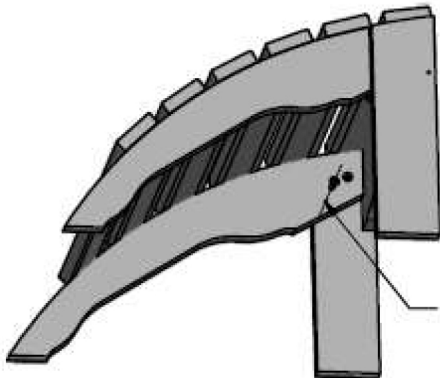

**STEP 2**  
Insert (1) 1-1/4" screw to the  
inside of both front legs

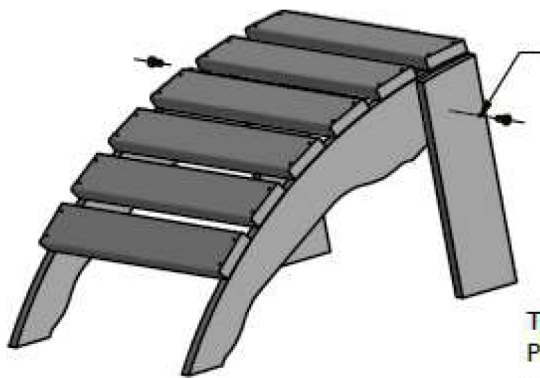

**STEP 3**  
Insert (1) 1-1/4" screw to the  
outside of both front legs

Tools needed:  
Phillips screwdriver  
(4) - 1-1/4" Phillips wood screws (included)

