


















ASSEMBLY INSTRUCTIONS

A		4pcs
B		4pcs
C		2pcs
D		2pcs
E		1pc
F		1pc
G		1pc
H		1pc


I		3pcs
J		1pc
K		2pcs
L	 M6*15	16pcs
M	 M6*30	8pcs
N	 M6*35	29pcs
O	 M6	53pcs
P		1pc

- Note: ① Do not fully tighten bolts when aligning and securing all parts for easy assembly.
 ② Check all bolts to ensure tightly secured before use and attaching all parts completely.


1

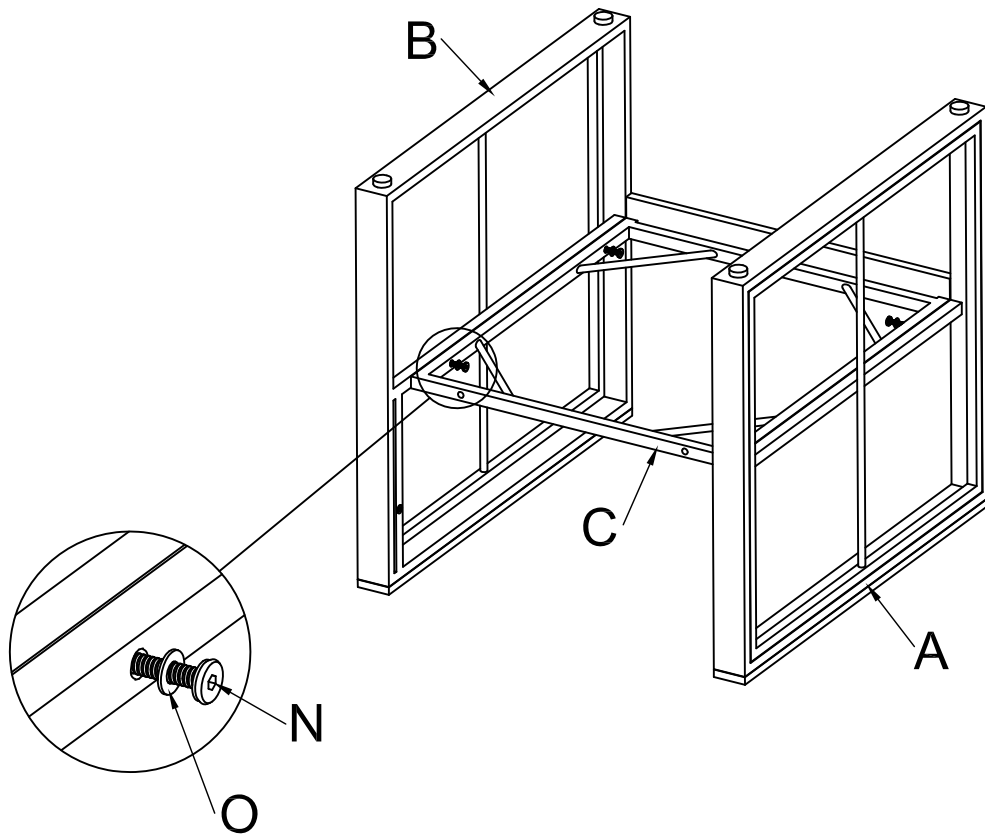


2

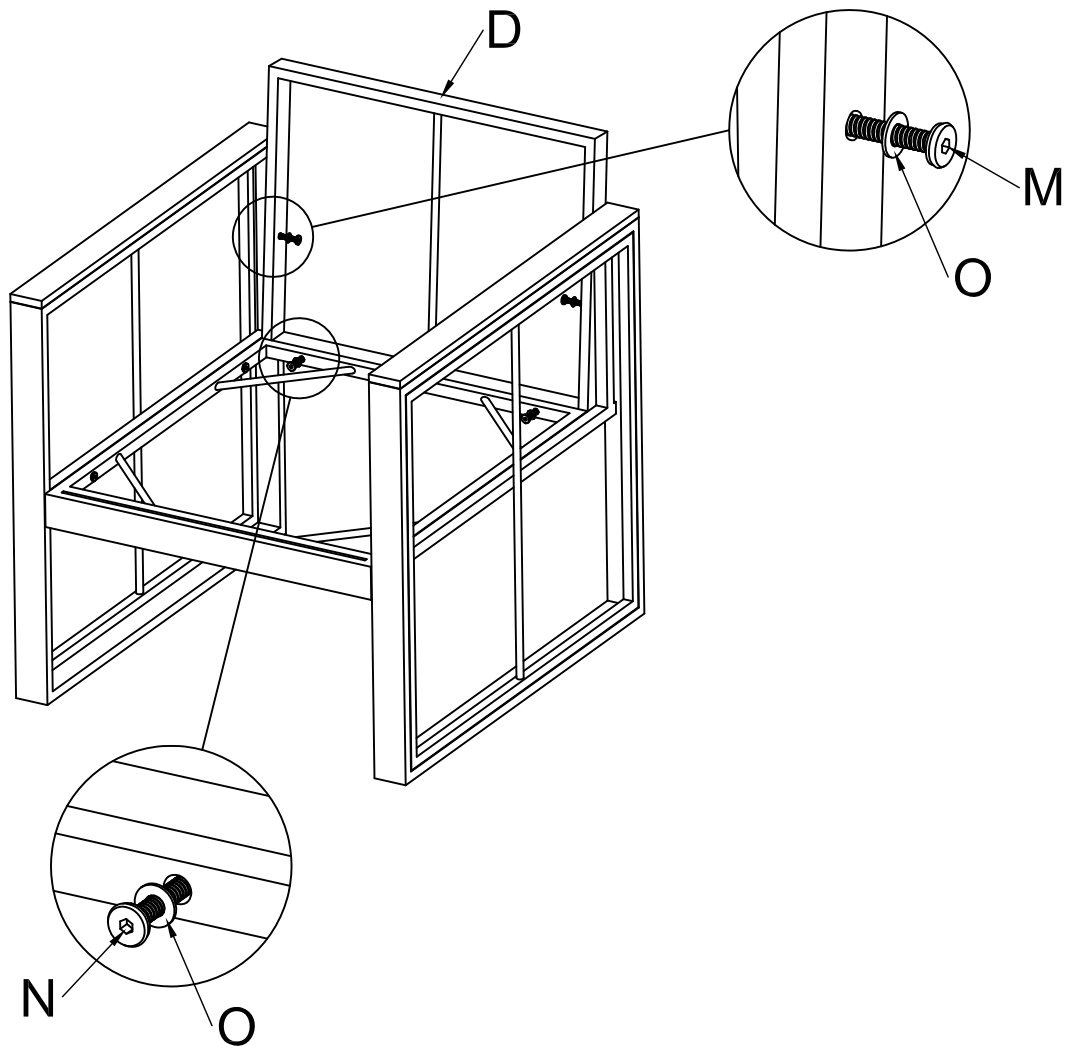


3

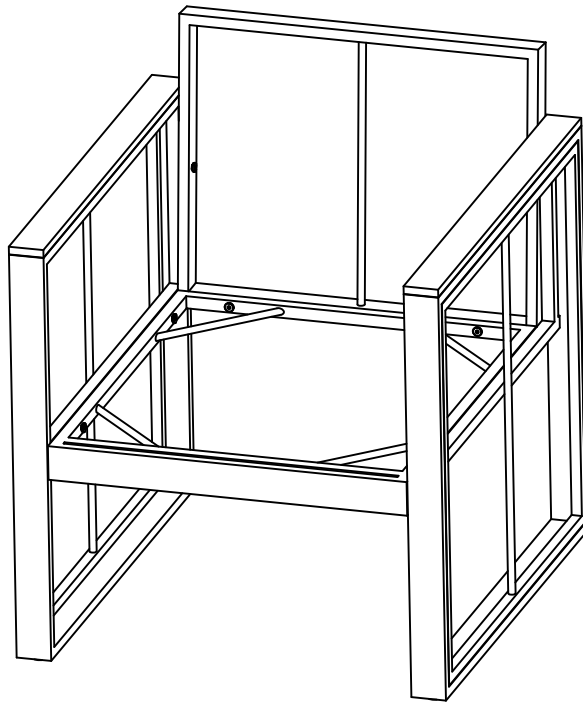


4

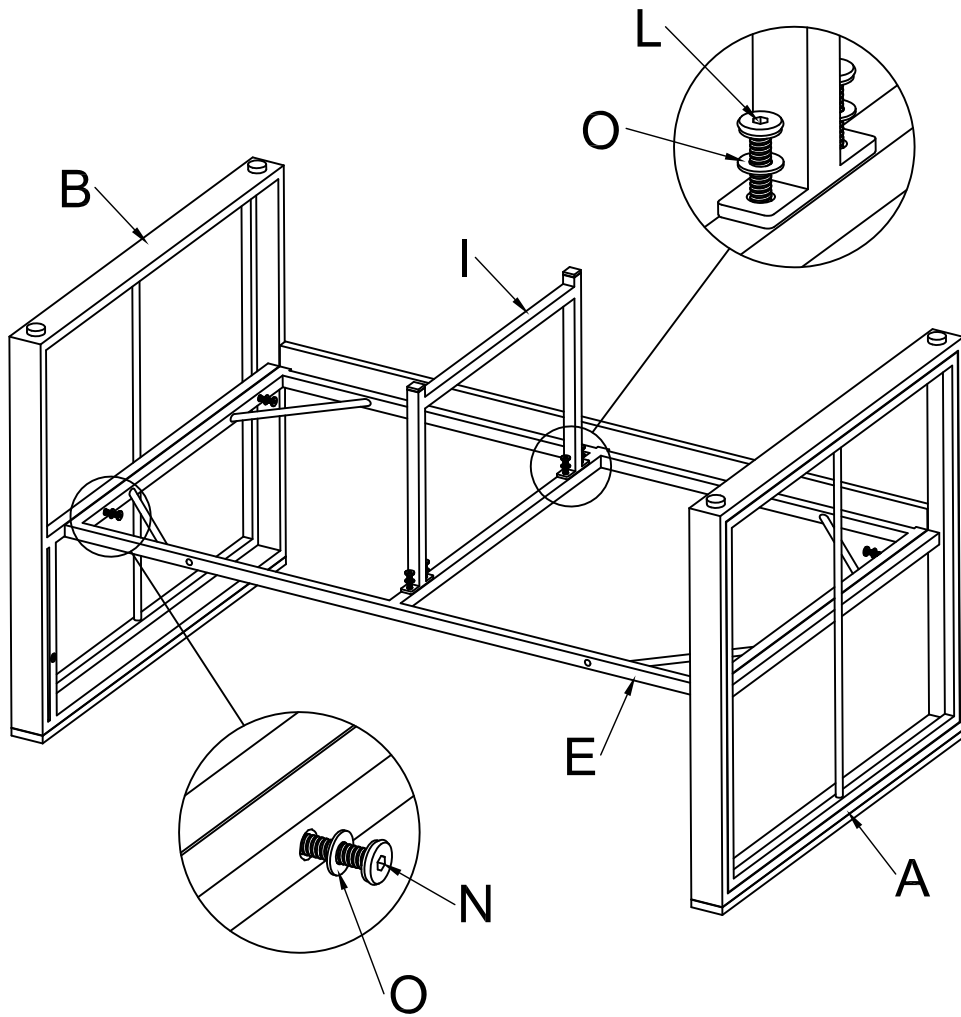


5

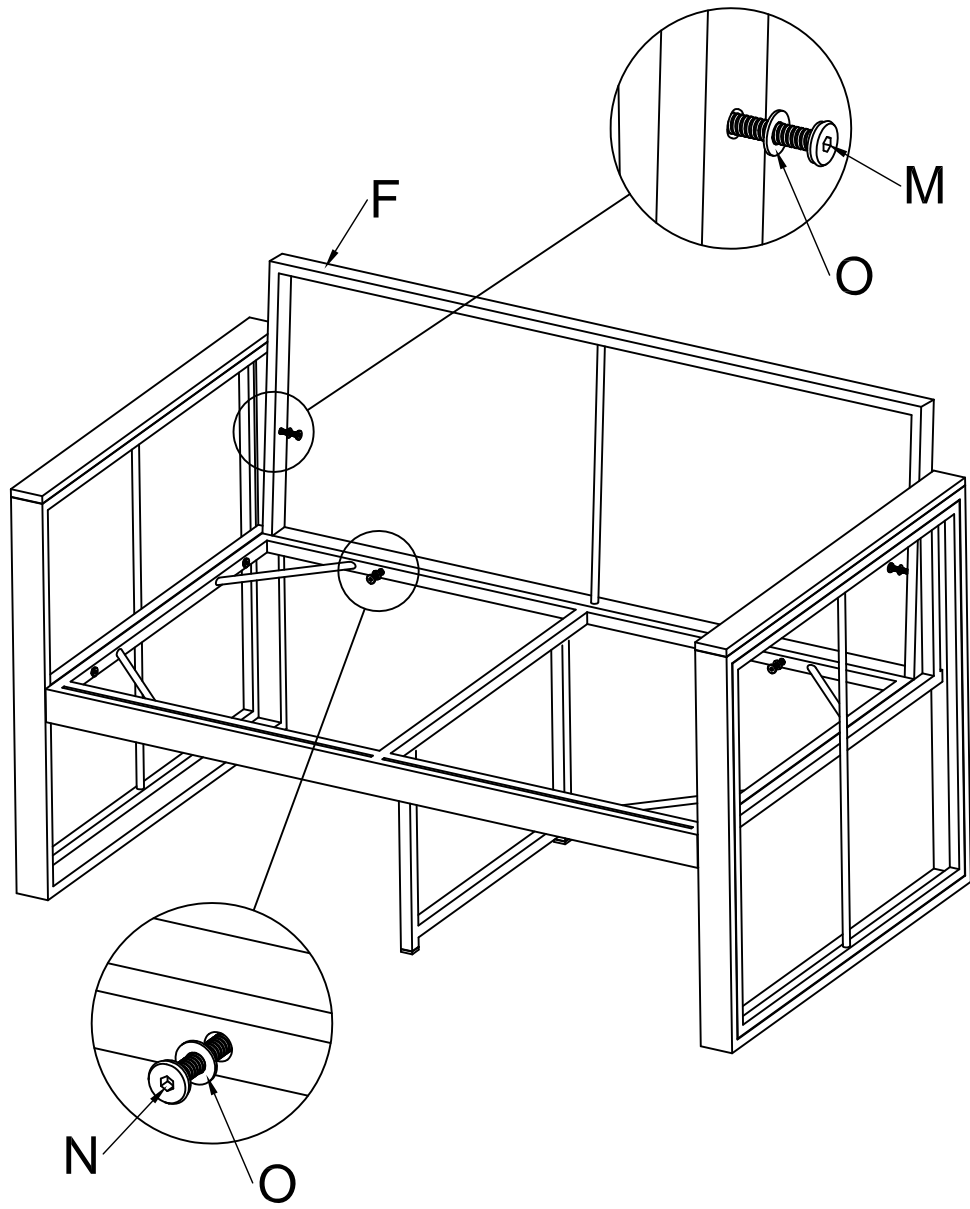


6

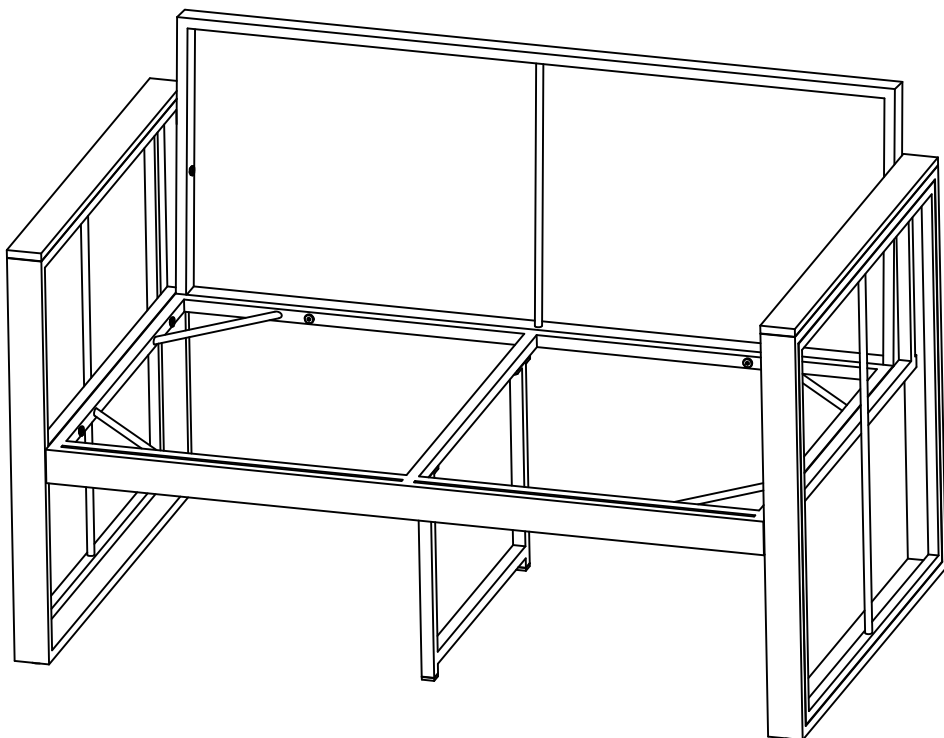


7

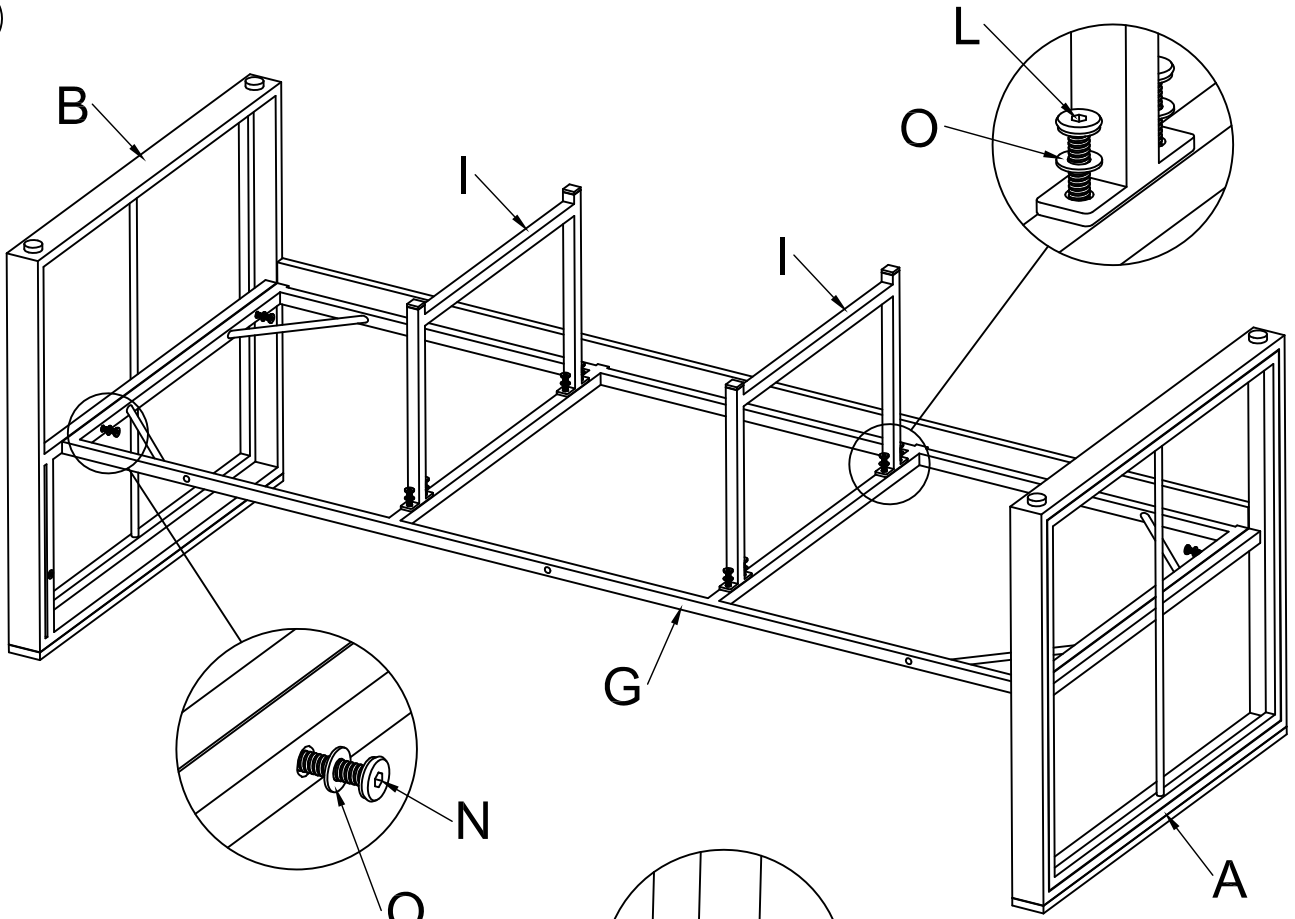


8

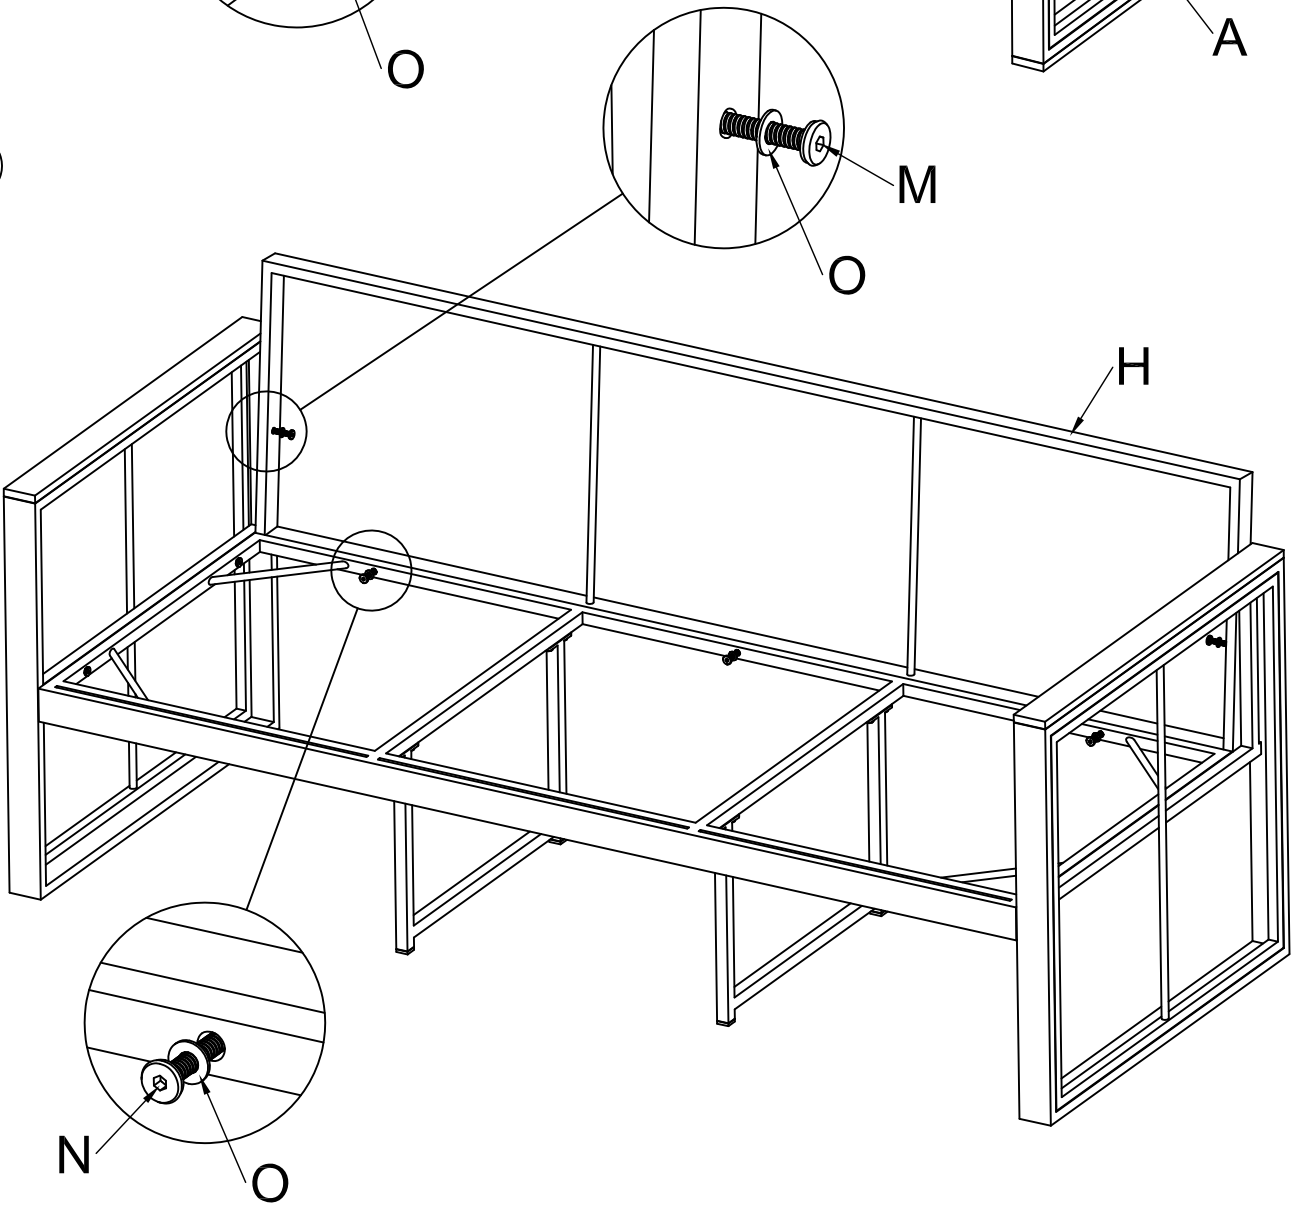


9

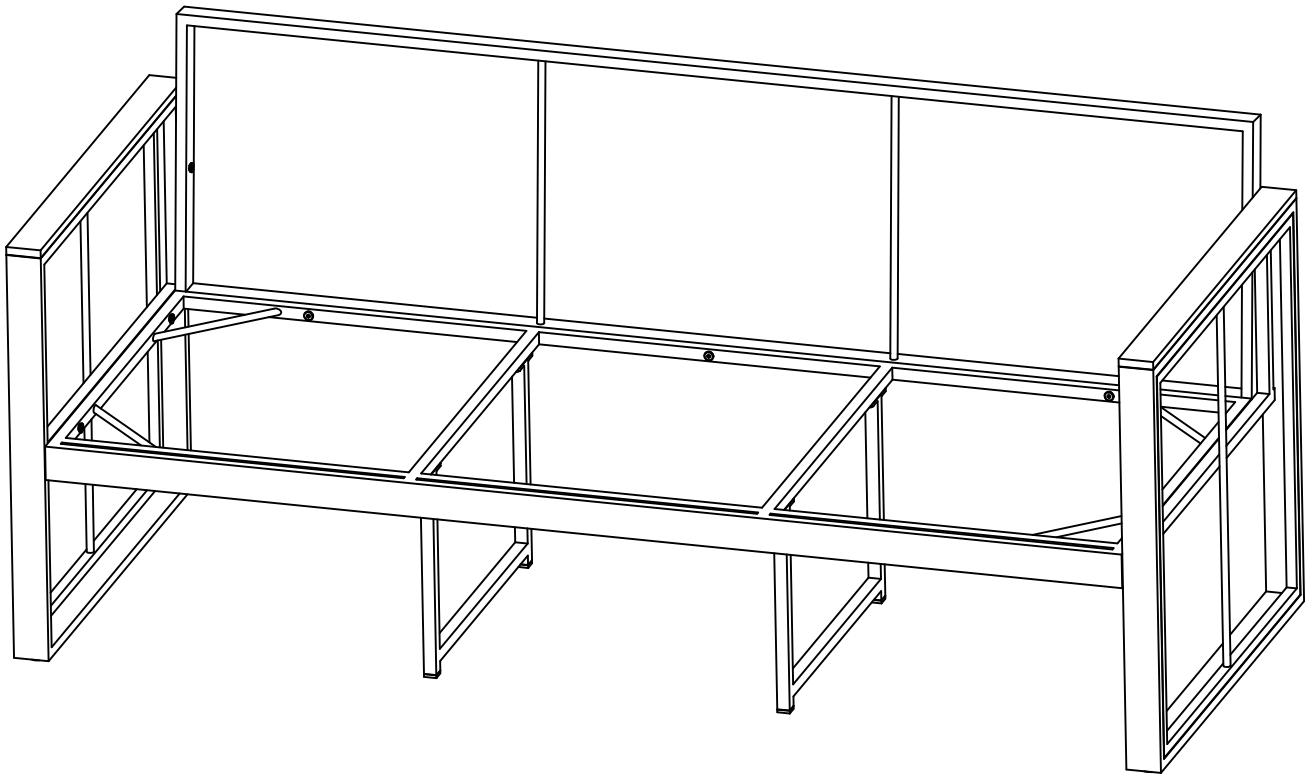


10

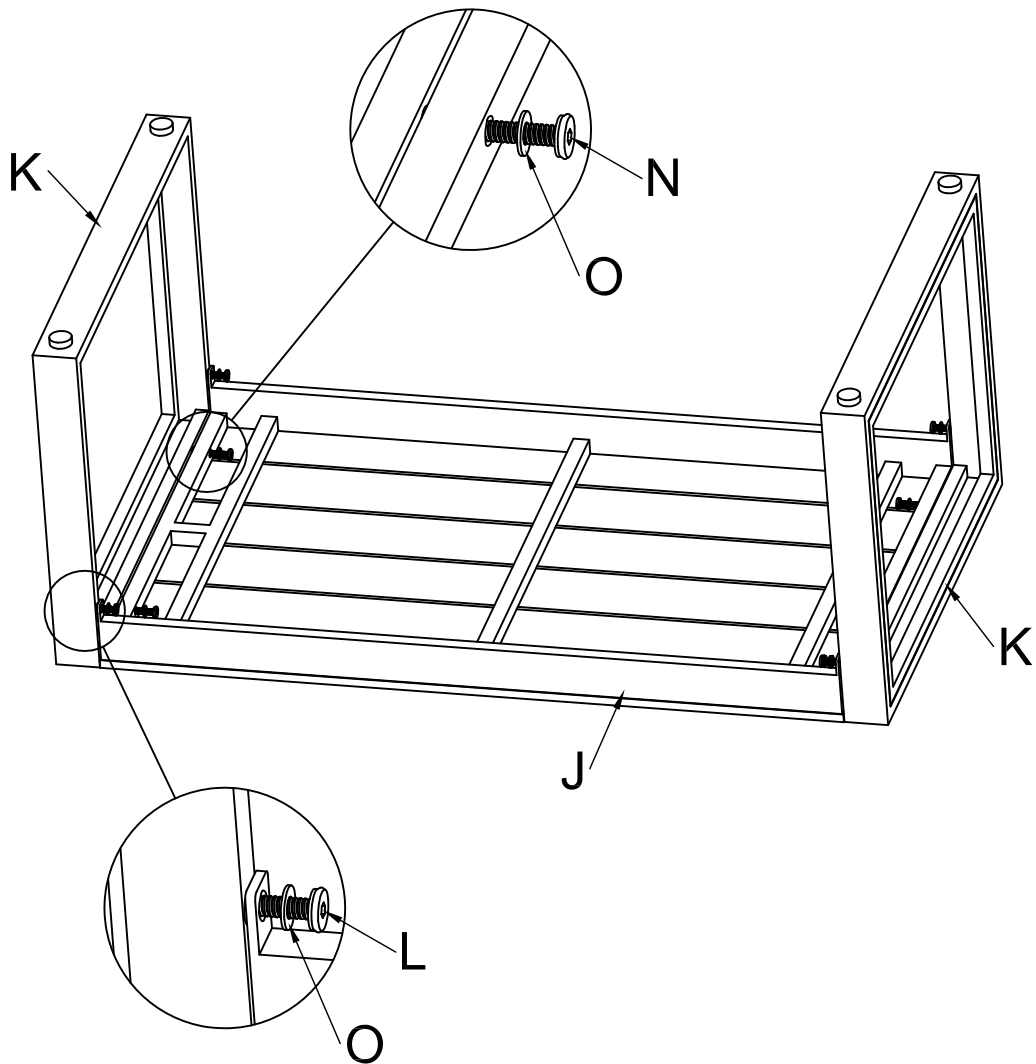

11

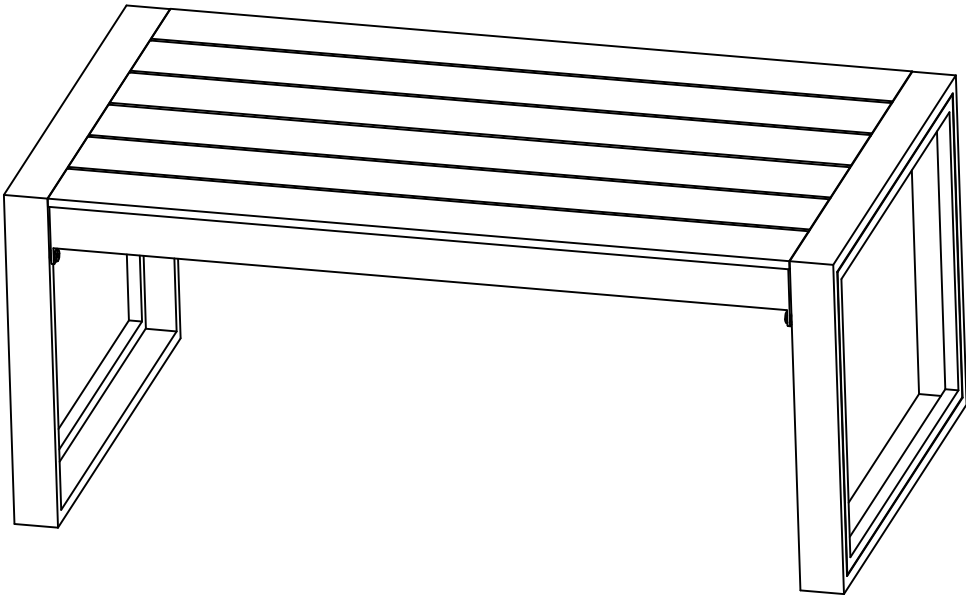

Let Us Help You

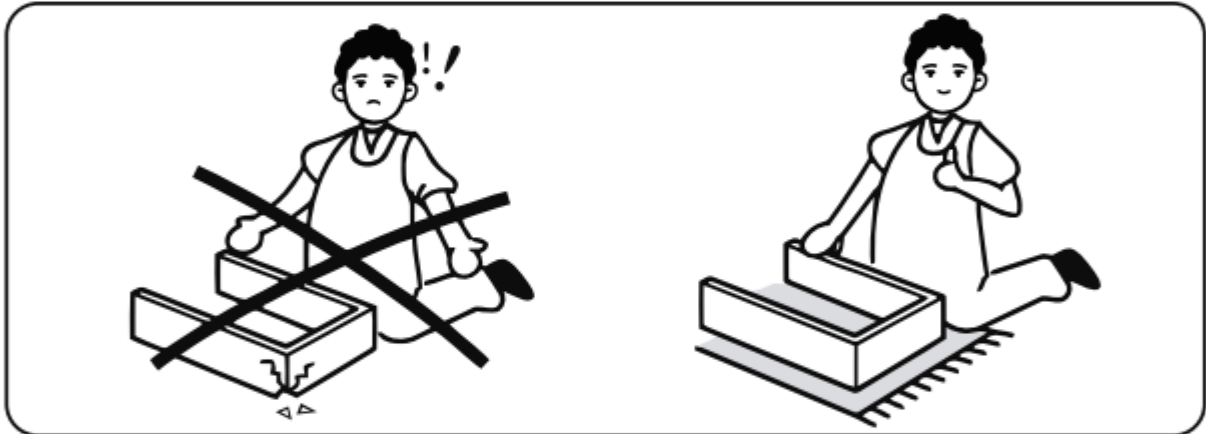

Let Us Help You



- If you have any further questions, please feel free to contact us via email at info@homrest.com or through our official website. We will respond as soon as possible.
- Before beginning installation, please ensure you have all the necessary hardware, the serial numbers are correctly labeled and correspond to the list, and that the quantities are accurate.
- Enjoy your new purchase!