


Congratulations on the purchase of your Mail Boss® surface mount steel post. The post is constructed of tough 8 gauge galvanized, powder coated steel. Included with the Mail Boss® post are four 12mm bolts for attachment to your mailbox. In order to mount this post on a curb or sidewalk, you will also need a Mail Boss® base plate.


Instructions listed below are only guidelines: customers should contact the local post office of mail carrier before installing the mailbox to ensure its correct placement and height at the street. Generally, mailboxes are installed at a height of 41 to 45 inches from the road surface to the inside floor of the mailbox or point of mail entry and are set back 6-8 inches from the front face of the curb or road edge to the mailbox door.

If you require assistance with assembly or part replacement or for any other matter, contact the toll-free Epoch Design Service Center from anywhere in the Continental United States, Monday through Friday, 9AM – 5PM PST at 1-800-589-7990. You may also email your request or comments to info@mailboss.com and a service representative will respond.


Step 1 Locate the desired spot for your mailbox and mark a spot on the curb approximately 17" back from the edge of the street. Center the base plate over your mark.

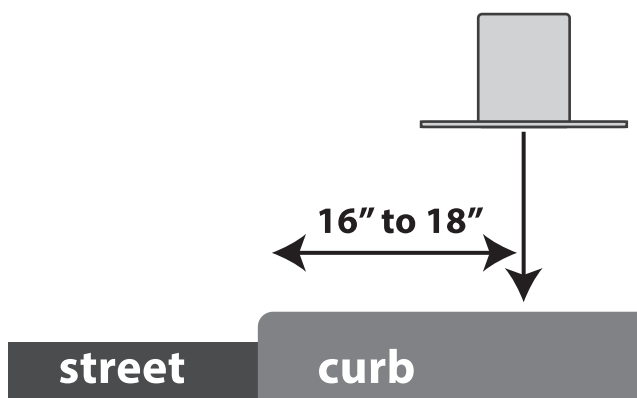

Step 3 Attach and secure 8 masonry anchors (there are various kinds, typically 1/4" x 3" masonry "outdoor" screws are adequate) through the base plate and into the curb.

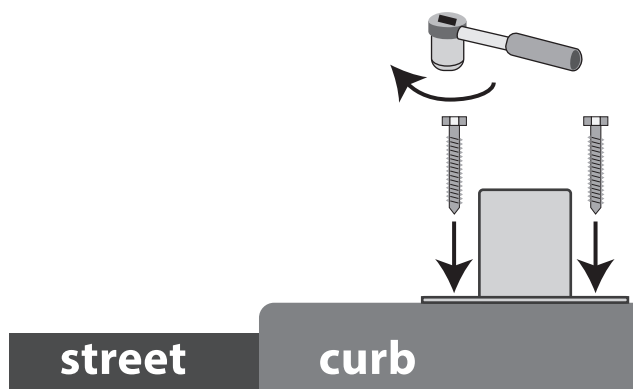

Step 2 Using the 8 holes in the base plate as a template, drill 8 holes with an appropriate masonry bit. You may be able to skip this step if you are using self-tapping masonry bolts.

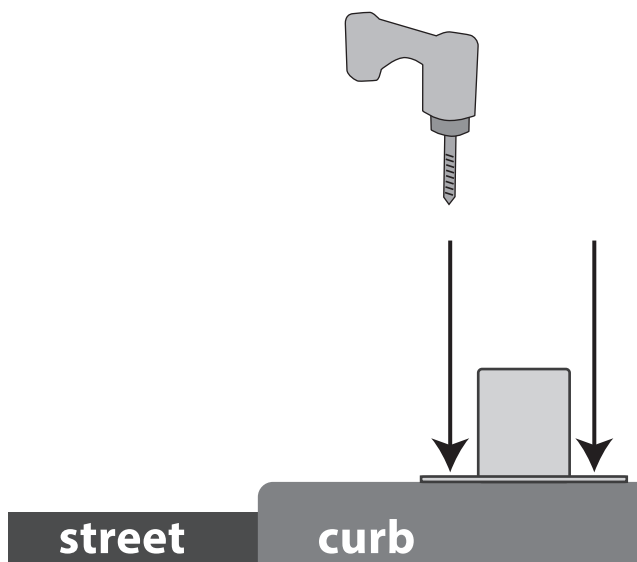

Step 4 Slide the surface mount post onto the base plate. Using the 6 bolts included with the base plate, secure the post to the base plate by tightening the 6 bolts. The top of your post should now be 30 to 34 inches above street level. You can now attach you Mail Boss® to the post.

