


ASSEMBLY INSTRUCTIONS

36 INCH BATH VANITY-CABINET

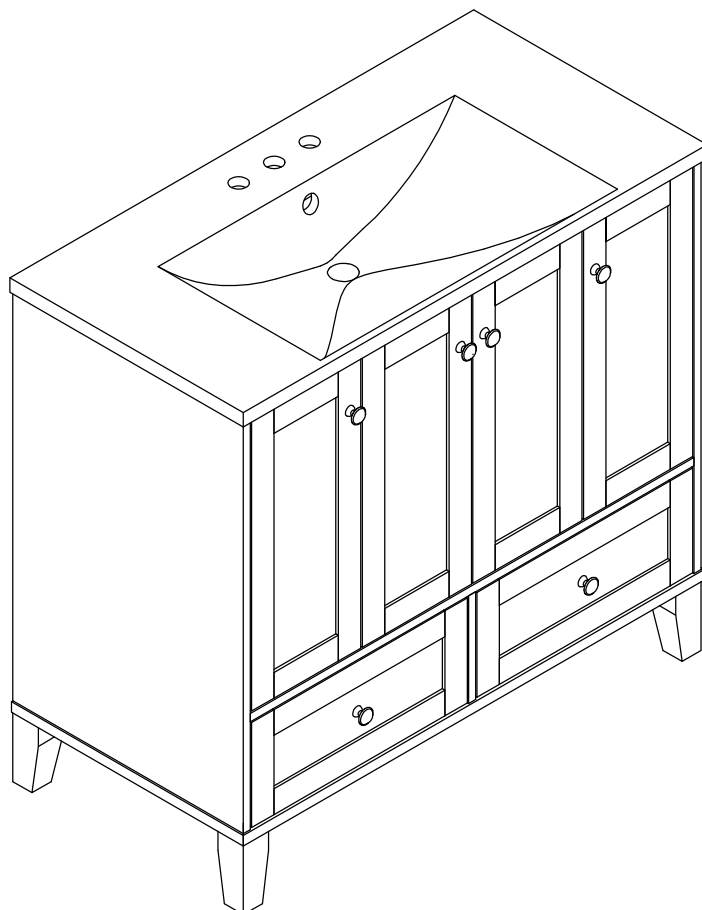


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Separate, identify and count all parts and hardware.


Compare with the parts list to be sure all parts are present.

"DO NOT TIGHTEN SCREWS UNTIL COMPLETELY ASSEMBLED"


*** Use of power tool to assemble this product will invalidate any claim and damage this product making unsafe !!!**
*** Please assemble on a clean soft surface to avoid damage.**

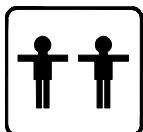


+

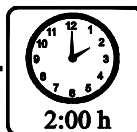

Tools Required



(Not included)



(Not included)

IMPORTANT:

PLEASE READ INSTRUCTION BEFORE STARTING THE ASSEMBLY

PLEASE DO NOT RETURN TO STORE



**Please do not return this product to the retailer!!
We are able to assist you in ANY way**

If you find that you have any trouble with assembly or missing or damaged parts please contact the seller.







Before Installation

Important – Please read these instructions fully before starting assembly

Thank you for purchasing this quality product. Be sure to check all packing materials carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all items according to the PARTS LIST and/or HARDWARE LIST shown below. Check you have all the components and tools listed on the following pages.

- We recommend that you assemble this product with the assistance of another person; this will make the assembly easier, and will help eliminate damage to the product or injury to persons during assembly.
- Please do not over tighten screws or bolts until the assembly is completed.
- Keep children and animal away from the work area, small parts could choke if swallowed.
- Please put all parts on a non-abrasive floor before assembly, and follow the assembly steps to assemble your newly purchased product correctly and efficiently.



Cam Lock Assembly Instructions

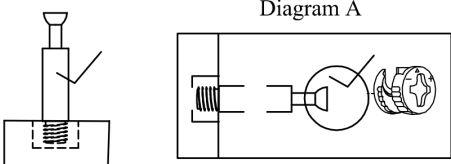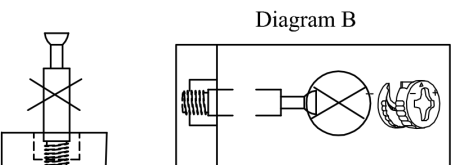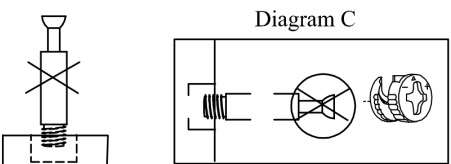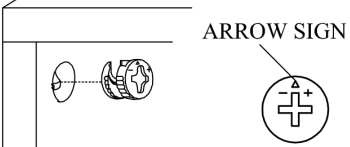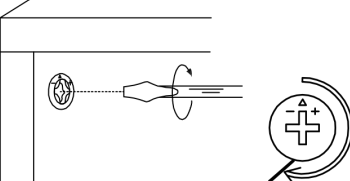	Diagram A Insert Cam Bolt into hole as shown in diagram A.
	Diagram B Make sure not to insert the Cam Bolt: Too deep as shown in figure B as this will cause the Cam Lock to be misaligned and unable to interlock properly.
	Diagram C Also avoid inserting the Cam Bolt too close to the surface of the hole as shown in figure C, as this will cause the Cam Lock to be too loose, and not interlock properly.
	Connect the panels together.
	Insert the Cam Lock so the side opening fits over the head of the Cam Bolt.
	To tighten the Cam Lock, turn it clockwise on half a turn with a flat screwdriver. <i>*Do not use an automatic screwdriver as it may bend or break if too much power is imposed.</i>

Before installing the slide, separate the cabinet member and the drawer member.


**Pay attention when connecting !
The sliding module must be at the front end.**

STEP 1 : Extend Slide

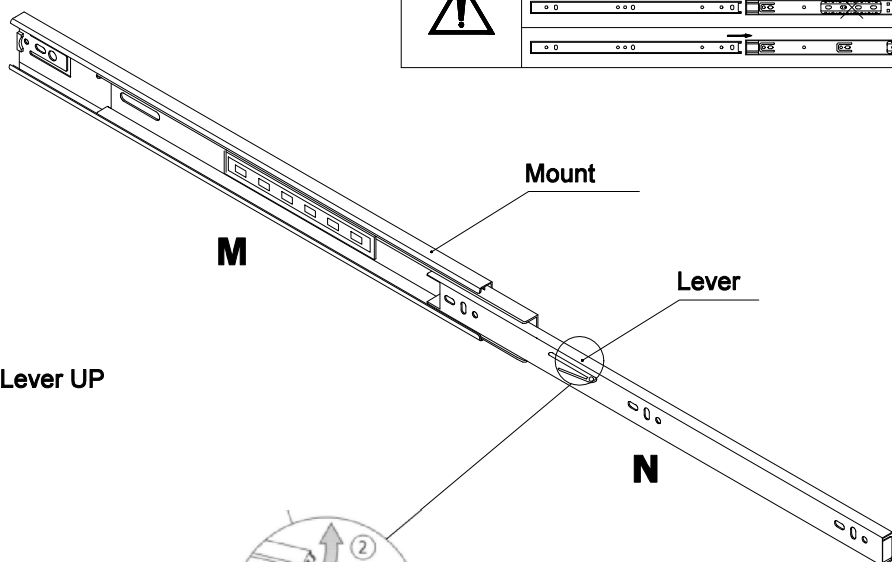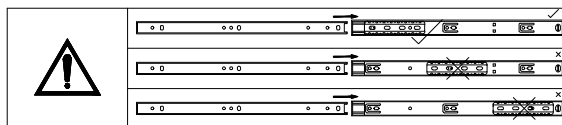


STEP 2: Push Lever UP

**Push lever for the left of drawer ,
press the lever for the right of drawer.**

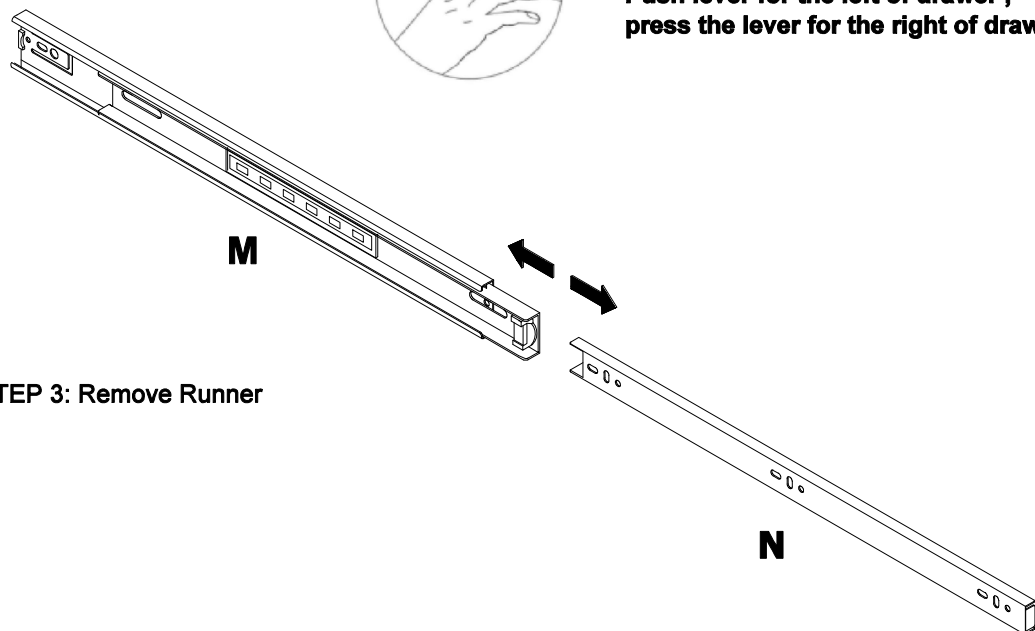













STEP 3: Remove Runner

Detail View - CABINET





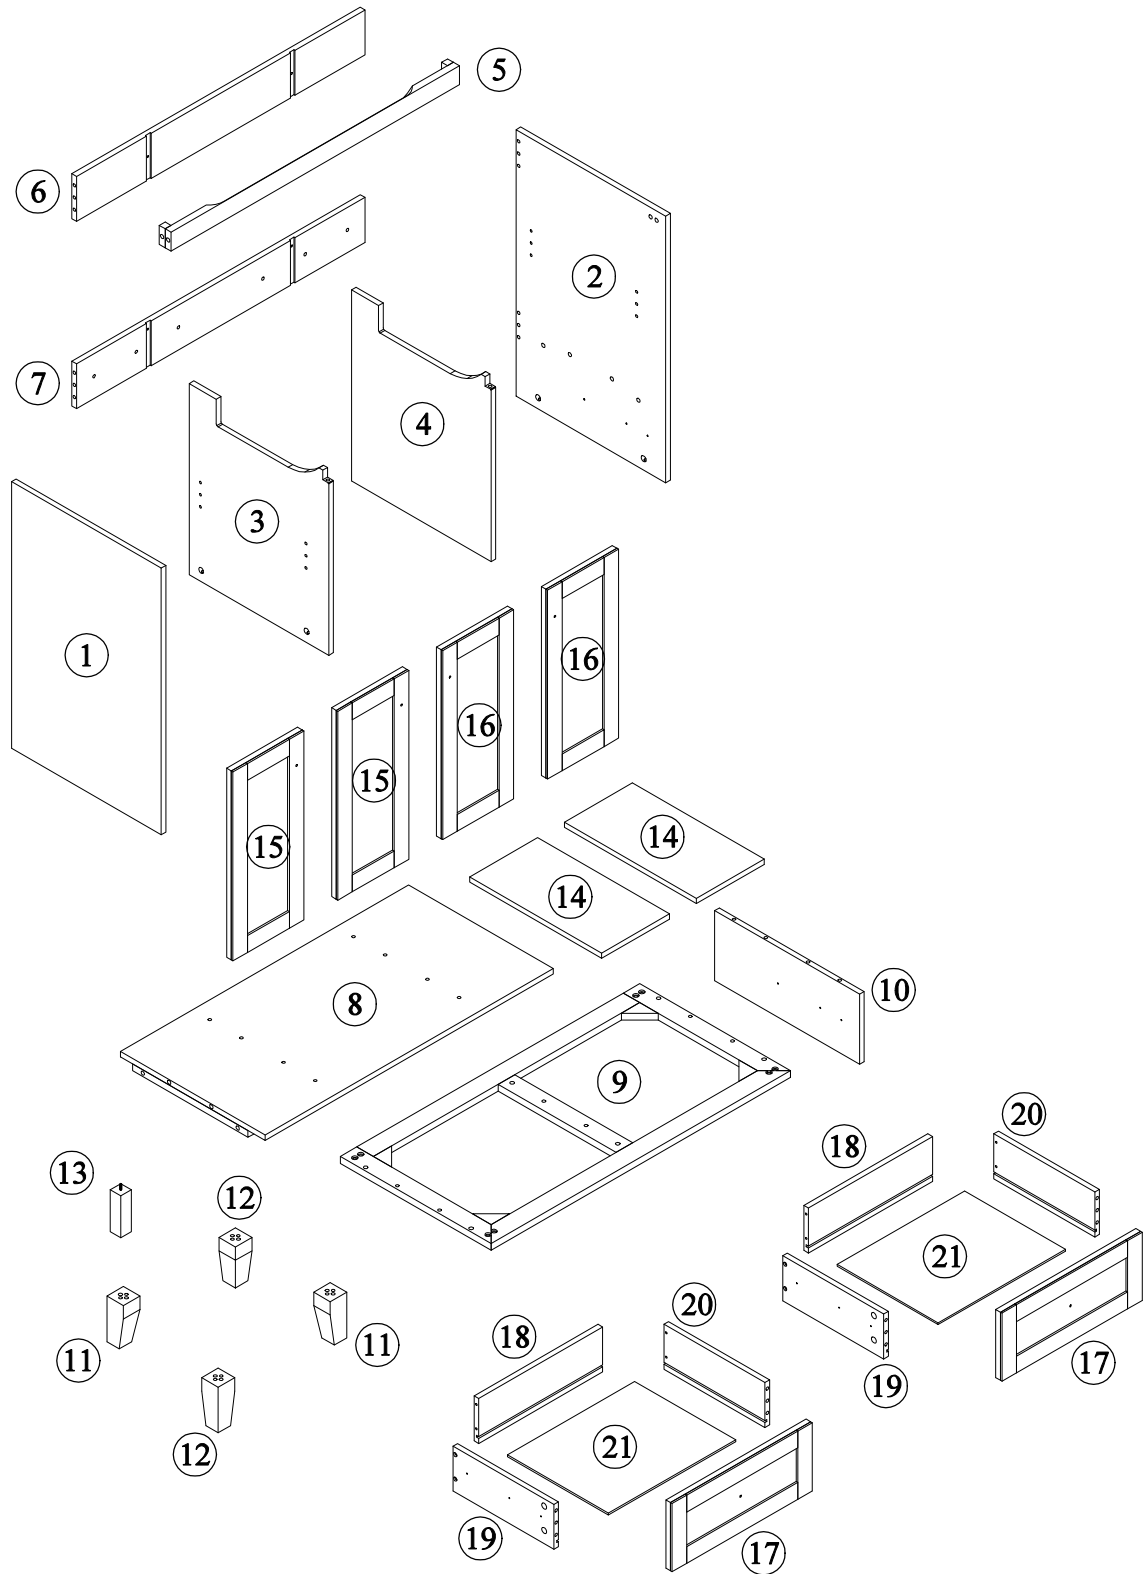


Identifying the Hardware-Identify the hardware using the illustrations below.











Part List -

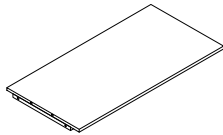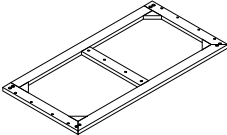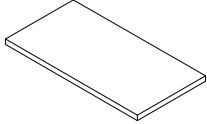1		2	
	Side Panel (L) - 1pc		Side Panel (R) - 1pc
3		4	
	Mid Panel (L) - 1pc		Mid Panel (R) - 1pc
5		6	
	Top Bar Front - 1pc		Top Panel Rear - 1pc
7		8	
	Bottom Panel Rear - 1pc		Mid Frame - 1pc
9		10	
	Bottom Frame - 1pc		Mid Panel - 1pc
11		12	
	Cabinet Feet(A) - 2pcs		Cabinet Feet(B) - 2pcs
13		14	
	Mid Cabinet Feet - 1pc		Adjustable Shelf - 2pcs
15		16	
	Cabinet Door(L) - 2pcs		Cabinet Door(R) - 2pcs


Part List -

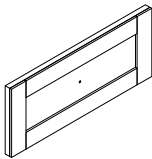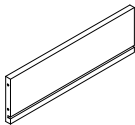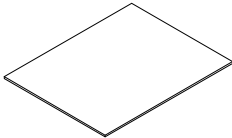17  Drawer Face - 2pcs	18  Drawer Back Panel - 2pcs
19  Drawer Side Panel (L) - 2pcs	20  Drawer Side Panel (R) - 2pcs
21  Bottom Drawer Panel - 2pcs	


Hardware List -

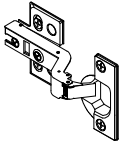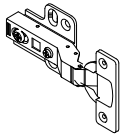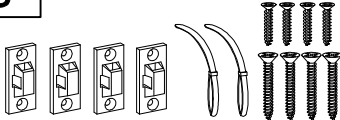A  $\varnothing 13 \times 1/4" \times 28 \text{mm}$ Hex-Head bolts (14pcs)	B  $\varnothing 1/4" \times 16 \times 1 \text{mm}$ Washer (6pcs)	C  $\varnothing 6 \times 35 \text{mm}$ Three in one bolts (32pcs)
D  $\varnothing 14.5 \times 12 \text{mm}$ Three in one lock (32pcs)	E  $\varnothing 8 \times \varnothing 4 \times 25 \text{mm}$ Round head screw (4pcs)	F  $\varnothing 8 \times \varnothing 4 \times 32 \text{mm}$ Round head screw (8pcs)
G  Handle (6pcs)	H  $\varnothing 5/32" \times 20 \text{mm}$ Handle screw (2pc)	I  $\varnothing 5/32" \times 25 \text{mm}$ Handle screw (4pc)
J  Damping hinge (4pcs)	K  Damping hinge (4pcs)	L  $\varnothing 7 \times \varnothing 3.5 \times 15 \text{mm}$ Flat head screw (48pcs)
M  $\varnothing 300 \times 35 \text{mm}$ Slide rails (4pcs)	N  $\varnothing 298 \times 18 \text{mm}$ Slide rails (4pcs)	O  $\varnothing 6 \times \varnothing 3 \times 12 \text{mm}$ Flat head screw (24pcs)
P  L-Bracket (2pc)	Q  $\varnothing 7 \times \varnothing 3.5 \times 12 \text{mm}$ Round head screw (4pcs)	R  $\varnothing 8 \times 30 \text{mm}$ Wood dowel (38pcs)
S  4mm Allen key (1pc)	T  Laminate pad (8pcs)	U  Anti fall hardware (1set)

STEP: 1

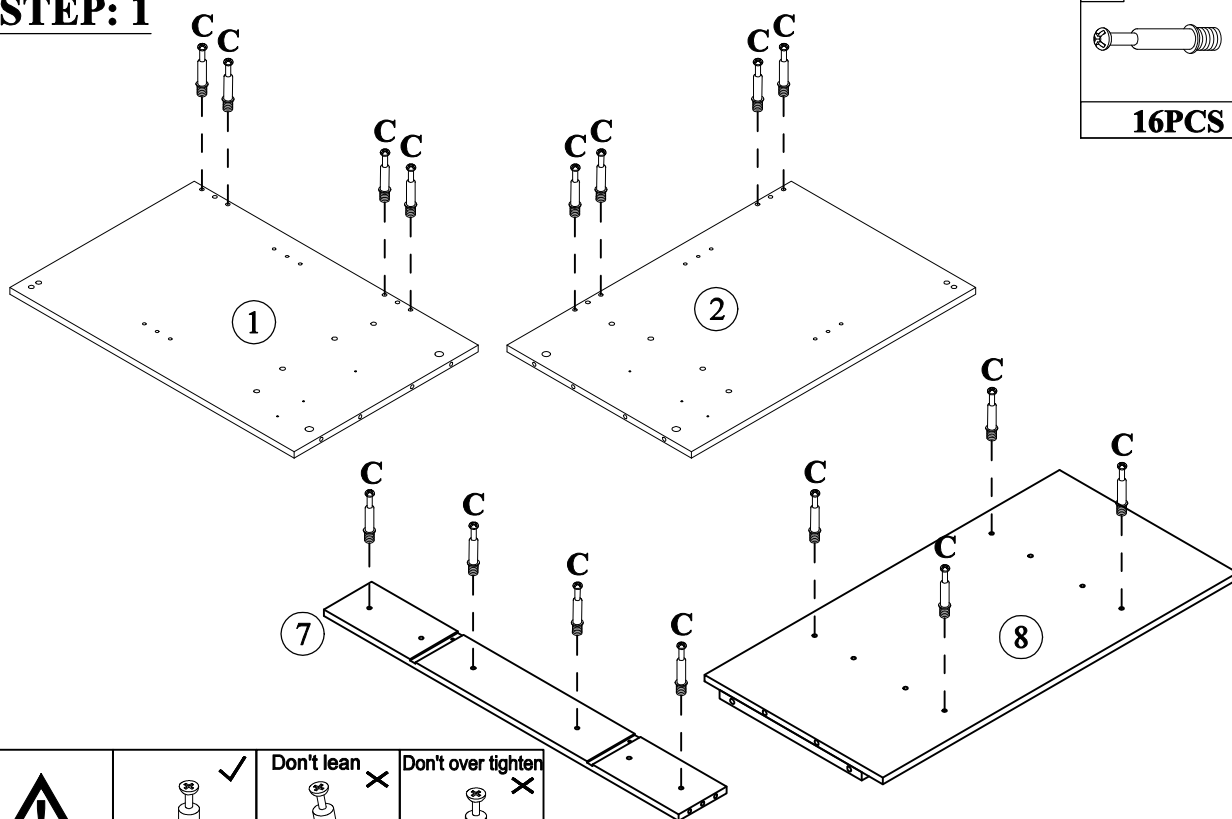


C



16PCS

STEP: 2

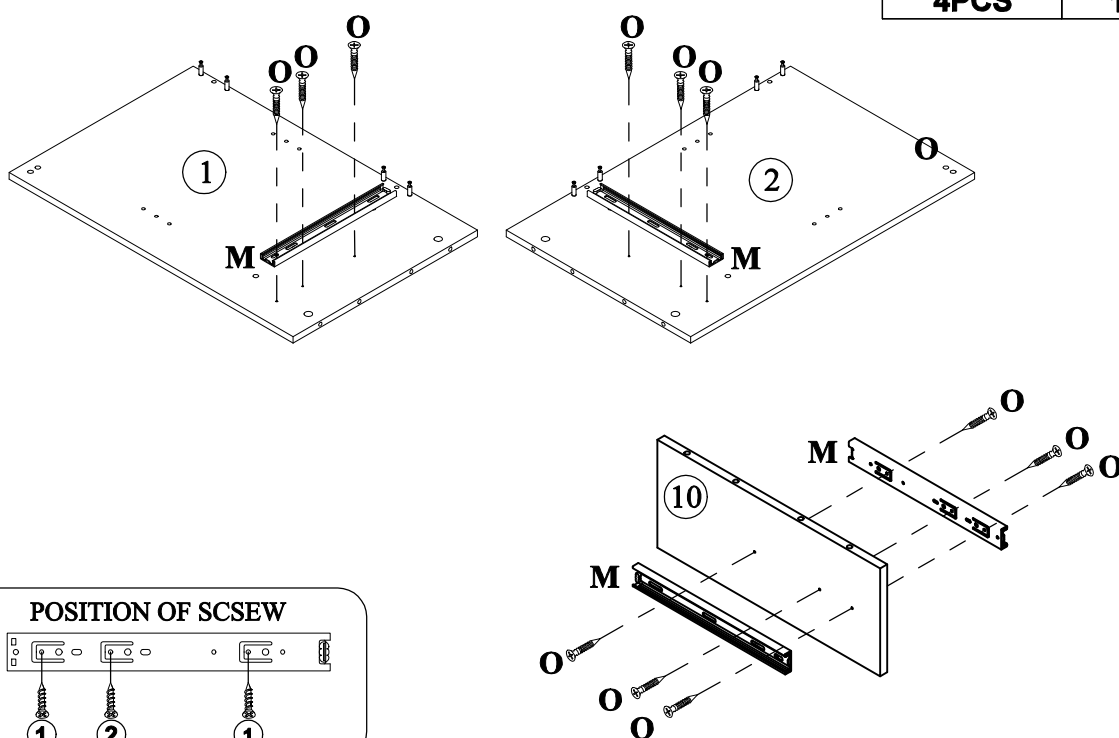

M




4PCS


O




12PCS


STEP: 3

D		R	
4PCS		4PCS	

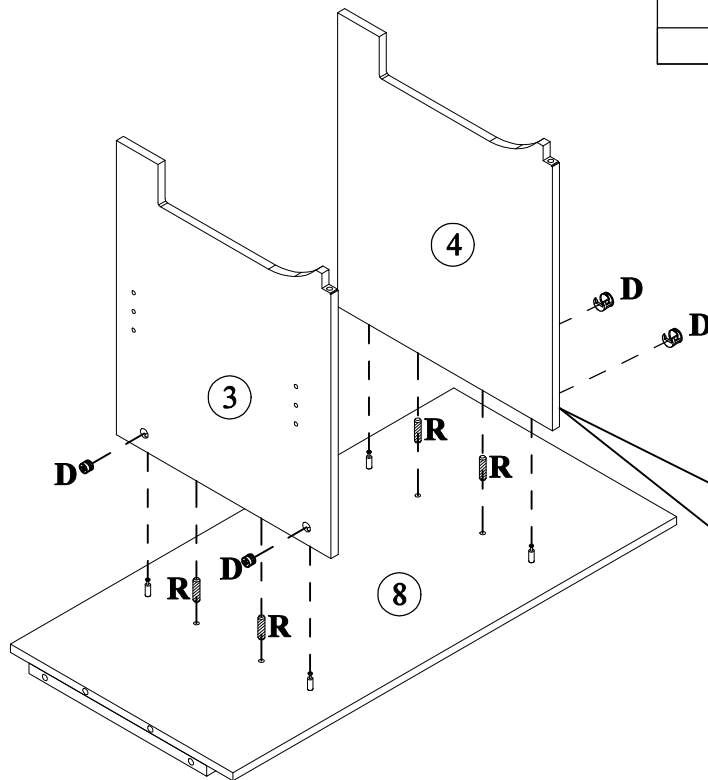





STEP: 4

E	D	R
		
4PCS	4PCS	2PCS

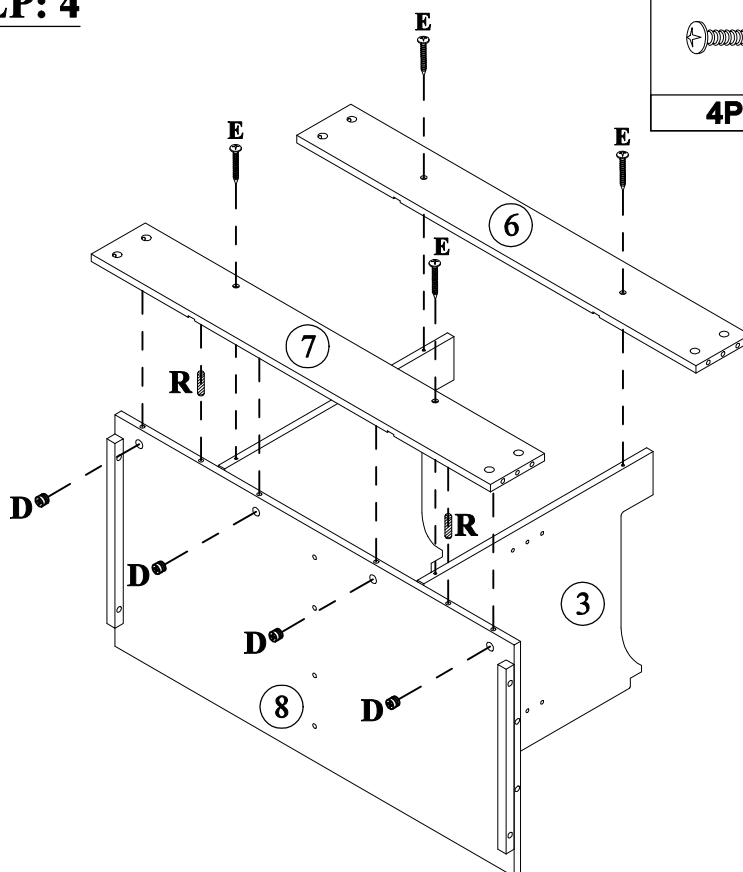


STEP: 5

P		Q		R	
2PCS		4PCS		2PCS	

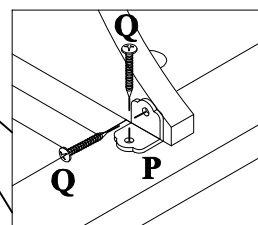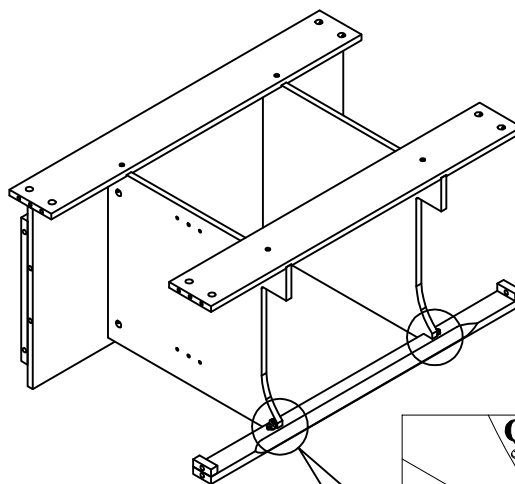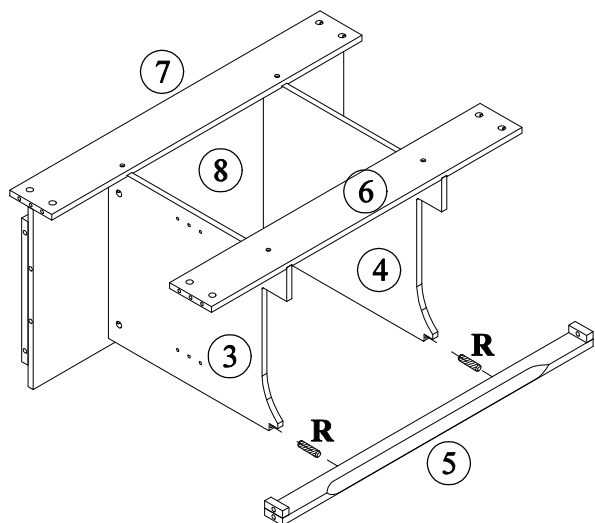



STEP: 6

R	
5PCS	

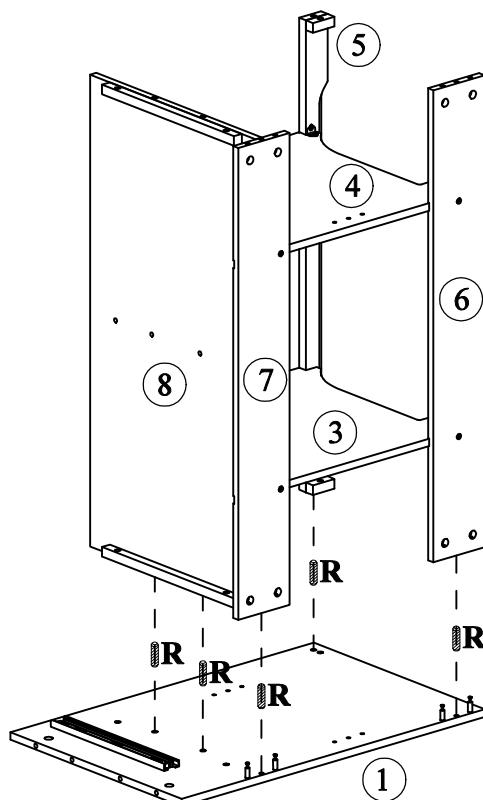




STEP: 7

A	B	D
		
3PCS	3PCS	4PCS

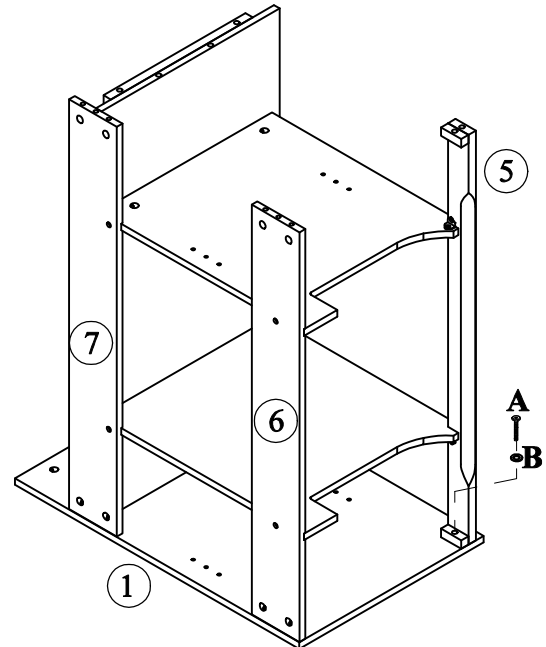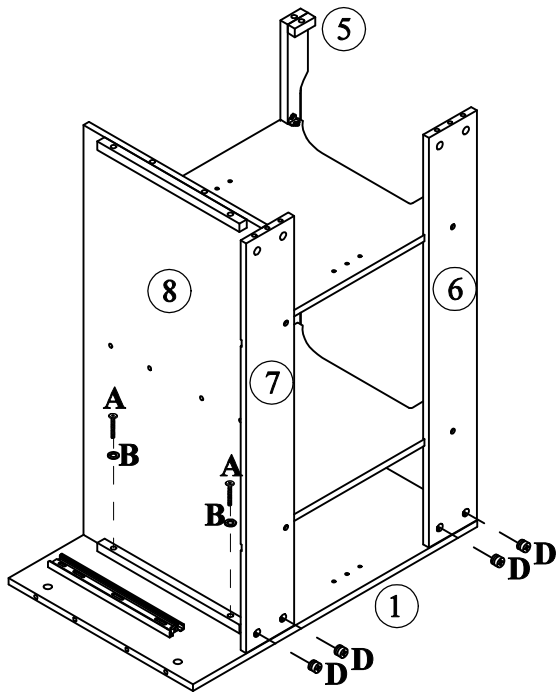




STEP: 8

A	B	D	R
			
3PCS	3PCS	4PCS	5PCS

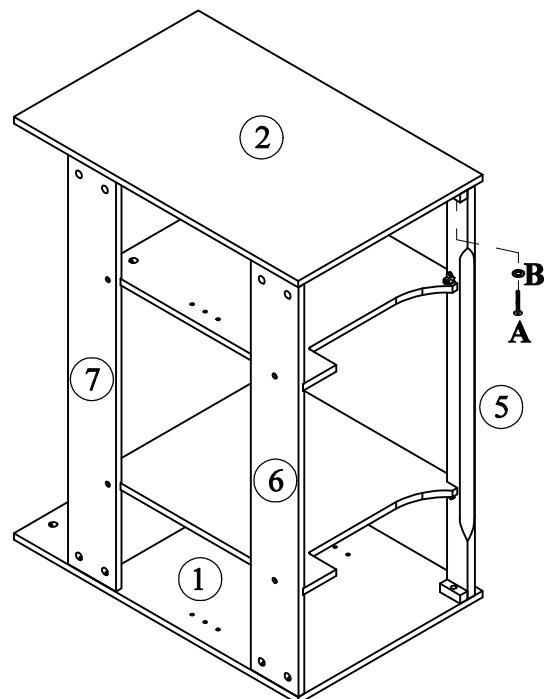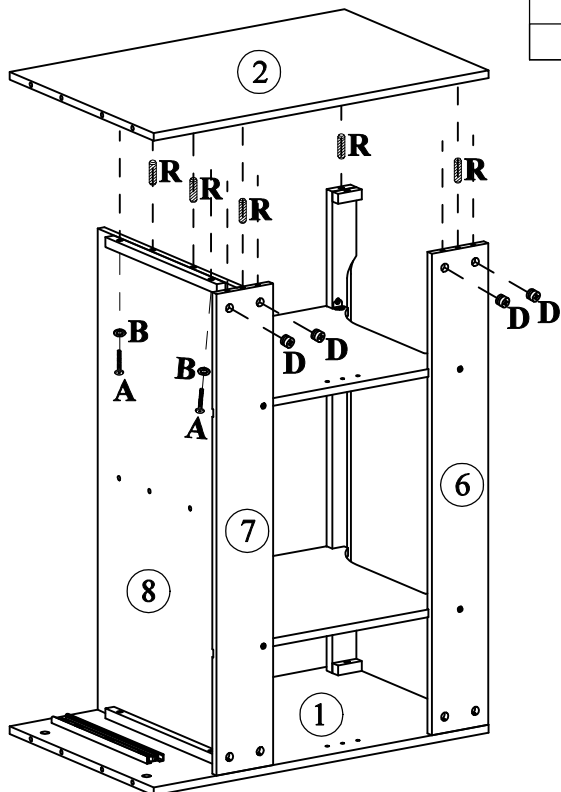


STEP: 9

C		D		R	
2PCS		2PCS		2PCS	

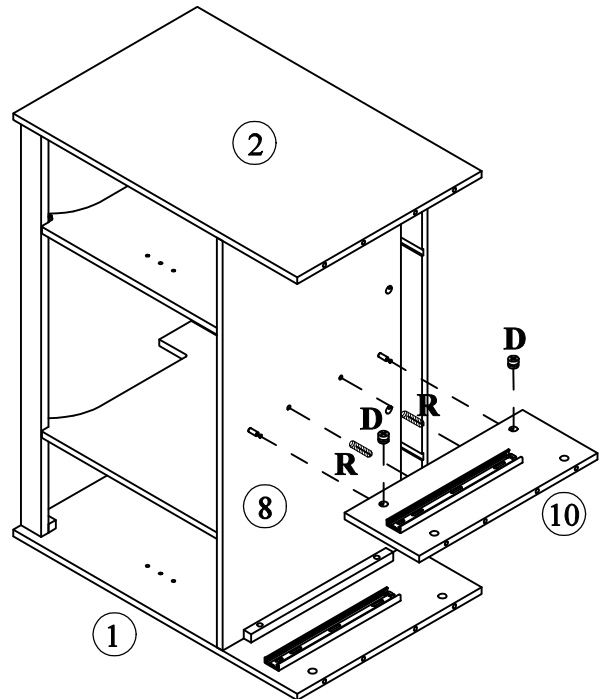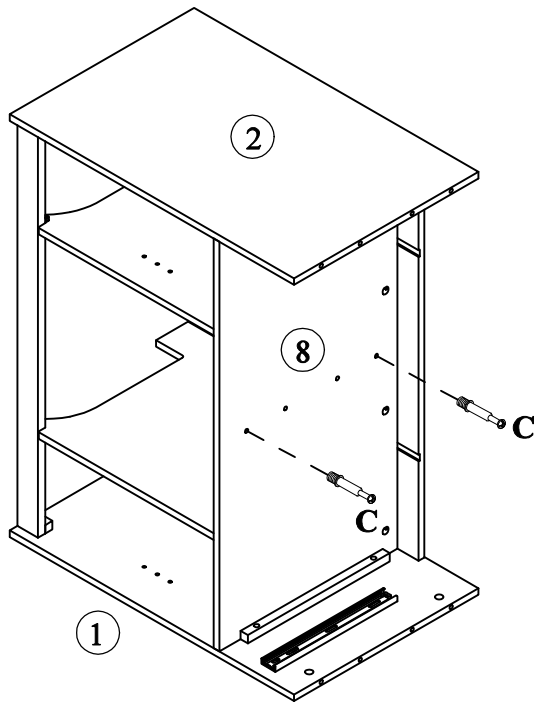


STEP: 10

A		R	
8PCS		8PCS	

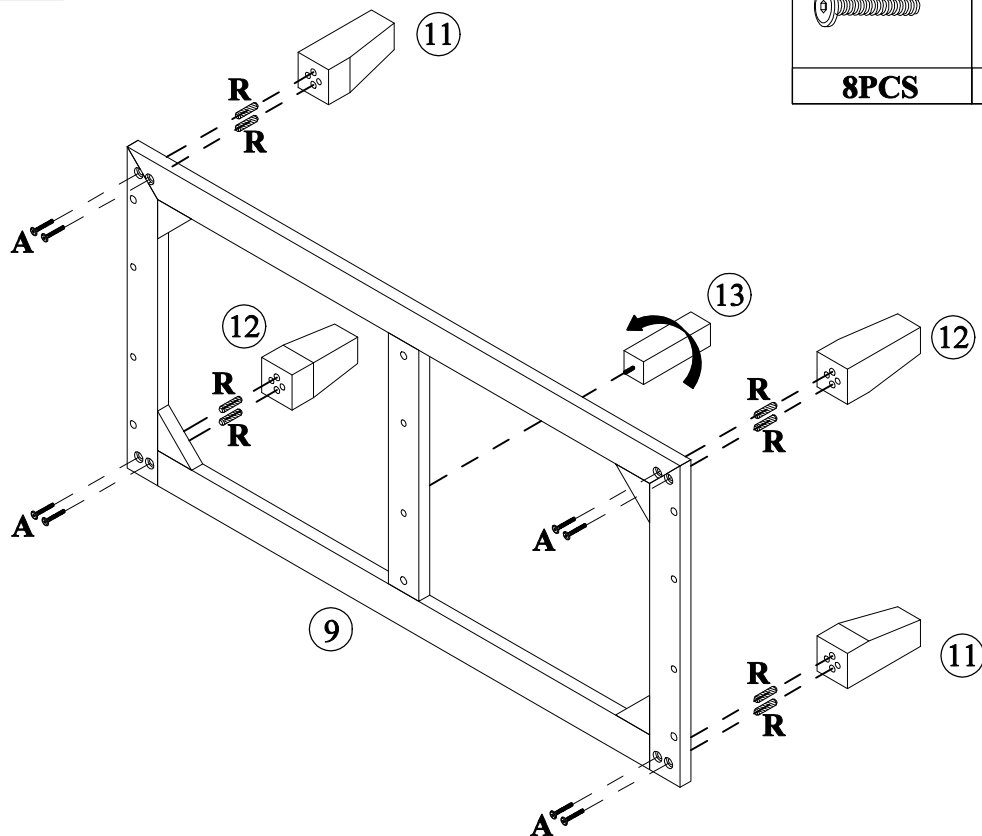


STEP: 11

C



6PCS

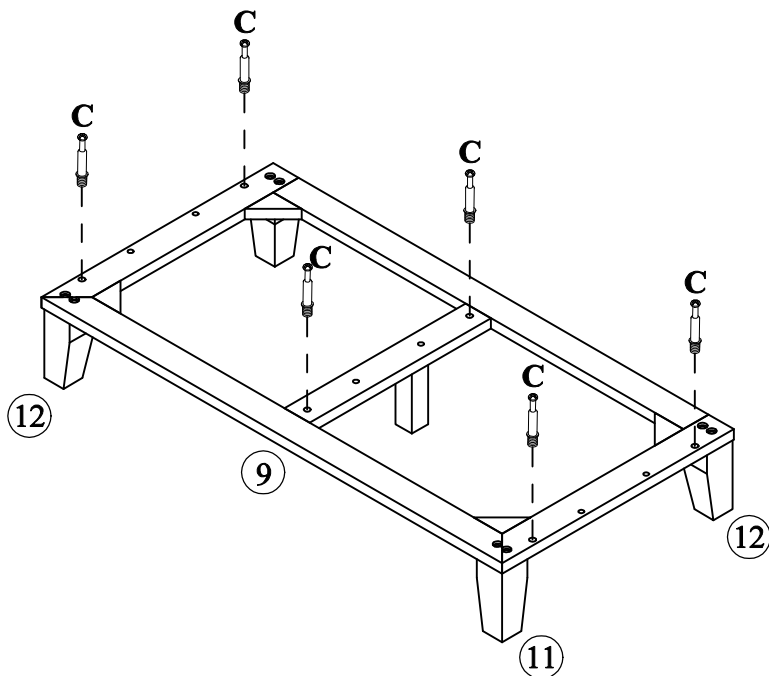

STEP: 12

D





6PCS


R




6PCS

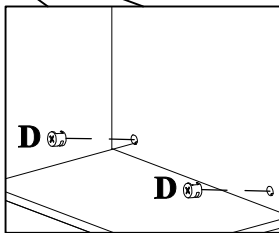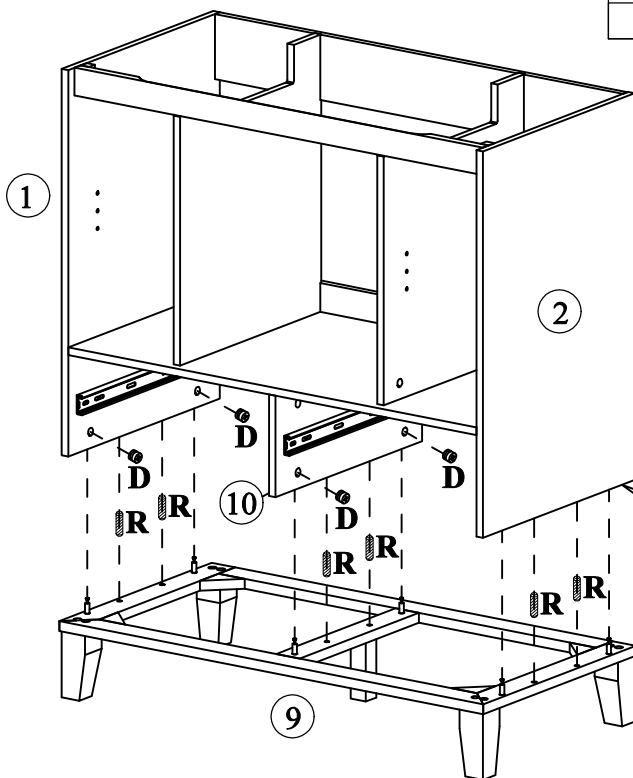



STEP: 13

J	L
	
4PCS	8PCS

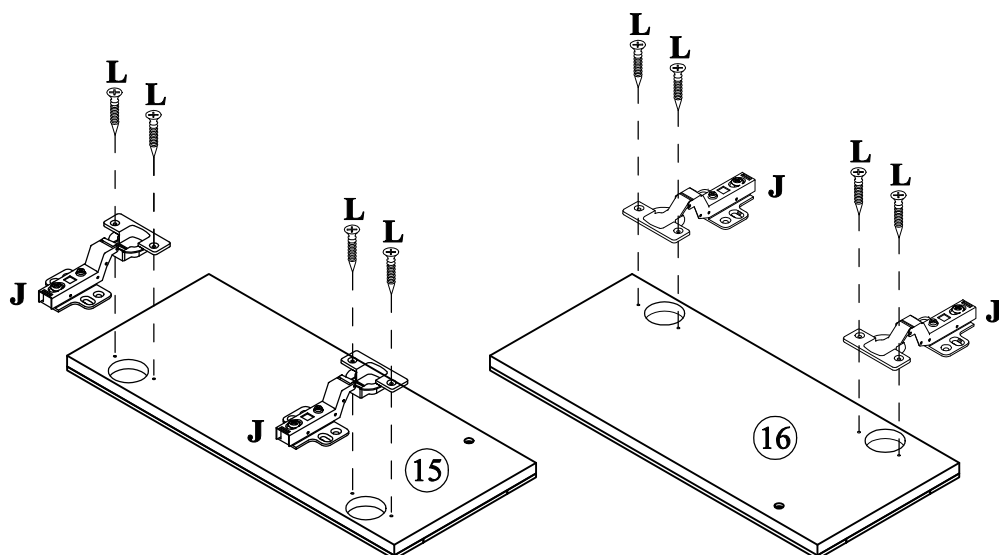



STEP: 14

G	I	L
		
2PCS	2PCS	16PCS

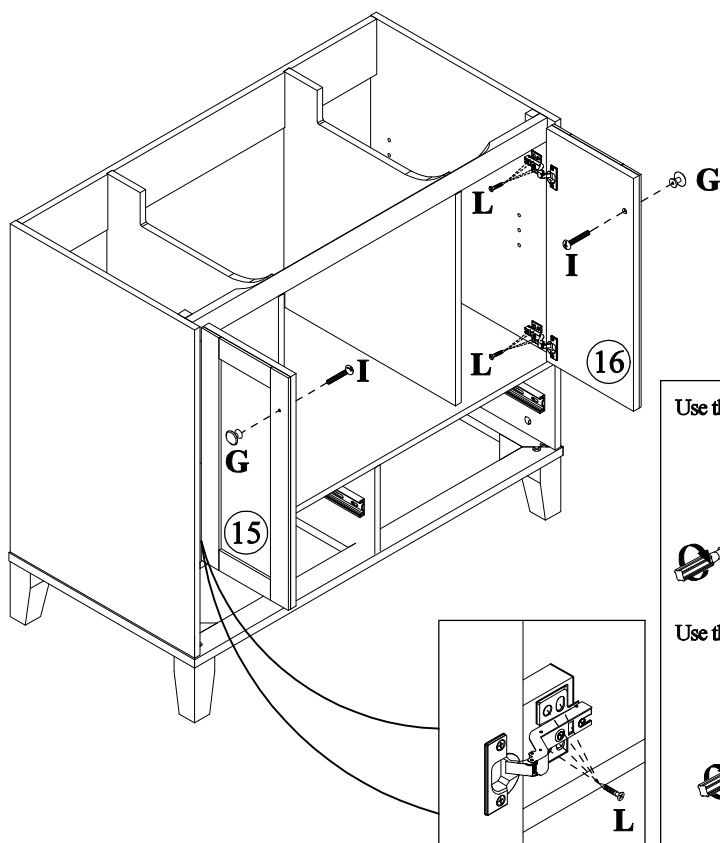



Use the screws to adjust up or down

Use the screws to permanent

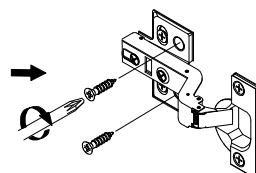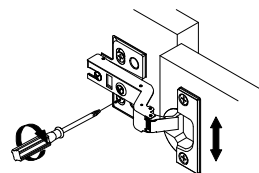


Use the screws to adjust left or right

Use the screws to adjust in or out

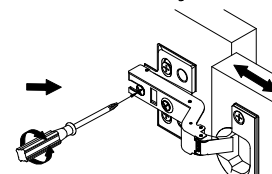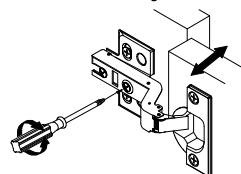


STEP: 15

K		L	
	4PCS		8PCS

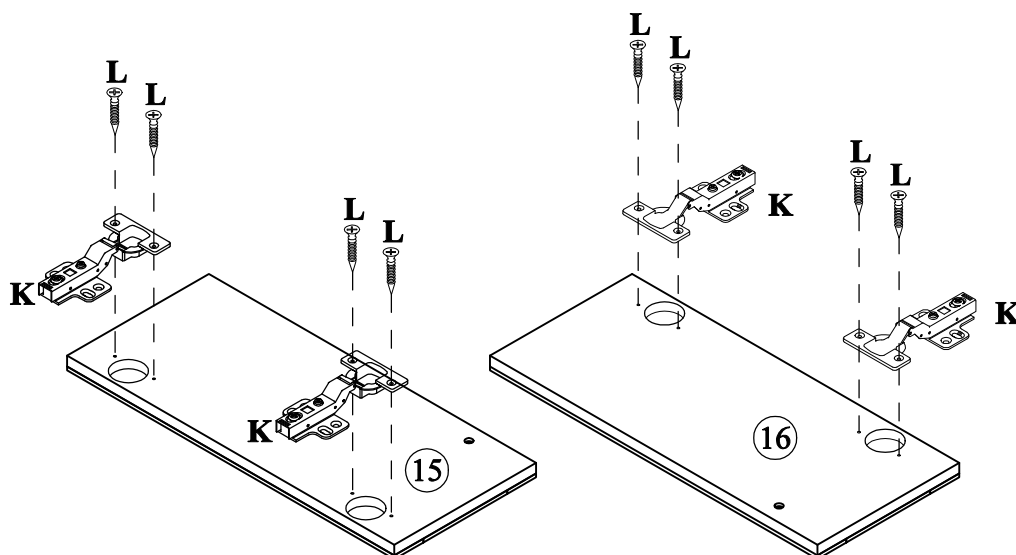


STEP: 16


G		I		L	
	2PCS		2PCS		16PCS

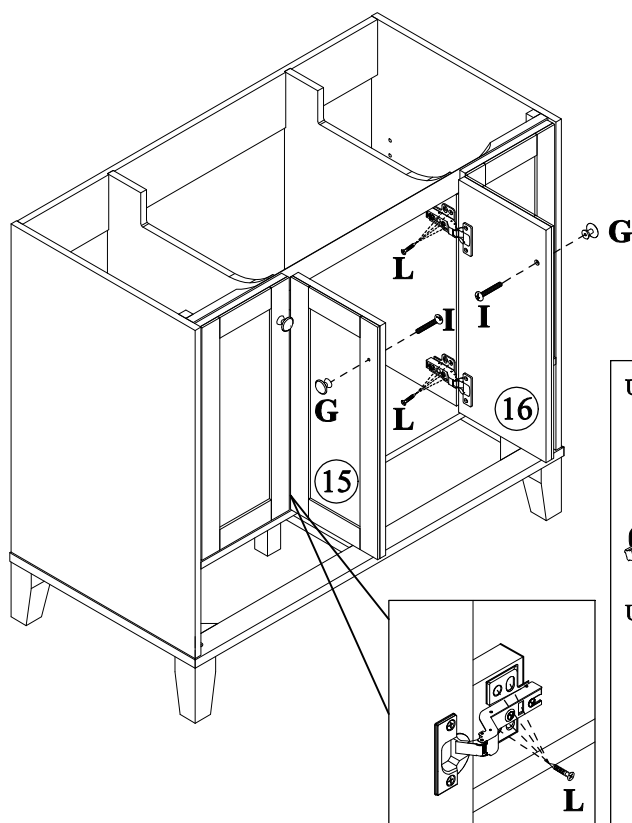


Use the screws to adjust up or down

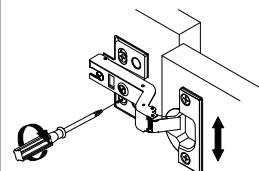


Use the screws to permanent

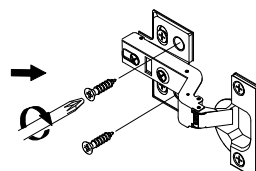




Use the screws to adjust left or right






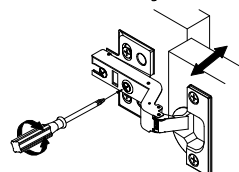


Use the screws to adjust in or out

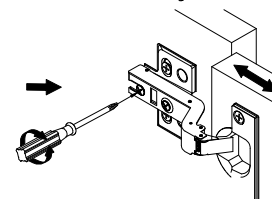


STEP: 17

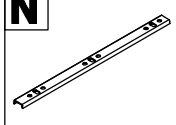C 	D 	F 	G 	H 
8PCS	8PCS	8PCS	2PCS	2PCS
		N 	O 	R 
		4PCS	12PCS	4PCS

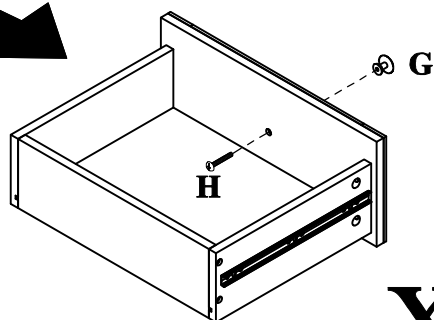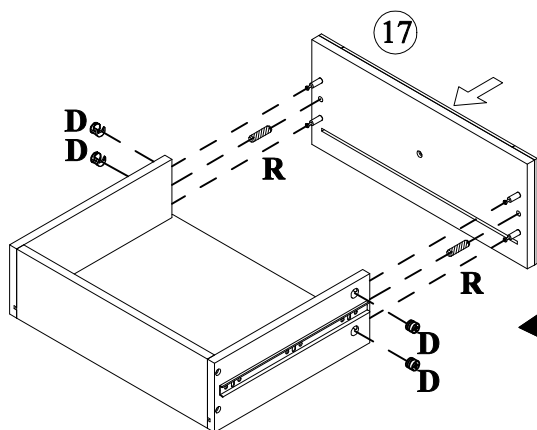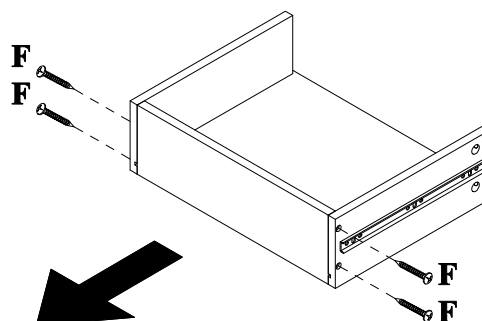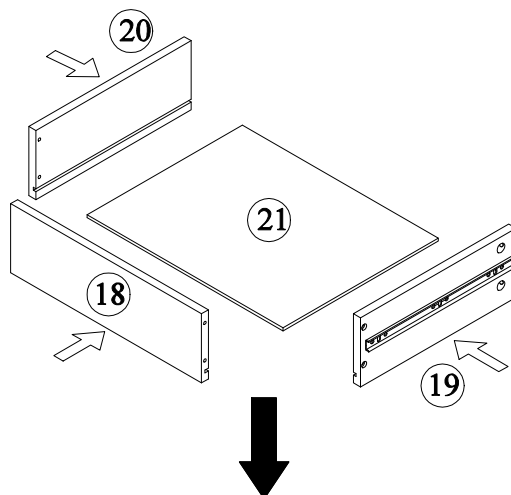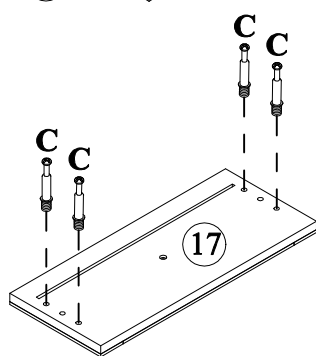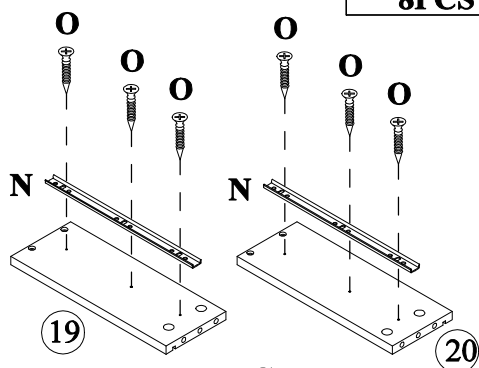


x2


POSITION OF SCREW

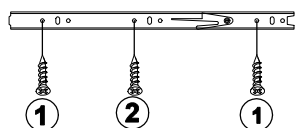



STEP: 18

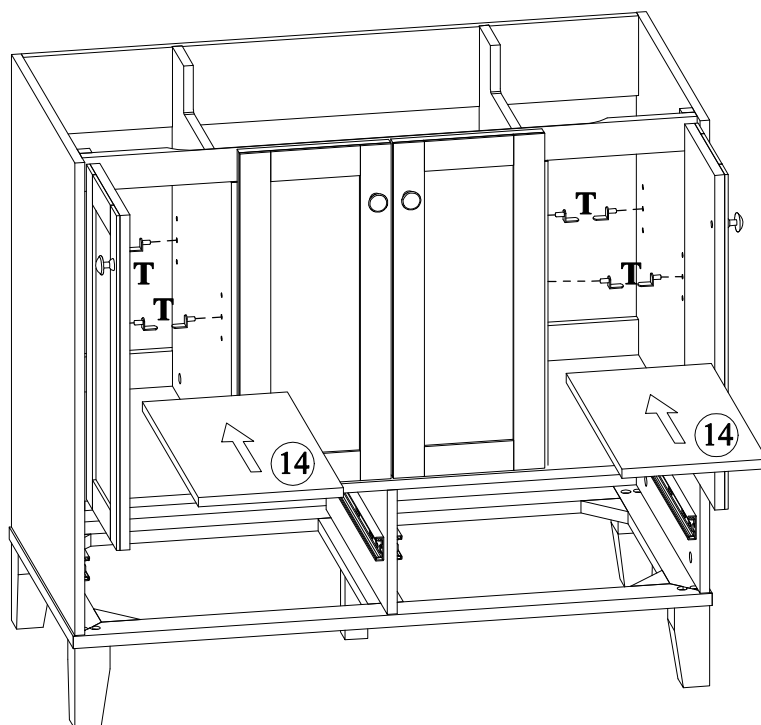T**8PCS**

STEP: 19

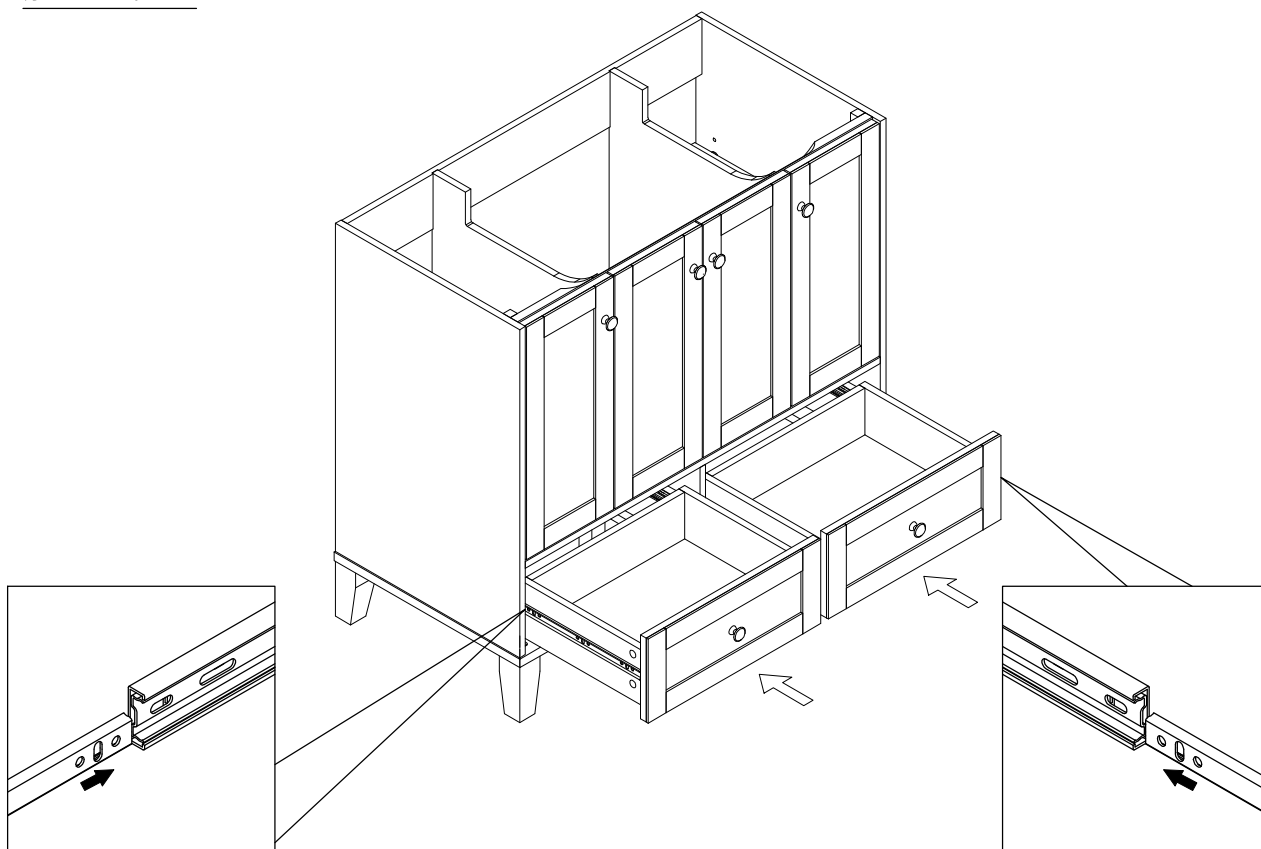


STEP: 20

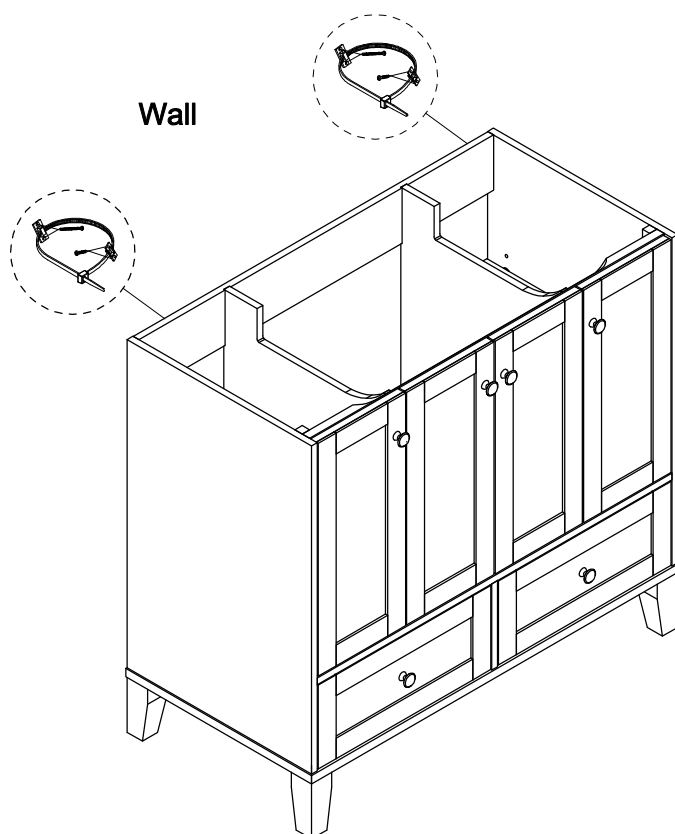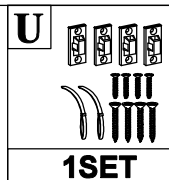


STEP: 21


Install the sink on the cabinet with glue.
Let stand for 24 hours

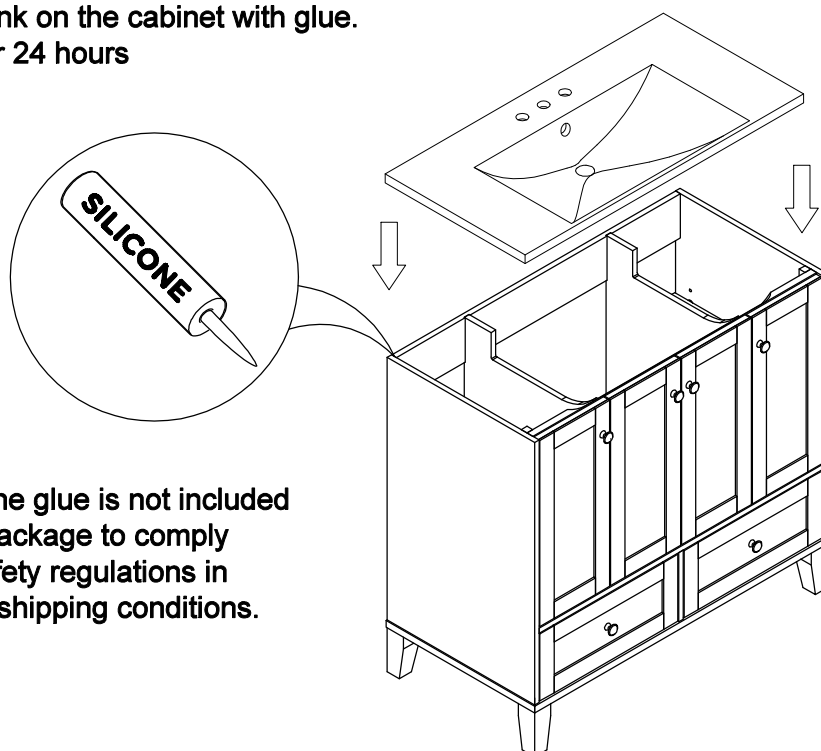

STEP: 22

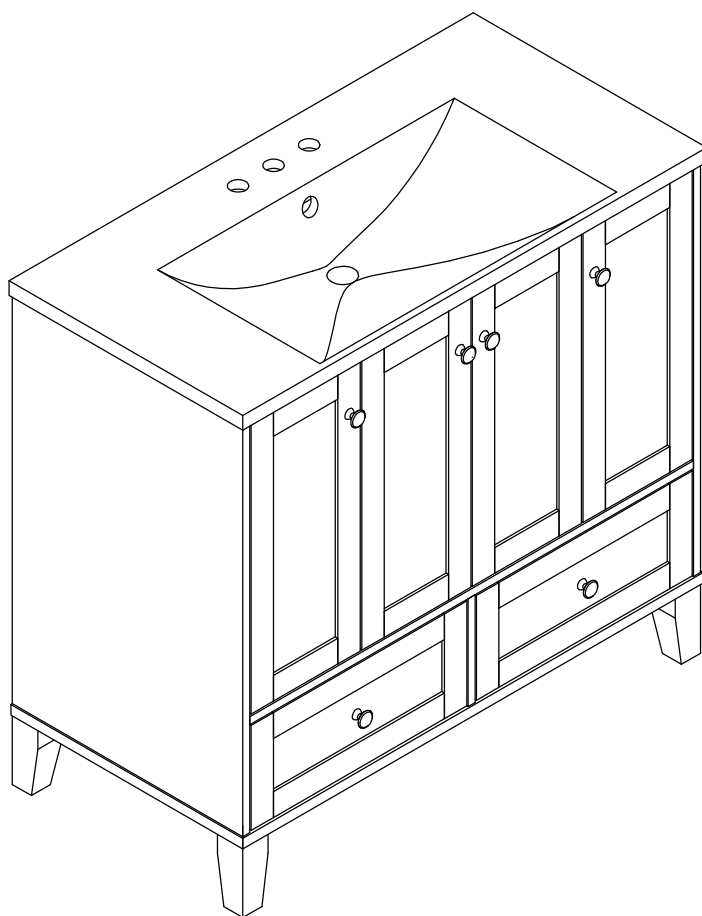

HINGE ADJUSTMENTS

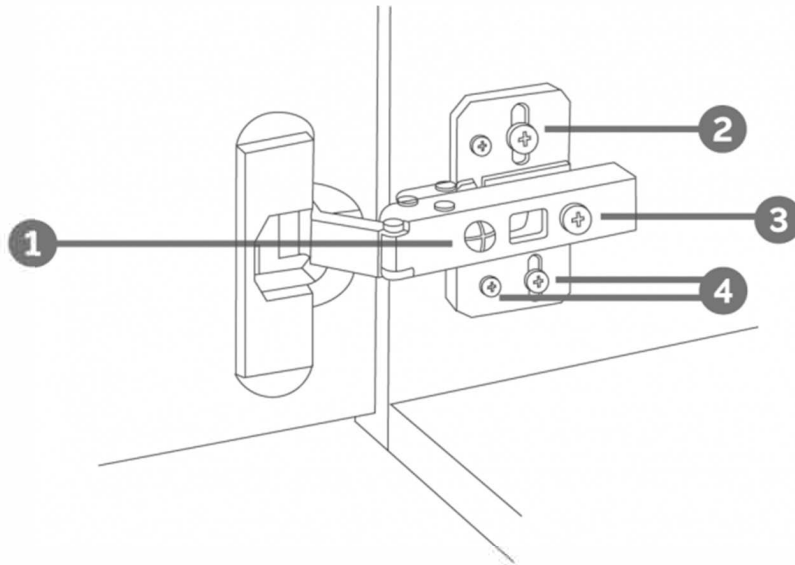


① Sideways / Tilt adjustment

Turn the screw

clockwise to move the door further away from the side of the cabinet

anticlockwise to move the door closer to the side of the cabinet

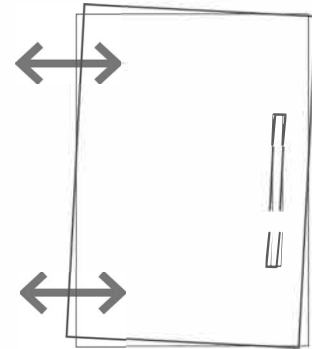


② ④ Height adjustment

While supporting the weight of the door, turn the screws

clockwise to move the door up

anticlockwise to move the door down

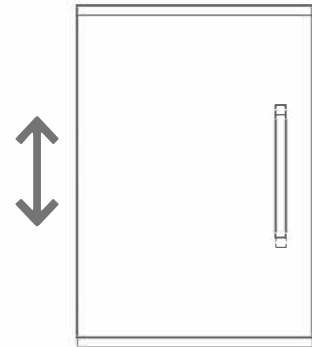

③ Forward and back adjustment

If the gap between the back of the door and the cabinet is too small, and the door may not close fully. Turn the screw

clockwise to decrease the gap between the door and the cabinet

anticlockwise to increase the gap between the door and the cabinet

