Assembly Instruction

BA-106

INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.

PRECAUTIONS

1. There are many components and accessories in the package. Each component and accessory is labeled with a letter or a number, check carefully before using any of them. Keep them away from children to prevent accidents.

2. Please install the product on a clean and soft underlay (such as carpet or cardboard) to avoid scratching or damaging the surface of the product.

3. The main components of the product are relatively heavy. Please pay attention to safety during installation.

4. The product is not stable during installation. Please do not move it randomly before it is completely installed.

5. if you have any questions during installation, please contact the customer service in time.

* PLEASE BE SURE TO FOLLOW THE INSTALLATION STEPS IN THE MANUAL TO AVOID UNNECESSARY LOSSES CAUSED BY IMPROPER INSTALLATION.

* IF YOU NEED FURTHER ASSISTANCE, PLEASE CONTACT THE CUSTOMER SERVICE ONLINE.

Parts List : Box A

1 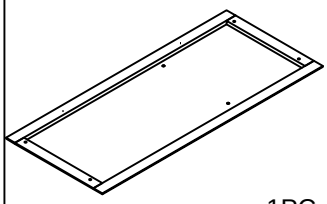 1PC	2 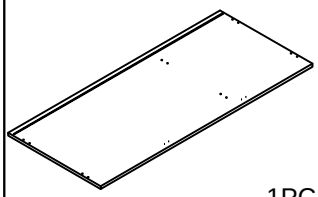 1PC	3 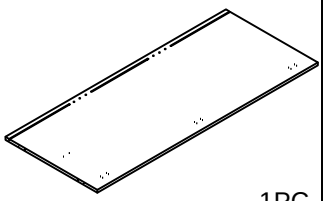 1PC	4 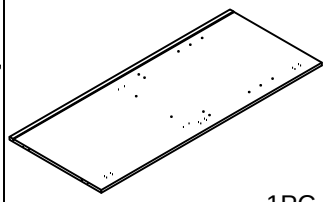 1PC
5 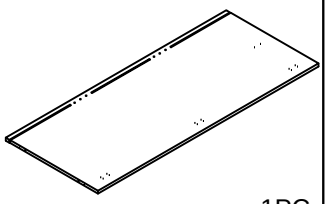 1PC	6 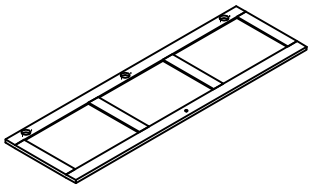 3PCS	7 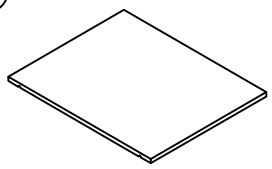 1PC	8 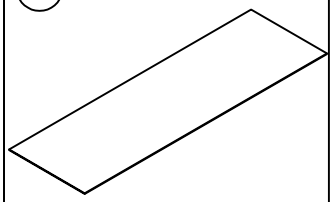 1PC
9 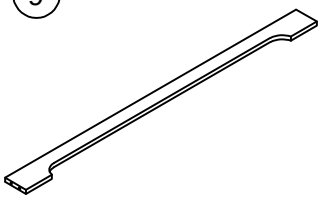 1PC	10 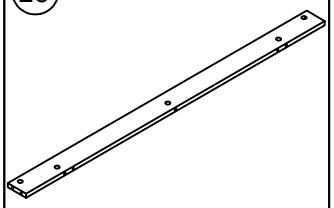 1PC		

Parts List : Box B

11 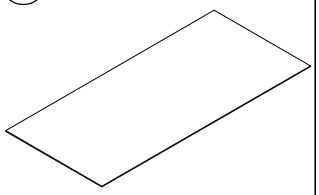 3PCS	12  2PCS	13 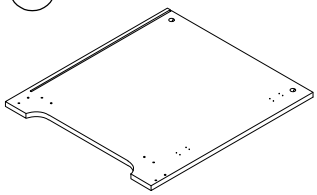 1PC	14 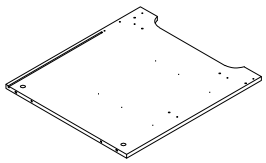 1PC
15 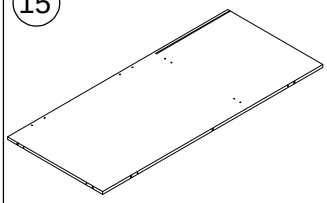 1PC	16 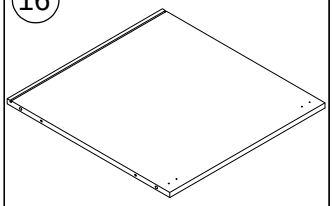 1PC	17 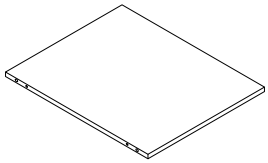 1PC	18  1PC
19 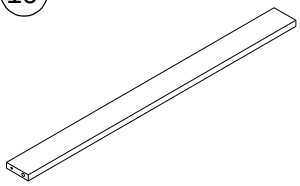 1PC	20 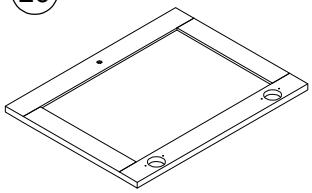 1PC	21 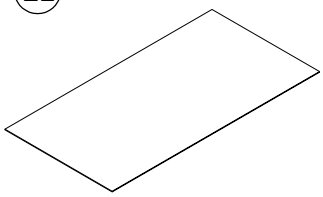 1PC	22 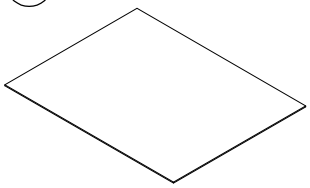 1PC
23 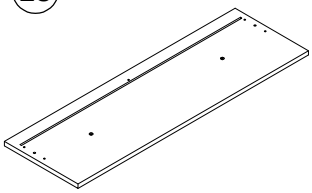 2PCS	24  2PCS	25  2PCS	26 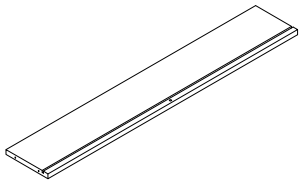 2PCS
27  2PCS	28 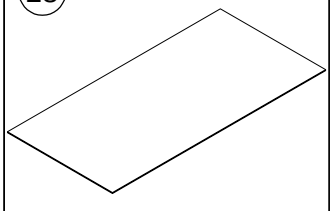 2PCS	29 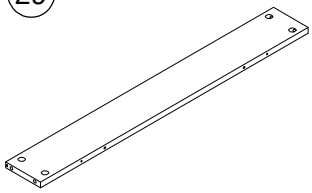 1PC	30 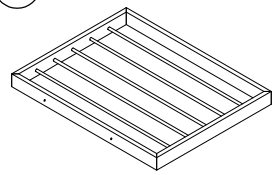 1PC

Hardware List : all hardwares in box -B

A. 6x35mm  48+2PCS	**B.**15x9.5mm 48+2PCS	**C.** Ø6x30mm  38+2PCS	**D.** M5x46mm  16+2PCS	**E.** M3.5x12mm  16+2PCS
F. Ø13.8*18*4mm 4+1PC	**G.** G.1 G.2 28+2SETS	**H.** Ø5*7*17mm  4+1PC	**I.** 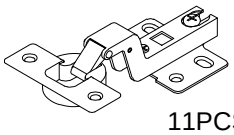 11PCS	**J.** M3.5x14mm  100+3PCS
K.  2PCS	**L.** M3.5*12mm 2PCS	**M.** Ø8x6x35mm  2PCS	**N.** M4x35mm 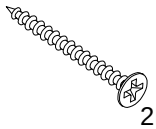 2PCS	**O.** Ø21mm 42+3PCS
P. M4x16mm 8+2PCS	**Q.**  6PCS	**R.** M4x35mm 14+1PC	**S.** 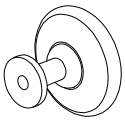 8PCS	**T.**  2PCS
U. M3 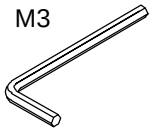 1PC	**V.** Ø6x50mm 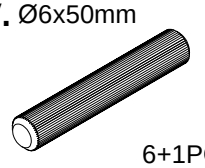 6+1PC	**W.**729mm 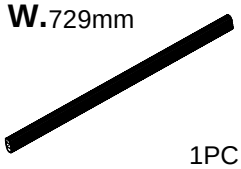 1PC	**X.** 140mm  1PC	**Y.** L=12" 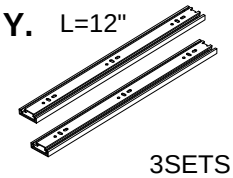 3SETS

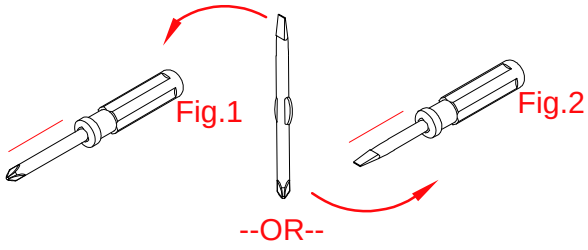

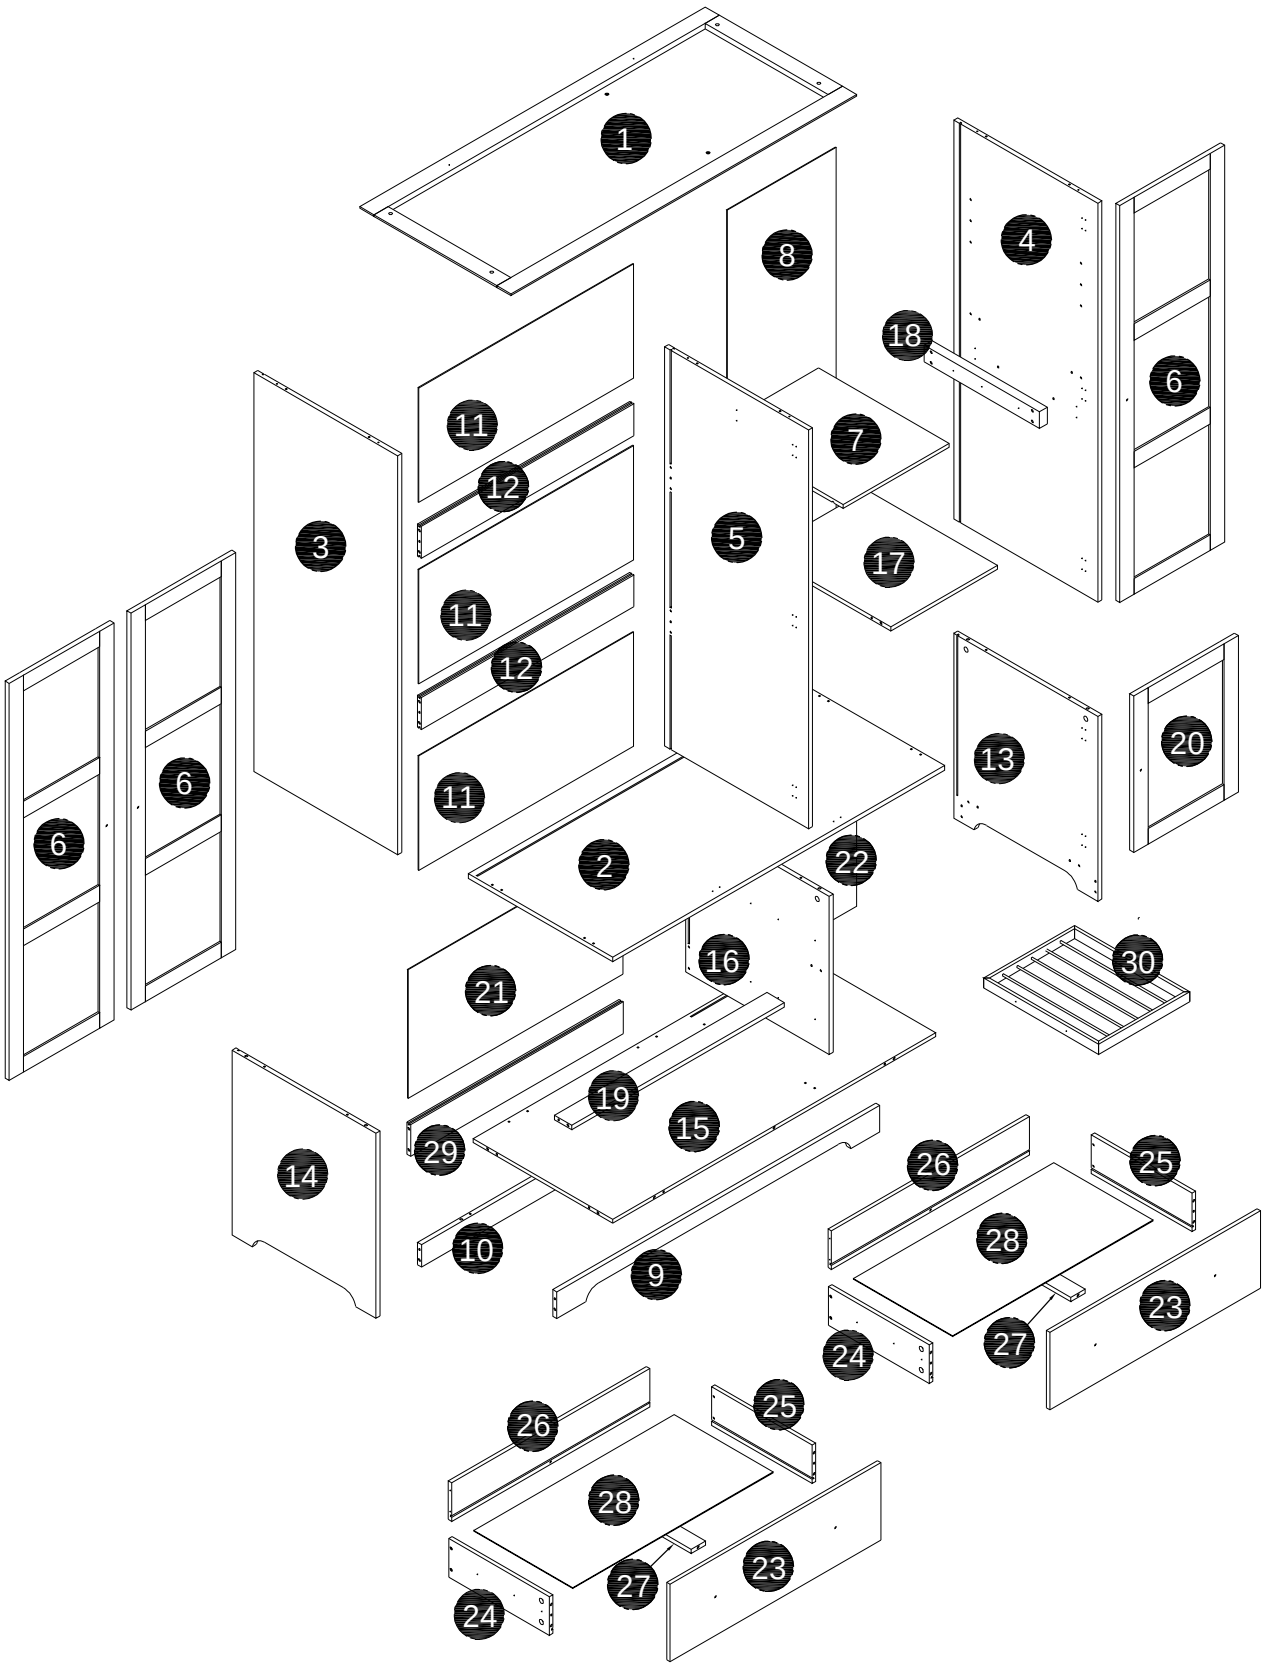
1
8
4
18
6
11
12
7
3
5
17
11
12
6
6
13
20
11
2
22
16
30
21
19
15
29
14
26
25
10
9
28
23
24
27
26
25
28
27
23
24

STEP 1

Slide Rail

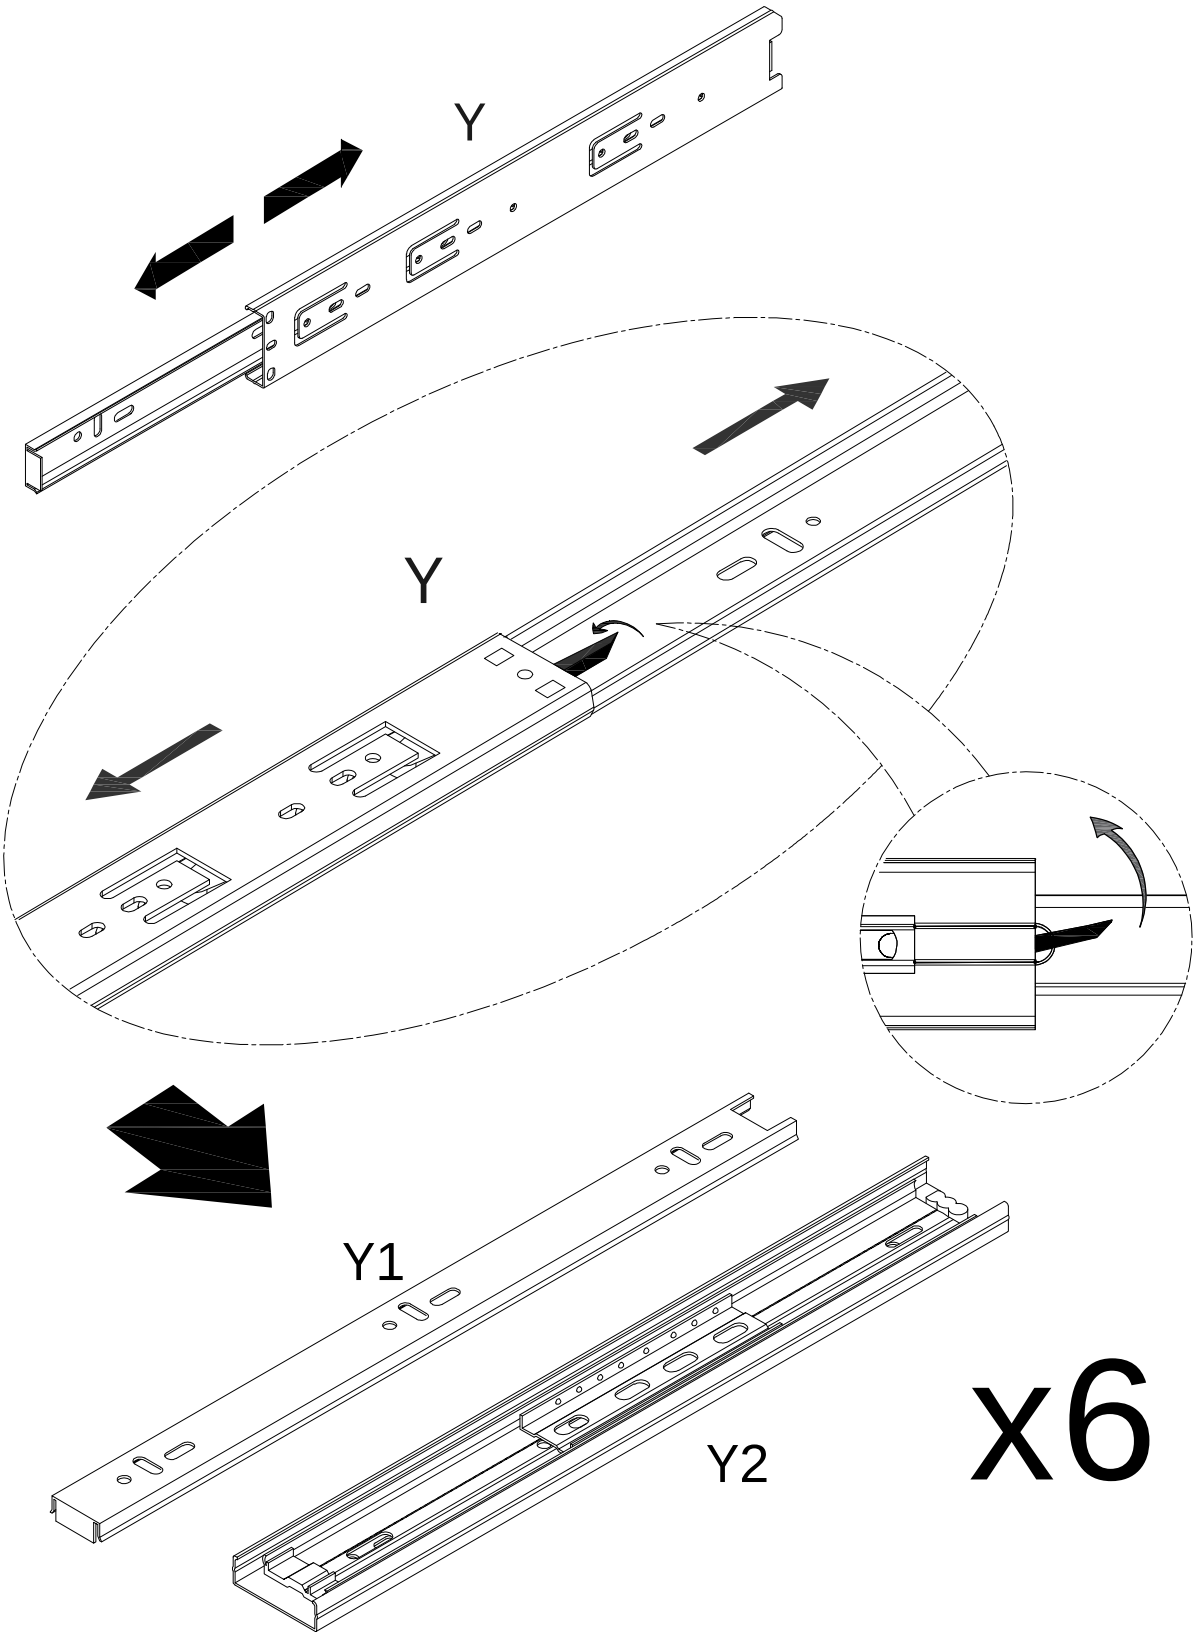

STEP 2

A x4	
J x2	
T x1	

STEP 3

B x4	
C x2	

STEP 4

C x2	

STEP 5

A x6	
J x5	
T x1	
Y2 x1	

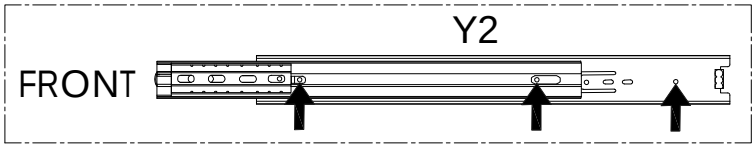

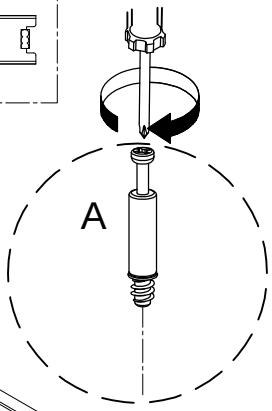

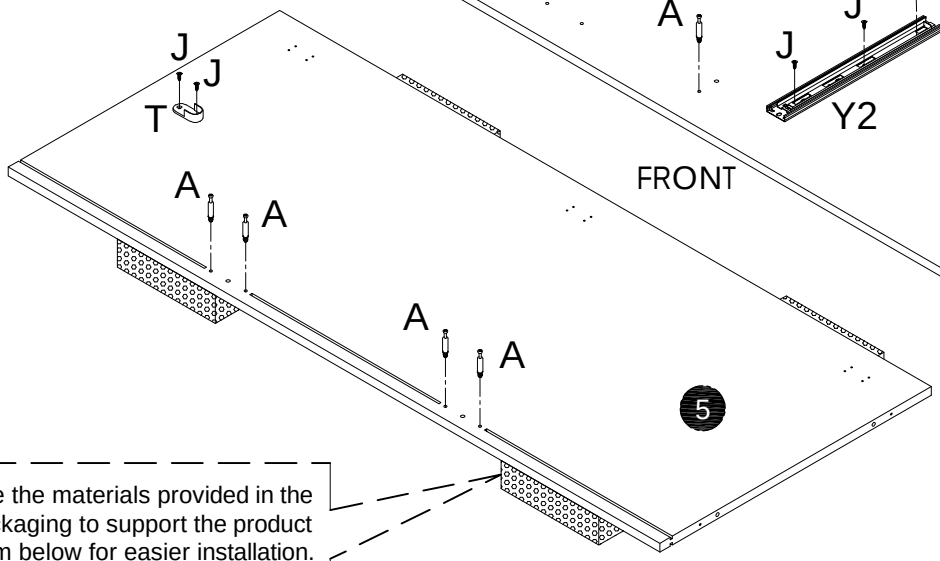

Use the materials provided in the packaging to support the product from below for easier installation.

STEP 6

B x4	

One person keep these No.3 and No.6 in place as show, one person move the No.5 into the assembly position!

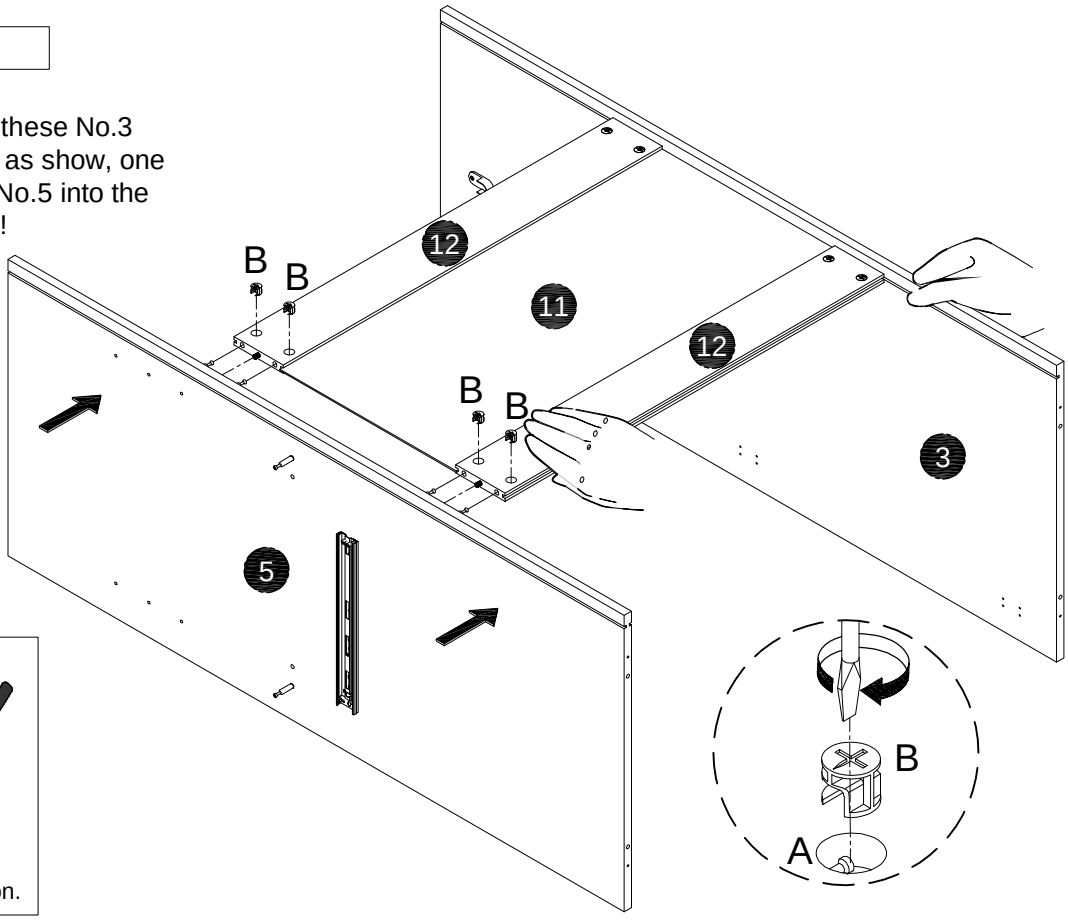

Double installation.

STEP 7

B x2	
C x2	

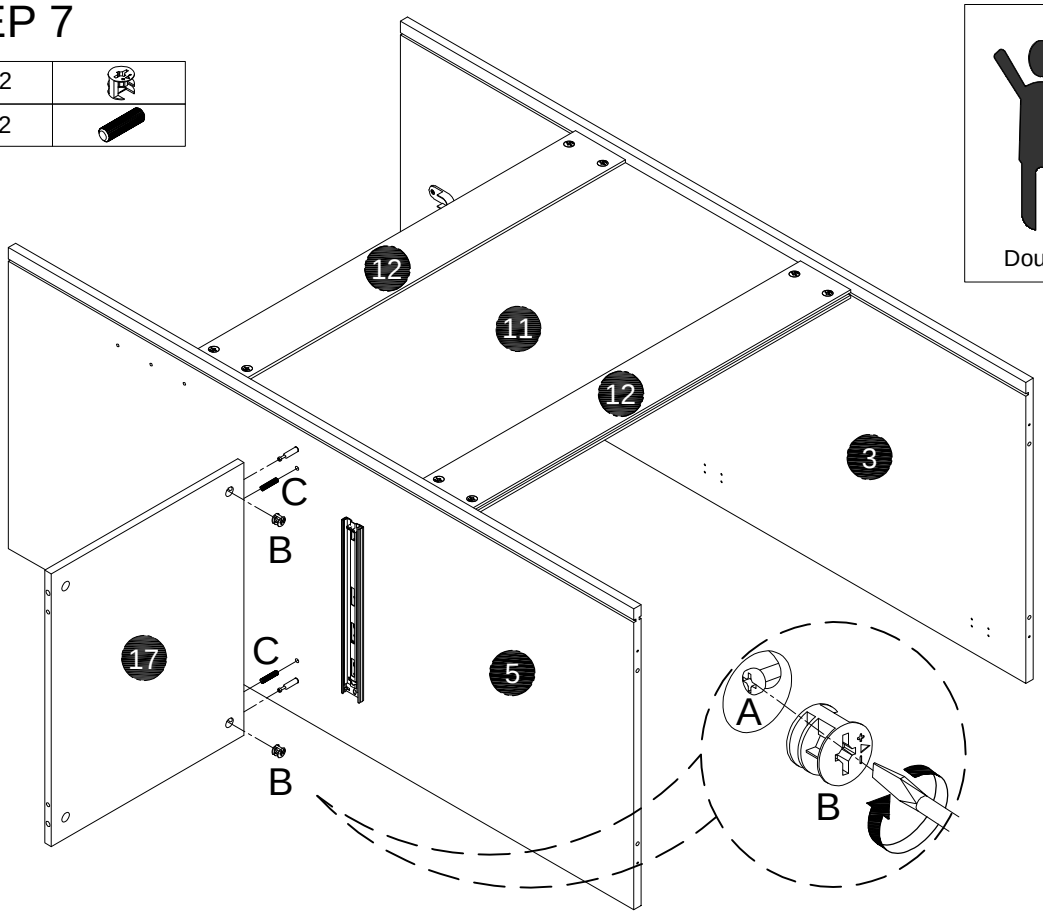

Double installation.

STEP 8

R x4	
C x2	

Note: a >b

STEP 9

A x2	
J x3	
Y2 x1	

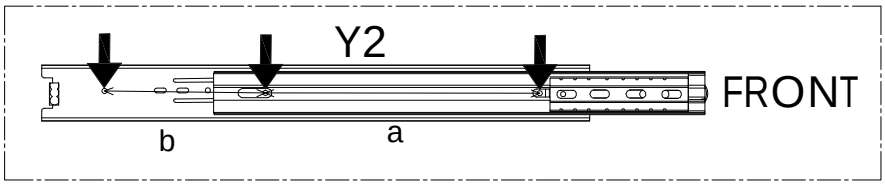

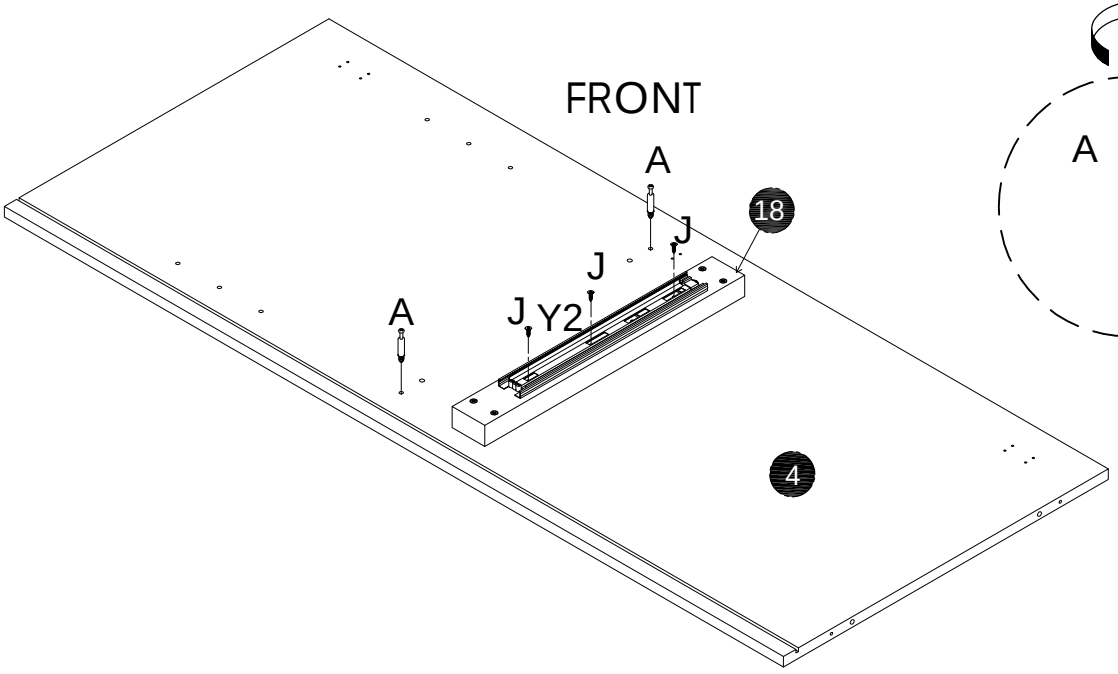

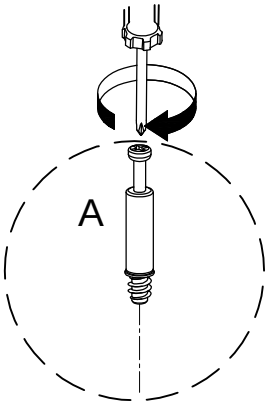

STEP 10

B x2	
C x2	

After assembly No.4 is complete: Lift the No.3 and No.5 plates at the same time to rotate the cabinet 90°, to cabinet have the direction as next step (11) !

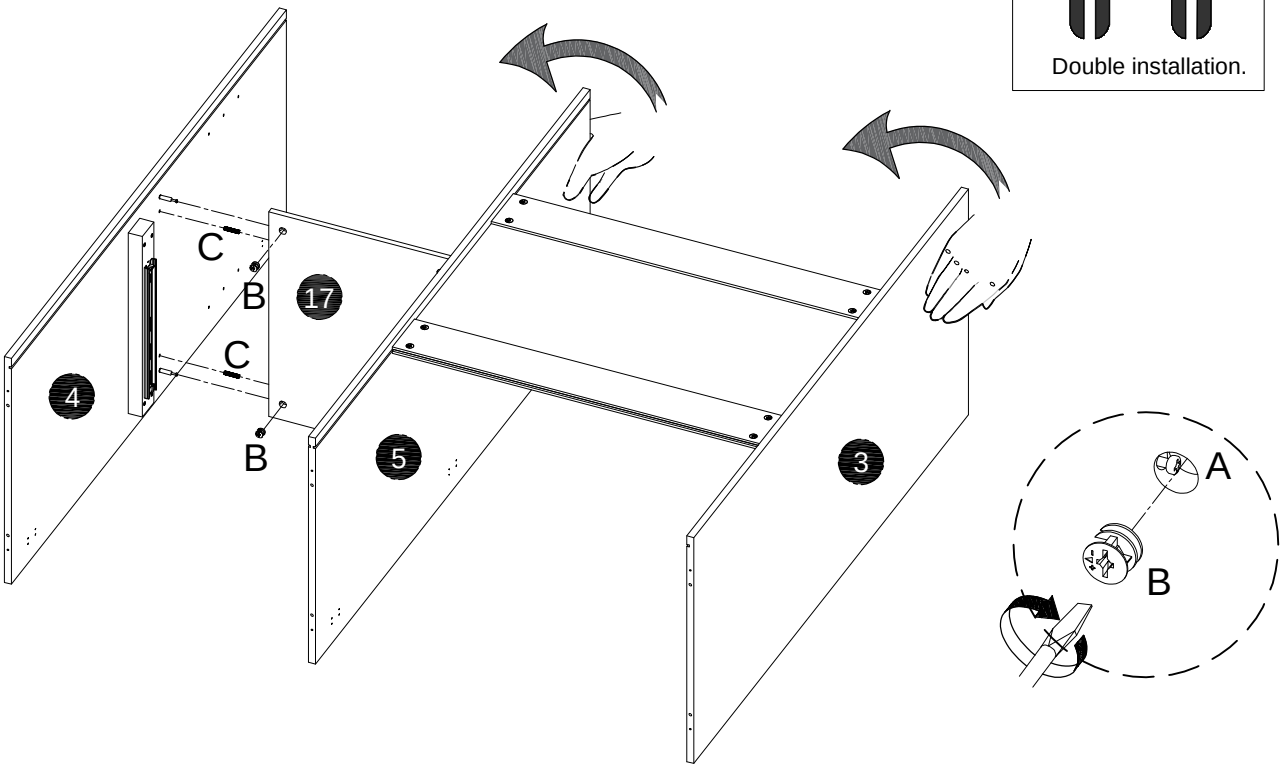

STEP 11

V x6	

STEP 12

A x6	
J x4	
Q x2	

STEP 13

D x6	

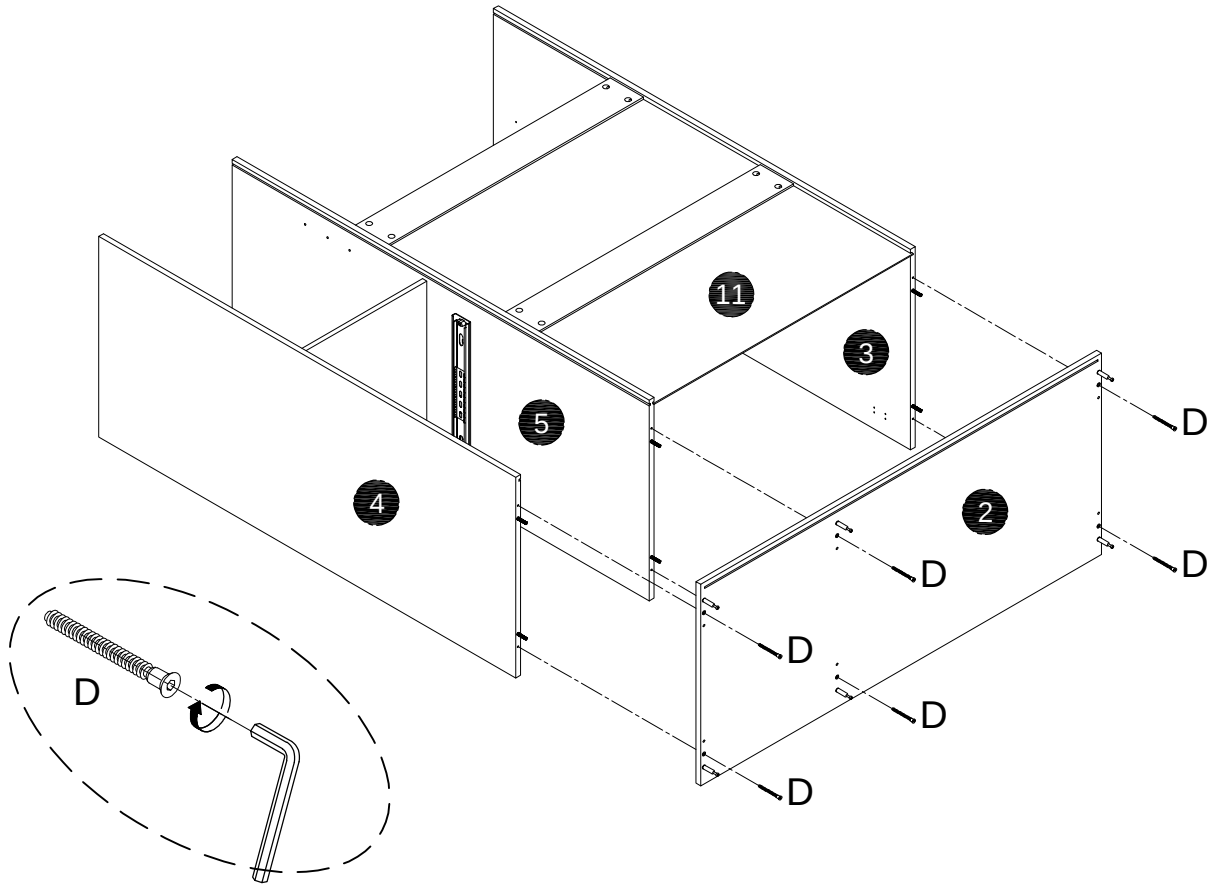

STEP 14

C x6	

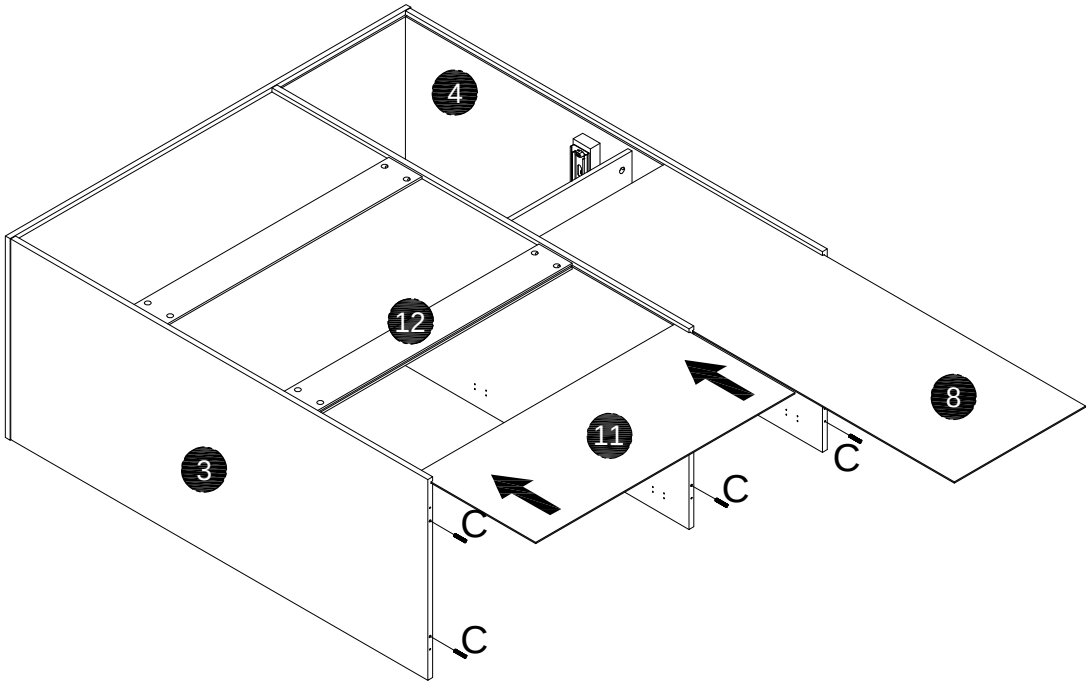

STEP 15

Q x2	
J x4	

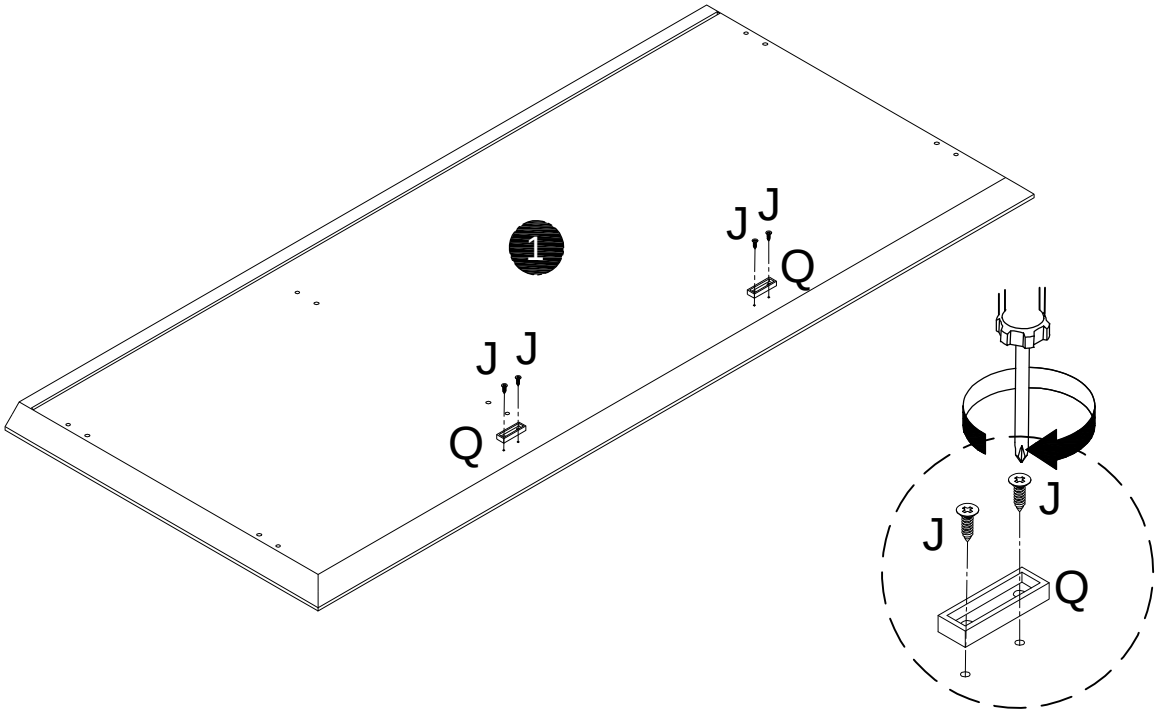

STEP 16

D x6	

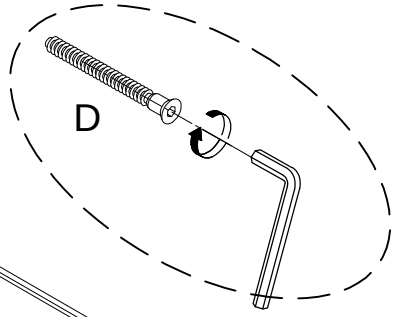

Use the materials provided in the packaging to support the product from below for easier installation.

STEP 17

A x6	

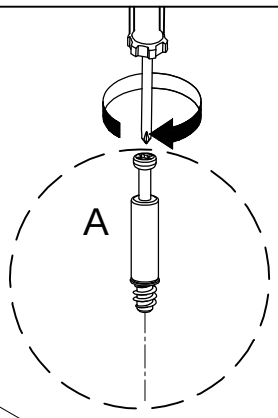

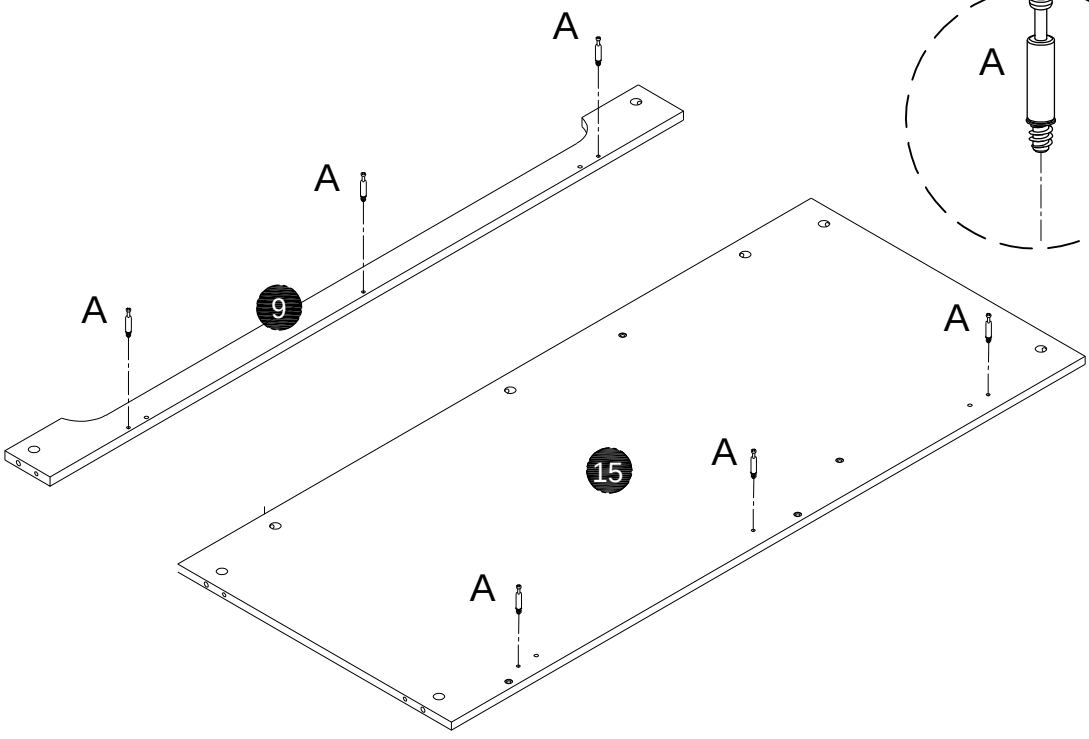

STEP 18

B x3	
C x2	

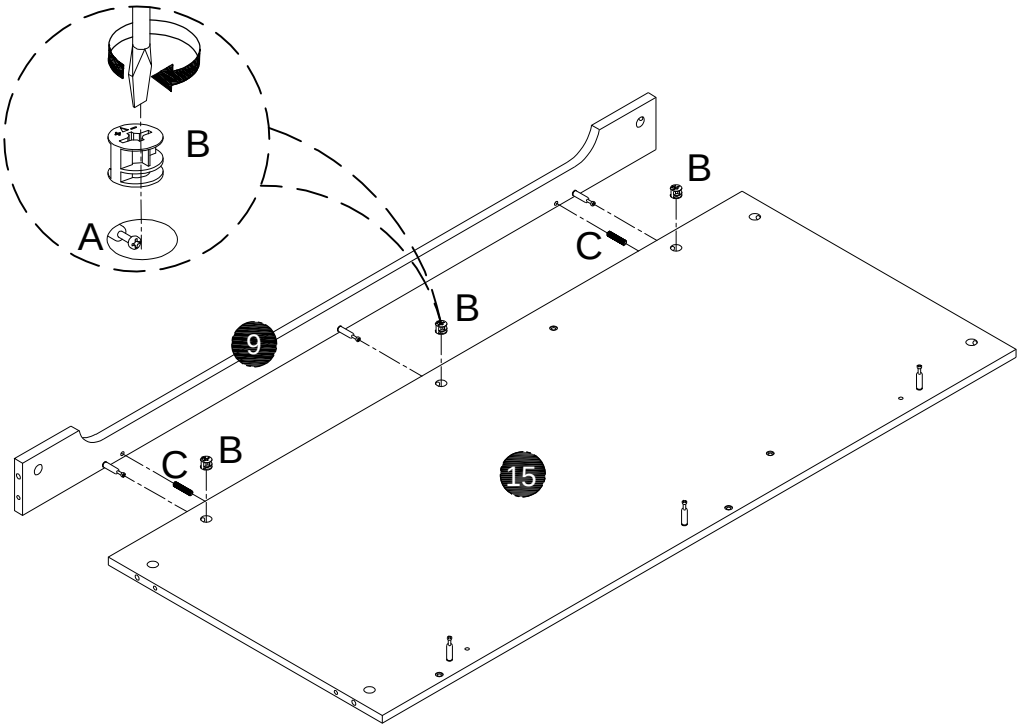

STEP 19

Y2 x2	
Q x2	
J x10	

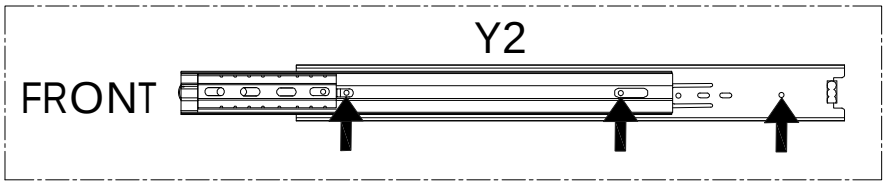

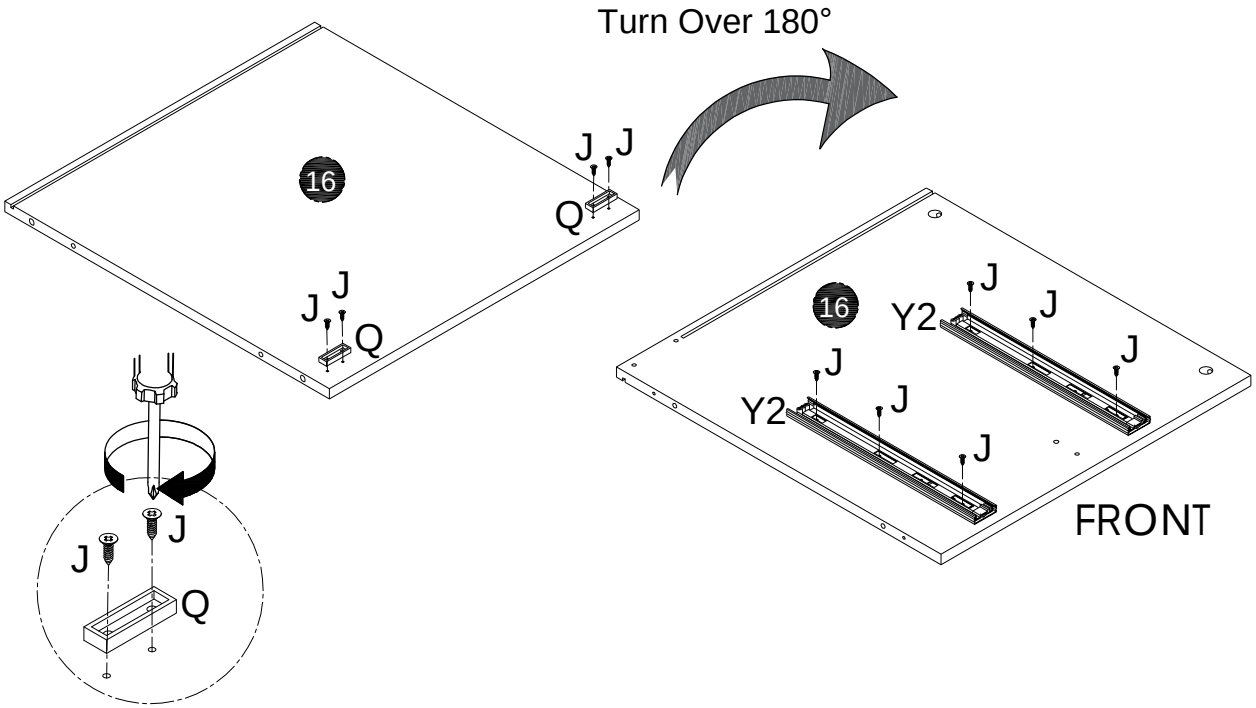

STEP 20

A x3	

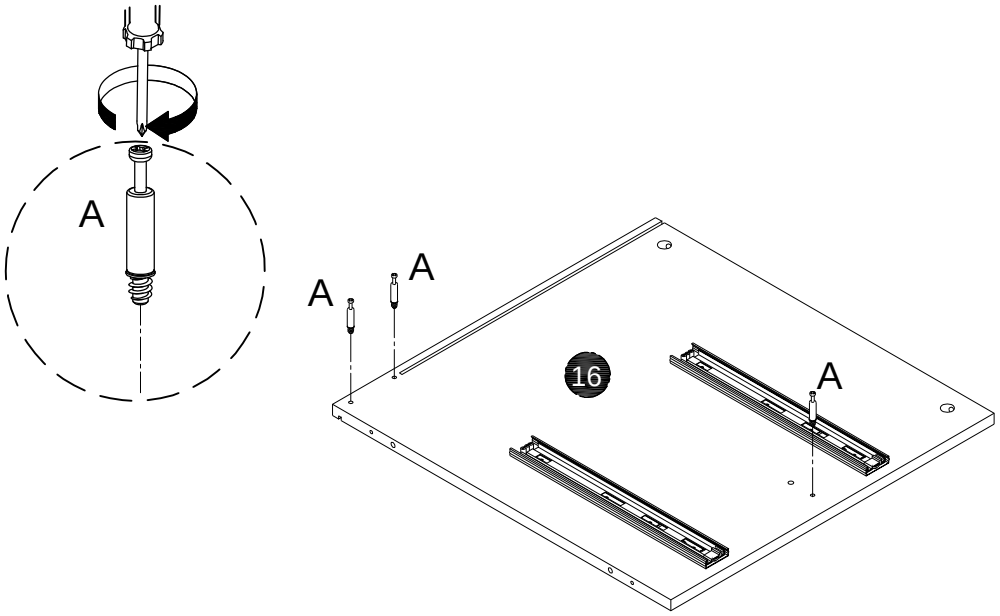

STEP 21

B x3	
C x1	

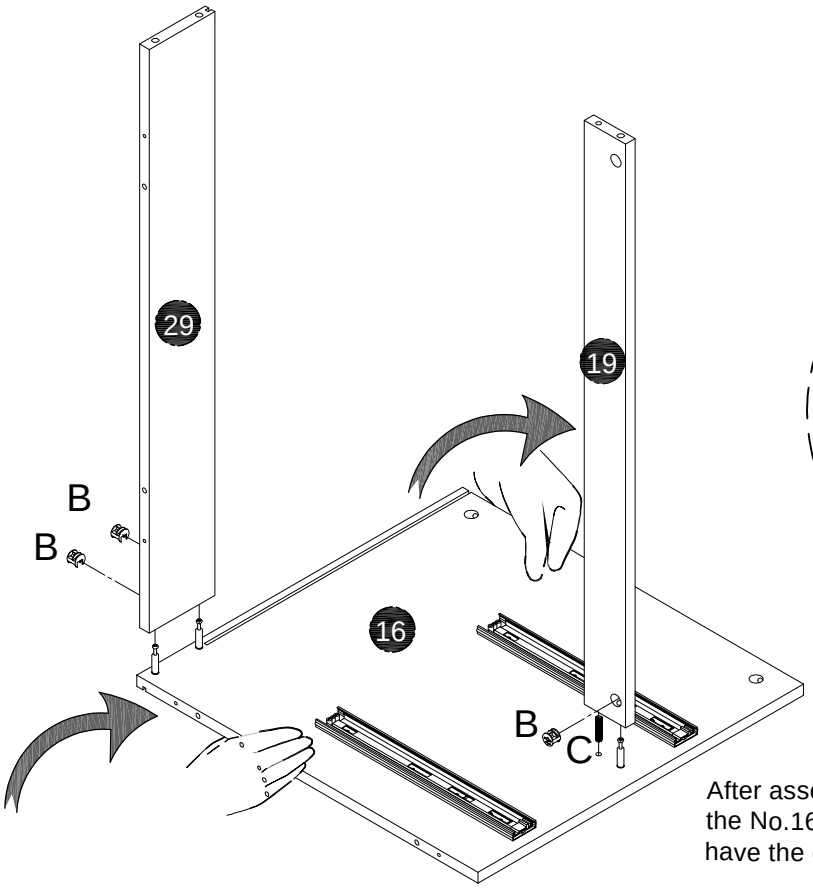

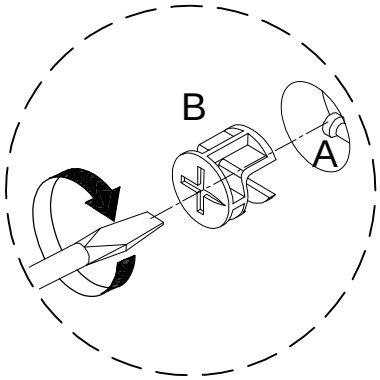

After assembly this step is complete: Lift the No.16 rotate the cabinet 90°, to cabinet have the direction as next step (23) !

STEP 22

D x4	
C x4	

STEP 23

B x3	
C x2	

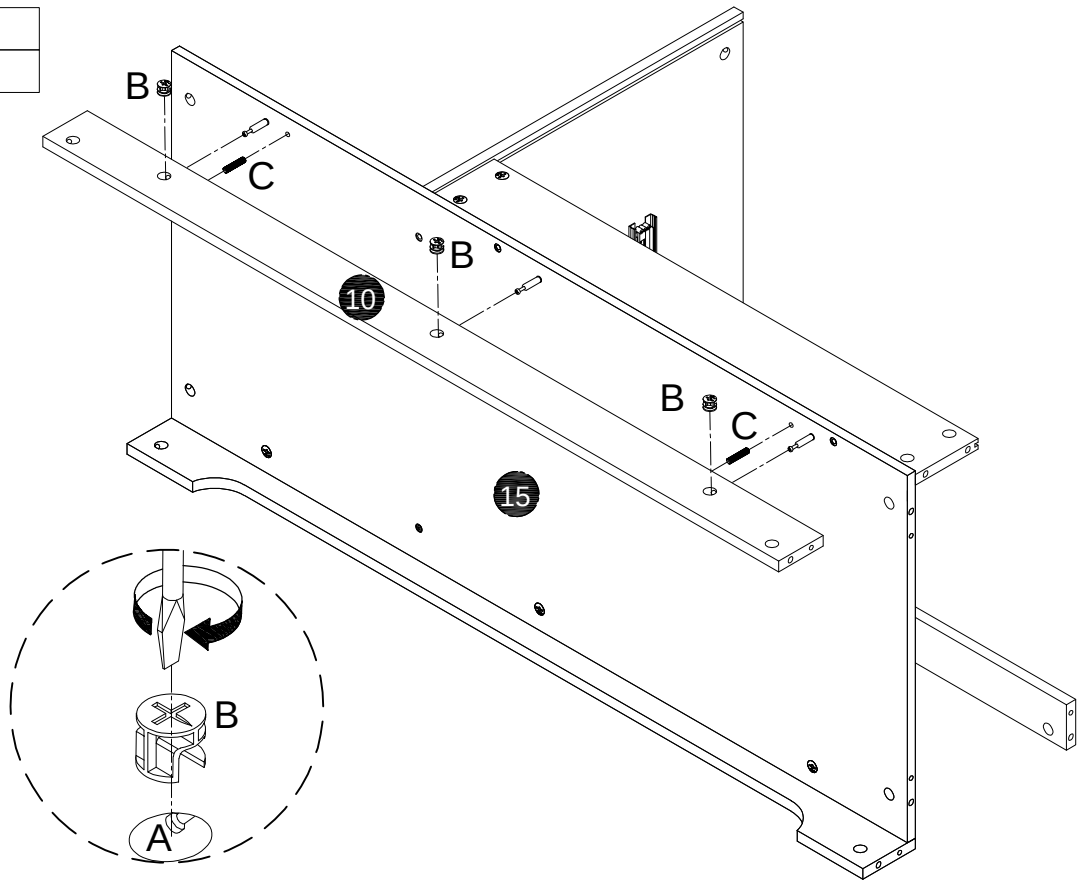

STEP 24

C x5	

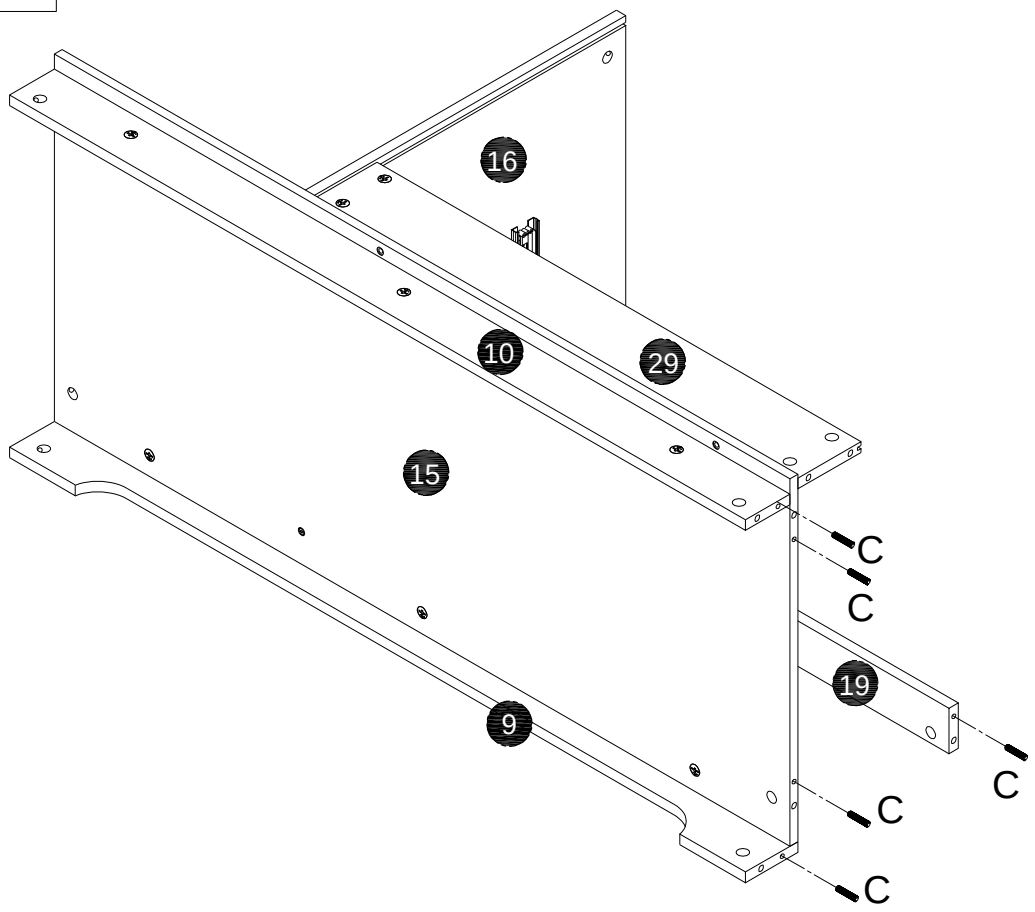

STEP 25

Y2 x2	
J x6	

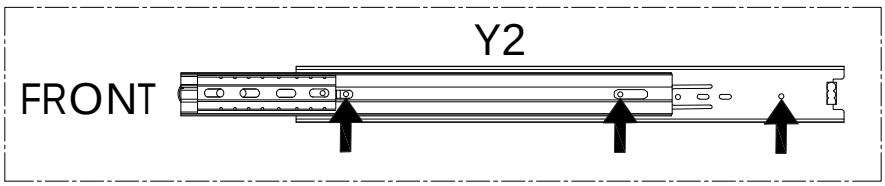

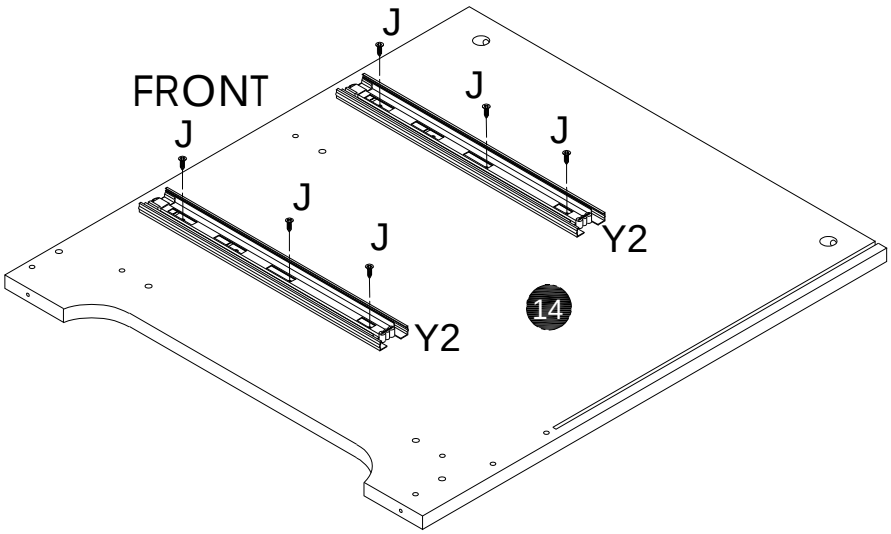

STEP 26

A x7	

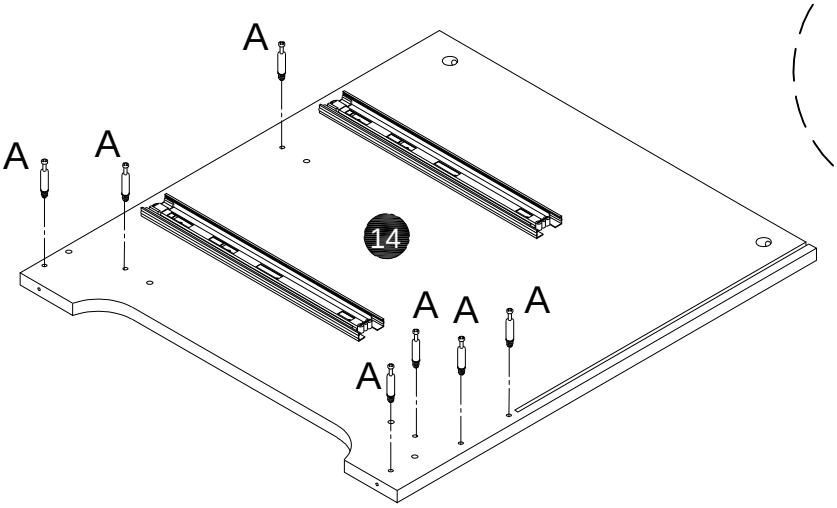

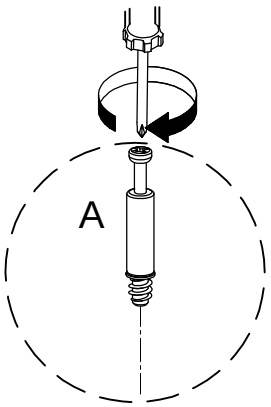

STEP 27

B x7	

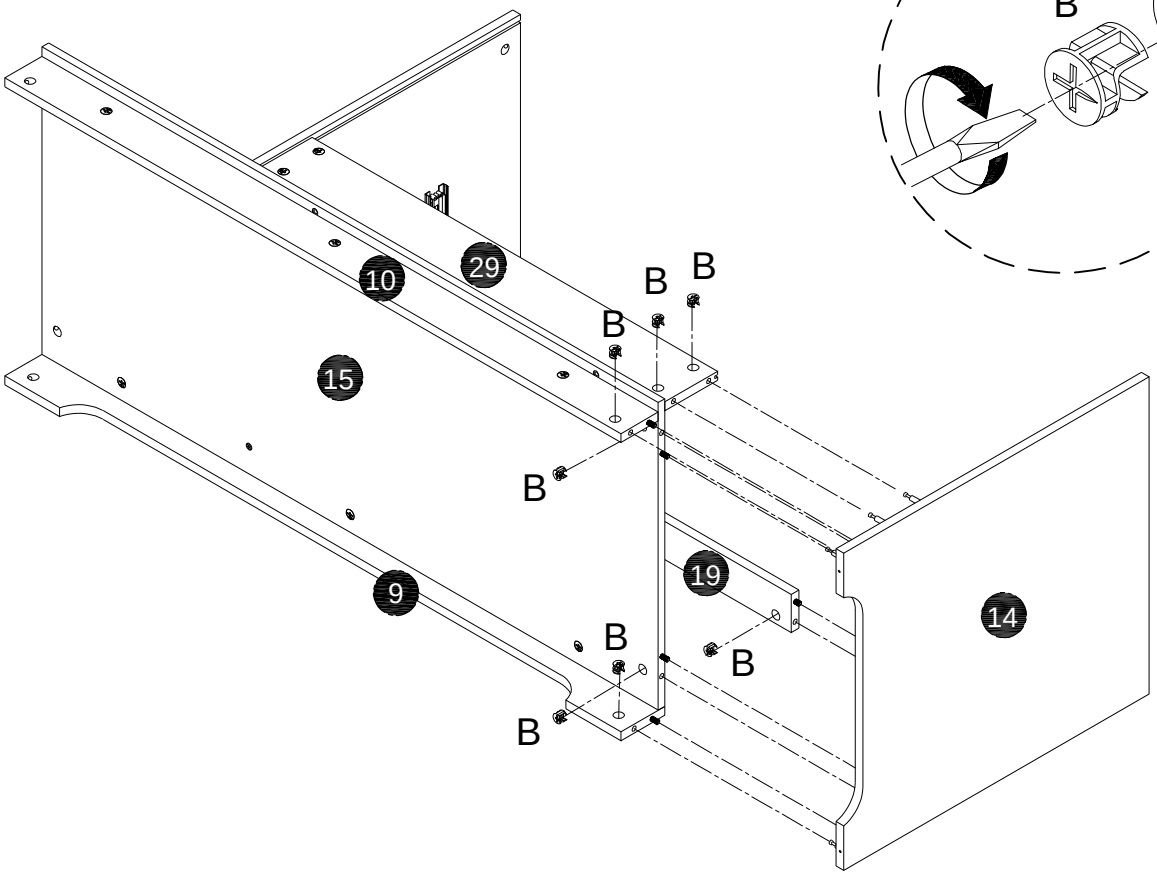

STEP 28

A x4	

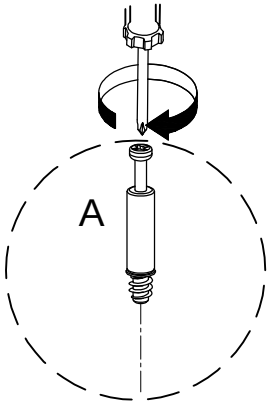

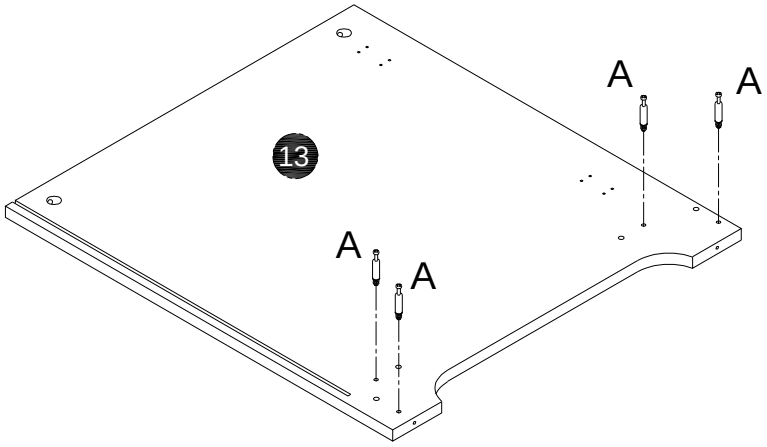

STEP 29

B x4	
C x4	

STEP 30

F x4	
O x9	

Use Perfect Sticker (O) to cover the Camlock's holes on the Bottom side!

STEP 31

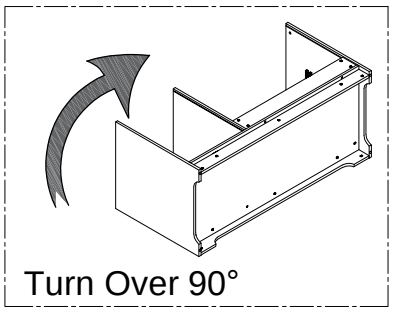

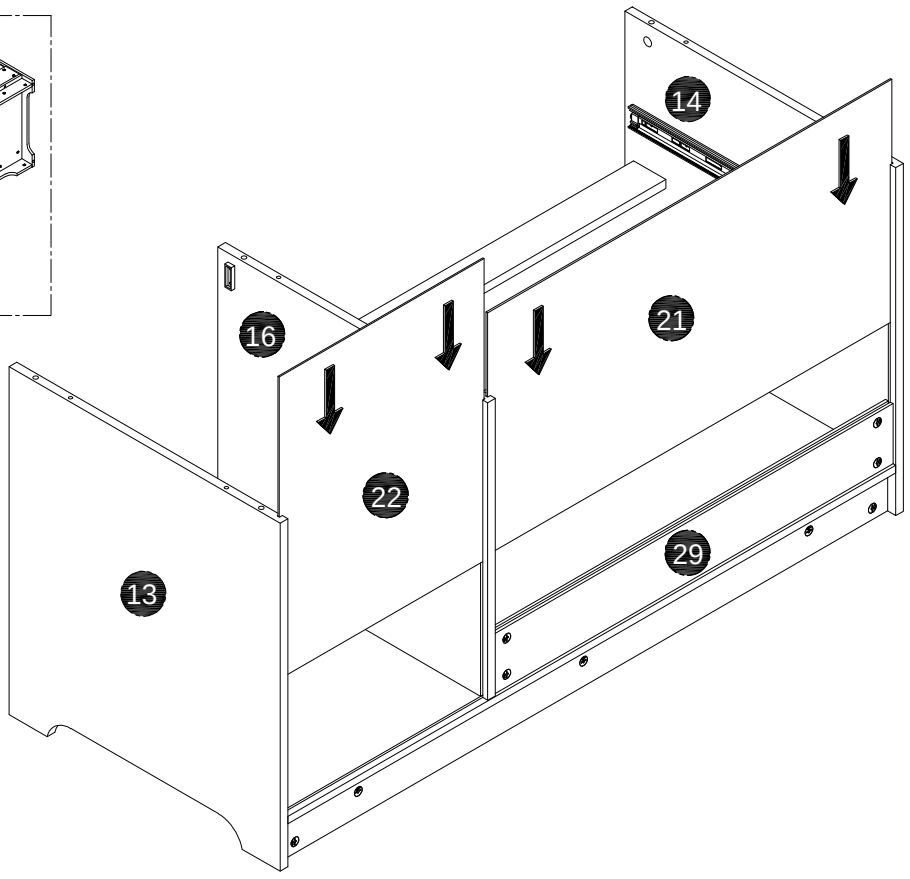

STEP 32

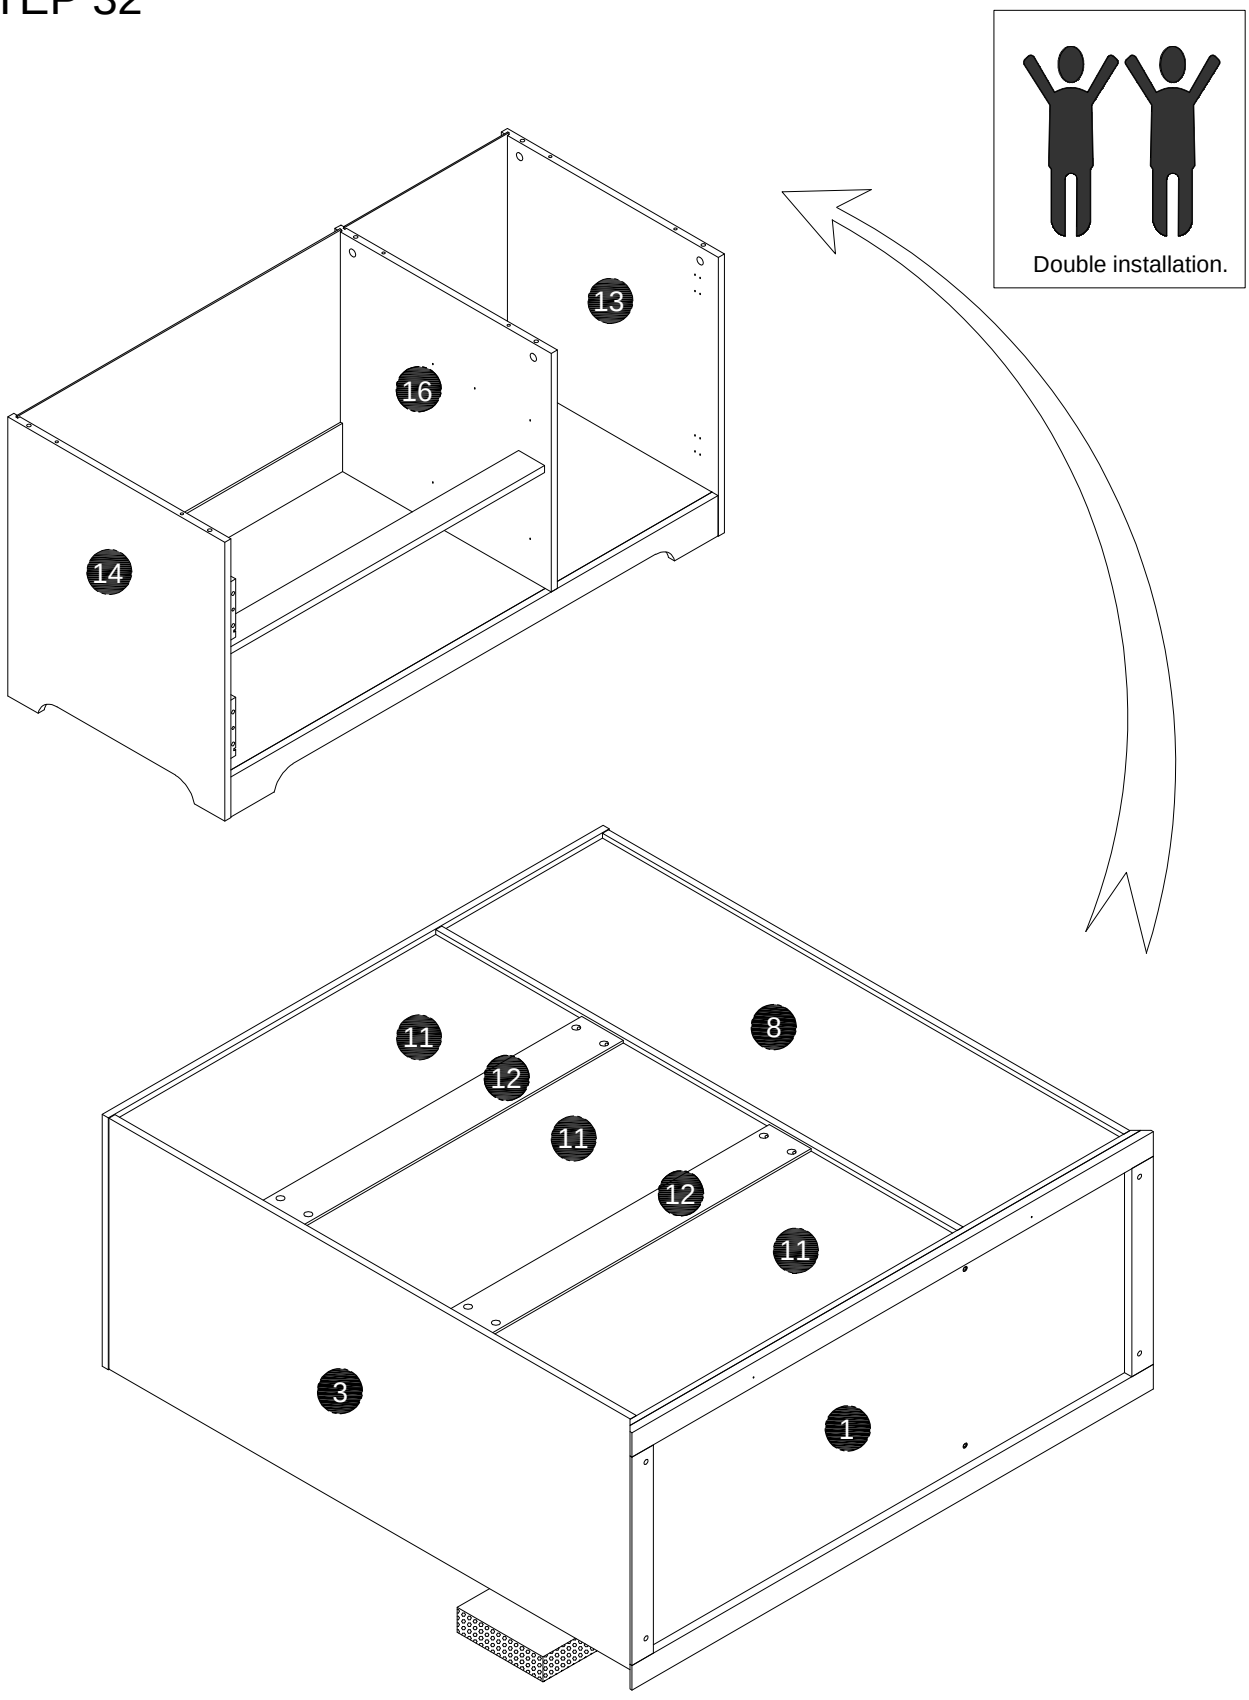

STEP 33

B x6	
O x6	

Use Perfect Sticker (O) to cover the Camlock's holes on the Inside!

STEP 34

G x28	
O x17	

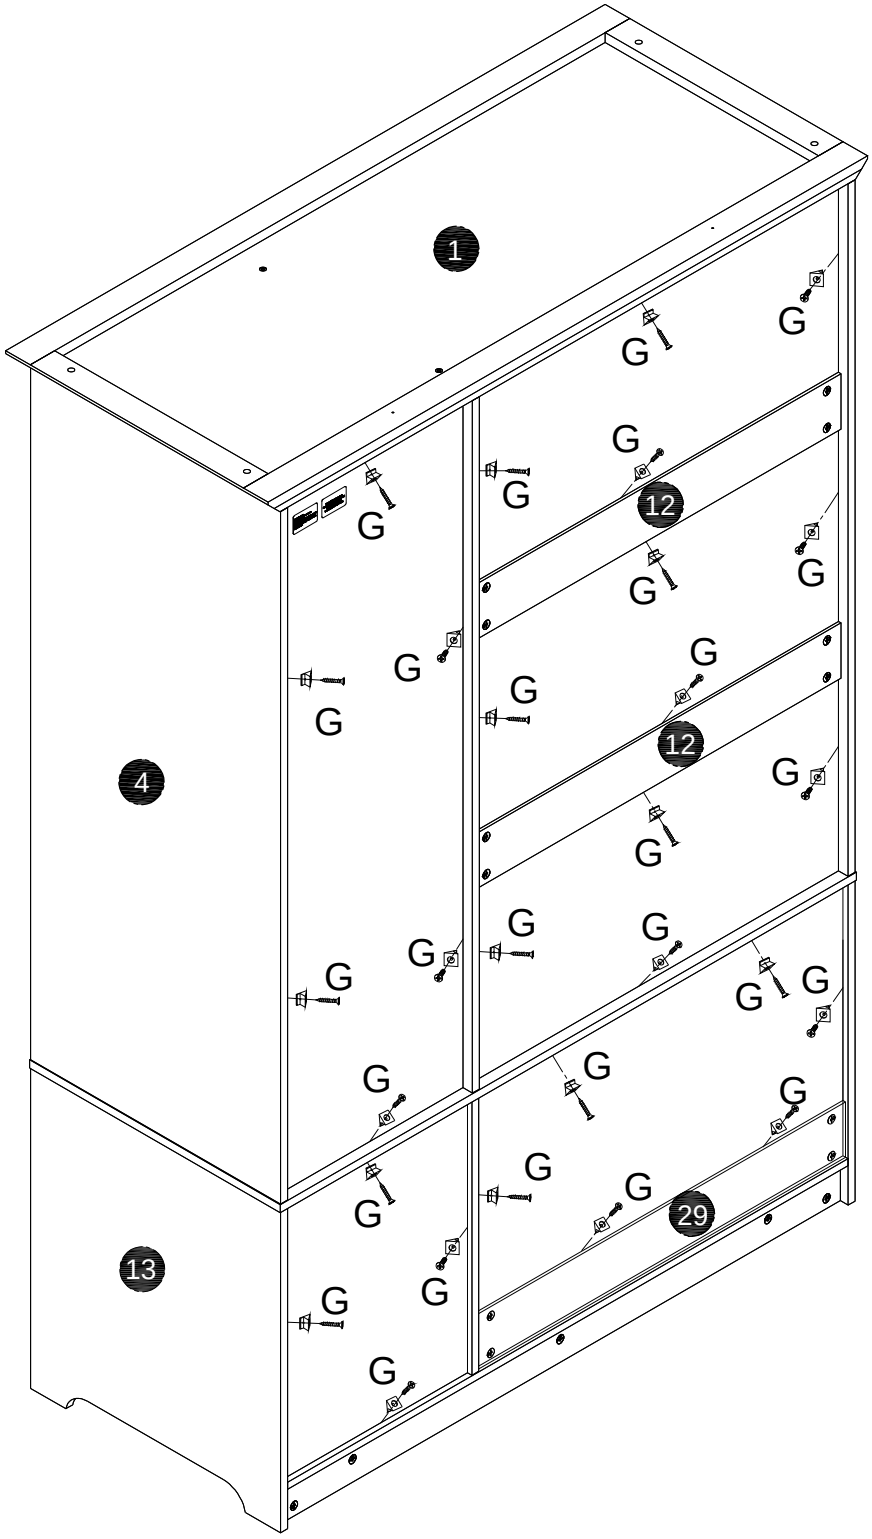

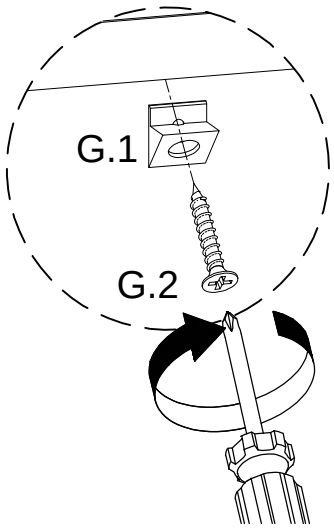

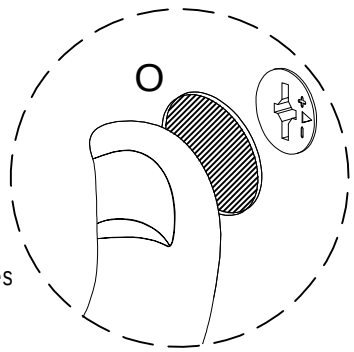

Use Perfect Sticker (O) to cover the Camlock's holes on the Back side!

STEP 35

K x2	
L x2	

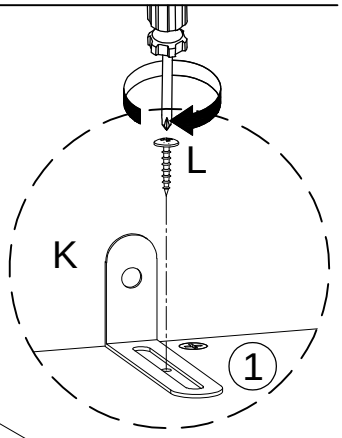

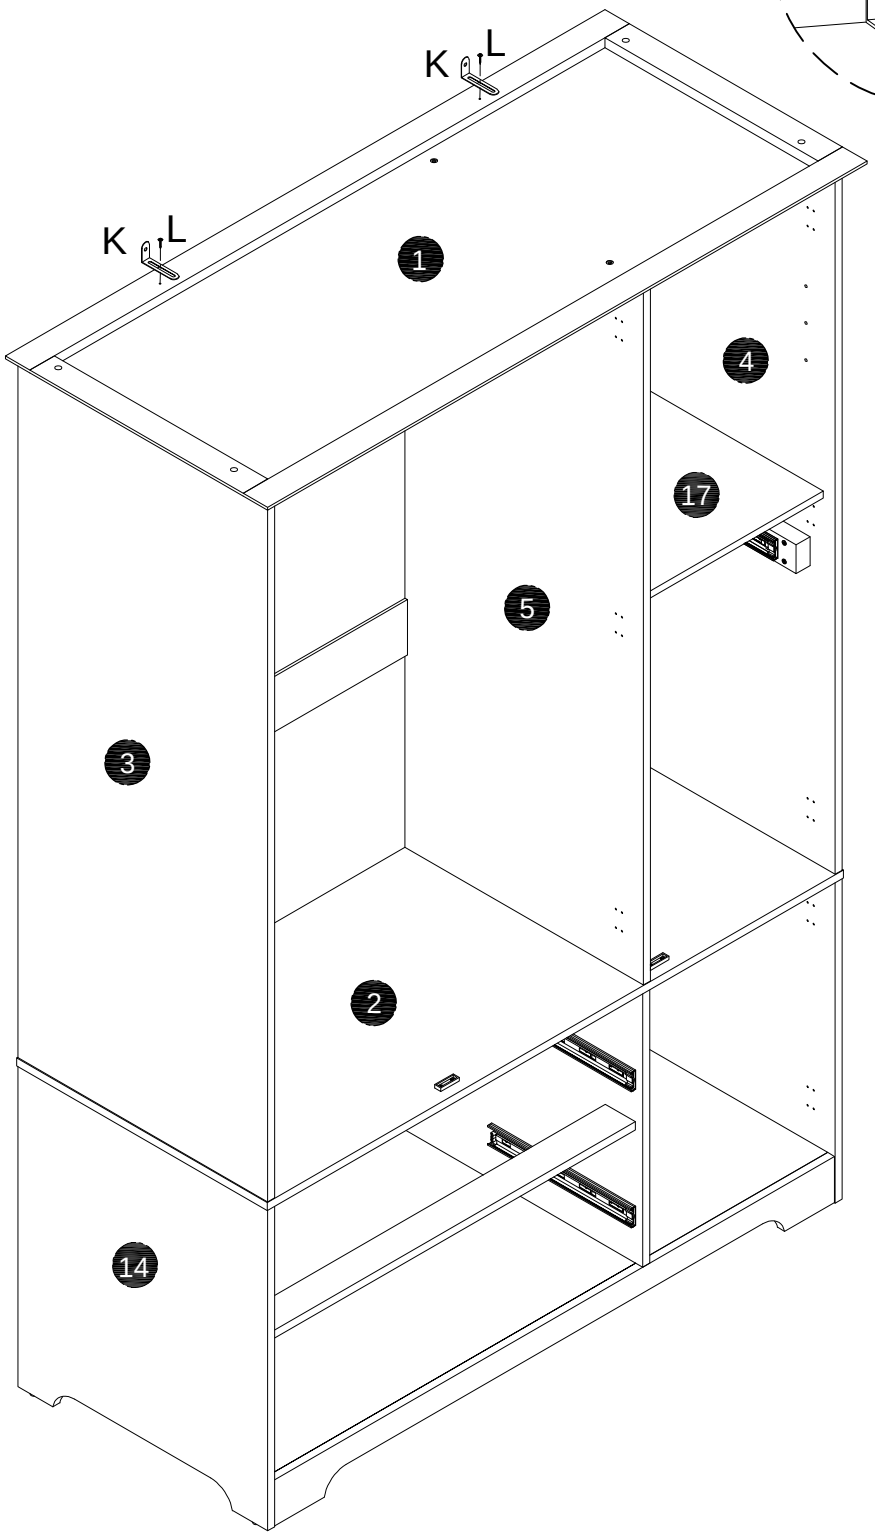

STEP 36

M x2	
N x2	

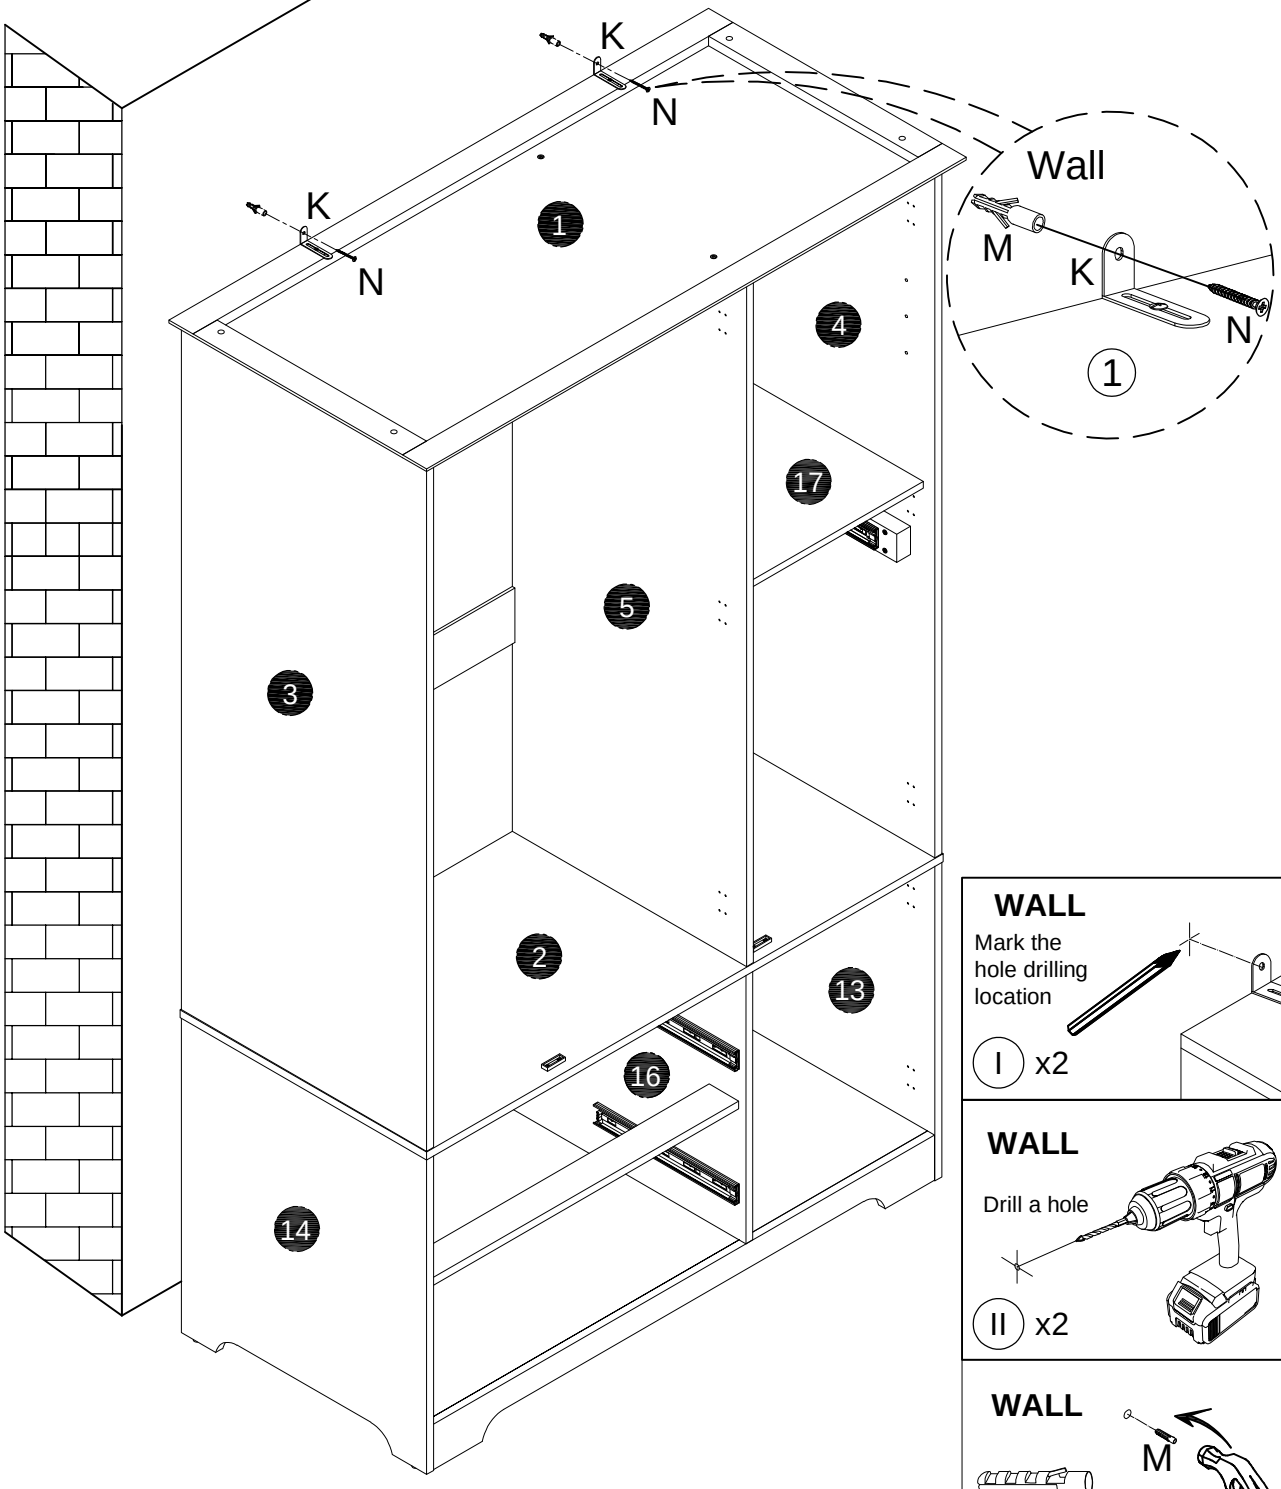

WALL

Mark the hole drilling location

I x2

WALL

Drill a hole

II x2

WALL

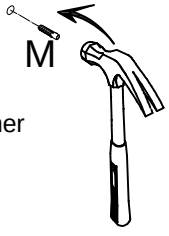

Use a hammer to close anchor (**M**)

III x2

Step1: determine the location of the anti-overturning on the wall and then mark the position after confirming the product has been balanced.
Step 2: drill the holes and then fixed the anchor (**M**) on the wall
Step 3: use screw (**N**) to fix the Pat (**K**) on the wall

STEP 37

H x4	

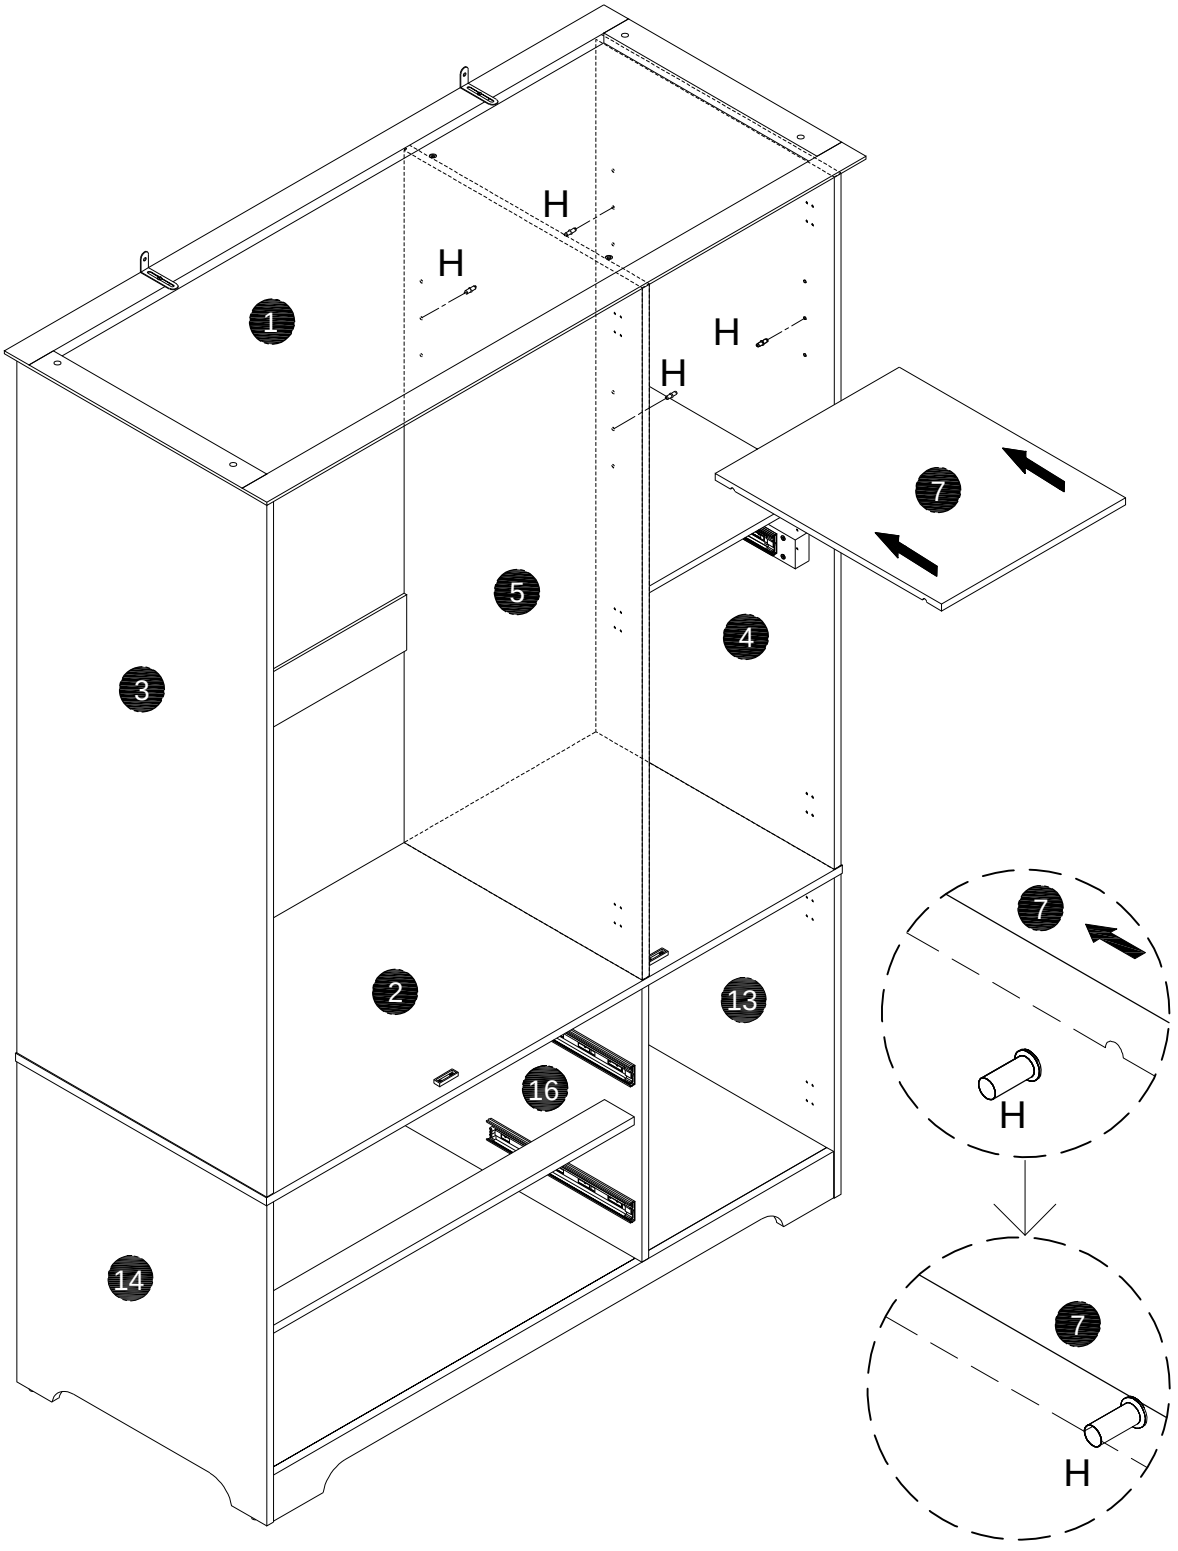

STEP 38

Y1 x2	
E x4	

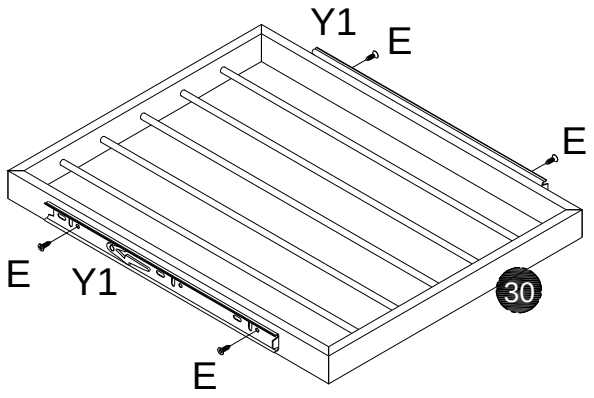

STEP 39

W x1	

STEP 40

I x9	
J x18	

X3

STEP 41

I x2	
J x4	

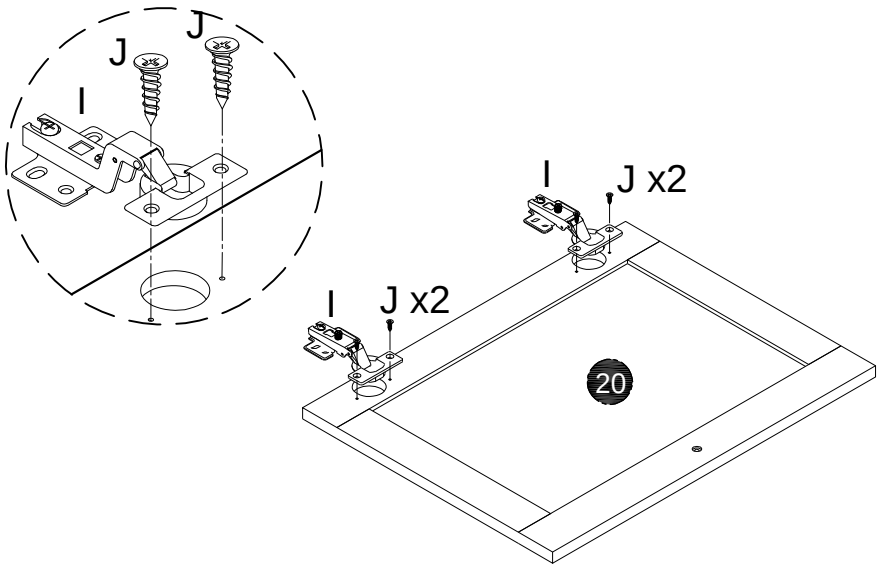

STEP 42

J x8	
P x1	
S x1	

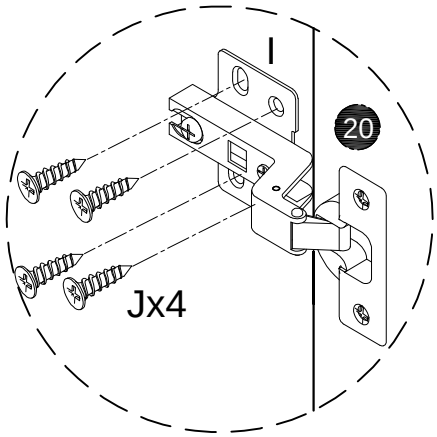

When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect

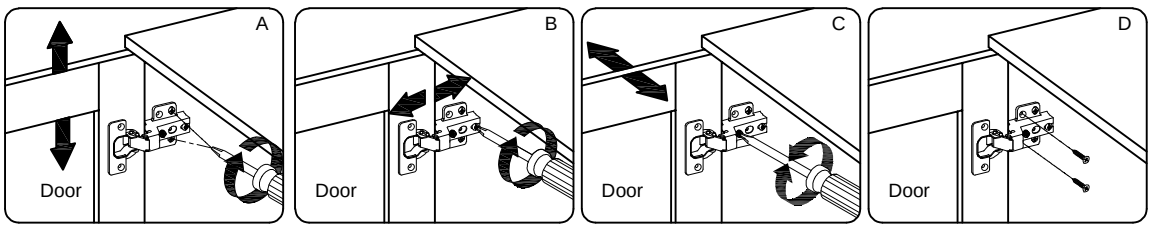

1. To adjust the doors up and down, please refer to step (A)
2. To adjust the distance between the doors and side panels, please refer to (B)
3. To adjust the gap between two doors, please refer to step (C)
4. After the adjustment is finished, please tighten the screws, refer to step (D)

STEP 43

J x36	
P x3	
S x3	

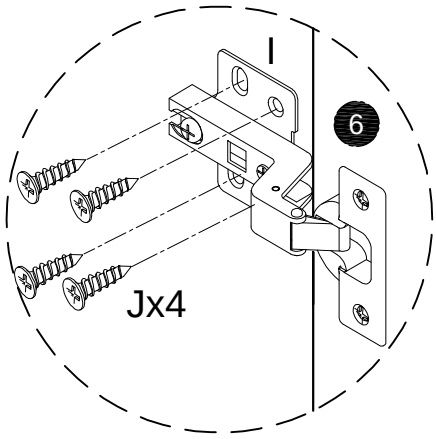

When the hinges are installed, you can refer to the pictures to adjust crevice of the doors till it's perfect

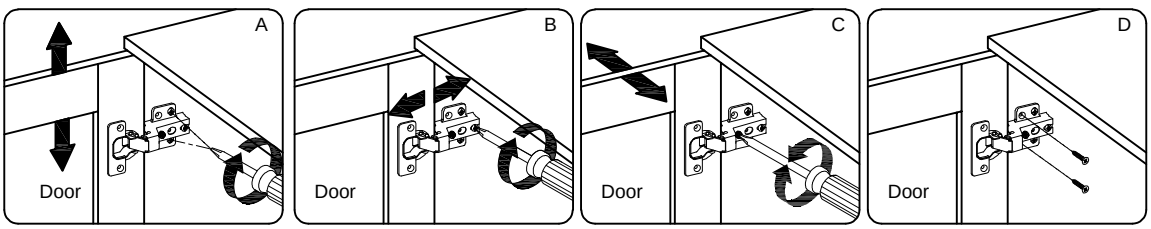

1. To adjust the doors up and down, please refer to step (A)
2. To adjust the distance between the doors and side panels, please refer to (B)
3. To adjust the gap between two doors, please refer to step (C)
4. After the adjustment is finished, please tighten the screws, refer to step (D)

STEP 44

C x4	
E x12	
R x10	
Y1 x4	

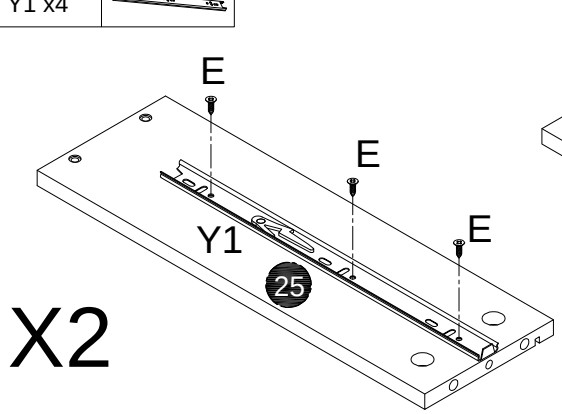

X2

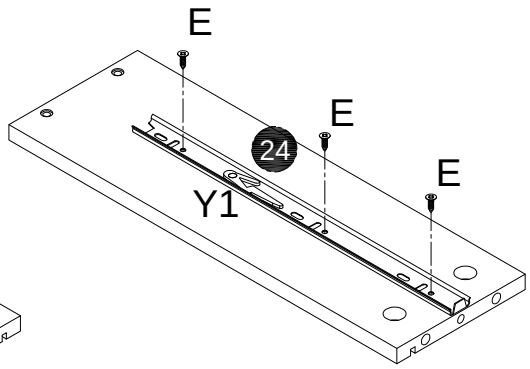

X2

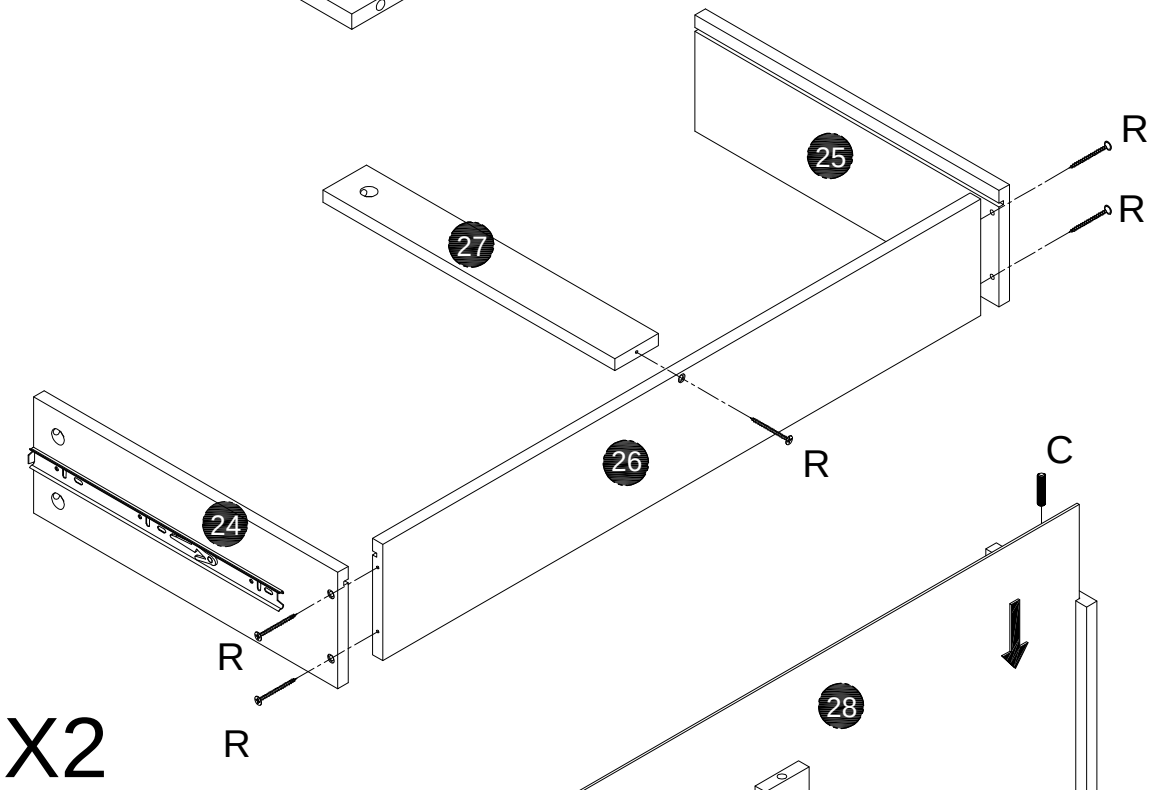

X2

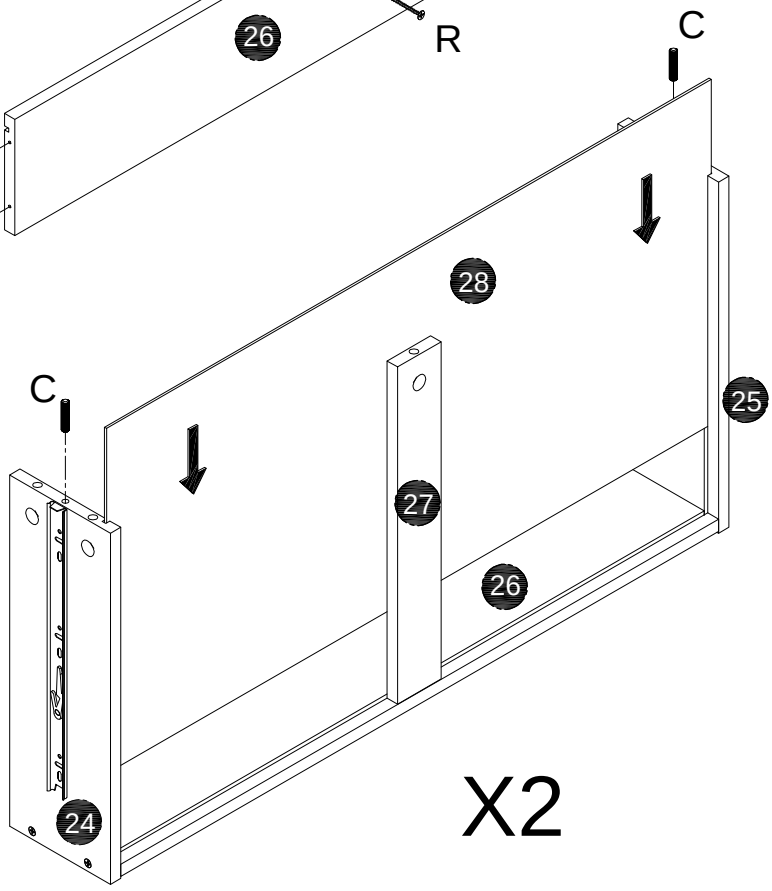

X2

STEP 45

A x10	
B x10	
O x10	

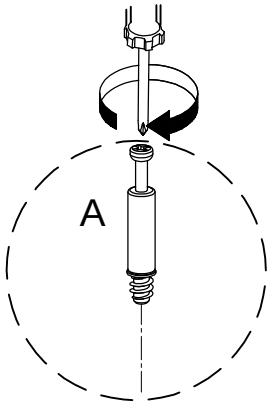

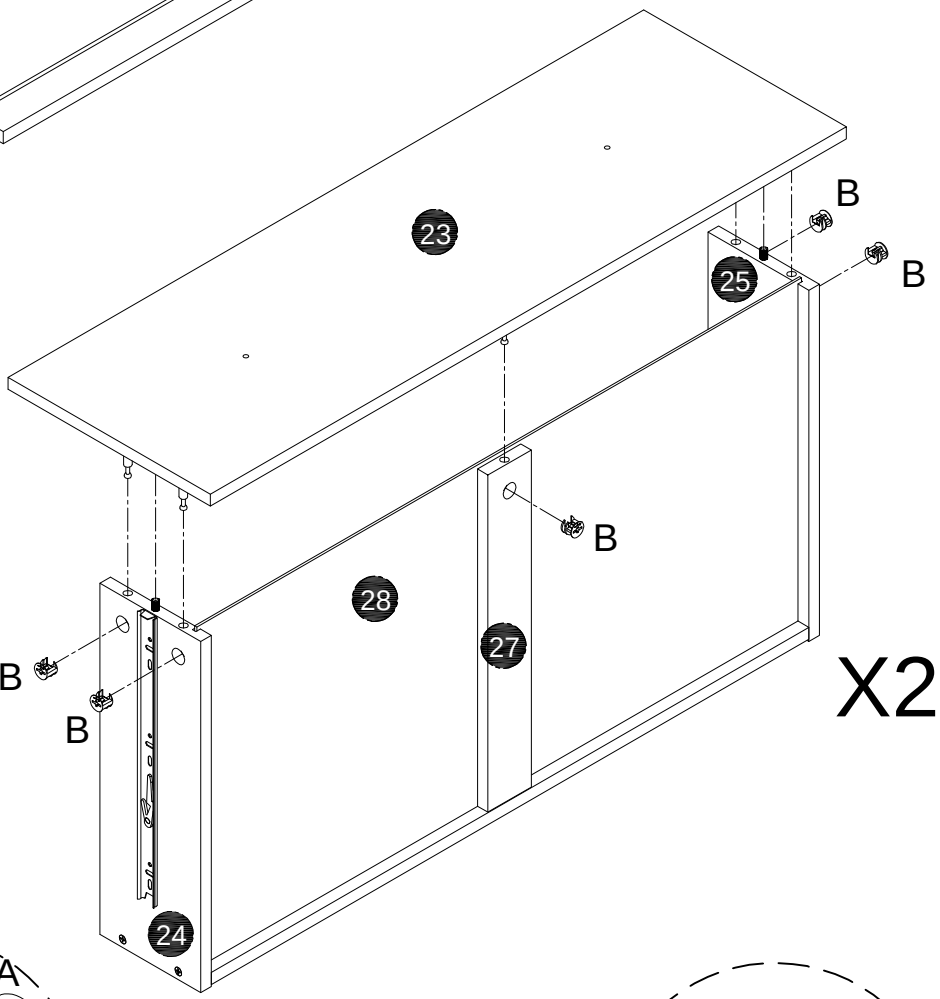

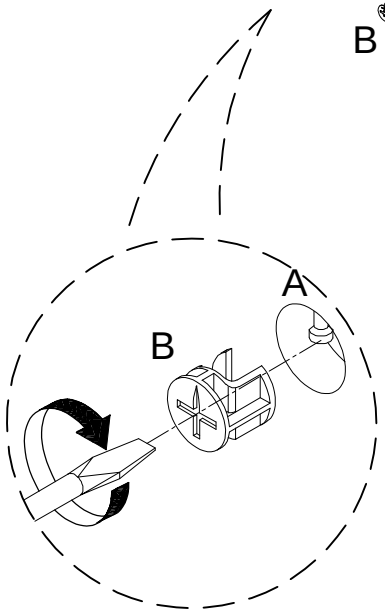

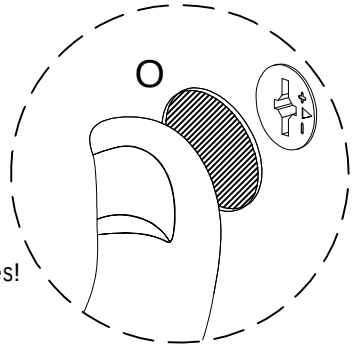

Use Perfect Sticker (O) to cover the Camlock's holes!

STEP 46

P x4	
S x4	

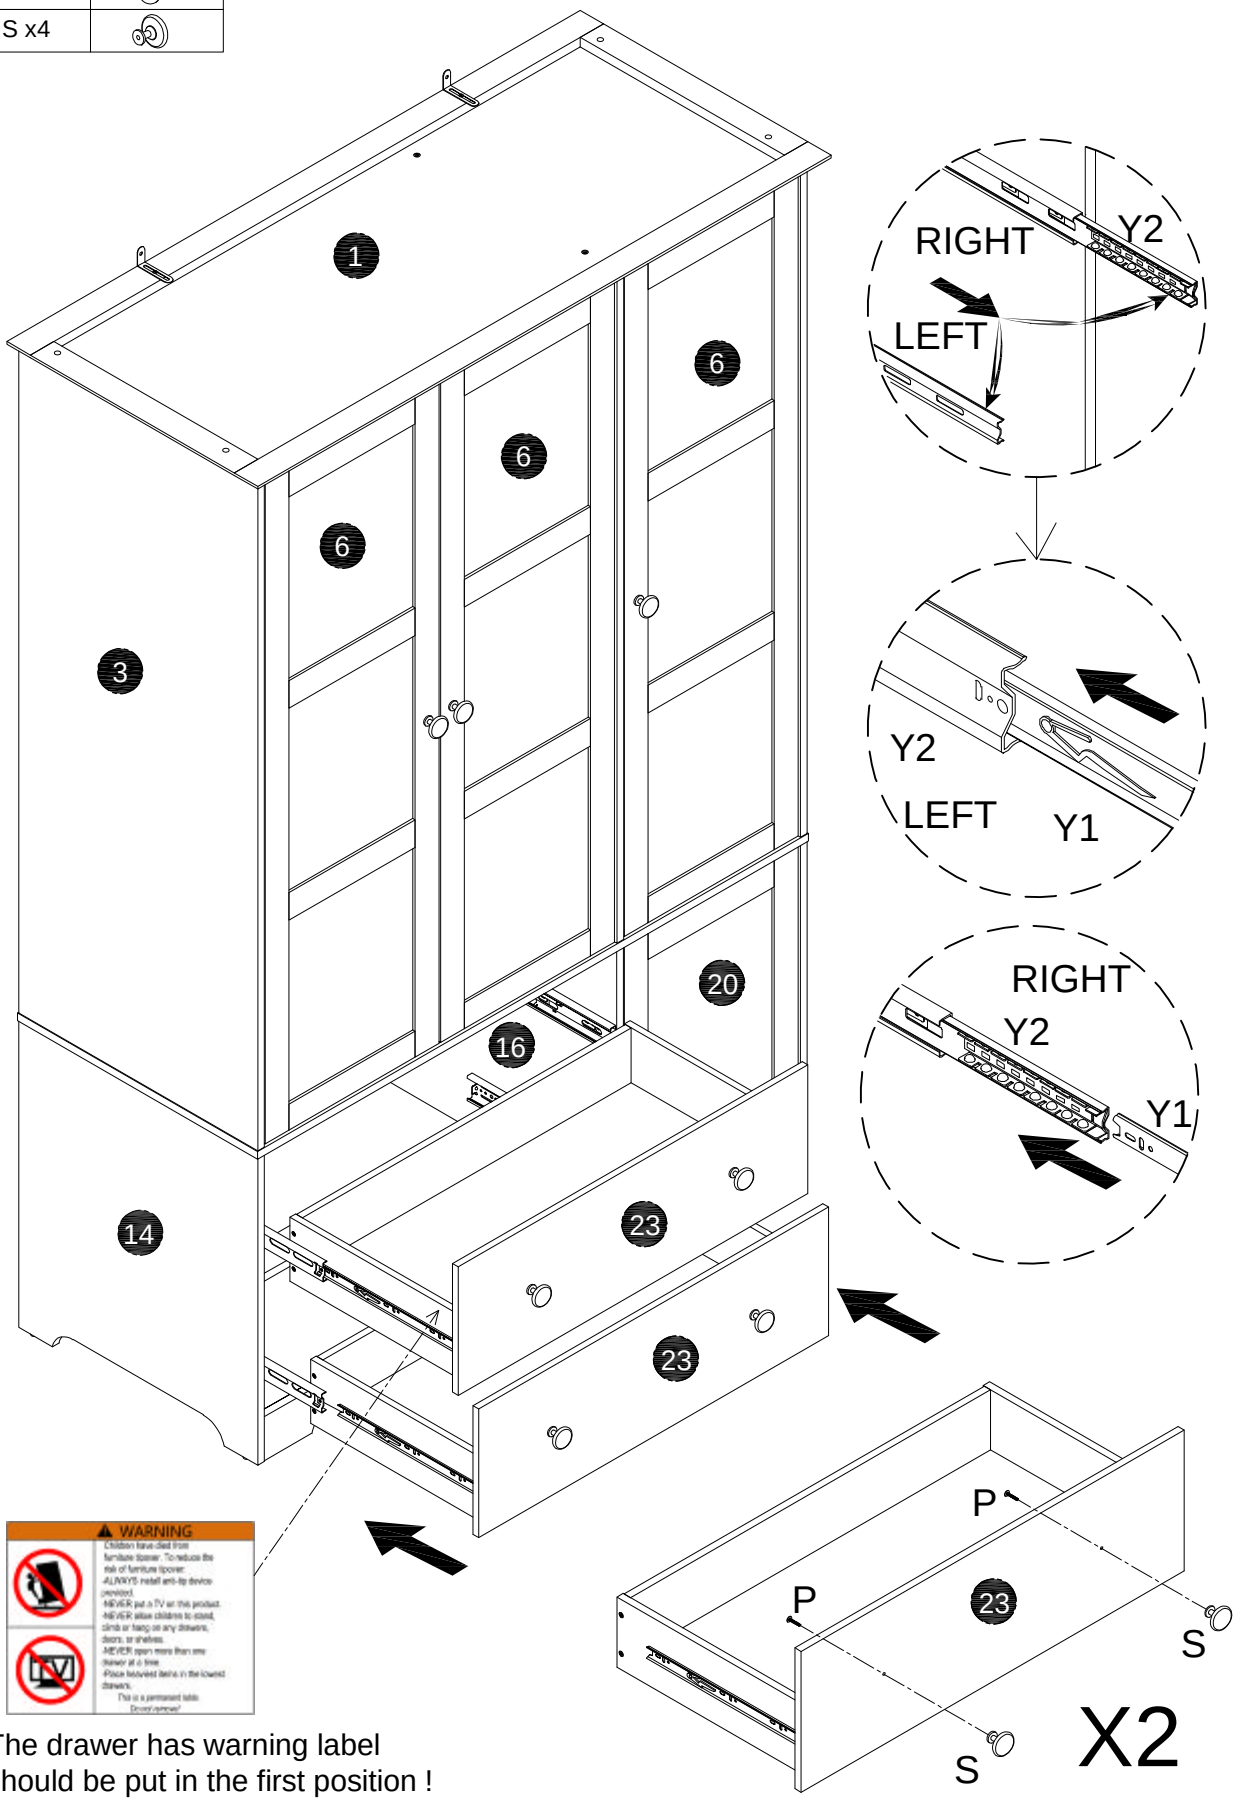
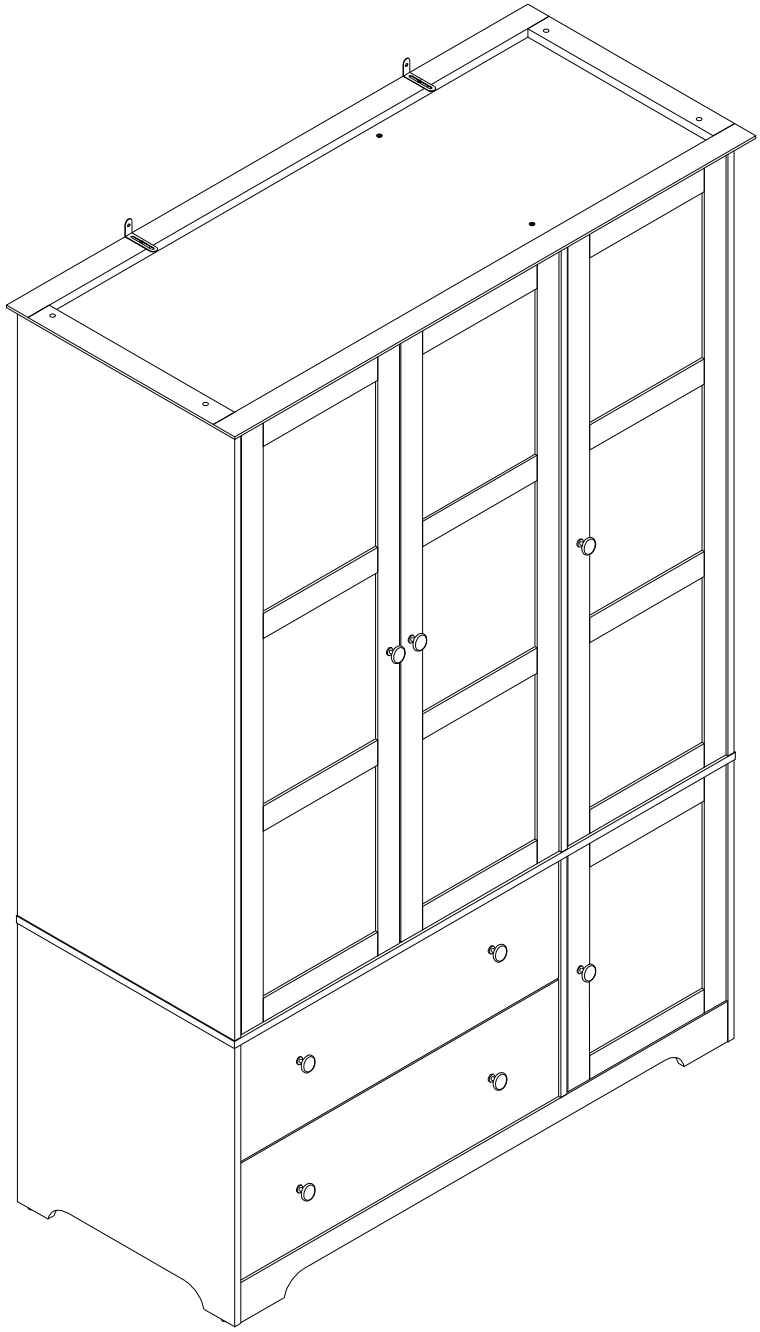
The drawer has warning label should be put in the first position !