


BEST HOME FASHION CURTAIN ROD INSTALLATION GUIDE

HARDWARE INCLUDED

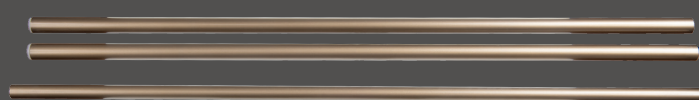

OUTER ROD X 2

INNER ROD X 1

THREE-PIECE ADJUSTABLE LENGTH ROD



BRACKET X 3



FINIAL X 2
1 PAIR




WALL SCREWS X 6
ANCHORS X 6



ALLEN WRENCH X 1




Remove the plastic securing ring from one of the finials.

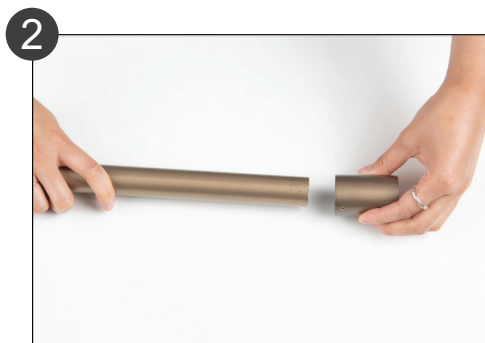

Place the finial on the edge of the outer rod. Make sure you are placing the finial on the end of the outer rod that does NOT have a plastic cap.



Using the provided Allen wrench, tighten the screw in the finial to secure it to the rod. Repeat for the other side.

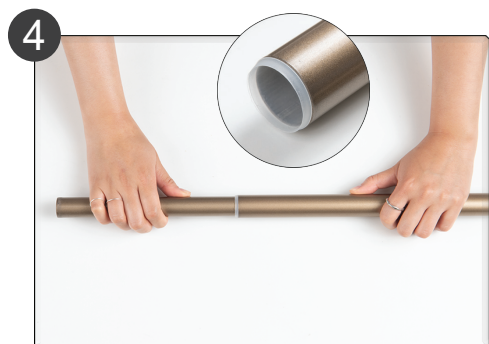


Place the inner rod inside one of the outer rods. Make sure to insert it from the end WITH the plastic cap.



Place the other outer rod onto the end of the inner rod inserted in step 4. Make sure to insert the plastic cap end of the outer rod. Move the inner rod to adjust the length.



Figure A

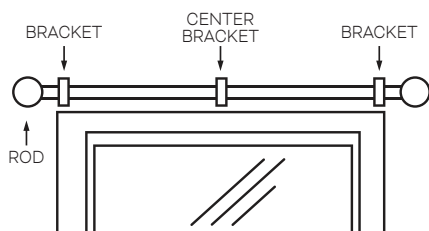

1. Make sure bracket sections are together and position in desired location above window. Install the center bracket 1/16" higher than the other brackets (Figure A).
2. Use a pencil to mark the wall where the screw locations will be drilled.
3. (Refer to Figure B and C) Align screw holes on the brackets with the pre-drilled holes on the wall.
4. Use a screwdriver to tighten the screws.
5. Slide curtain onto rod.
6. Adjust length of rod and slide rod into brackets.
7. To adjust the projection from the wall, remove the rod, loosen screw on top side of bracket. Slide top part of bracket either in or out to desired location. Retighten screw.
8. Secure rod to bracket by hand tightening set screws in pre-drilled holes located on the back and bottom of each bracket.

Figure B
Single Rod

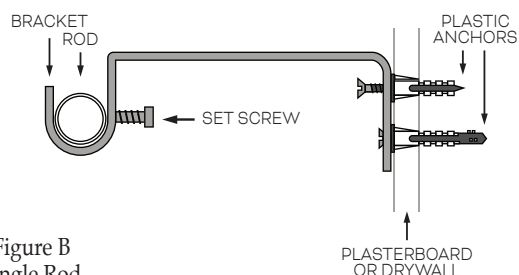


Figure C
Double Rod

