

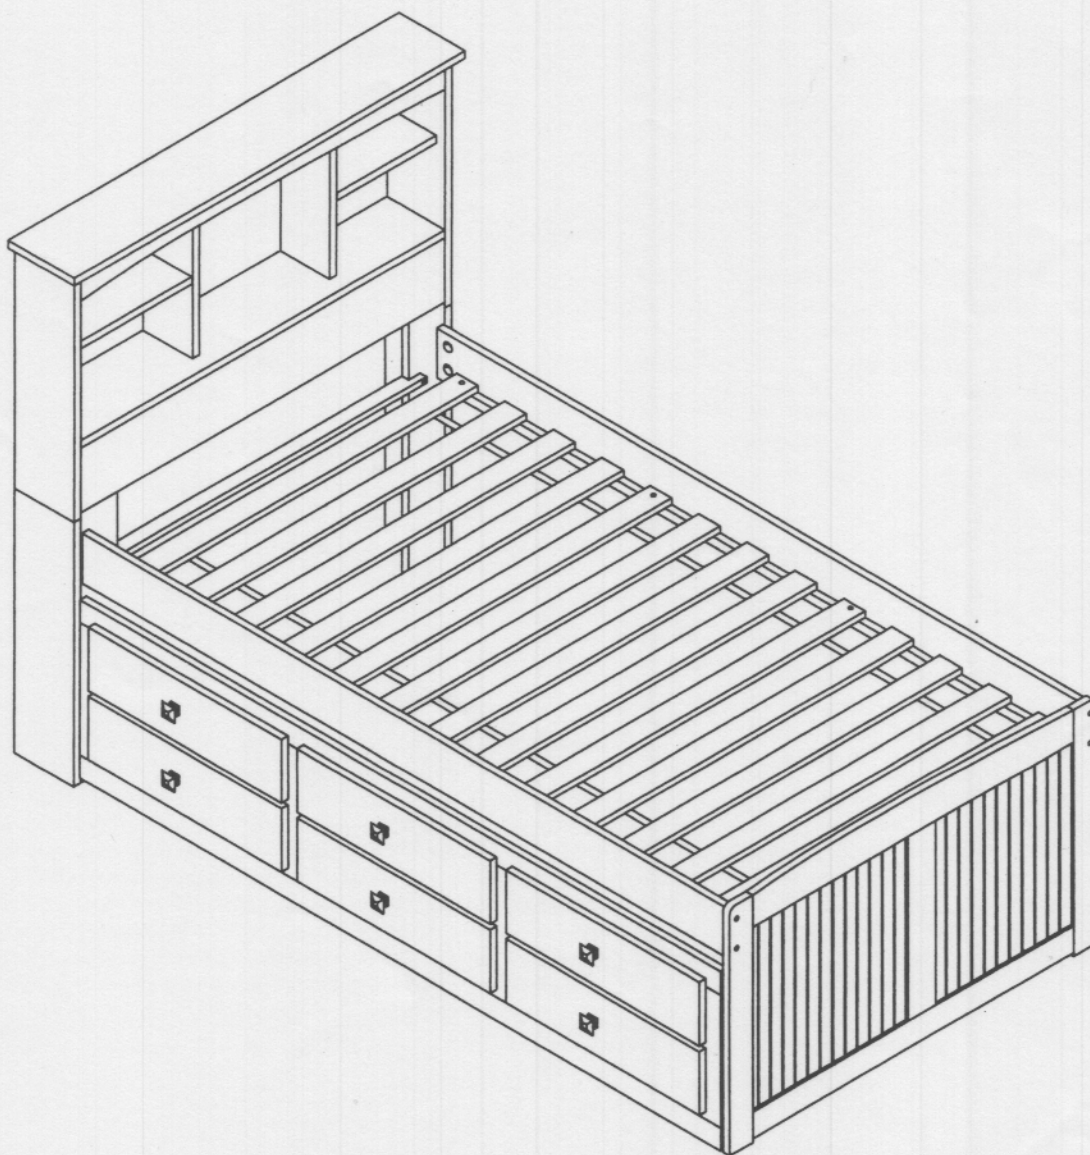
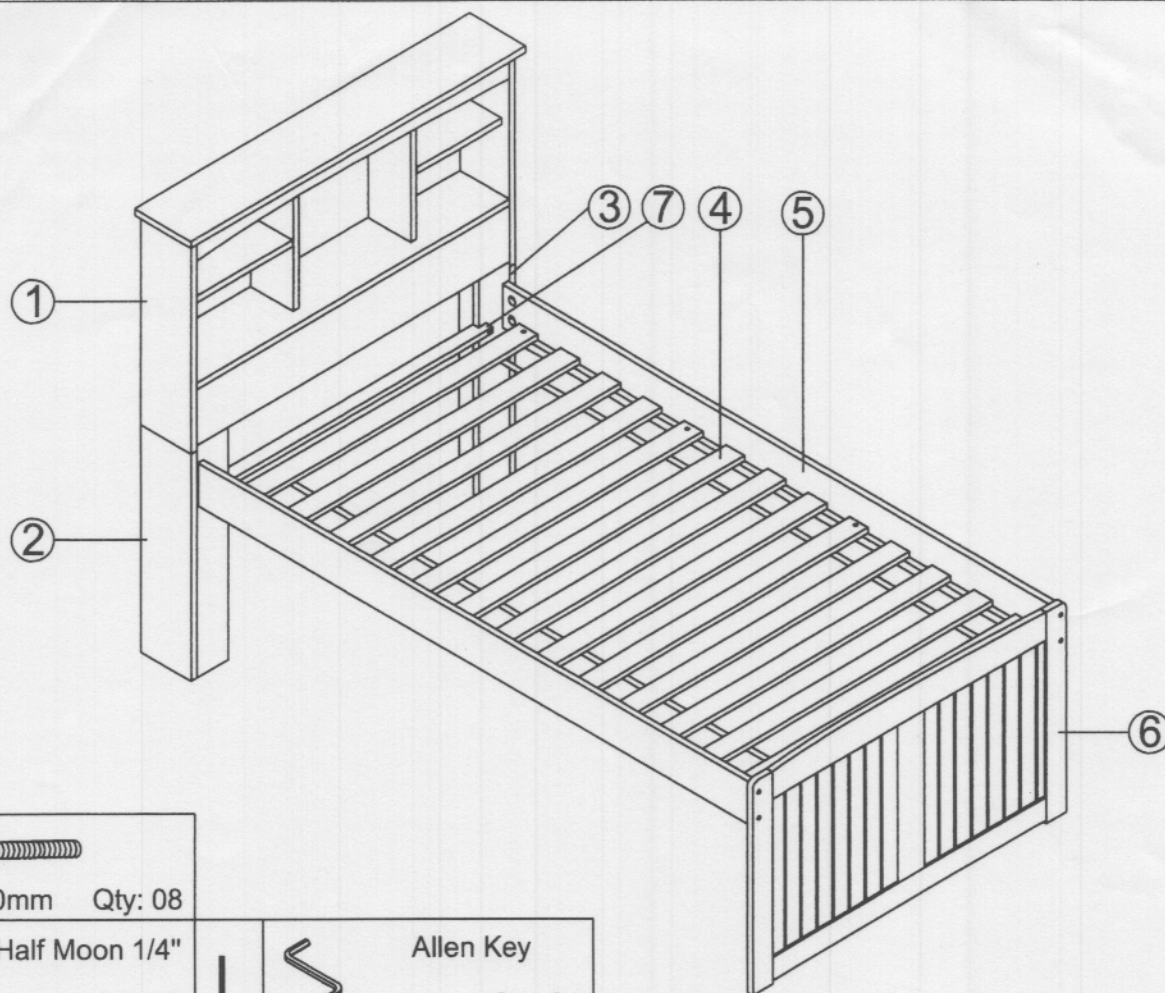
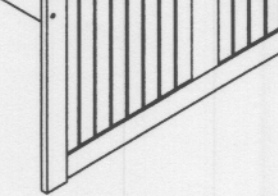


ASSEMBLY INSTRUCTIONS - TWIN BOOKCASE BED-CAPPUCCINO






A								
Ø1/4" x 70mm Qty: 08								
B		Half Moon 1/4"	I			Allen Key		
Qty: 08				Qty: 01				
D		Ø10x40mm Qty: 12	E		Ø4x25 mm Qty: 10	F		Qty: 04
G		Ø3.5x 20mm Qty: 16						


Step 01

D  $\varnothing 10 \times 40\text{mm}$ Qty: 12
--

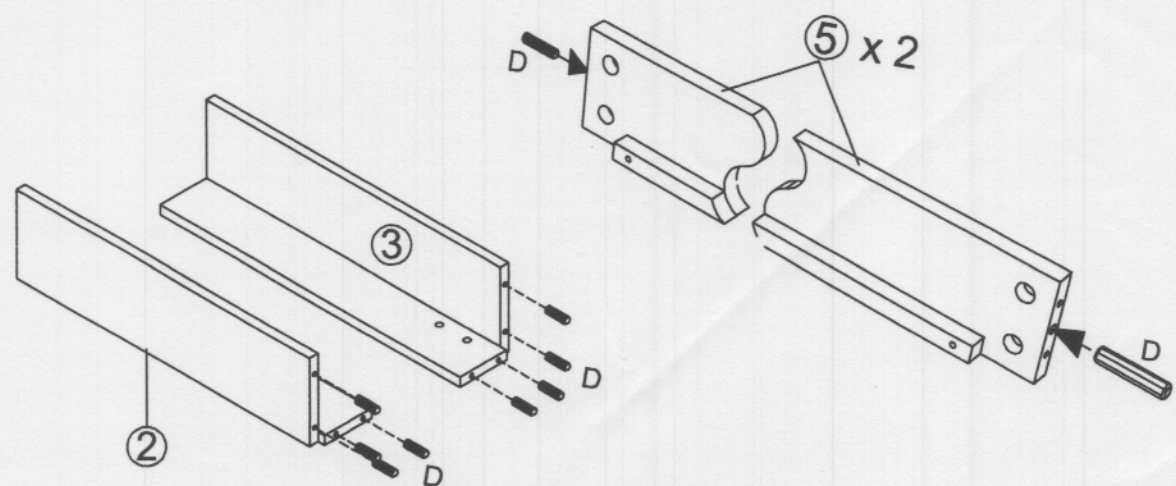


Step 02

E




Ø4x25 mm

Qty: 02

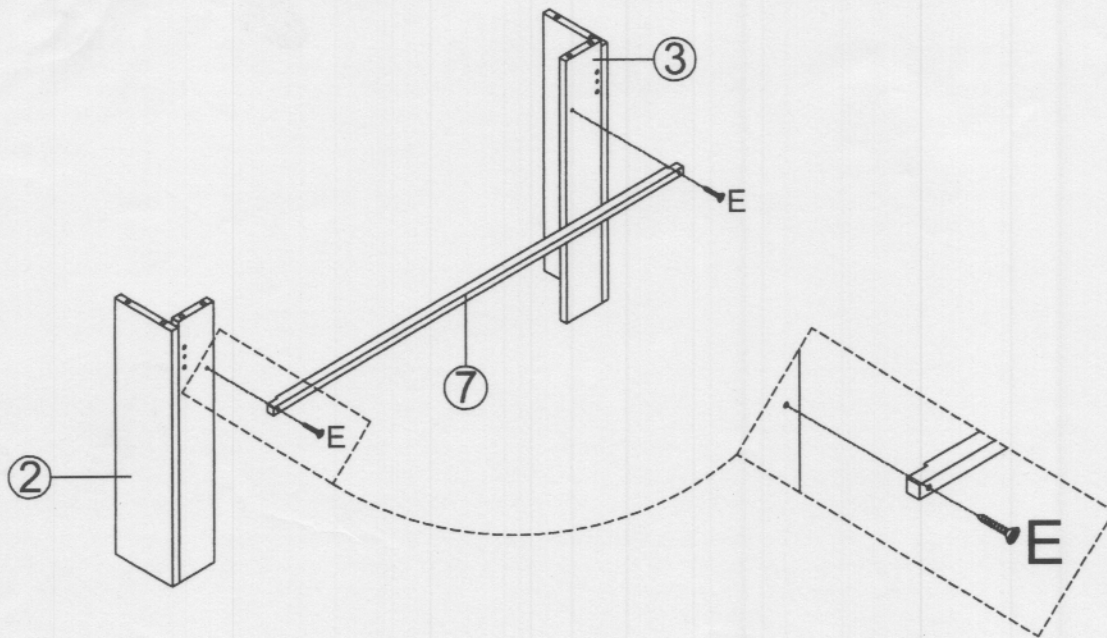



Step 03

A	 Qty: 08	B	 Half Moon 1/4" Qty: 08
I	 Qty: 01		

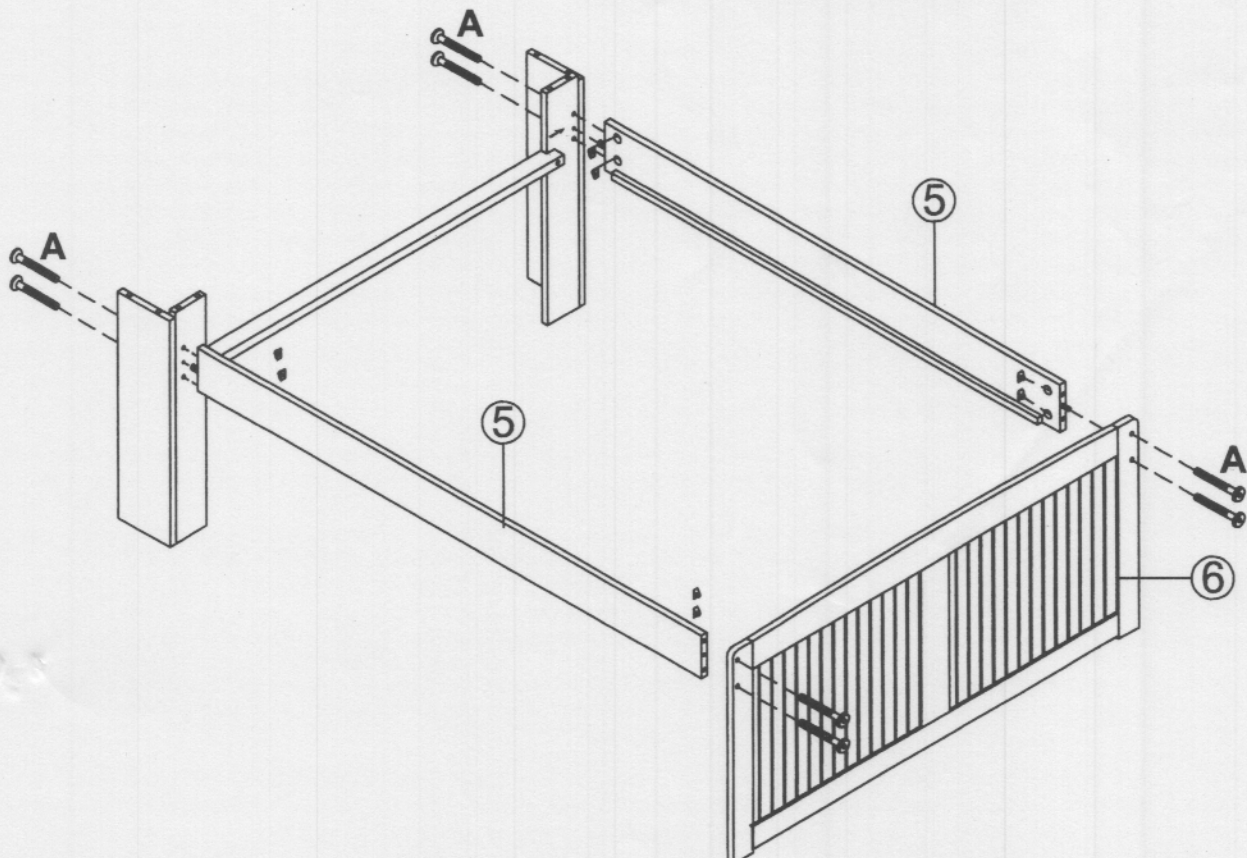



Step 04


G		Ø3.5x 20mm	Qty: 16
F			Qty: 04

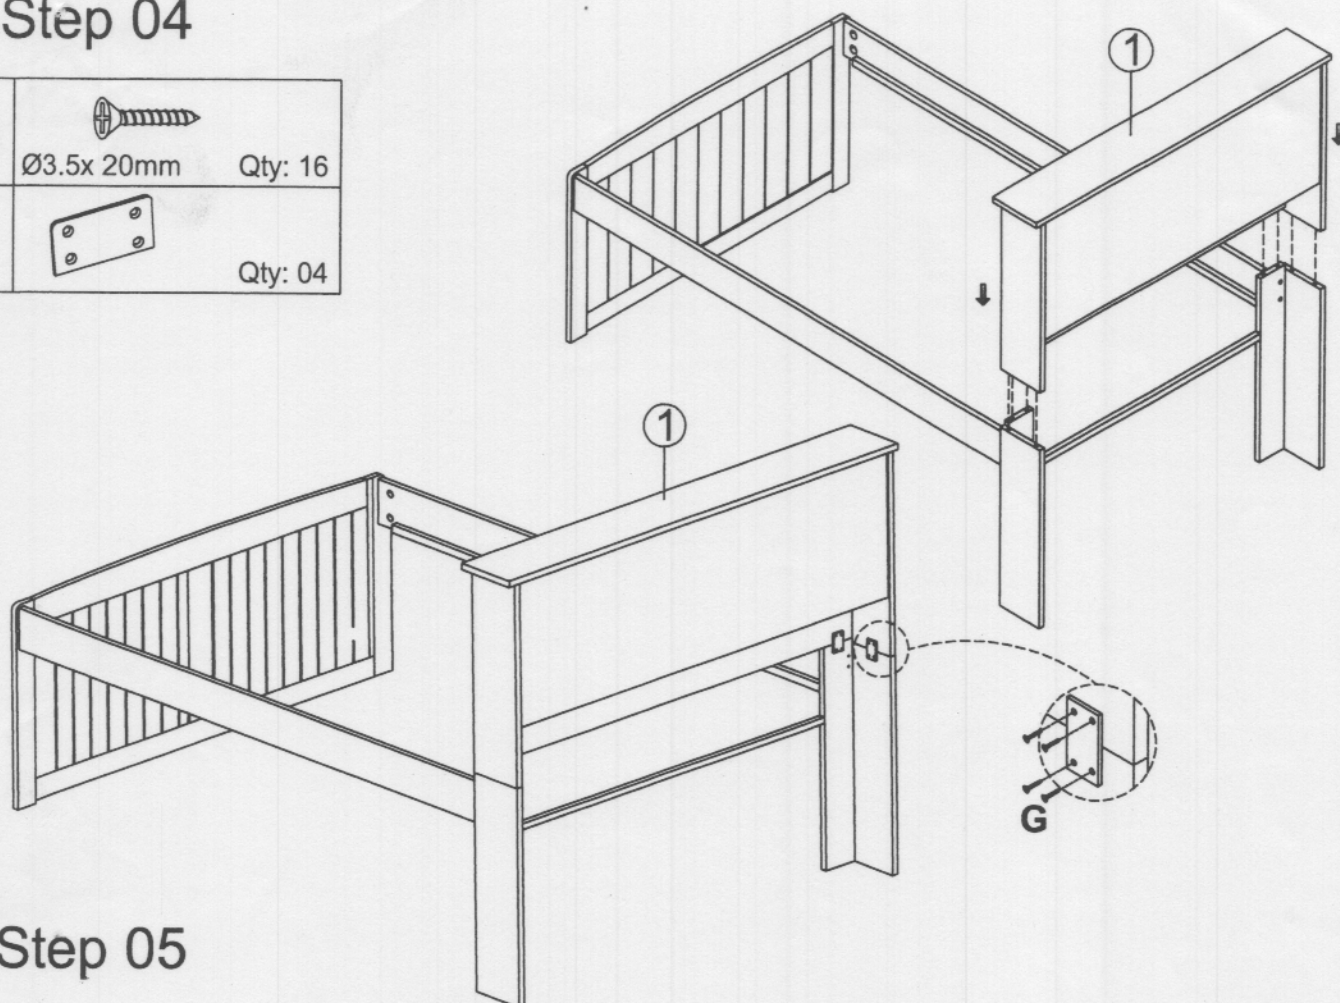

Step 05

E		Ø4x25 mm	Qty: 08
---	---	----------	---------




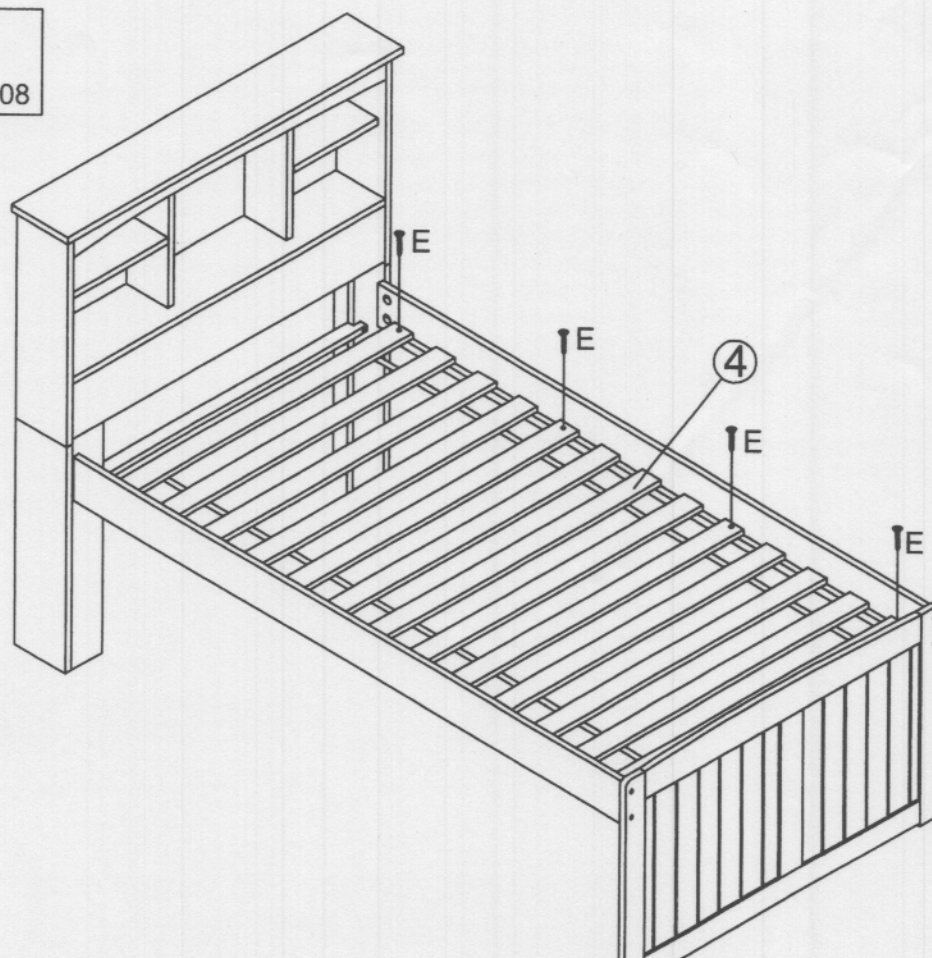


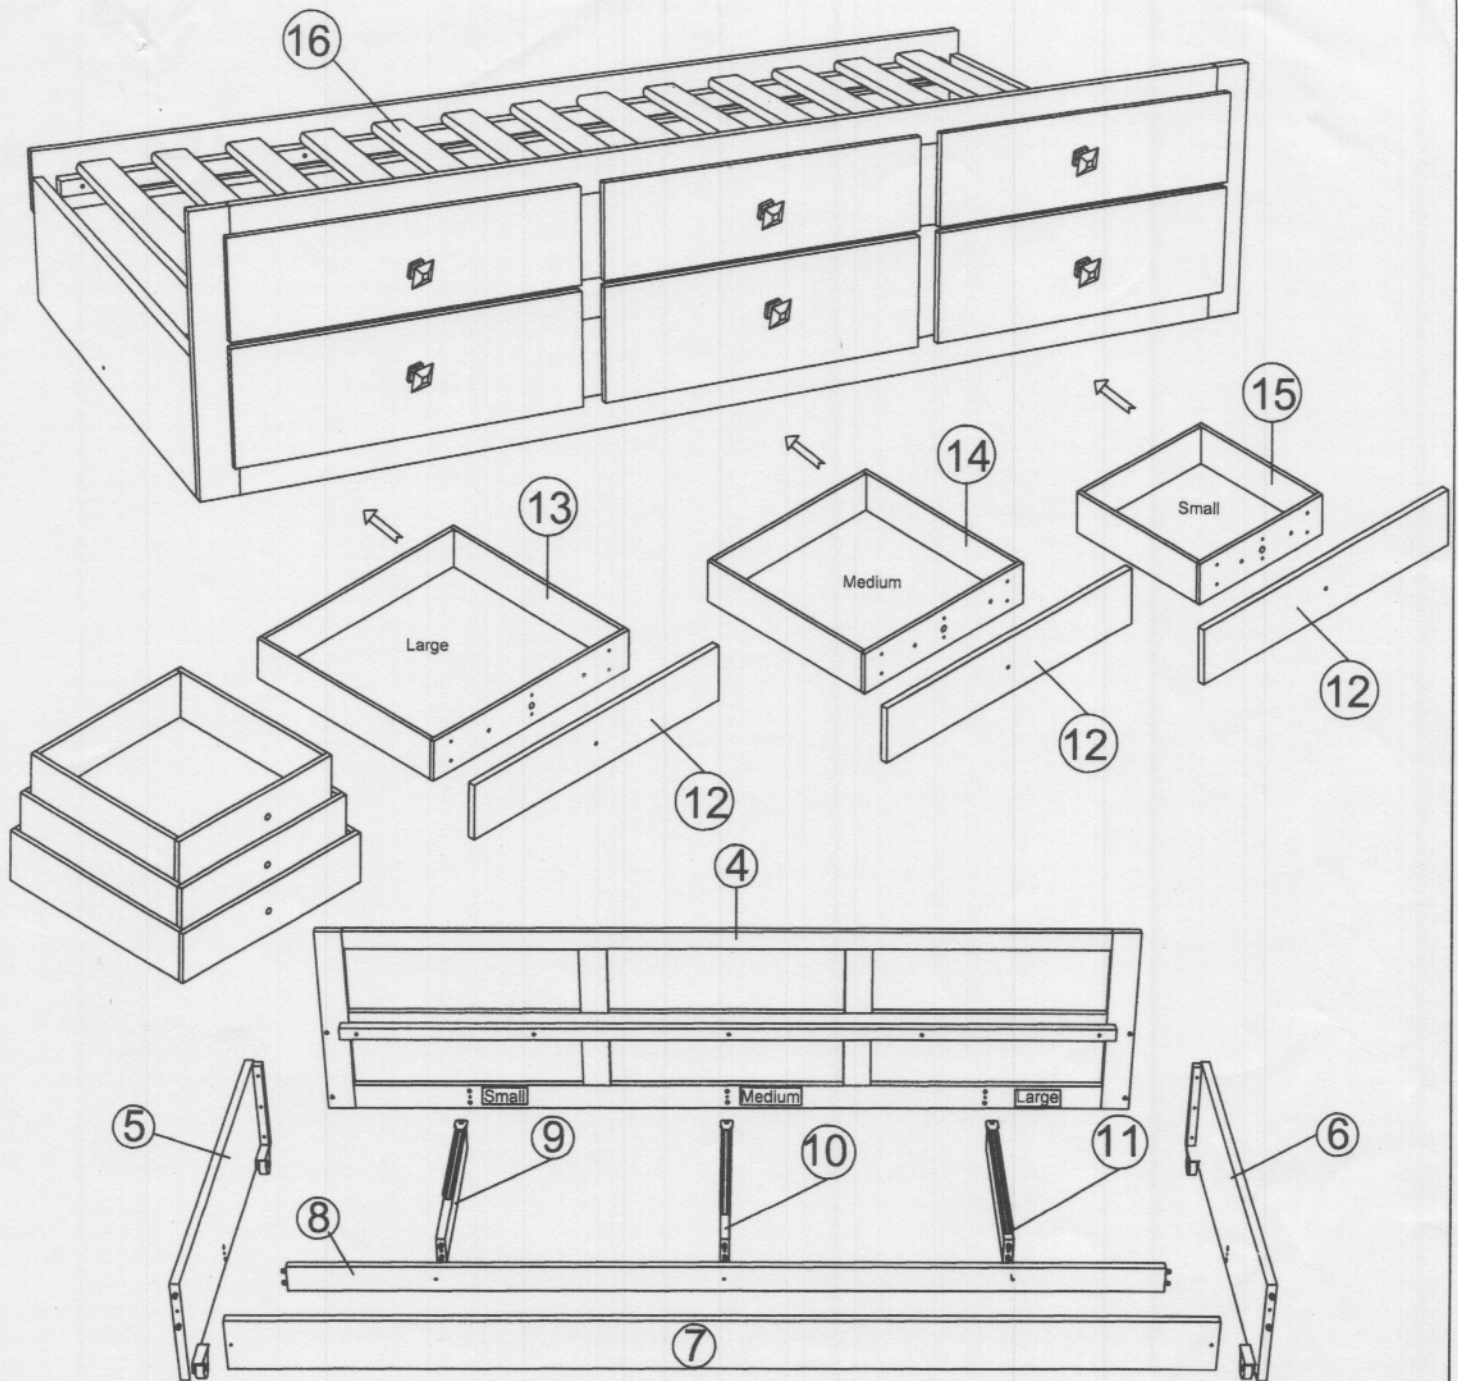

Important :


Drawer glide length location inside trundle must match drawer box size location. Make sure to assemble per drawing above

HARDWARE LIST



A	 Ø6 x 40mm Qty: 7	B	 Ø8 x 30mm Qty: 18	C	 Ø4 x 30mm Qty: 17
E	 Qty: 06	F	 Ø8 x 20mm Qty: 06	G	 Qty: 04
H	 Ø3x15mm Qty: 16	I	 Ø10 x 40mm Qty: 4	J	 Ø4x25mm Qty: 06
M					


Step 01


B	 Ø8 x 30mm	Qty: 18
I	 Ø10 x 40mm	Qty: 4

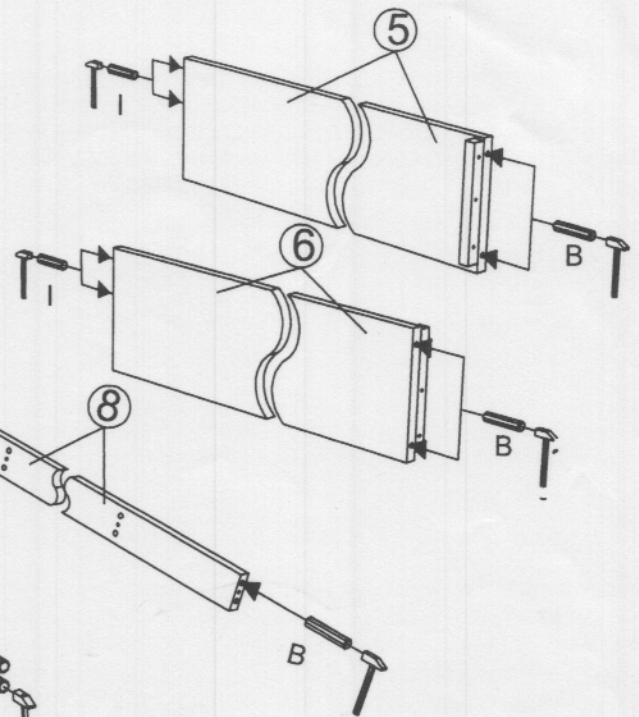



Step 02

A	 Ø6 x 40mm	Qty: 7	C	 Ø4 x 30mm	Qty: 9
G	 Qty: 04		H	 Ø3x15mm	Qty: 16

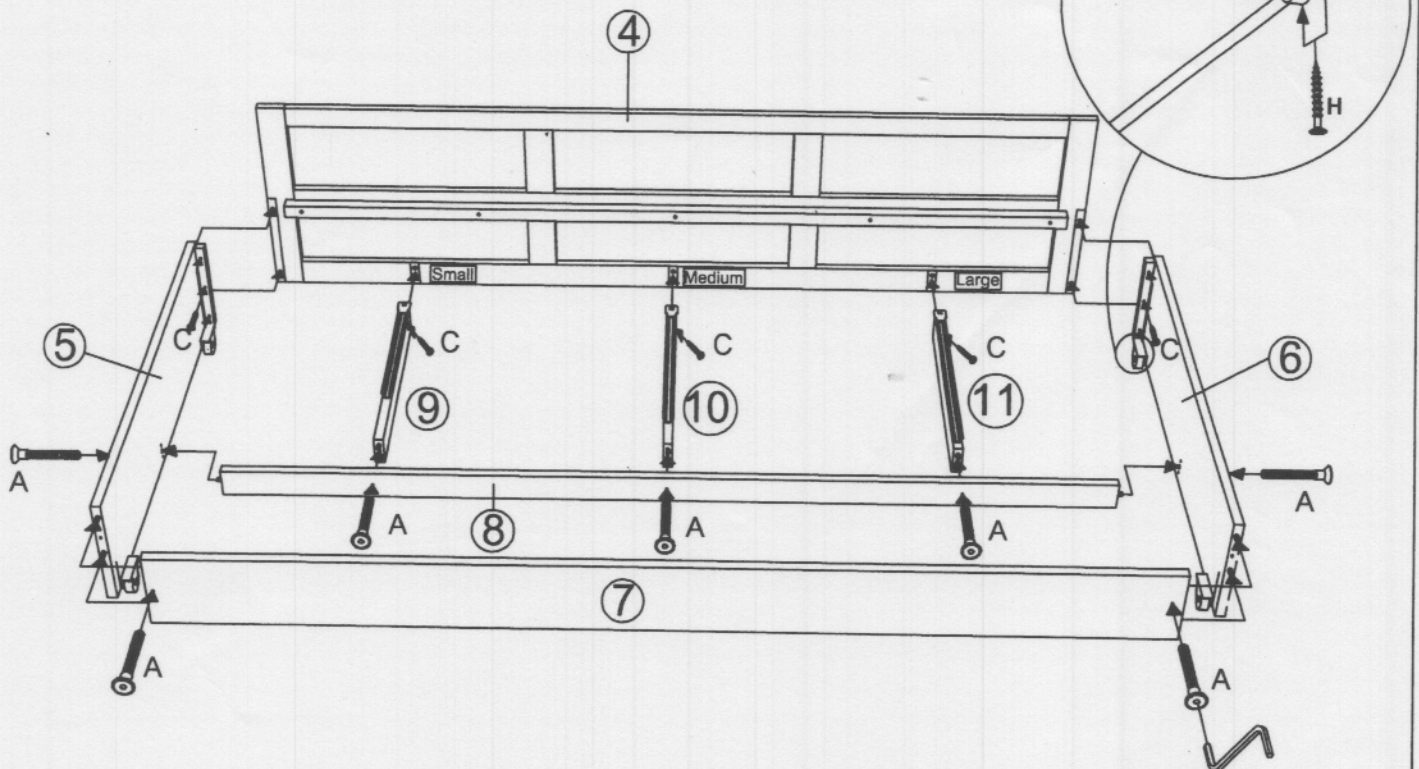


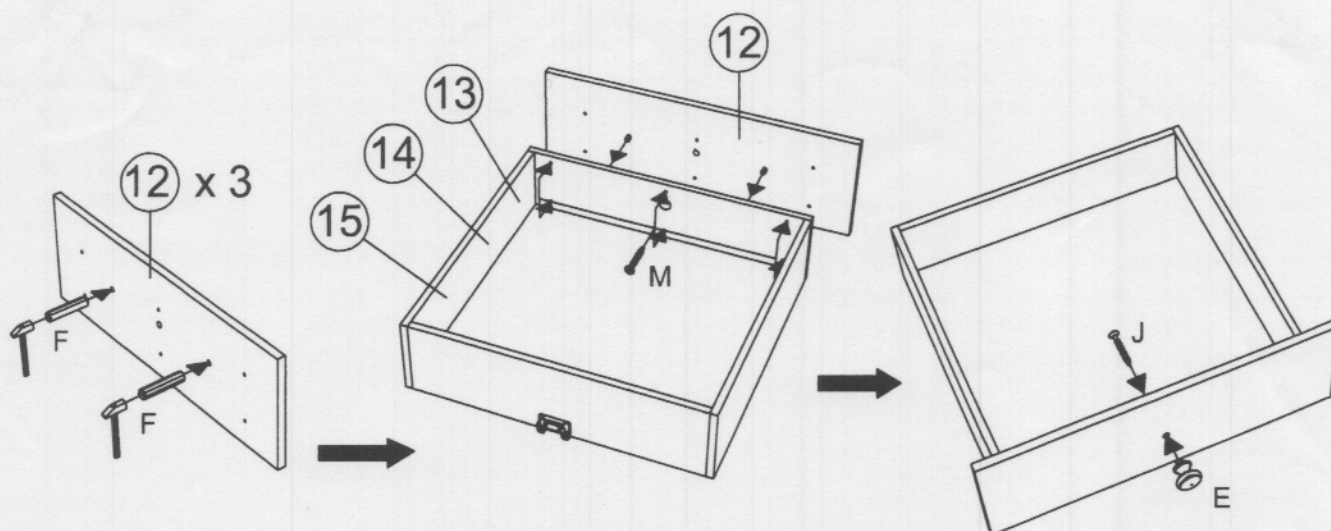

M	 Ø4x20 mm Qty: 18	E	 Qty: 06
F	 Ø8 x 20mm Qty: 06	J	 Ø4x25mm Qty: 06

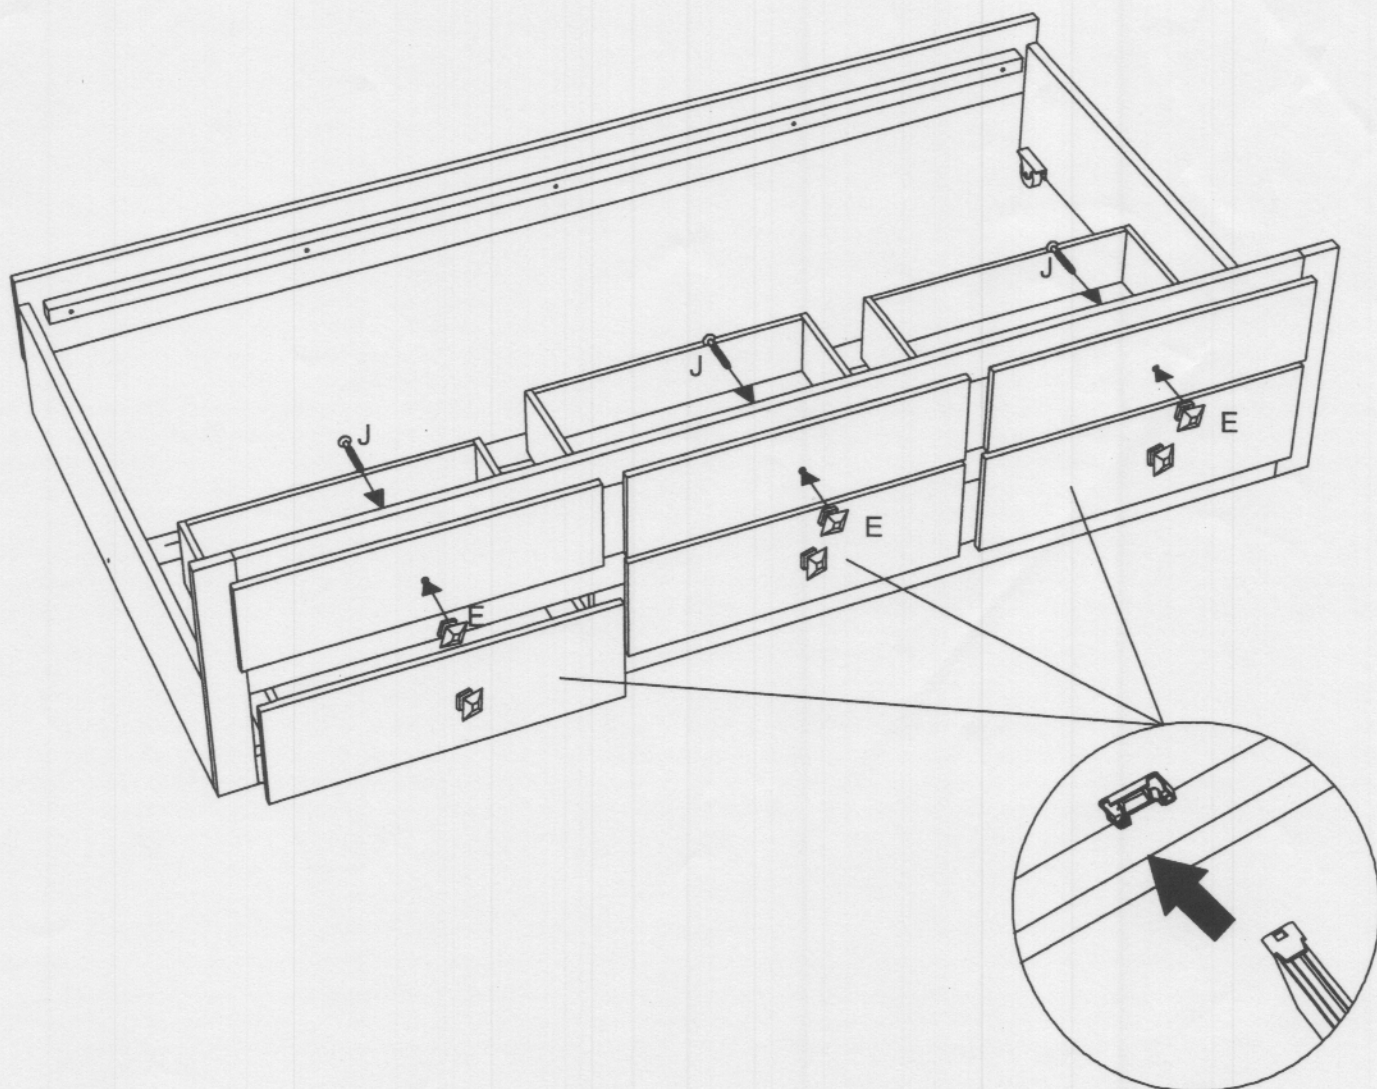

C



Ø4 x 30mm

Qty: 8

