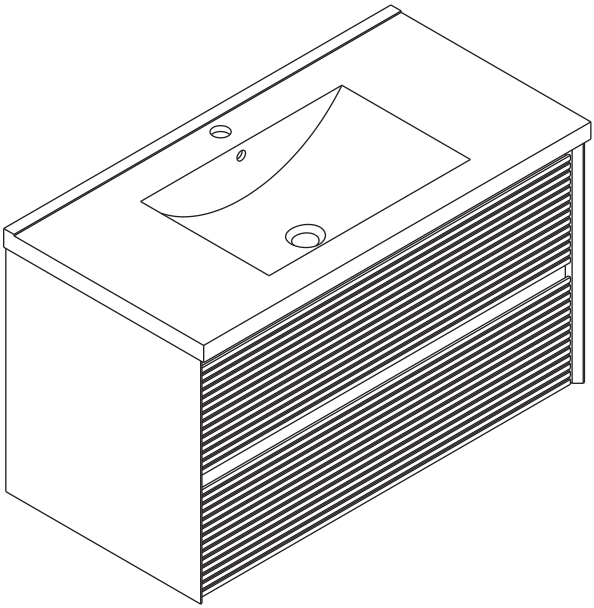


Bathroom Vanity

ASSEMBLY INSTRUCTIONS

Notice:

1.Follow the installation instructions. Please confirm all accessories are preset before installation.

2. Do not fully tighten the screws during initial assembly. Fully tighten screws only once all pieces which are correctly assembled.

3. If you encounter any problems during installation, please contact our customer service.


4. Please unbox the item from the side with an open-label and put a carpet on the foor to avoid scratching it.






Recommended installers : 2




Put a carpet on the floor before unpacking

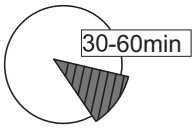



Estimate installation time: 30 minutes

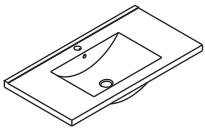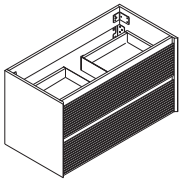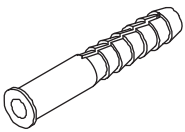
Item no.	Reference Image	Qty
A		x1
B		x1
1		x4
2		x4

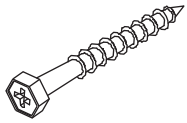Item no.	Reference Image	Qty
3		x4
4		x6

1

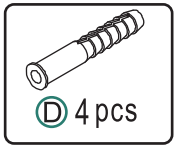


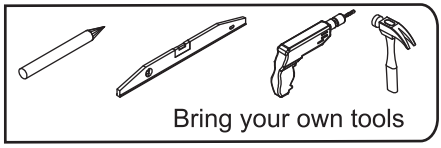


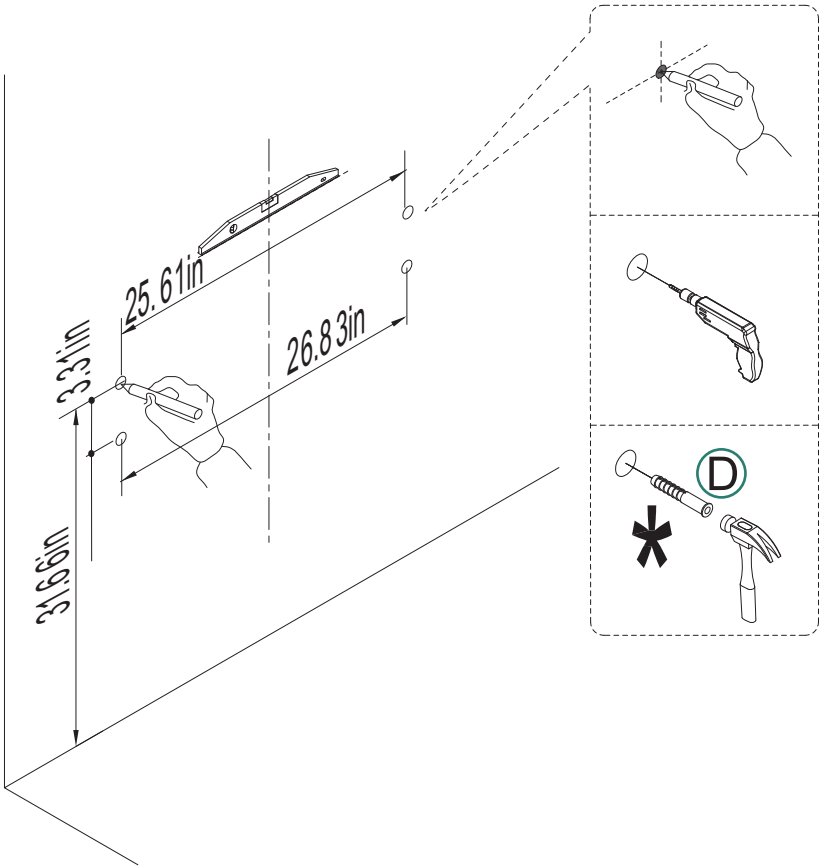


WARNING: To prevent tipping over, this product must beused with the included wall mounting device.
WARNING: Evaluate the suitability of the wall to ensure thatthe fixtures can withstand the forces that occur.


2

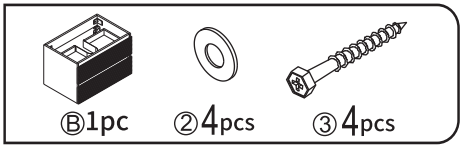

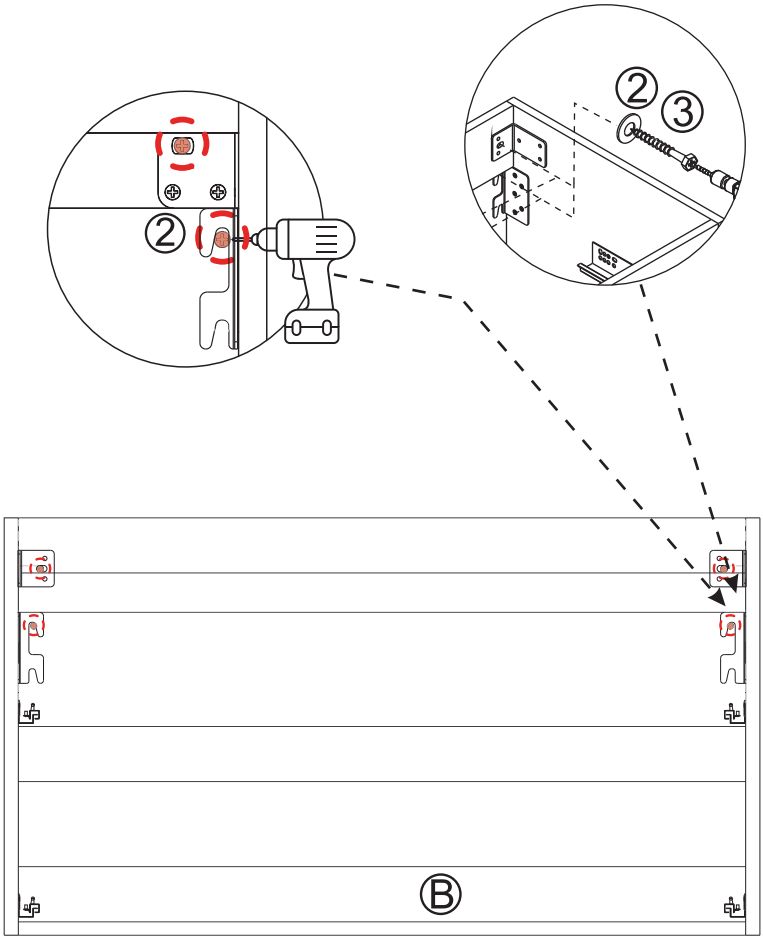


3

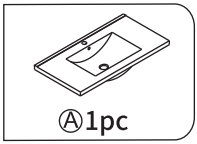

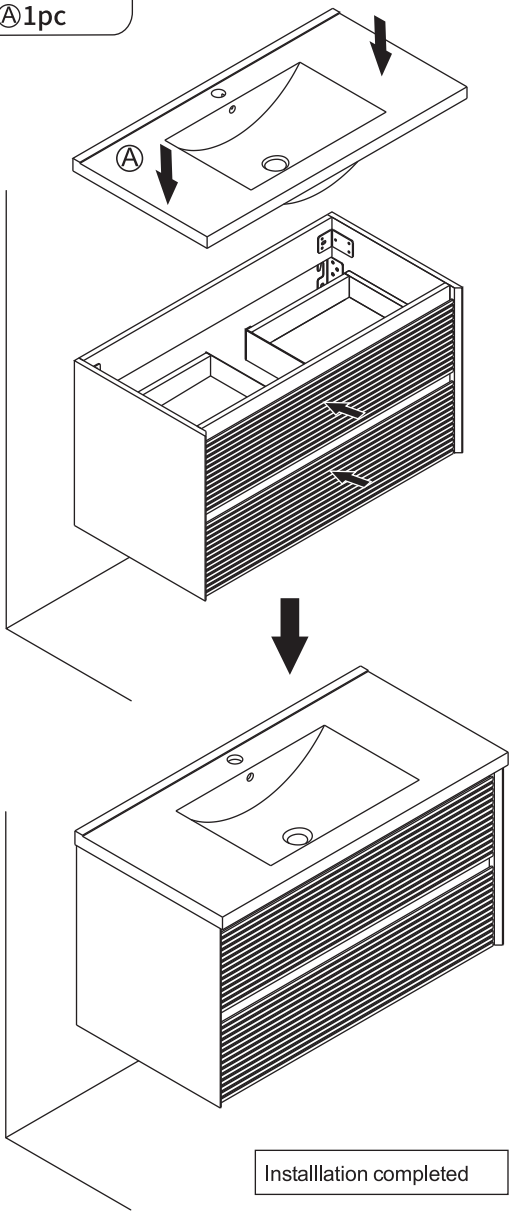

4


Installation of drain assembly

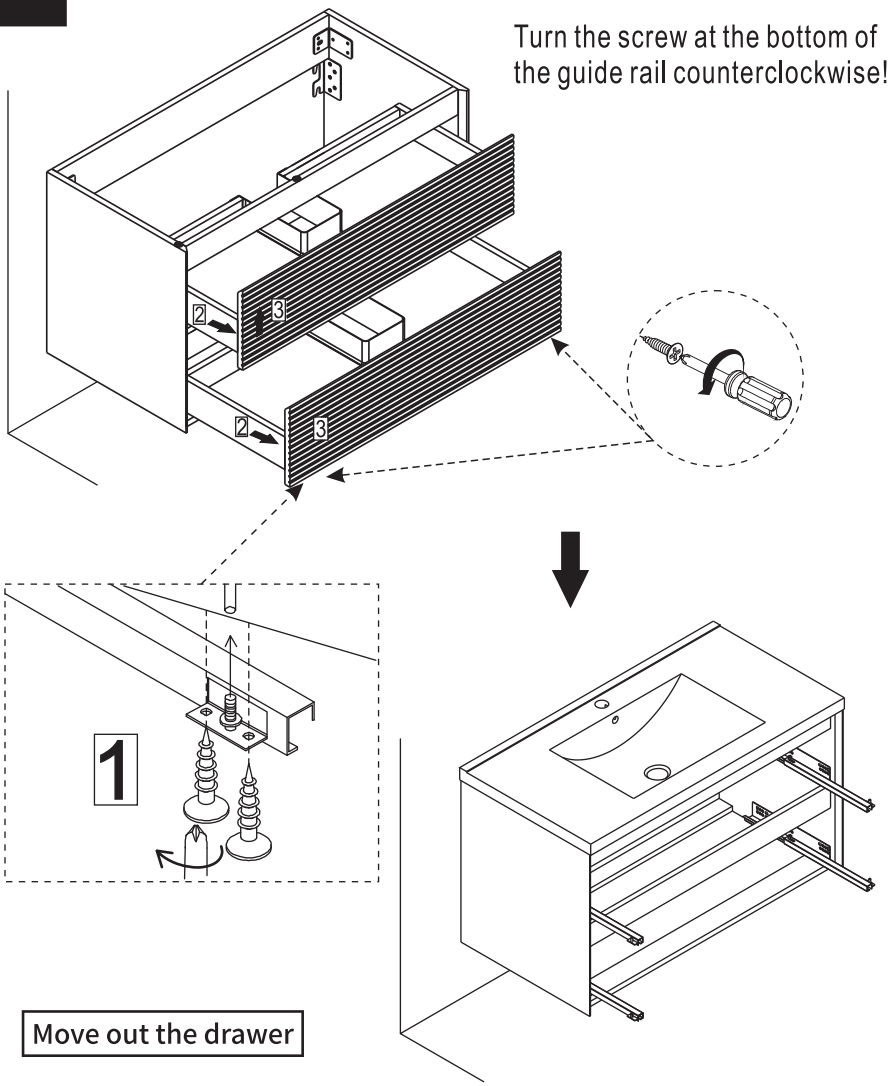

5





④6pcs

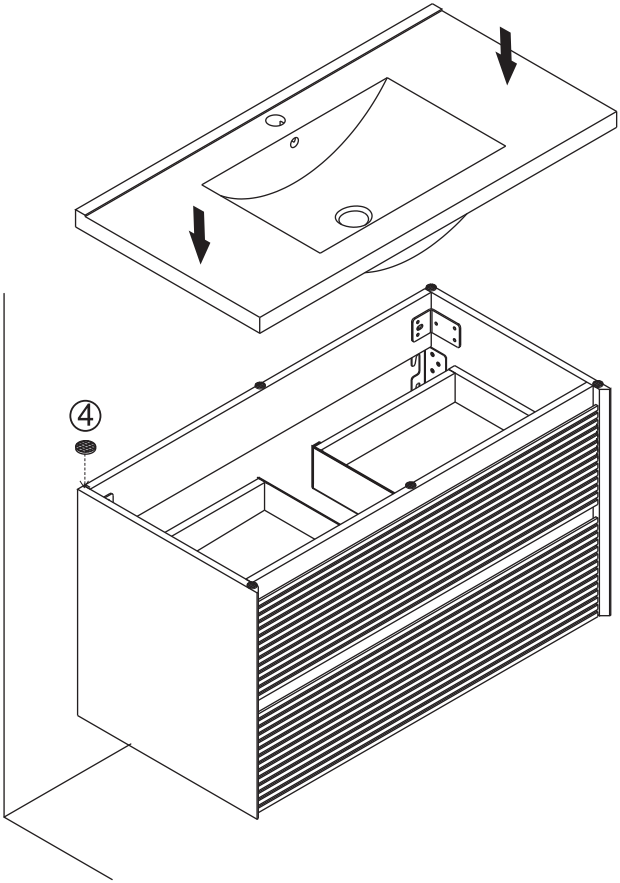


Installation of drain assembly

6

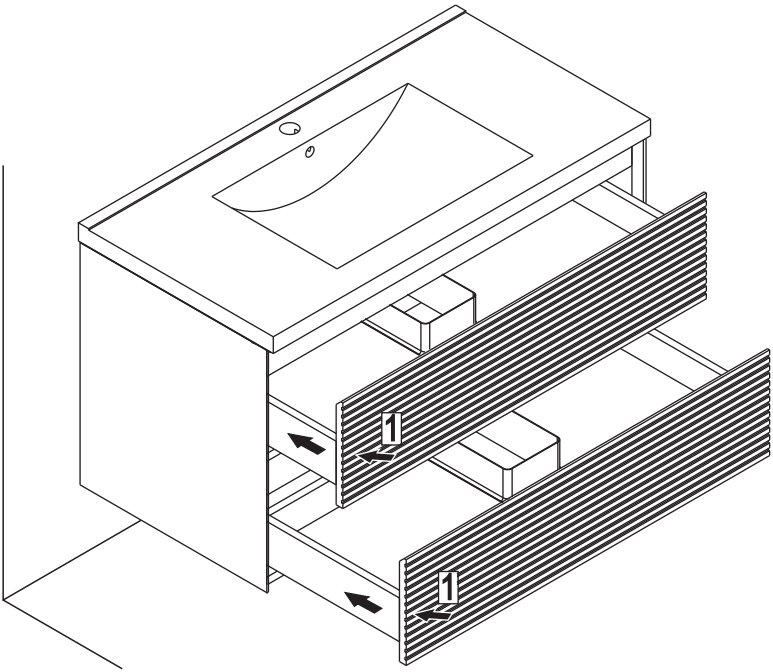

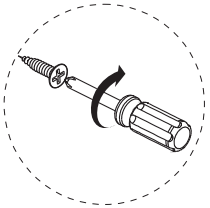

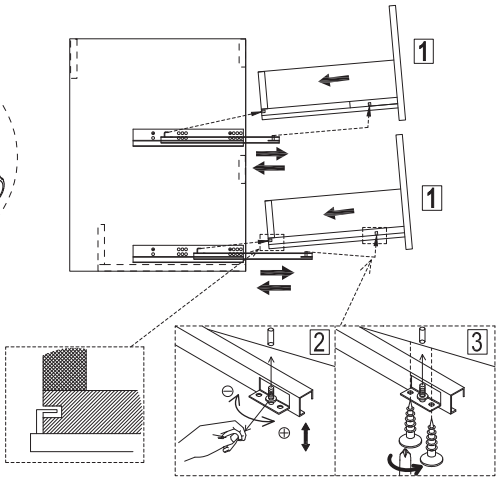

Installlation completed