

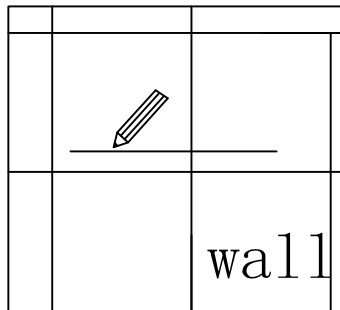


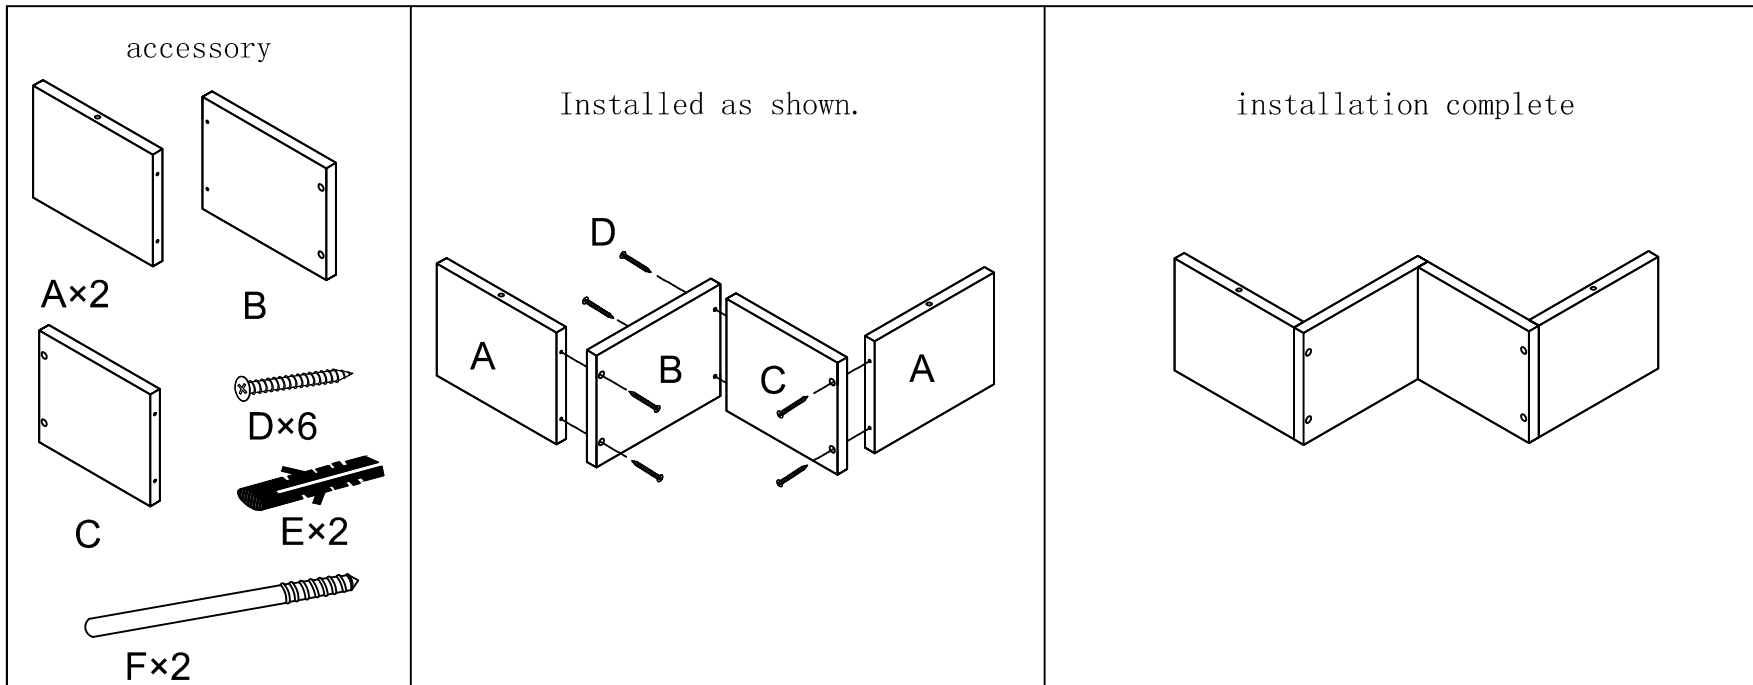

Step 1: draw
a than W hang
on the wall
hole length of
a horizontal
line.

Step 2: mark
W two holes on
the horizon,
and then use
percussion
drill holing.

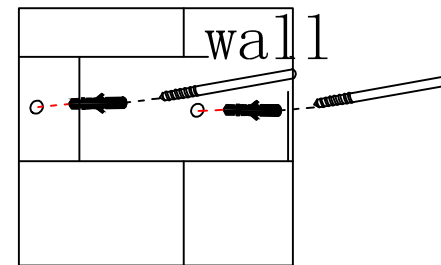

Step 3: The
expansion pipe
into two wall
hole, the screw
screwing in the
expansion pipe.

Step 4: Align
the screw with
W hole, hard
push the W to
flush with
metope.