










CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes,harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from sratches and spills. How often you apply the wax depends on how much wear the furniture receives.


NOTICE

- \* Please make sure that you have all parts indicated before you begin assembly of this item
- \* This item should be assembled on a soft surface to prevent scratching the finish during assembly

Part List

| PIECE | DESCRIPTION              | PICTURE  | QUANTITY |
|-------|--------------------------|--|----------|
| A     | Desk Top                 |     | 1X       |
| B     | Left Side Panel          |     | 1X       |
| C     | Right Side Panel         |    | 1X       |
| D     | Cross wood               |  | 1X       |
| E     | Allen Key Drivers        |   | 2X       |
| F     | Allen Bot 6.35x1.27x35mm |   | 8X       |
| G     | Allen Bot 8x1.41x50mm    |   | 2X       |
| H     | Flat Washer              |   | 10X      |
| I     | Wooden Plug              |   | 2X       |


Product Dimensions: 35.75"W x 15.75"D x 29.5"H  
Weight Capacity: 40LBS

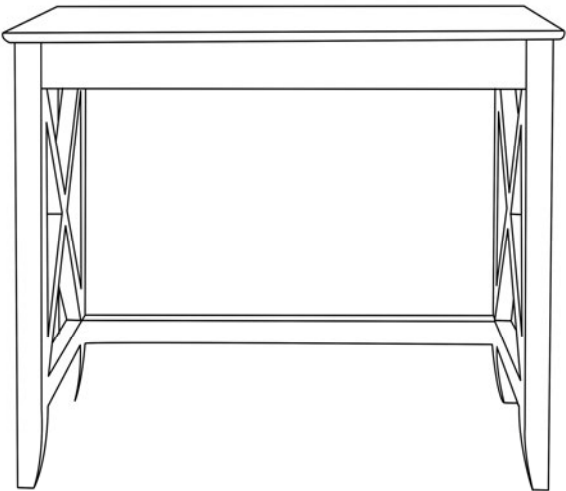

## PREPARATION


Before beginning assembly of product, make sure all parts are present. Compare parts with package contents list  
If any part is missing or damaged, do not attempt to assemble the product.

Estimated Assembly Time: 5 minutes.

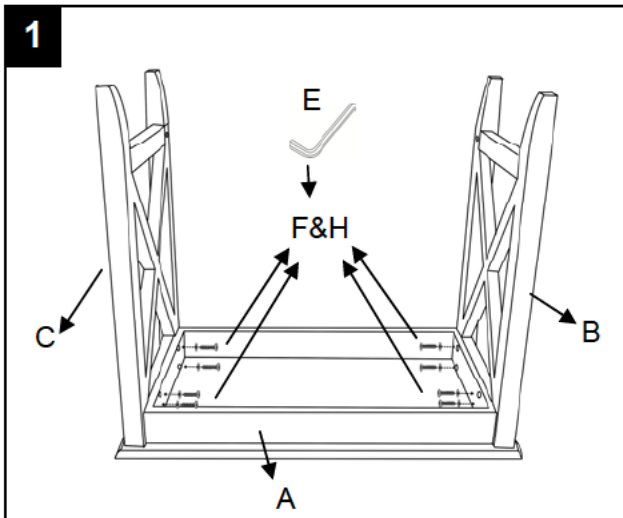


Step 1

Take all packaging off the desk.  
Screw side panels B & C to desk top A.  
8pcs screws & flat washers F&H required.  
Allen key driver required.

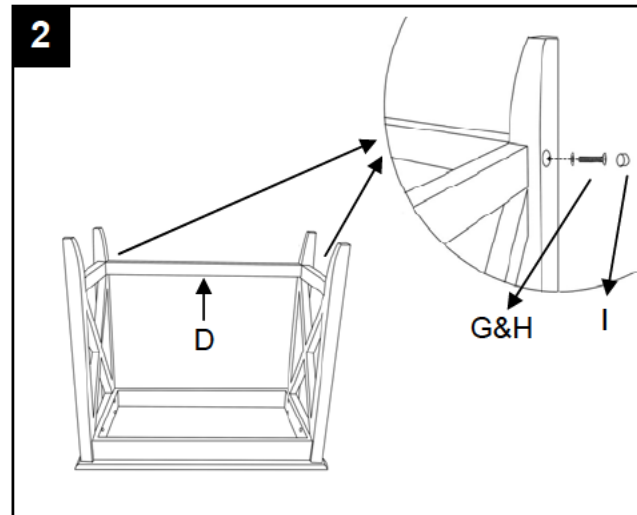

Step 2

Screw the wooden wood D to side panels  
2pcs screws & flat washers G&H required.  
2pcs wooden plug I to cork the screw holes.  
Allen key driver required.

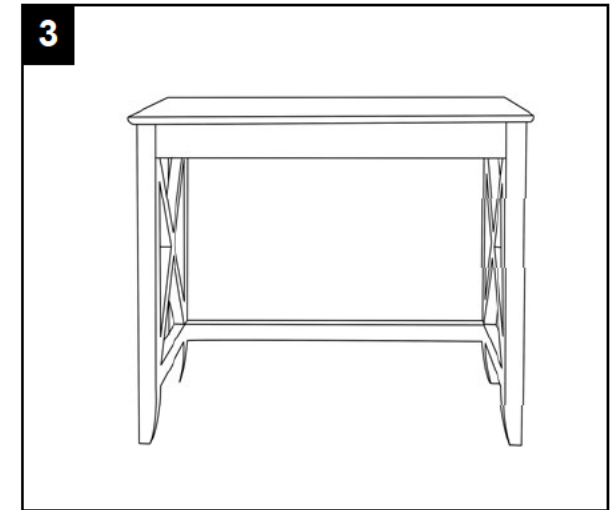

Step 3

Turn the desk up to the right side.  
Assembling process done.