














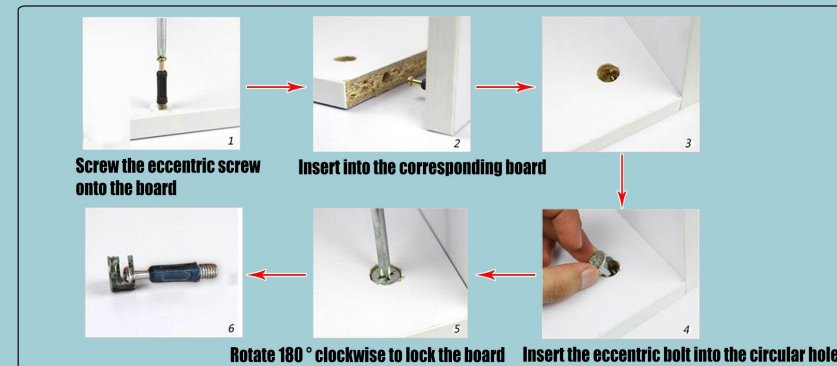


Installation manual


							
Eccentric screw	Eccentric Wheel	3.5cm Self-tapping screw	3cm flat head screw	3.5cm flat head screw	4cm flat head screw	1cm flat head screw	2cm flat head screw
A*26	B*26	C*52	D*4	E*4	F*2	G*1	H*4

							
Round plug	Plug	Metal pin	Flange nut	Handle	Handle screw	5cm pointed screw	
I*4	J*4	K*9	L*5	M*1	N*1	O*4	




Installation steps:


Step 1: Install the drawer section

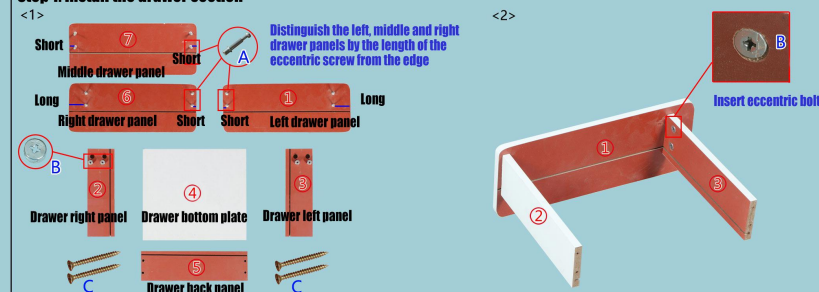

<3> **Insert the drawer bottom plate first, then rotate the eccentric bolt clockwise to lock the plate**




<4>




Left drawer part of the installation is complete!
Similarly complete the middle drawer and right drawer section!


Board name and serial number:




Upper back panel
⑧




Upright plate
⑨x2




Left layer board
⑩




Upper door panel
⑪




Left vertical board
⑫




Right vertical board
⑬




Door plank
⑭




Deck plate
⑮



Left side panel
⑯




Right side panel
⑰



pulling plate
⑱

Strictly follow the screws marked on the drawing for installation to avoid piercing the board




A


M

N


K




Middle vertical plate
⑲x2




baseplate
⑳




Brackets
㉑x2




Crossbar
㉒




X-Reinforcement
㉓



Connection plate
㉔

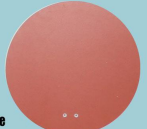


Mirror
㉕




Right laminate
㉖

Step 2: Overall partial installation


<1>

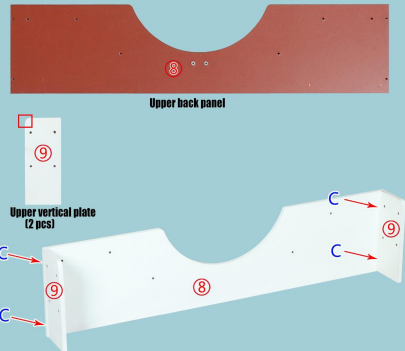


<2>

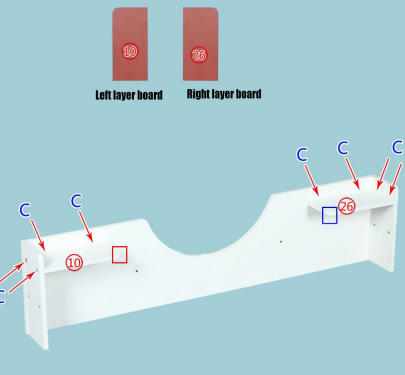

<3>

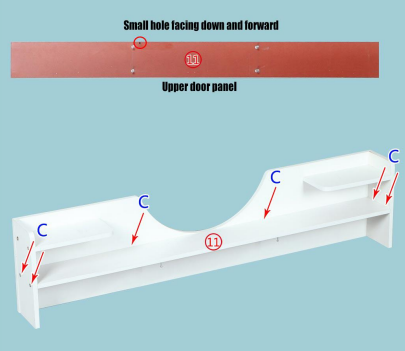

<4>

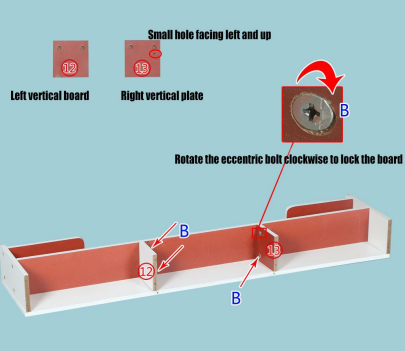

<5>

