

ASSEMBLY INSTRUCTIONS

ITEM CODE : IN 4325

ITEM DESCRIPTION : **WALL MOUNTING BEDSIDE**



1.
Insert the plastic dry wall anchor inside the hole drilled into the wall through the wooden support



2.
Thread the metal screw through the plastic washer until it threads till the wall




3.
Secure the screws tight into the hole drilled in the wall with the help of drill



4.
Fix all the screws firmly in the 5 slots provided

WALL MOUNTING INSTRUCTIONS

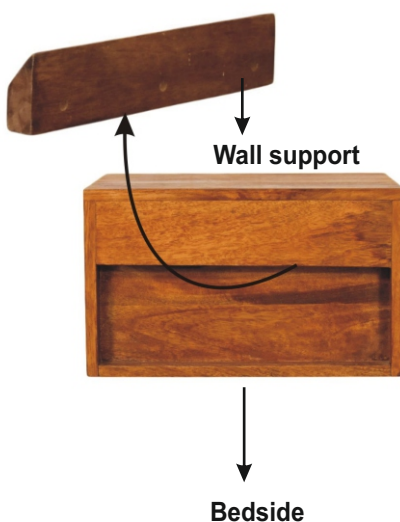

Washer

Screw

Allen key

Fasten the bolt & washer to the slot given on the bottom of bedside with the help of the allen key provided.

"INSTRUCTIONS DE MONTAGE"

ITEM CODE : IN 704



Insérez la cheville en plastique pour cloison sèche dans le trou percé dans le mur à travers le support en bois.



Vissez la vis métallique à travers la rondelle en plastique jusqu'à ce qu'elle atteigne le mur.




Fixez fermement les vis dans le trou percé dans le mur à l'aide d'une perceuse.



Fixez fermement toutes les vis dans les 5 emplacements prévus.

"INSTRUCTIONS DE FIXATION MURALE"

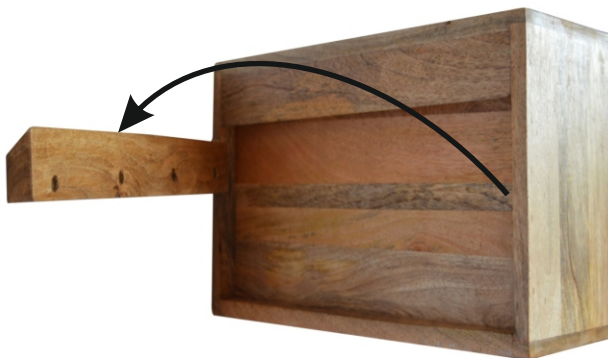

rondelle

vis

clé Allen

Fixez le boulonnet la rondelle dans la fente prévue au bas de la table de chevet à l'aide de la clé Allen fournie.