

⚠ WARNING:

T-ADAPTER MUST BE TURNED OFF AFTER EACH USED


Please turn off T-adapter after each use. This helps the longevity of your components and avoids accidental water damage. If you choose not to turn off the T-adapter, you may damage the internal components of the sprayer and hose or flood your floor!

Part List

- a) Sprayer
- b) Shower hose
- c) T-adapter
- d) Tank bracket
- e) Teflon tape
- f) Screws bag

Toilet Tank Mount steps:

1. Turn off water feed
2. Disconnect toilet hose from water tank
3. Connect T-adapter to water tank
4. Connect shower hose and toilet hose to T-adapter
5. Connect the other end of shower hose to sprayer
6. Turn on water feed
7. Place sprayer on the water tank

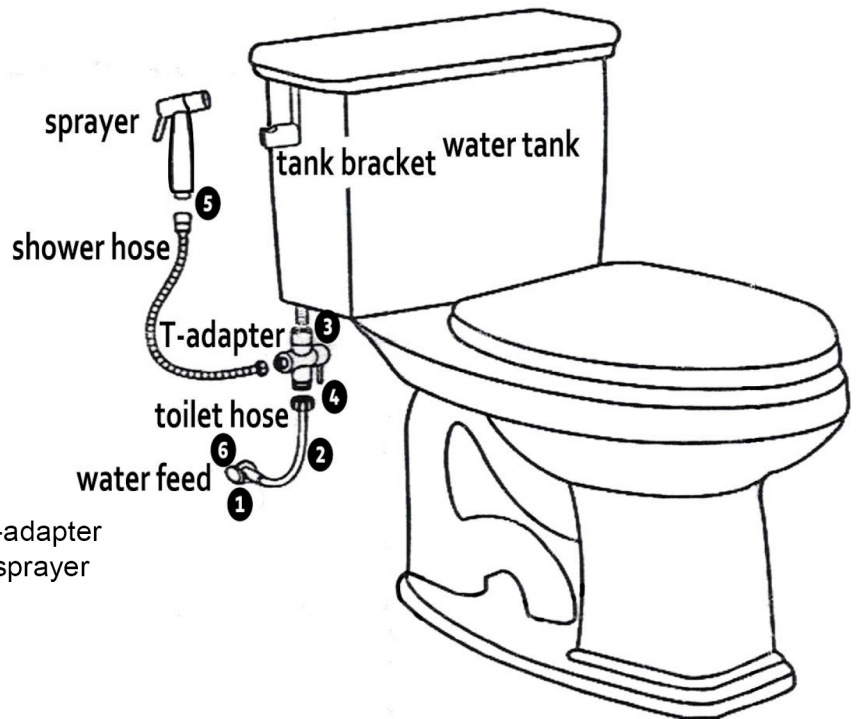


Wall Mount steps:


1. Disassemble the tank bracket as picture 1
2. Drill 2 holes on the wall and install tank bracket then put bidet sprayer on the bracket as picture 2 shows
3. Install other parts like the first six steps of toilet tank mount

Notes

1. Hand tighten connections
2. **DO NOT** over tighten connections
3. Make sure washers are placed in shower hose connectors and the T-adapter connector which connect to the water tank

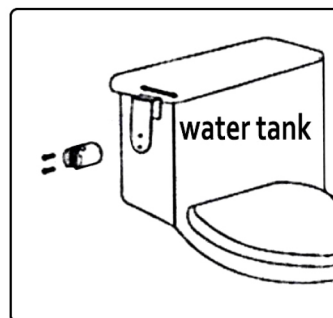

picture 1

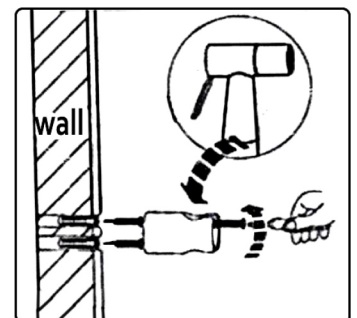

picture 2

We'd Love to Hear From You

Dear Customer,

Thank you for your purchase.

If have any concern or problem, feel free to let us know. Our E-mail: Shamanda2@hotmail.com

We will reply in 24 hours.

If like it, pls share with friends. Lifetime highest standard customer service within 30 days refund or exchange if not 100% satisfied.

Best regards!