


Assembly Instructions

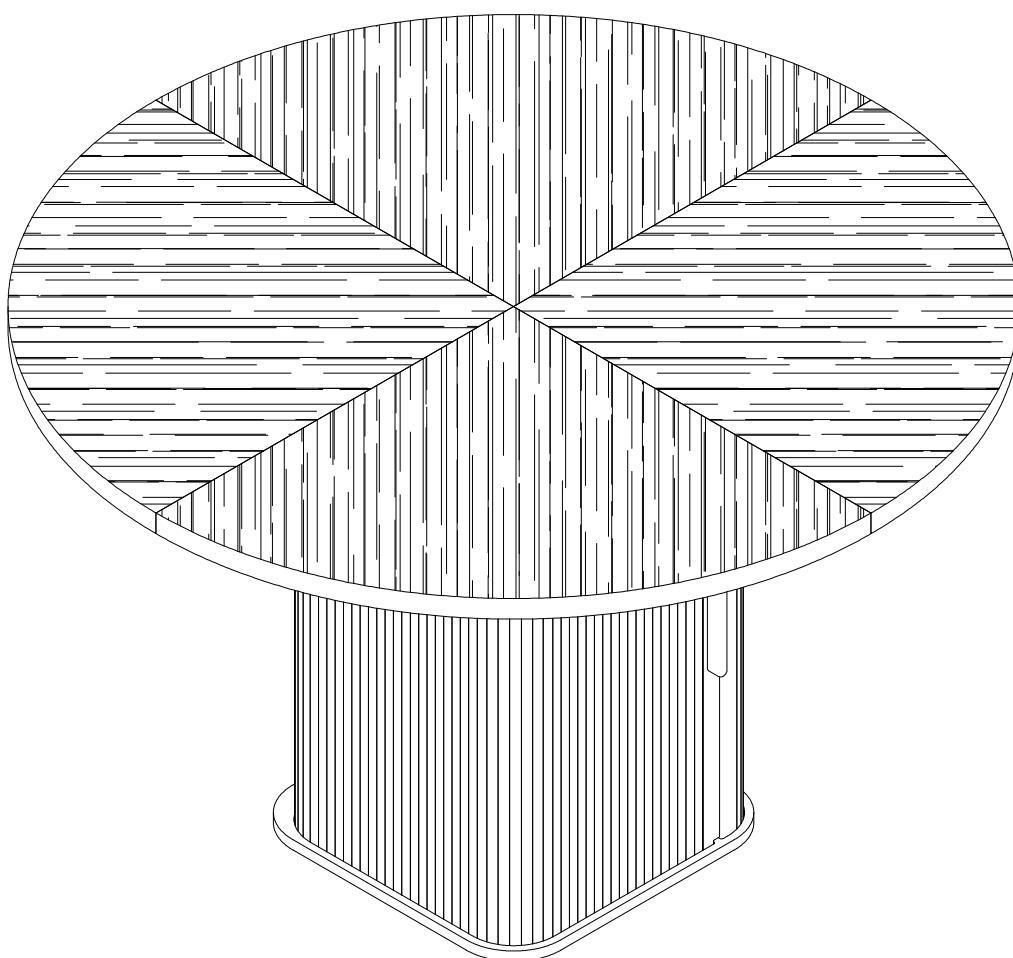


Before Assembly

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

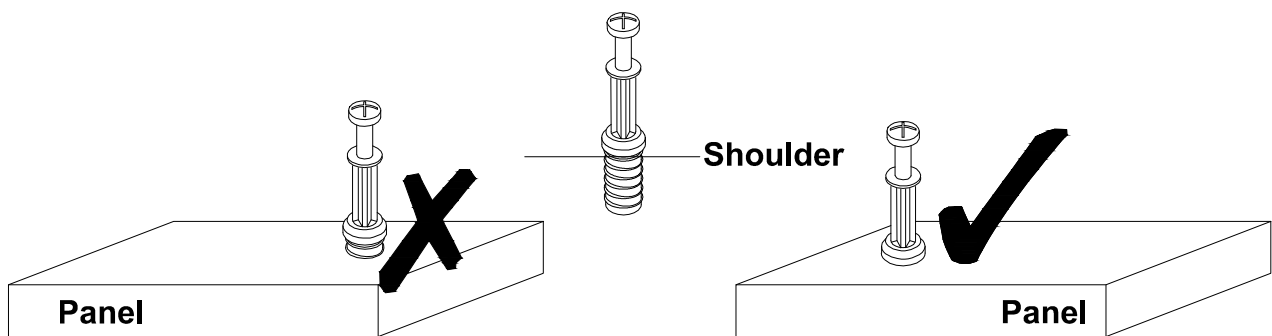

Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.


CAM LOCK

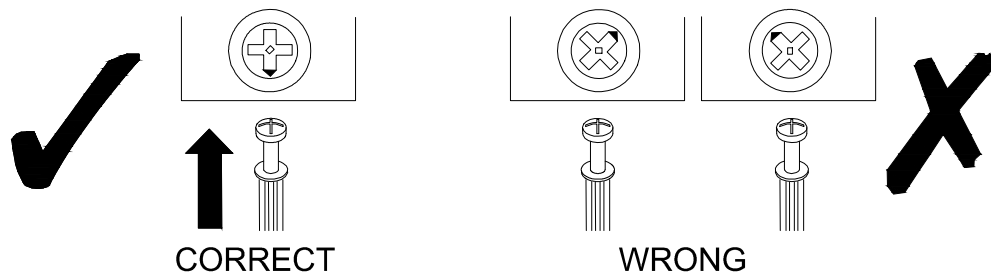

When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT




Quickfit head should be in the centre of the cam lock when the two panels are joined.

Cam lock should be inserted before quickfit.

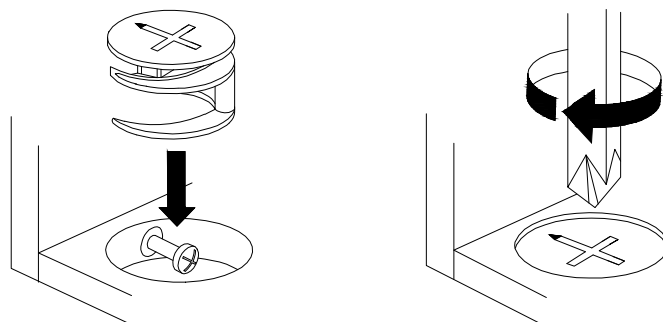


Turn cam lock clockwise to tighten.


Part List

No. A Quantity:10 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity:10 Pcs Cam φ15 	No. C Quantity:10 Pcs Sticker Ø20 	No. D Quantity:28 Pcs Dowel 8*40mm 
No. E Quantity:1 Pcs Handle 200*20mm 	No. F Quantity:16 Pcs Screw M3.5*14mm 	No. G Quantity:16 Pcs Screw M6*40mm 	No. H Quantity:12 Pcs Screw M8*25mm 
No. I Quantity:2 Pcs Screw M4*14mm 	No. J Quantity:1 Pcs Allen Key 4# 	No. K Quantity:1 Pcs Allen Key 5# 	No. L Quantity:4 Pcs L Shape Part 
No. M Quantity:6 Pcs Foot Pad Ø20 			

Product structure

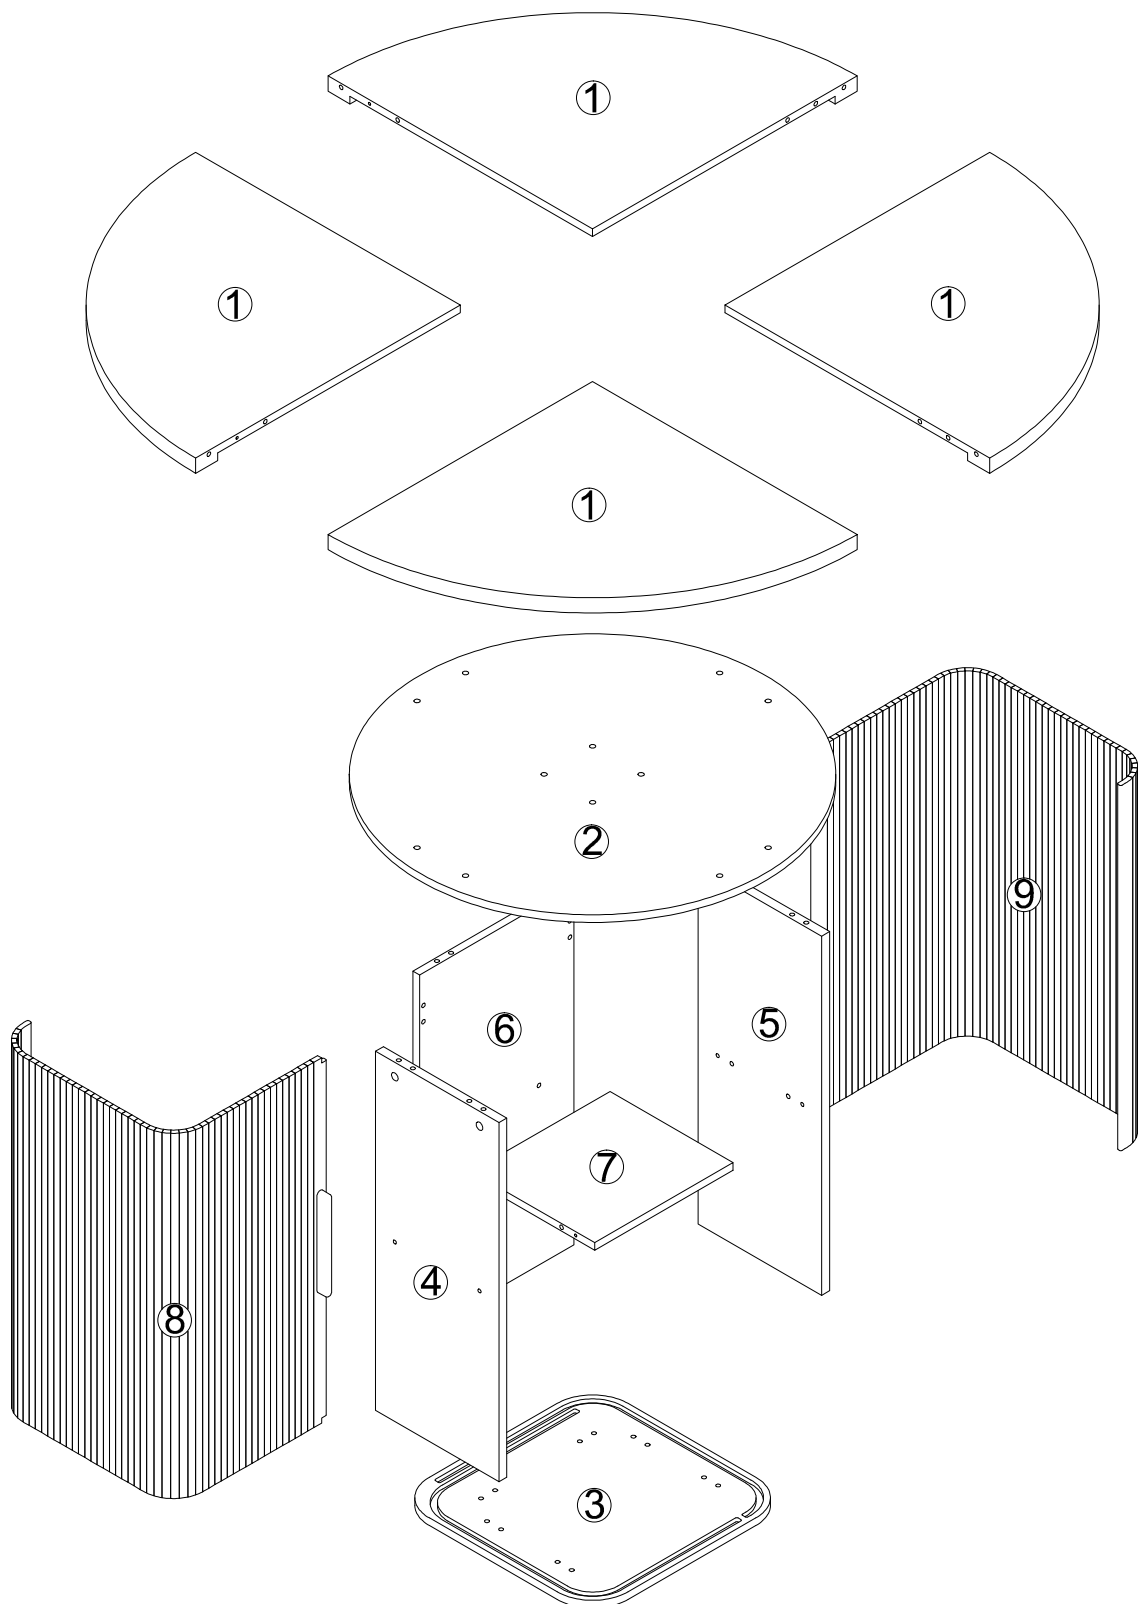


STEP 1

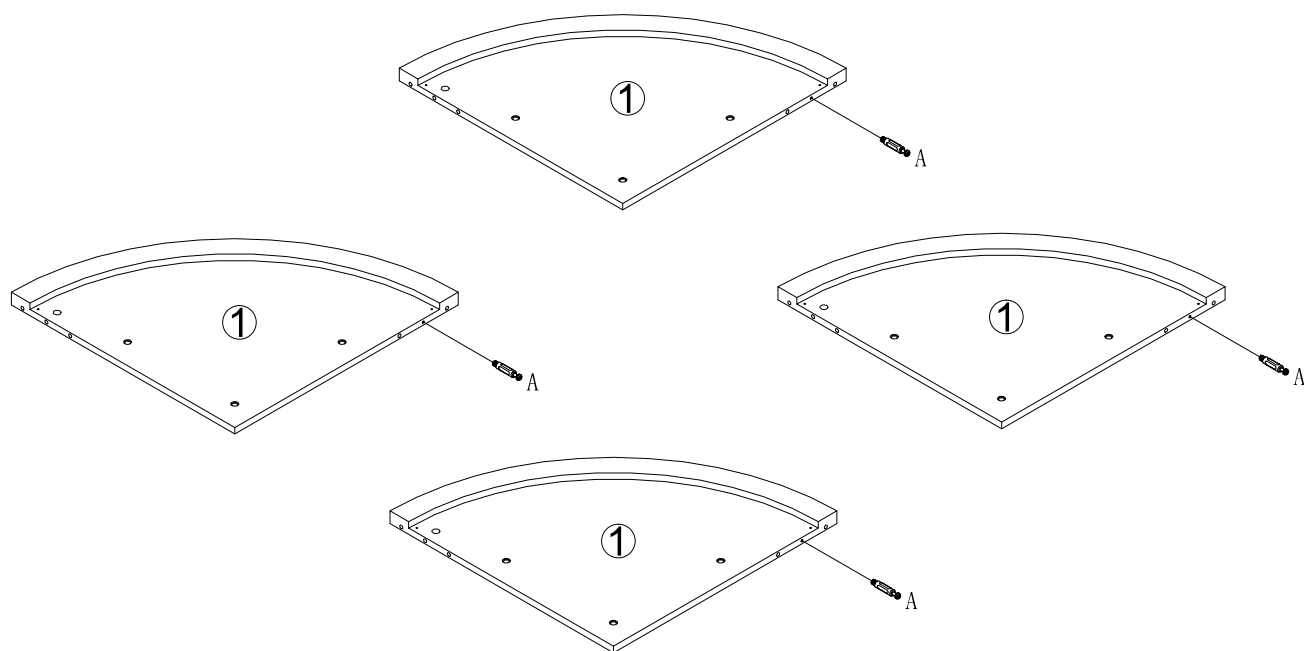

No. A
Quantity: 4 Pcs
8*28 mm




STEP 2

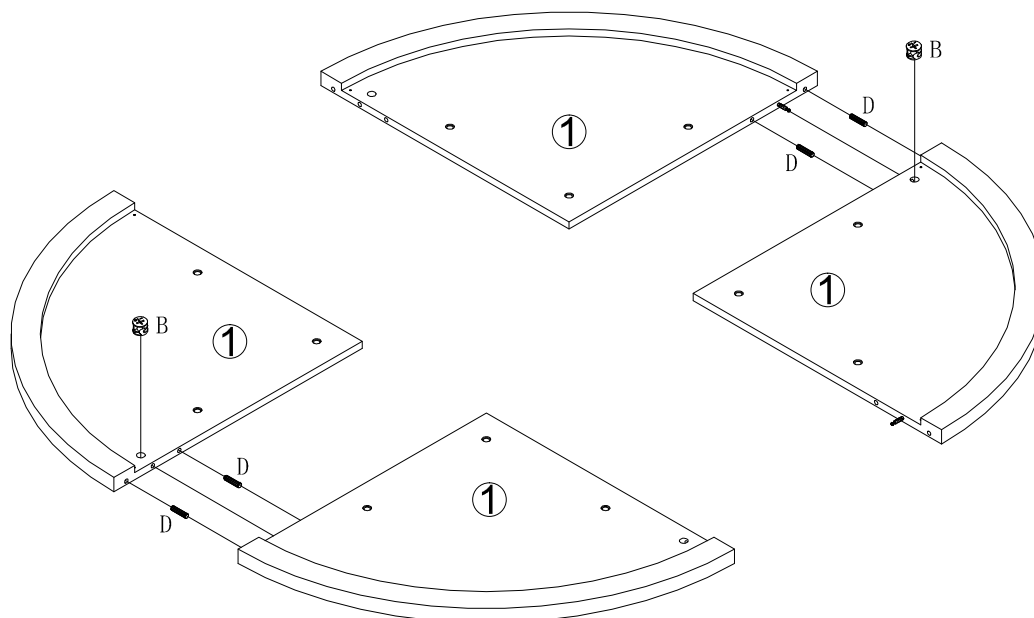


No. B
Quantity: 2 Pcs
Ø15



No. D
Quantity: 4 Pcs
8*40mm




STEP 3

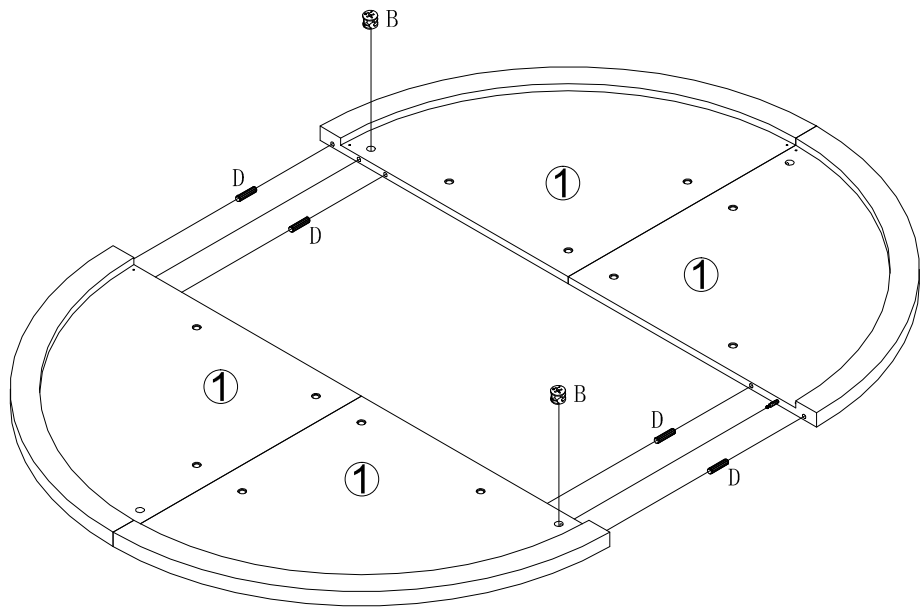


No. B
Quantity: 2 Pcs
Ø15



No. D
Quantity: 4 Pcs
8*40mm



STEP 4

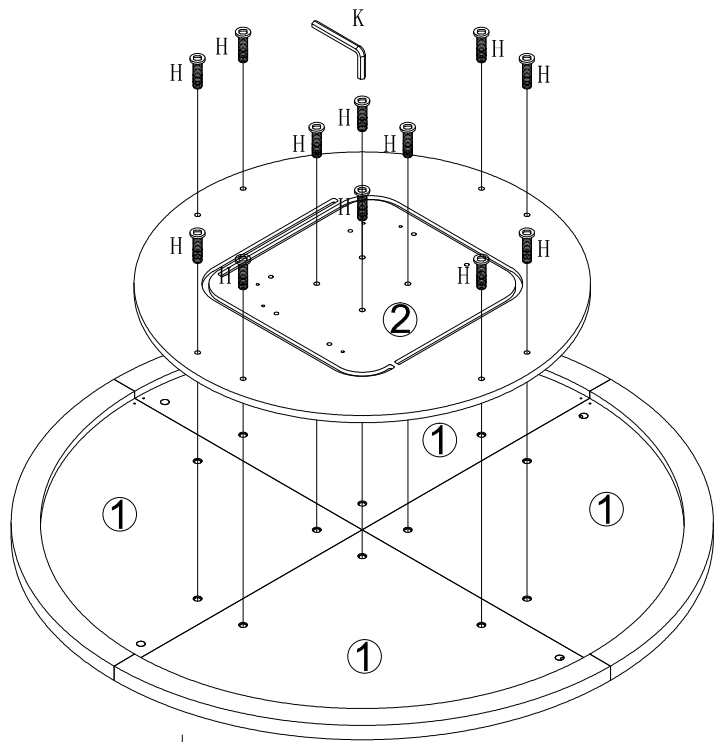


No. H
Quantity: 12 Pcs
M8*25mm



No. K
Quantity: 1 Pcs
5#



STEP 5

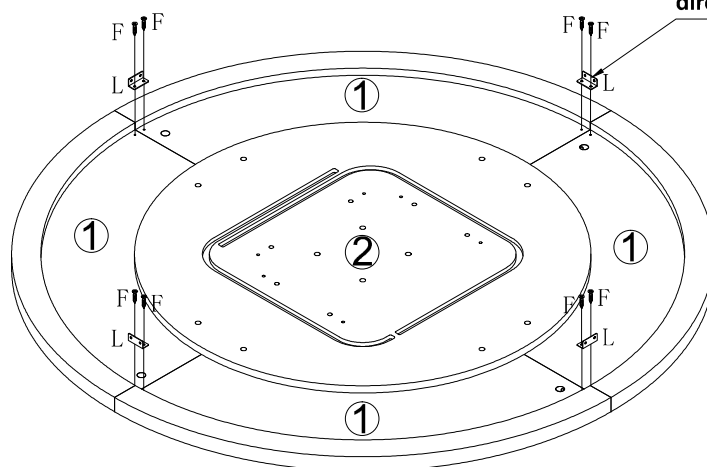


The L-shaped connector is first tightened at the front position with guide holes, and the side without guide holes can be directly secured with screws.


No. F
Quantity: 8 Pcs
M3.5*14mm



No. L
Quantity: 4 Pcs



STEP 6

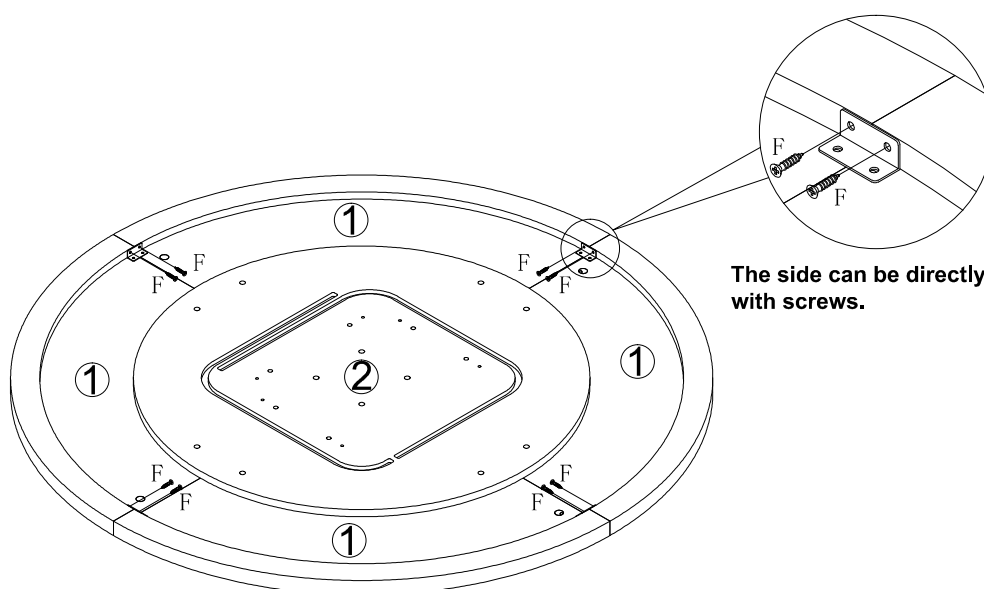


The side can be directly fixed with screws.

No. F
Quantity: 8 Pcs
M3.5*14mm




STEP 7

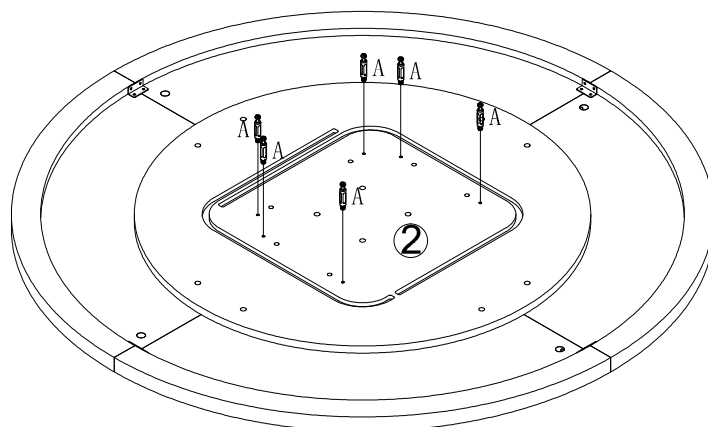

No. A
Quantity: 6 Pcs
8*28 mm




STEP 8

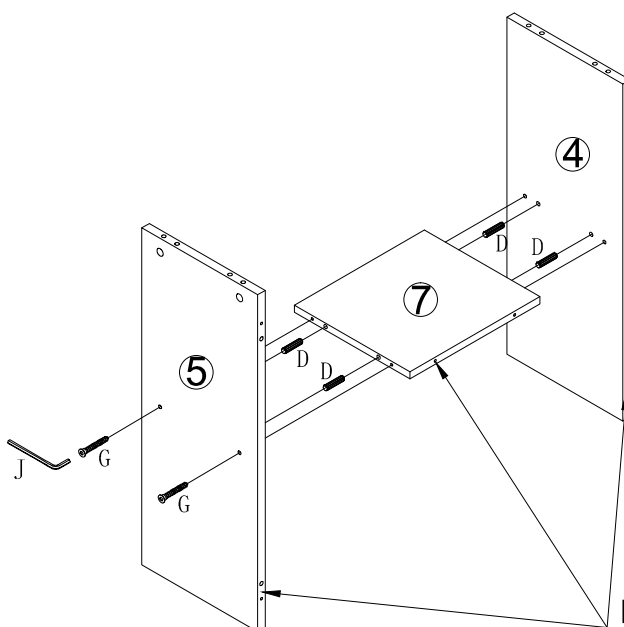

Note: The holes on the side must be kept on the same side.

No. D
Quantity: 4 Pcs
8*40mm




No. G
Quantity: 4 Pcs
M6*40mm




No. J
Quantity: 1 Pcs
4#



STEP 9

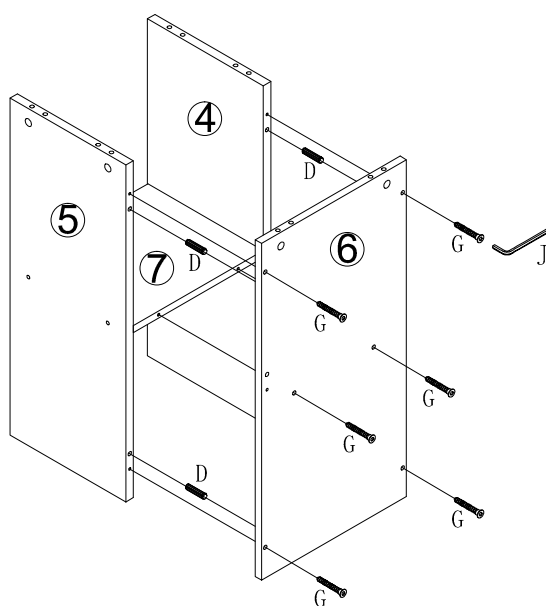

No. D
Quantity: 4 Pcs
8*40mm




No. G
Quantity: 6 Pcs
M6*40mm



No. J
Quantity: 1 Pcs
4#




STEP 10

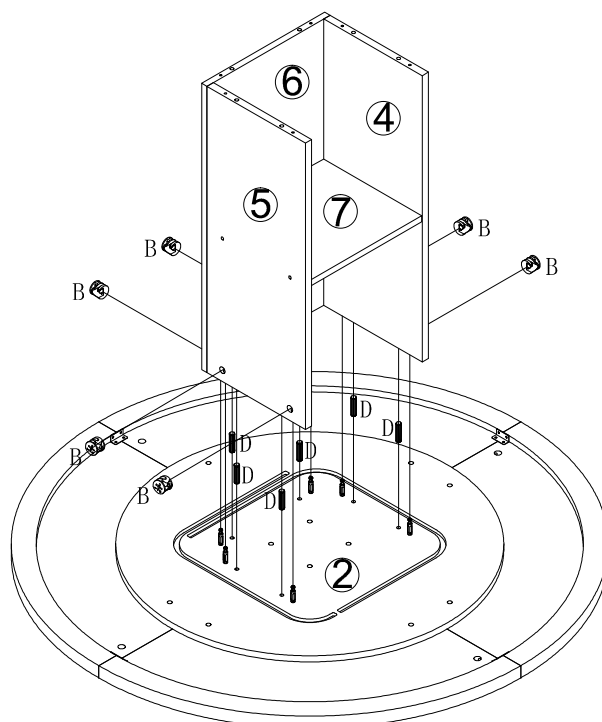

No. B
Quantity: 6 Pcs
Ø15




No. D
Quantity: 6 Pcs
8*40mm



STEP 11

The side with the white cloth is on the inside.

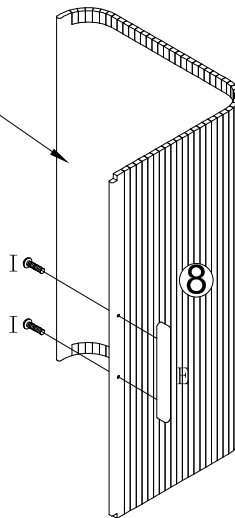


No. E
Quantity: 1 Pcs
200*20mm




No. I
Quantity: 2 Pcs
M4*14mm



STEP 12

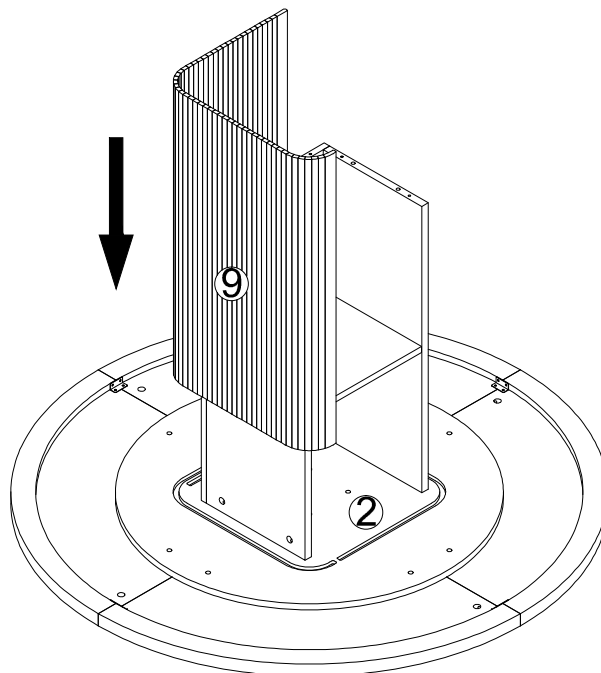


STEP 13

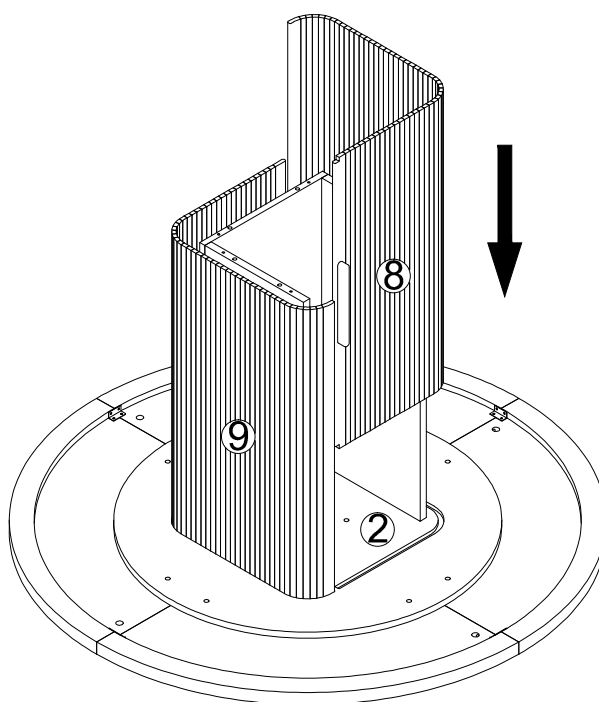


STEP 14

Note: When assembling here, first fix the screws but do not tighten them, first try whether the rolling door can be pushed and pulled smoothly, it cannot be pushed and pulled, you can gently pat it by hand, and then fix the screws after ensuring that the rolling door can be pushed and pulled smoothly.

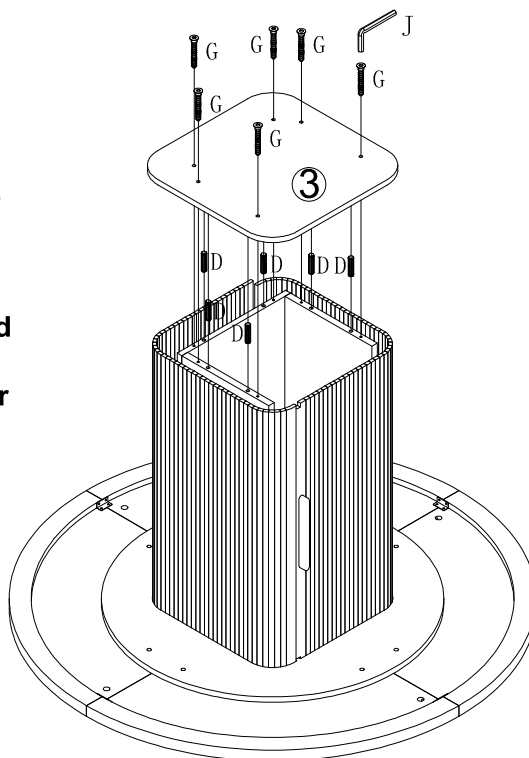

No. D
Quantity: 6 Pcs
8*40mm




No. G
Quantity: 6 Pcs
M6*40mm



No. J
Quantity: 1 Pcs
4#




STEP 15

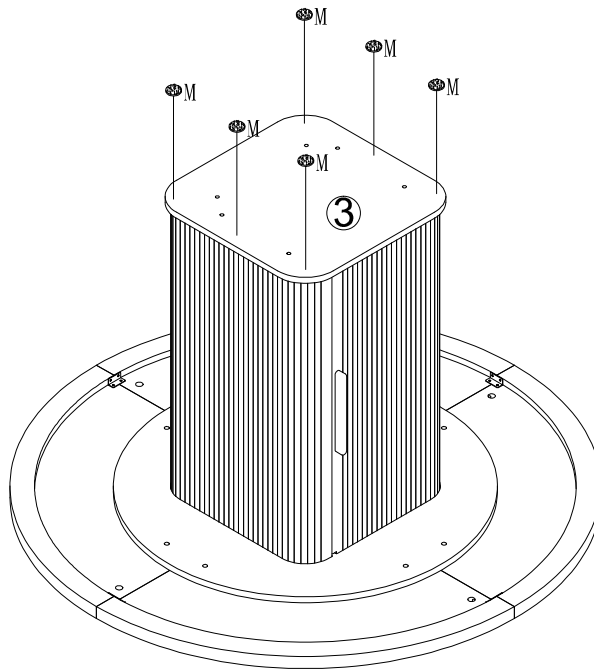

No. M
Quantity: 6 Pcs
Ø20



STEP 16

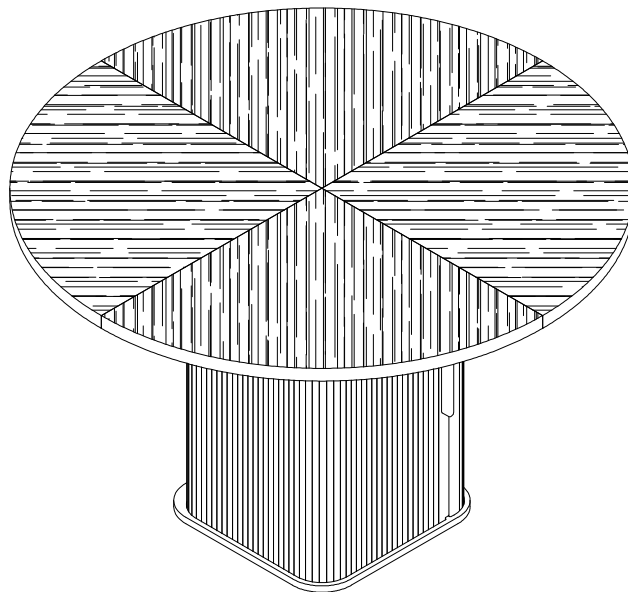

Attention Please

After the sliding door is installed, it may be difficult to open and close. After pushing it repeatedly, it will become smoother.