


10'×12' Metal Patio Gazebo

ASSEMBLY MANUAL

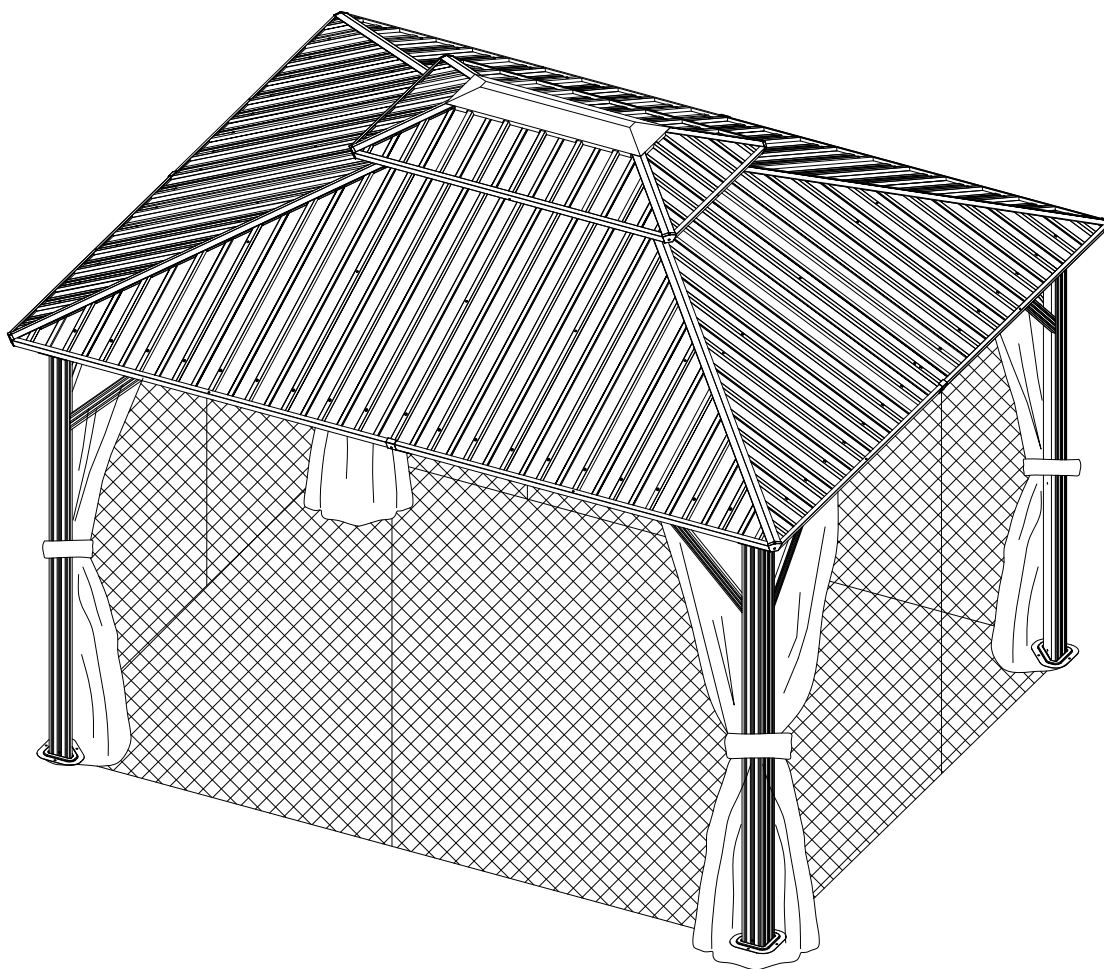

MODEL# : LGMF1596

Missing part? Damaged? Contact us via email at
service@domioutdoorliving.com

www.domioutdoorliving.com

© Copyright 2022–2024 domi LLC. | All Rights Reserved.

Pre-assembly



1. Two or more people are required for assembly.



2. You will need one or more stepladders.



3. Wearing protective gloves is recommended.



4. You may need a safety hat.



5. Please use a Phillips screw driver.



6. For ease of construction, you may need a drill.



7. You may need a safety goggle.



8. Do not fully tighten screws prior to complete assembly.

Warning & Attention


-Try to assemble this product on the flat ground, otherwise it is difficult to carry out;

-It would be much easier to assemble the product with three or more people;

-After assembly, please check whether all screws are tightened, to prevent parts from falling apart.



▲ Use bolts to secure the frame to the ground to against the strong wind.

1





×12

If the deck is hard wood and the depth of it is over 3 inch, you can use **5/16 in. ×4 in. Structural Wood Screw** to mount the gazebo.

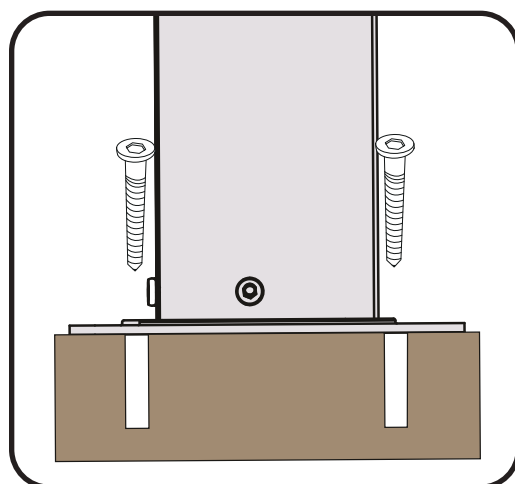
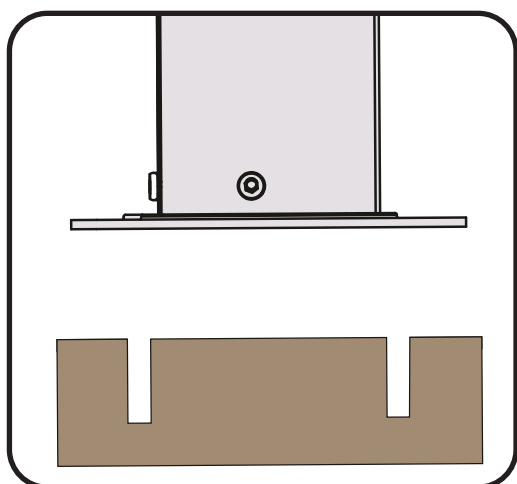


2

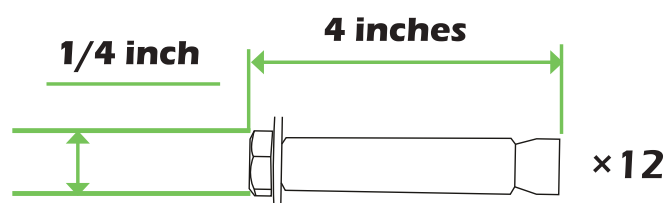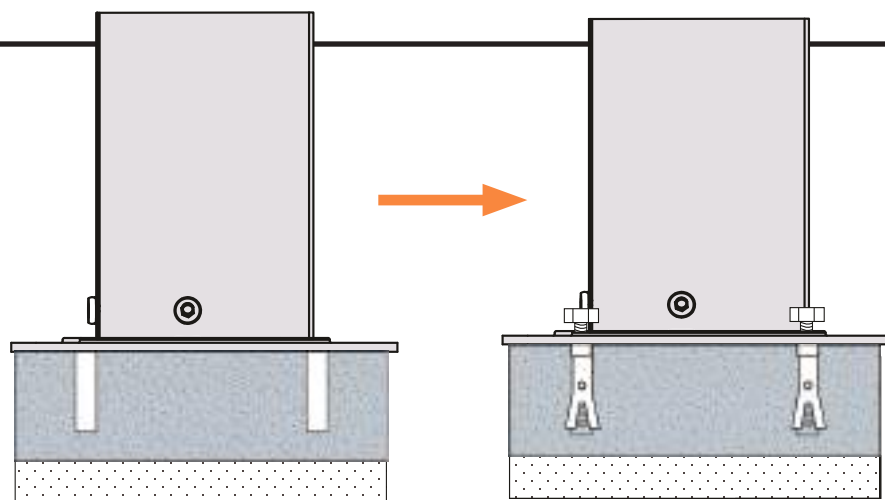


If the ground is concreted and the depth of it is over 3 inch, you can use 1/4 inch expansion bolts to mount the gazebo

3

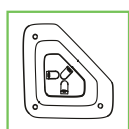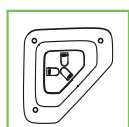


Or you can make a concrete footing for gazebo, **15×15×15 inches** is recommended. use expansion bolts to mount the pergola like ② shows.

IMPORTANT:
Anchor is not recommended

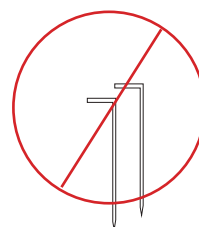



A 4x Pole



C 2x Beam



C1 2x Beam



D 2x Beam




D1 2x Beam




E 4x Corner Roof Bar



E1 4x Corner Roof Bar Connector



E2 4x Roof Bar




F 4x Solidfying Bar



G 4x Solidfying Bar




H 2x Finishing Bar



H1 2x Finishing Bar



J 2x Finishing Bar



J1 2x Finishing Bar



K 2x Finishing Bar




K1 2x Finishing Bar




(K2) 2x Finishing Bar




(K3) 2x Finishing Bar

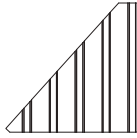


(L1) 2x Roof Panel

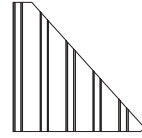


(L2) 2x Roof Panel

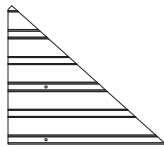


(M1) 2x Roof Panel

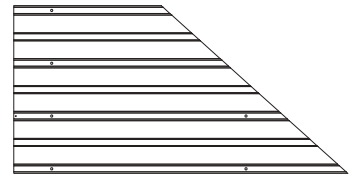


(M2) 2x Roof Panel

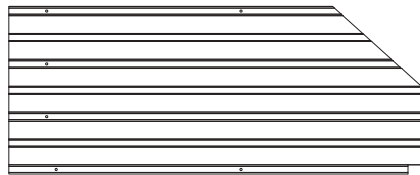


(M3) 2x Roof Panel

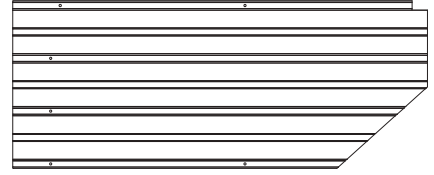

(M4) 2x Roof Panel

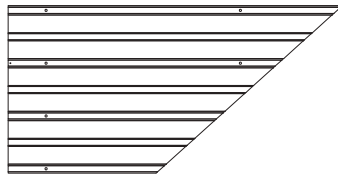


(M5) 2x Roof Panel

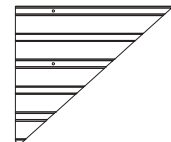


(M6) 2x Roof Panel



(N1) 2x Roof Panel

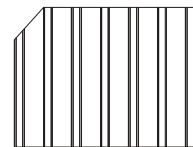


(N2) 2x Roof Panel

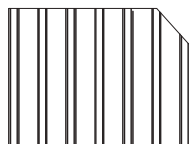


(N3) 2x Roof Panel




(N4) 2x Roof Panel



(P1) 2x Roof Panel

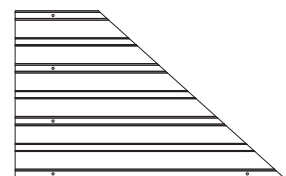

(P2) 2x Roof Panel

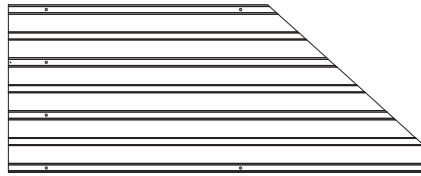


P3 2x Roof Panel




P4 2x Roof Panel




P5 2x Roof Panel

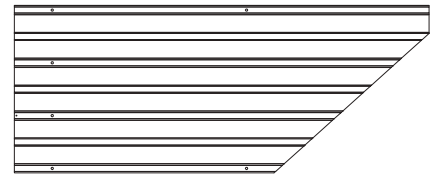


P6 2x Roof Panel

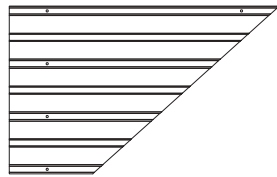


P7 2x Roof Panel




P8 2x Roof Panel




Q 2x Net Frame



Q1 2x Net Frame



Q2 2x Net Frame




B 4x Base




B1 8x Joint Cover




B2 8x Joint Cover

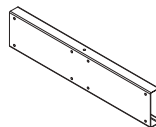


C2 4x Union Bar

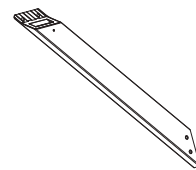


R 4x Corner Solidifying Bar

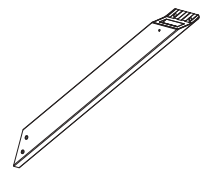

R1 4x Corner Solidifying Bar

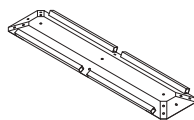


S 1x Inside Roof Connector

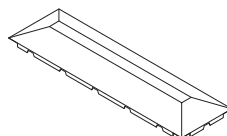


S1 1x Outside Roof Connector




T 3x J-Hook



T1 4x Bracket




U 4x Bracket








U1 4x Bracket




U2 4x Bracket



U3 4x Joint Cover

			
V 104x Hook	W 88x Spacer	X 4x Bracket	X1 4x Corner Cover
			
X2 4x Finishing End	X3 12x Finishing End	Y 4x Solid Sidewall (need to buy extra)	Y1 4x Mosquito Sidewall
			
Z 60x Plastic Bracket	Z1 2x Plastic Bracket	Z2 2x Plastic Bracket	Z3 4x Plastic Bracket
			
Z4 4x Plastic Bracket	S6 S4 1 1x	ST6.3x15 2 12x	ST5x16 3 24x
			
M6x15 4 32x	M6 5 92x	M5x12 6 16x	M6x10 7 20x
			
M6x16 8 188x	M6x25 9 8x	M6x28 10 64x	M6x50 12 16x

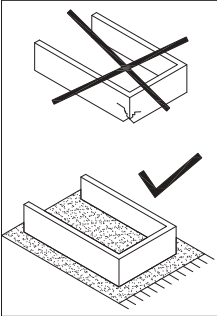



A 4x

B 4x











B1 8x

B2 8x
 S4
1 1x
 M5x12
6 16x
 M6x16
8 28x
6

X4

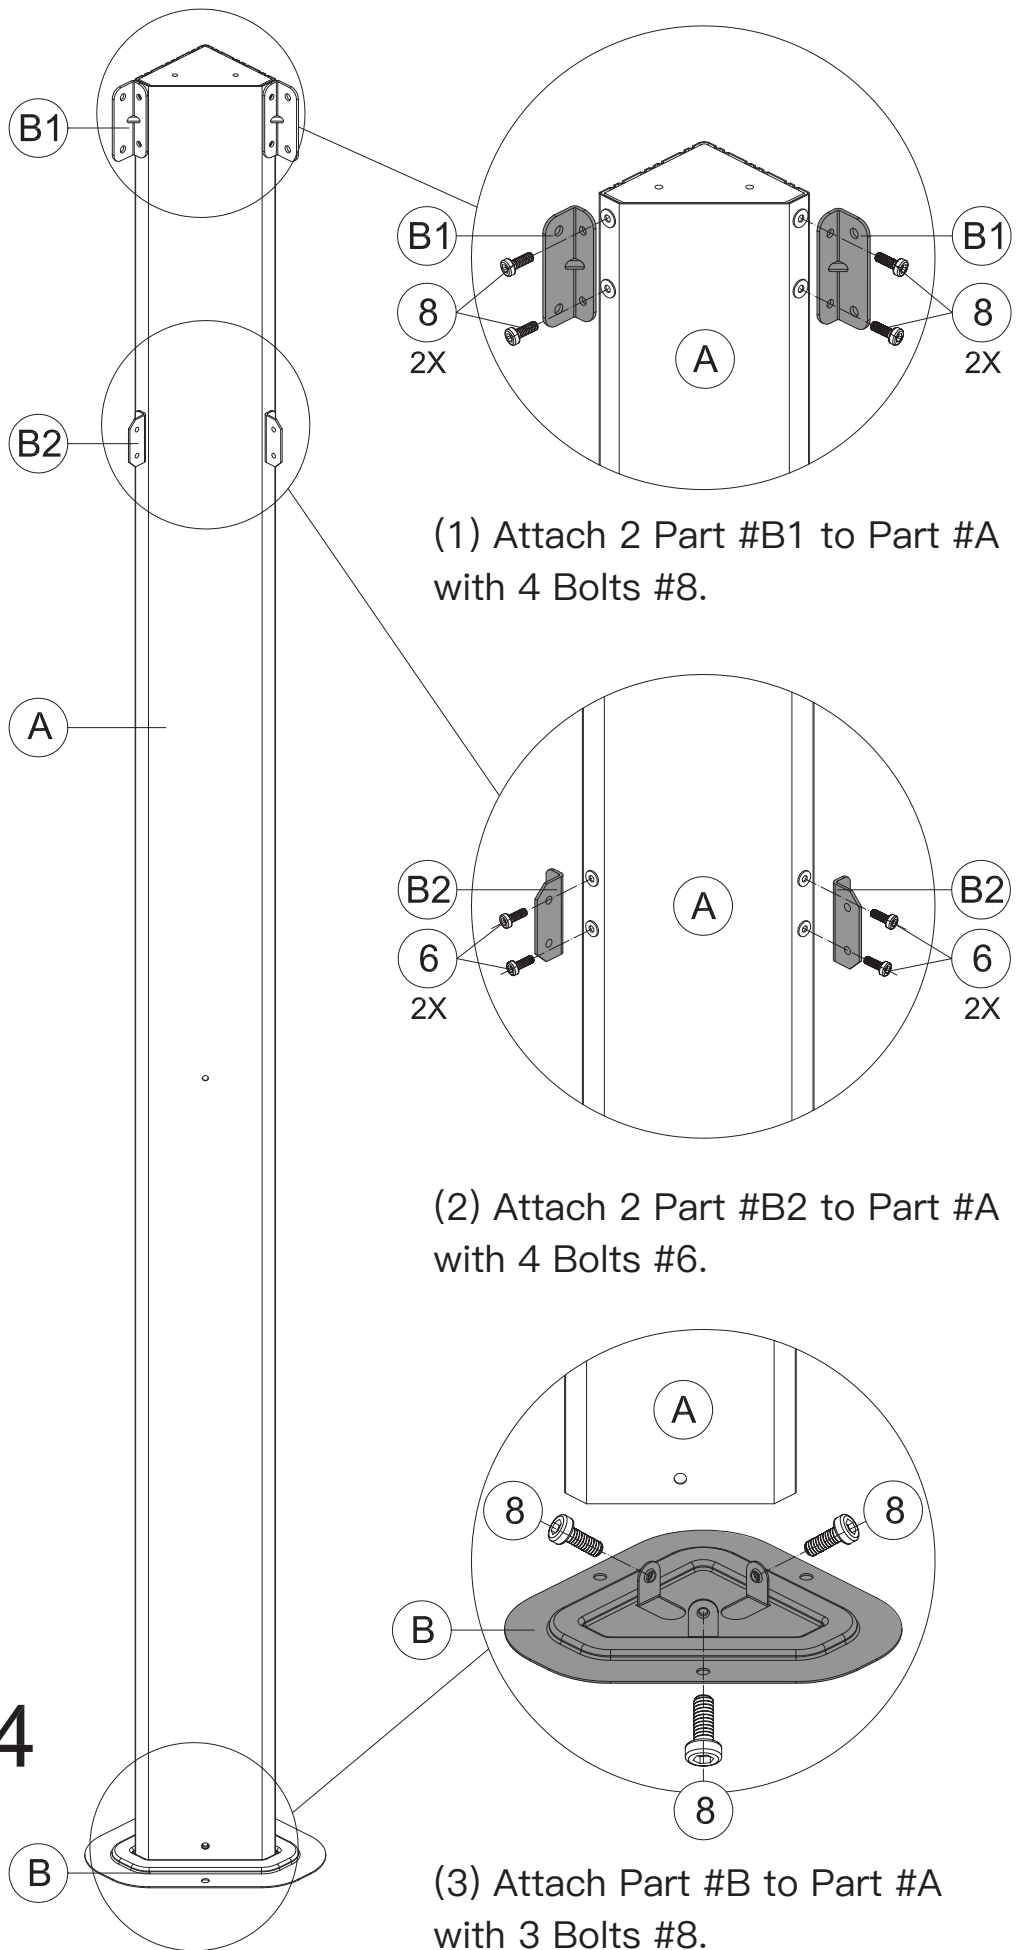

(4) Repeat the above procedures to assemble the other 3 Part #A.

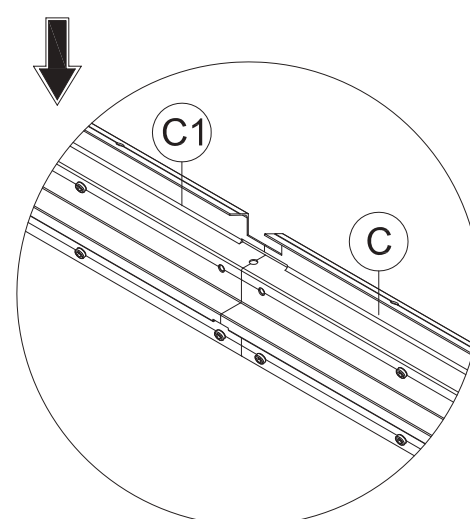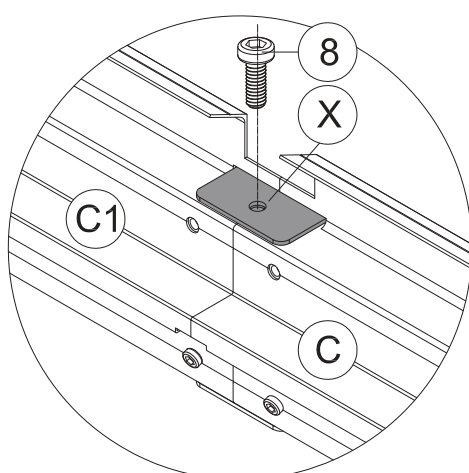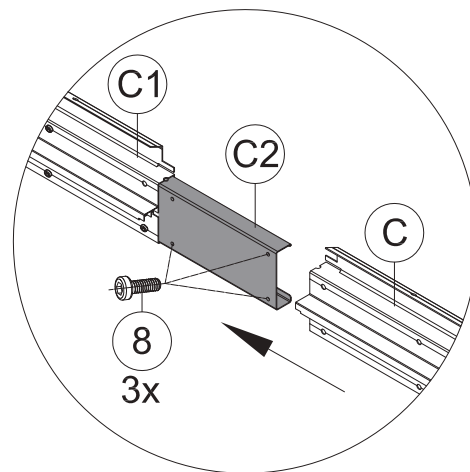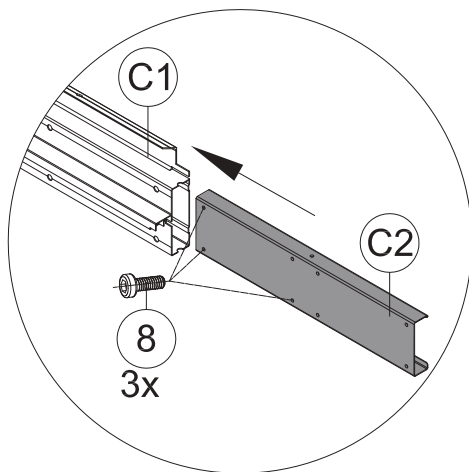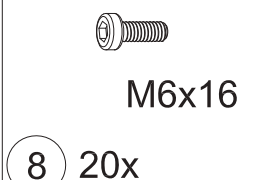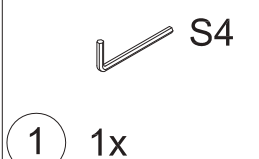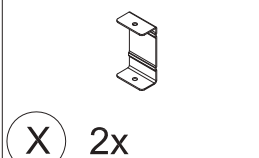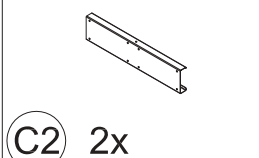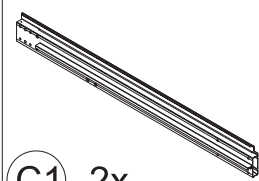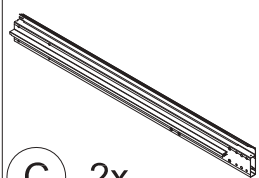





(4) Insert Part #X into the beam and secure with 1 Bolt #8.


(3) Connect Part #C1 and Part #C through Part #C2.

(5) Secure the bottom of Part #X and Part #C/C1 with 3 Bolts #8.


X2

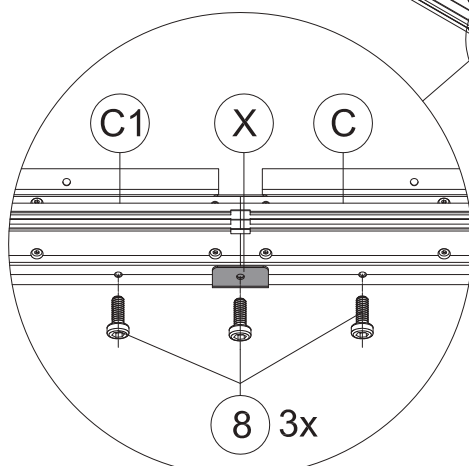

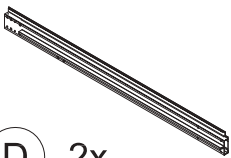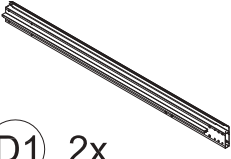
	
D 2x	
	
D1 2x	
	
C2 2x	
	
X 2x	
	
1 1x	
	
M6x16	
8 20x	
8	

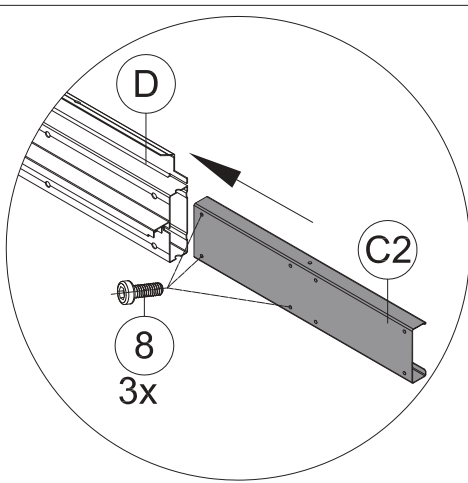


(1) Insert Part #C2 into Part #D, and secure with 3 Bolts #8.

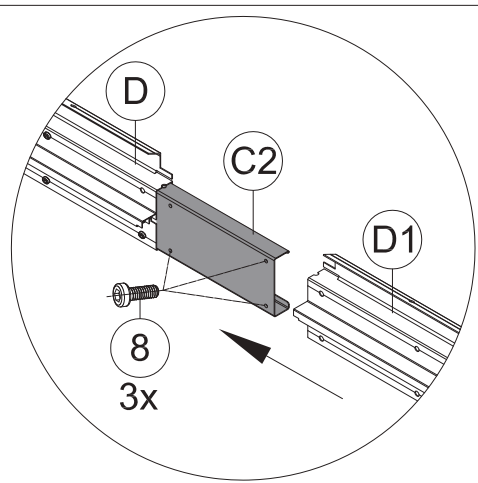


(2) Insert the other side of Part #C2 into Part #D1 and secure with 3 Bolts #8.

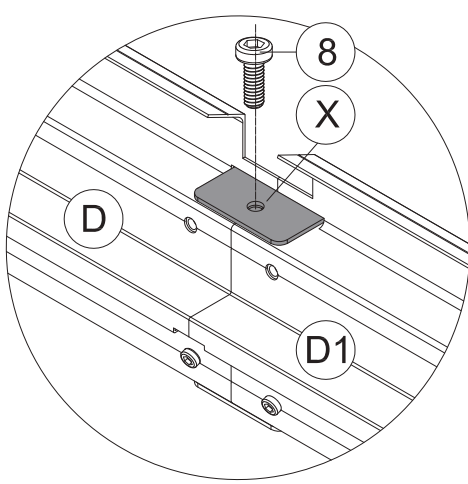

(4) Insert Part #X into the beam and secure with 1 Bolt #8.

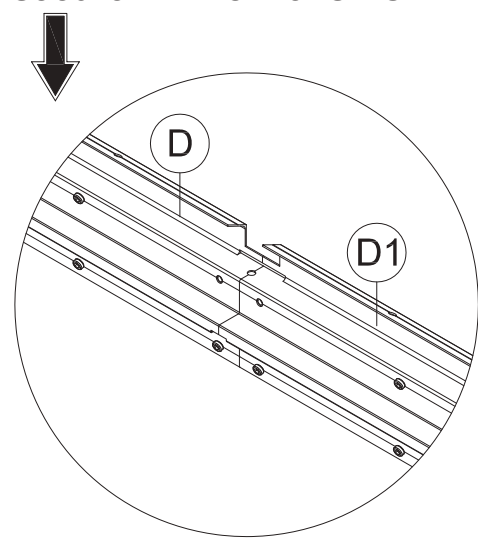

(3) Connect Part #D and Part #D1 through Part #C2.

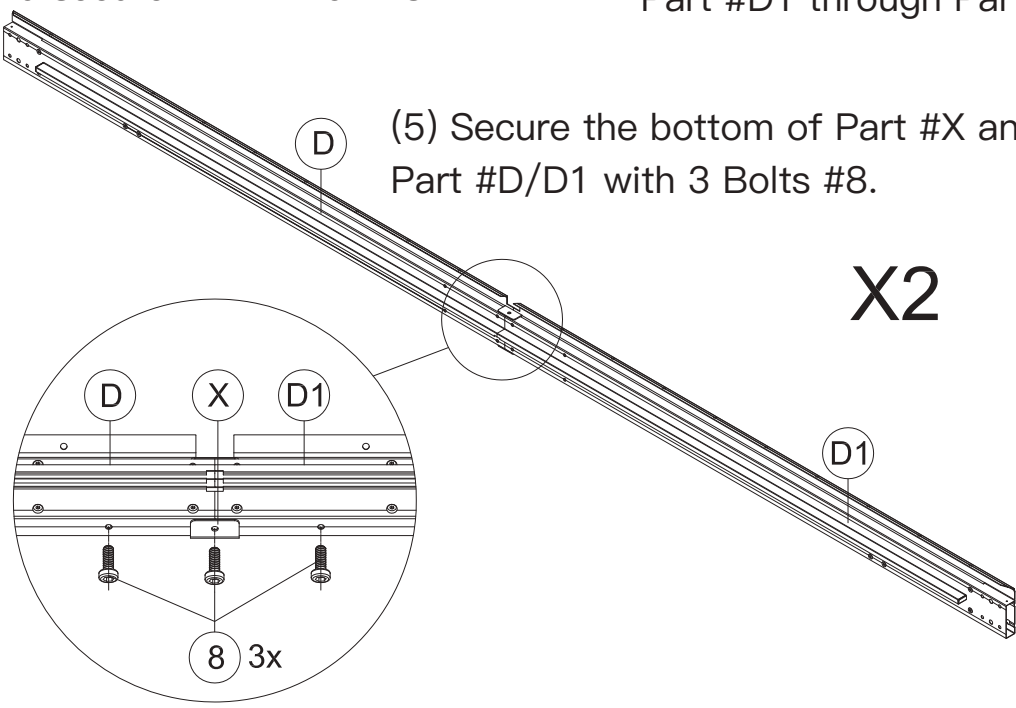


(5) Secure the bottom of Part #X and Part #D/D1 with 3 Bolts #8.

(6) Repeat the above procedures to assemble the other Part #D and Part #D1.




1 1x



M6x15

4 32x

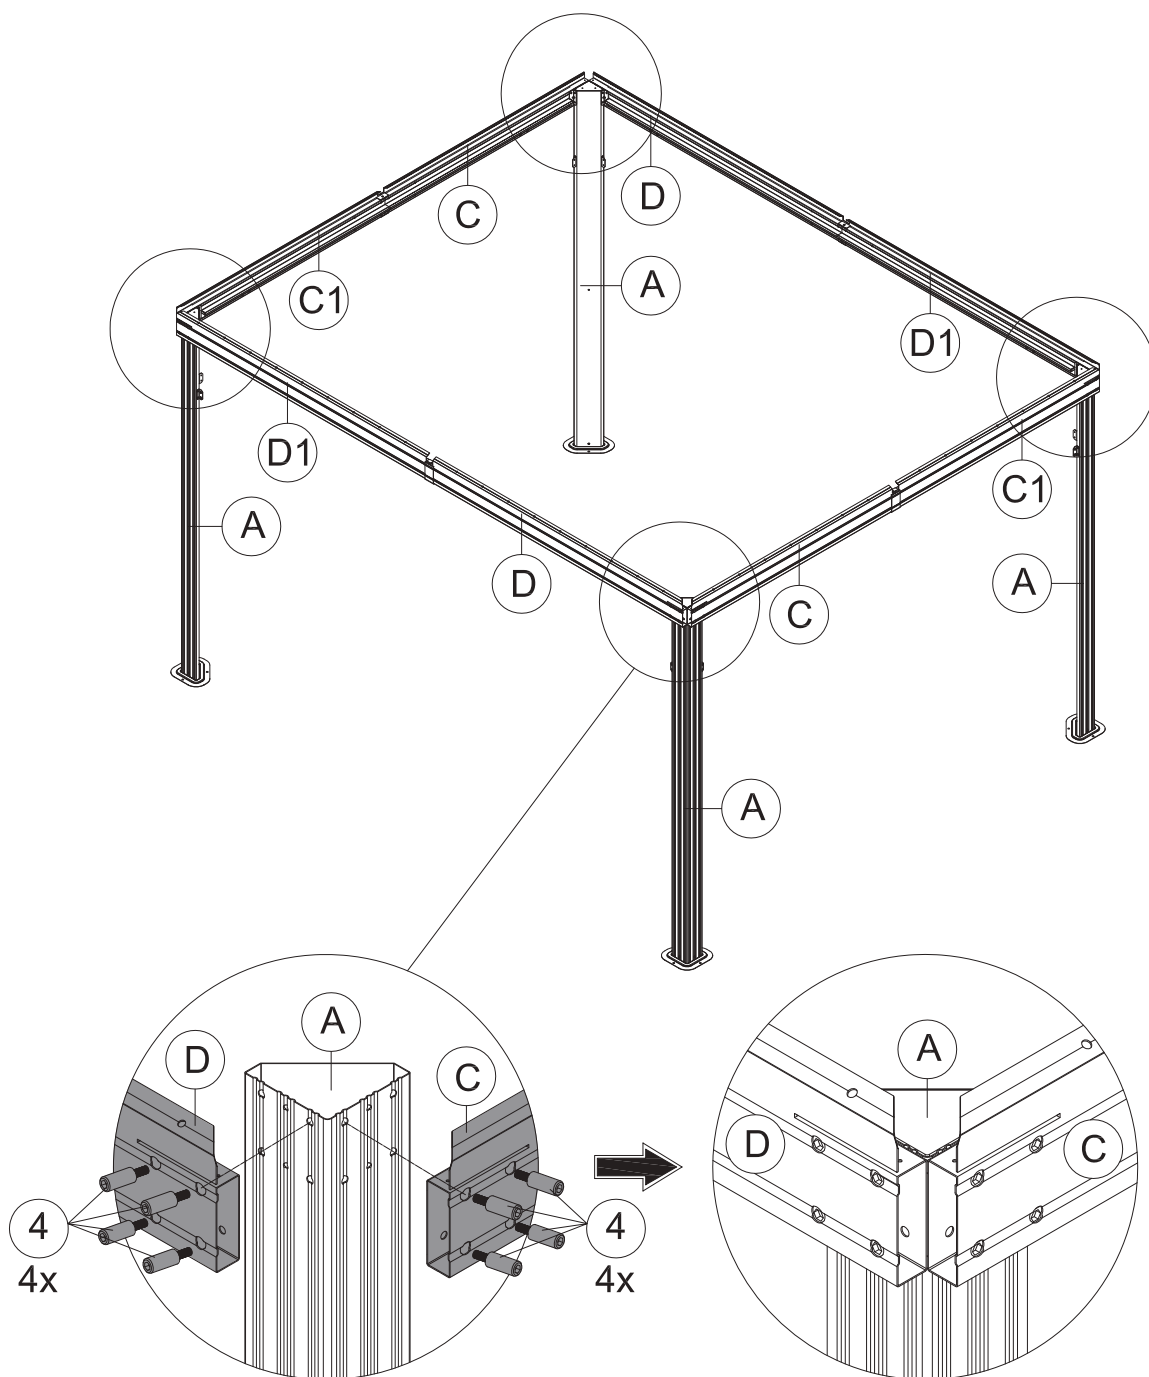

(1) Connect Part #C/C1 and #D/D1 to Part #A with 8 Bolts #4.
(From Outside)

(2) Repeat the above procedures to assemble the other 3 corners.

▲ Please don't tighten all bolts.

✓ S4


1 1x





M6x16

8 16x



(1) Connect Part #C/C1 and #D/D1 to Part #A with 4 Bolts #8.
(From Inside)

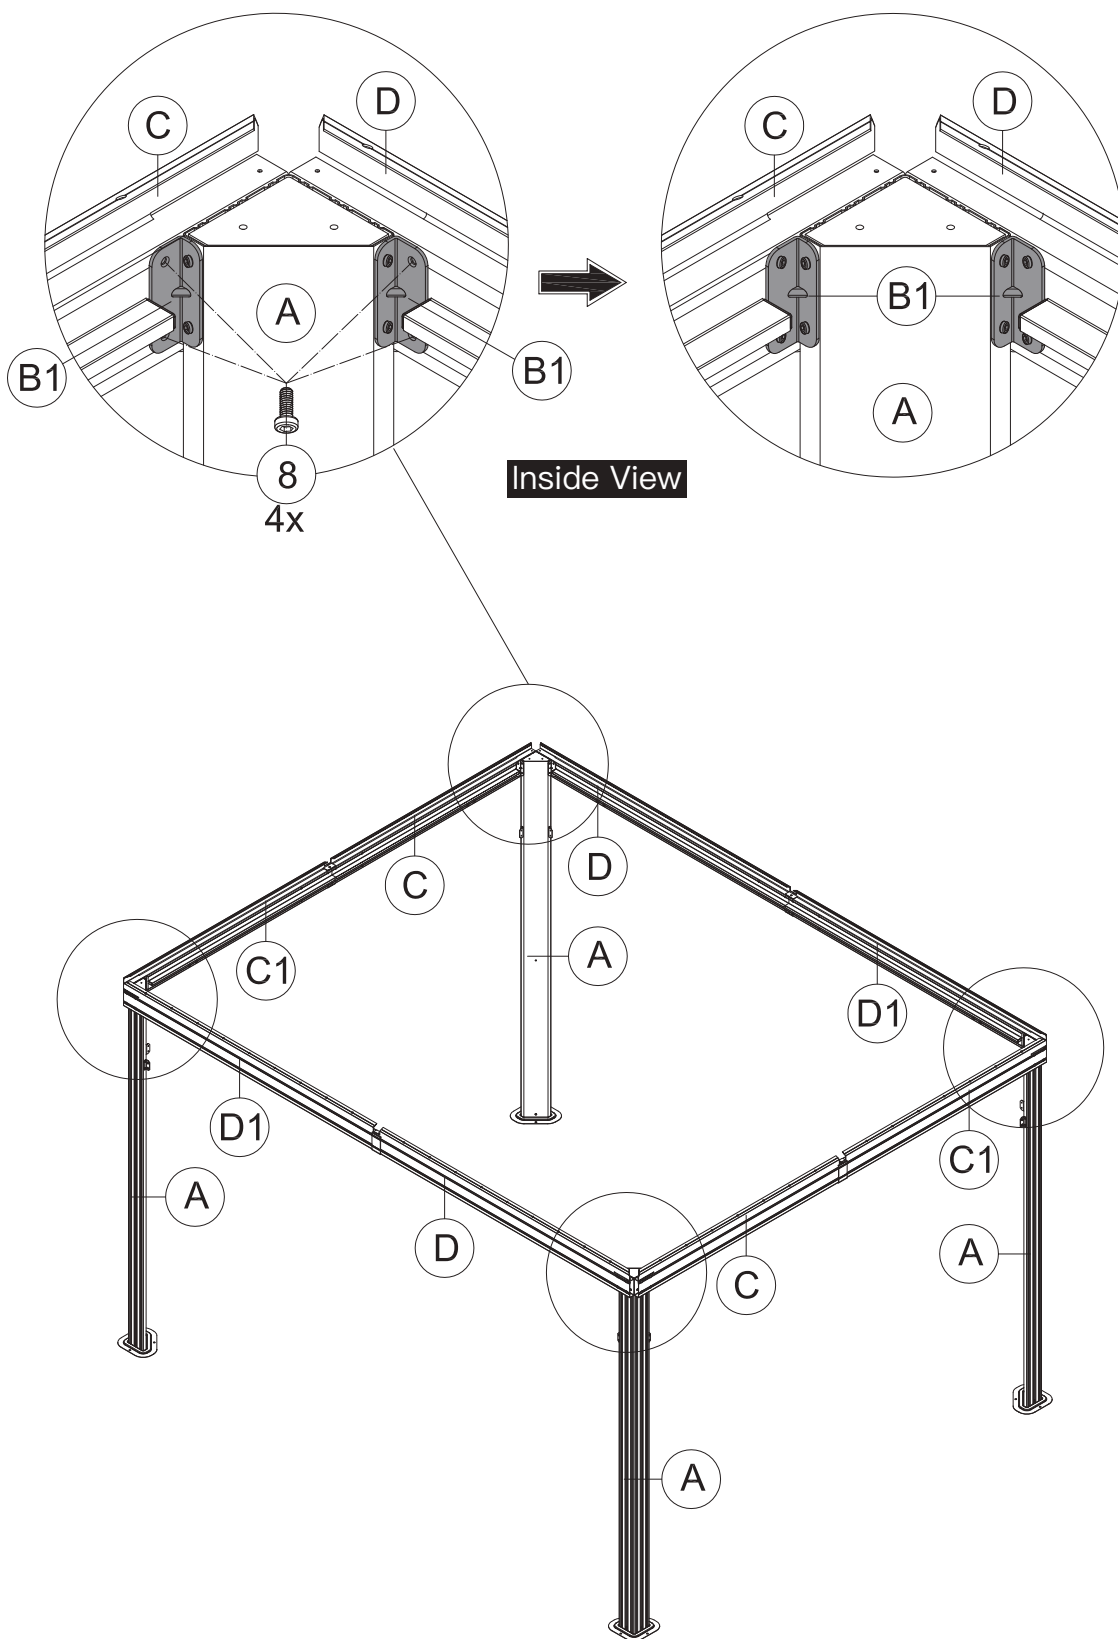


(2) Repeat the above procedures to assemble the other 3 corners.
▲ Please don't tighten all bolts.

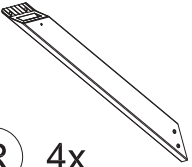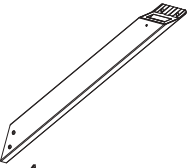-  (R) 4x
-  (R1) 4x
-  S4
-  1 1x
-  M6x16
-  8 32x

(1) Affix Part #R and Part #R1 to the frame with 8 Bolts #8.

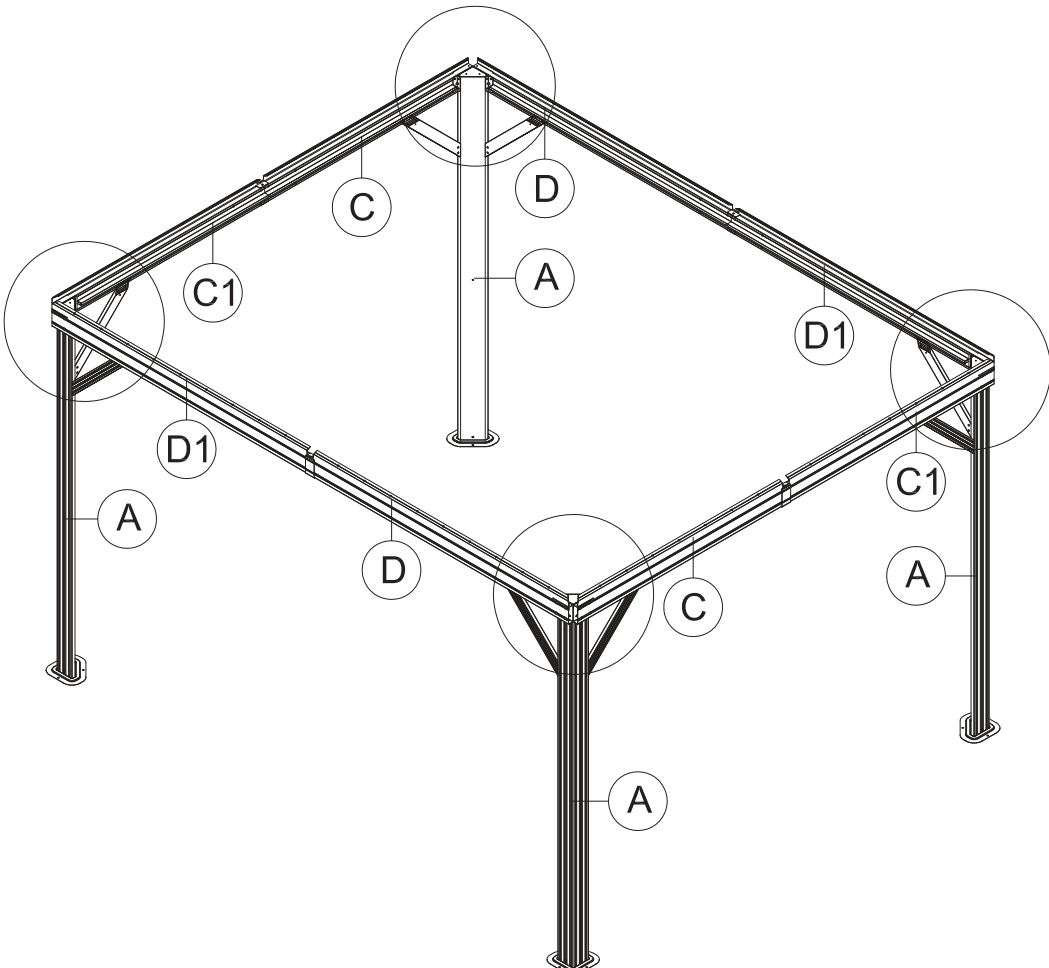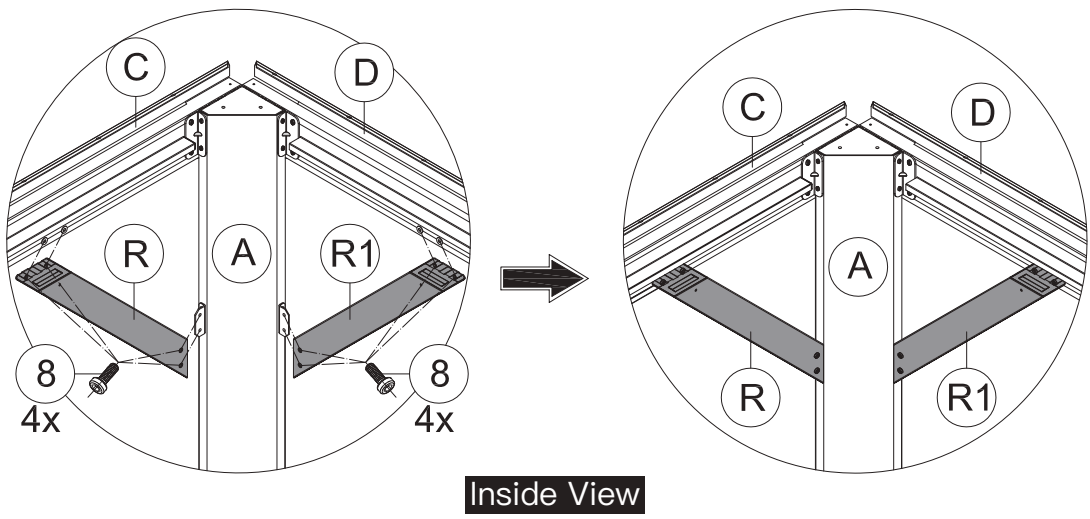

(2) Repeat the above procedures to assemble the other 3 corners.
 ▲ Please don't tighten all bolts.





X1 4x



ST5x16



3 16x

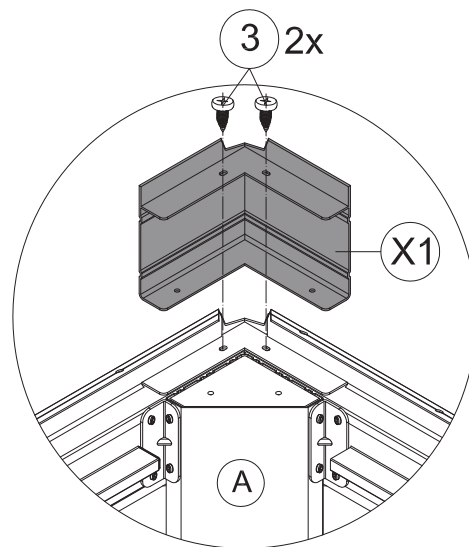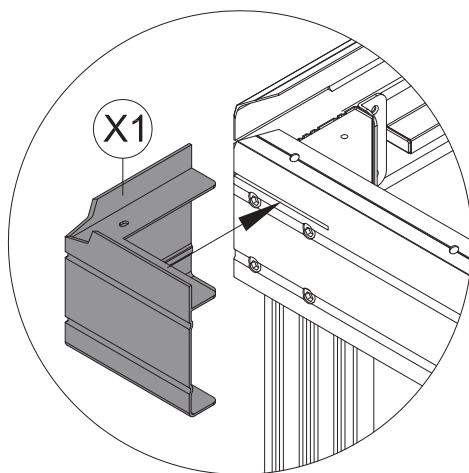


(1) Cover the corner with Part #X1. (2) Secure with 2 Self-tapping Screws #3. (from top to bottom)



(3) Secure with 2 Self-tapping Screws #3. (from bottom to top)

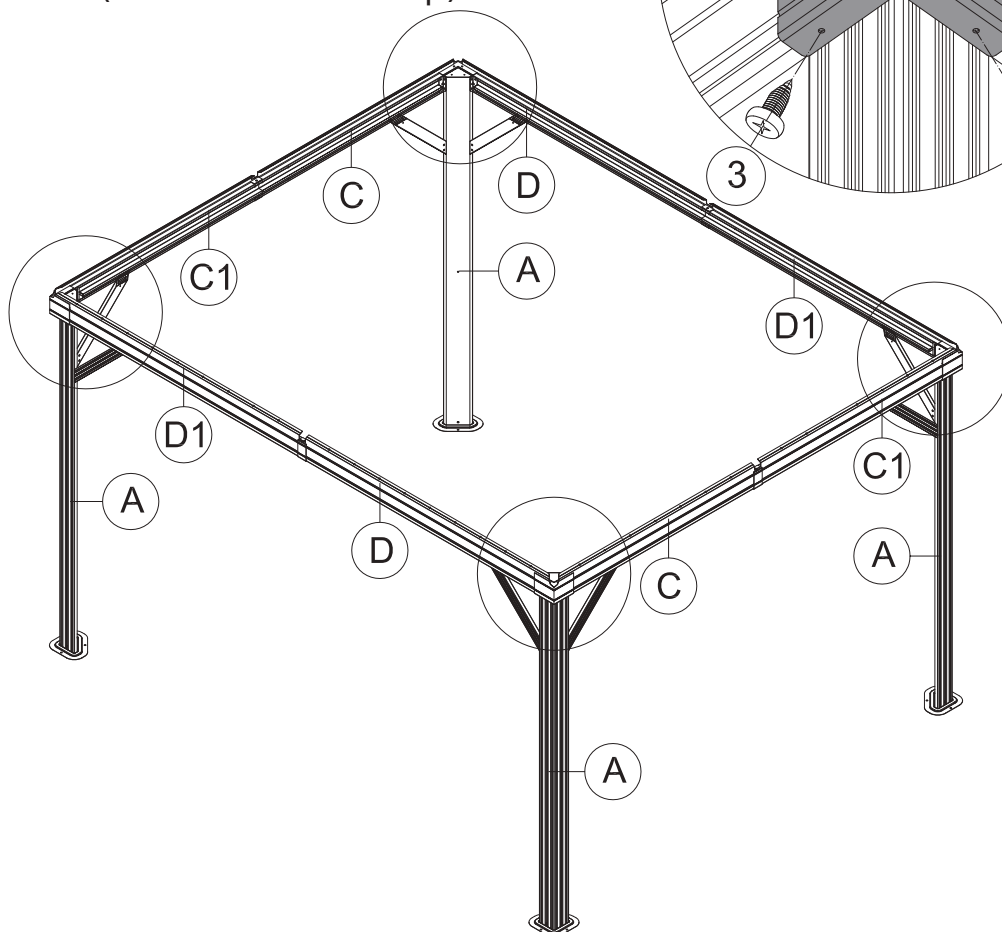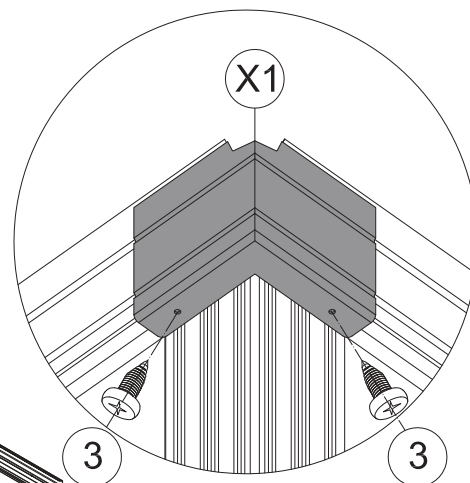


(4) Repeat the above procedures to assemble the other 3 corners.
▲ Tighten all bolts.

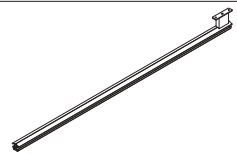

(E) 4x



(E1) 4x



(U) 4x



S4


(1) 1x




M6x16

(8) 12x

Assemble the 4 Corner Roof Bars:

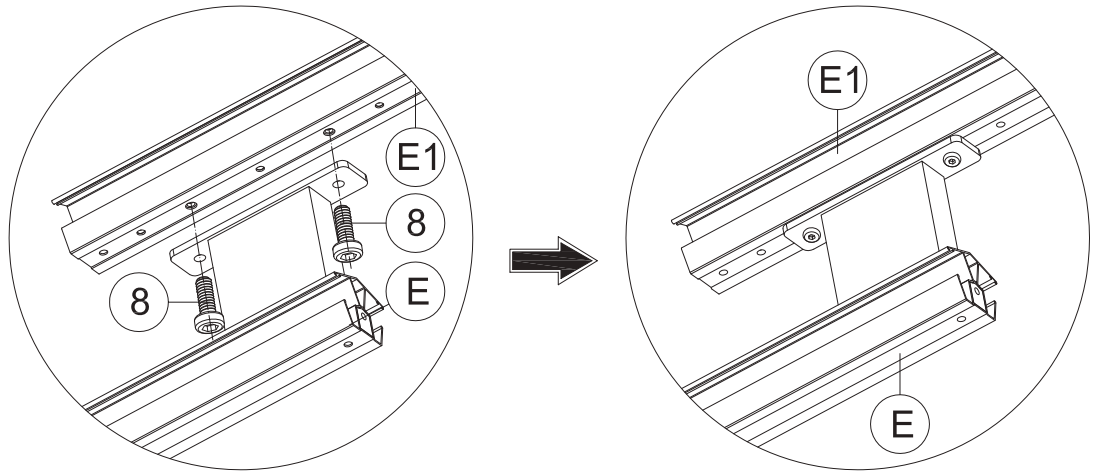


(1) Connect Part #E1 and Part #E with 2 Bolts #8 .

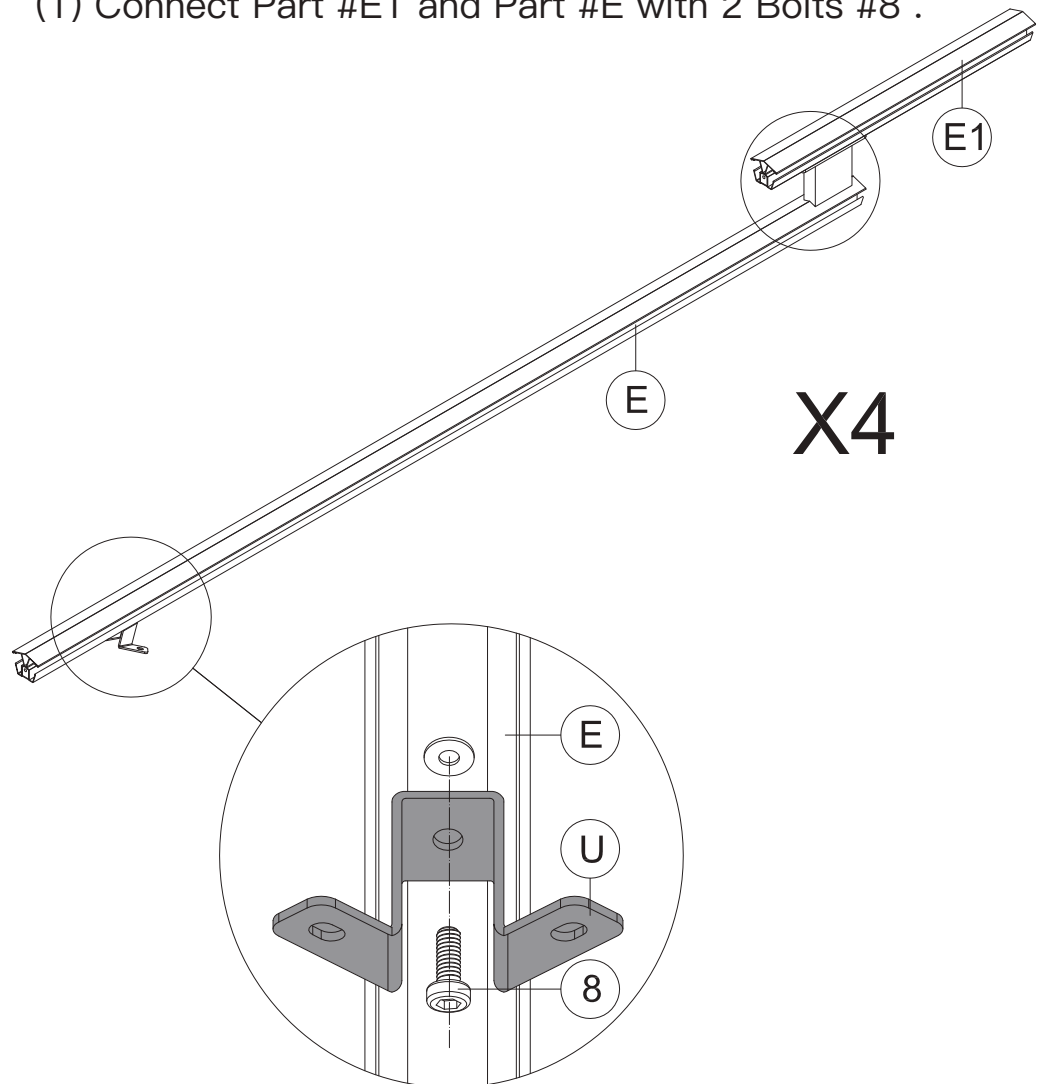

(2) Attach Part #U to Part #E with Bolt #8 .

(3) Repeat the above procedures to assemble the other 3 Corner Roof Bars.



(S) 1x



(1) 1x



M6x16


(8) 16x

Please have a freestanding ladder ready at the center of the gazebo.


(1) Place 4 Part #E1 on the 4 corners of Part #S.

Secure with 8 Bolts #8 (from bottom to top)

ATTENTION: You can also finish this step on the ground and then lift 4 corner roof bars and inside roof connector to the top together. (Need 2 people and 2 ladders)

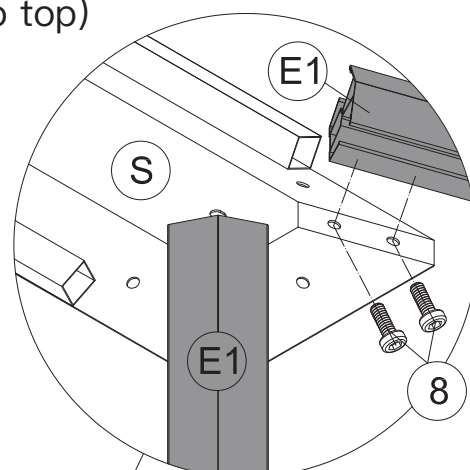


Outside View

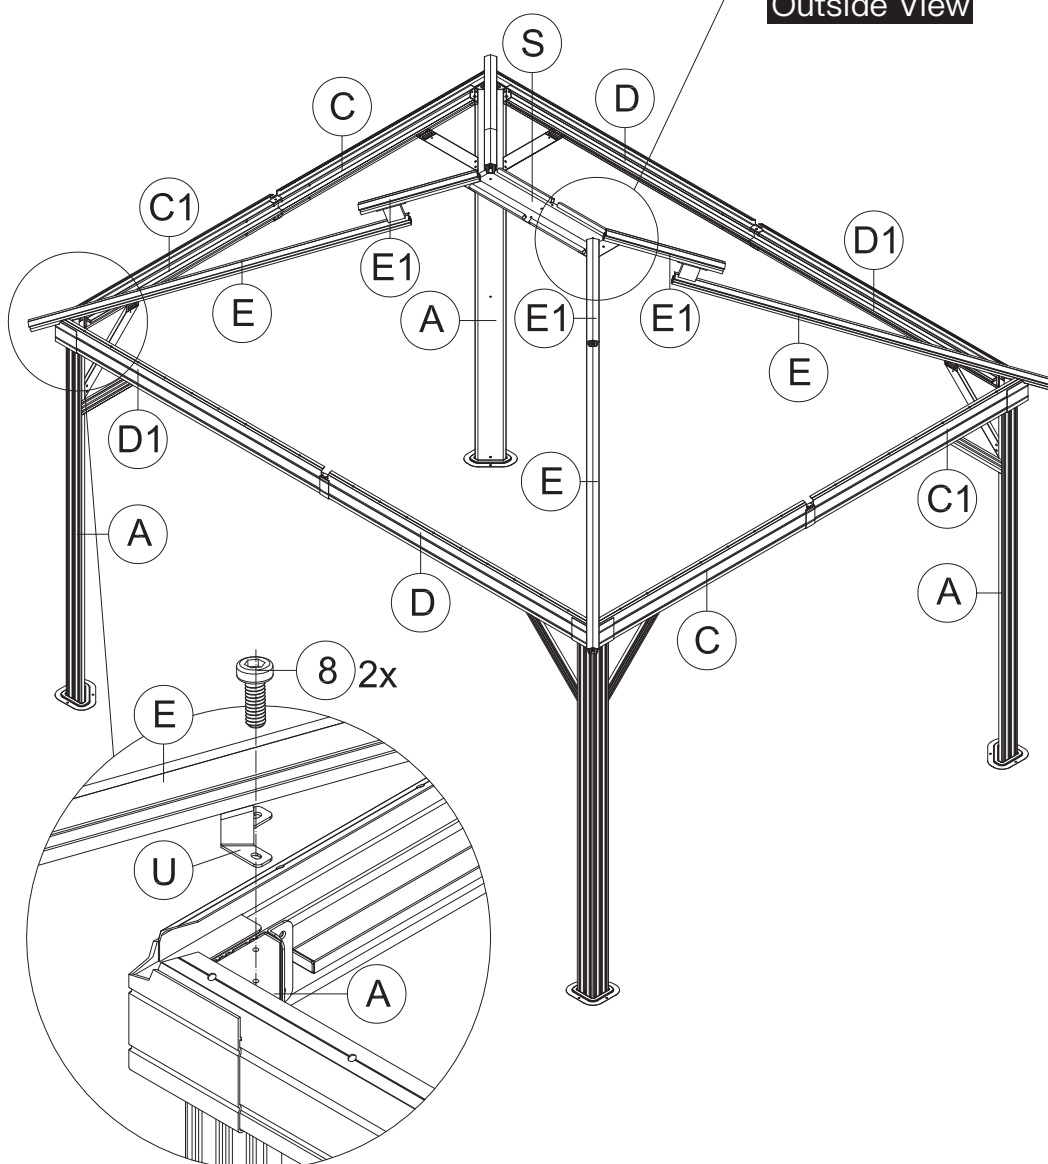

Outside View


(2) Place 4 Part #E on 4 Part #A; Secure with 8 Bolts #8.

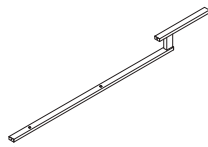
E2 4x

U1 4x

S4
1 1x

M6x10
7 4x

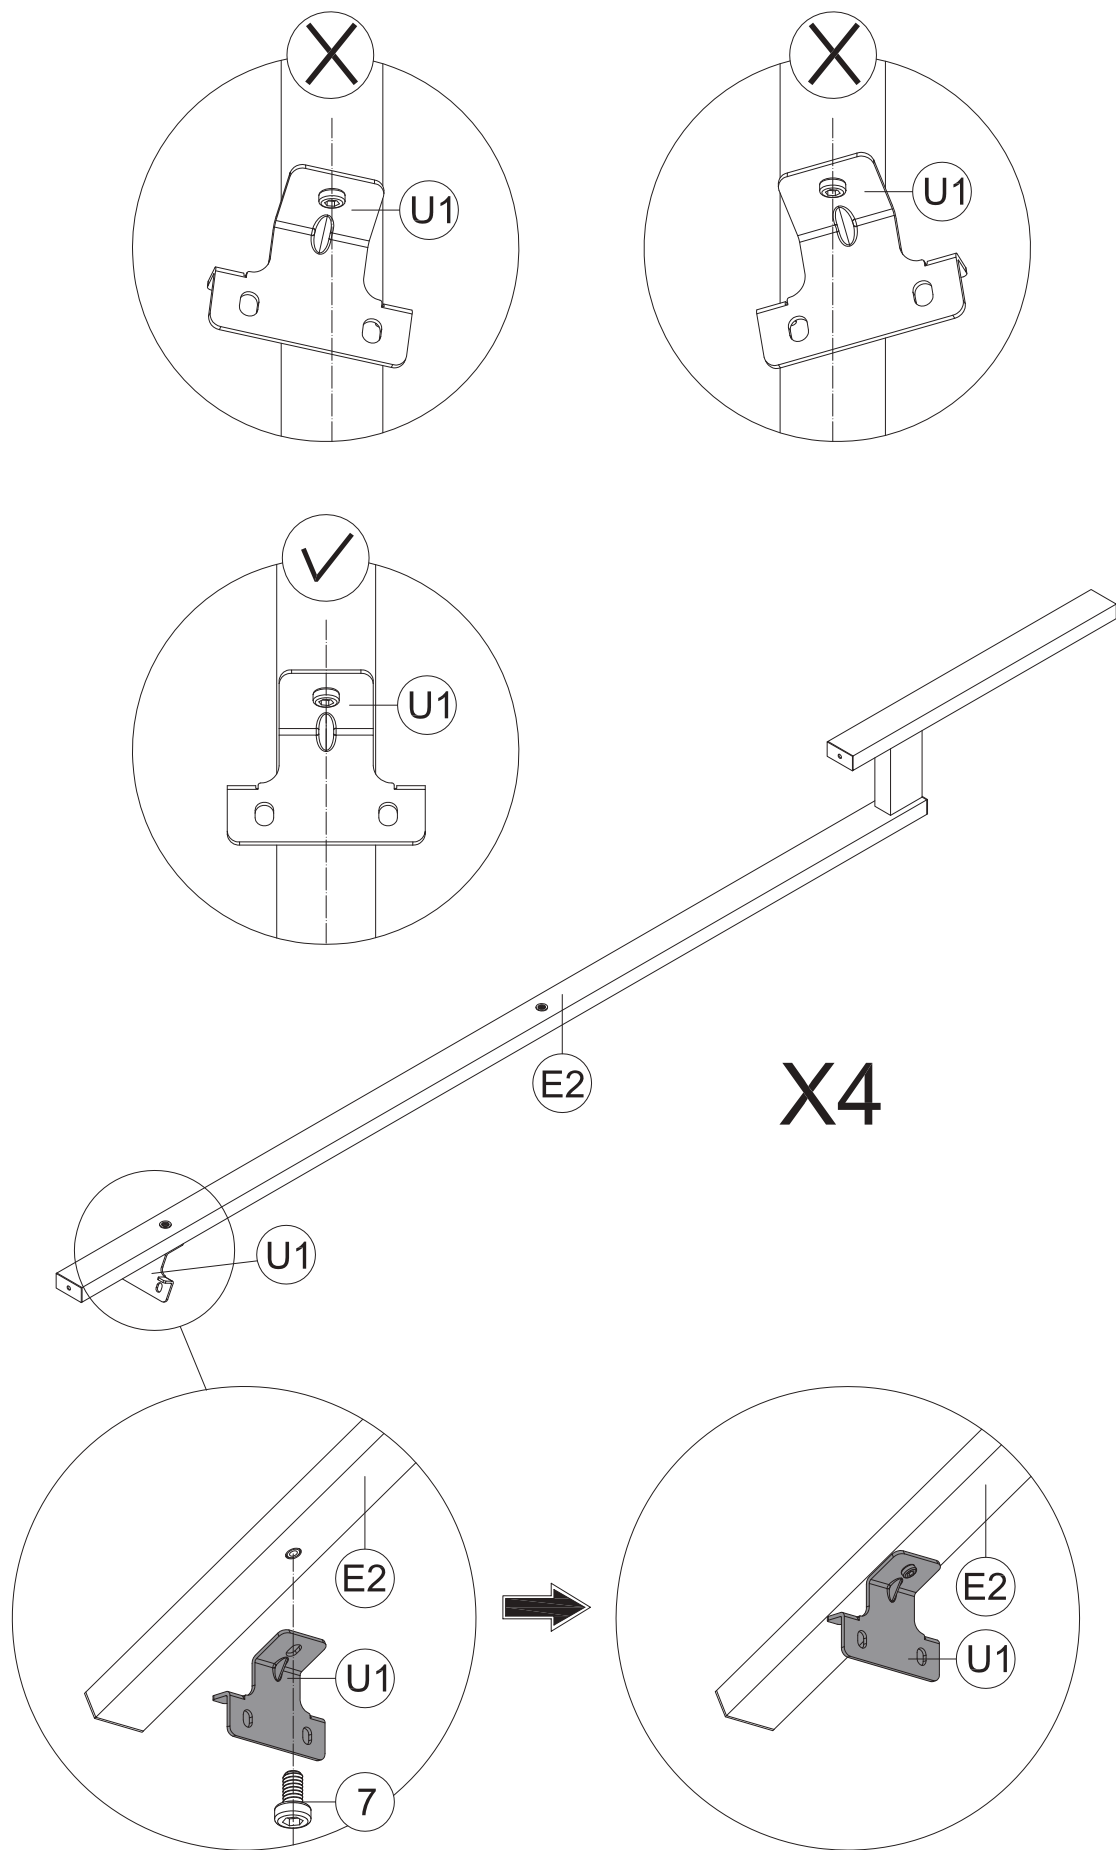


✓ S4

1 1x





M6x16

8 6x

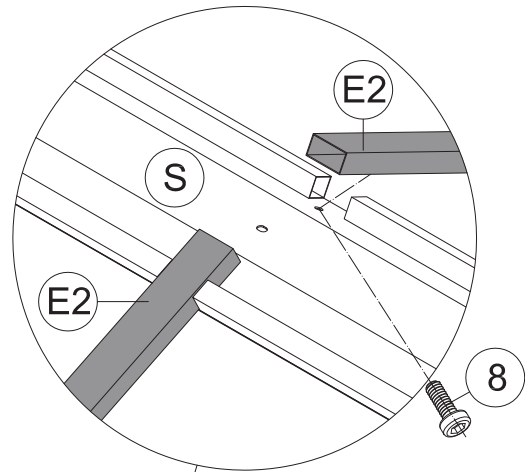


Outside View

(1) Place Part #E2 on Part #S.
Secure with Bolt #8 (from bottom to top).

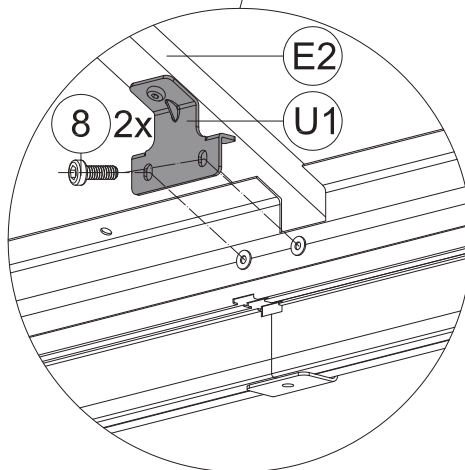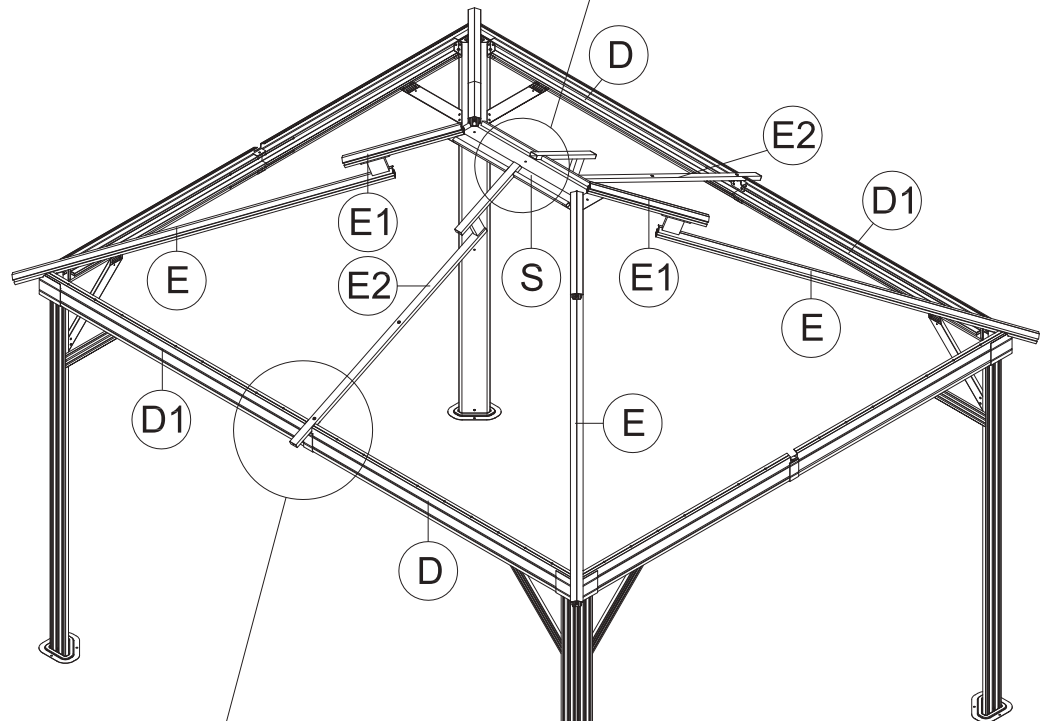

Inside View

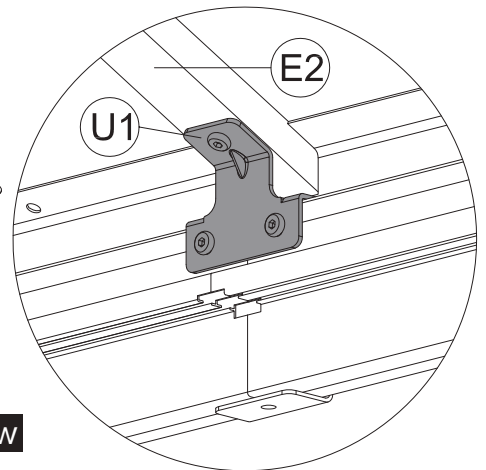

(2) Connect Part #E2 and the Assembled Beam(D&D1) with part #U1.
Secure with 2 Bolts #8.

(3) Repeat the above procedures to assemble the opposite side.

✓ S4


1 1x





M6x16

8 6x


(1) Place Part #E2 on part #S. Secure with Bolt #8 (from bottom to top).

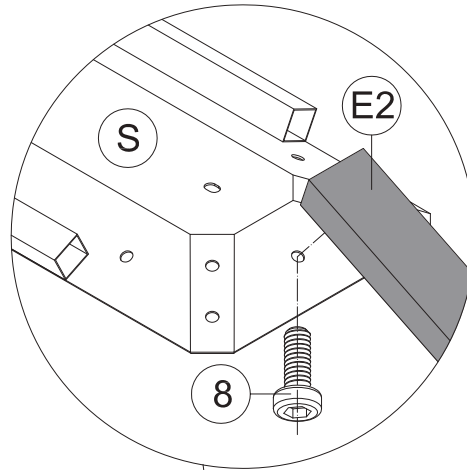

Outside View

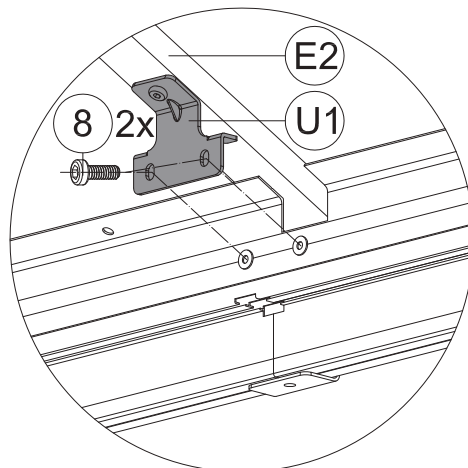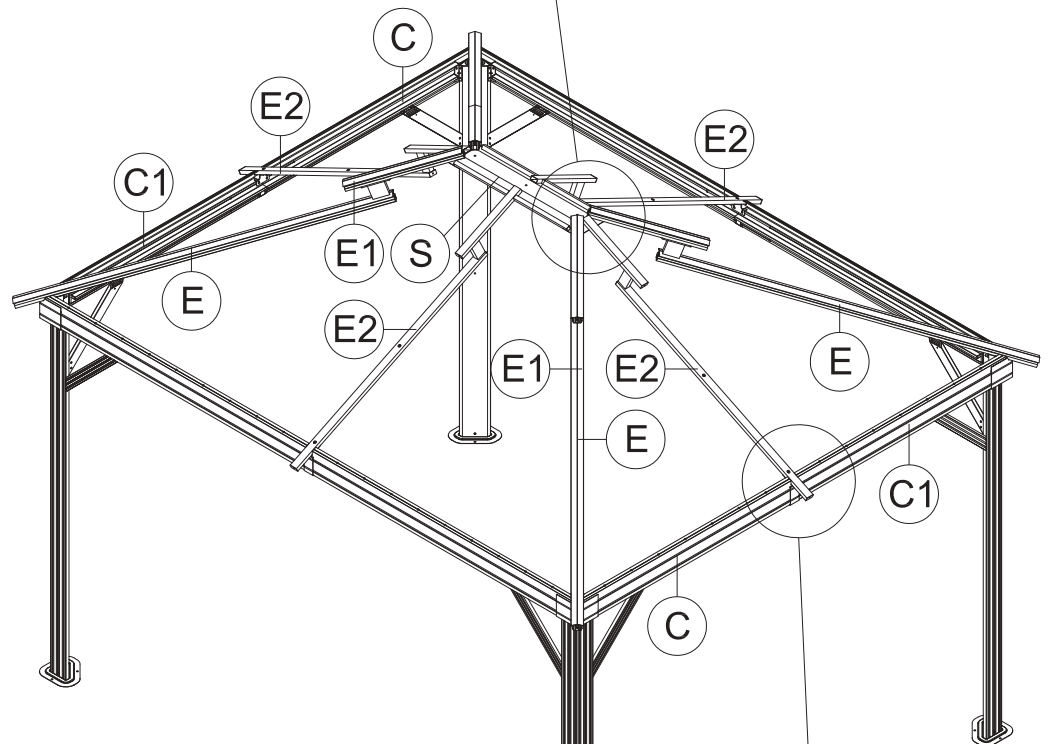


Inside View

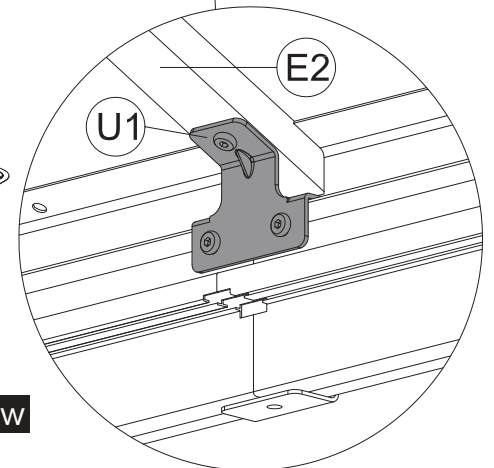


(2) Connect Part #E2 and the Assembled Beam(C&C1) with part #U1. Secure with 2 Bolts #8 .

(3) Repeat the above procedures to assemble the opposite side.





(S1) 1x




(T) 3x


Secure Part #T to Part #S and Part #S1.
(From Bottom to Top)

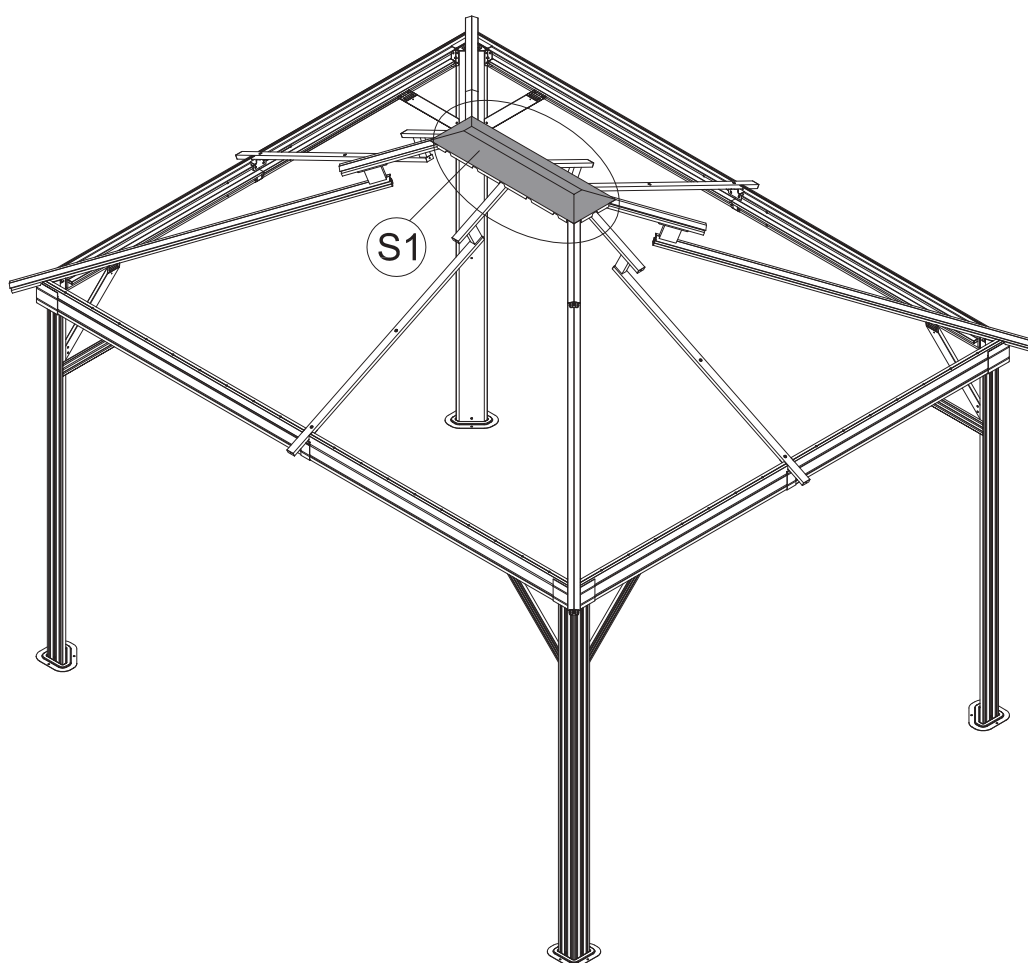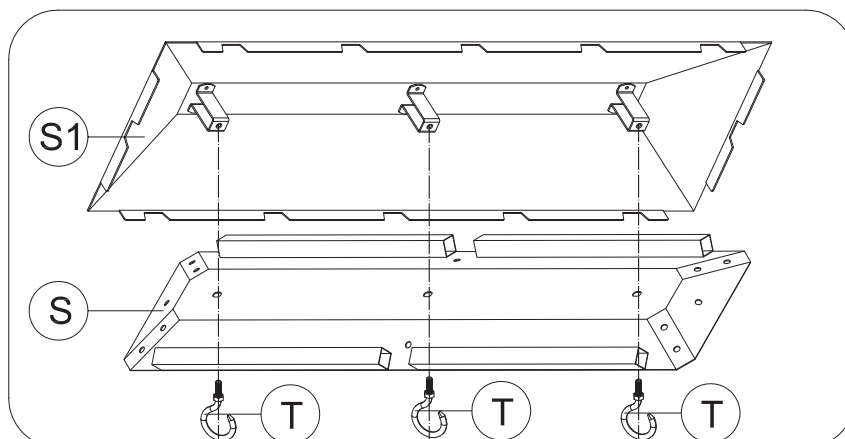

ATTENTION: The holes of Part #S and Part #S1 need to be aligned, on the same vertical line.

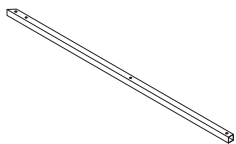

G 4x



U3 2x



1 1x




M6x10

7 2x



M6x16

8 4x

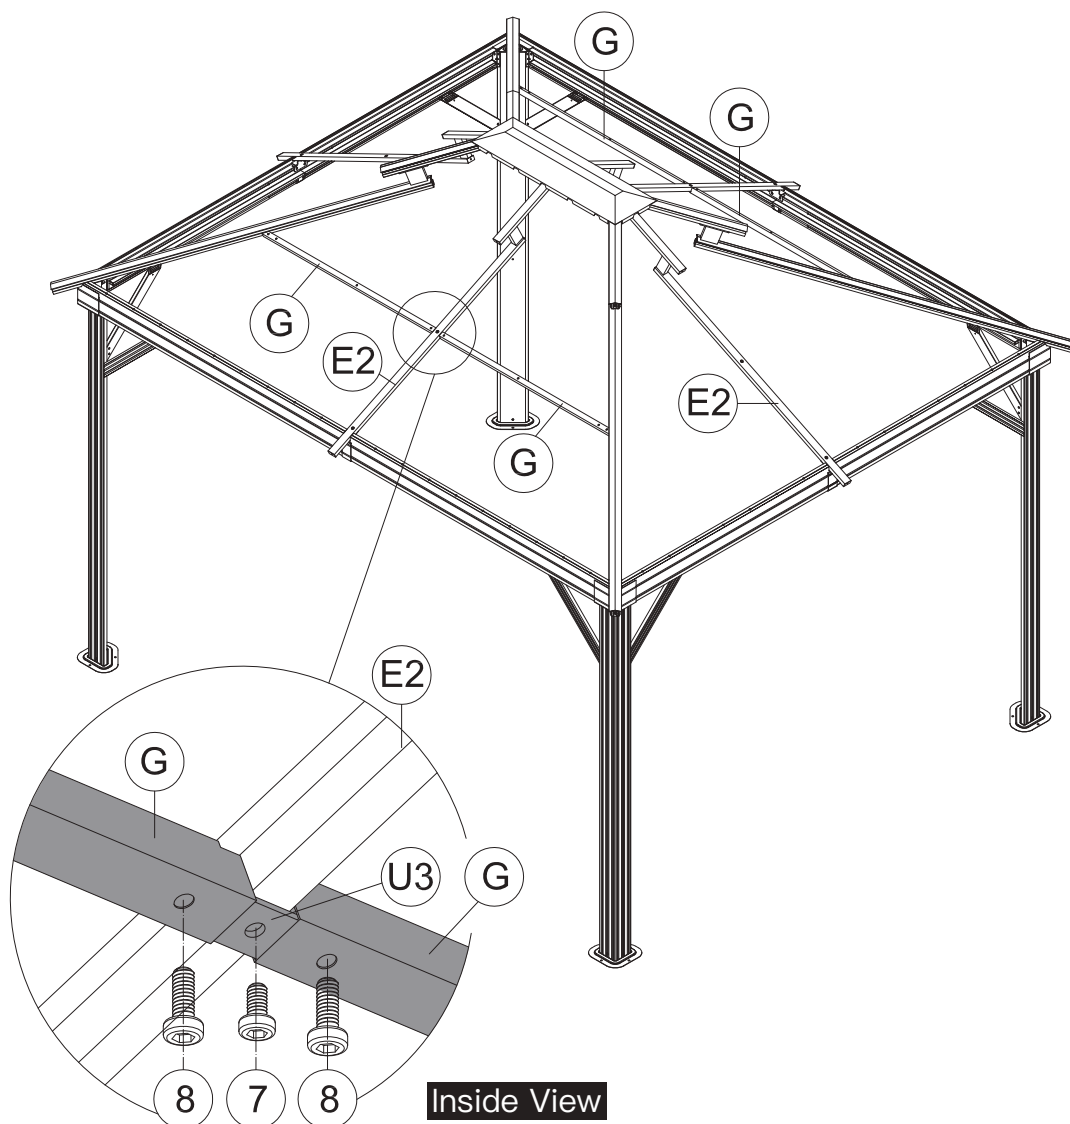


Inside View


(1) Insert Part #U3 into Part #G.

(2) Attach Part #G to the Part #E2 with 1 Bolt #7 and 2 Bolts #8.


(3) Repeat the above procedures to assemble the opposite side.

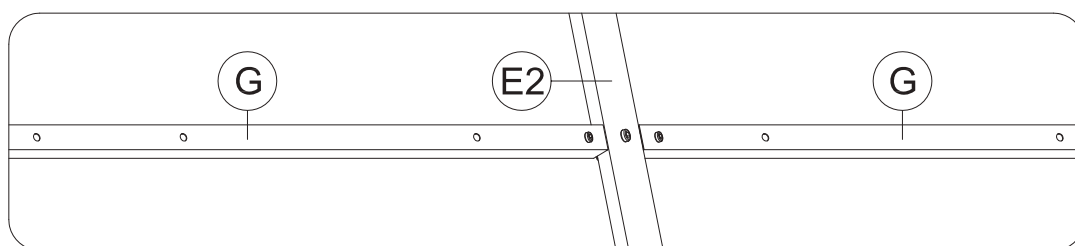

Outside View

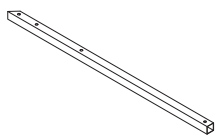

F 4x



U3 2x



1 1x




M6x10

7 2x




M6x16

8 4x

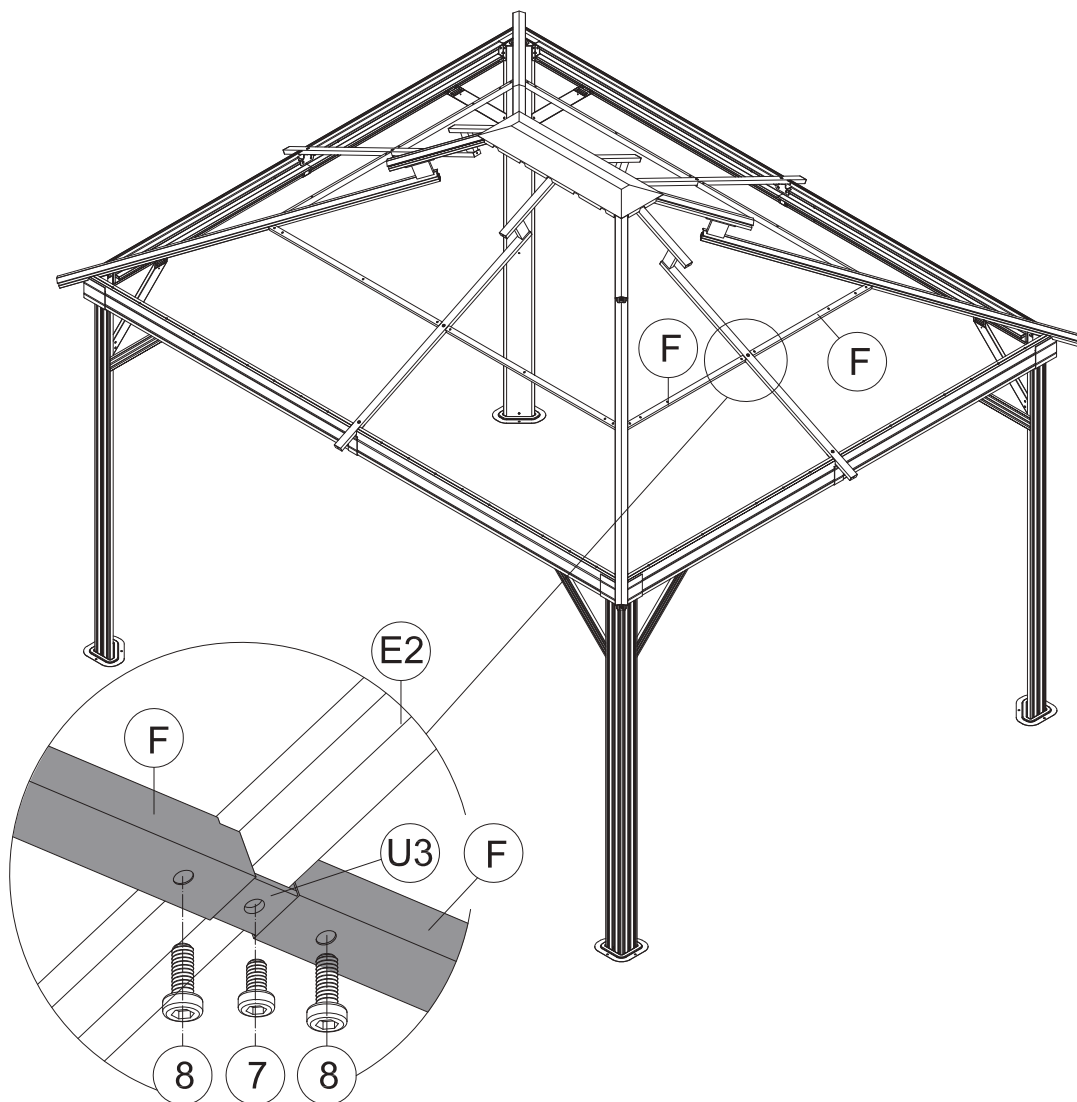

Inside View

- (1) Insert Part #U3 into 2 Part #F.
- (2) Attach 2 Part #F to Part #E2 with 1 Bolt #7 and 2 Bolts #8.
- (3) Repeat the above procedures to assemble the opposite side.

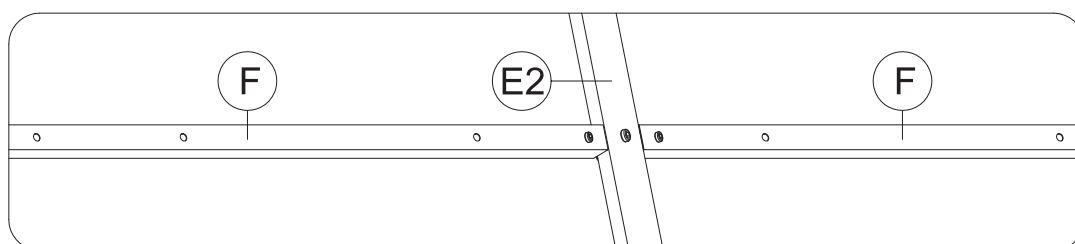

Outside View



U2 4x




1 1x





M6x16

8 12x

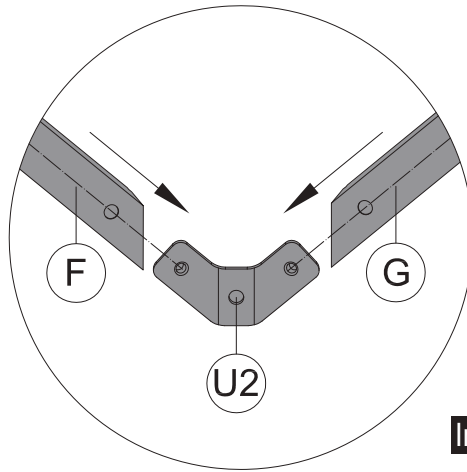


Inside View

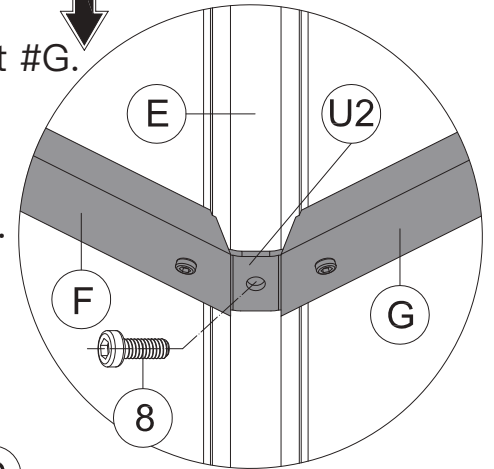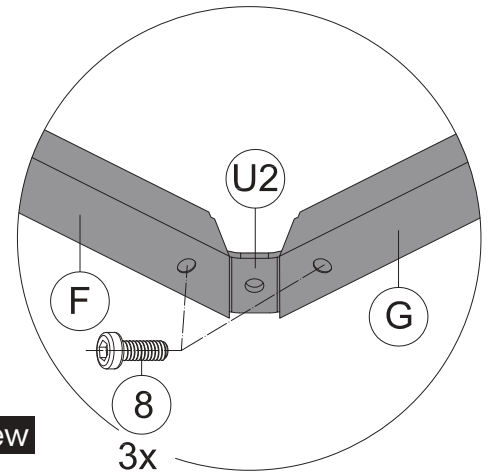


(1) Insert Part #U2 into Part #F and Part #G.

(2) Secure with 2 Bolts #8.


(3) Secure them to Part #E with Bolt #8.

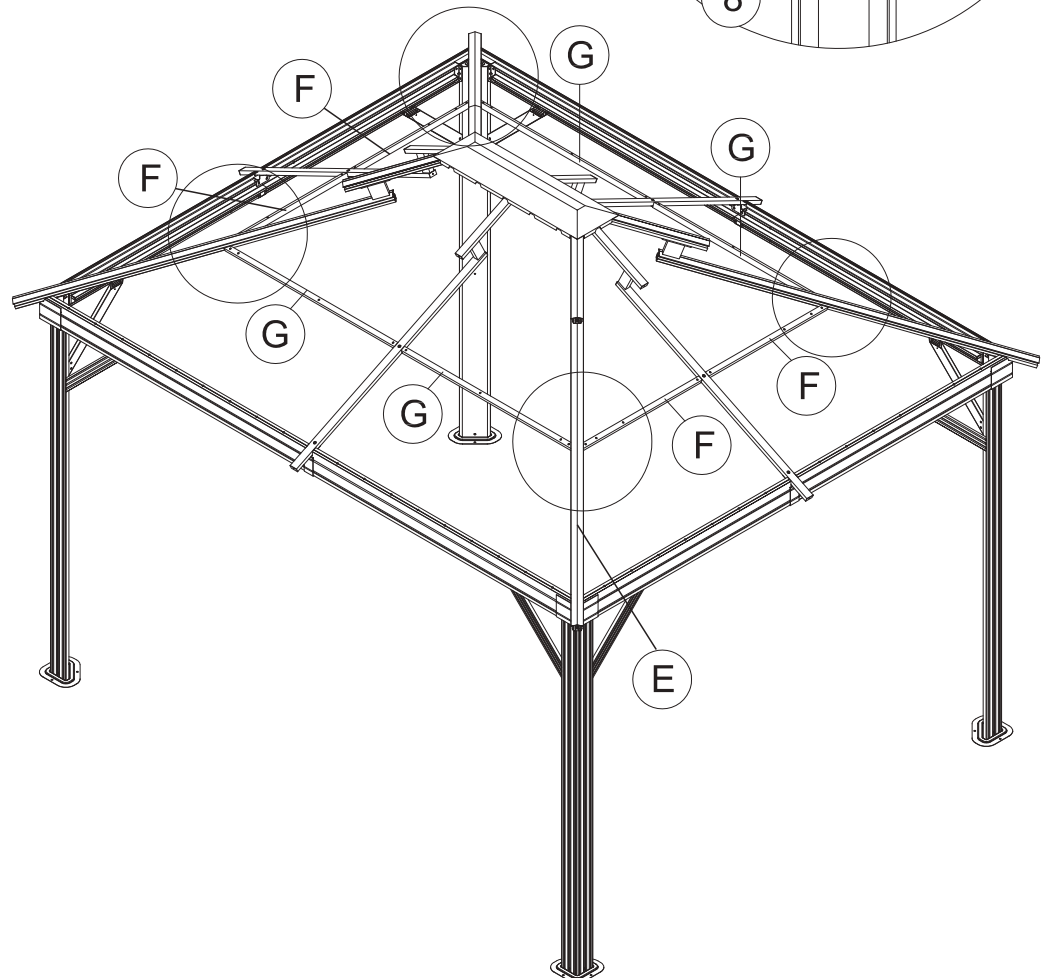


(4) Repeat the above procedures to assemble the other 3 sides.

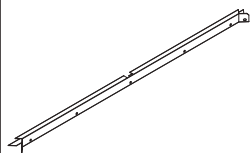


J1 2x

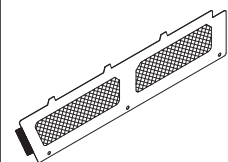

Q1 2x

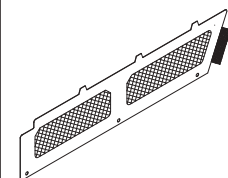

Q2 2x

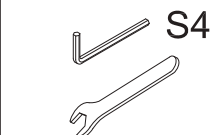

1 1x



5 8x




7 8x





8 2x

22




(1) Connect Part #J1 and Part #Q1 & #Q2 with 4 Bolts #7 and 4 Nuts #5.

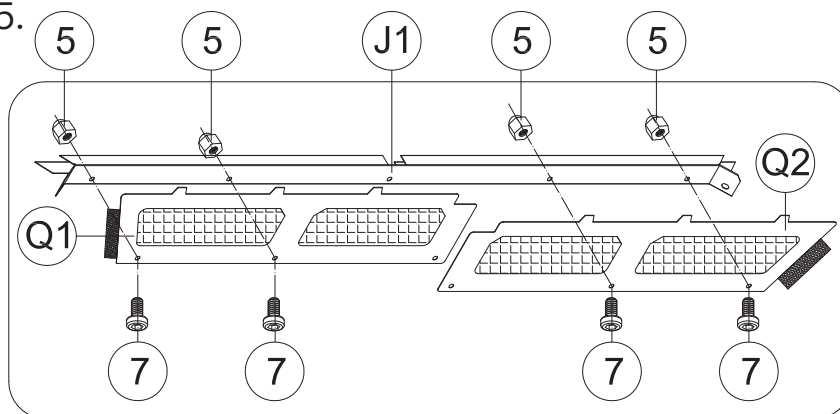


(2) Place the Assembled Part #J1 , #Q1 & #Q2 on Part #E2, securing with 1 Bolt #8.

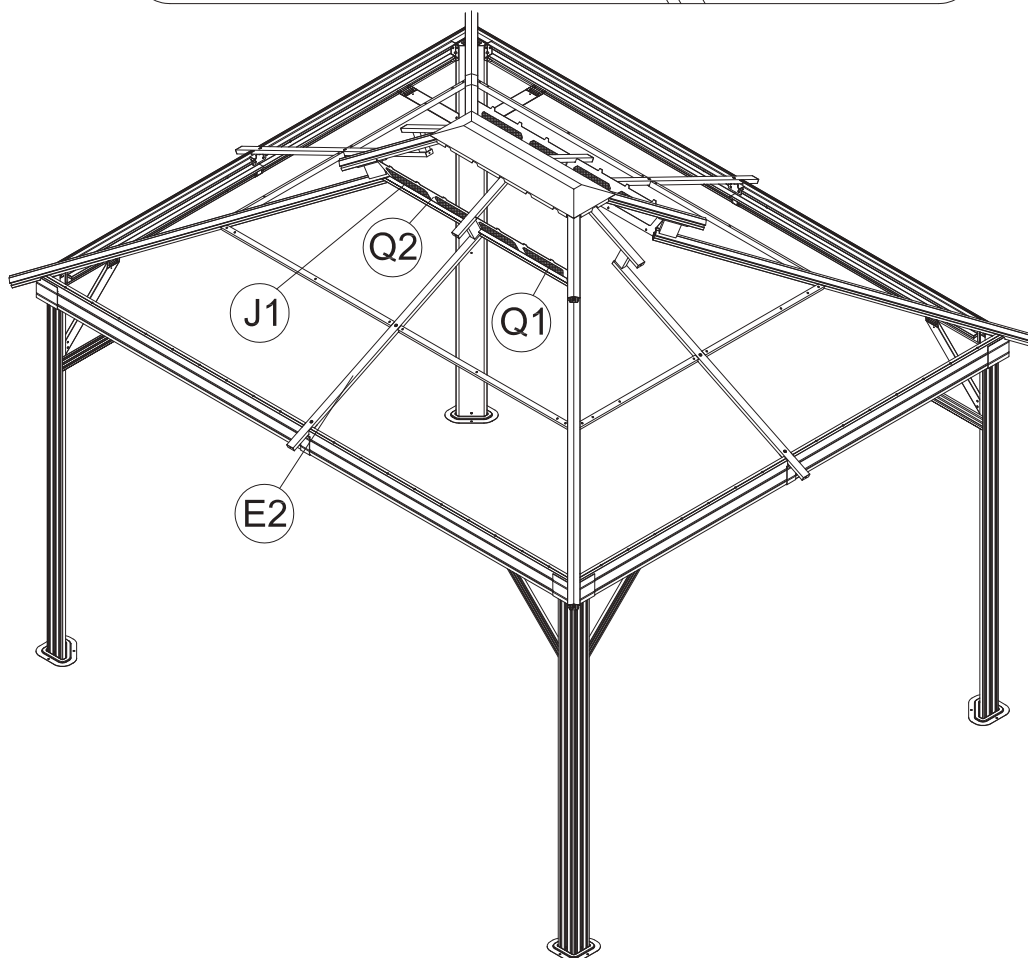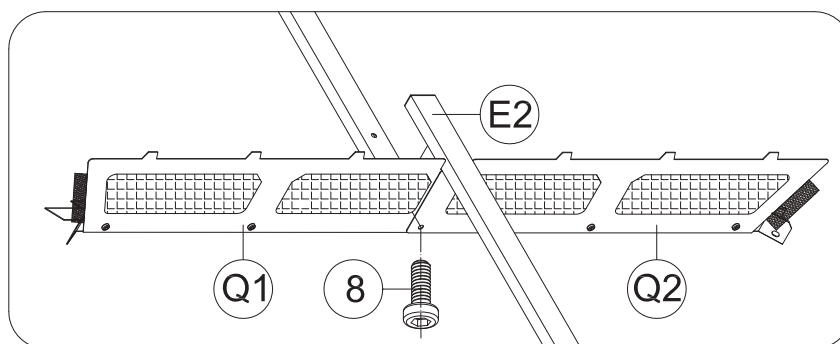

(3) Repeat the above procedures to assemble the opposite side.



23

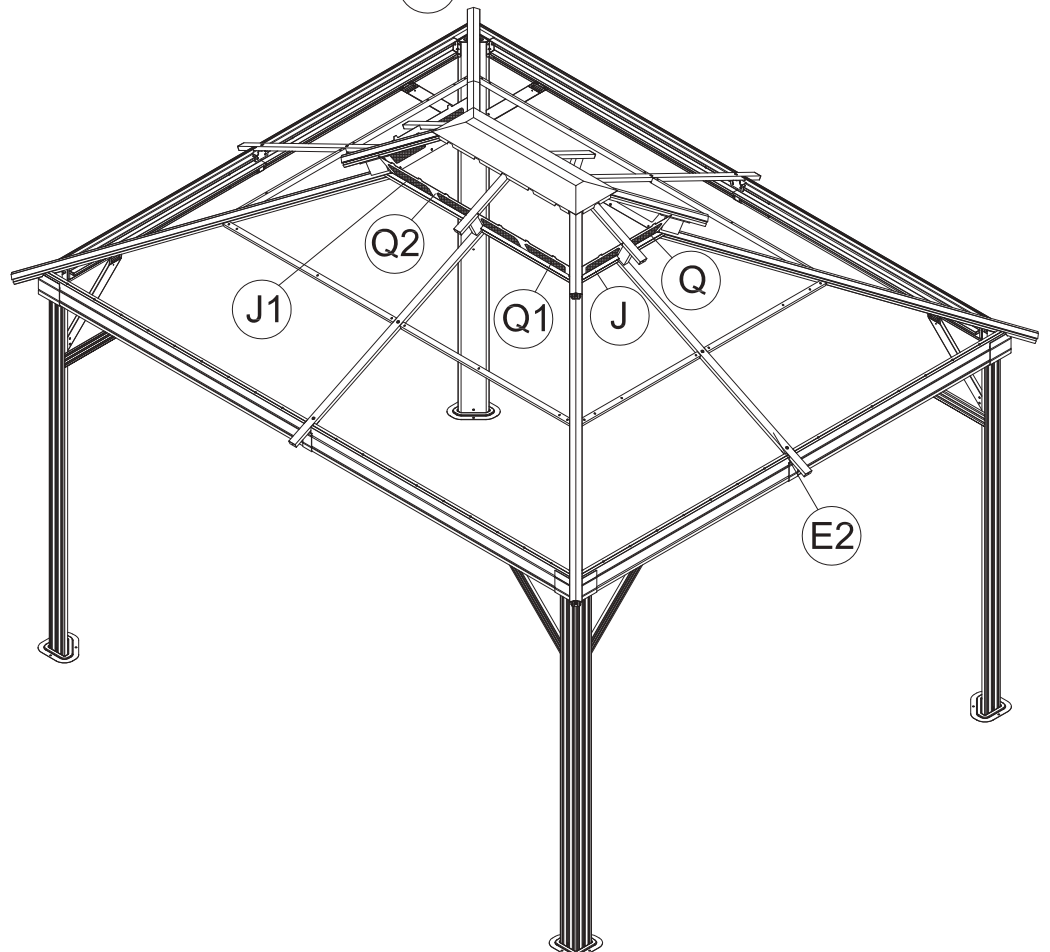

(3) Repeat the above procedures to assemble the opposite side.



(X3) 4x




(1) 1x




ST6.3x15

(2) 4x

(1) Place Part #J and Part #J1 on Part #E;
put on Part #X3 and secure with Self-tapping Screw #2.

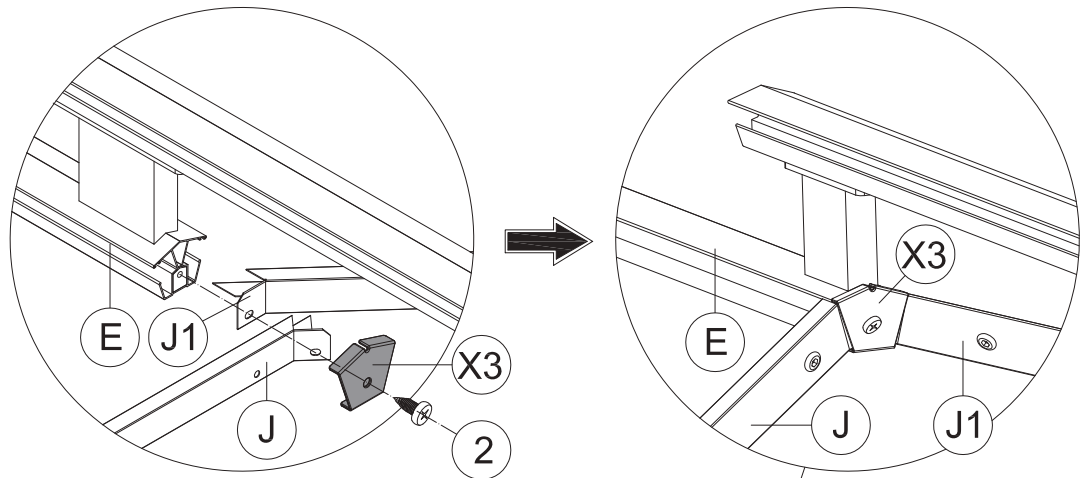


Inside View

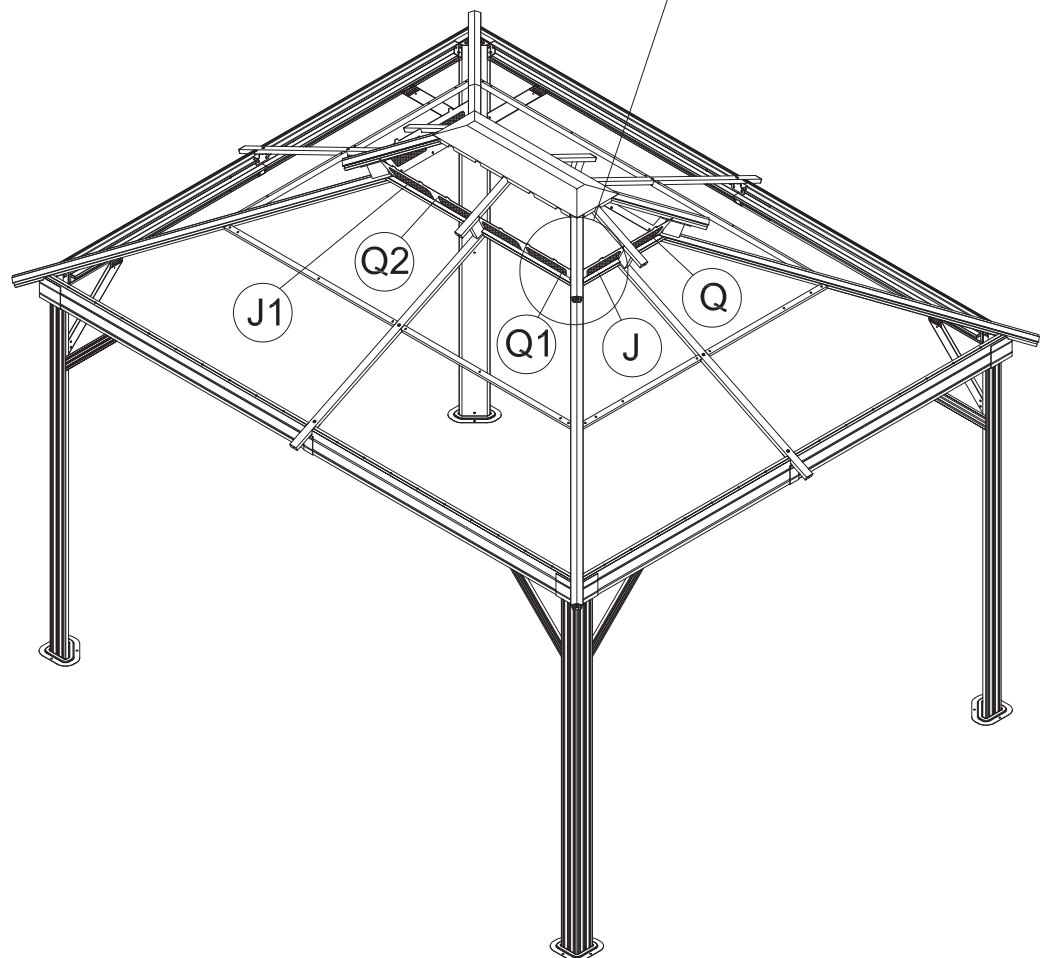


(2) Repeat the above procedures to assemble the other 3 corners.

Cover Part #Z, #Z1 & #Z2 to Roof Panels.

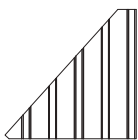

L1 2x

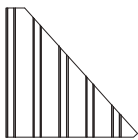

L2 2x



Z 4x





Z1 2x




Z2 2x


X2

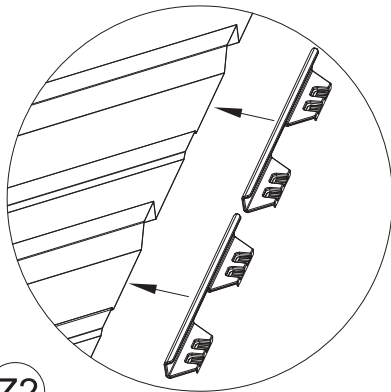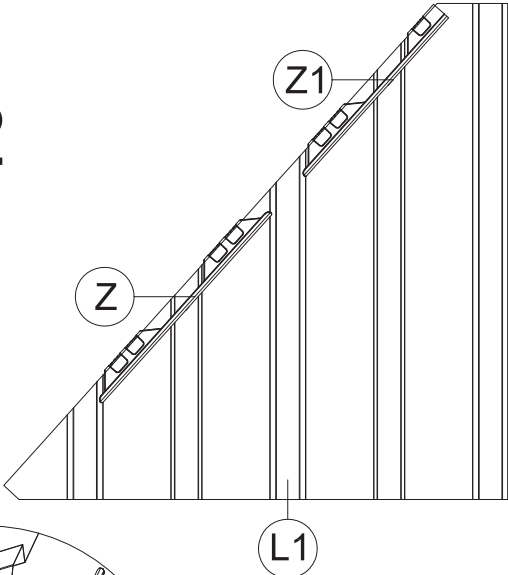

Z2

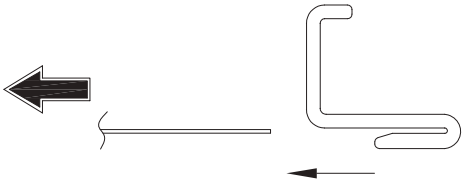

Section View

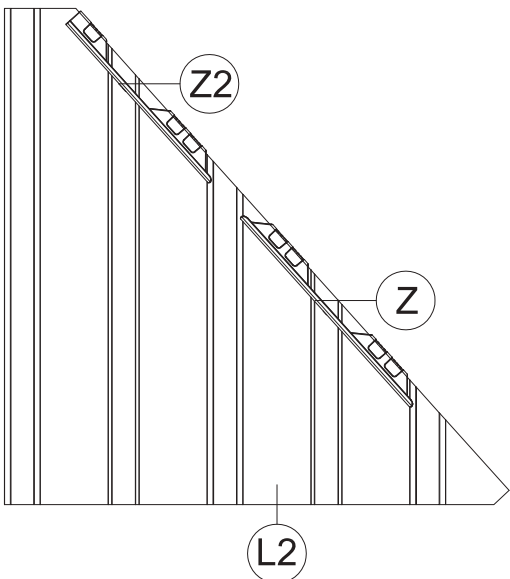


X2


Cover Part #Z to Roof Panels.



(N1) 2x

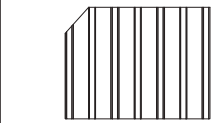

(N2) 2x

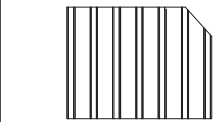




(N3) 2x




(N4) 2x




(Z) 8x

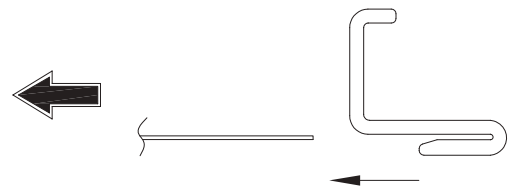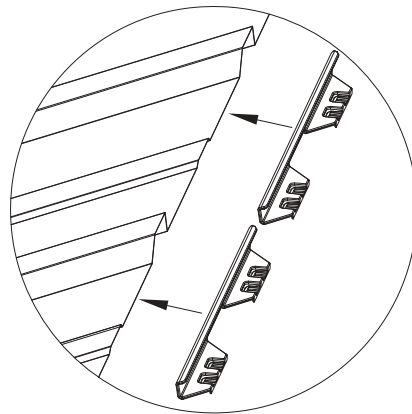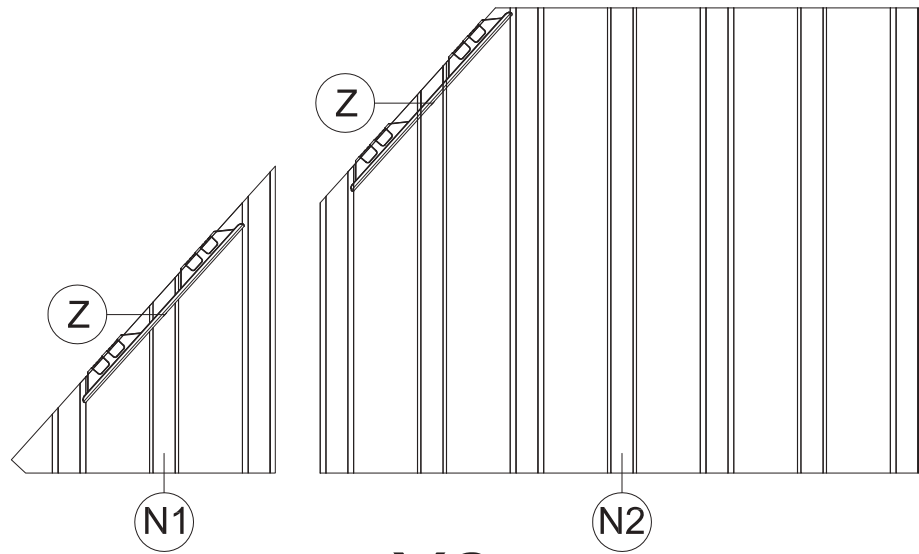

Section View

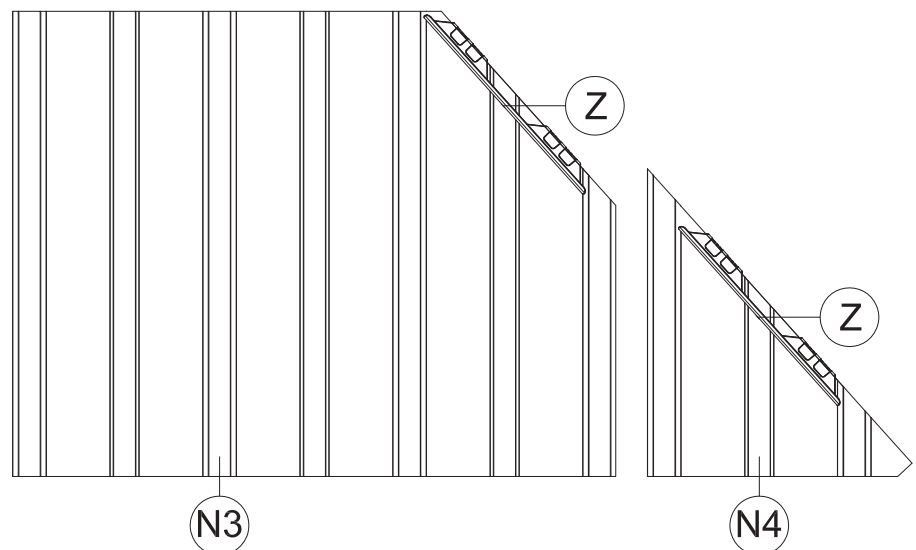

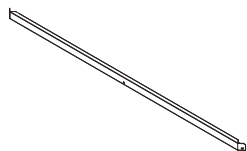

H1 2x



S4


1 1x



M6x16

8 2x

ATTENTION: The bigger roof panel need to cover the smaller one.

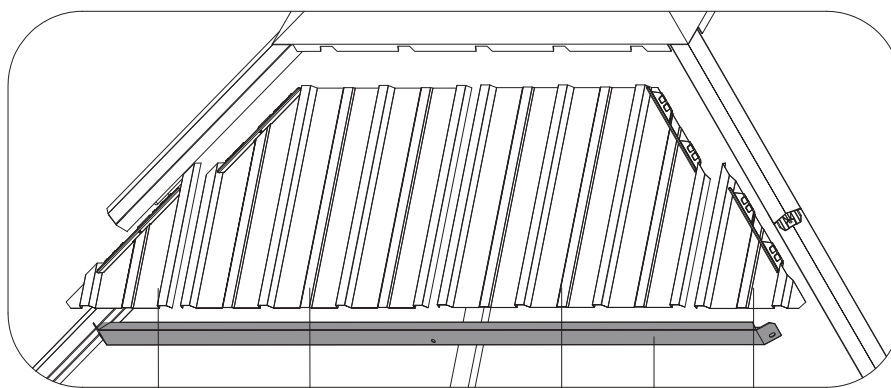

N1

N2




N3

H1


N4

(1) Insert Part #N1 and Part #N2 into the frame.

(2) Insert Part #N4 and Part #N3 into the frame.

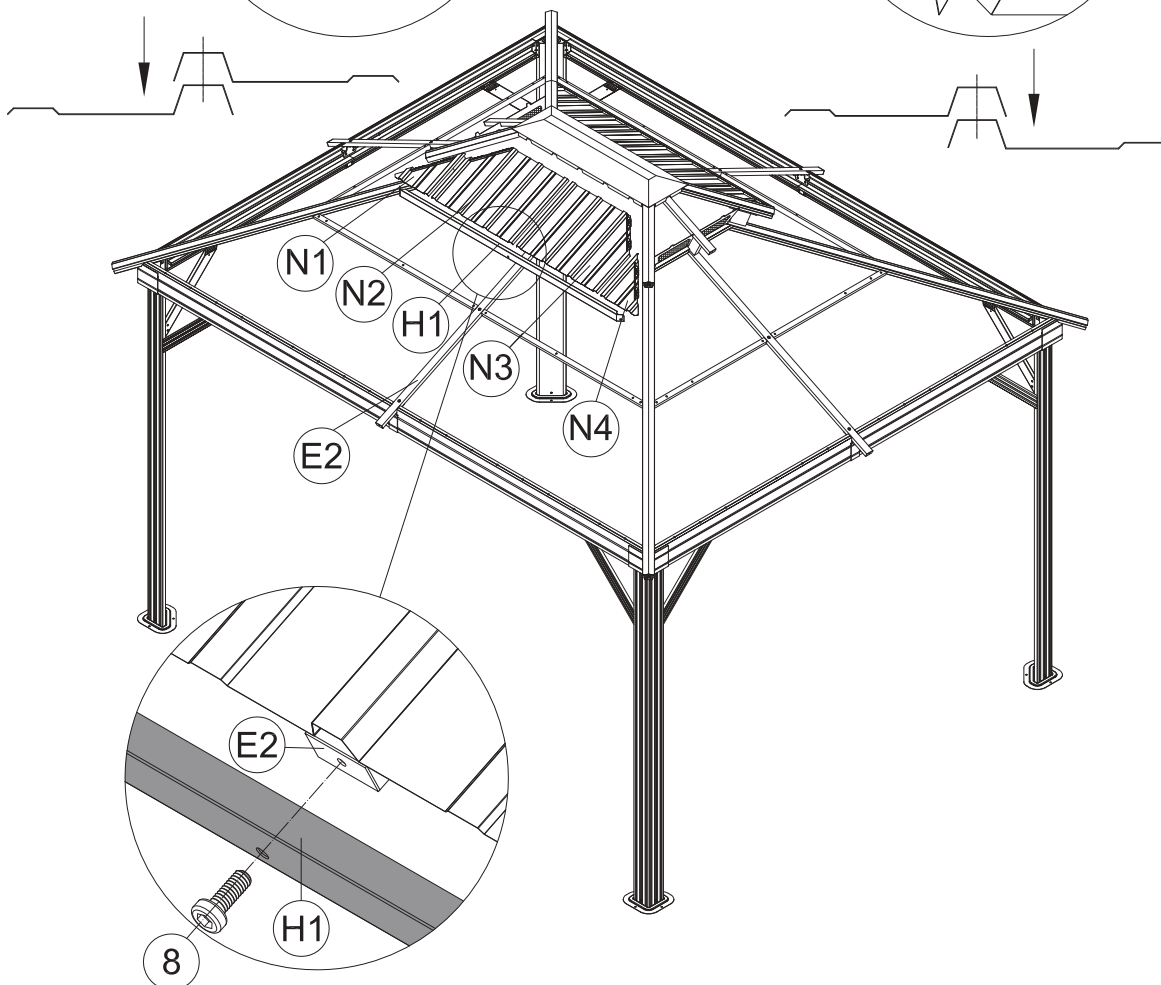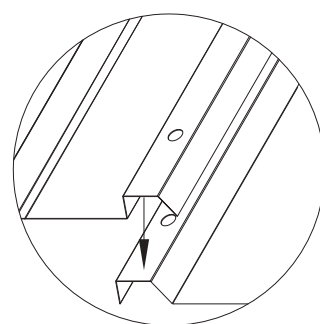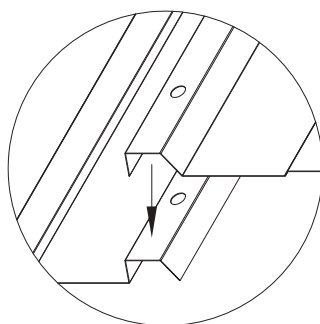

(3) Repeat the above procedures to assemble the opposite side.

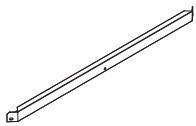

(H) 2x



(1) 1x





M6x16

(8) 2x

ATTENTION: The bigger roof panel need to cover the smaller one.

(1) Insert Part #L1 and Part #L2 into the frame.

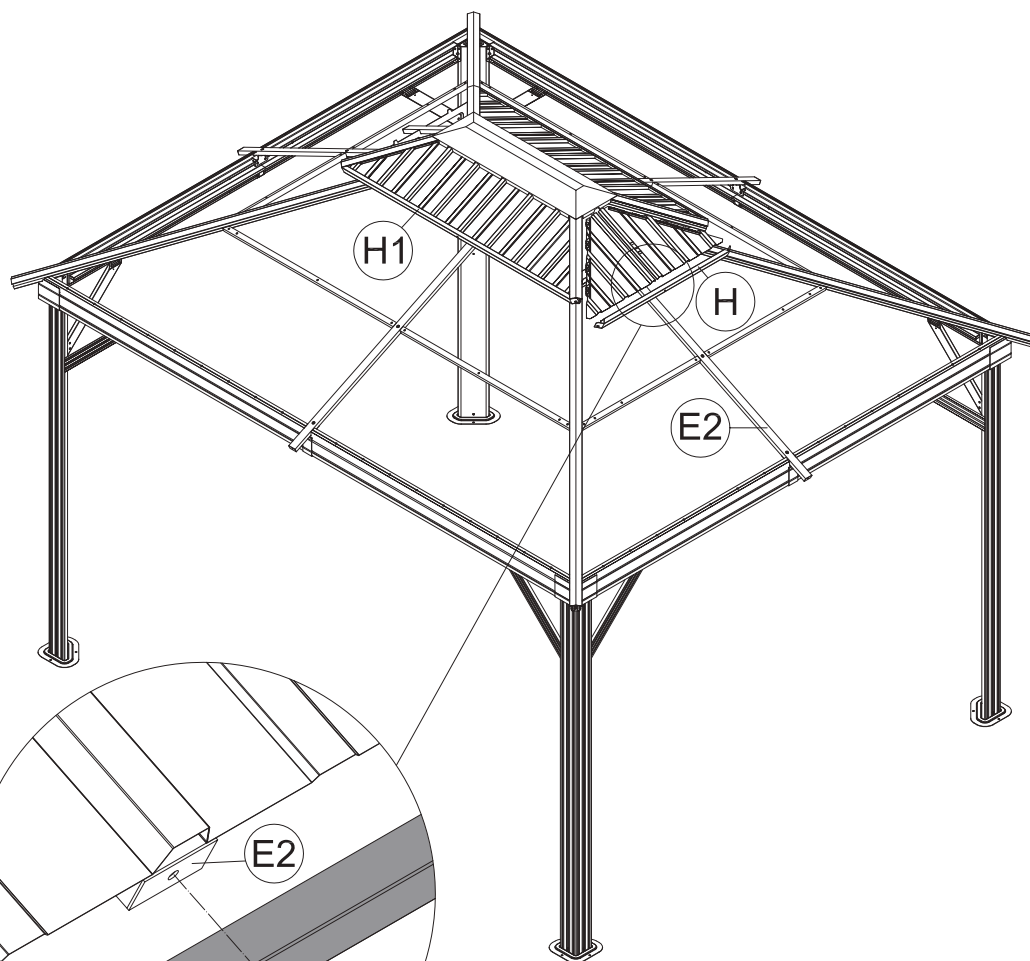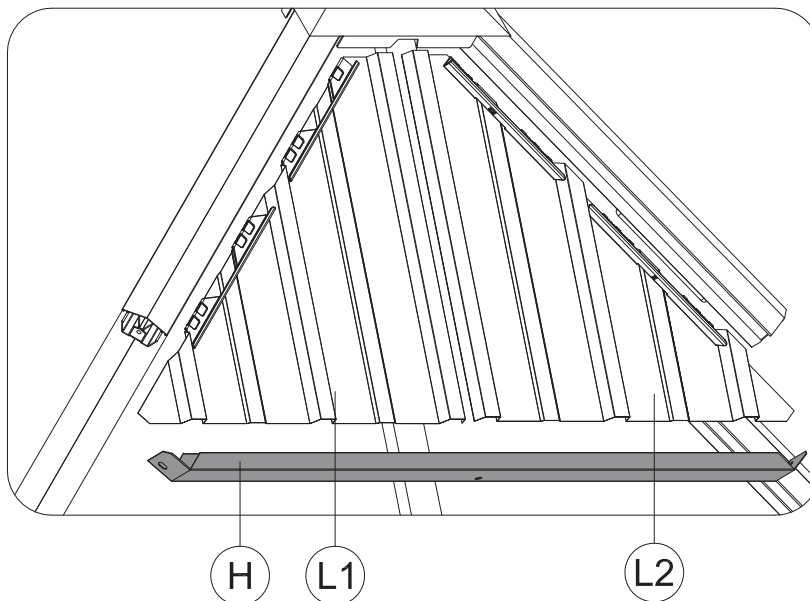

(2) Attach Part #H to Part #E2, securing with Bolt #8.

(3) Repeat the above procedures to assemble the opposite side.



(X3) 4x





(1) 1x



ST6.3x15

(2) 4x

(1) Place Part #H and Part #H1 on Part #E1;
put on Part #X3 and secure with Self-tapping Screw #2

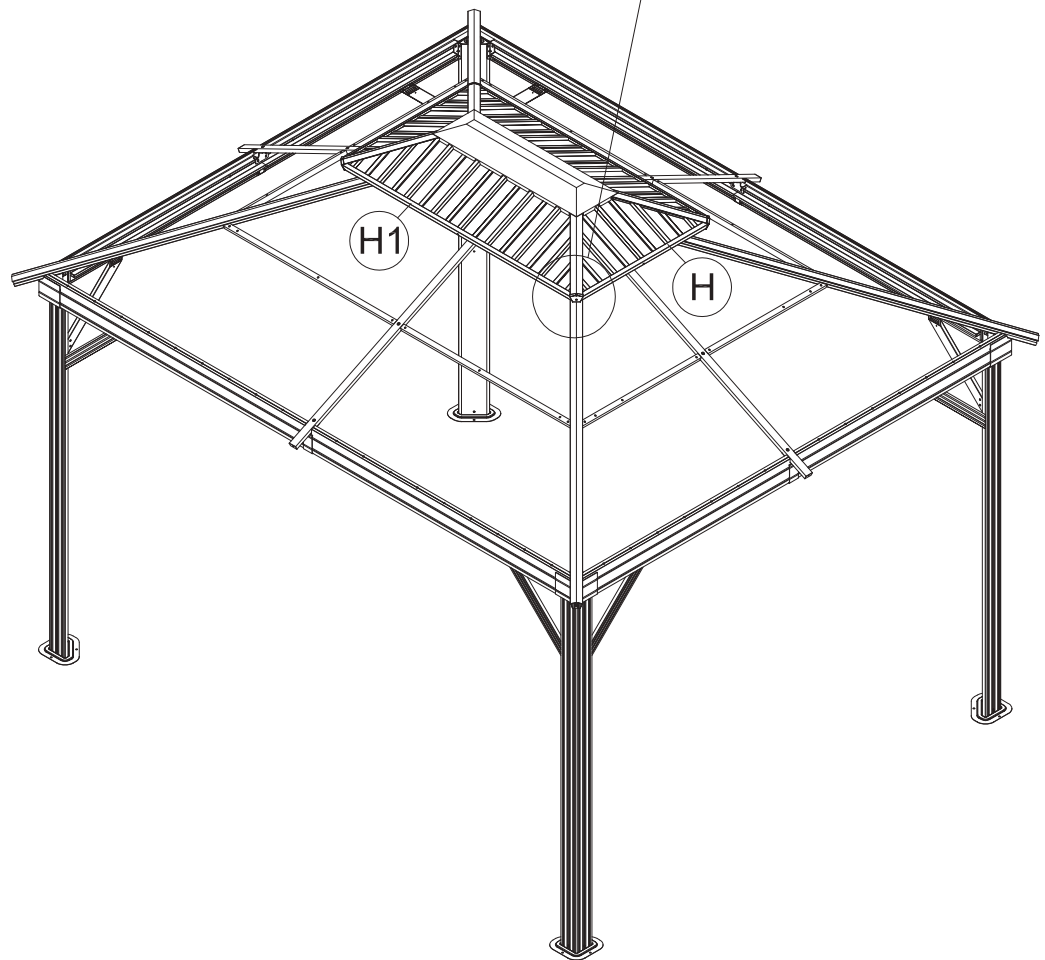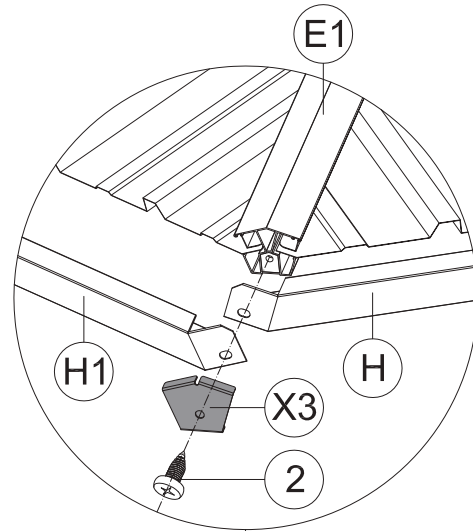


(2) Repeat the above procedures to assemble the other 3 corners.

Cover Part #Z, #Z3 & #Z4 to Roof Panels.



(M1) 2x




(M2) 2x



(M3) 2x



(M4) 2x



(M5) 2x



(M6) 2x



(Z) 24x






(Z3) 2x








(Z4) 2x

30

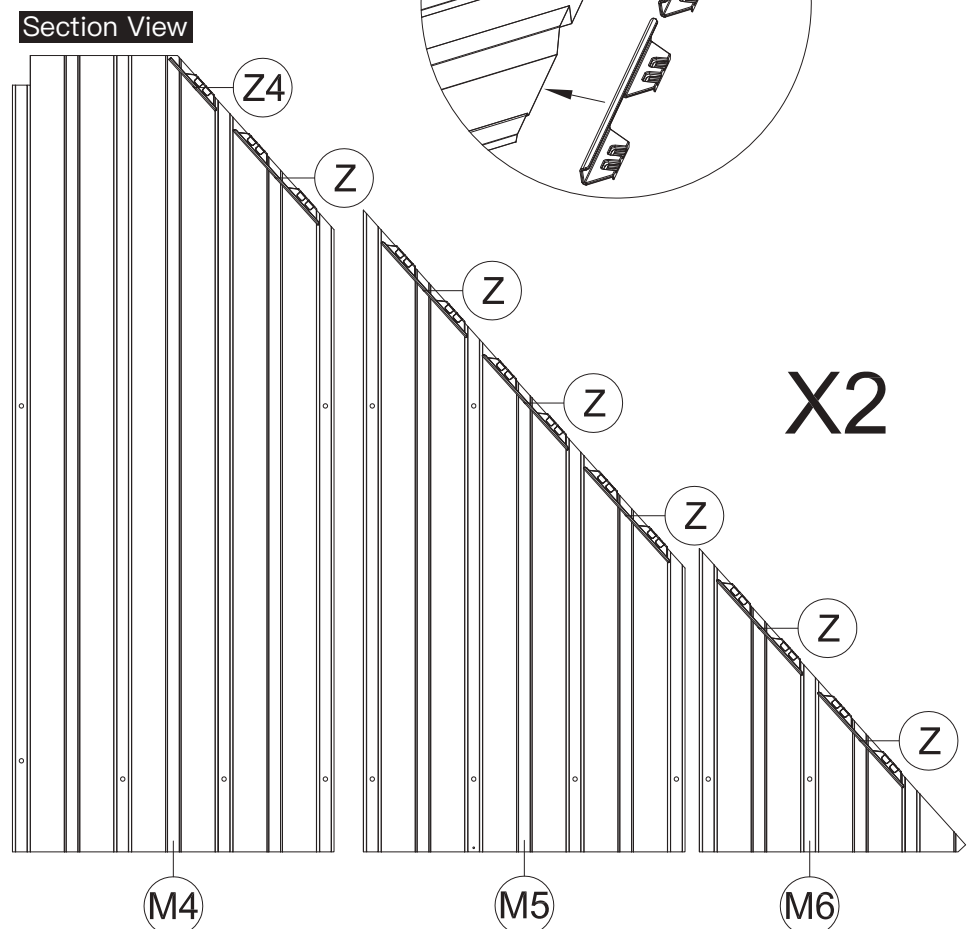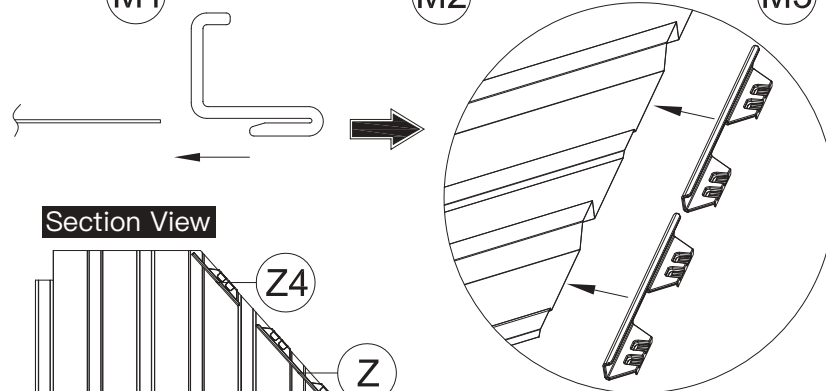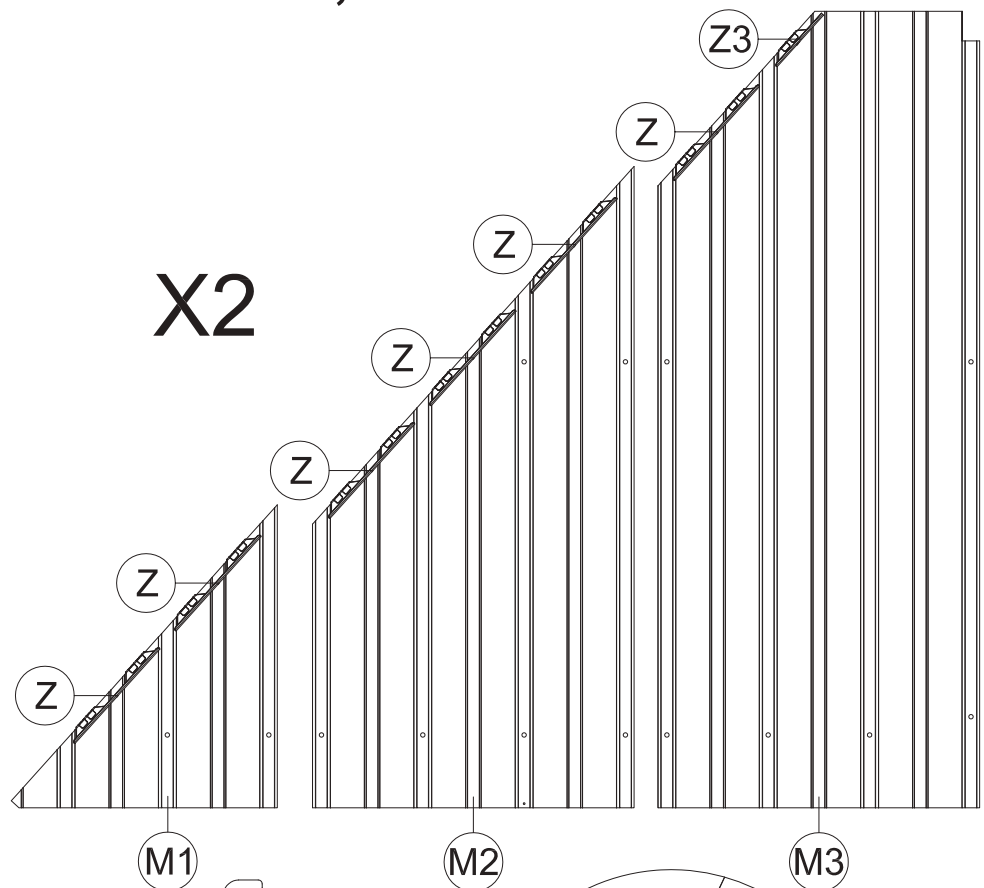


Cover Part #Z & #Z3 to Roof Panels.

-  P1 2x
 -  P2 2x
 -  P3 2x
 -  P4 2x
 -  P5 2x
 -  Z 12x
 -  Z3 2x
- 31

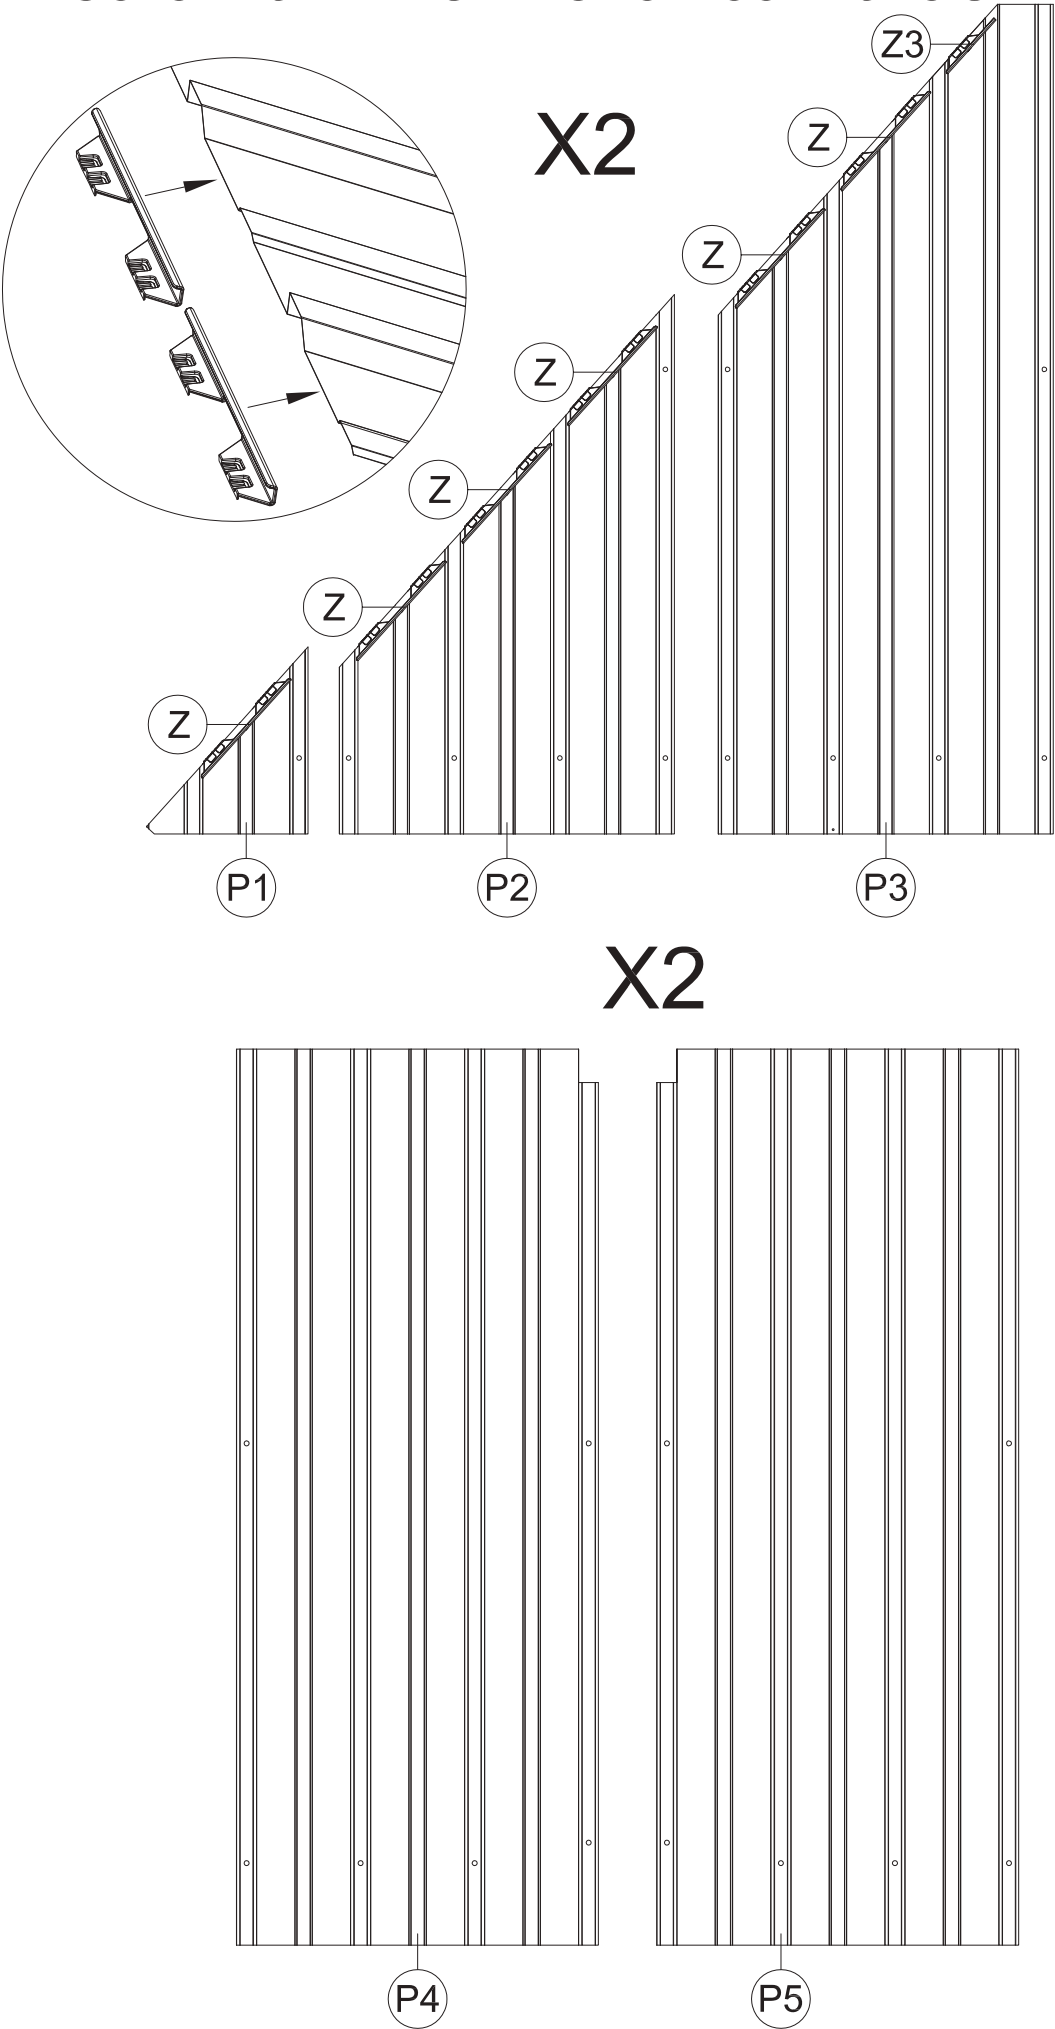



P6 2x



P7 2x



P8 2x





Z 12x




Z4 2x




Cover Part #Z & #Z4 to Roof Panels.

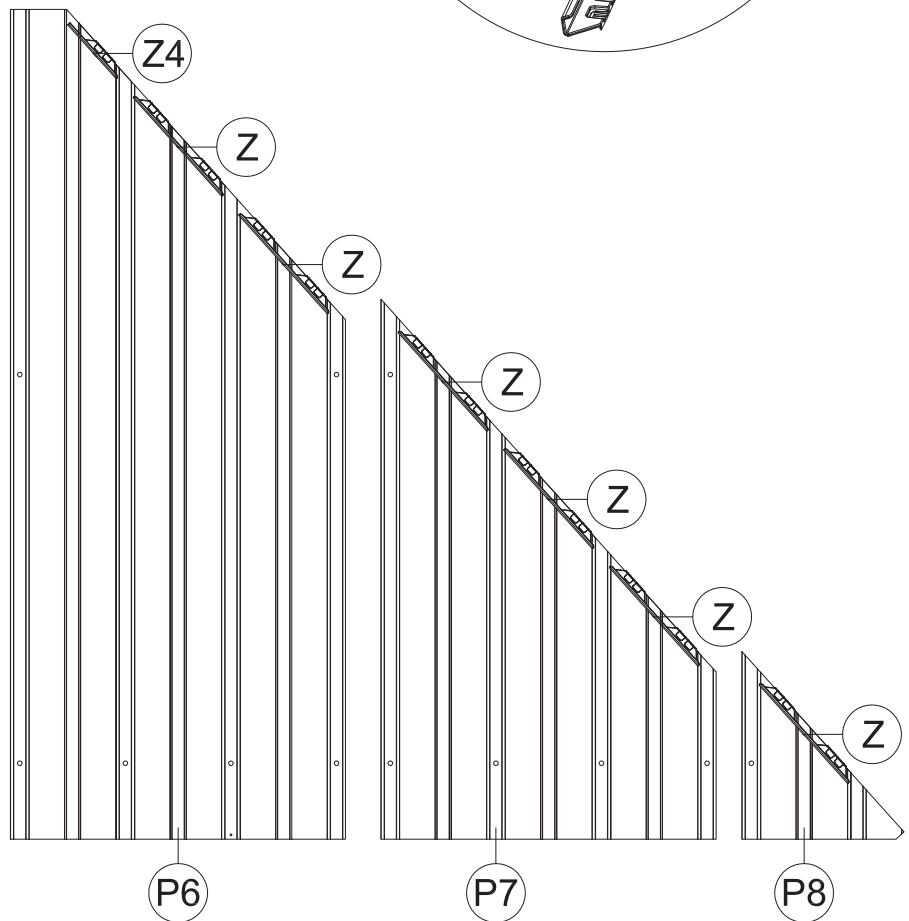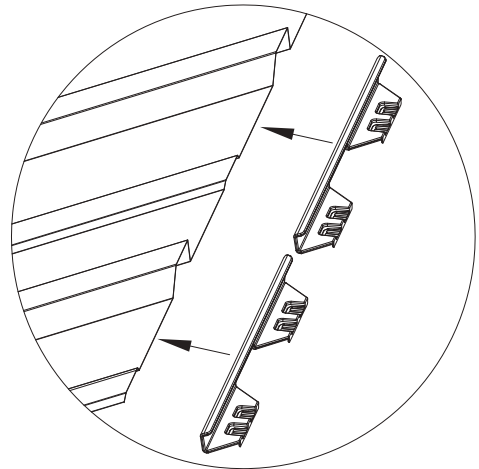


X2

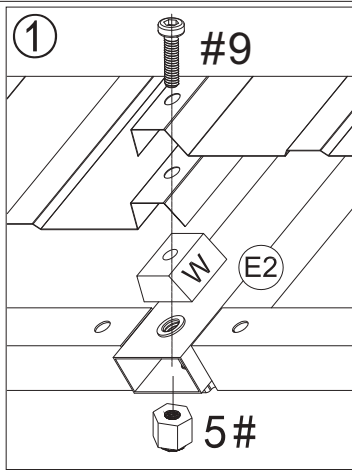


▲ Part #W should be inserted between roof panels and solidifying bar or beams, then secure with bolts and nuts.

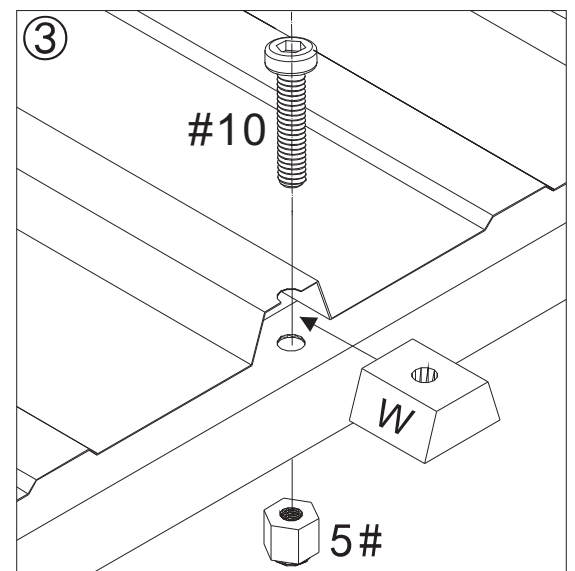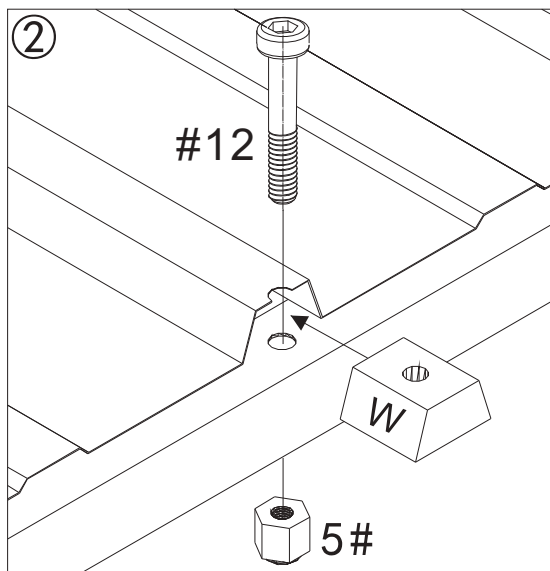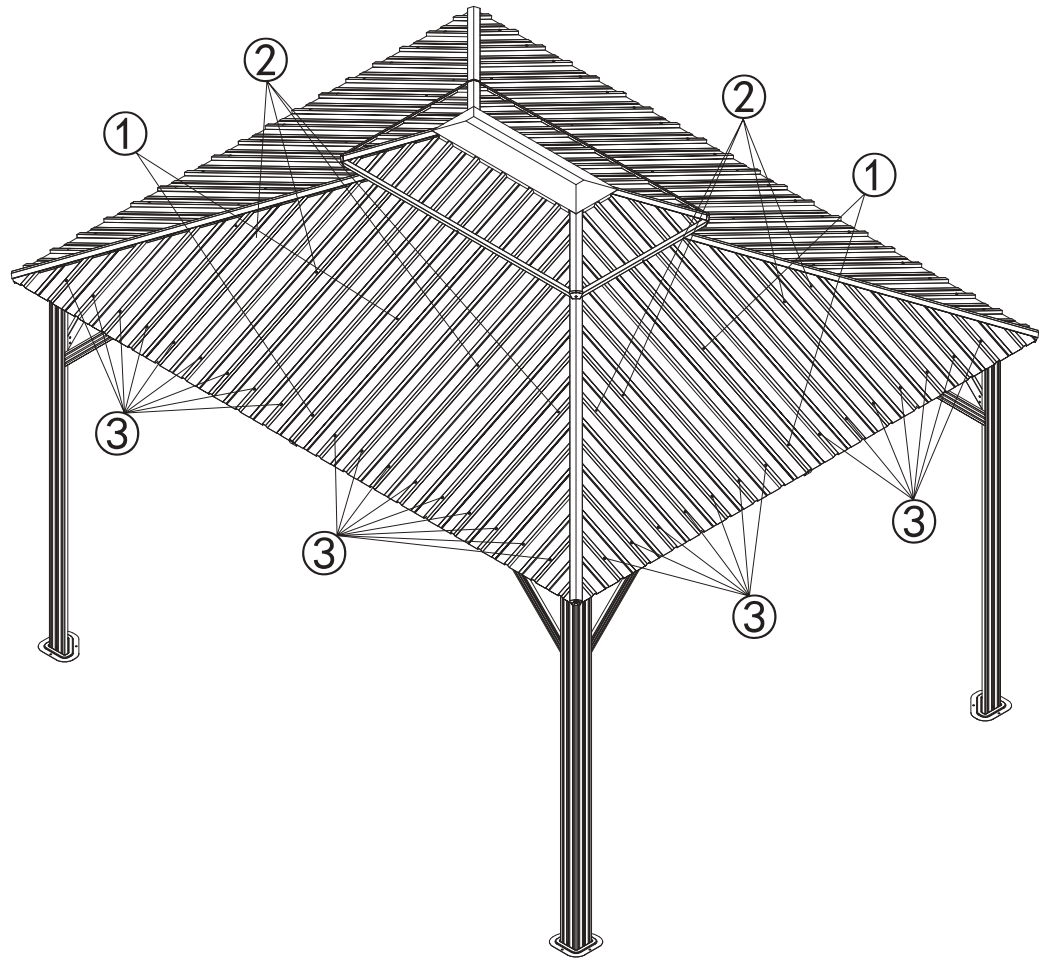



(W) 28x

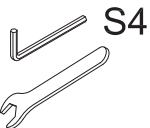

(1) 1x




M6

(5) 28x



M6x28


(10) 24x




M6x50

(12) 4x



ATTENTION: The bigger roof panel need to cover the smaller one.

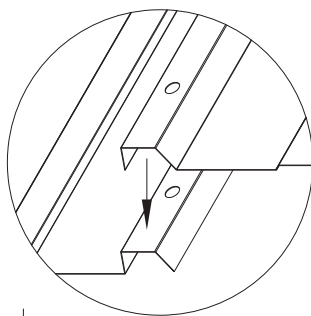

(1) Insert Part #P1, Part #P2 and Part #P3 into the frame.

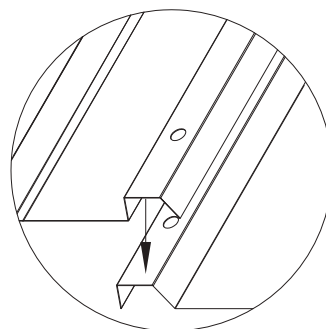


(2) Insert Part #P8, Part #P7 and Part #P6 into the frame.

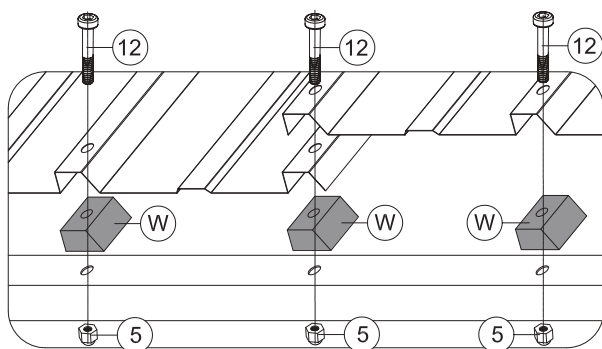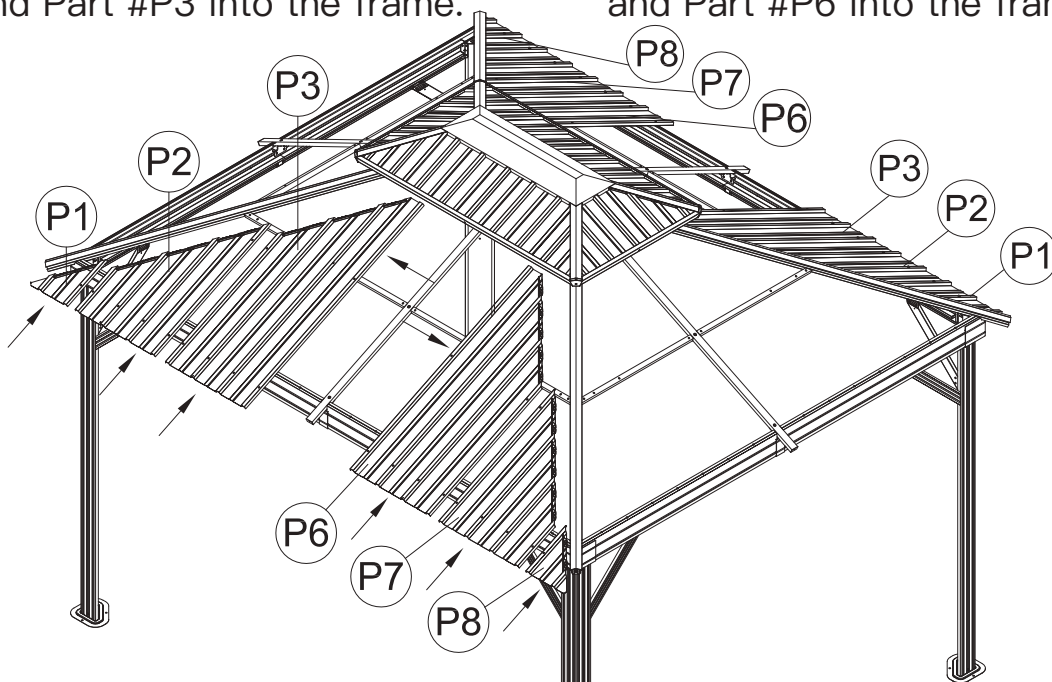


(3) Place 2 Part #W between roof panels and solidifying bars. Then secure with 1 Bolts #12 and 2 Nuts #5.


(4) Place 12 Part #W between roof panels and beams. Then secure with 12 Bolts #10 and 12 Nuts #5.

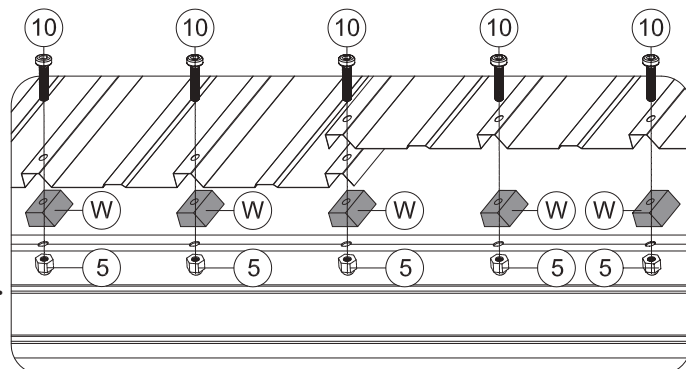

(5) Repeat the above procedures to assemble the opposite side.



(W) 16x

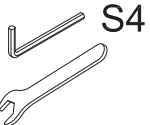

(1) 1x




M6

(5) 16x



M6x28

(10) 12x





M6x50

(12) 4x


ATTENTION: The bigger roof panel need to cover the smaller one.

(1) Insert Part #P4 and Part #P5 into the frame.


(3) Place 2 Part #W between roof panels and solidifying bars. Then secure with 2 Bolts #12 and 2 Nuts #5.

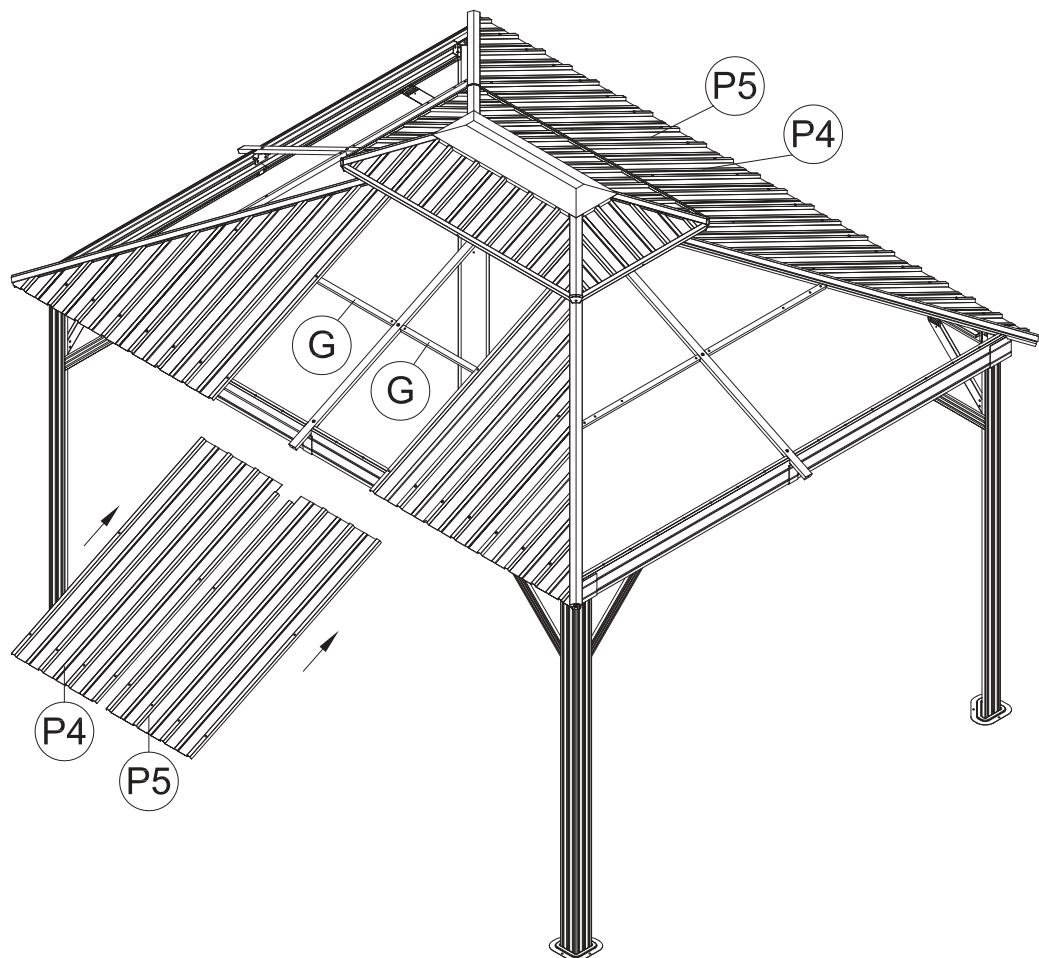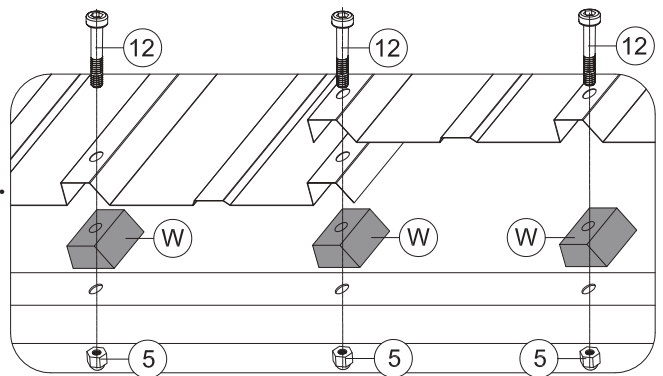


(2) Place 6 Part #W between roof panels and beams. Then secure with 6 Bolts #10 and 6 Nuts #5.

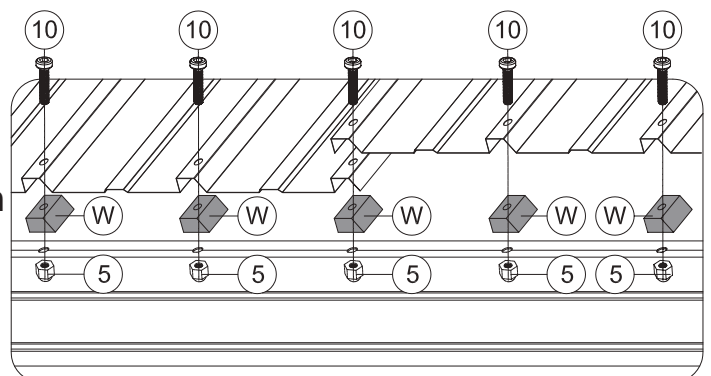


(4) Repeat the above procedures to assemble the opposite side.



(W) 4x

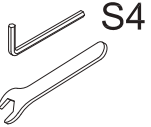


(1) 1x




M6x25

(9) 4x

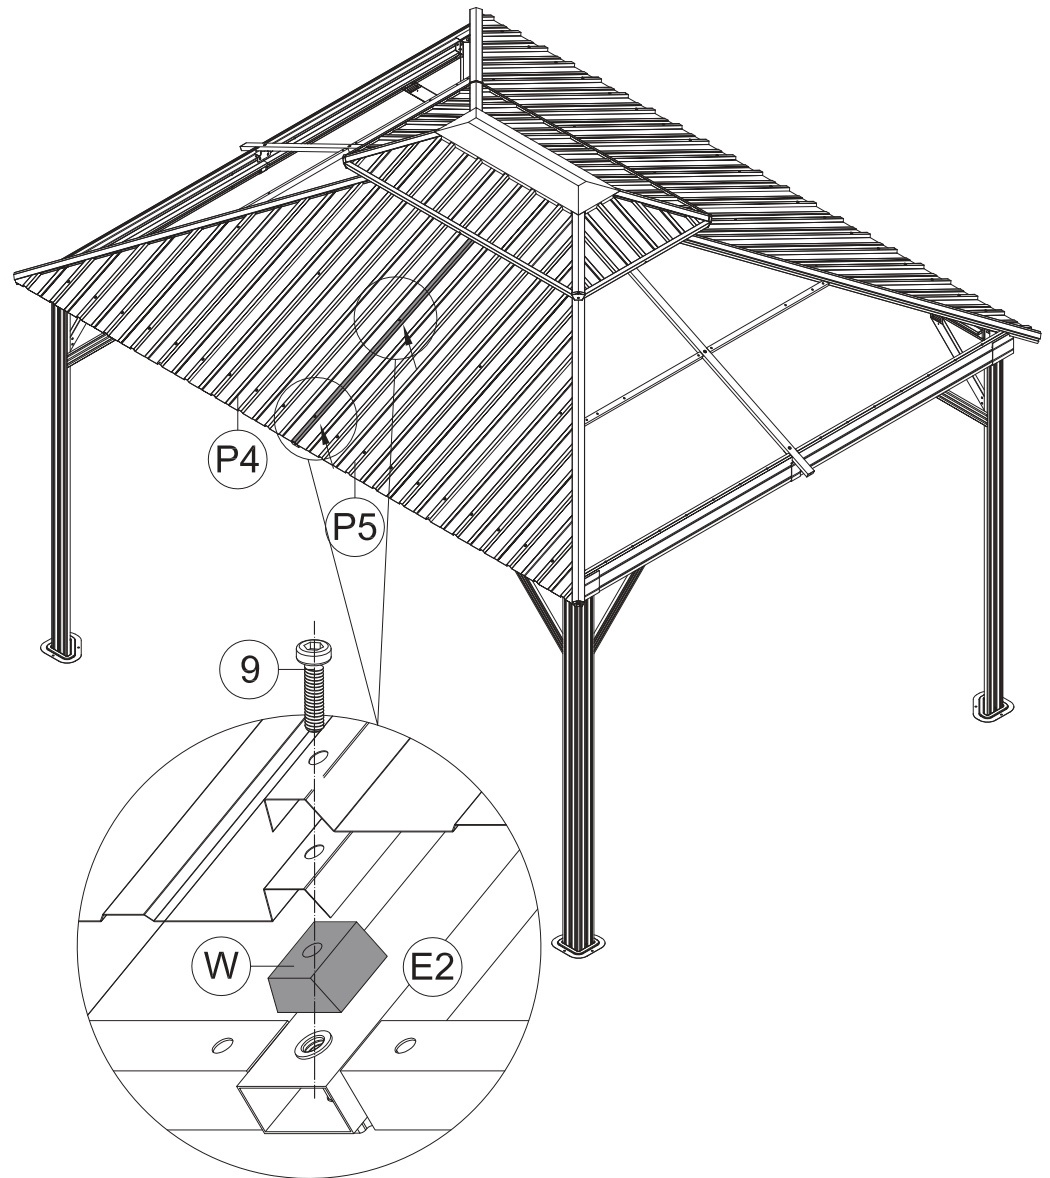


(1) Place 2 Part #W between roof panels and Part #E2.
Then secure with 2 Bolts #9 and 2 Nuts #5.

(2) Repeat the above procedures to assemble the opposite side.



(W) 20x

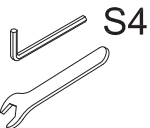

(1) 1x




M6

(5) 20x



M6x28


(10) 16x




M6x50

(12) 4x


ATTENTION: The bigger roof panel need to cover the smaller one.

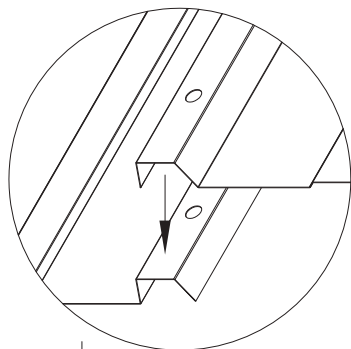

(1) Insert Part #M1 and Part #M2 into the frame.

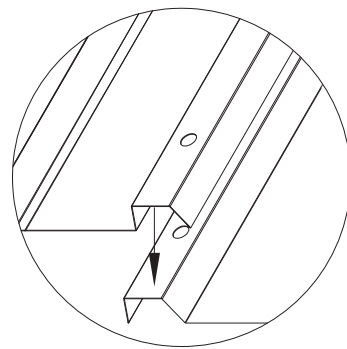


(2) Insert Part #M6 and Part #M5 into the frame.

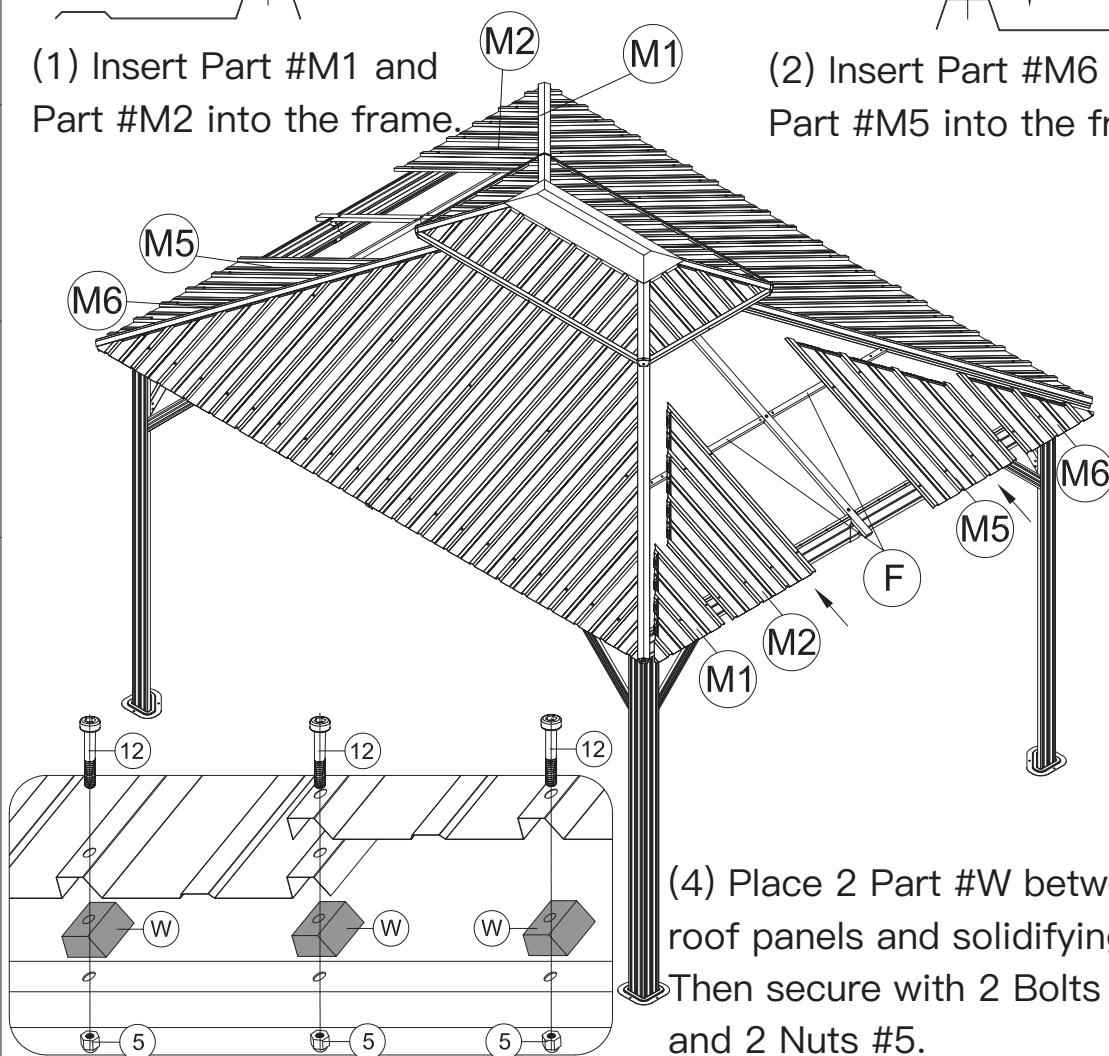


(4) Place 2 Part #W between roof panels and solidifying bars. Then secure with 2 Bolts #12 and 2 Nuts #5.

(3) Place 8 Part #W between roof panels and beams. Then secure with 8 Bolts #10 and 8 Nuts #5.

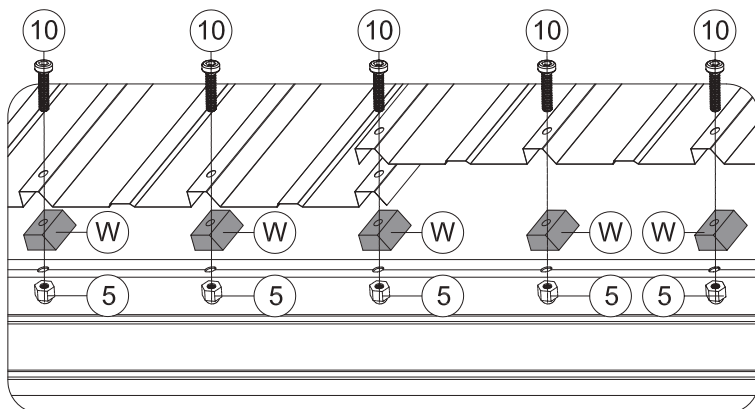

(5) Repeat the above procedures to assemble the opposite side.



(W) 16x



(1) 1x




M6

(5) 16x



M6x28

(10) 12x




M6x50


(12) 4x

ATTENTION: The bigger roof panel need to cover the smaller one.



(1) Insert Part #M3 into the frame.

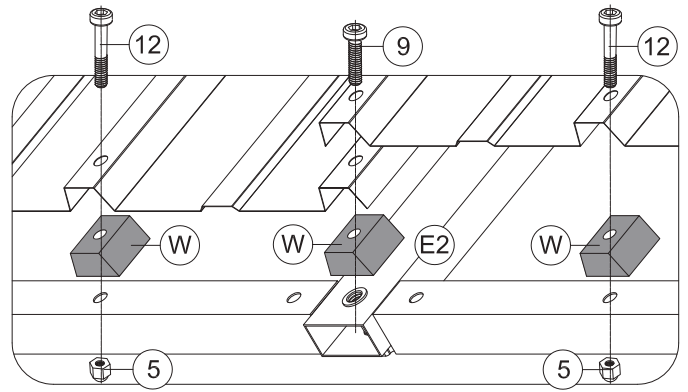

(3) Place 2 Part #W between roof panels and solidifying bars. Then secure with 2 Bolts #12 and 2 Nuts #5.

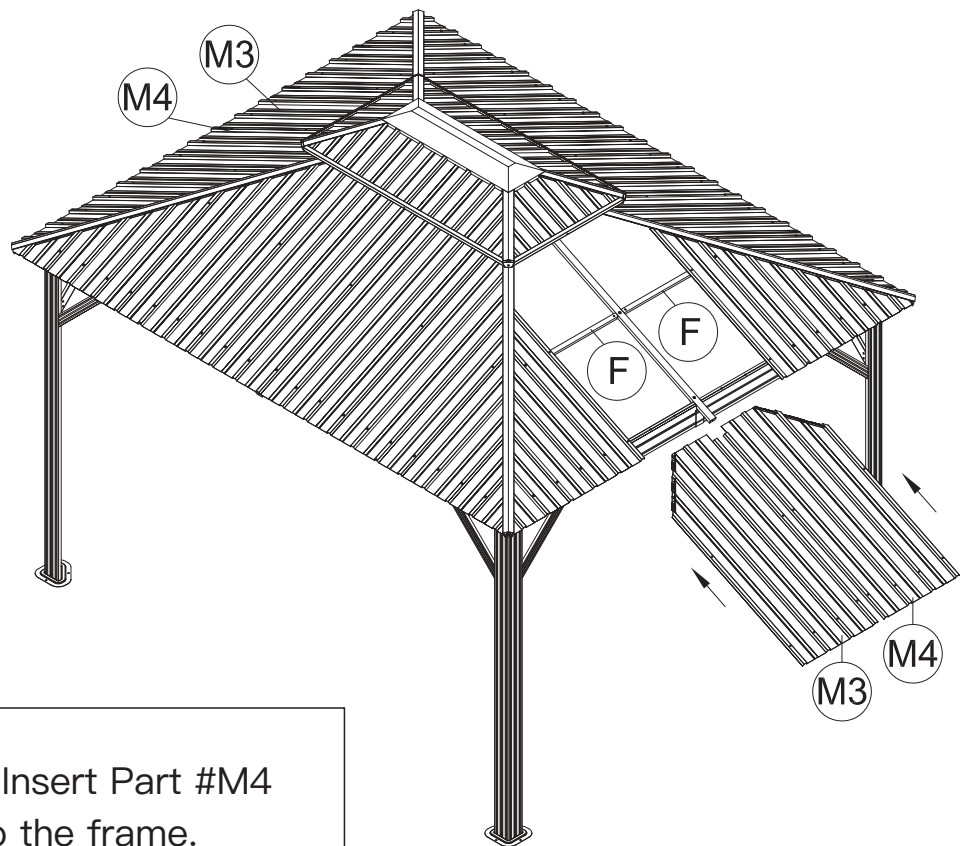


(2) Insert Part #M4 into the frame.

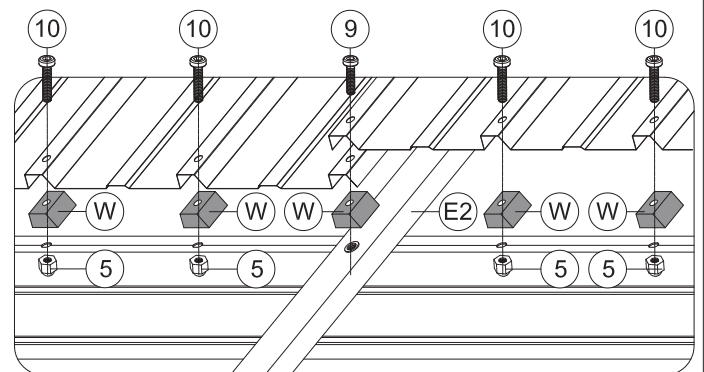


(4) Place 6 Part #W between roof panels and beams. Then secure with 6 Bolts #10 and 6 Nuts #5.


(5) Repeat the above procedures to assemble the opposite side.



(W) 4x

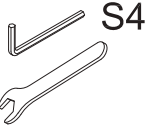



(1) 1x




M6x25

(9) 4x


(1) Place 2 Part #W between roof panels and Part #E2.
Then secure with 2 Bolts #9 and 2 Nuts #5.

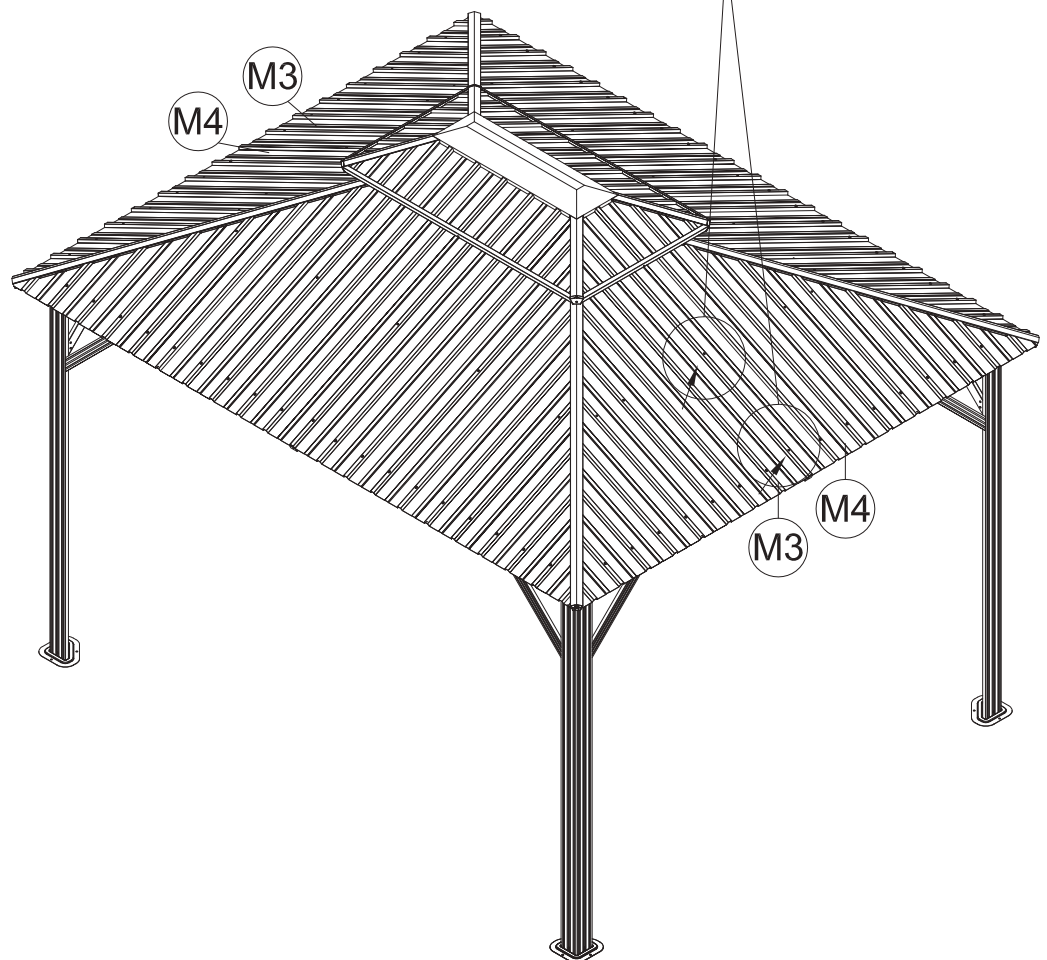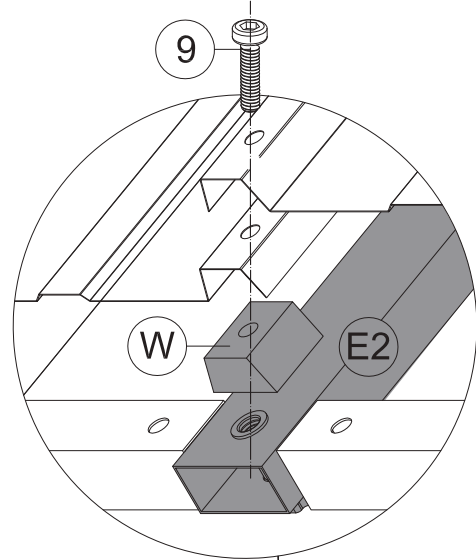

(2) Repeat the above procedures to assemble the opposite side.

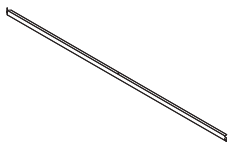

K2 2x

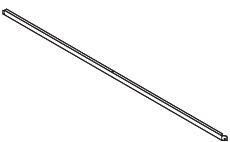

K3 2x



X2 2x





1 1x




M6x16

8 2x

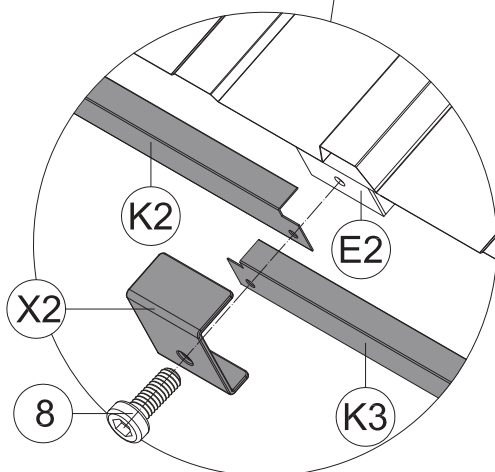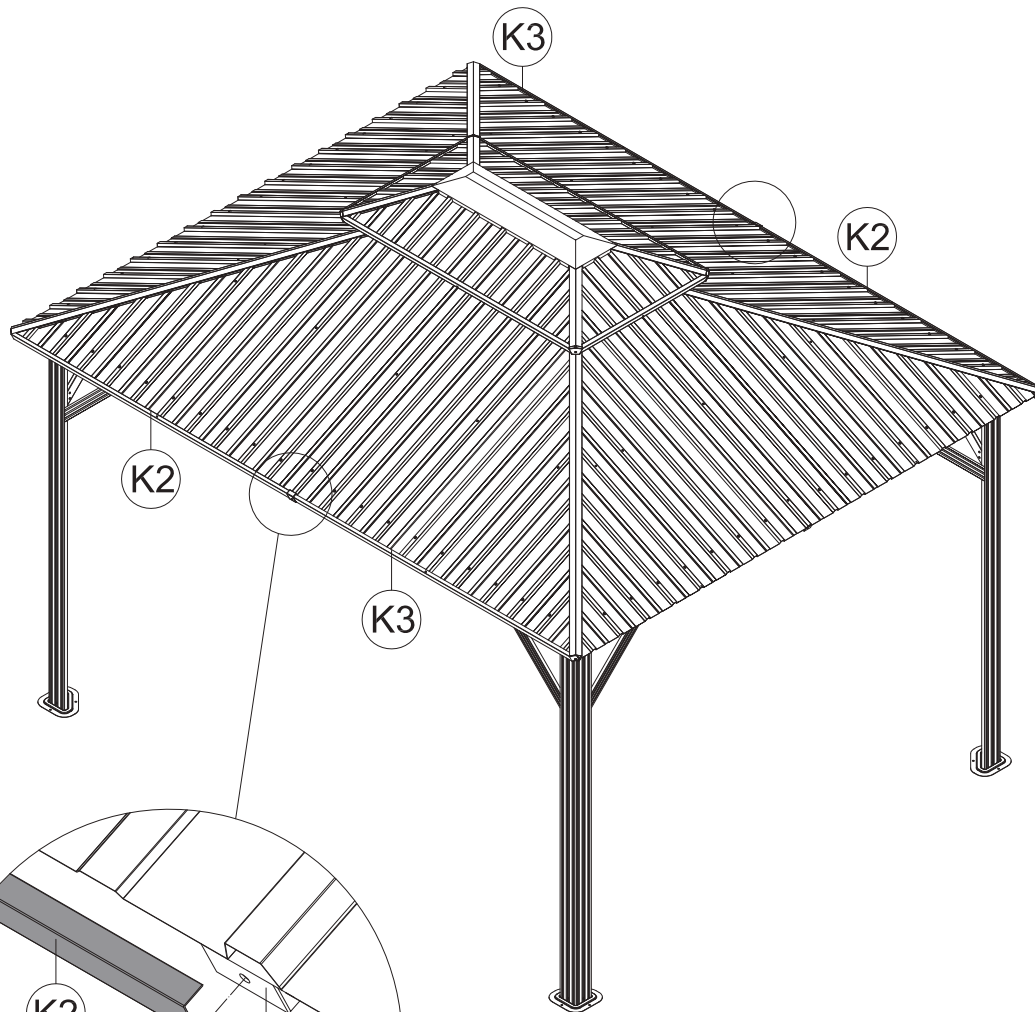


(1) Place Part #K2 and Part #K3 on Part #E2;
Put on Part #X2 and secure with Bolt #8.

(2) Repeat the above procedures to assemble the opposite side.

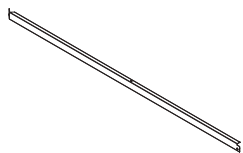

(K) 2x

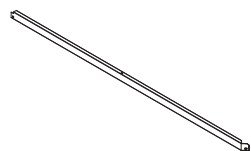

(K1) 2x



(X2) 2x





(1) 1x



M6x16

(8) 2x

(1) Place Part #K and Part #K1 on Part #E2;
Put on Part #X2 and secure with Bolt #8.

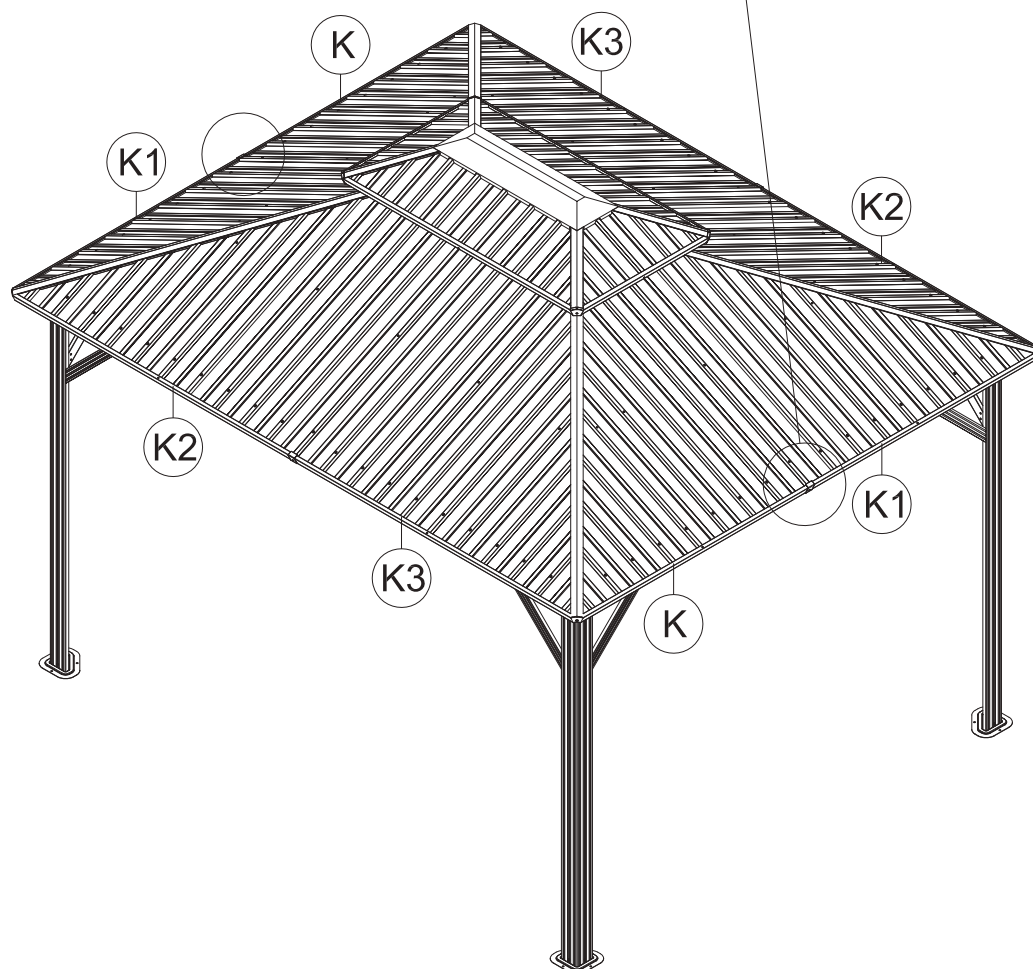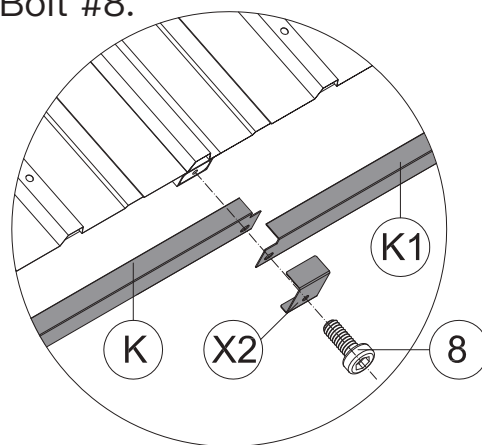

(2) Repeat the above procedures to assemble the opposite side.



(X3) 4x




(1) 1x



ST6.3x15

(2) 4x

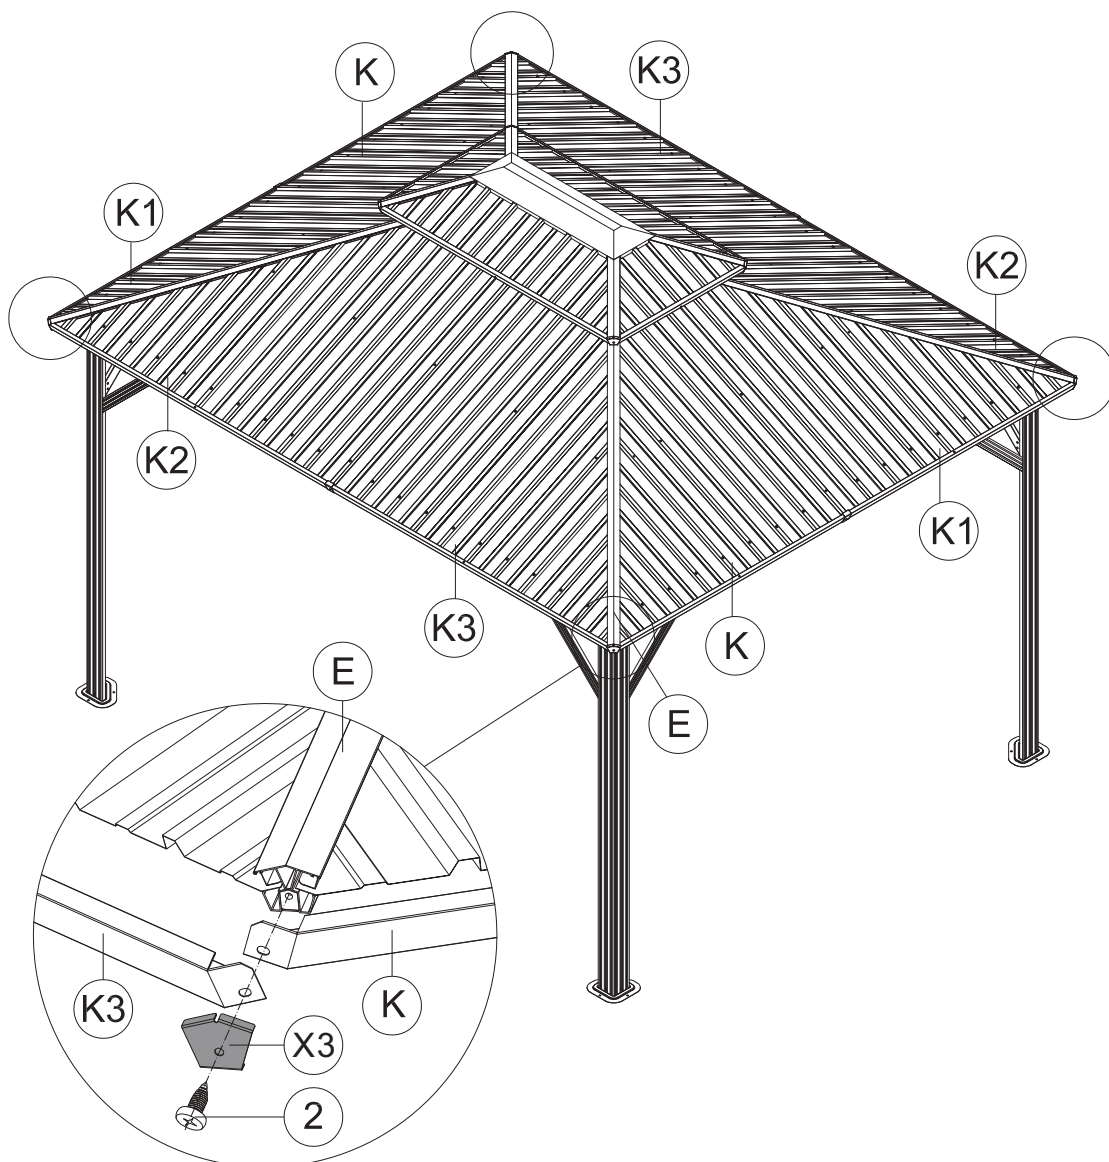

(1) Place Part #K3 and Part #K on Part #E;
Put on Part #X3 and secure with Self-tapping Screw #2.


(2) Repeat the above procedures to assemble the other 3 corners.



ST5x16

3

8x


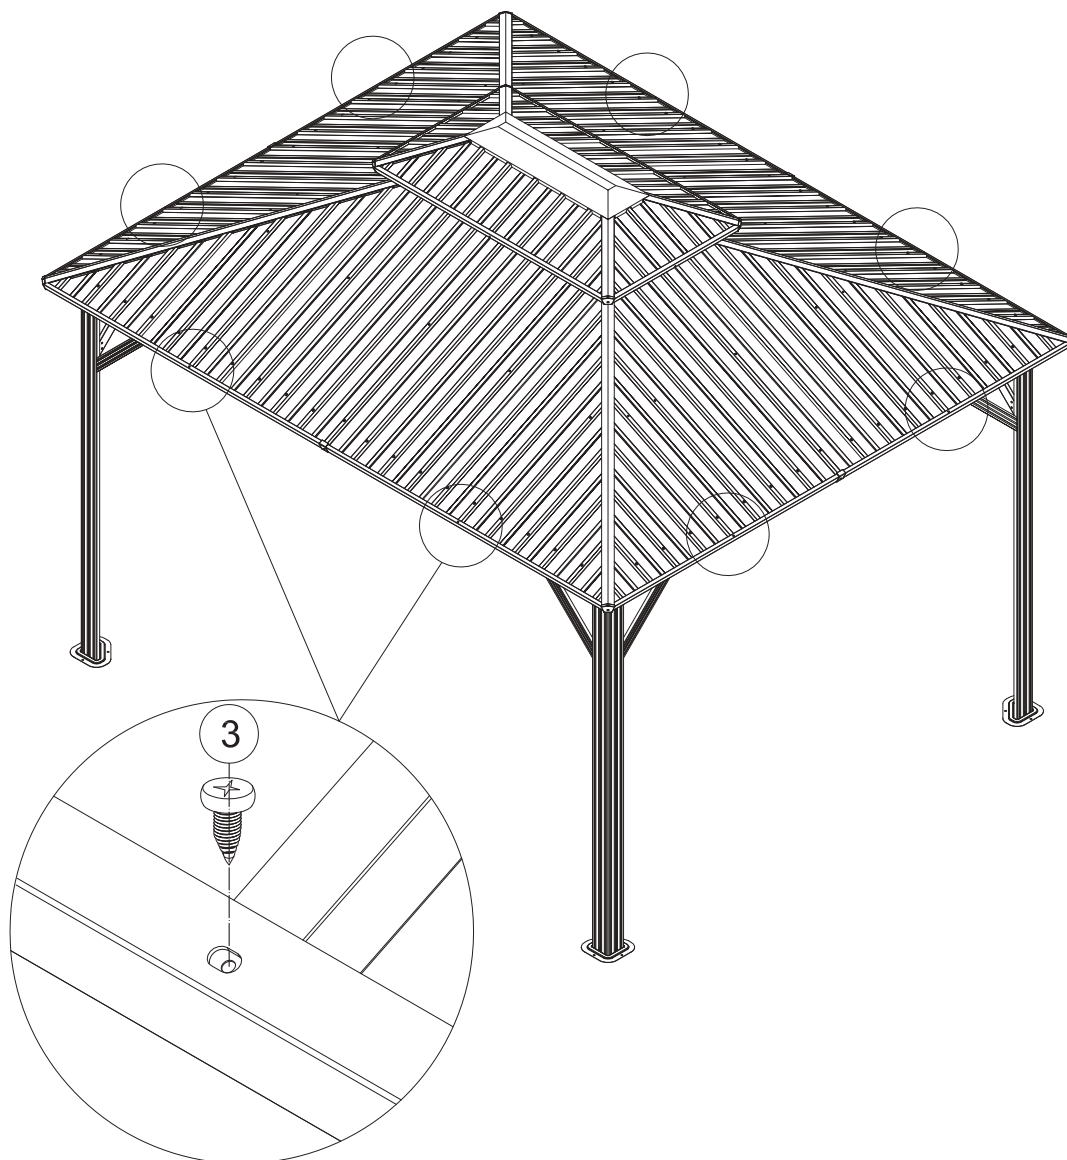



(1) Attach roof panels to finishing bars with 2 Self-tapping Screws #3.

(2) Repeat the above procedures to assemble the other 3 sides.


How to Put the 104 Hooks into the Double-track

Double-track

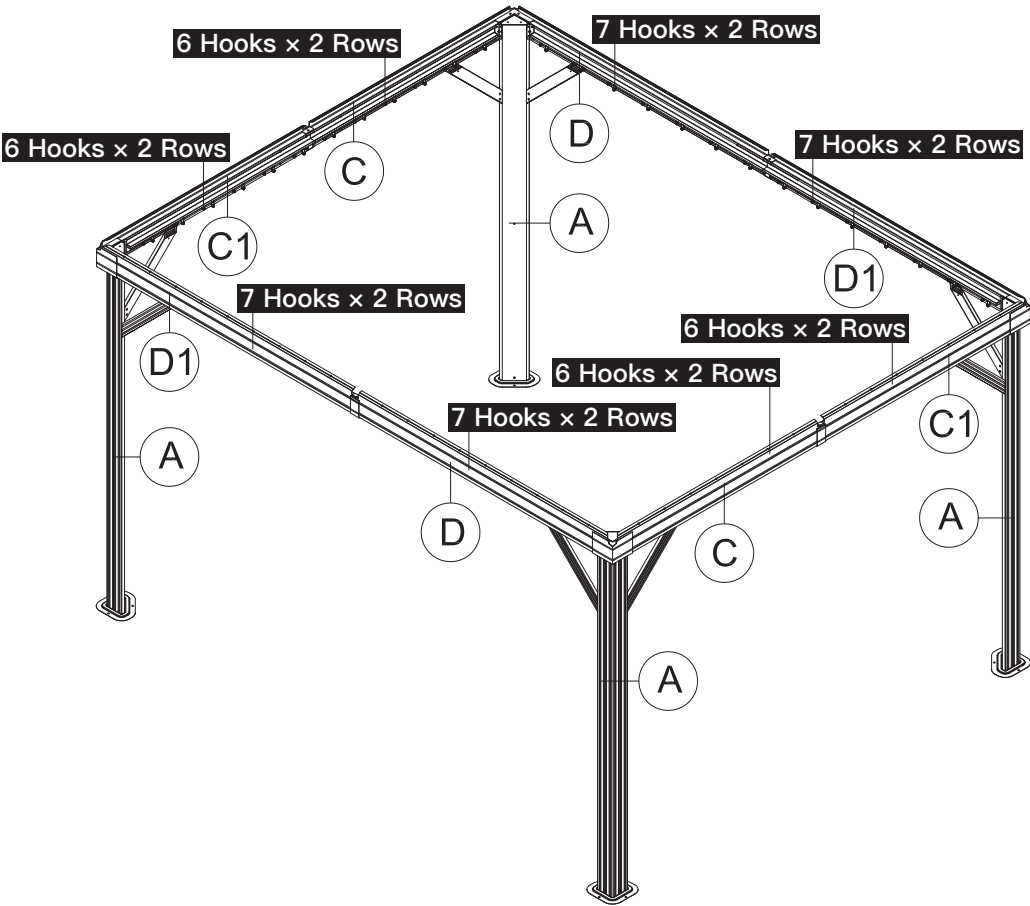
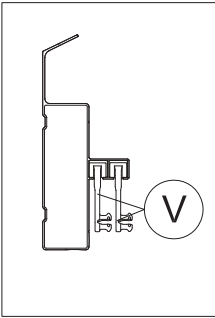


	(T1) 2x
	(V) 48x
	S4
	(1) 1x
	M6x16
	(8) 2x
45	


(1) Place 6 hooks on each slot of the Sidewall Track(C1&C).

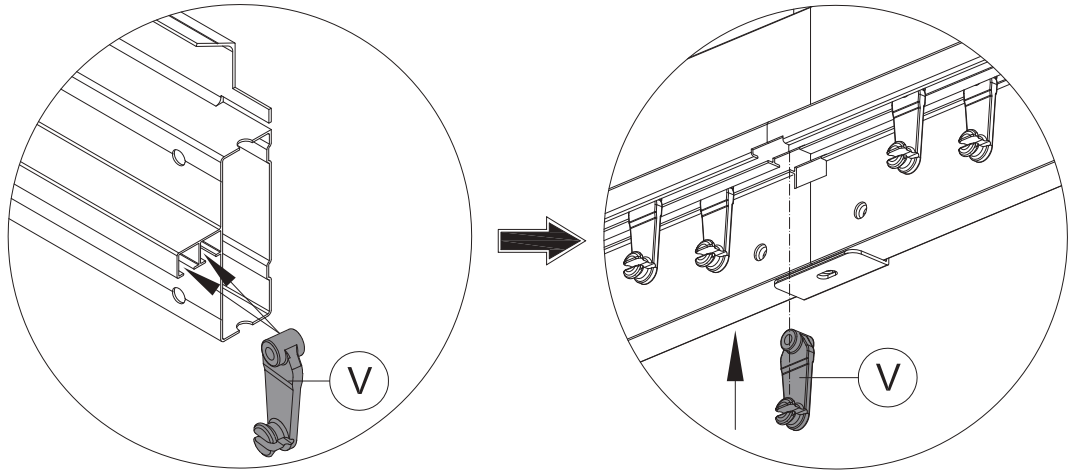


(2) Install Part #T1 at the joint of Part C&C1 with Bolt #8.

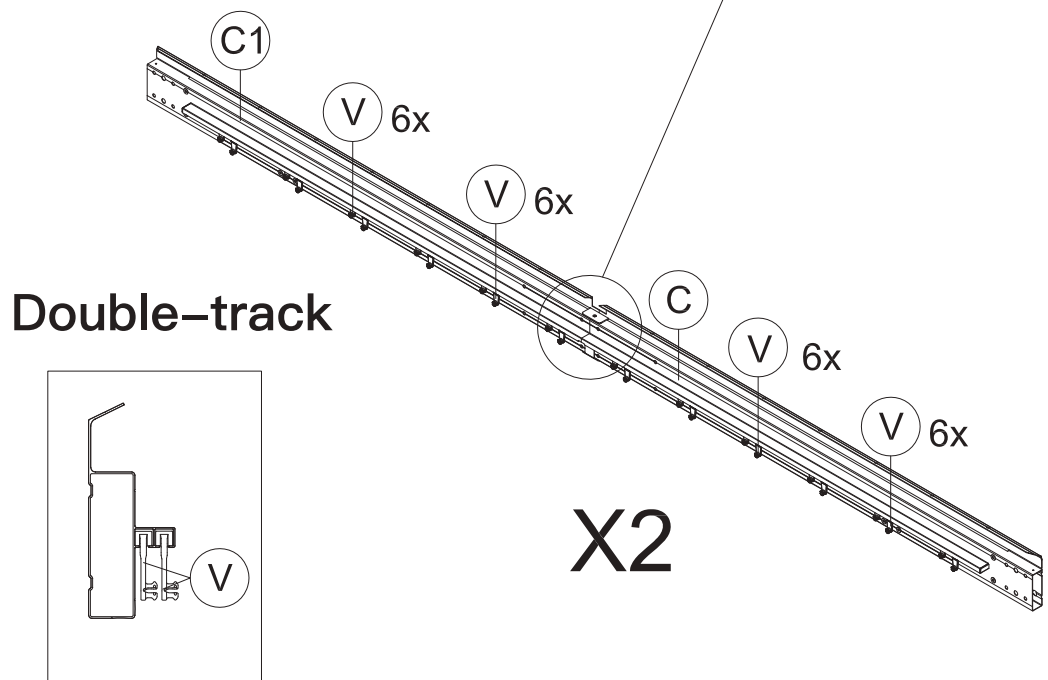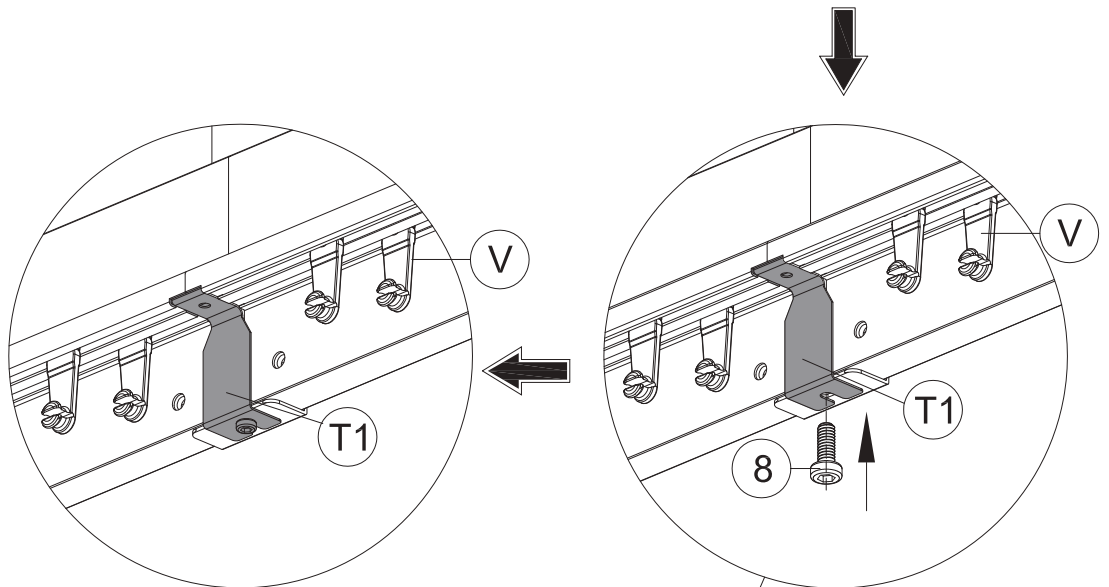


(3) Repeat the above procedures to assemble the opposite side.

	(T1) 2x
	(V) 56x
	S4
	(1) 1x
	M6x16
	(8) 2x
46	


(1) Place 7 hooks on each slot of the Sidewall Track(D&D1).

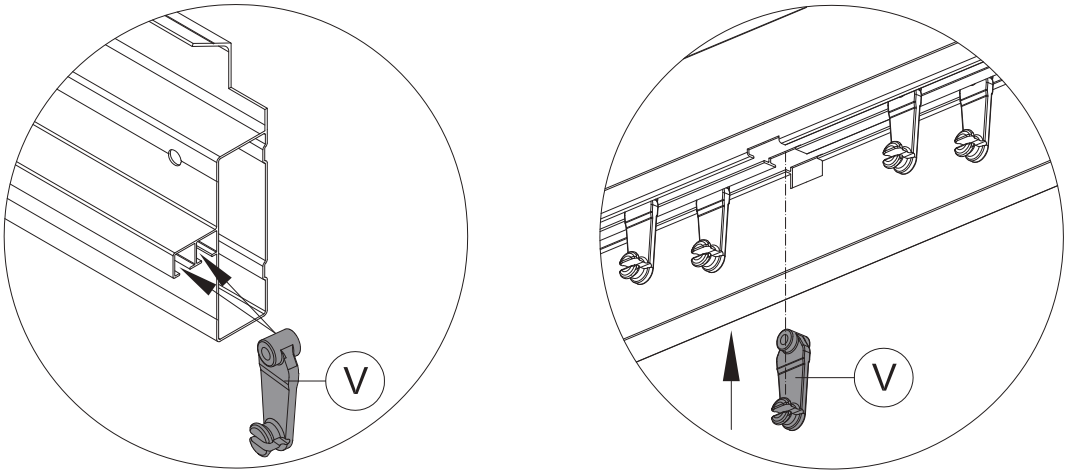

(2) Install Part #T1 at the middle of Part #D&D1 with Bolt #8.

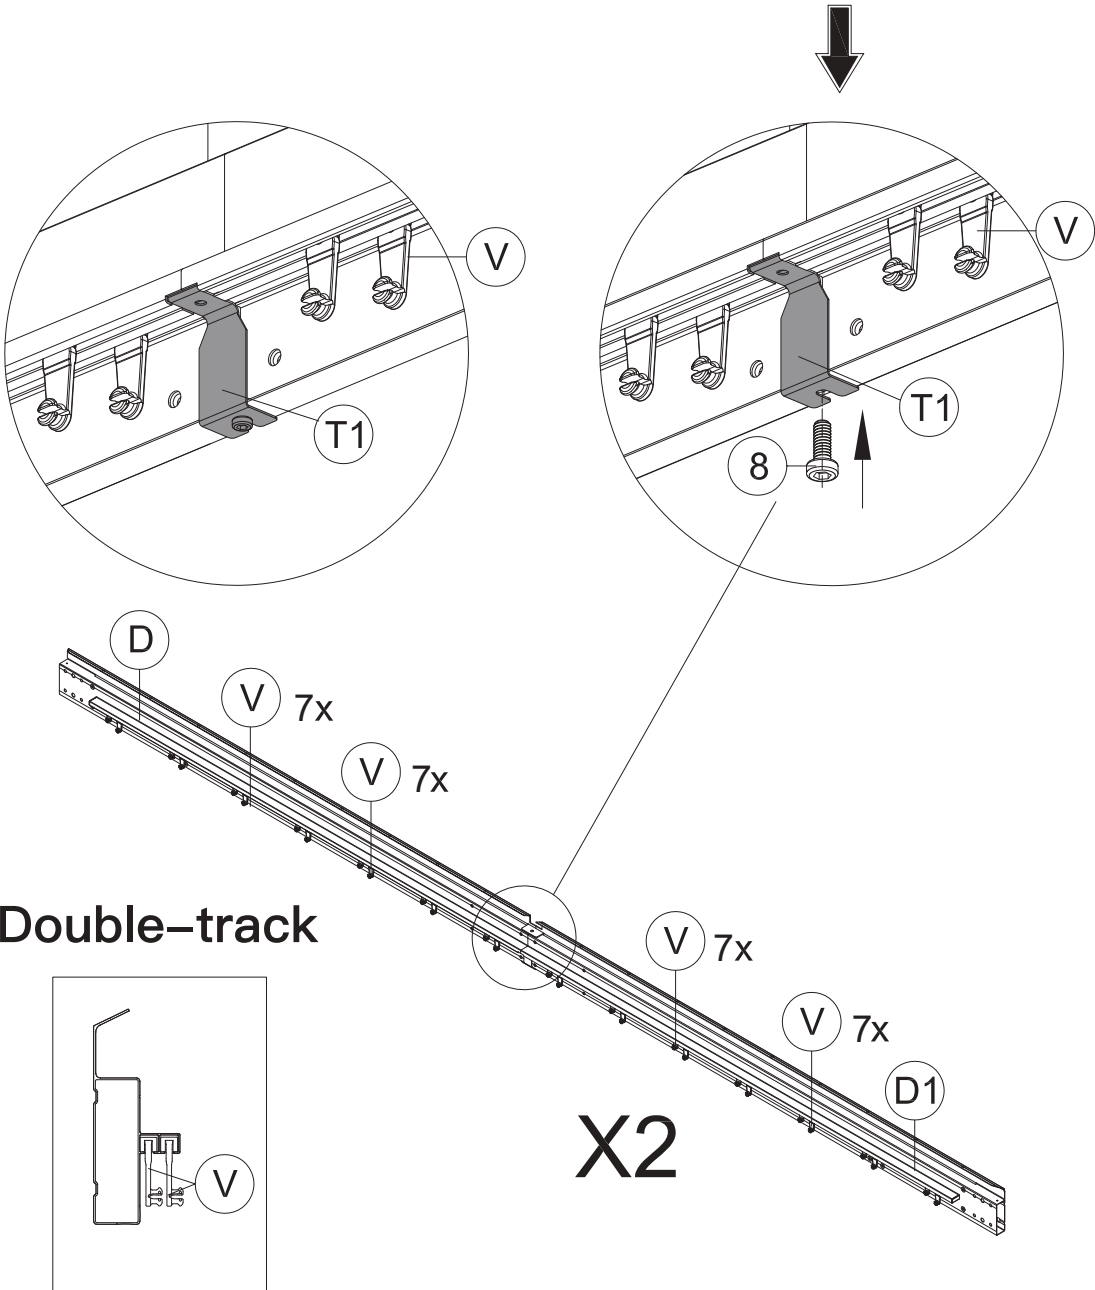


(3) Repeat the above procedures to assemble the opposite side.




Y1 4x


Hang up Mosquito Sidewalls to **Inside Track**

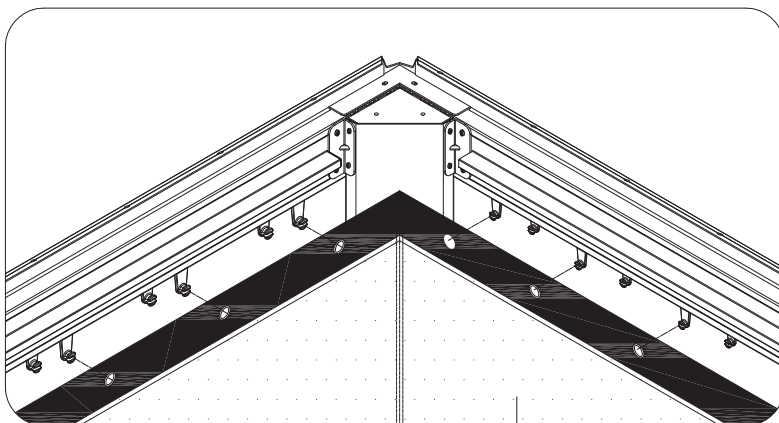

Y1

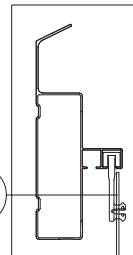

Y1

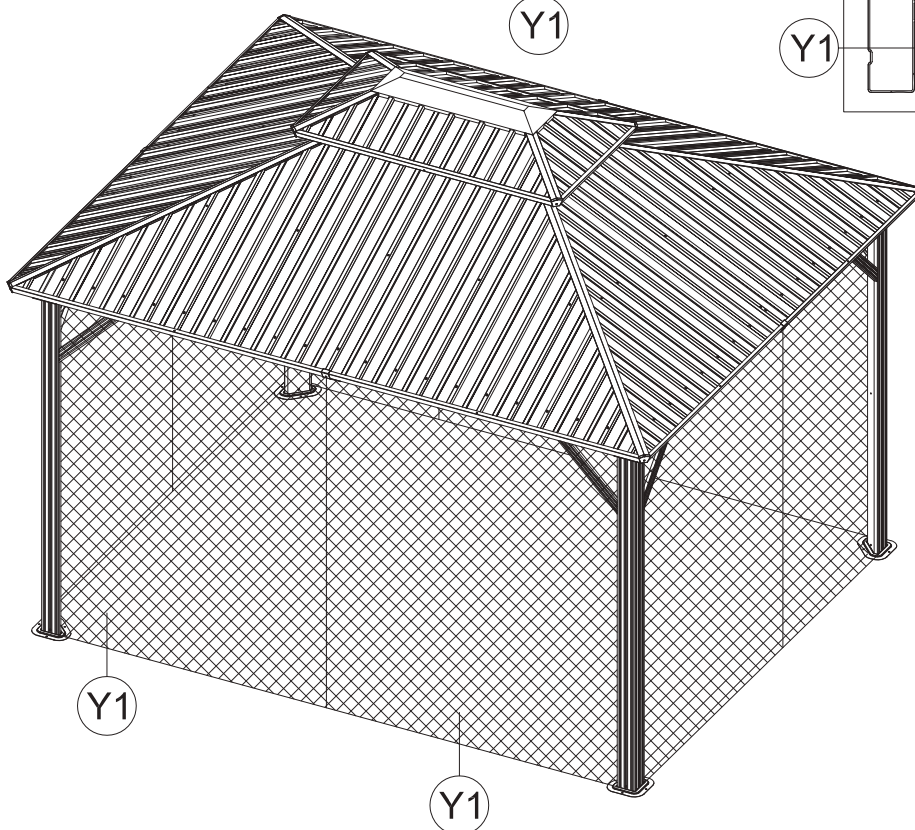


Y1


Y1

Y1


Y1

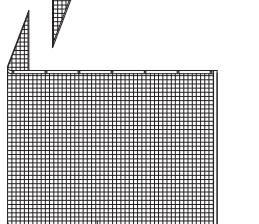


Y1

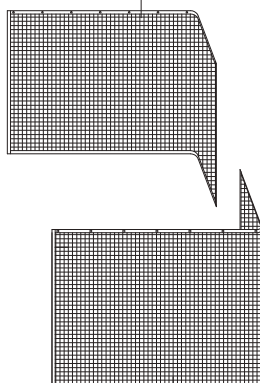

Y1



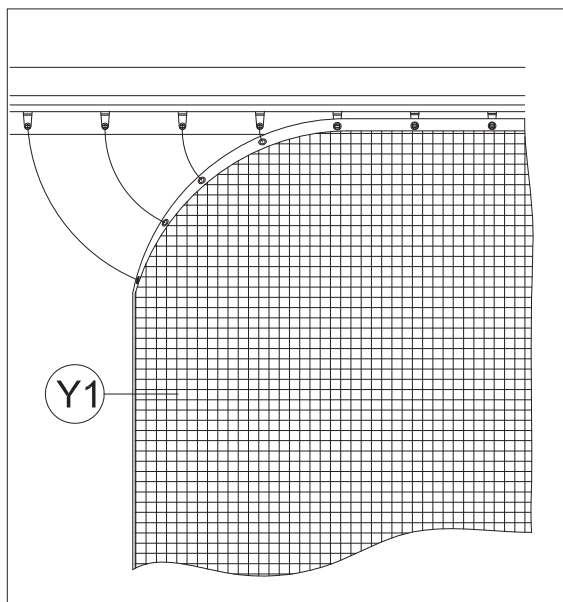


Y1




Y 4x

Hang up Solid Sidewalls to Outside Track

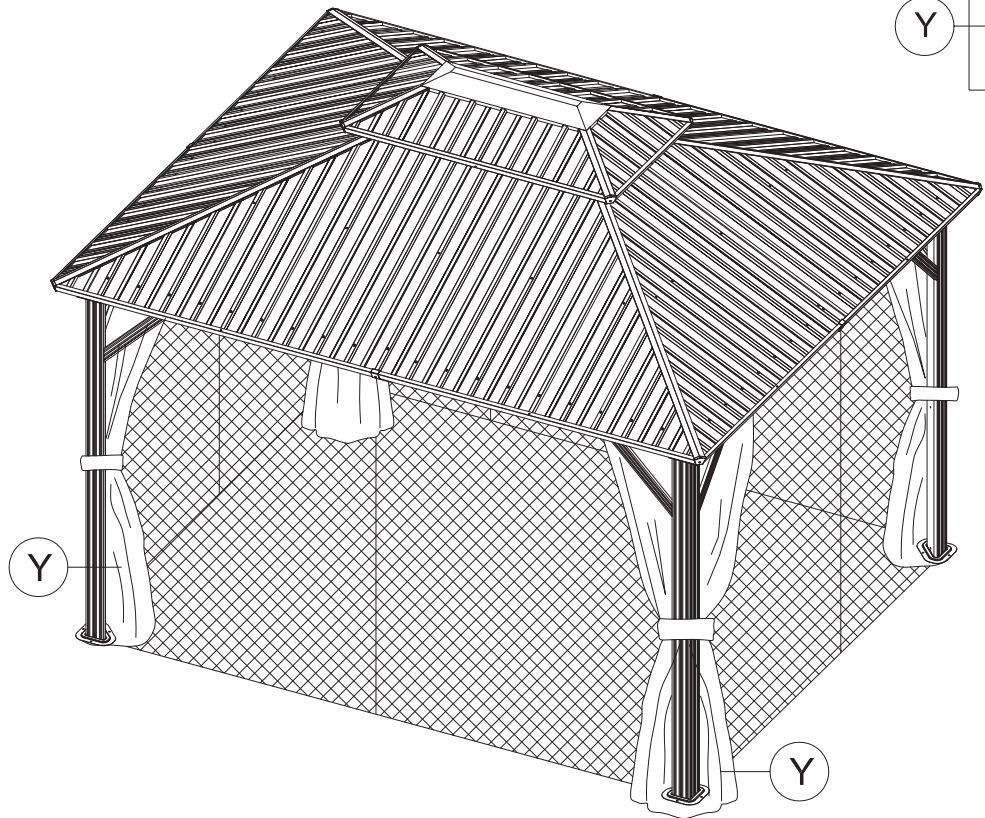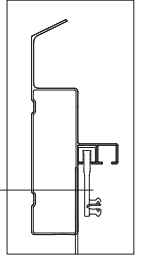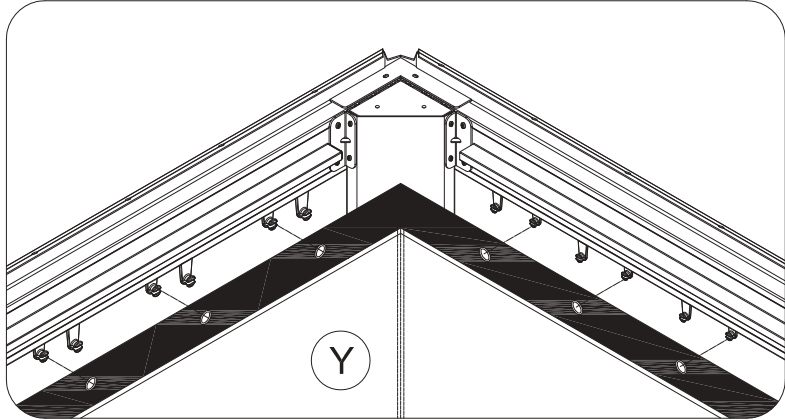


Y


Y

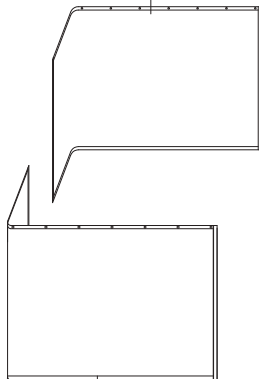


Y

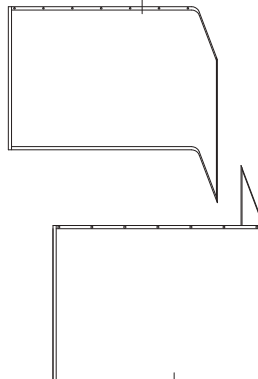

Y

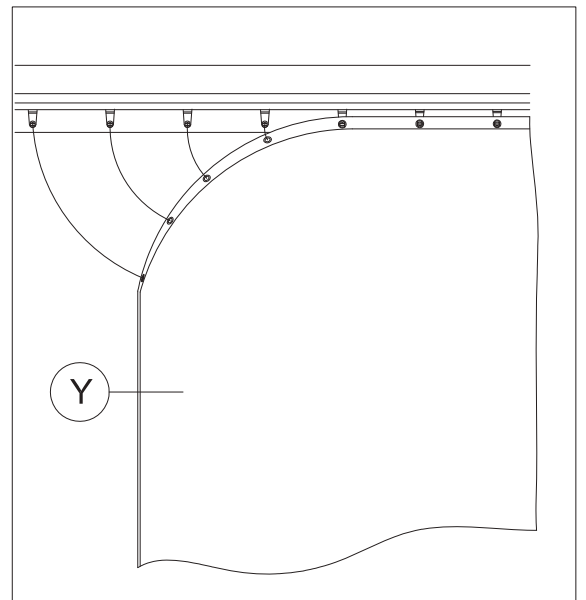

Y

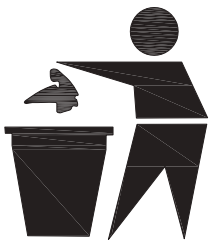

Thanks for your purchase.

At domi outdoor living, we believe in our products.

That's why we provide a 12-month warranty and friendly, easy-to-reach after-sales service. So if you have any questions about our product and assembly, please feel free to contact us. We will be here for you.

Support:



After-sales contact email:

service@domioutdoorliving.com

Please tell us your order ID when contact.

Attach photos of damaged part for instant reply.