


LATCH AND STRIKE TEMPLATE

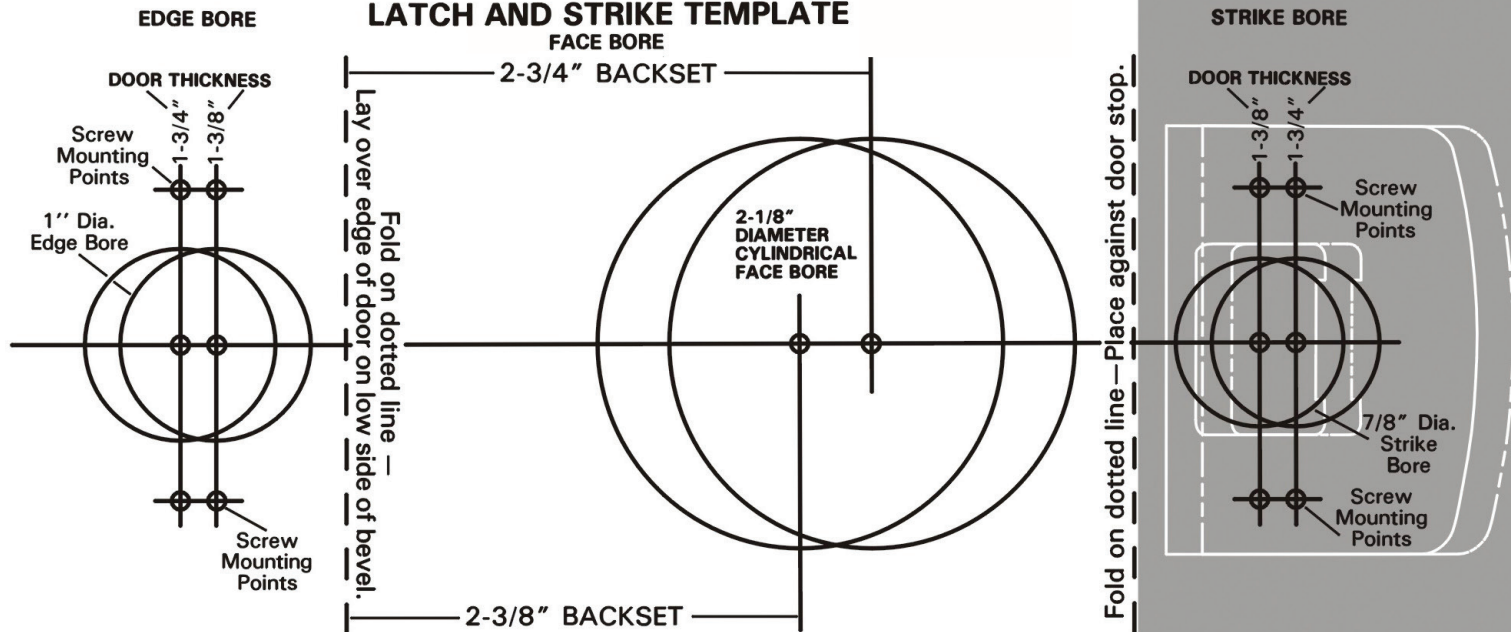

STRIKE BORE

DOOR THICKNESS

1-3/4"
1-3/8"

Screw
Mounting
Points

7/8" Dia.
Strike
Bore

Screw
Mounting
Points

Fold on dotted line — Place against door stop.

LATCH AND STRIKE TEMPLATE

FACE BORE

2-3/4" BACKSET

2-1/8"
DIAMETER
CYLINDRICAL
FACE BORE

2-3/8" BACKSET

EDGE BORE

DOOR THICKNESS

Screw
Mounting
Points

1-3/8"
1-3/4"

1" Dia.
Edge Bore

Screw
Mounting
Points

Fold on dotted line —
Lay over edge of door on low side of bevel.