

MEDICINE CABINET

Specification & Installation Guide

IMPORTANT SAFETY INSTRUCTIONS

When using an electrical furnishing, basic precautions should always be followed, including the following:



➤ **WARNING:** To reduce the risk of burns, fire, electric shock or injury to persons. Use this furnishing only for its intended use as described in these instructions. Do not use attachments not recommended by the manufacturer. Never drop or insert any object into any opening. Do not use outdoors.



WARNING: Risk of electric shock. Connect this furnishing to a properly grounded circuit only. See grounding instructions.

ELECTRIC CONNECTIONS

ALL WIRING SHOULD BE DONE BY A QUALIFIED LICENCED ELECTRICIAN.



WARNING: Shut off power before wiring the cabinet.



CAUTION: Requires 120 VAC 20 Amp GFI protected Circuit.

GROUNDING INSTRUCTIONS:





CAUTION: This product must be connected to a grounded metal permanent wiring system or an equipment-grounding conductor must be run with the circuit conductors and connected to the equipment grounding terminal or lead on the product.



WARNING: An Electrical option cabinet must be wired to a 20 Amp GFI (Ground Fault Interrupter) protected circuit when used in bathrooms and all other locations required by the National Electric Code.

The electric wire comes through the access hole on the top of the cabinet.

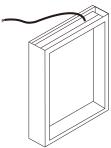


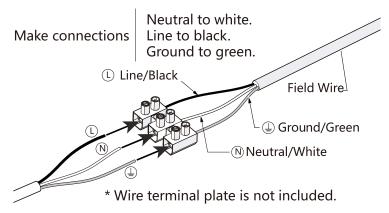

HARDWARE AND TOOLS

Hardware				Tools (not includes)		
NO.		Draw	QTY(pcs)		_	
Α	Top mounting bracket		2-3			
В	Bottom mounting bracket		1	Electric Drill	1/8" Drill Bit	Pencil or Marker
С	Hardware screw	@JIIIIIIIII	4-10		SILICONE	
D	Glass side panel		2		51110	
Е	Glass Shelf		3	Screw Driver	Silicone	Tape Measure
F	Shelf support bracket		6			
G	Connector		2			
Н	Wall Plug	WHEN SO	4-10	Toothless flat nose plier	Lever	

DIMENSIONS

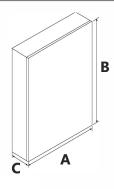

A-Cabinet's Width

B-Cabinet's Height


C-Cabinet's Depth

NOTE: Determine overall medicine cabinet dimensions. If for recess mounting medicine cabinet, determine rough-in (Wall Cut-out) dimensions.


NOTE: All rough-in dimensions for reference only!

	А	В	С	Rough in size
	20"	32"	5"	19-1/2"x31-1/4"x4"
Pillar	24"	32"	5"	23-1/2"x31-1/4"x4"
	30"	32"	5"	29-1/2"x31-1/4"x4"
	20"	32"	5"	19-1/2"x31-1/4"x4"
Asta	24"	32"	5"	23-1/2"x31-1/4"x4"
	30"	32"	5"	29-1/2"x31-1/4"x4"
	20"	32"	5"	19-1/2"x31-1/4"x4"
Sirius	24"	32"	5"	23-1/2"x31-1/4"x4"
	30"	32"	5"	29-1/2"x31-1/4"x4"


PRIOR TO MOUNTING

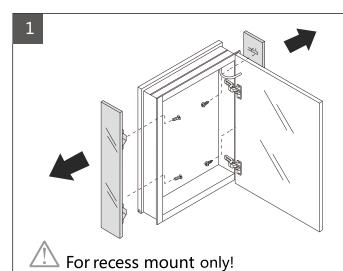


Carefully remove side mirror panels for recess mount installation.

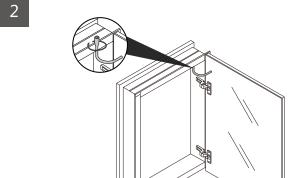

Remove door(s) prior to mounting your cabinet. Start with unplugging the door from the cabinet.

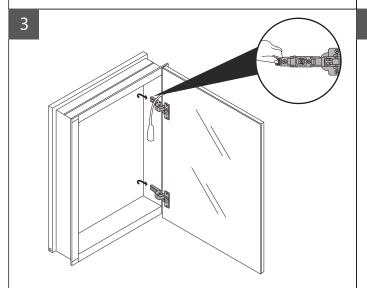


While supporting the door release(the lever under the hinge arm), slide the door off the frame.

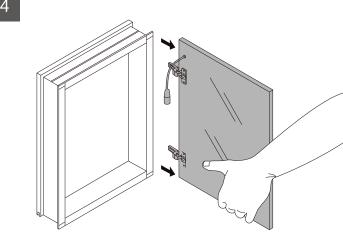


Take off the door(s) carefully and lay it down on a safe area.

CONNECTING CABINETS (OPTIONAL RECESS MOUNTING)

Connect cabinets with connectors provided.

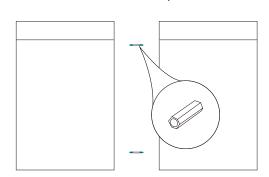


Measure single or combined connected cabinet rough in size.

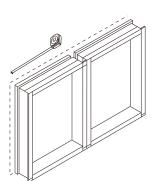


RECESS MOUNT INSTALLATION CONTINUED



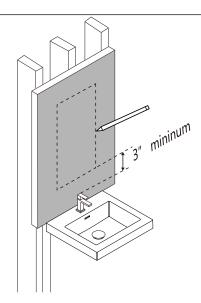


Draw the perimeter of the cabinet on the wall.



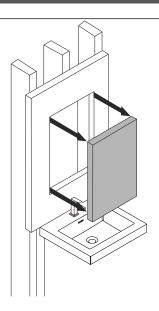


Cut the marked perimeter with suitable tool.

3

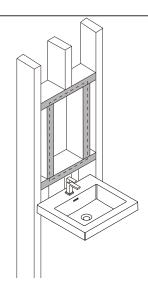


Frame the opening for the cabinet based on the measurements.

4

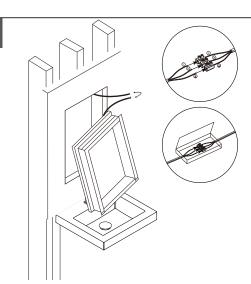


Connect electrical wires before inserting the cabinet into the opening.

5

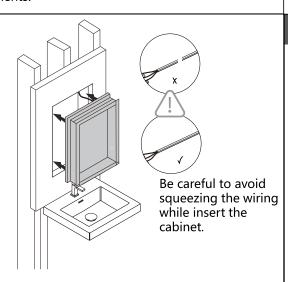


Position cabinet in cut out opening.

6

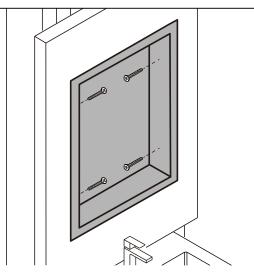


Affix using hardware screws into the studs.

SURFACE MOUNT INSTALLATION

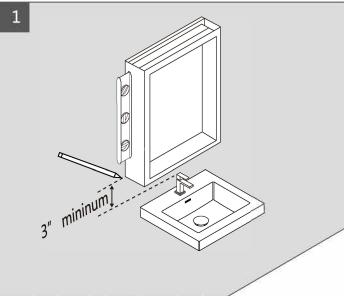



Bottom mounting brackets must be attached to furring strip/channel or wall studs

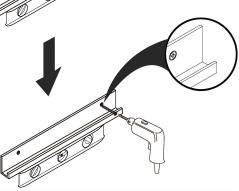


Attach bottom bracket to wall.

Level and mark the cabinet's location on the wall.

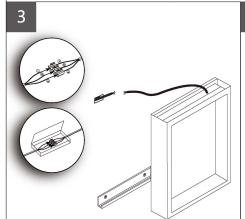

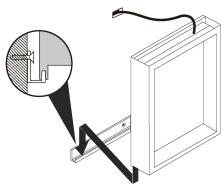


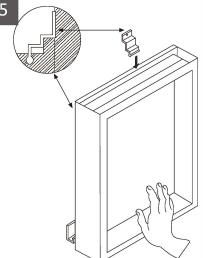


With assistance to rest the cabinet on the

Connect the electrical wires. mounting bracket and hold in place.

Insert top mounting bracket into the top of the cabinet.

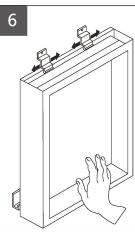

Make sure top brackets are locked in the grooves.

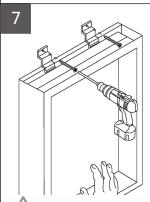


Top mounting brackets must be attached to furring strip/channel or wall studs.

Attach the top mounting bracket to the wall using a screw gun.




Make sure cabinet is leveled and fully inserted into the groove of the bottom bracket.

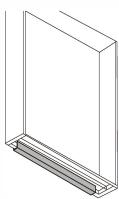


Test the fit of the cabinet before Final assembly.

FINAL ASSEMBLY

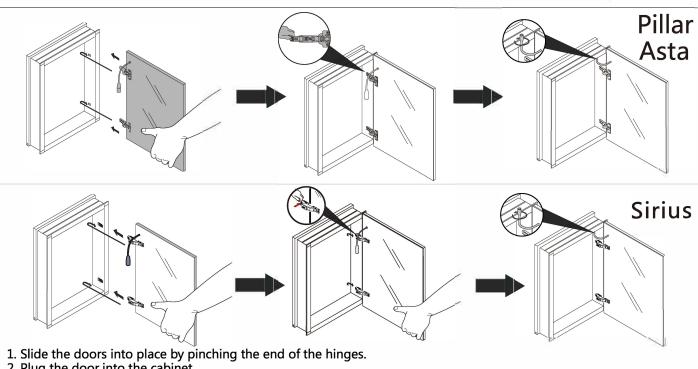

2. Plug the door into the cabinet.

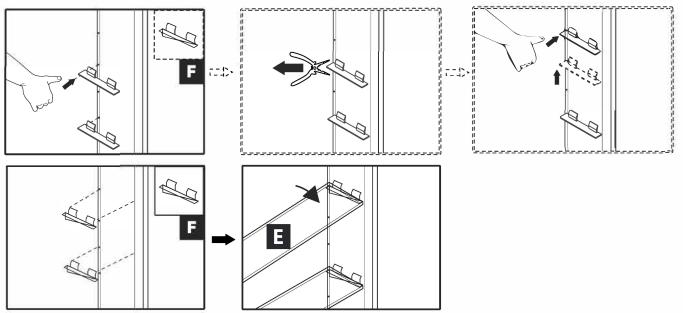


1.Insert clear snap in shelf clips (F) into holes on the sides of the cabinet cabinet.

OPTIONAL DOOR ADJUSTMENT

Doors may need to be adjusted after the initial shipping of the cabinet. The cabinet doors have a three-way adjustment feature. Height, side-to side, level and depth can be adjusted. With the hinge slightly closed you can access the middle screw for up/down adjustment.

With the hinge fully extended you can access the front and back screws. These screws will move the door side to side and in and out

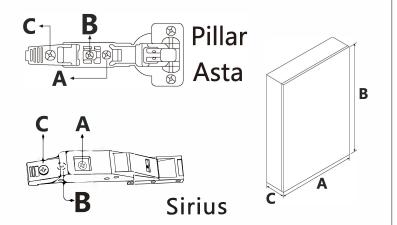

FINAL ASSEMBLY

How to use touch sensor switches: (8) 🖨 🚱

Antifogging function: touch key (%) to turn on/off defogging function

Lighting function: Touch key 🚯 to turn on or off the lighting function

Hold the key 🚯 to dim or brighten the light. Touch the key 🖨 to adjust the color

temperature of the light when the light is on.

Hold down the key for more than two seconds and enter programming mode When entering programming mode, the device will cycle all digits and temperatures once, with an interval of 3 seconds. When the digits flicker, touch the key (a) again to adjust the digits or degrees Celsius and Fahrenheit. Set the time for the clock to resume its normal function automatically after 10 seconds, and automatically convert the time and temperature to display.

Use and Maintenance:

The interior is constructed of mirrored glass and aluminum. Use only a damp cloth to clean. Ammonia or vinegarbased cleansers can damage mirrors.

When cleaning, spray the cloth, not the mirror, or surrounding surfaces. Do not use abrasive cleansers on any parts of the light fixture.