

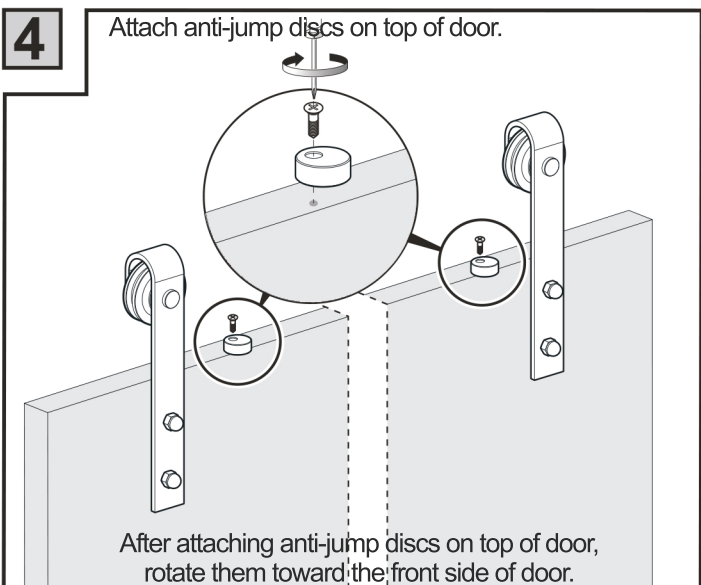
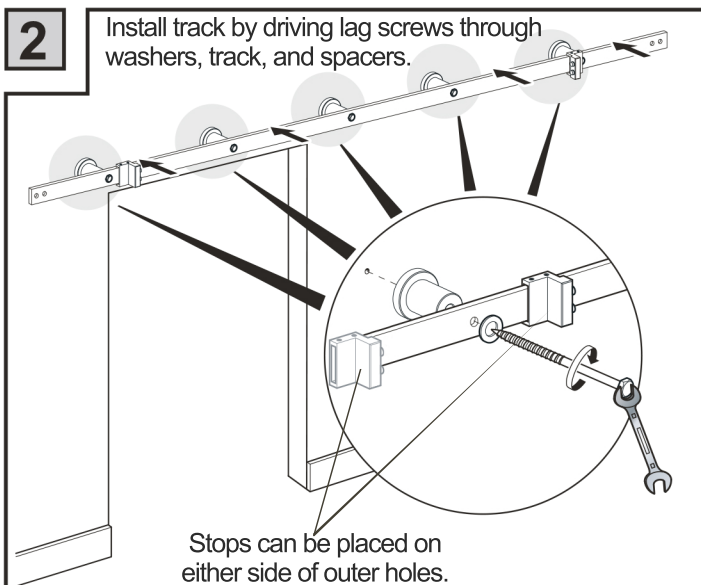
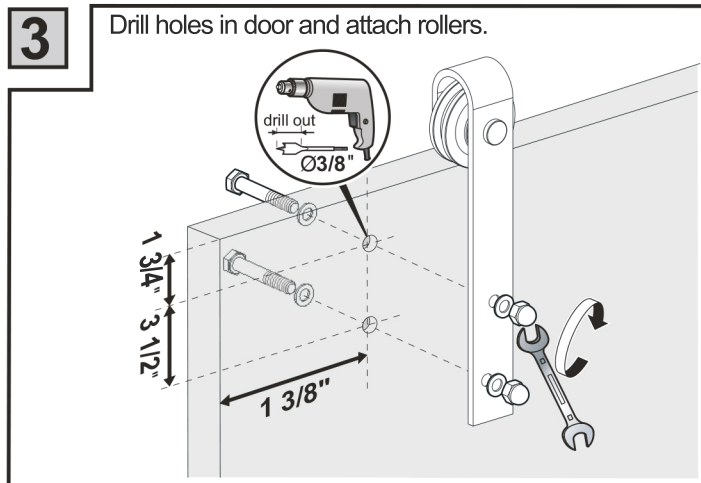
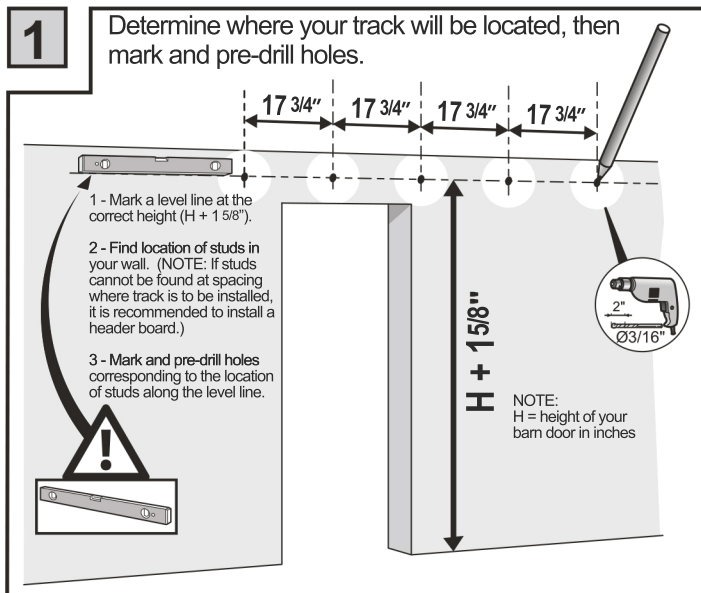
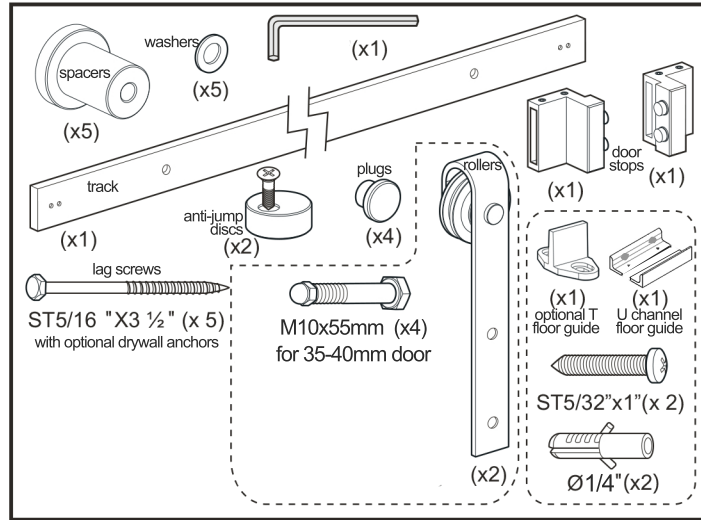
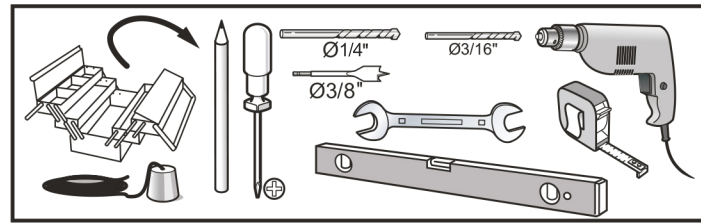


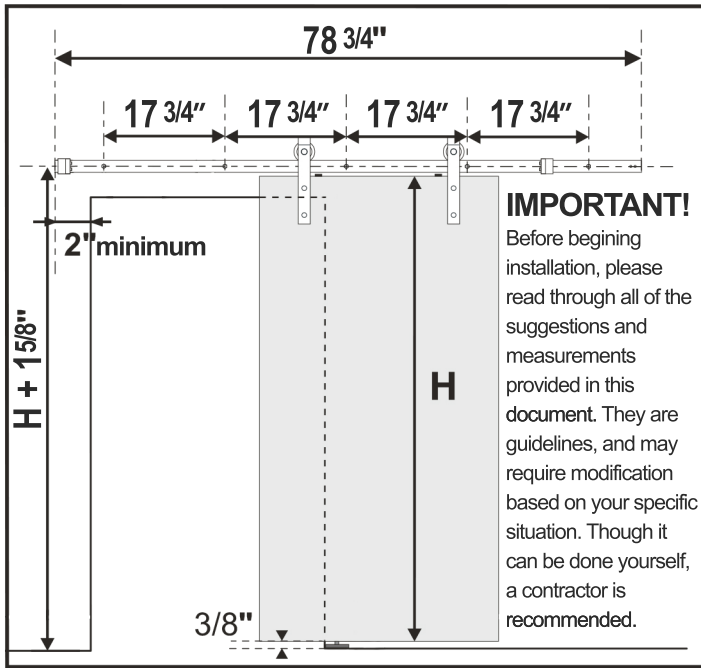

5

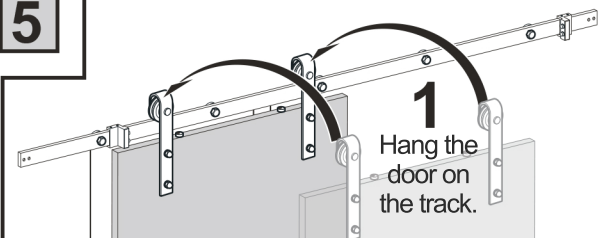


1
Hang the door on the track.

Note: If installing soft close hardware, it is best done prior to hanging the door. Refer to separate instructions for soft close installation.

Then rotate the anti-jump discs towards the back of the door.


2

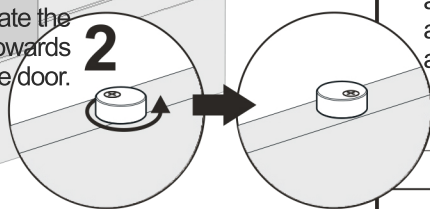


6

If opting to use the "U Channel" floor guide, skip Step 6 and proceed to Step 7.

If opting to use the "T" floor guide, your contractor should route a groove in the bottom of your door and install "T" guide as shown in the image at right.

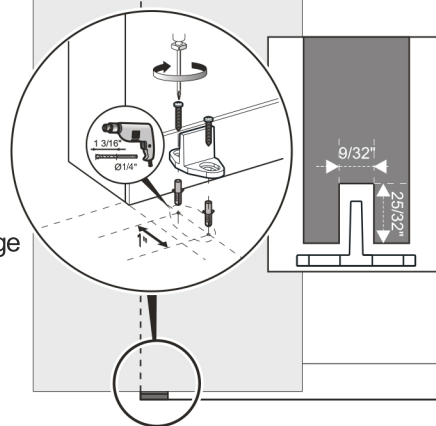


7

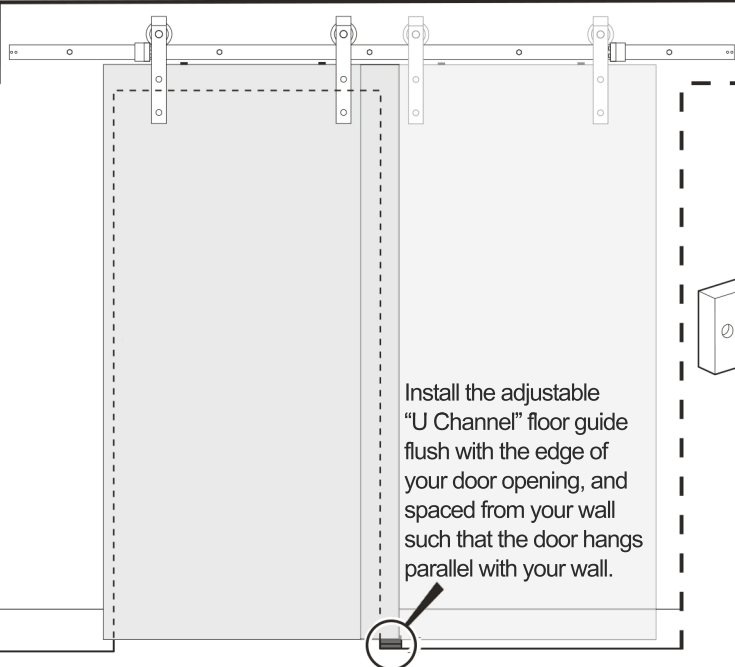

Install the adjustable "U Channel" floor guide flush with the edge of your door opening, and spaced from your wall such that the door hangs parallel with your wall.


Slide both left and right stops to the desired locations on the track, and then tighten in place with small screws provided.

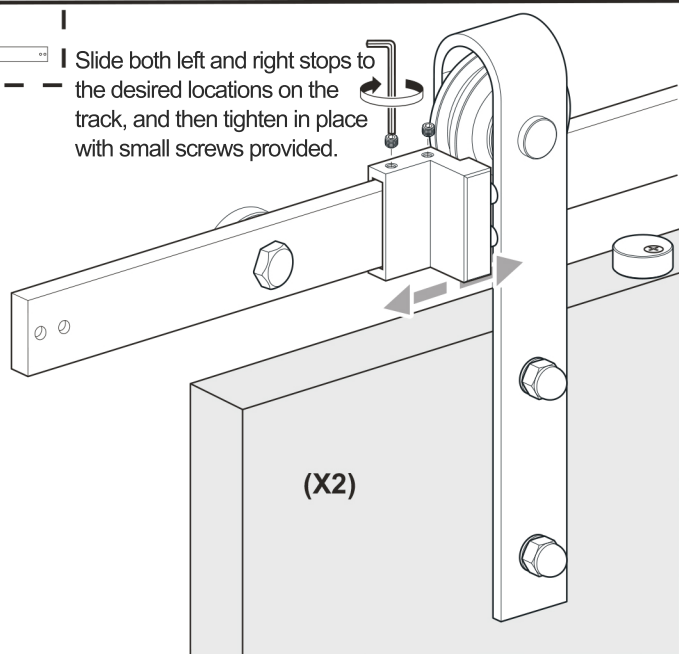

8

FINAL STEP - Install the plugs into the small holes at each of the track.

Congratulations! You have successfully installed your sliding barn door!

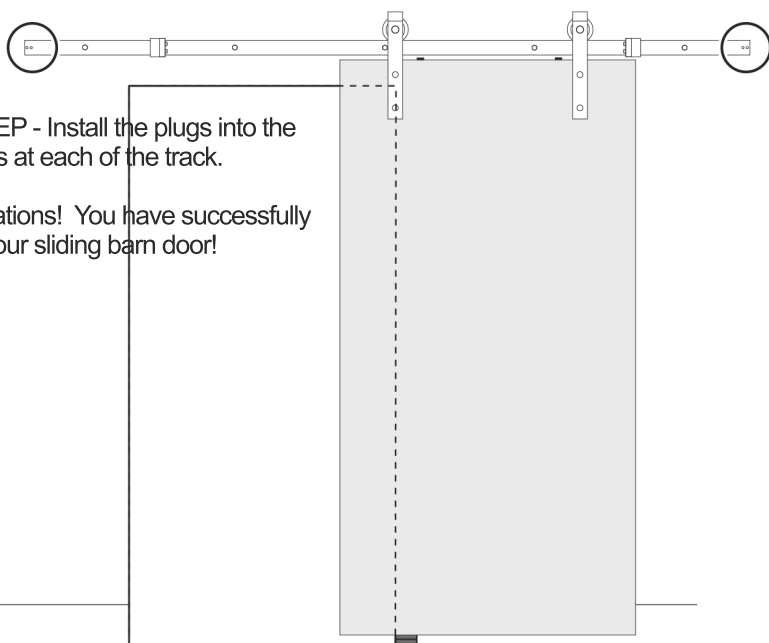

(X4)

