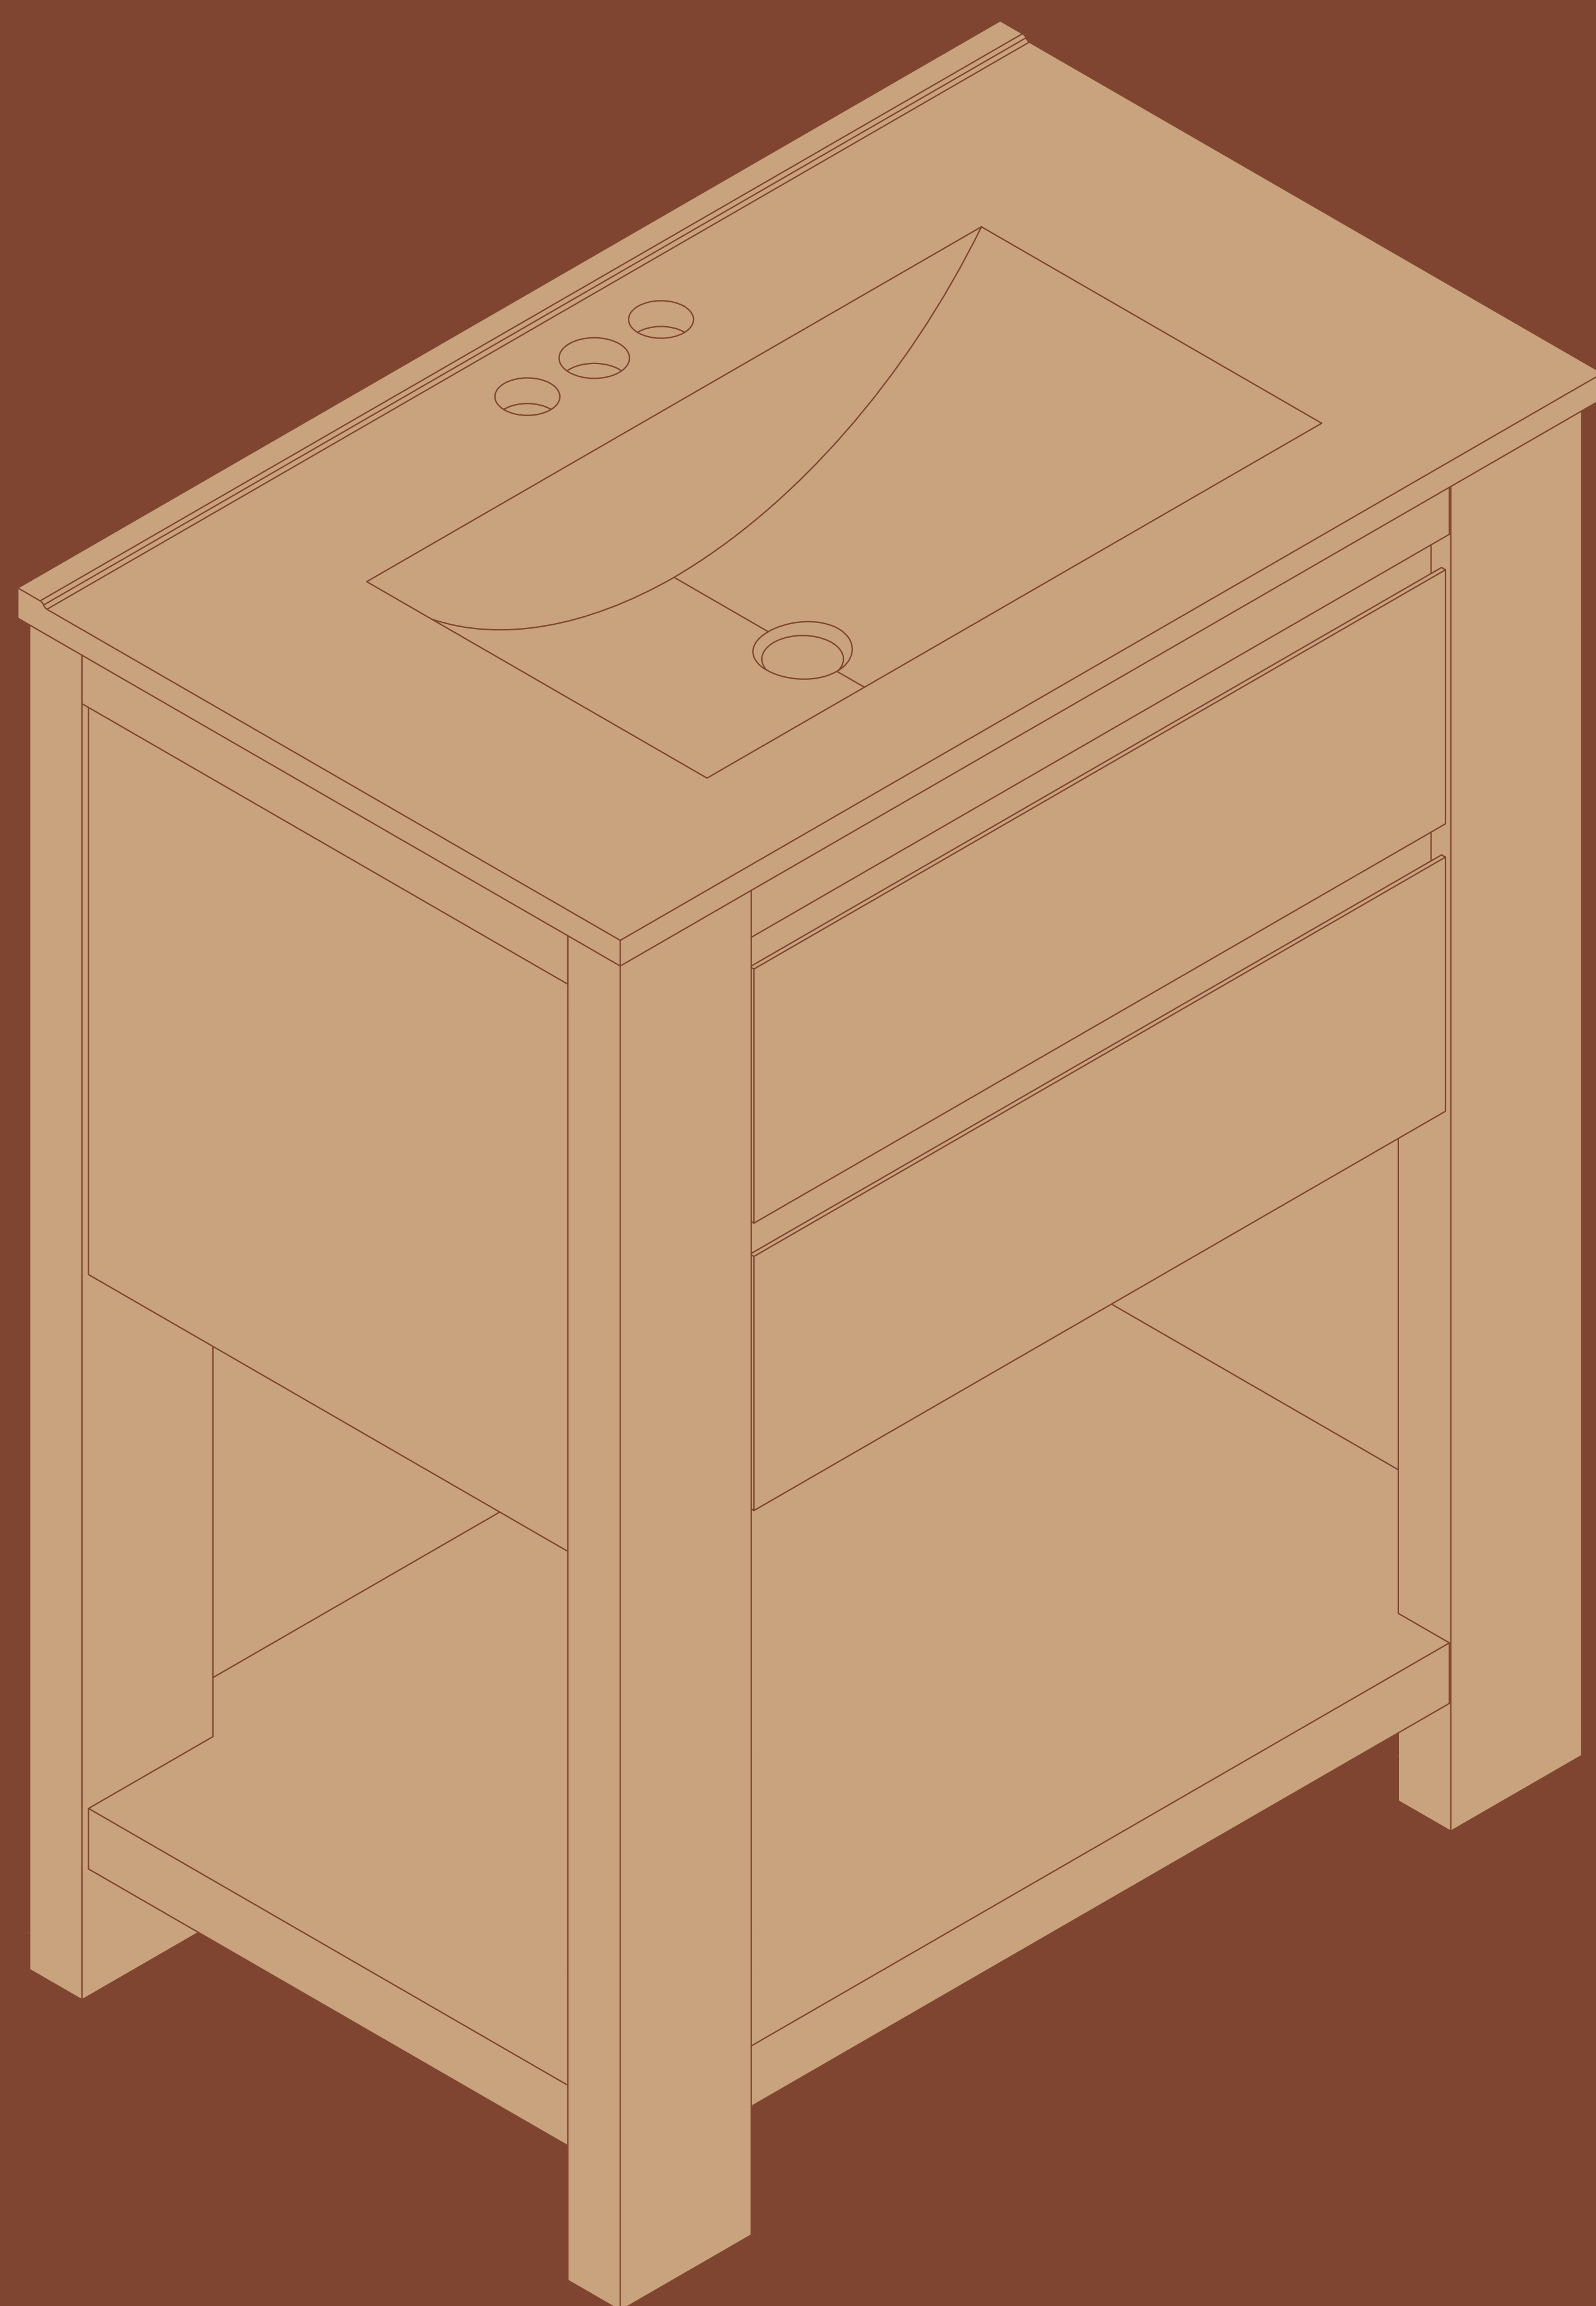




ModernMate

ASSEMBLY INSTRUCTION



Bathroom Vanity

CATALOGUE

Precautions	01
Parts List	02
Hardware List	03
Tool List	04
Assembling Process	07-24

INTRODUCTION

Thank you for purchasing our products. Please read the instructions carefully before installation and keep it in a safe place for future reference. If you need any assistance or support, please feel free to contact our customer support team.

PRECAUTIONS

This package contains numerous components and hardware pieces. Please identify and verify all parts against the parts list before you begin assembly.

WARNING: Choking Hazard. This product contains small items. Keep all parts and hardware out of the reach of children during assembly.

To prevent scratches, assemble the product on a soft, non-abrasive surface such as a carpet, blanket, or the flattened cardboard packaging.

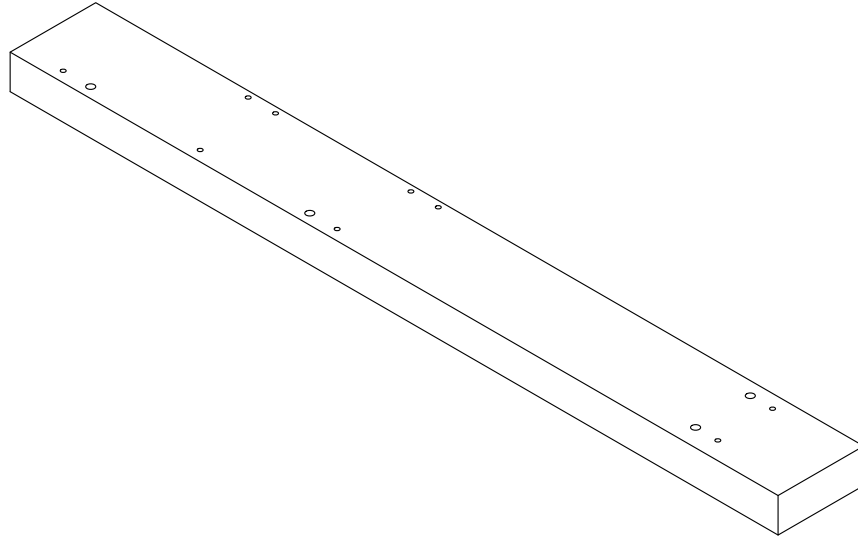
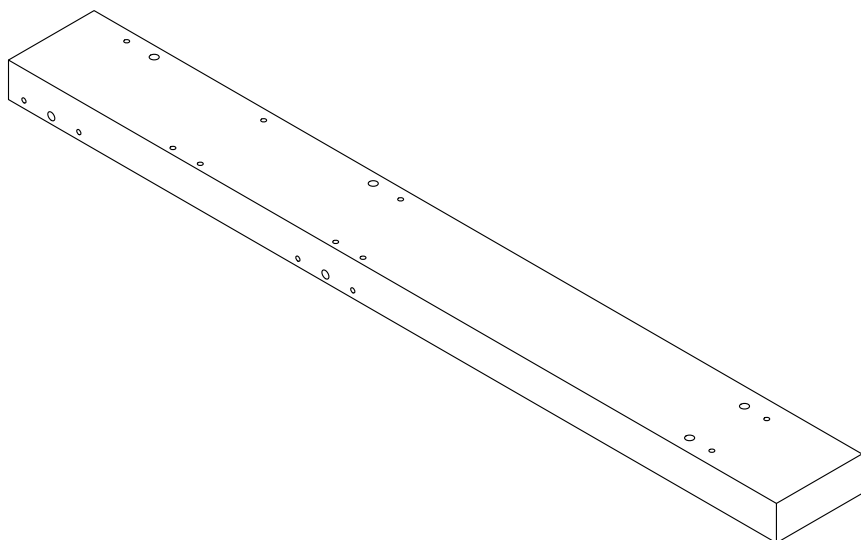
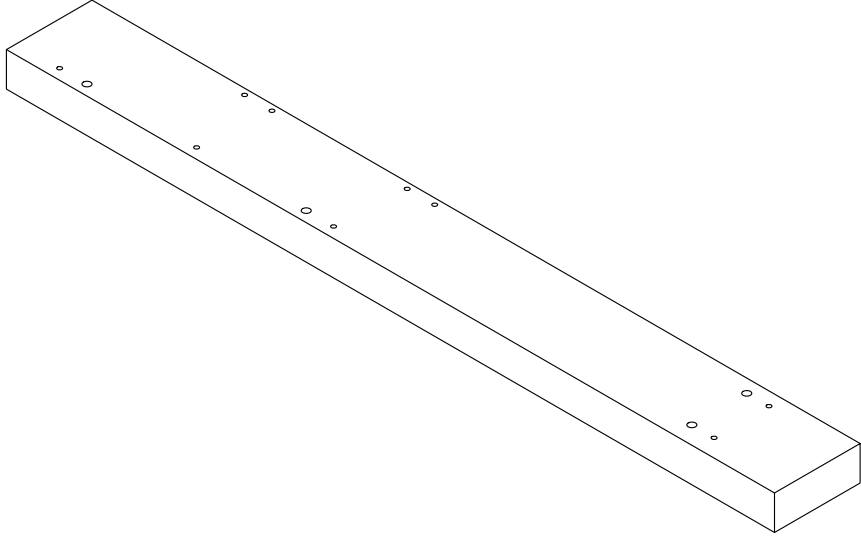
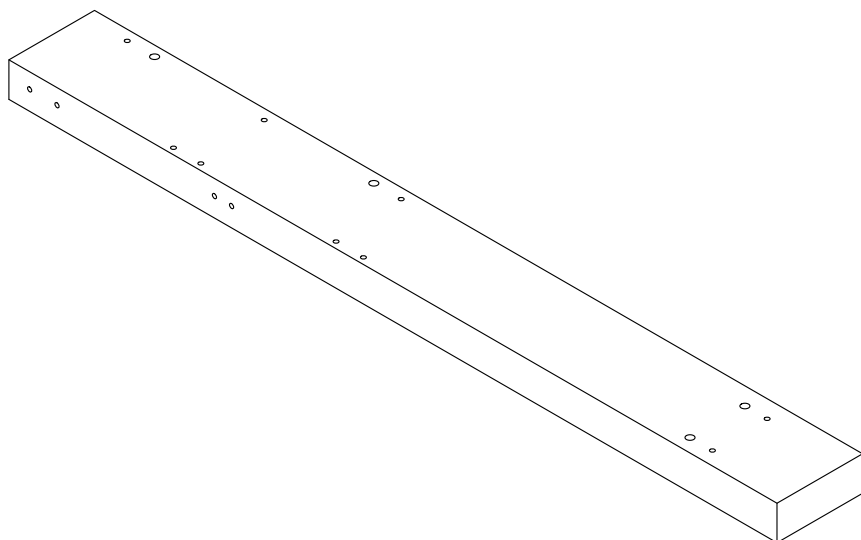
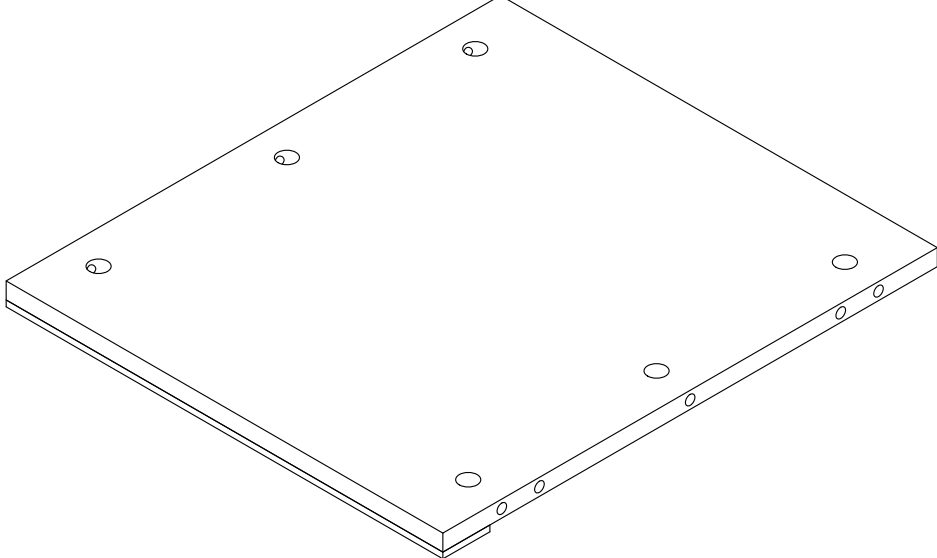
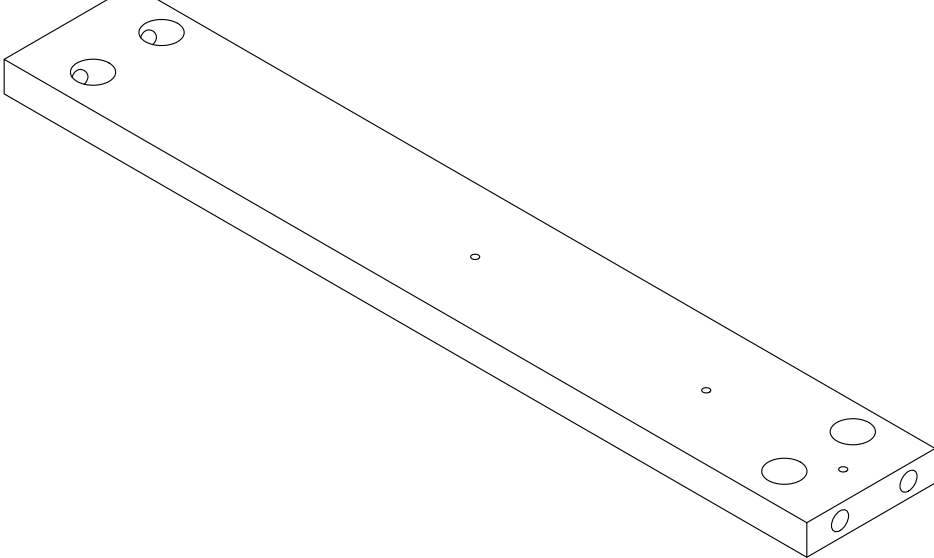
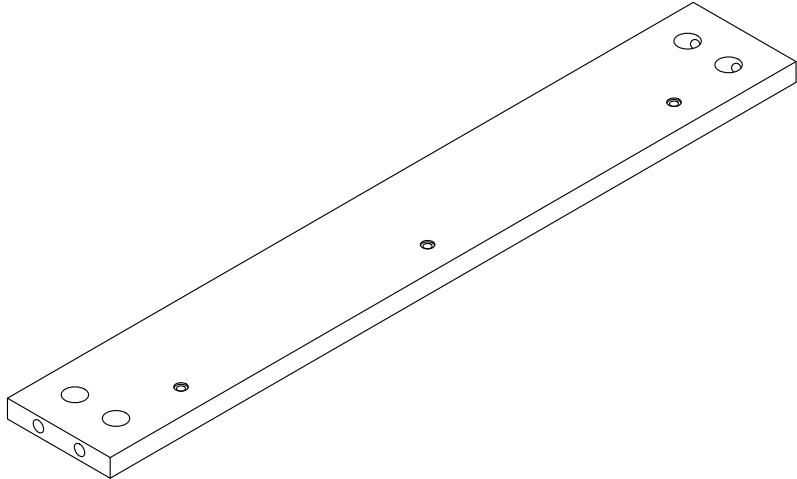
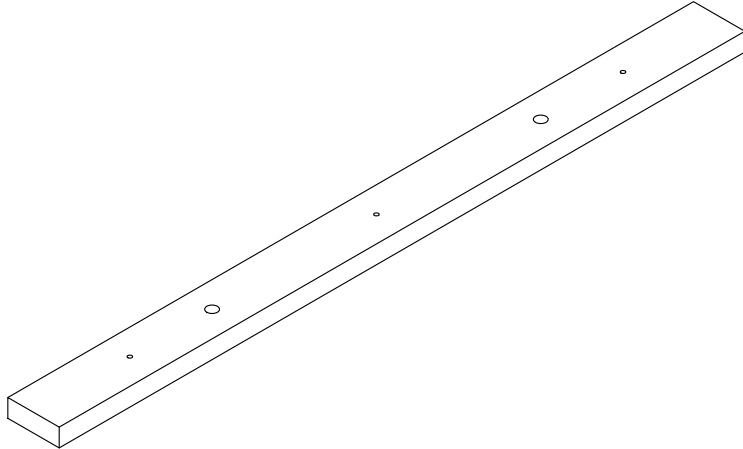
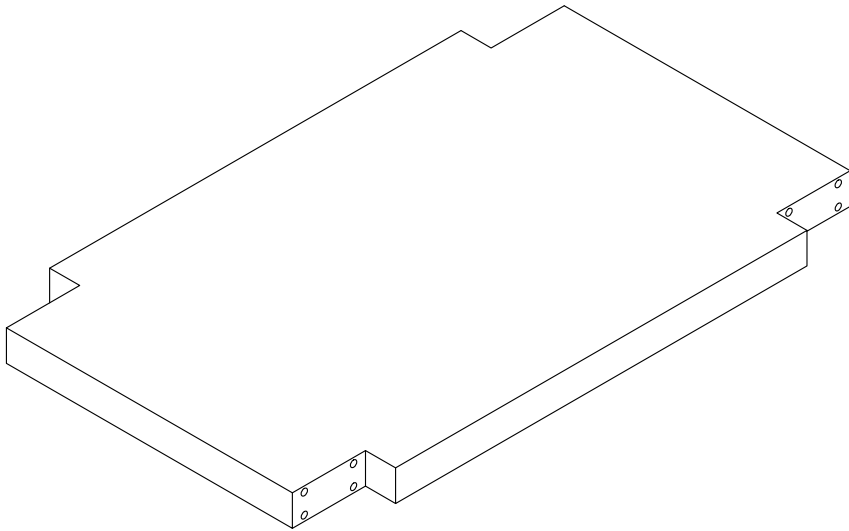
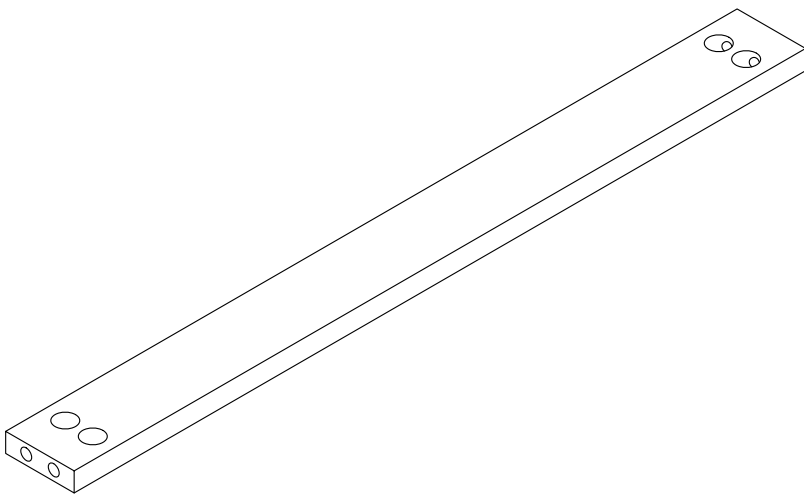
Some components are heavy. For safety, we recommend this product be assembled by two adults.

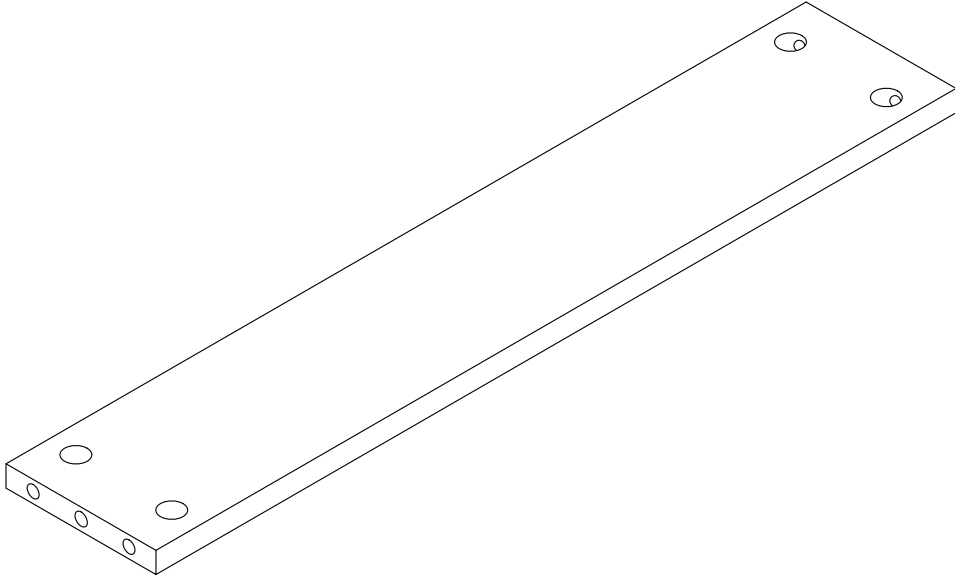
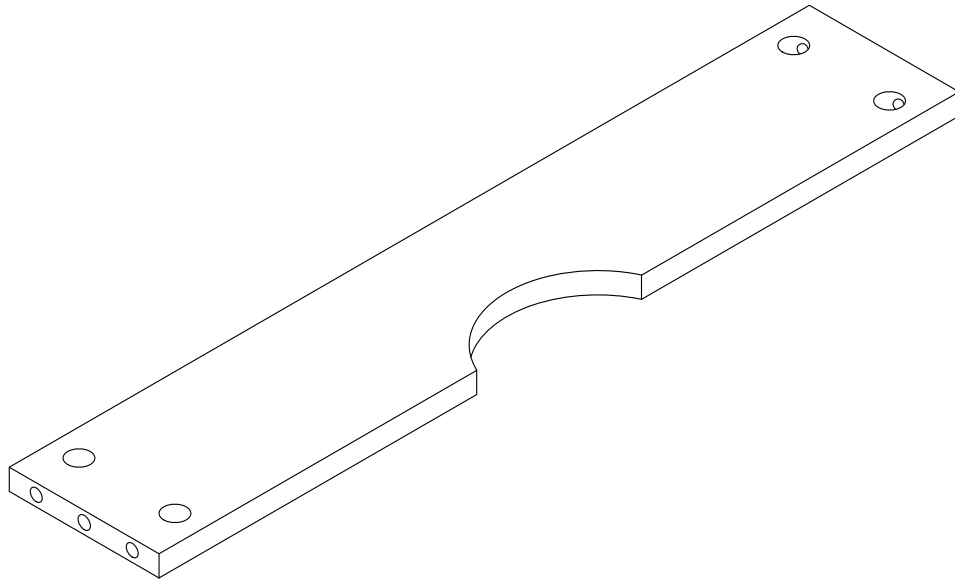
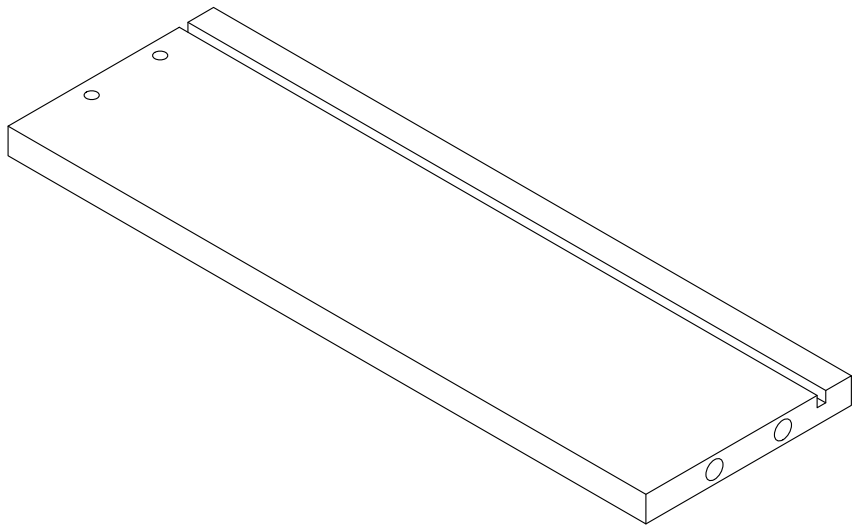
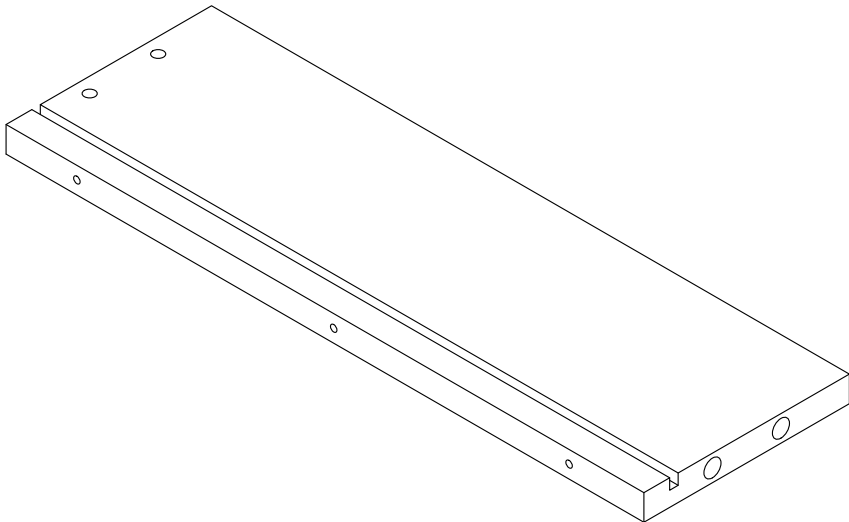
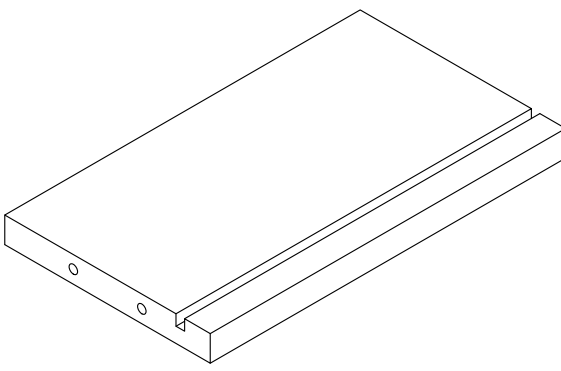
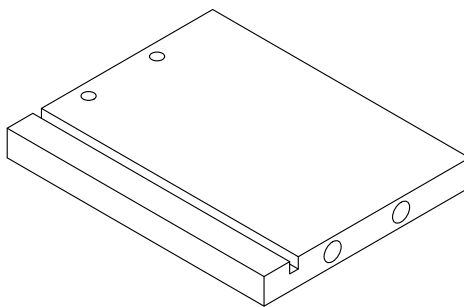
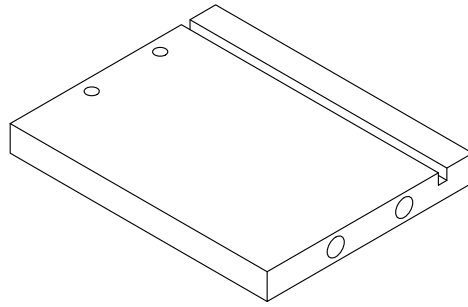
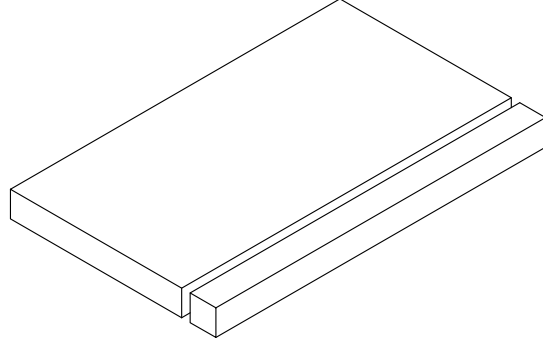
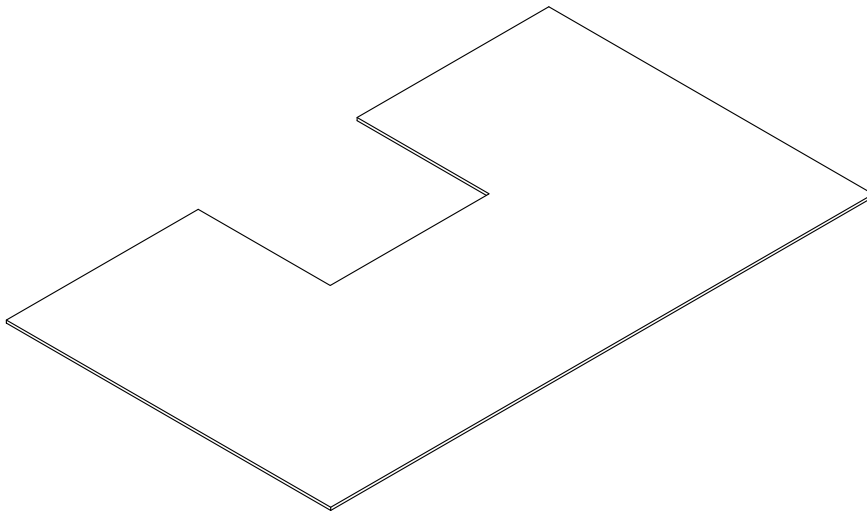
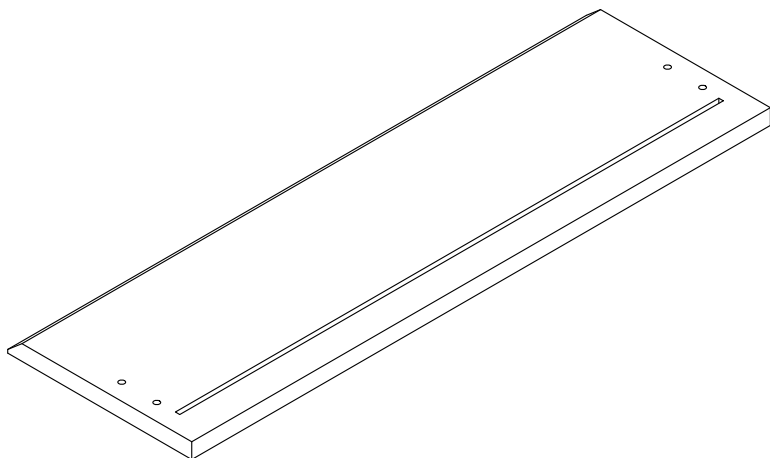
The unit may be unstable until assembly is fully complete. Do not move the product until all steps are finished.

If you encounter any issues or have questions, please contact our customer service team for assistance.

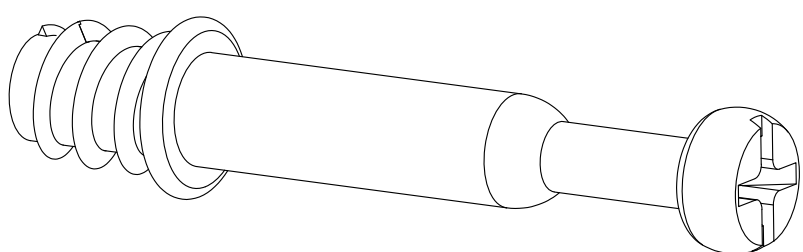
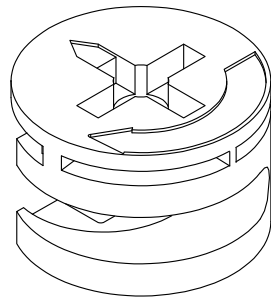
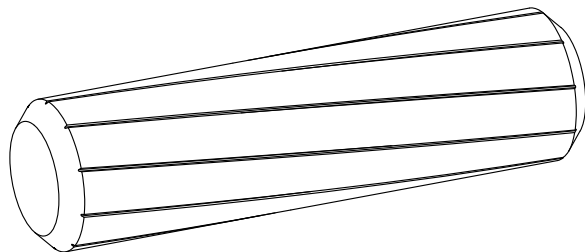
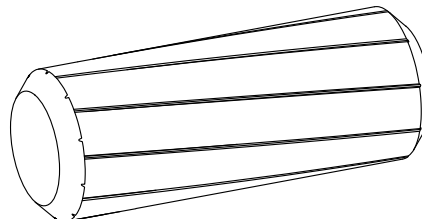
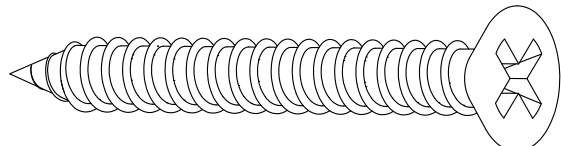
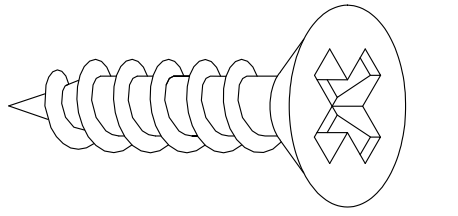
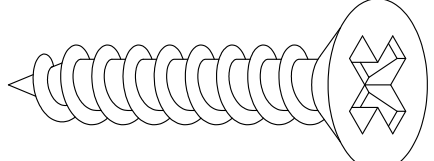
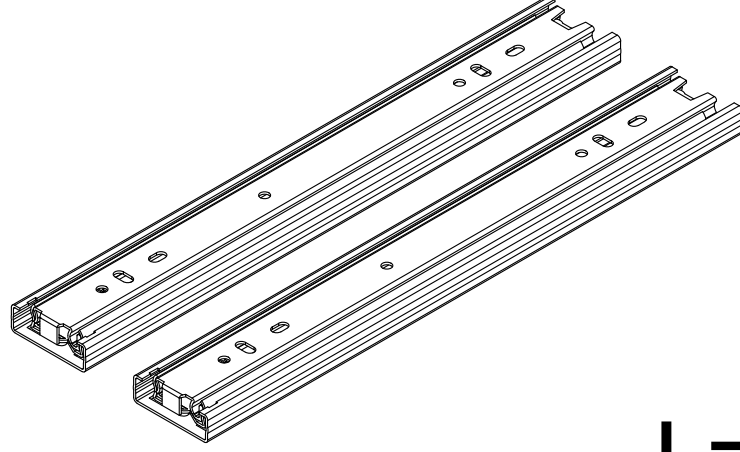
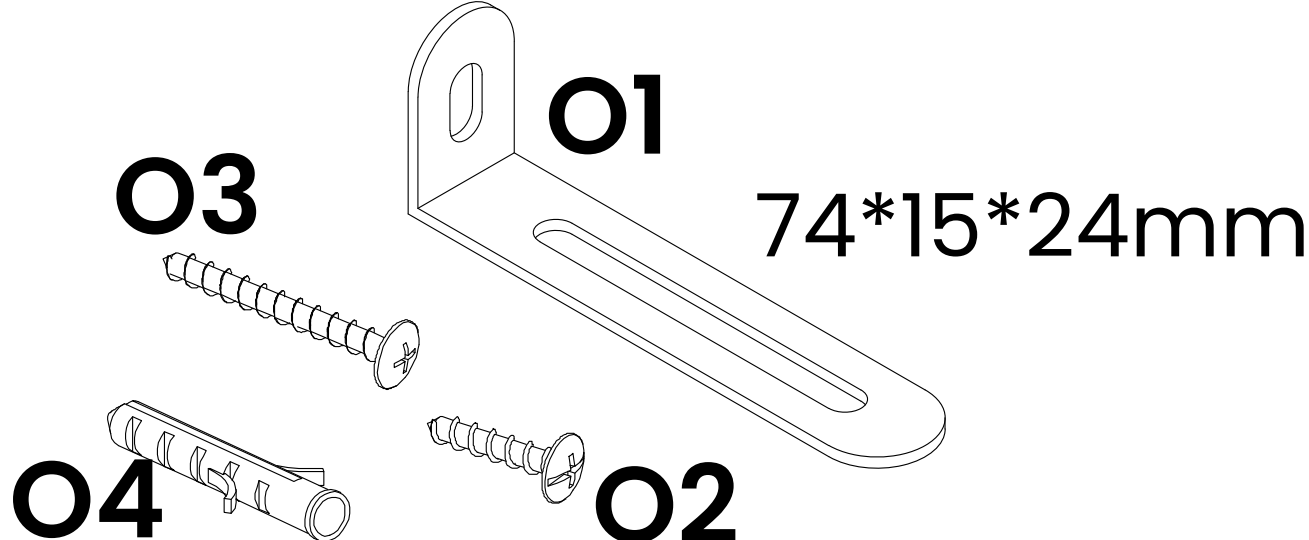
- * **Please be sure to follow the installation steps in the manual to avoid unnecessary losses caused by improper installation.**
- * **If you need further assistance, please contact the customer service online.**

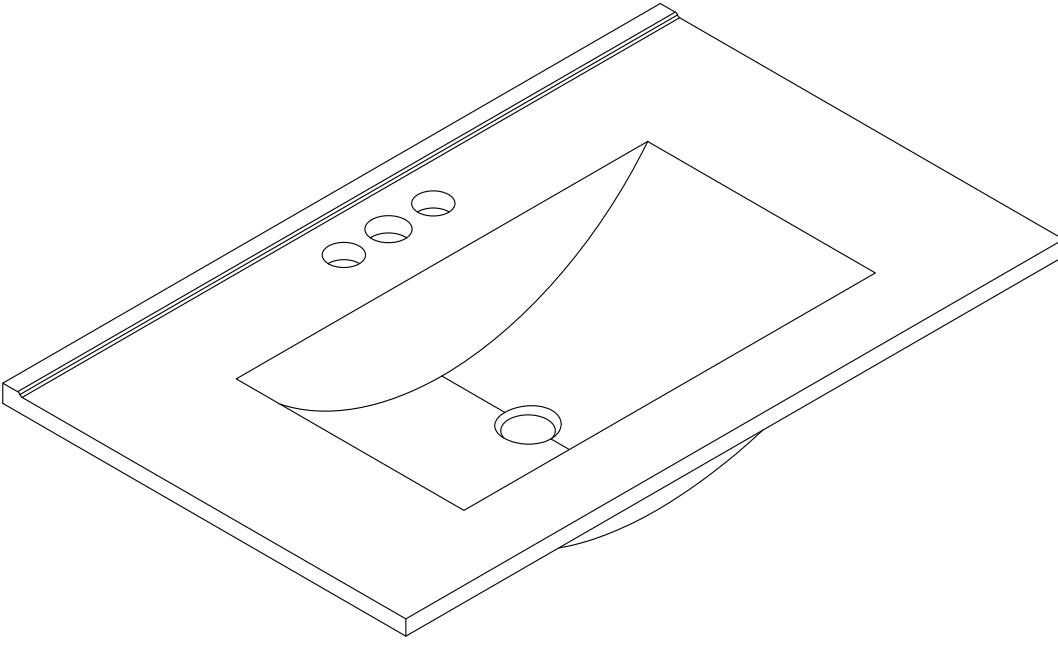
Parts List

ID	Parts	QTY
1		1
2		1
3		1
4		1
5		2
6		4
7		1
8		1
9		1
10		1

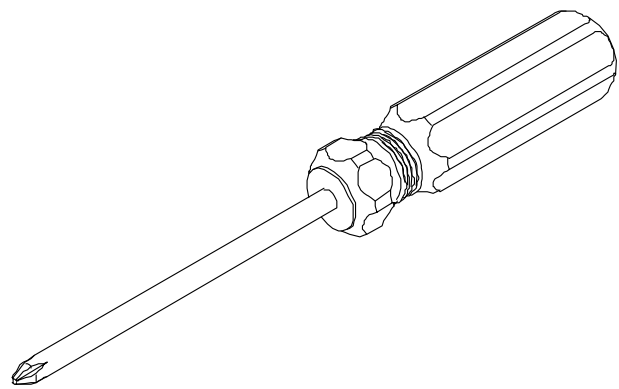
ID	Parts	QTY
11		1
12		1
13		2
14		2
15		4
16		2
17		2
18		2
19		2
20		2

Hardware List

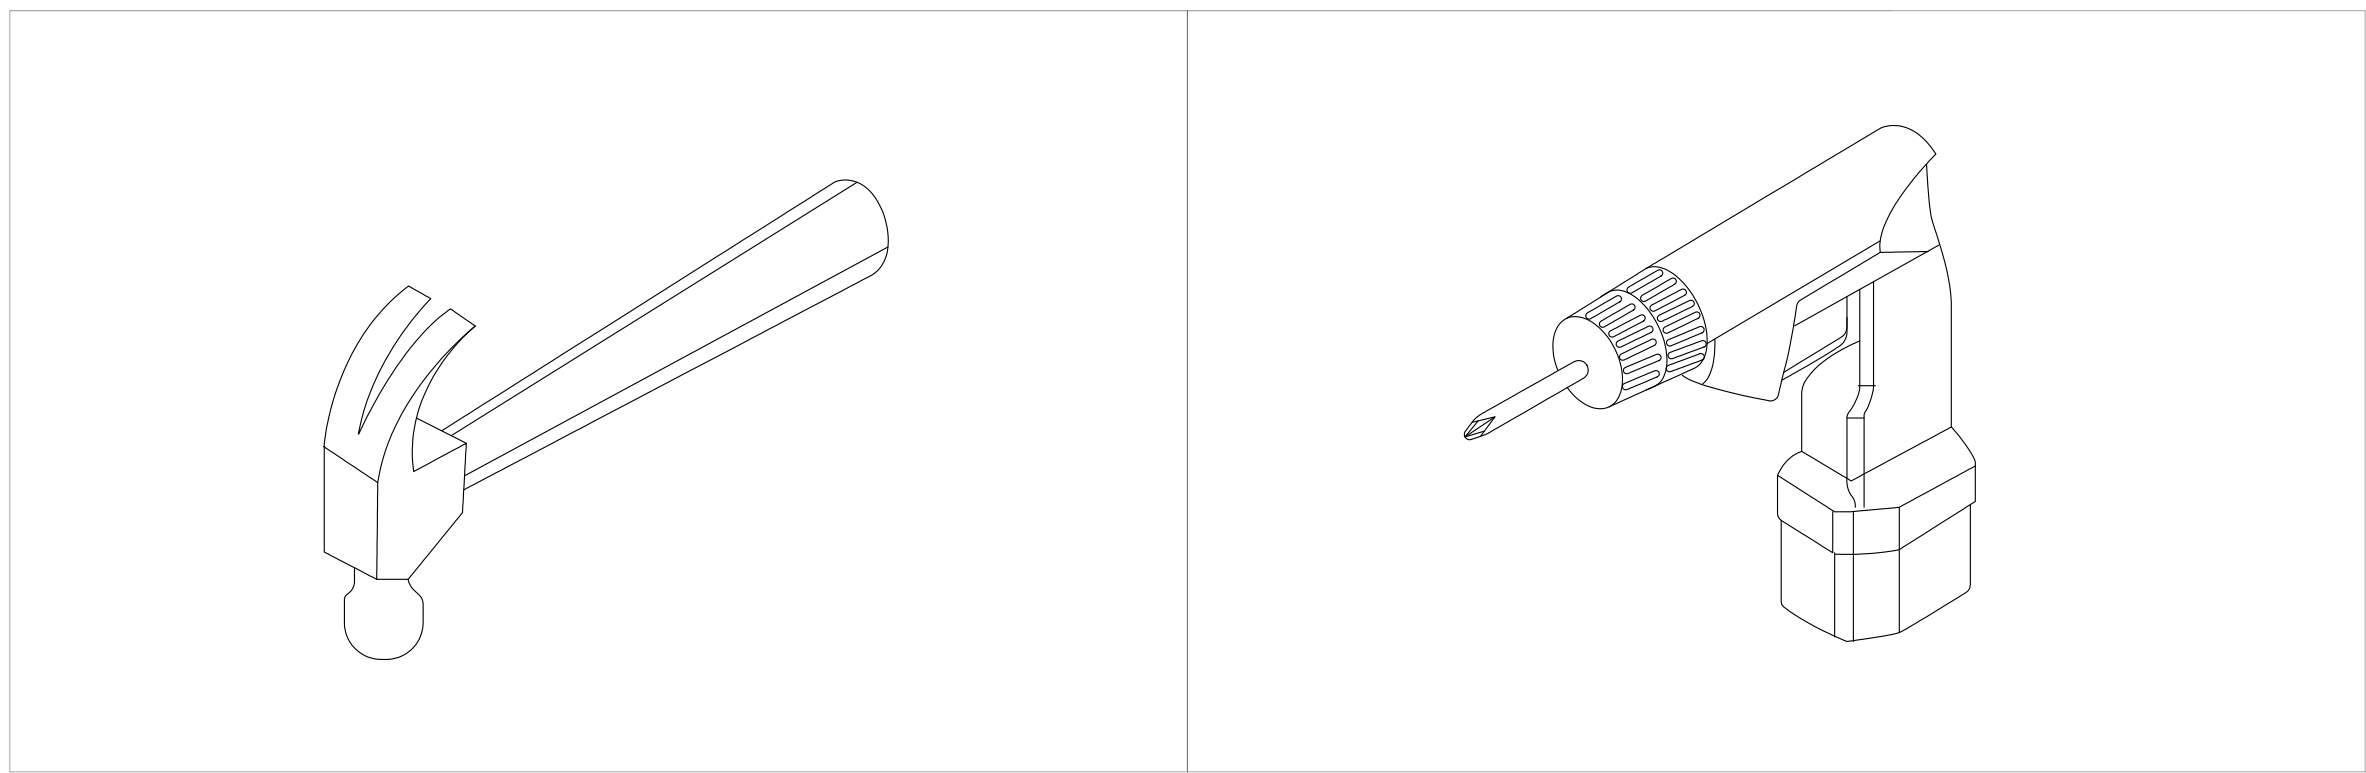
ID	Parts	QTY
A		68+3
B		68+3
C	 Ø8*30mm	20+2
D	 Ø8*20mm	2
E	 Ø8*Ø4*38mm	16+1
F	 Ø7*Ø3.5*12mm	24+2
G	 Ø8*Ø4*20mm	3
I		68+3
J	 L=10"	2
O	 74*15*24mm	2

ID	Parts	QTY
		1

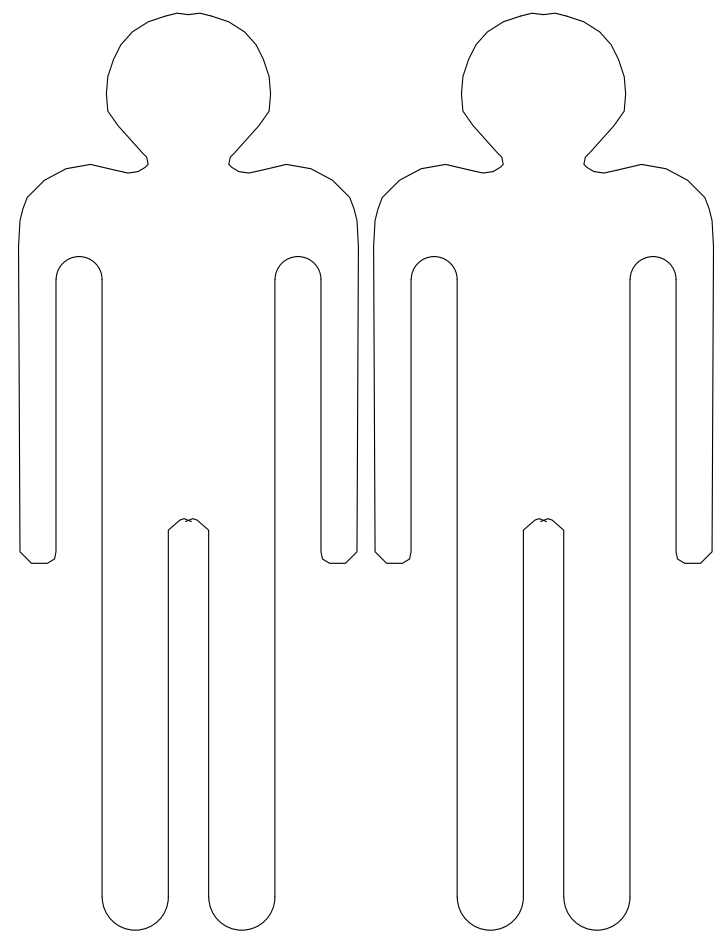
Tool List

ID	Parts	QTY
Z1		1

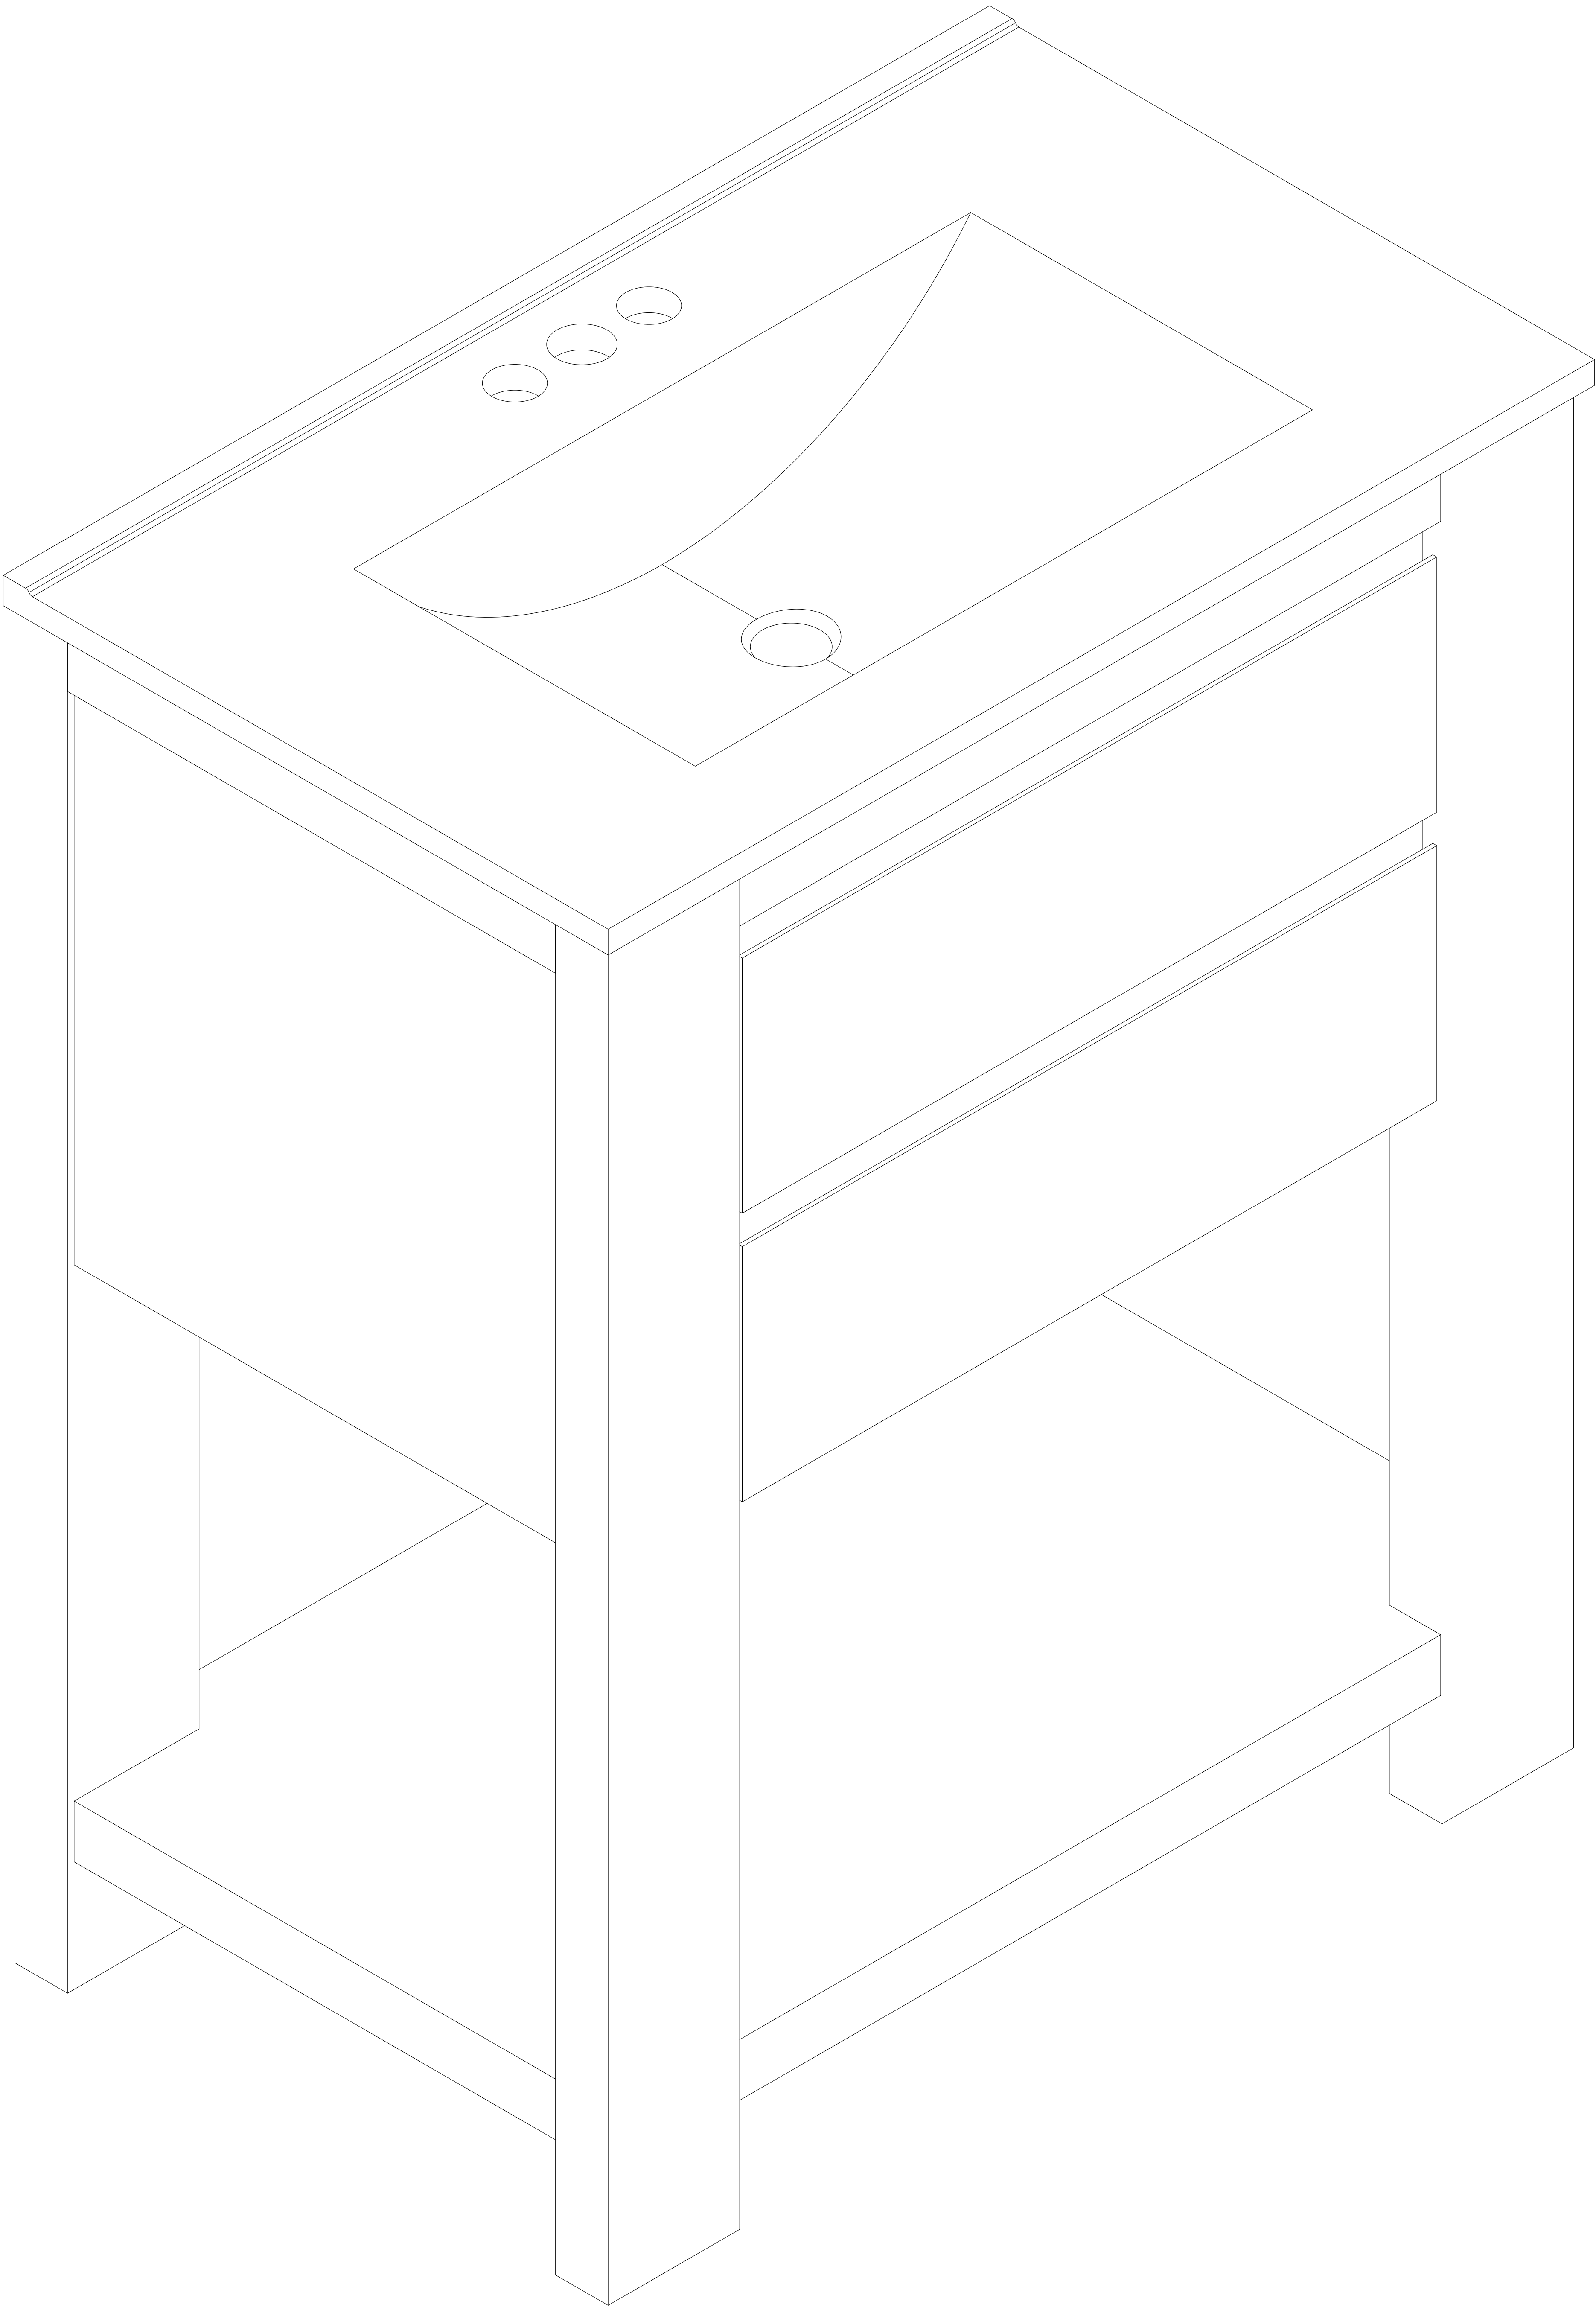
Required Tools (Not Included)

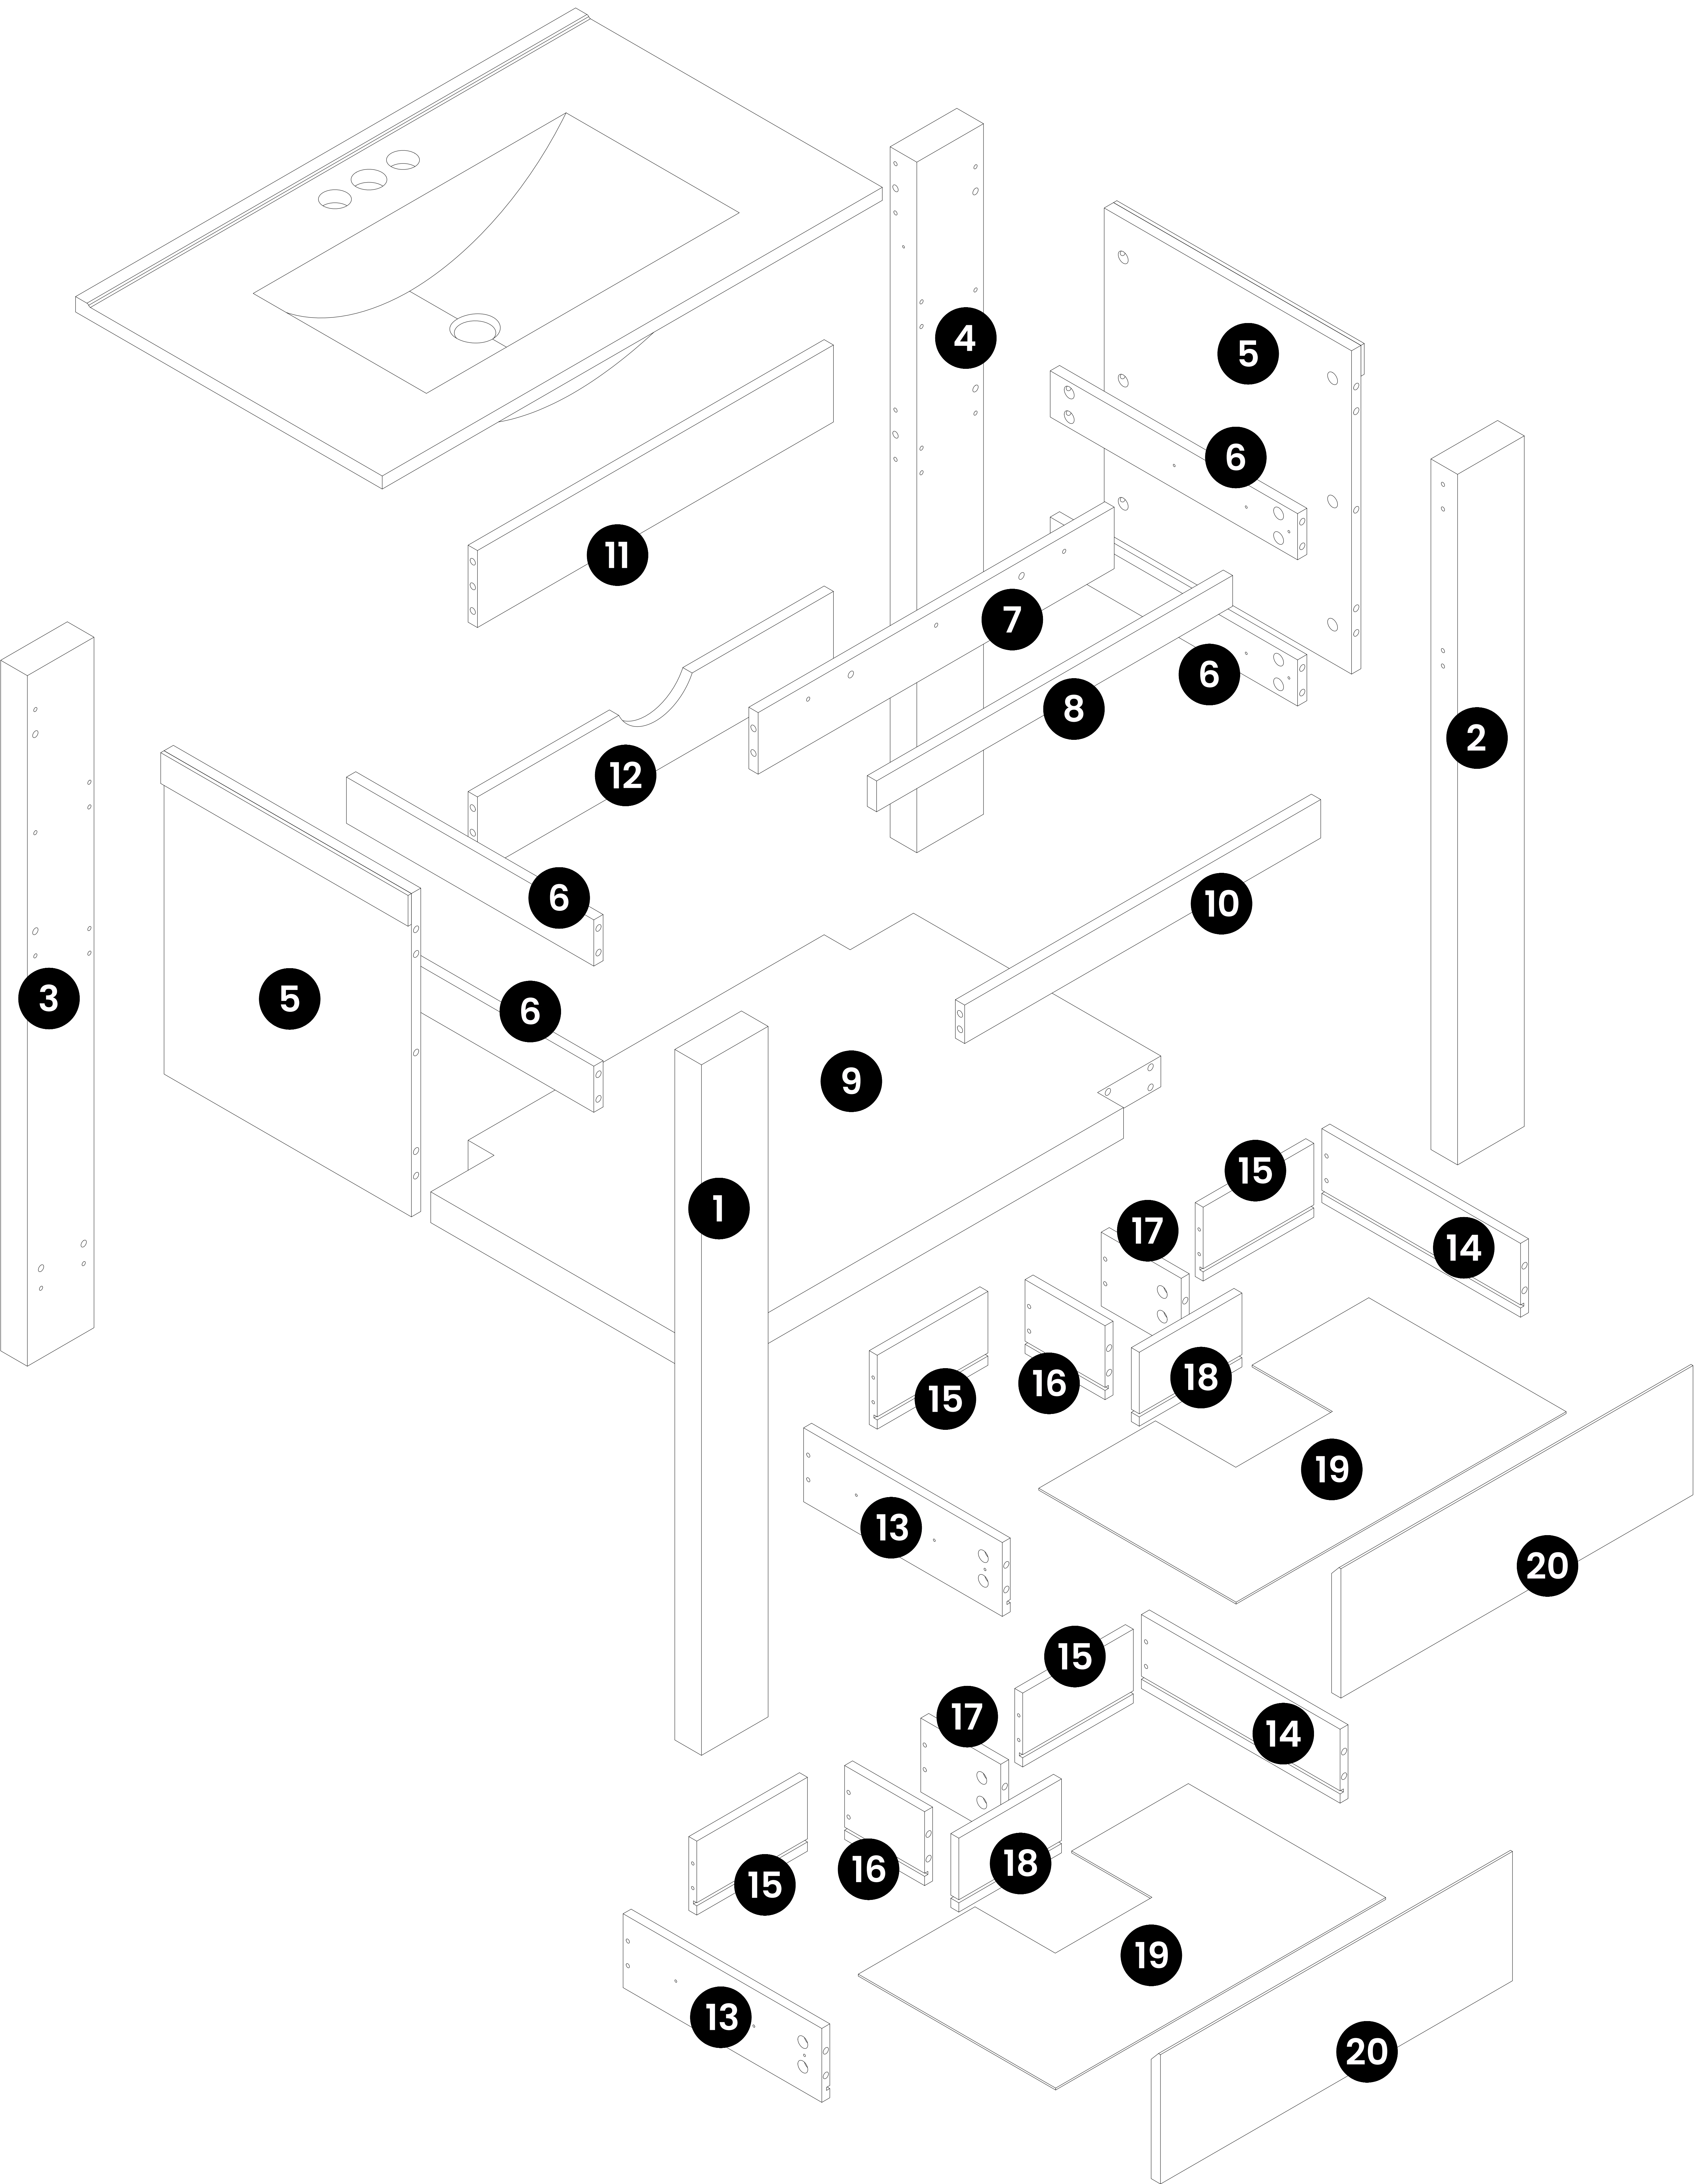


Wall mounting only
These tools are not required for product assembly.


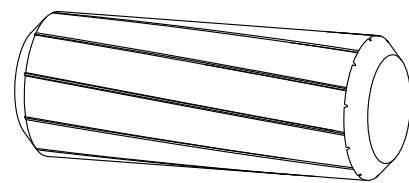
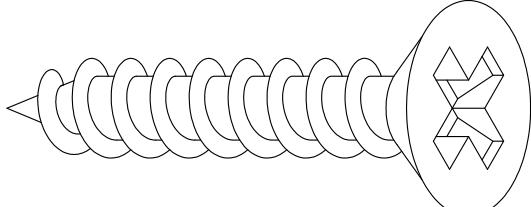


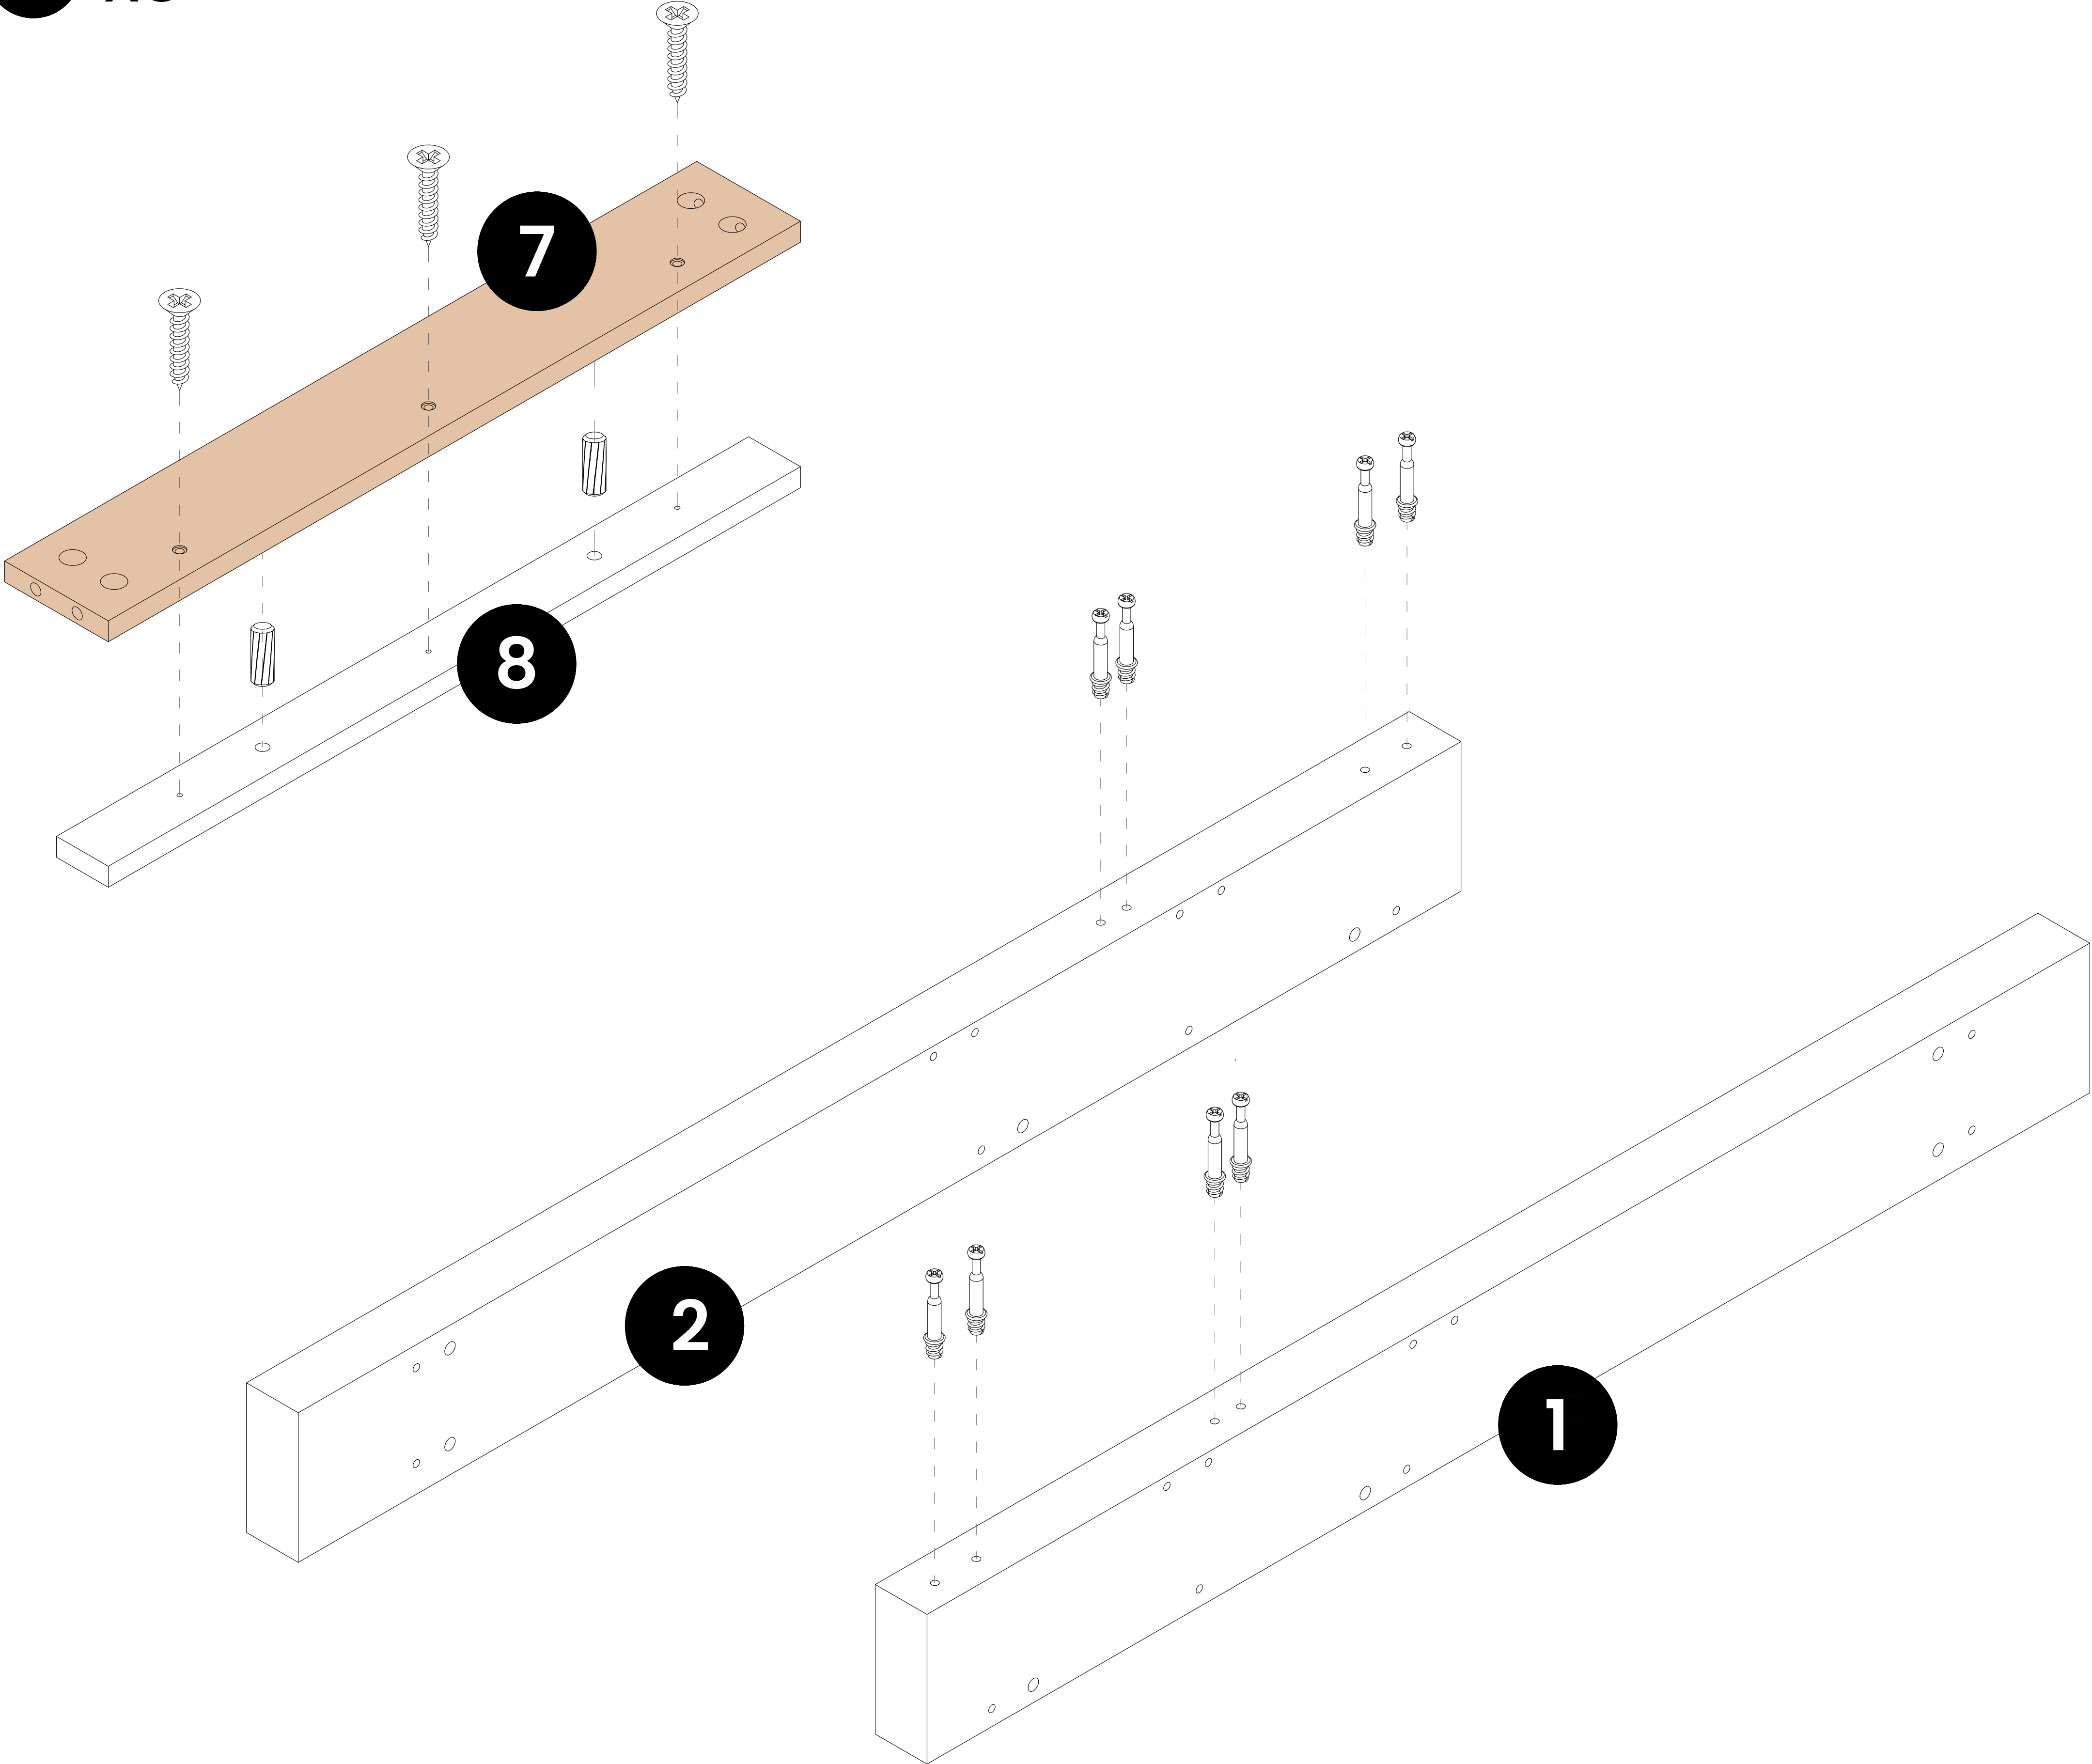
Multi-person installation

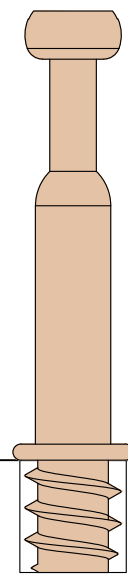
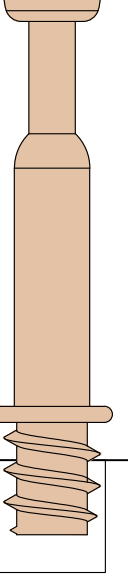
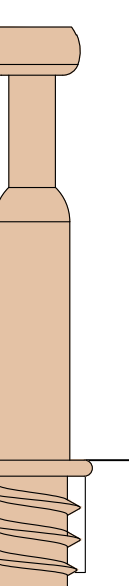
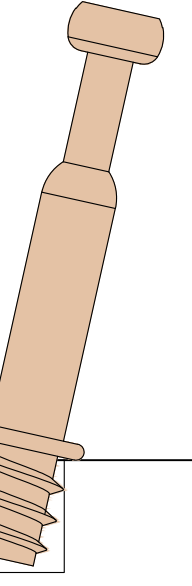




STEP 1

-  **A** x8
-  **D** x2
-  **G** x3

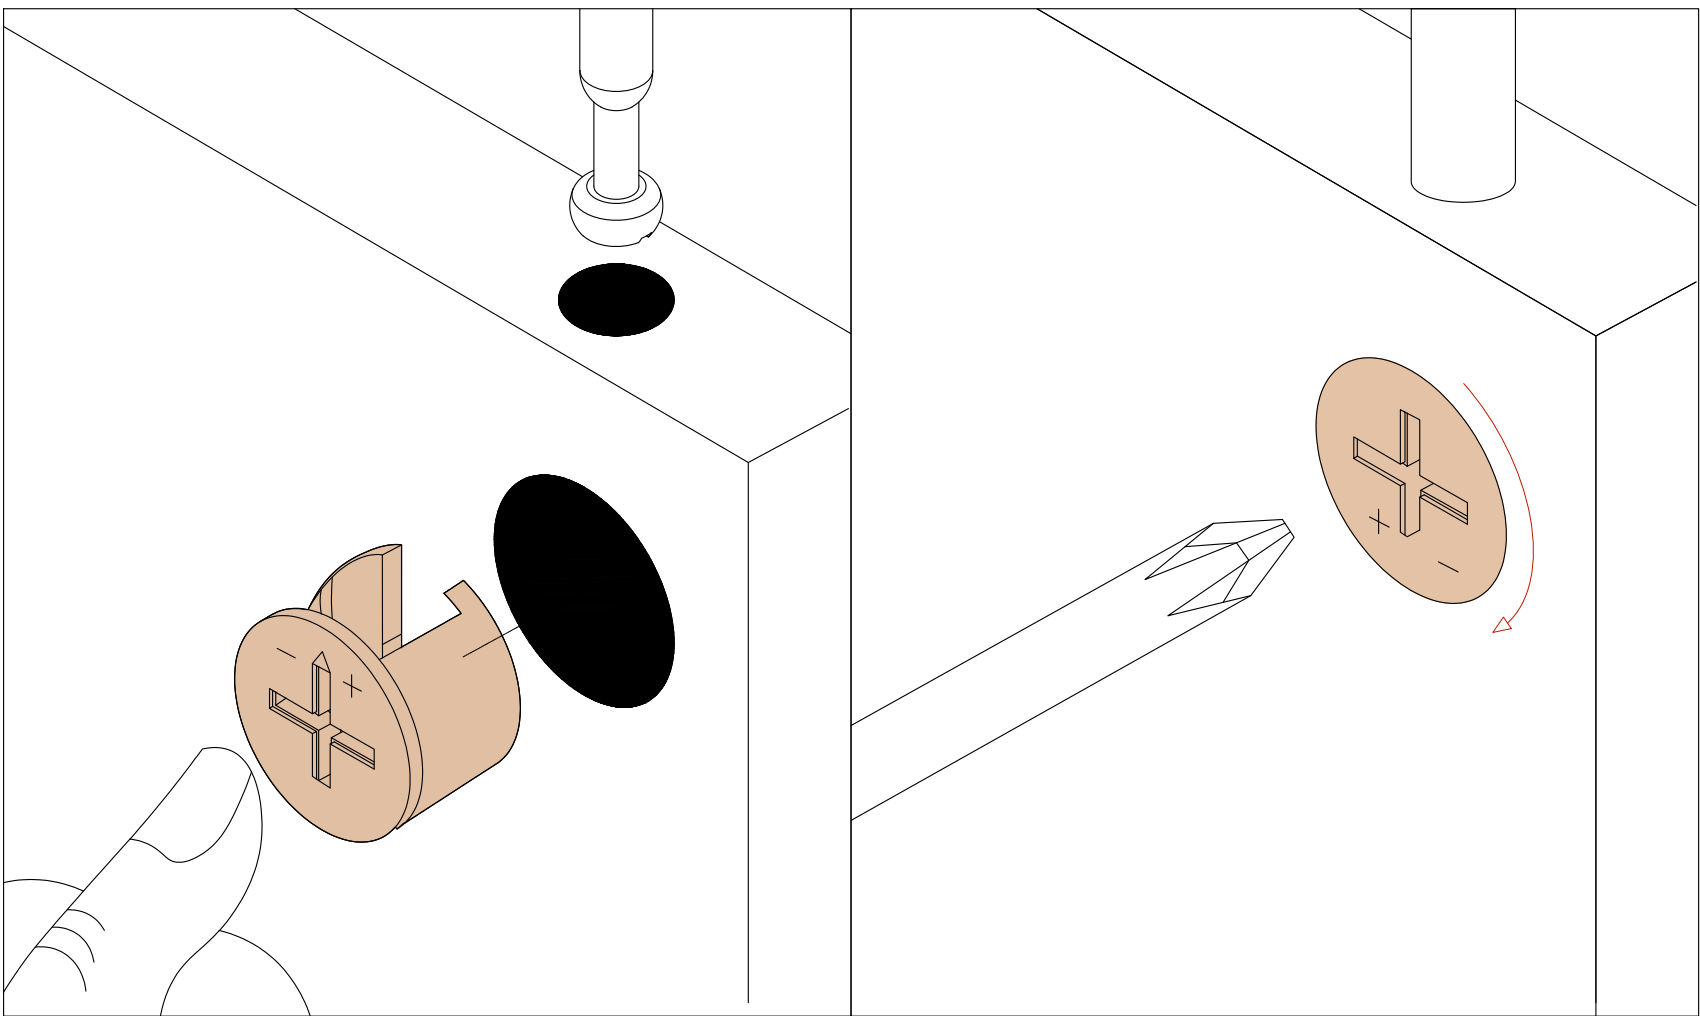
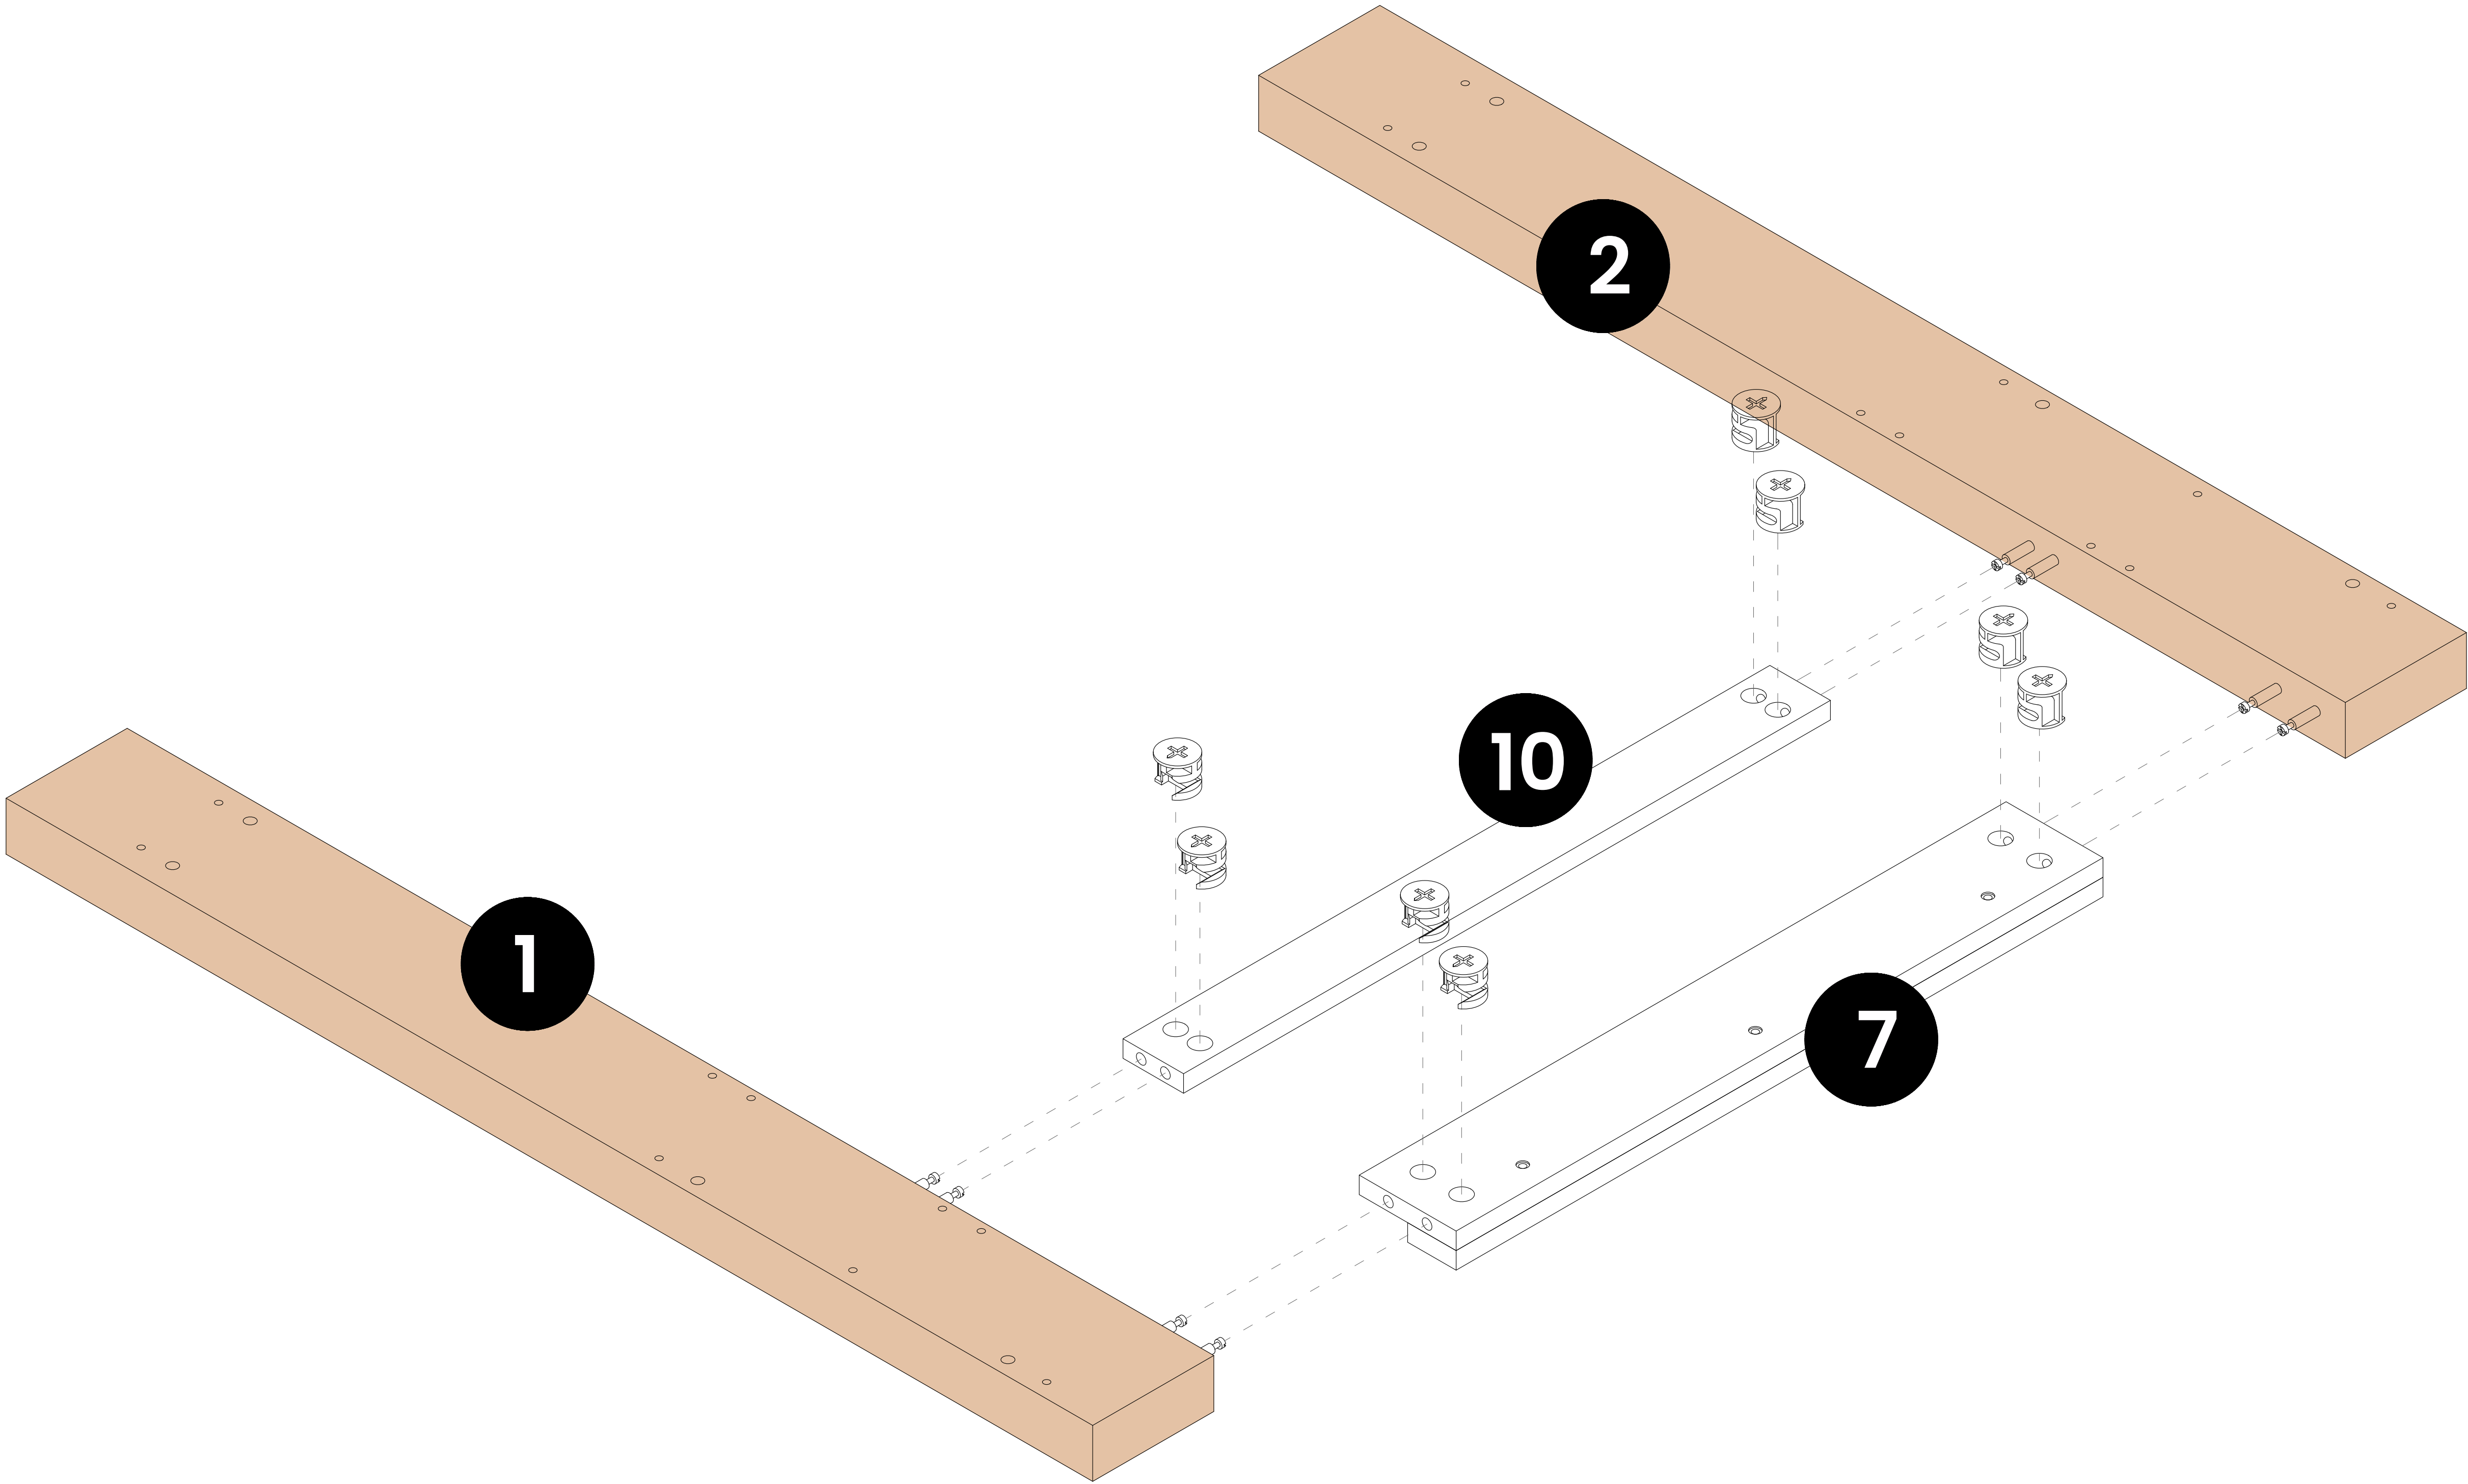
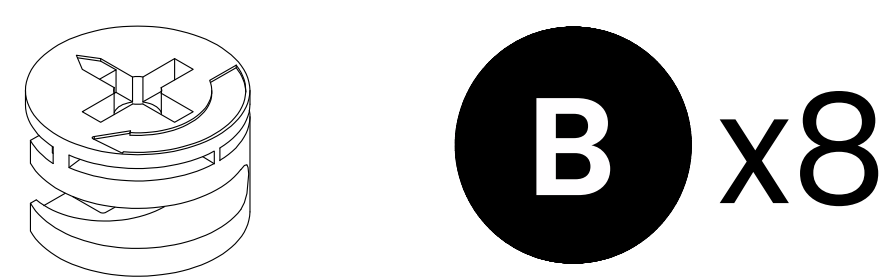


			
✓	✗	✗	✗




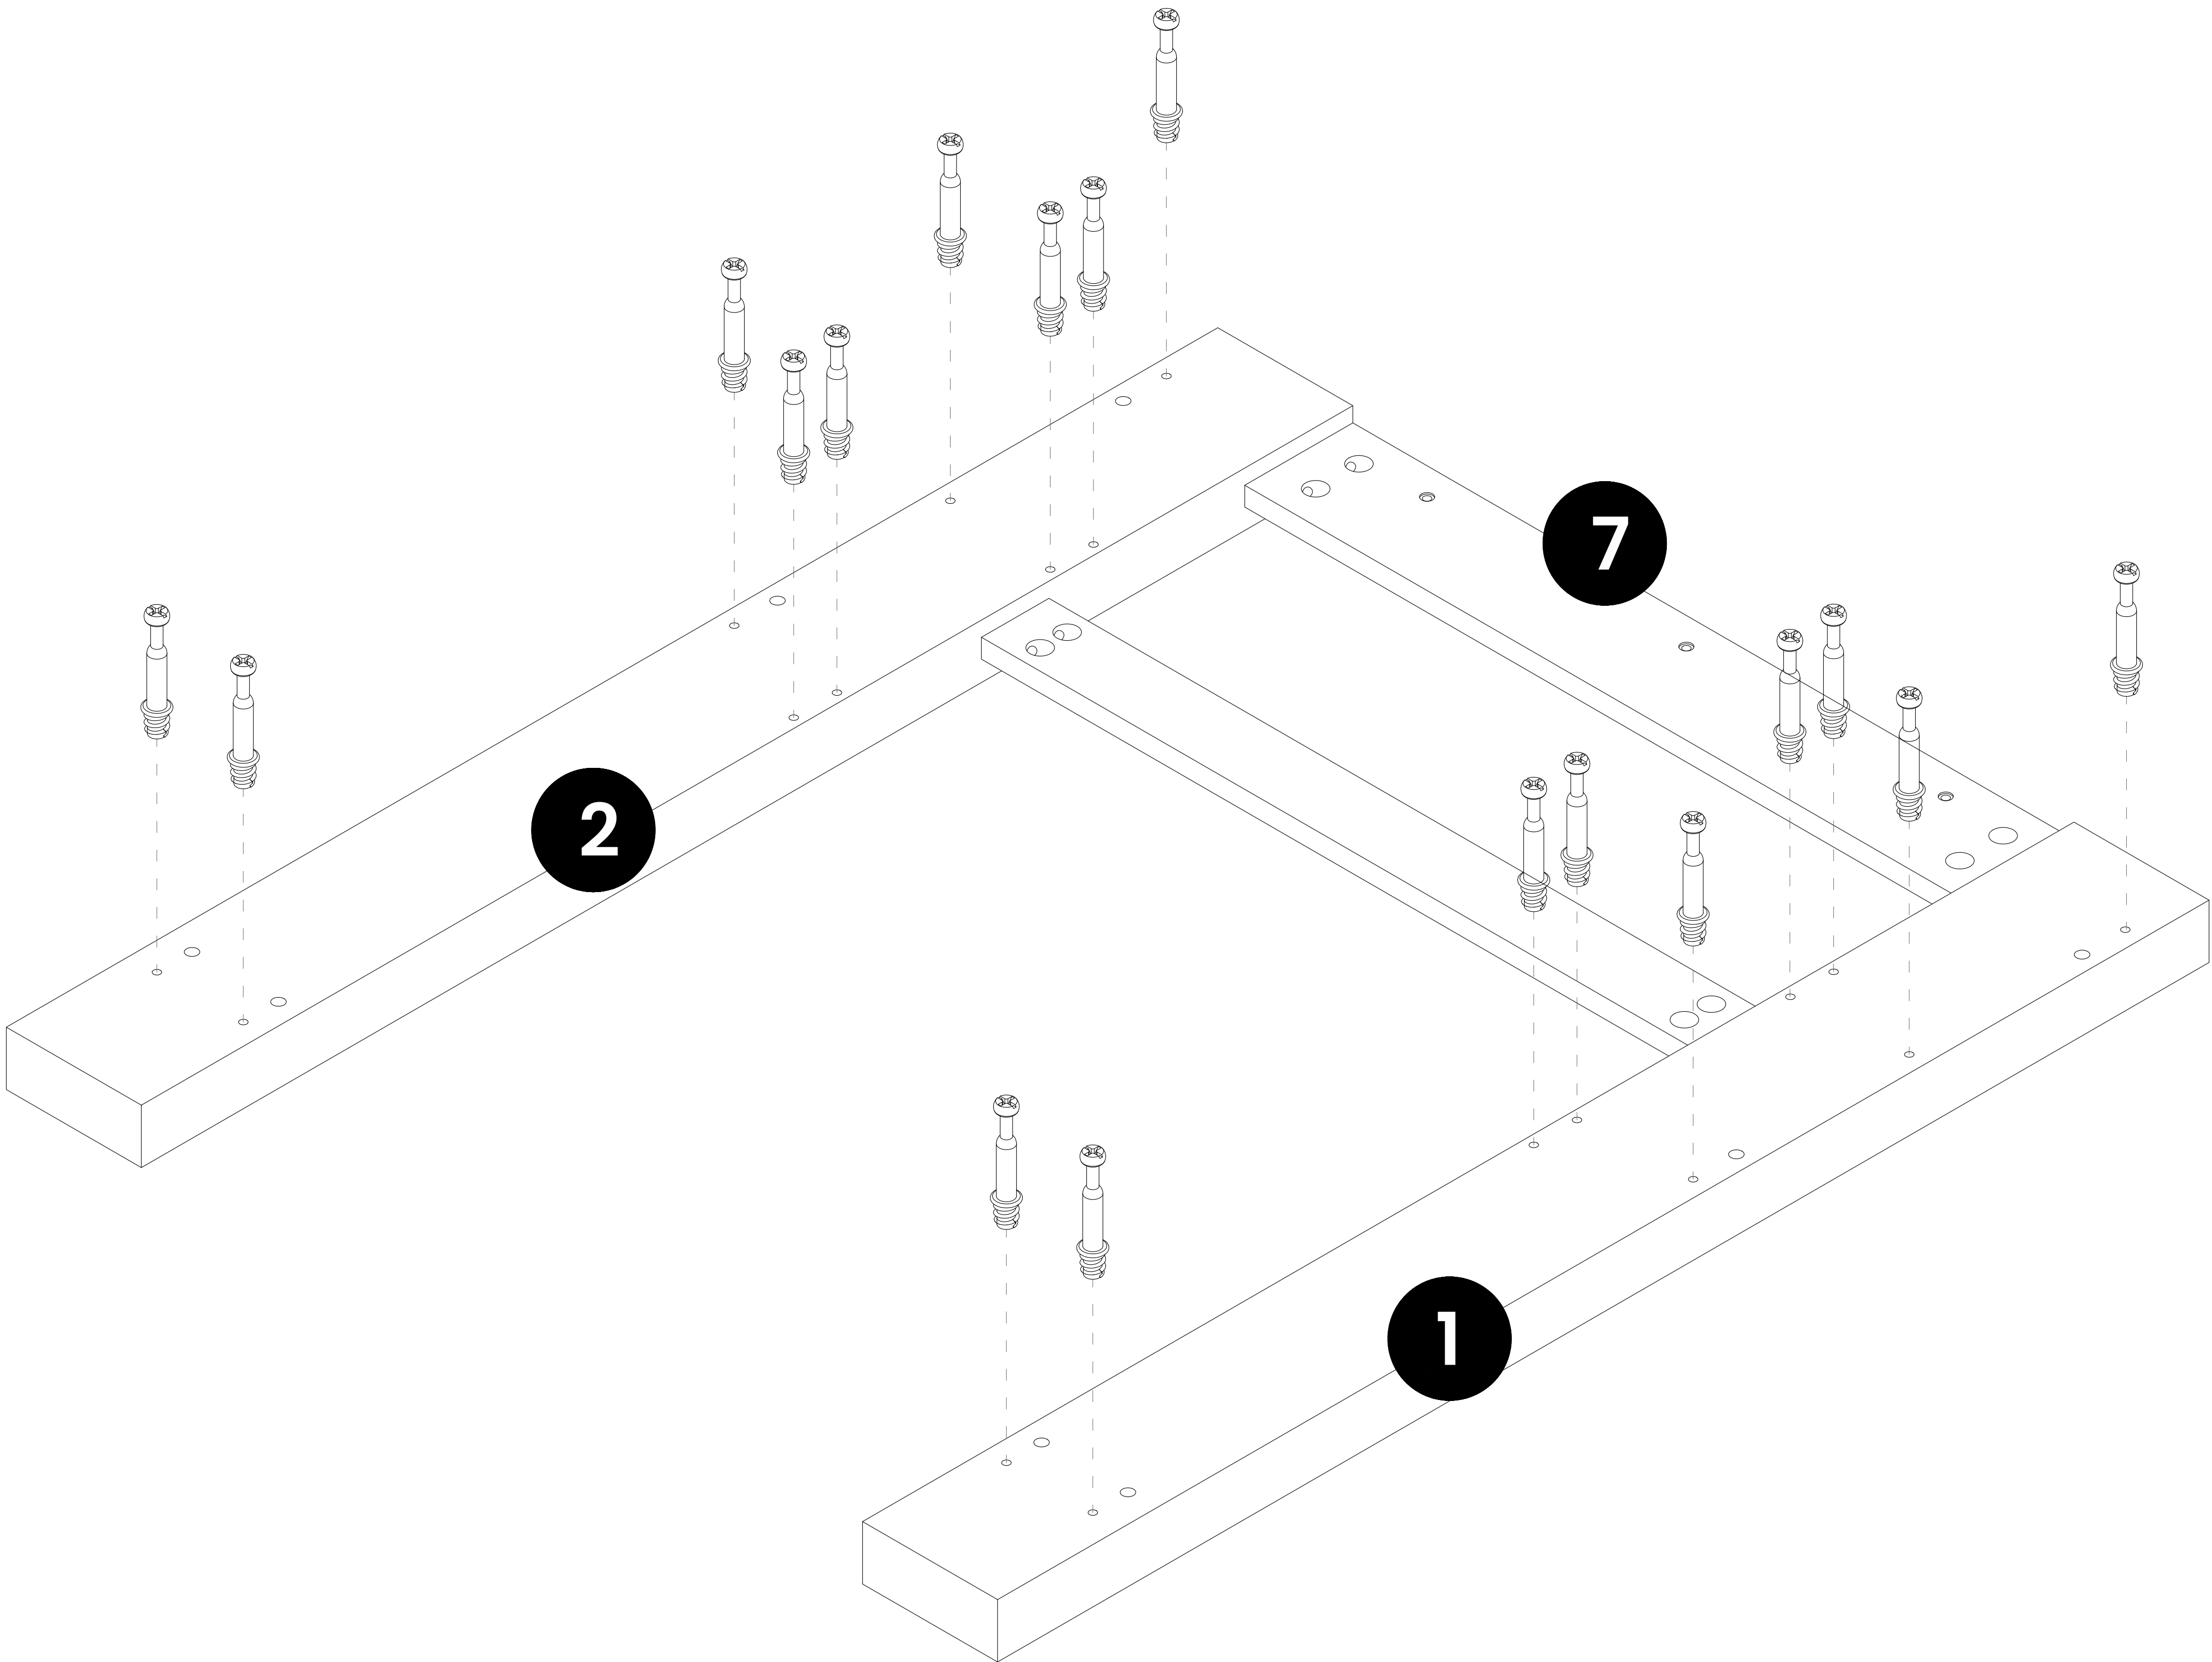
Install the screw correctly to secure the screw.

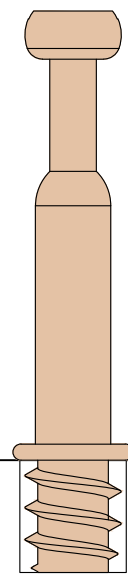
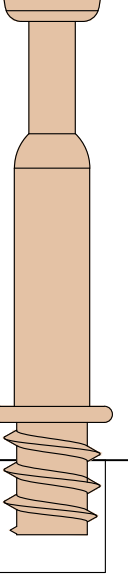
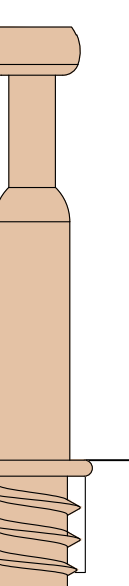
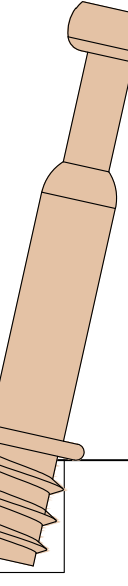
STEP 2



STEP 3

 **A** x18

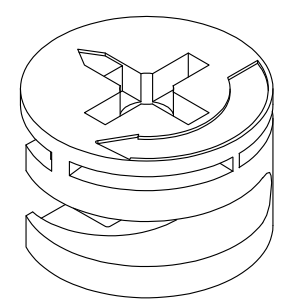
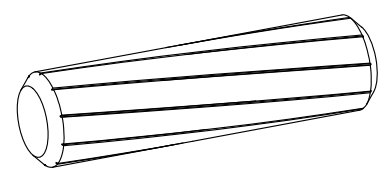


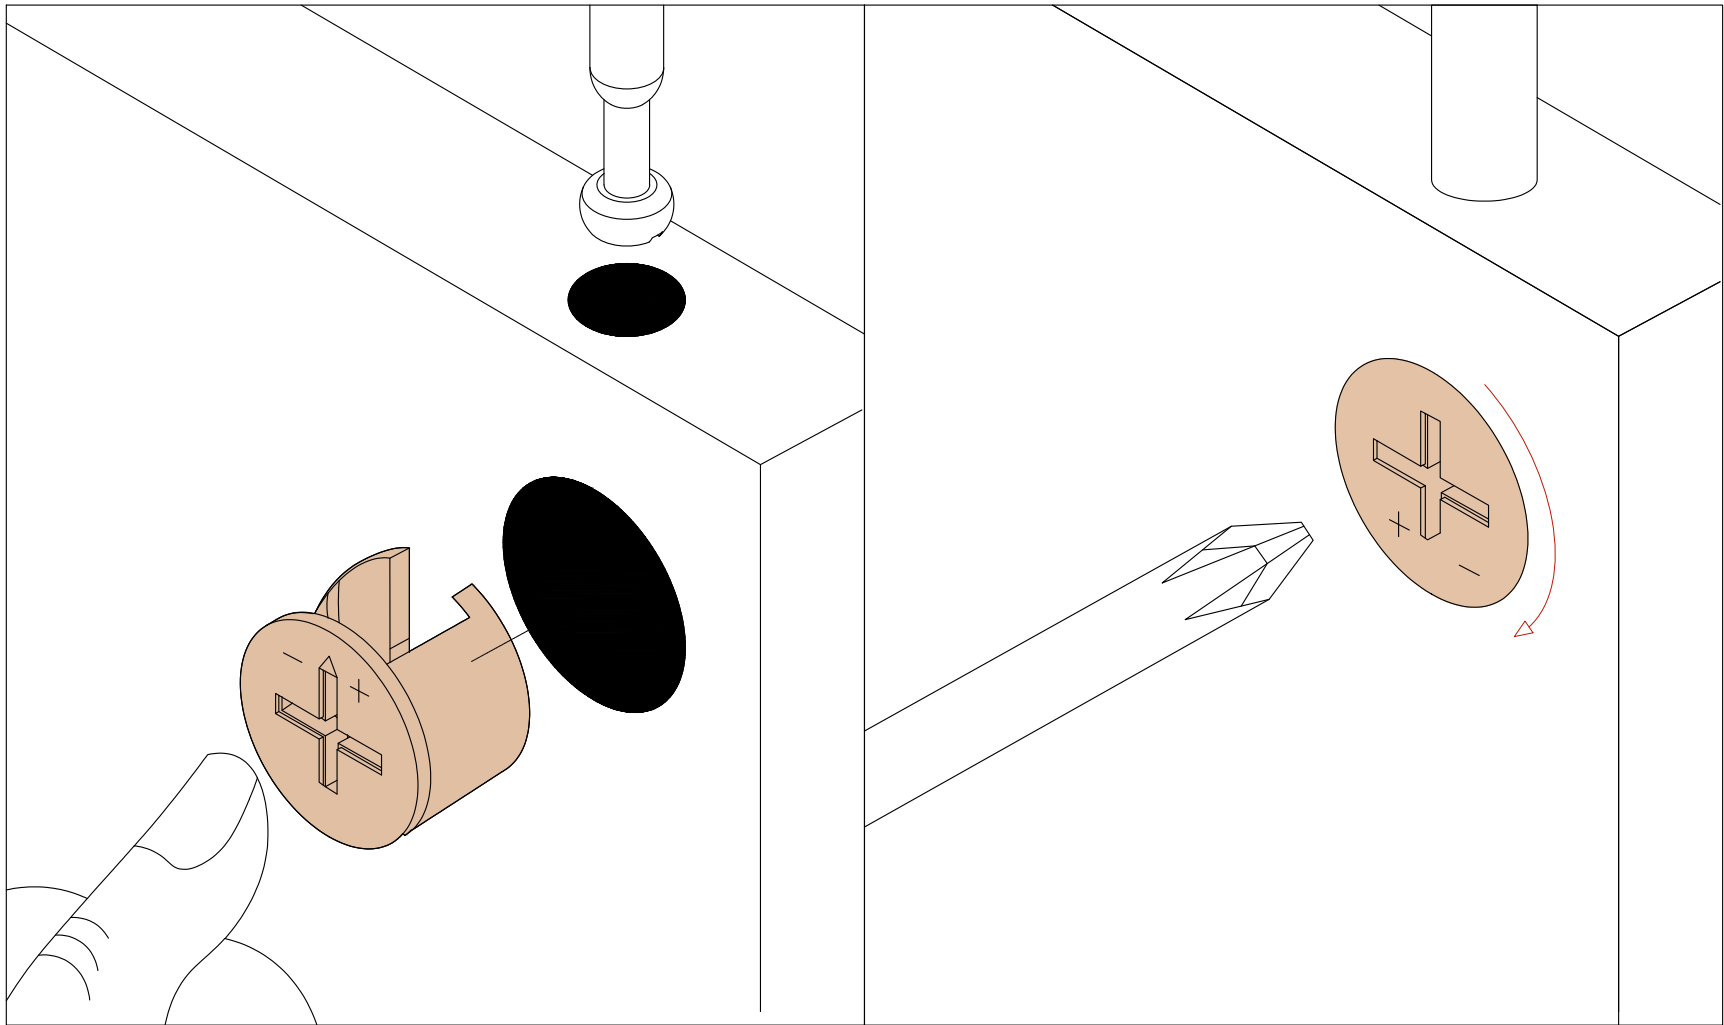
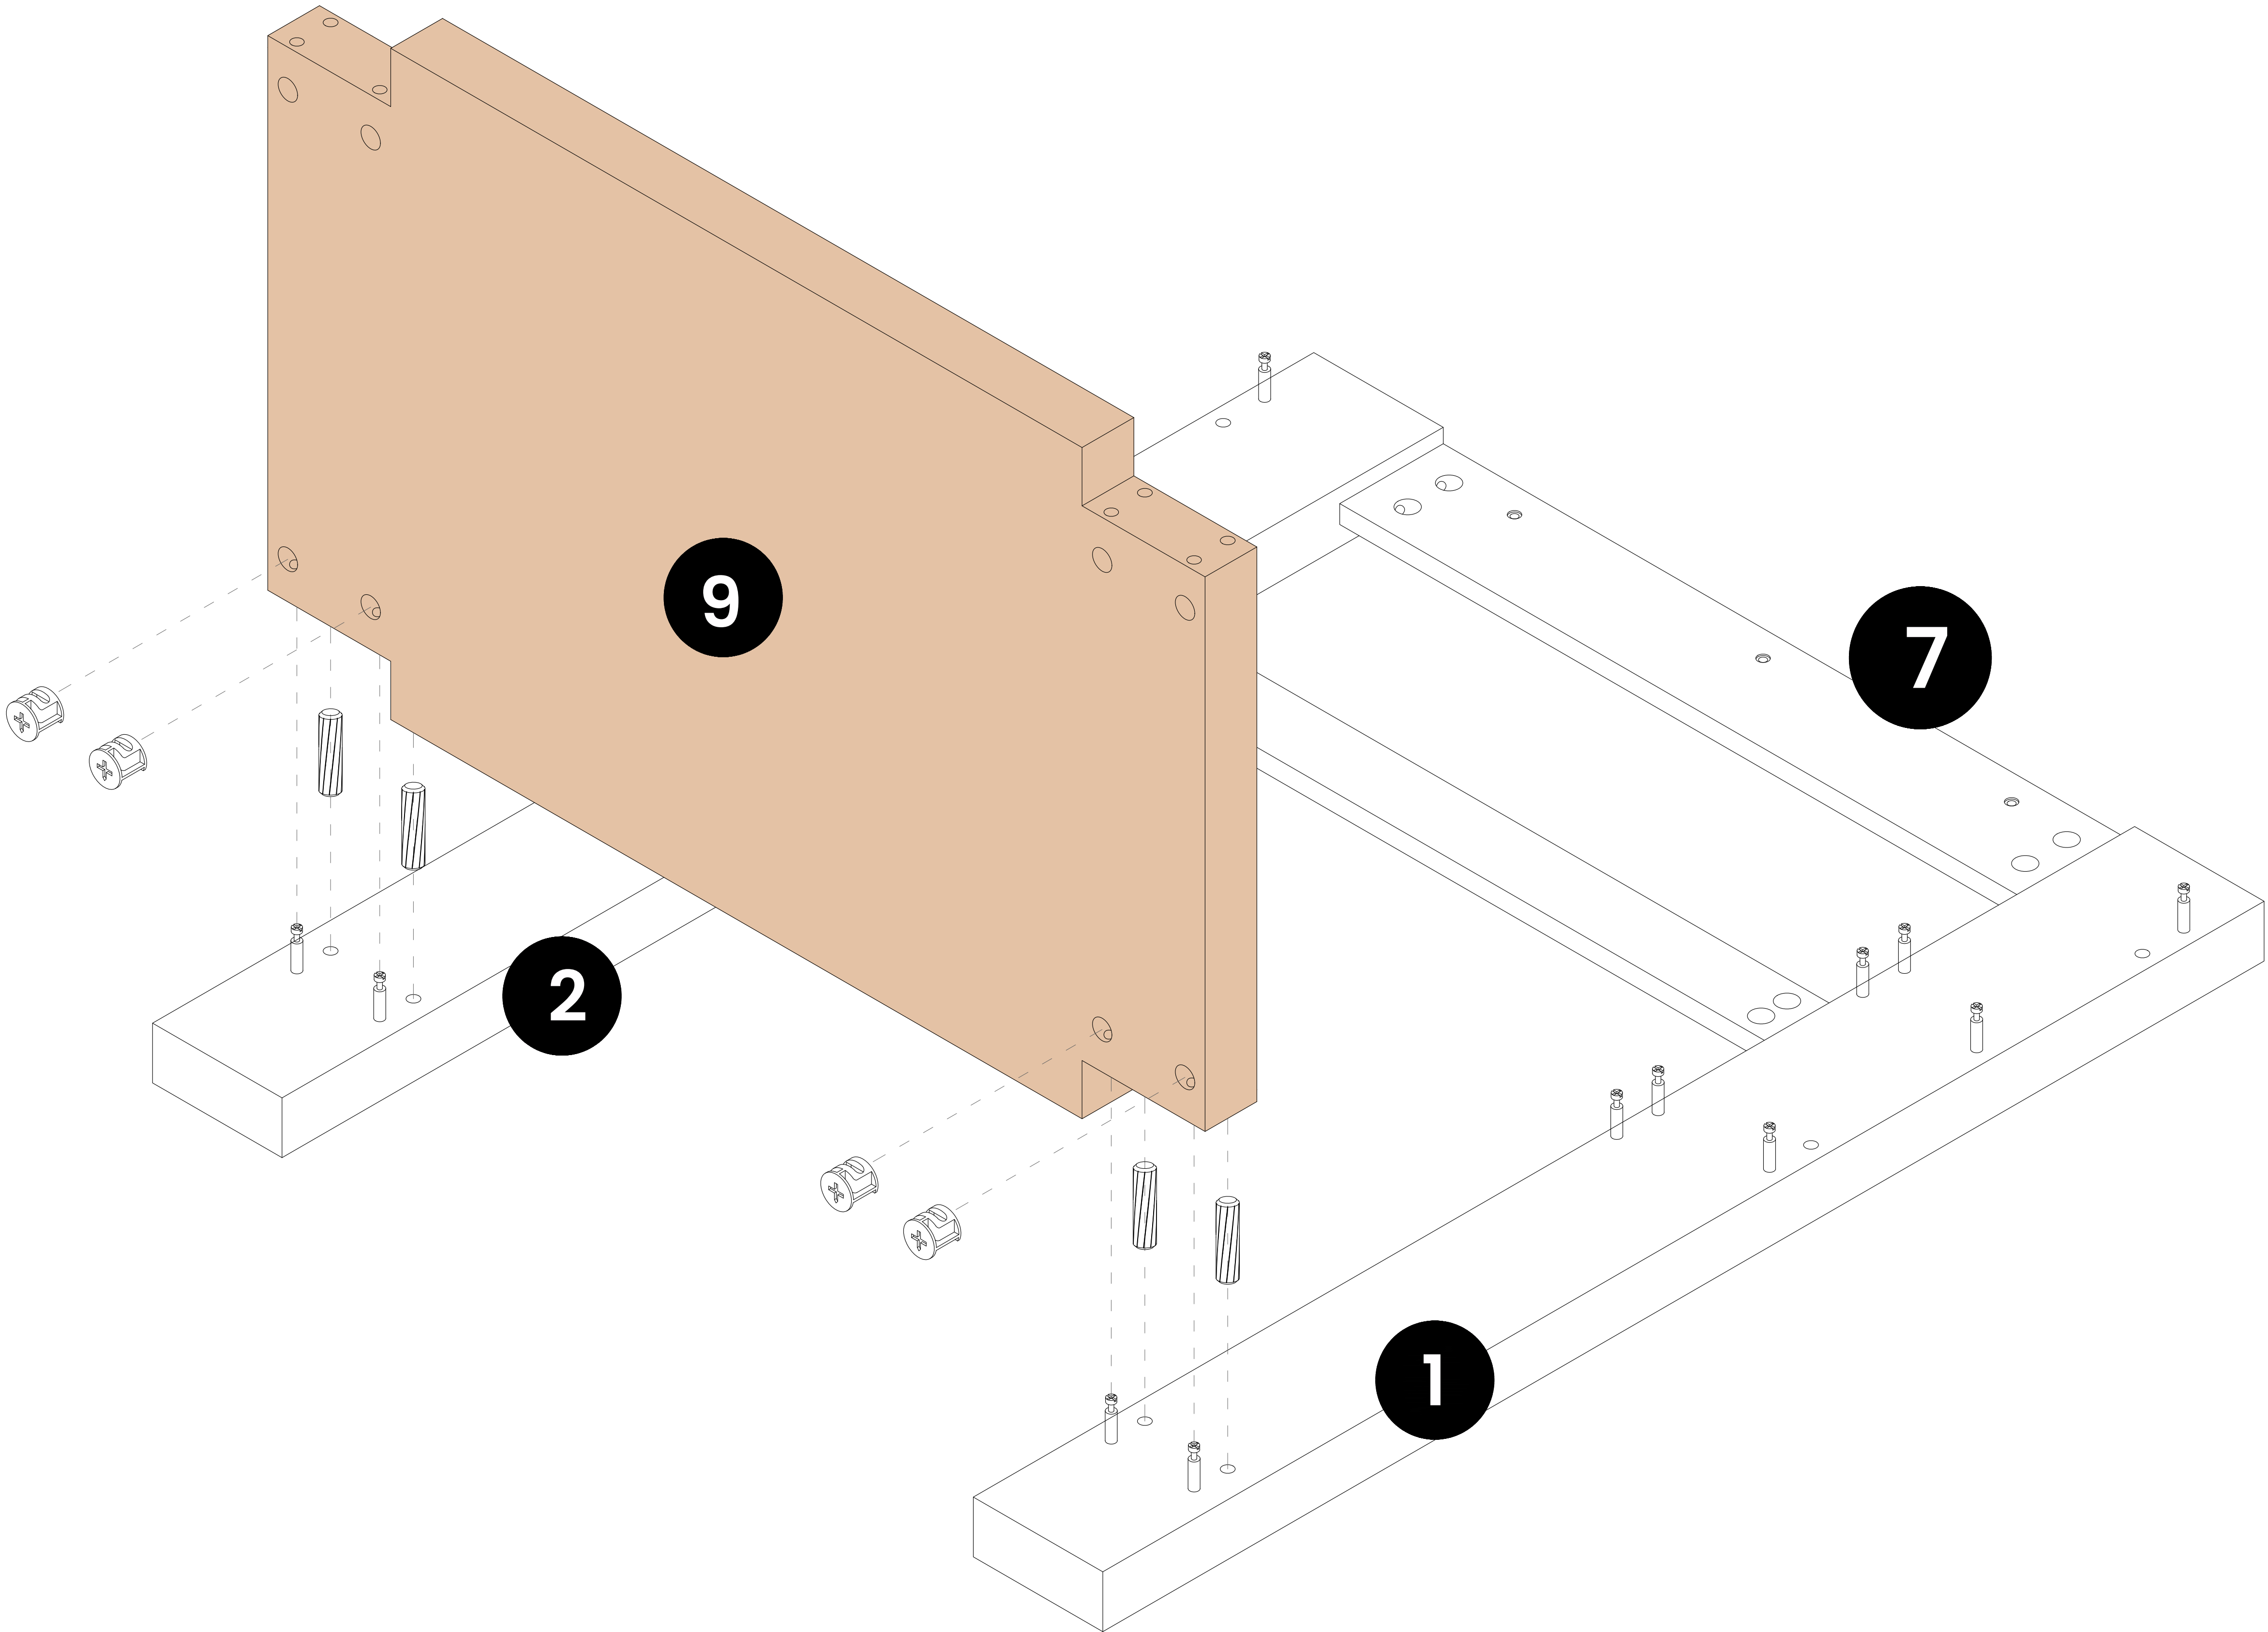
			
✓	✗	✗	✗



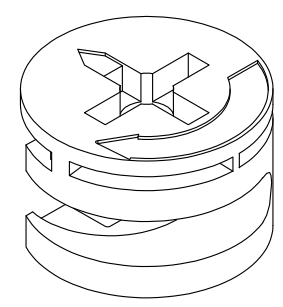
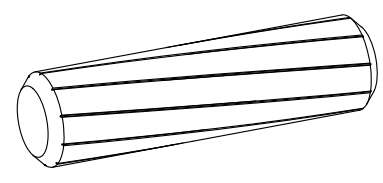
Install the screw correctly to secure the screw.

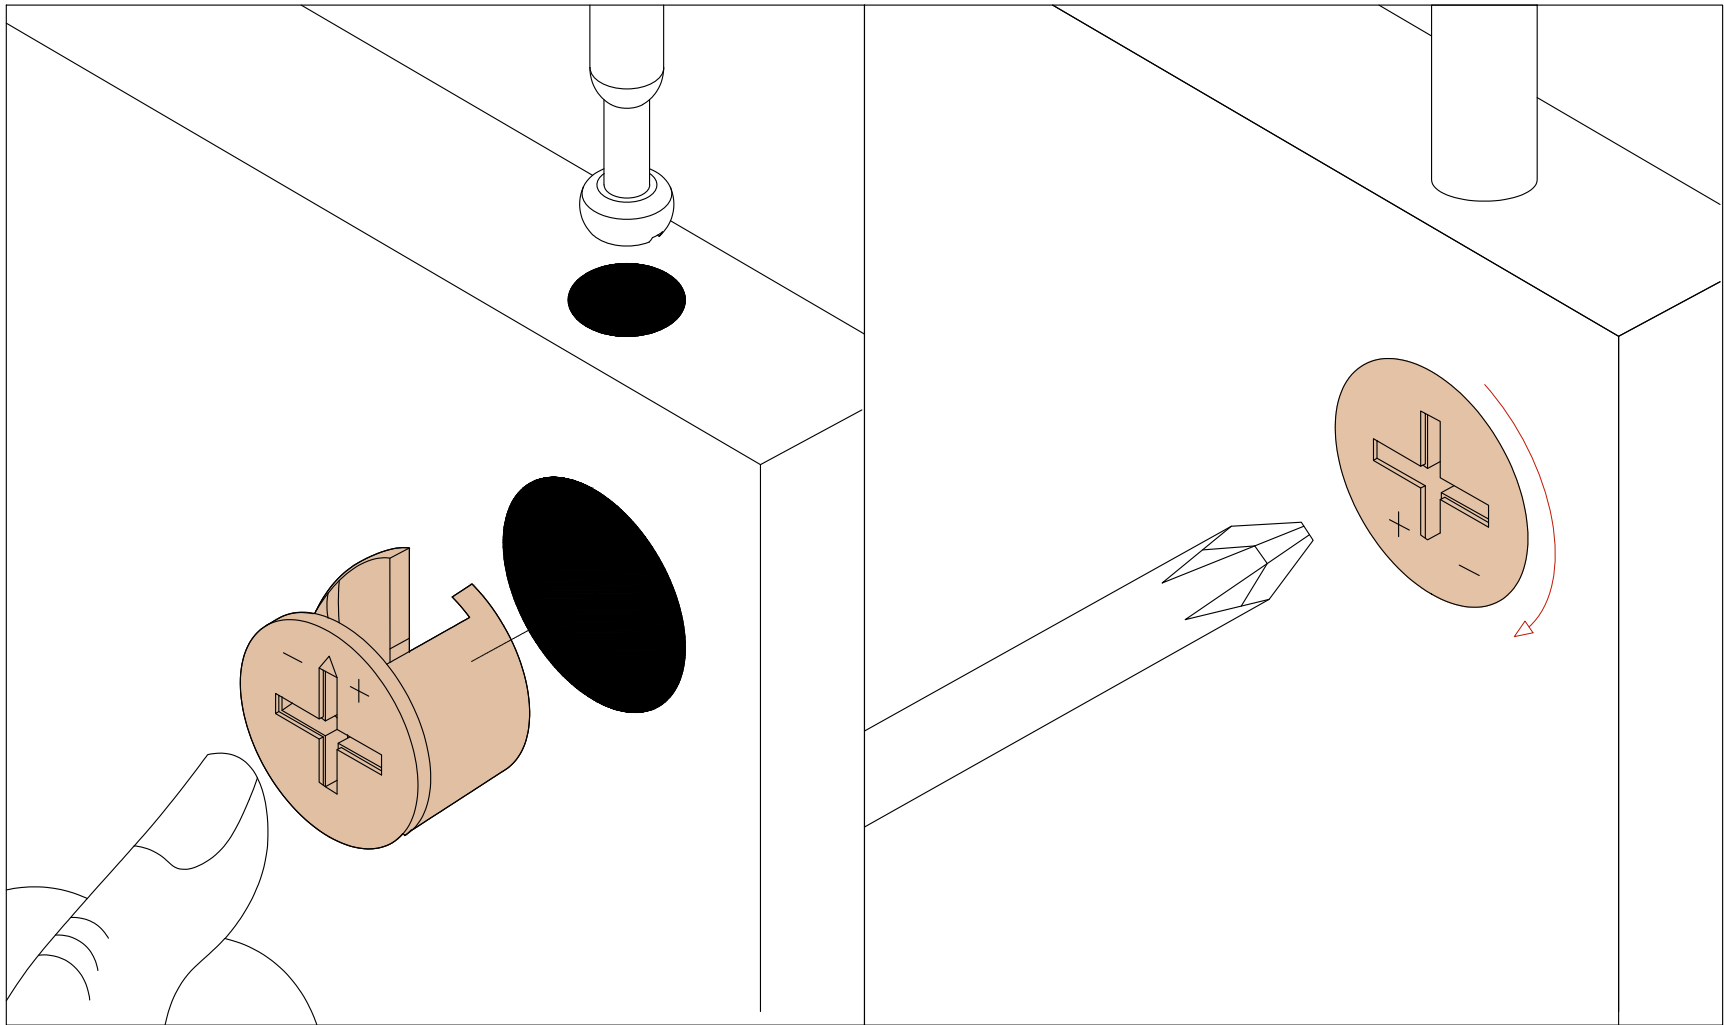
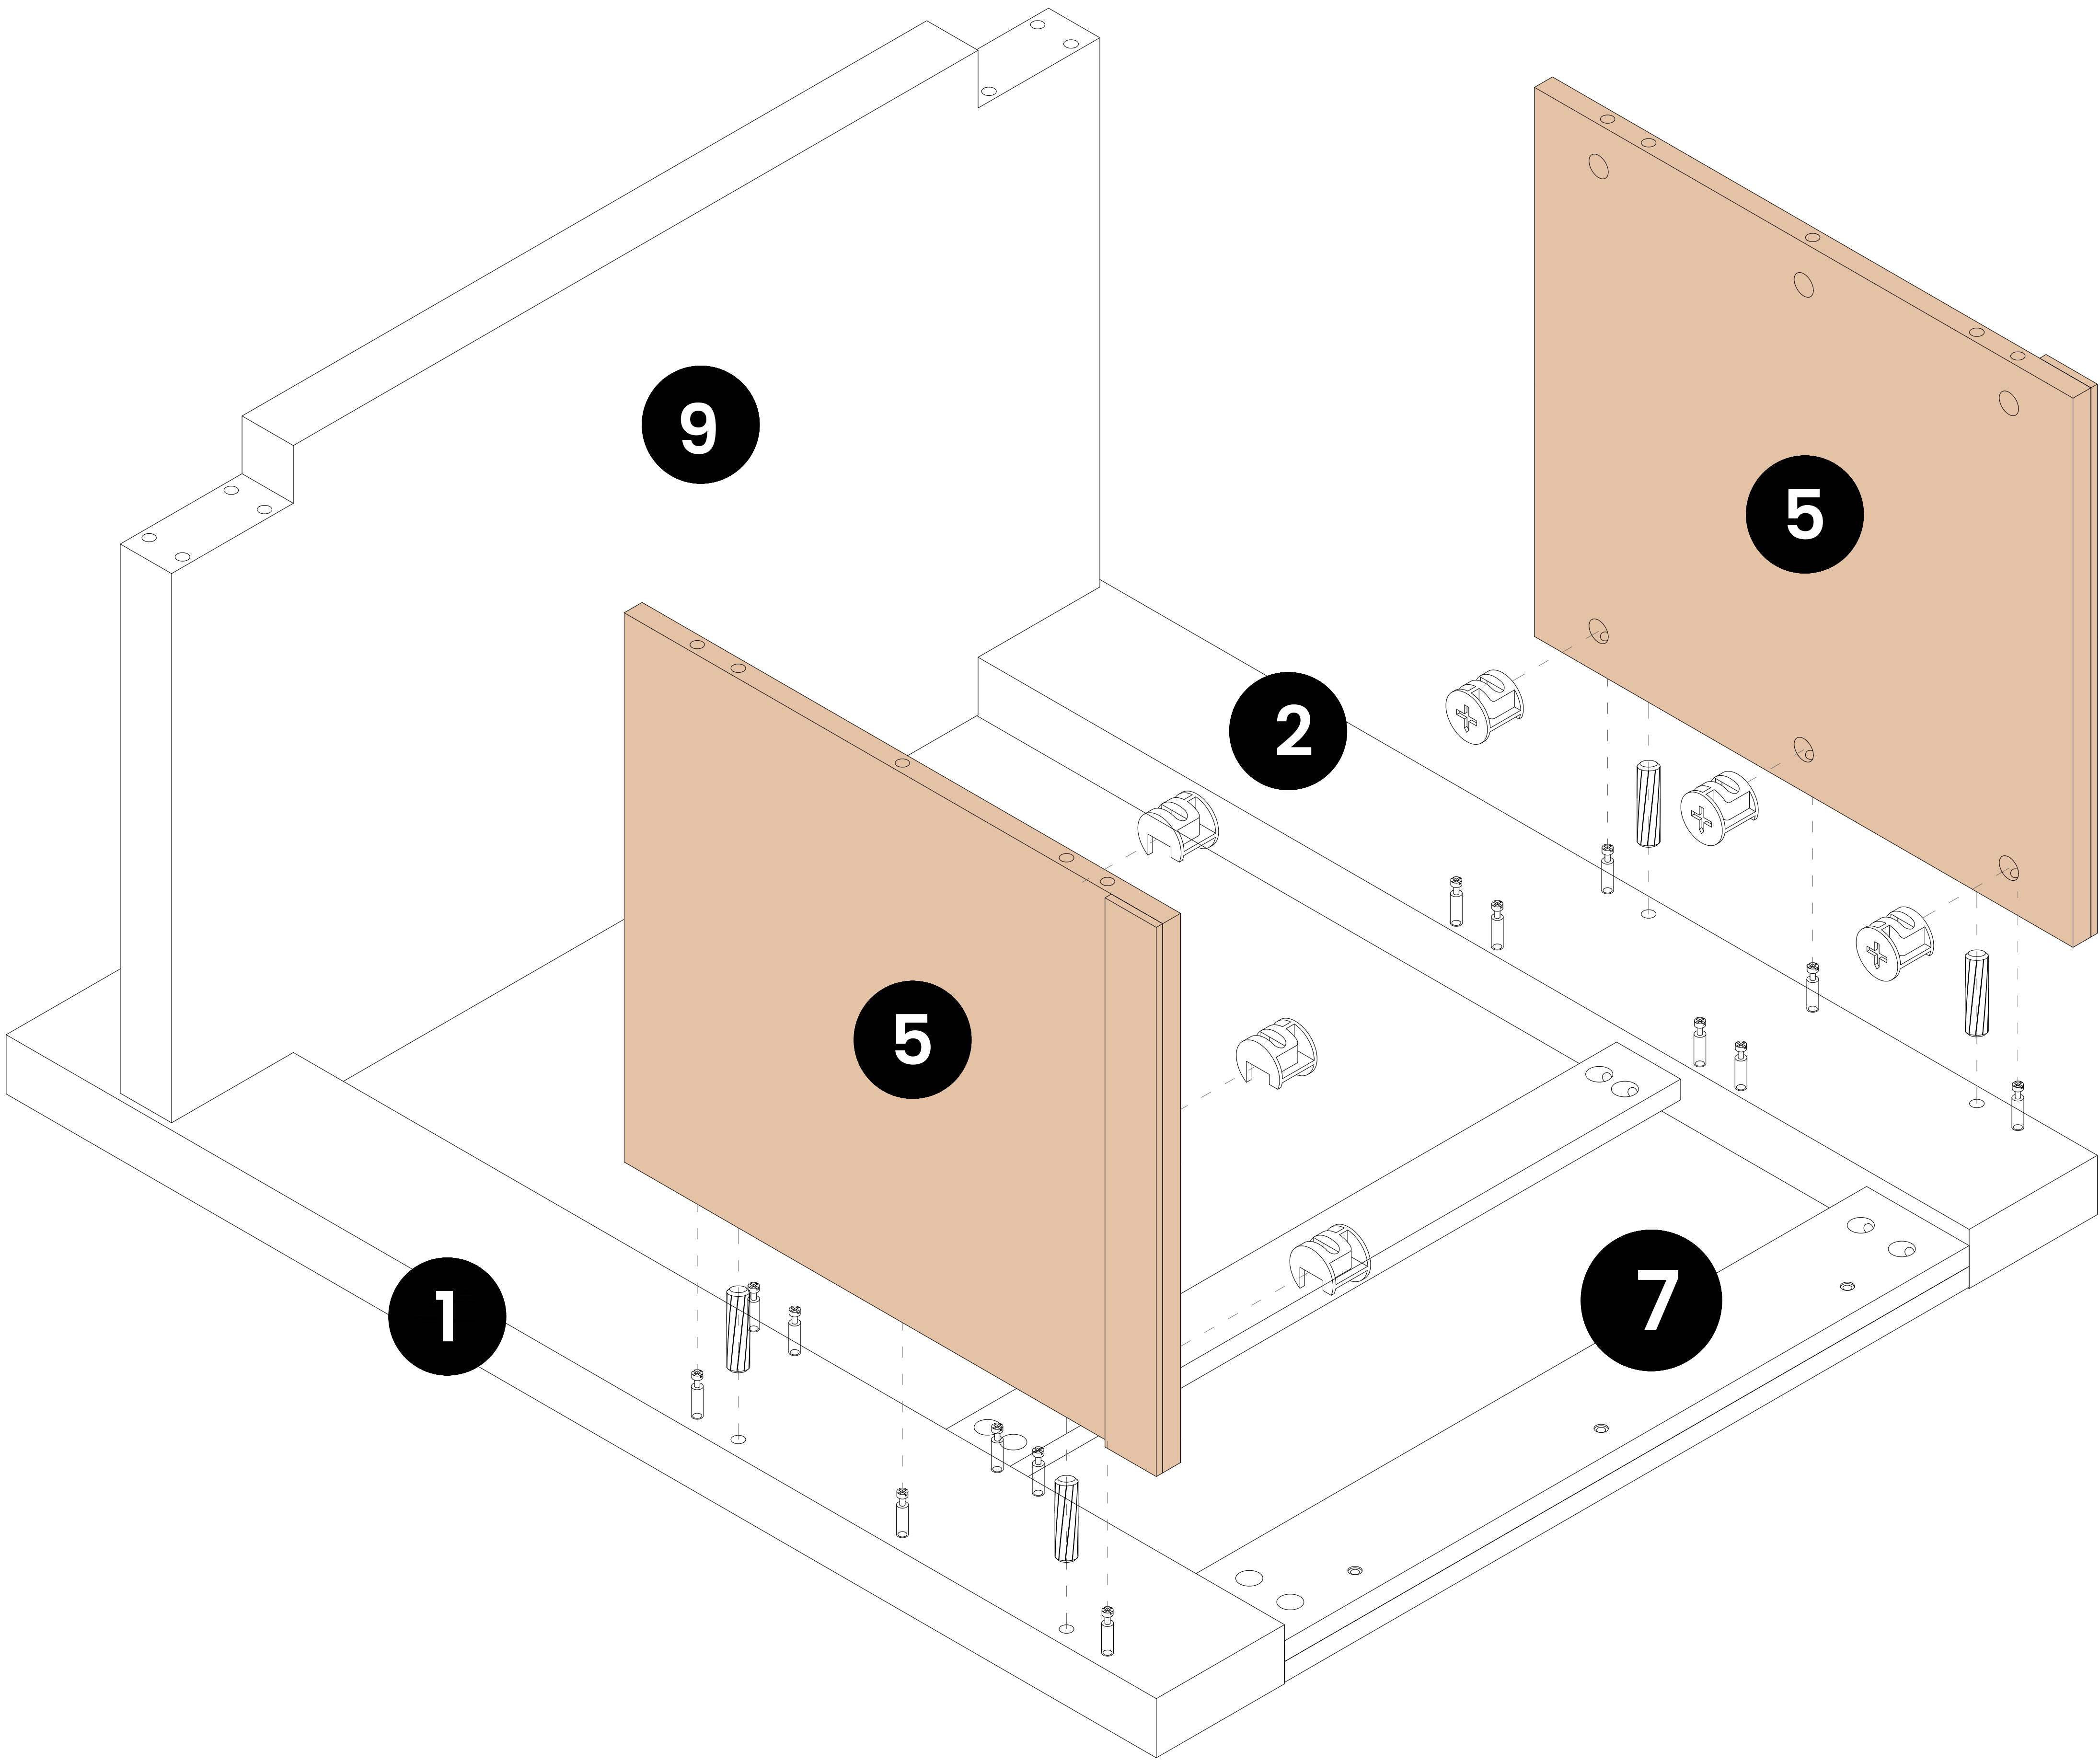
STEP 4

-  **B** x4
-  **C** x4

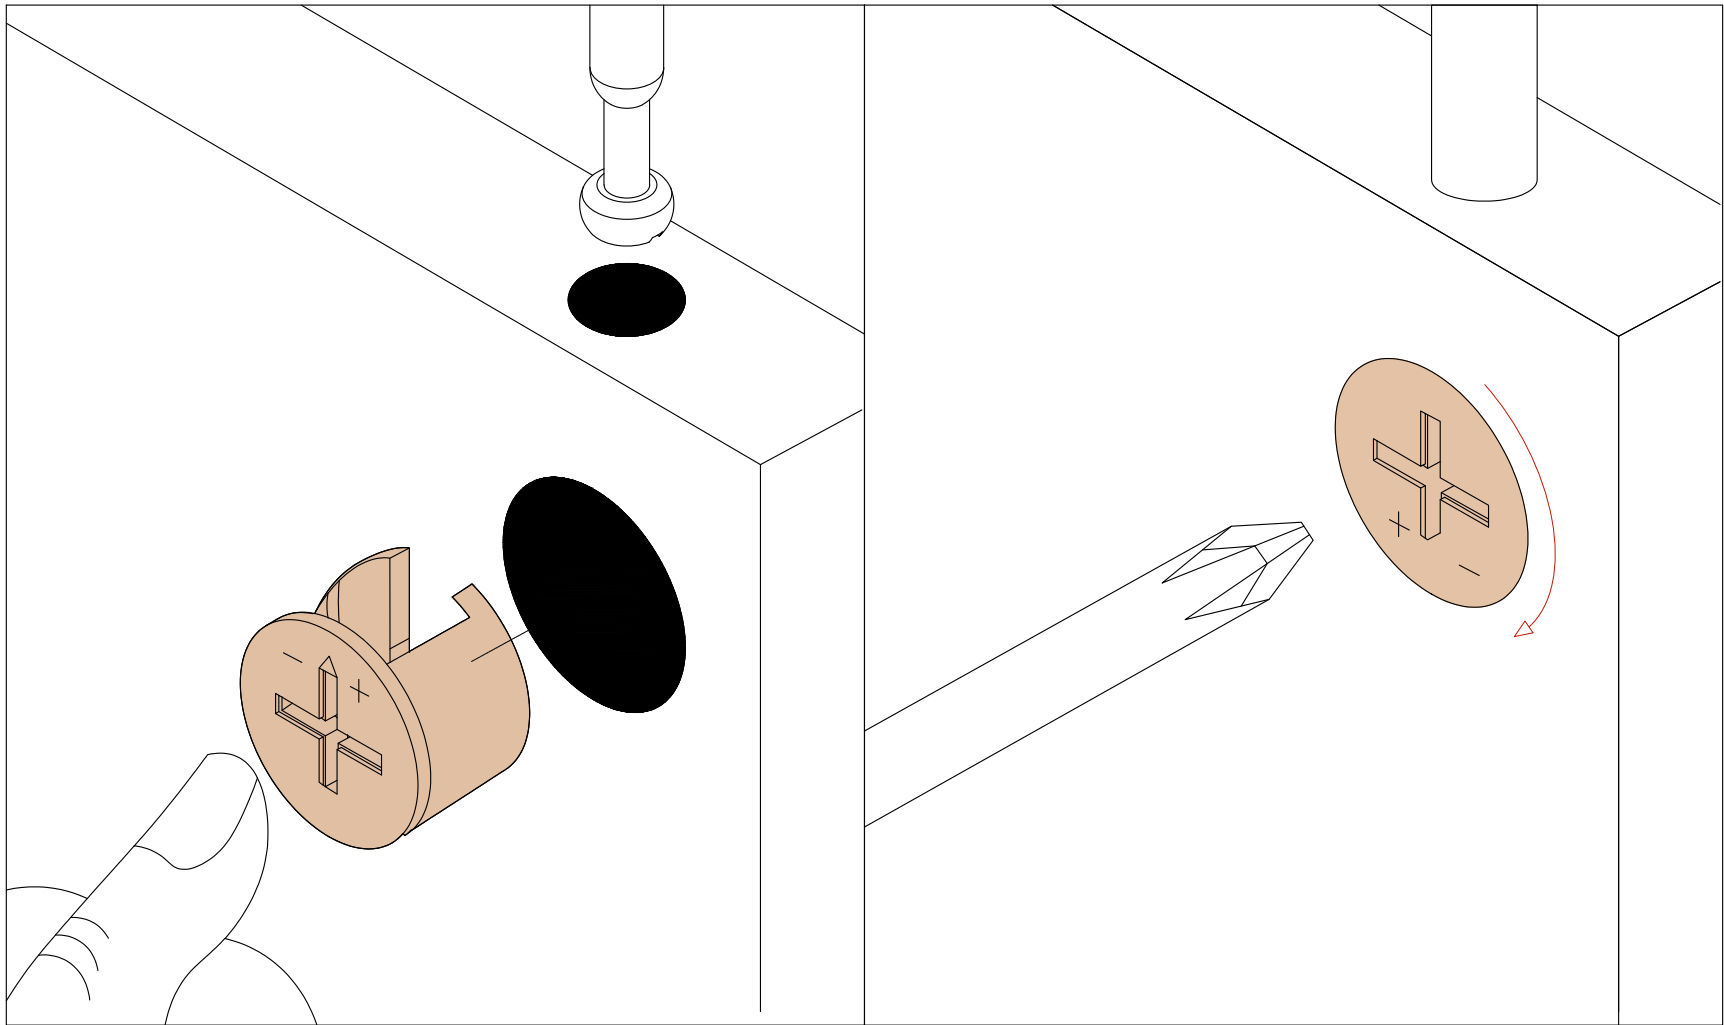
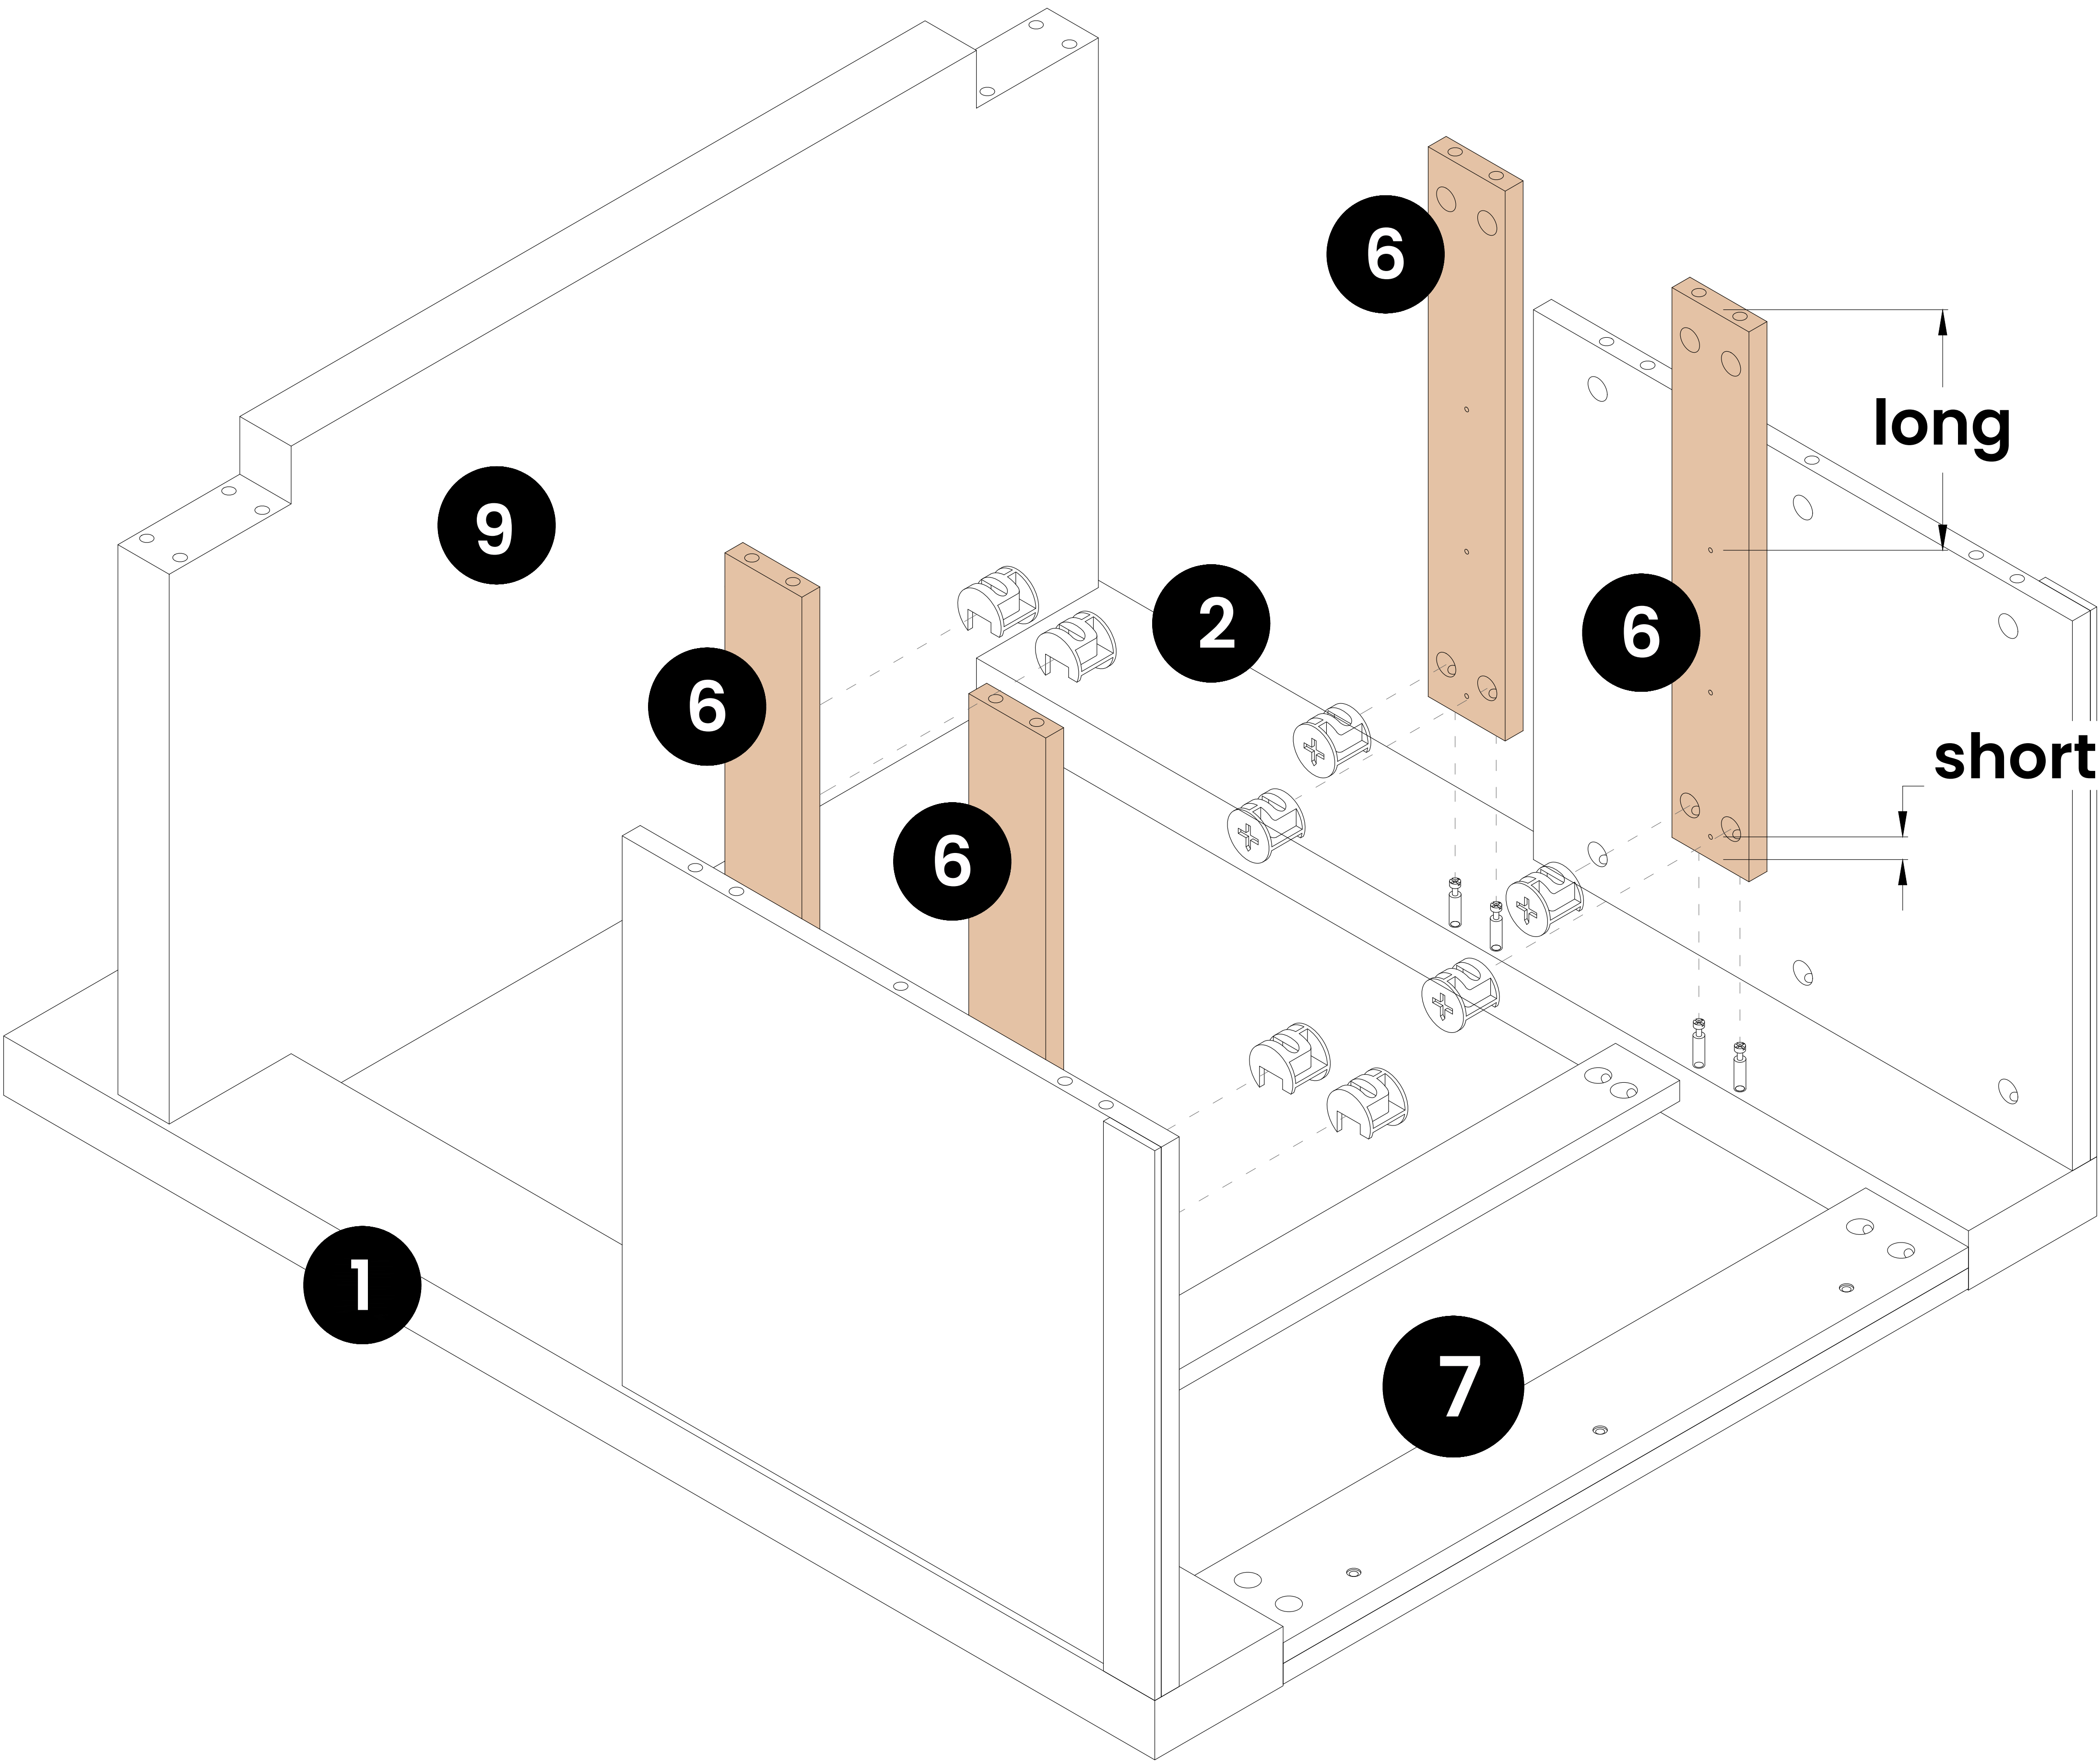


STEP 5


-  **B** x6
-  **C** x4



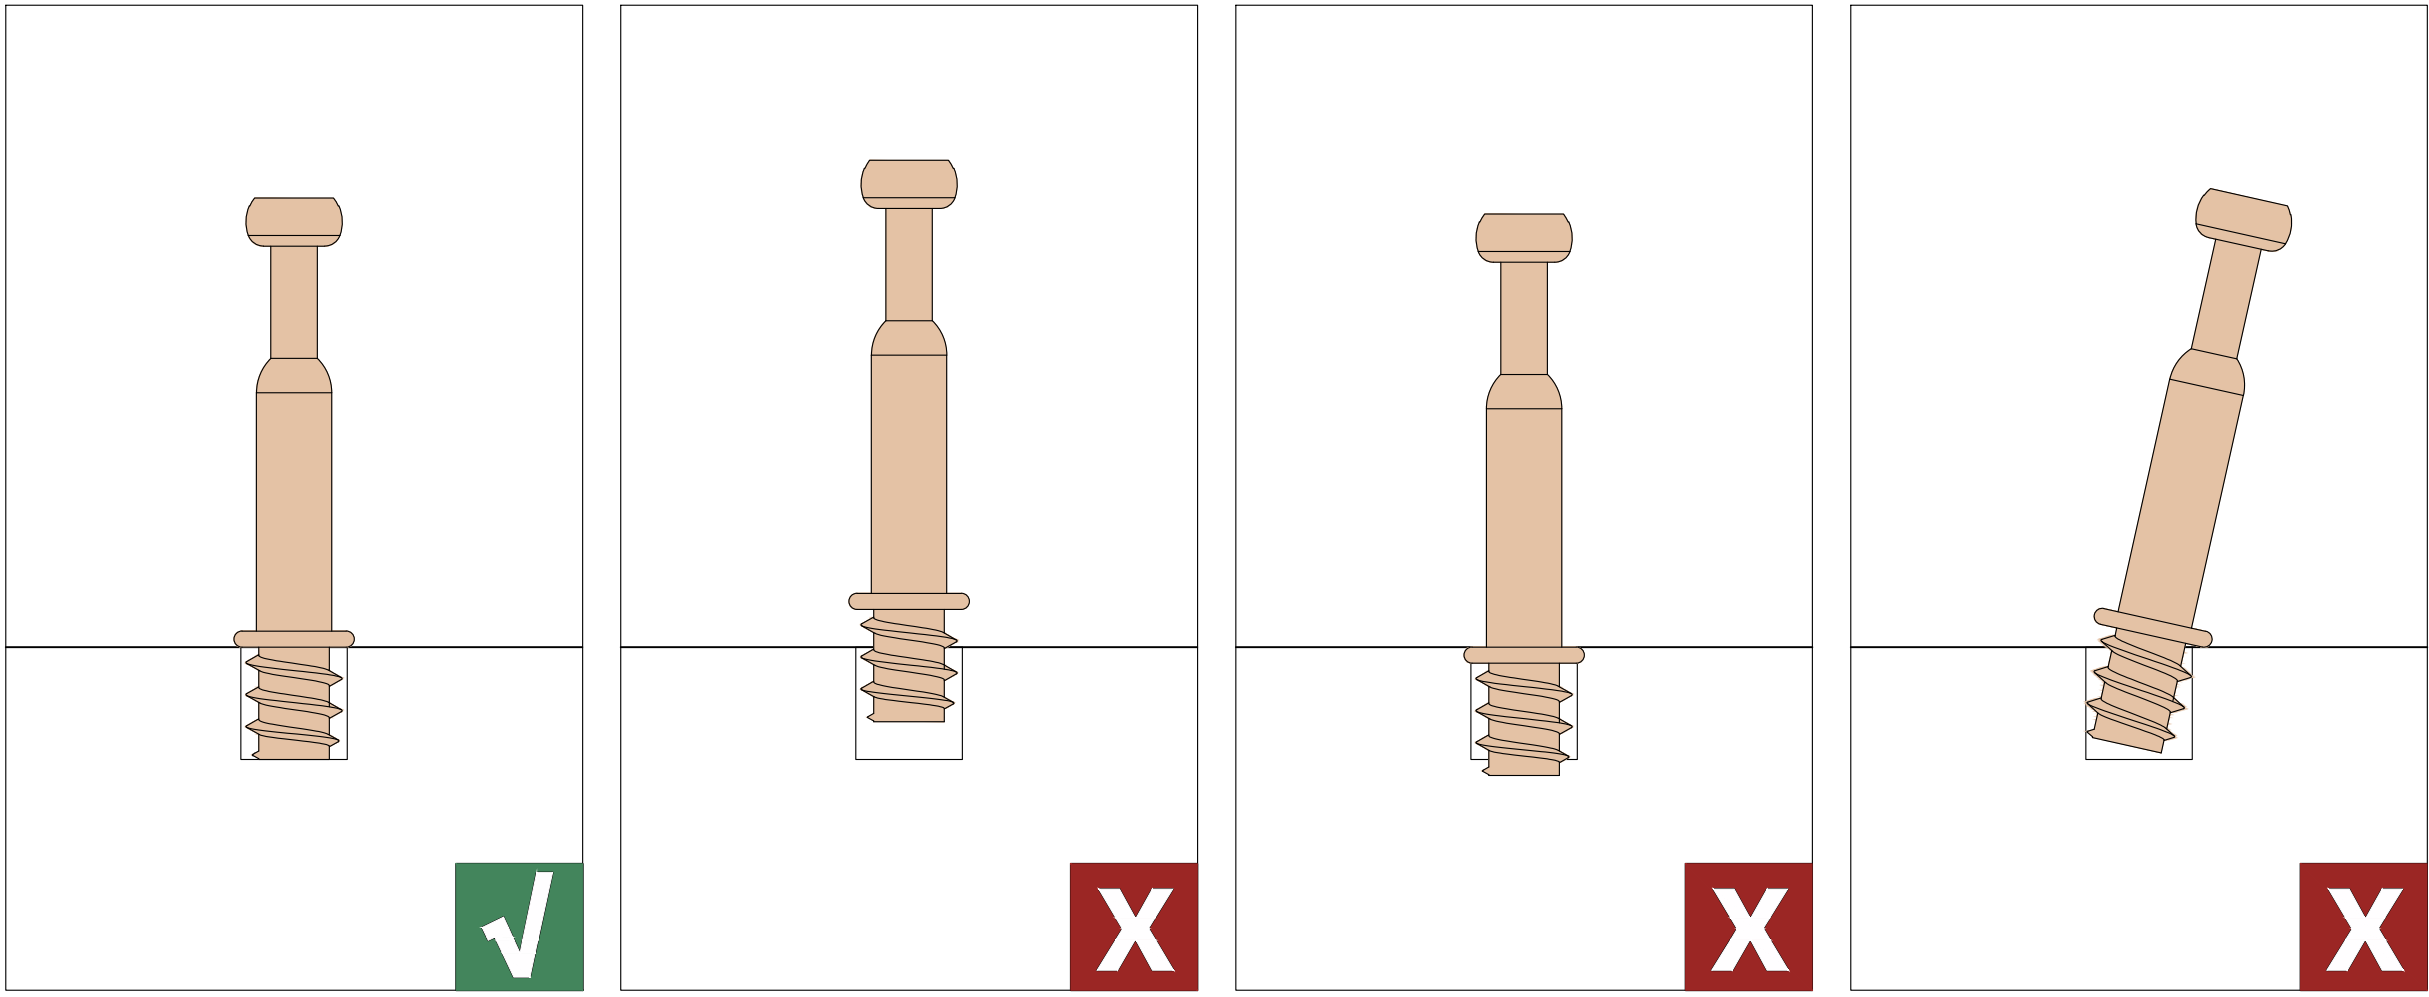
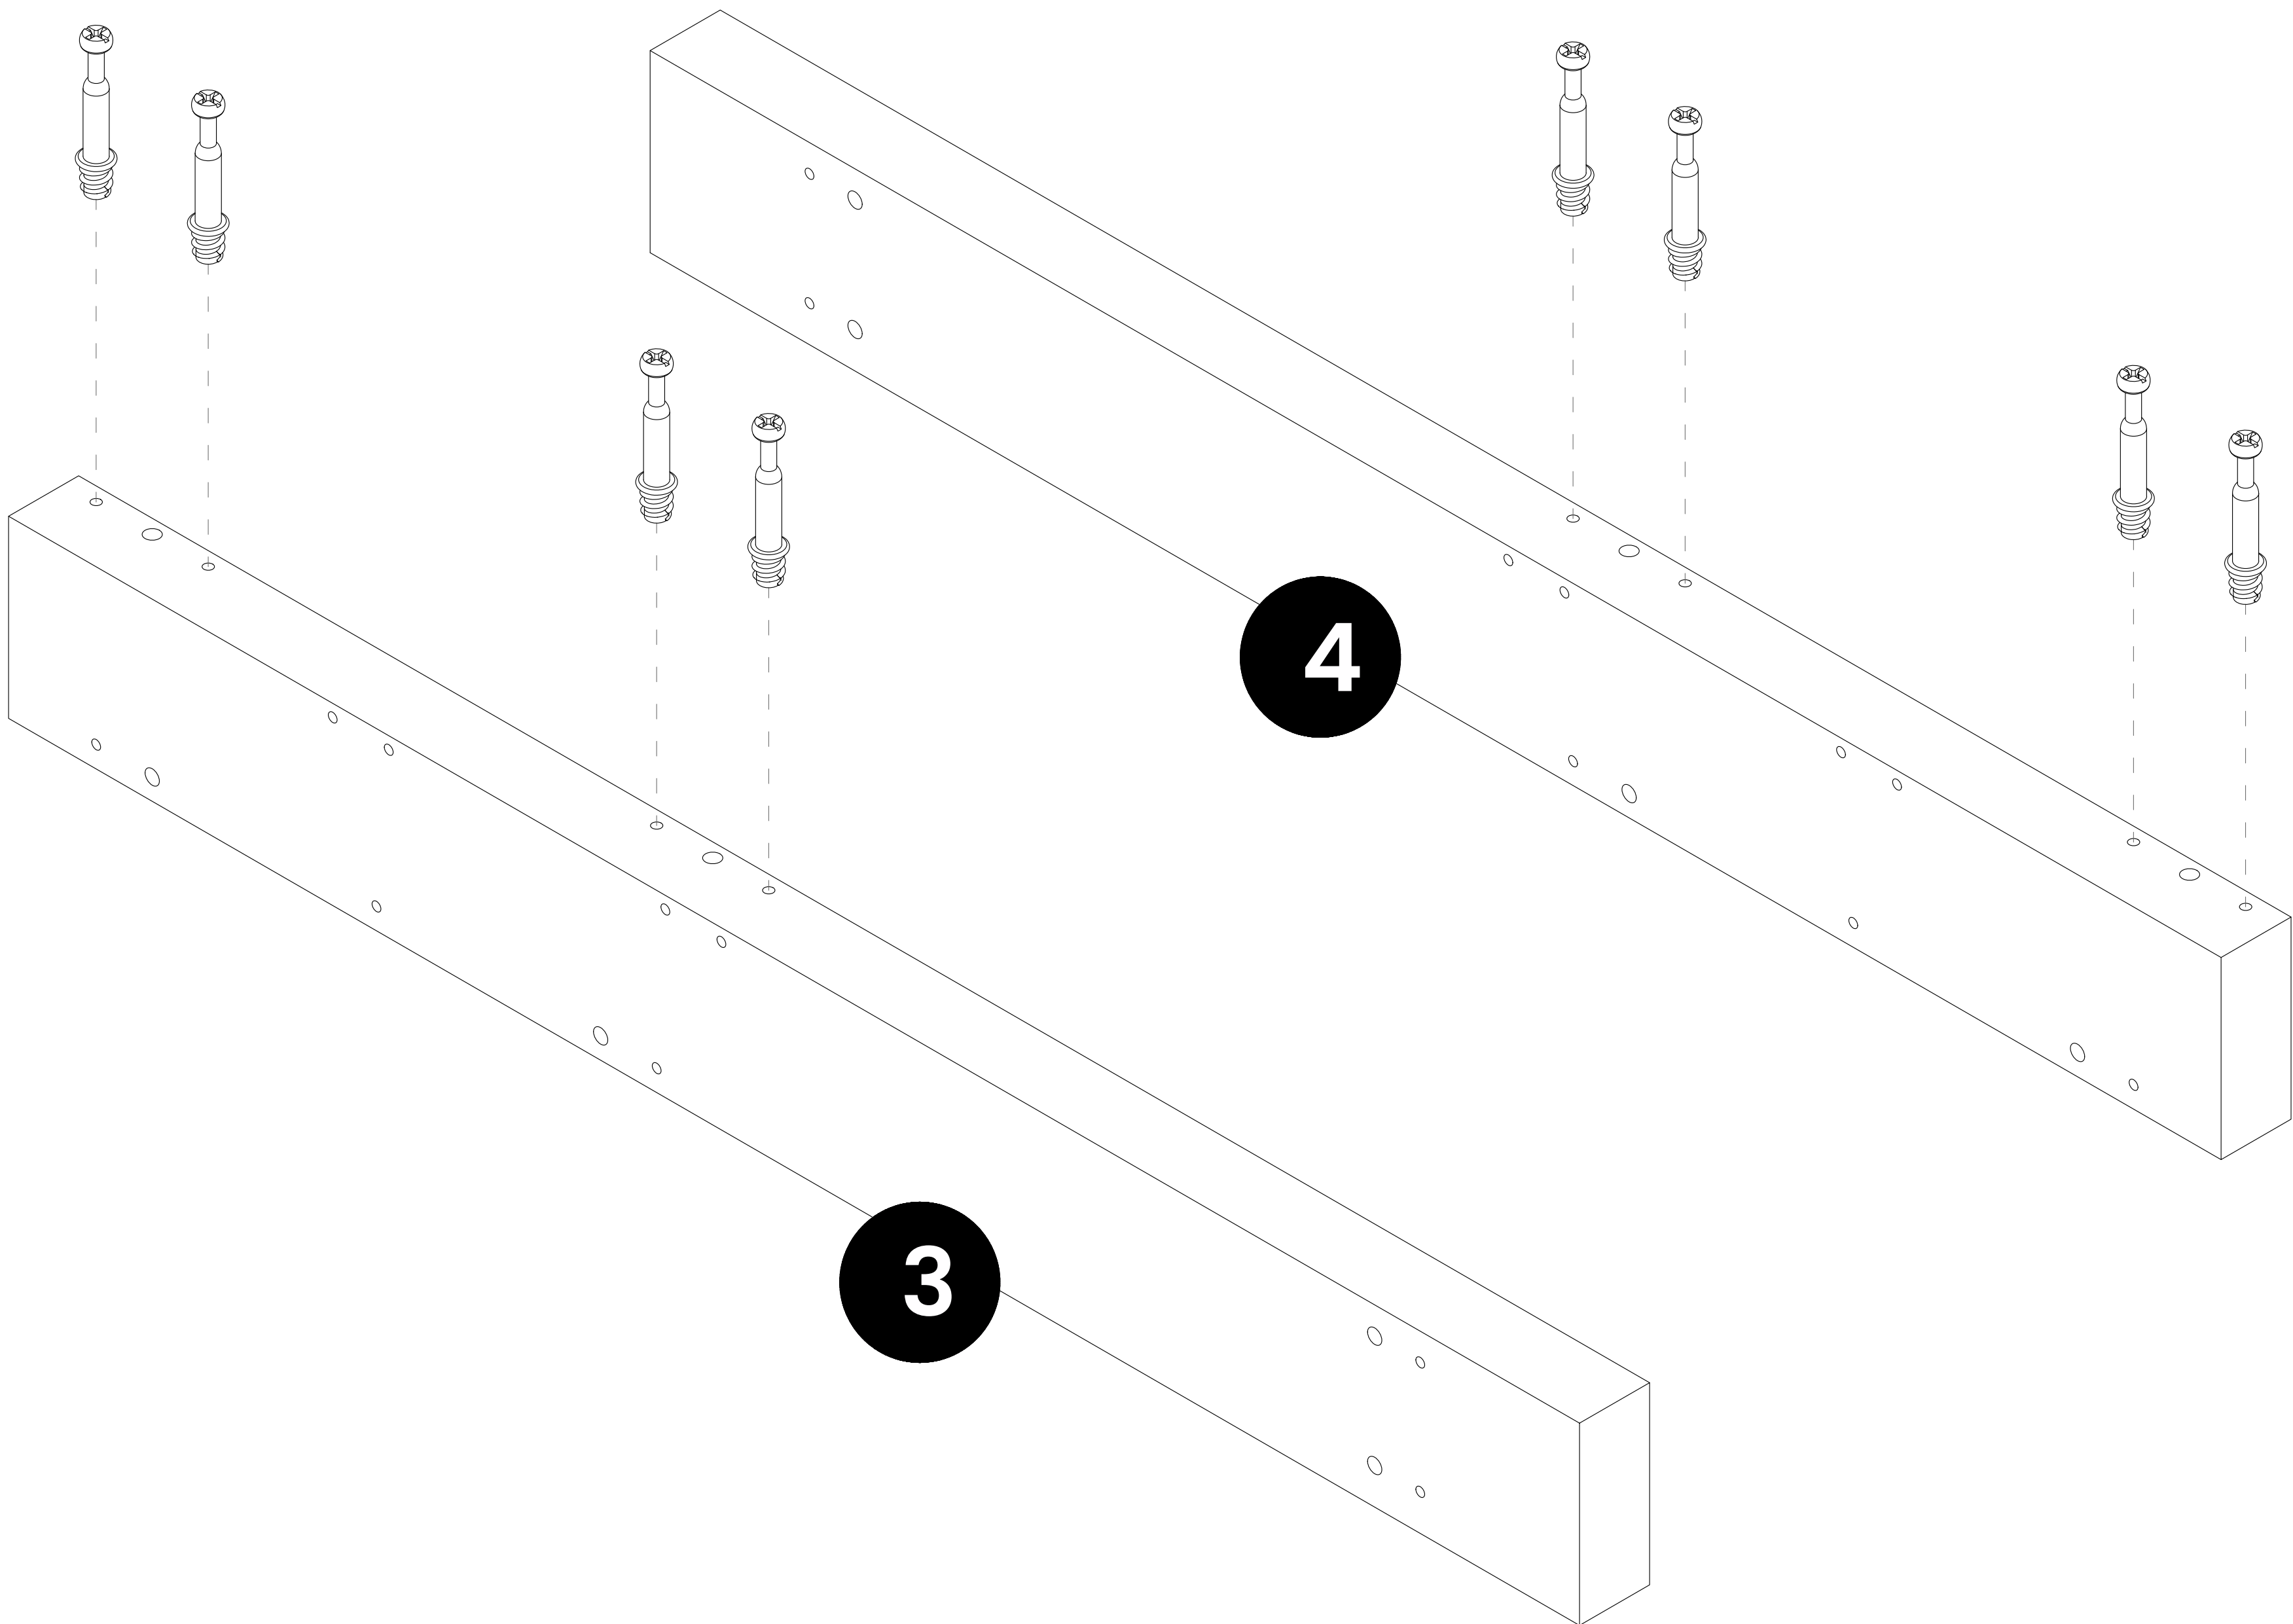
STEP 6

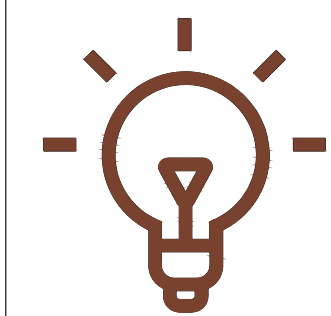


STEP 7

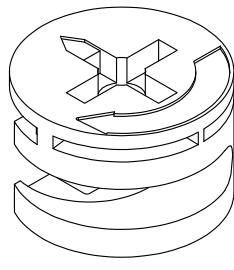
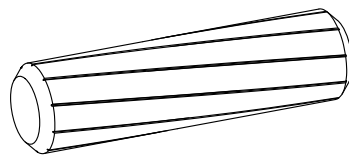


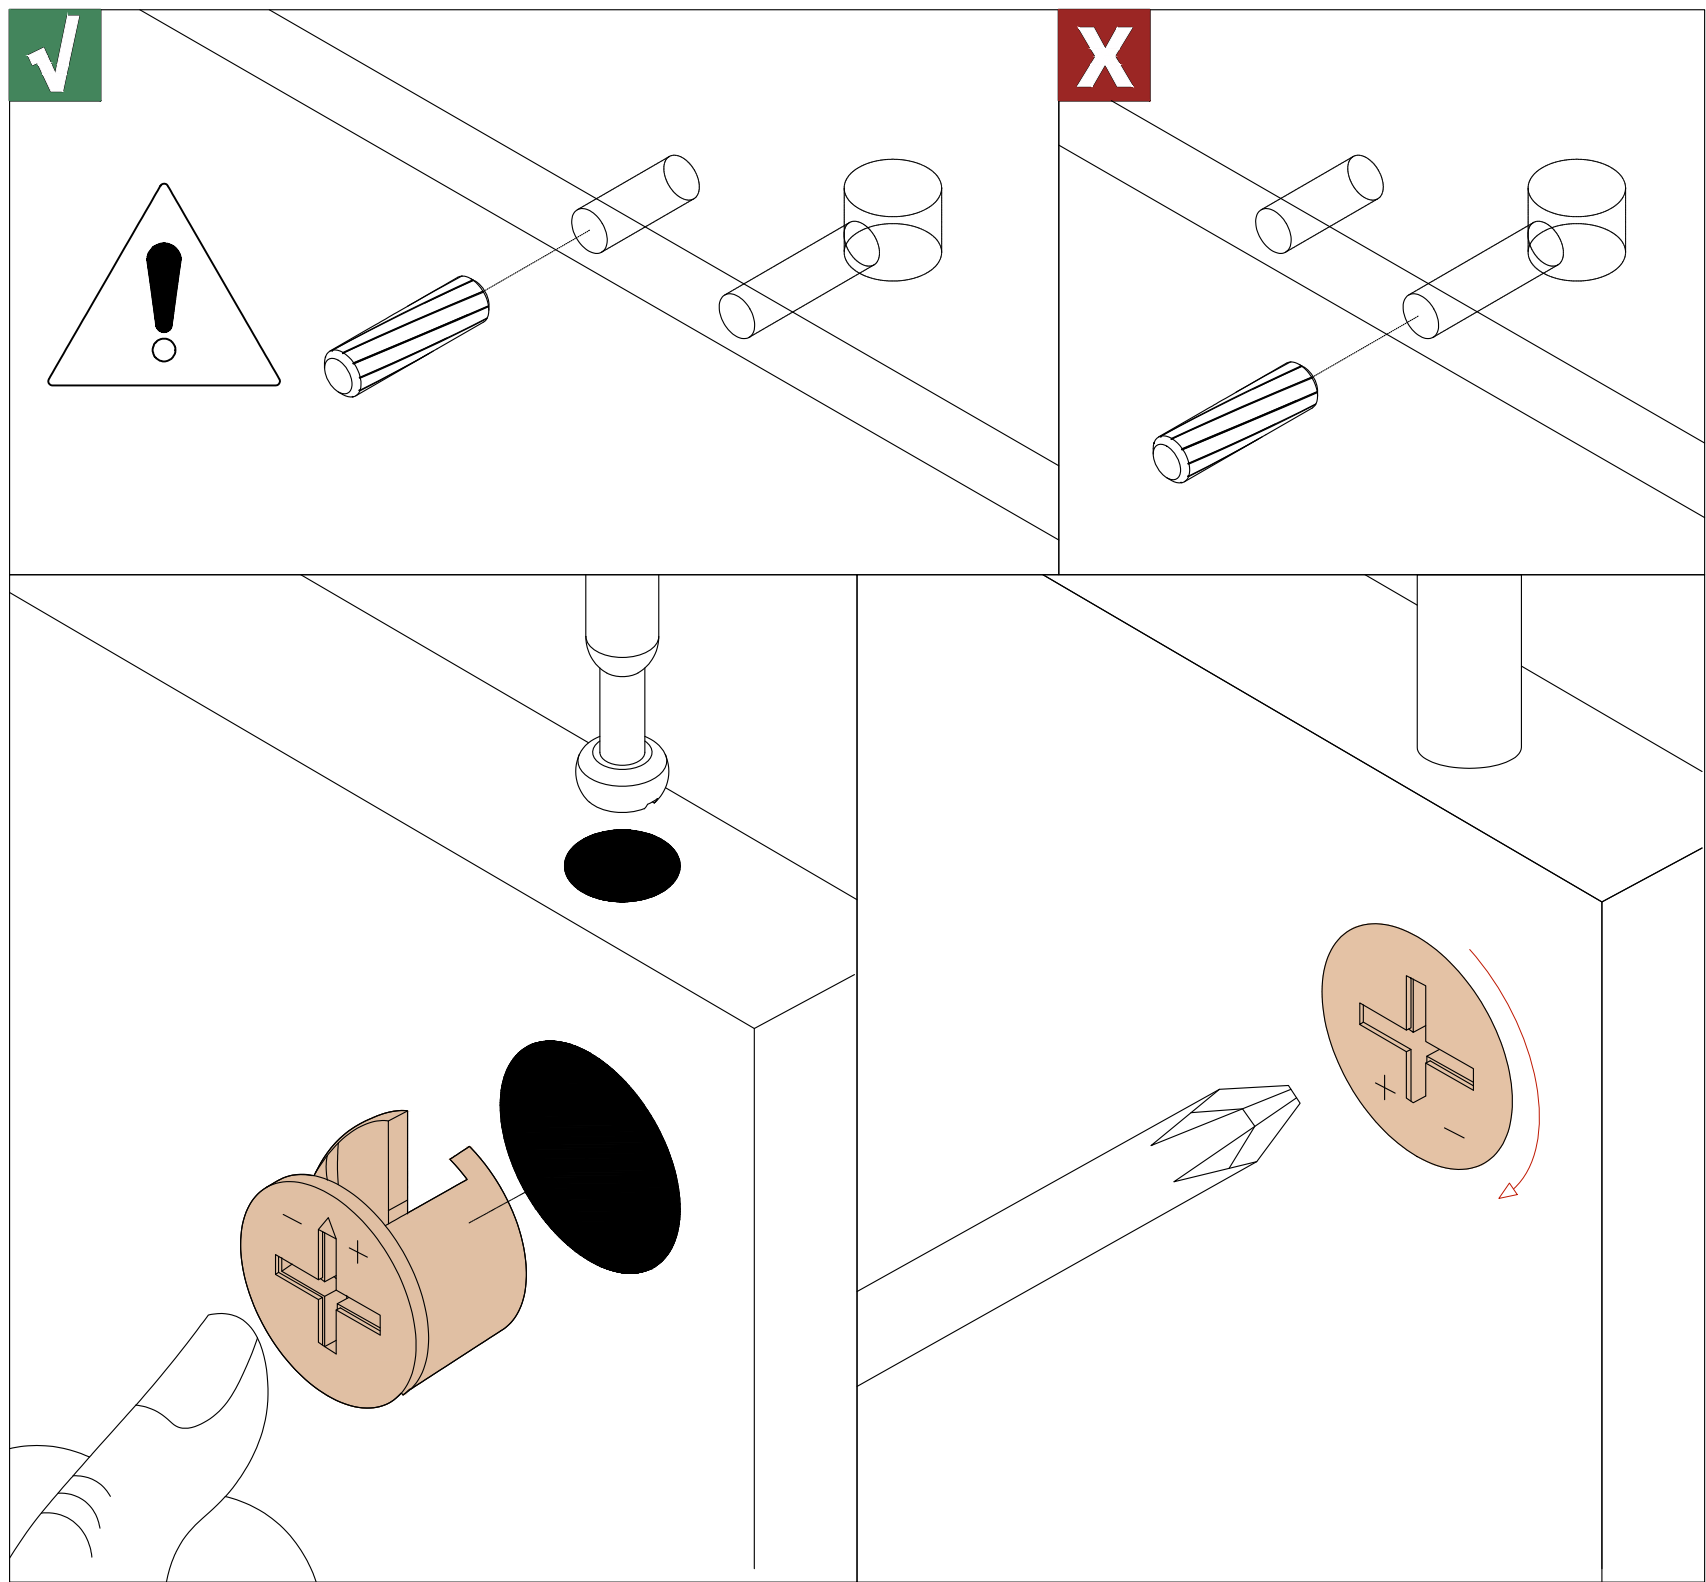
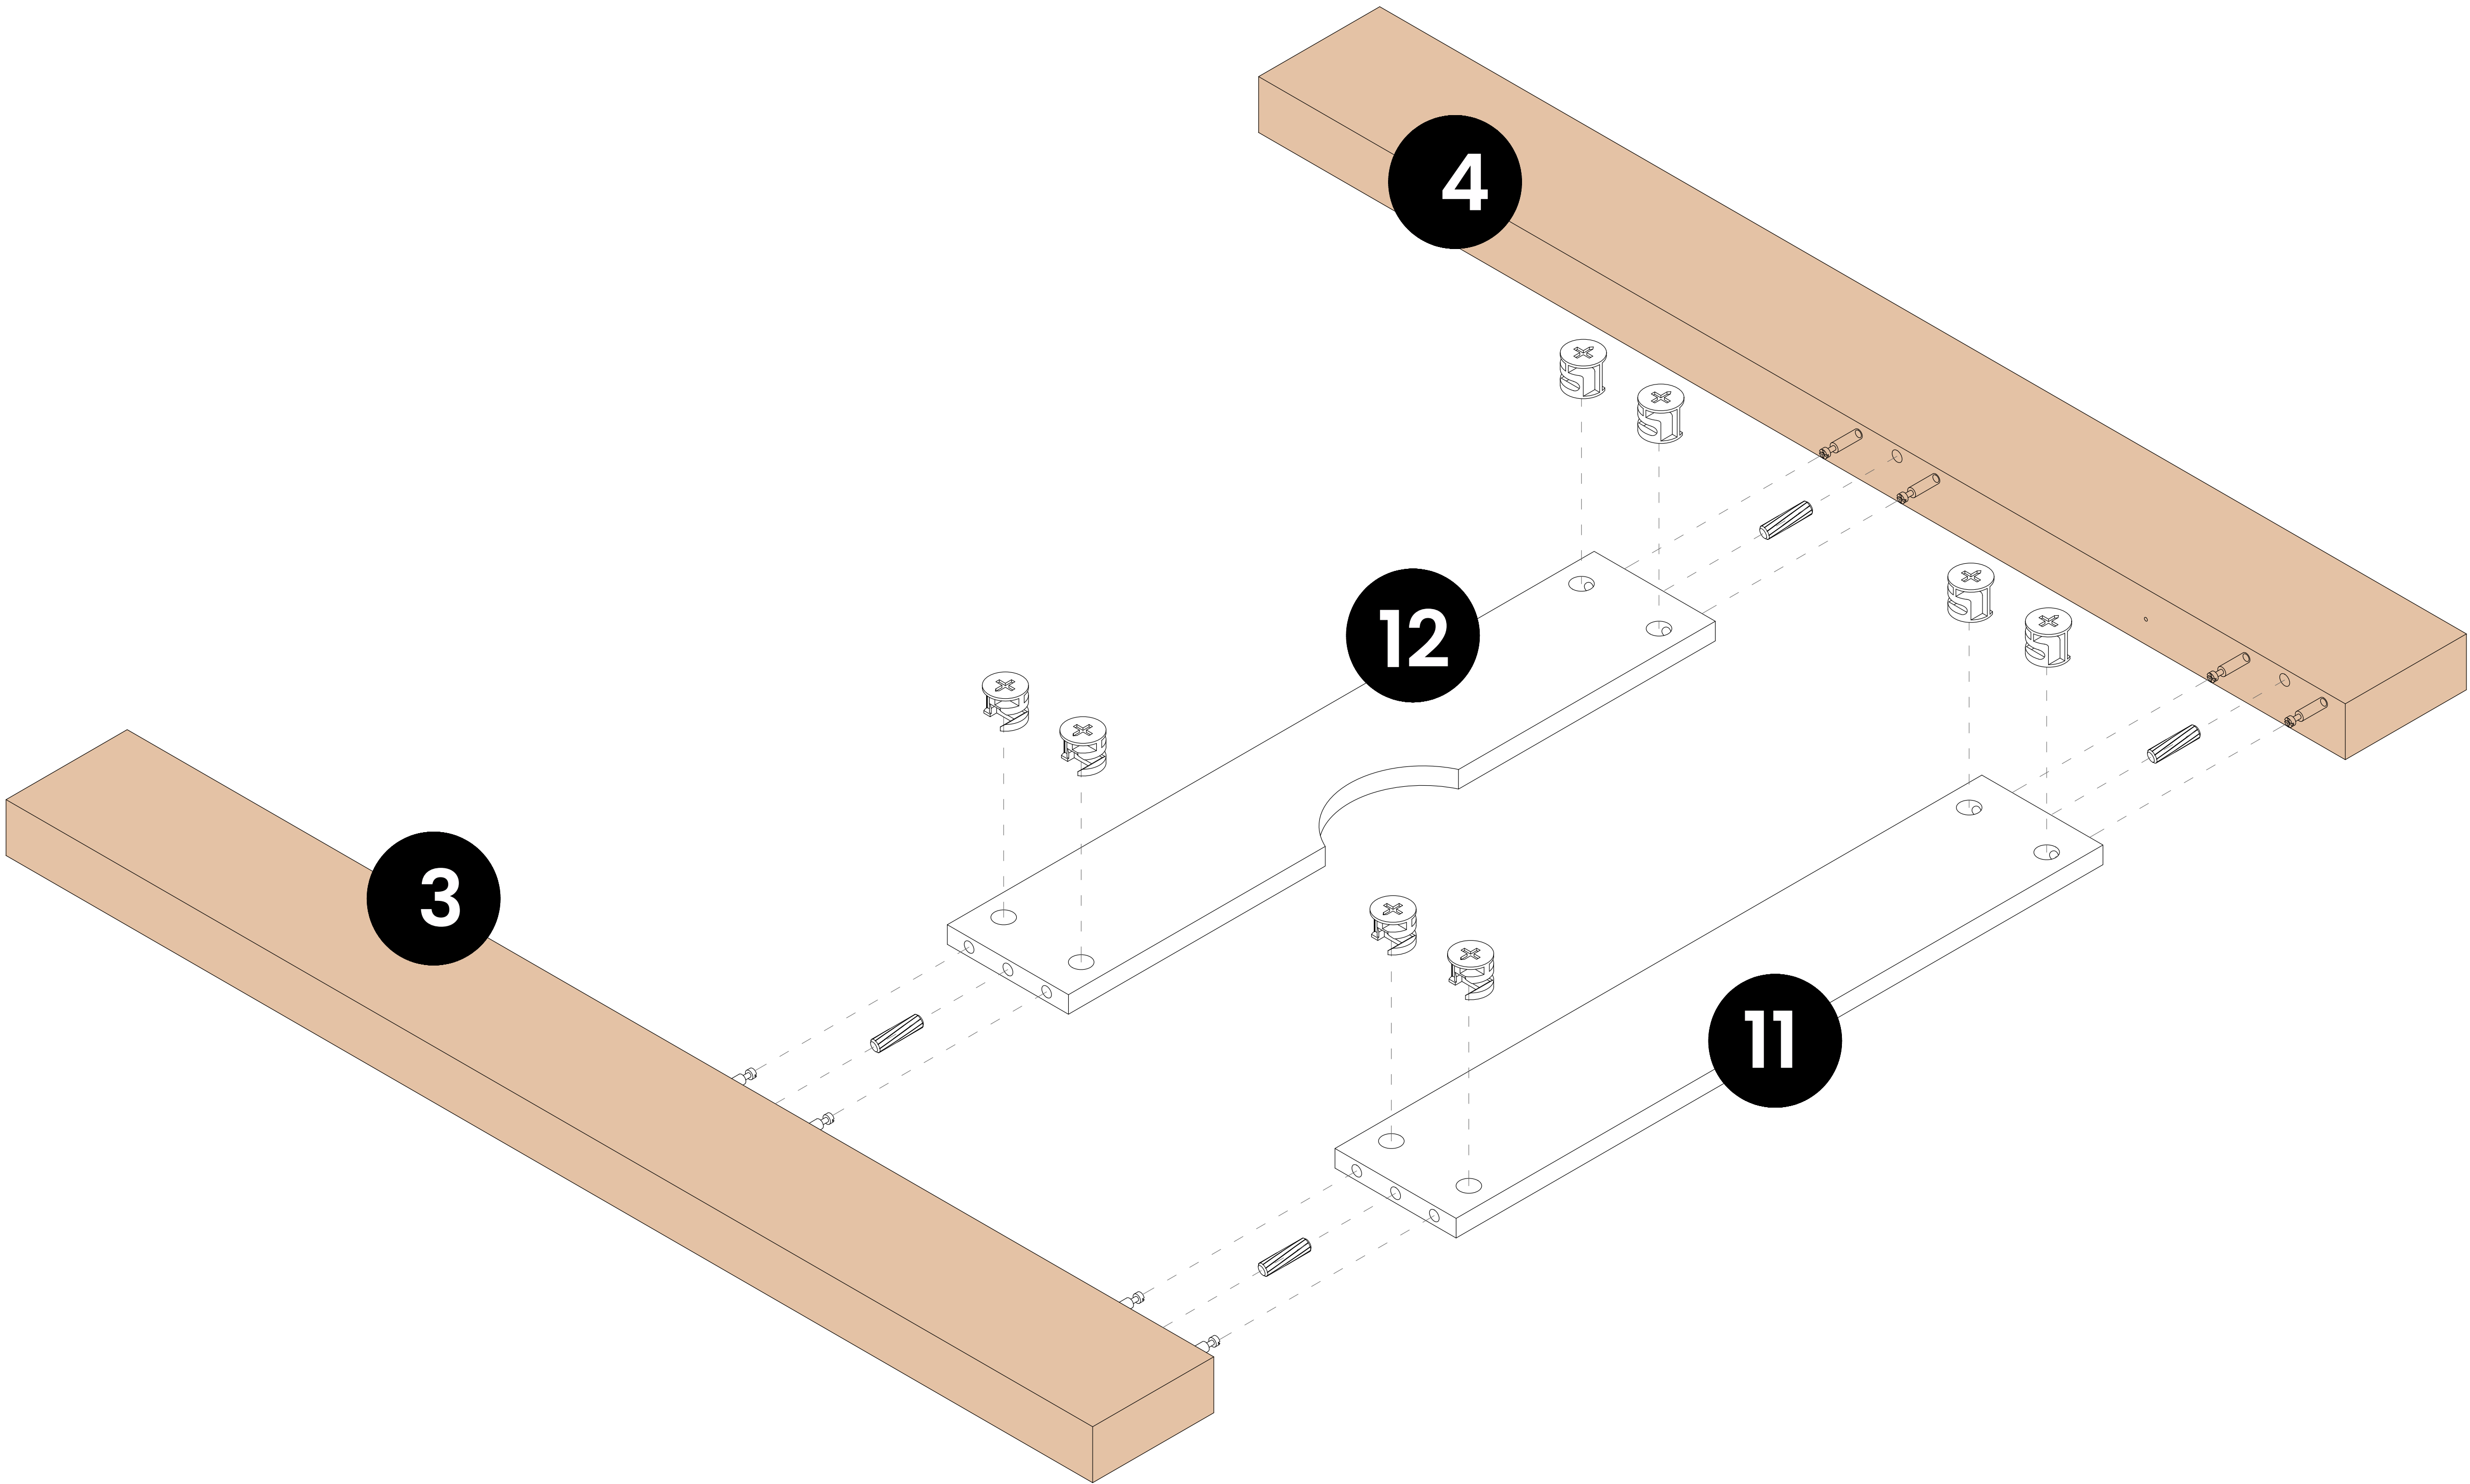
A x8




 Install the screw correctly to secure the screw.

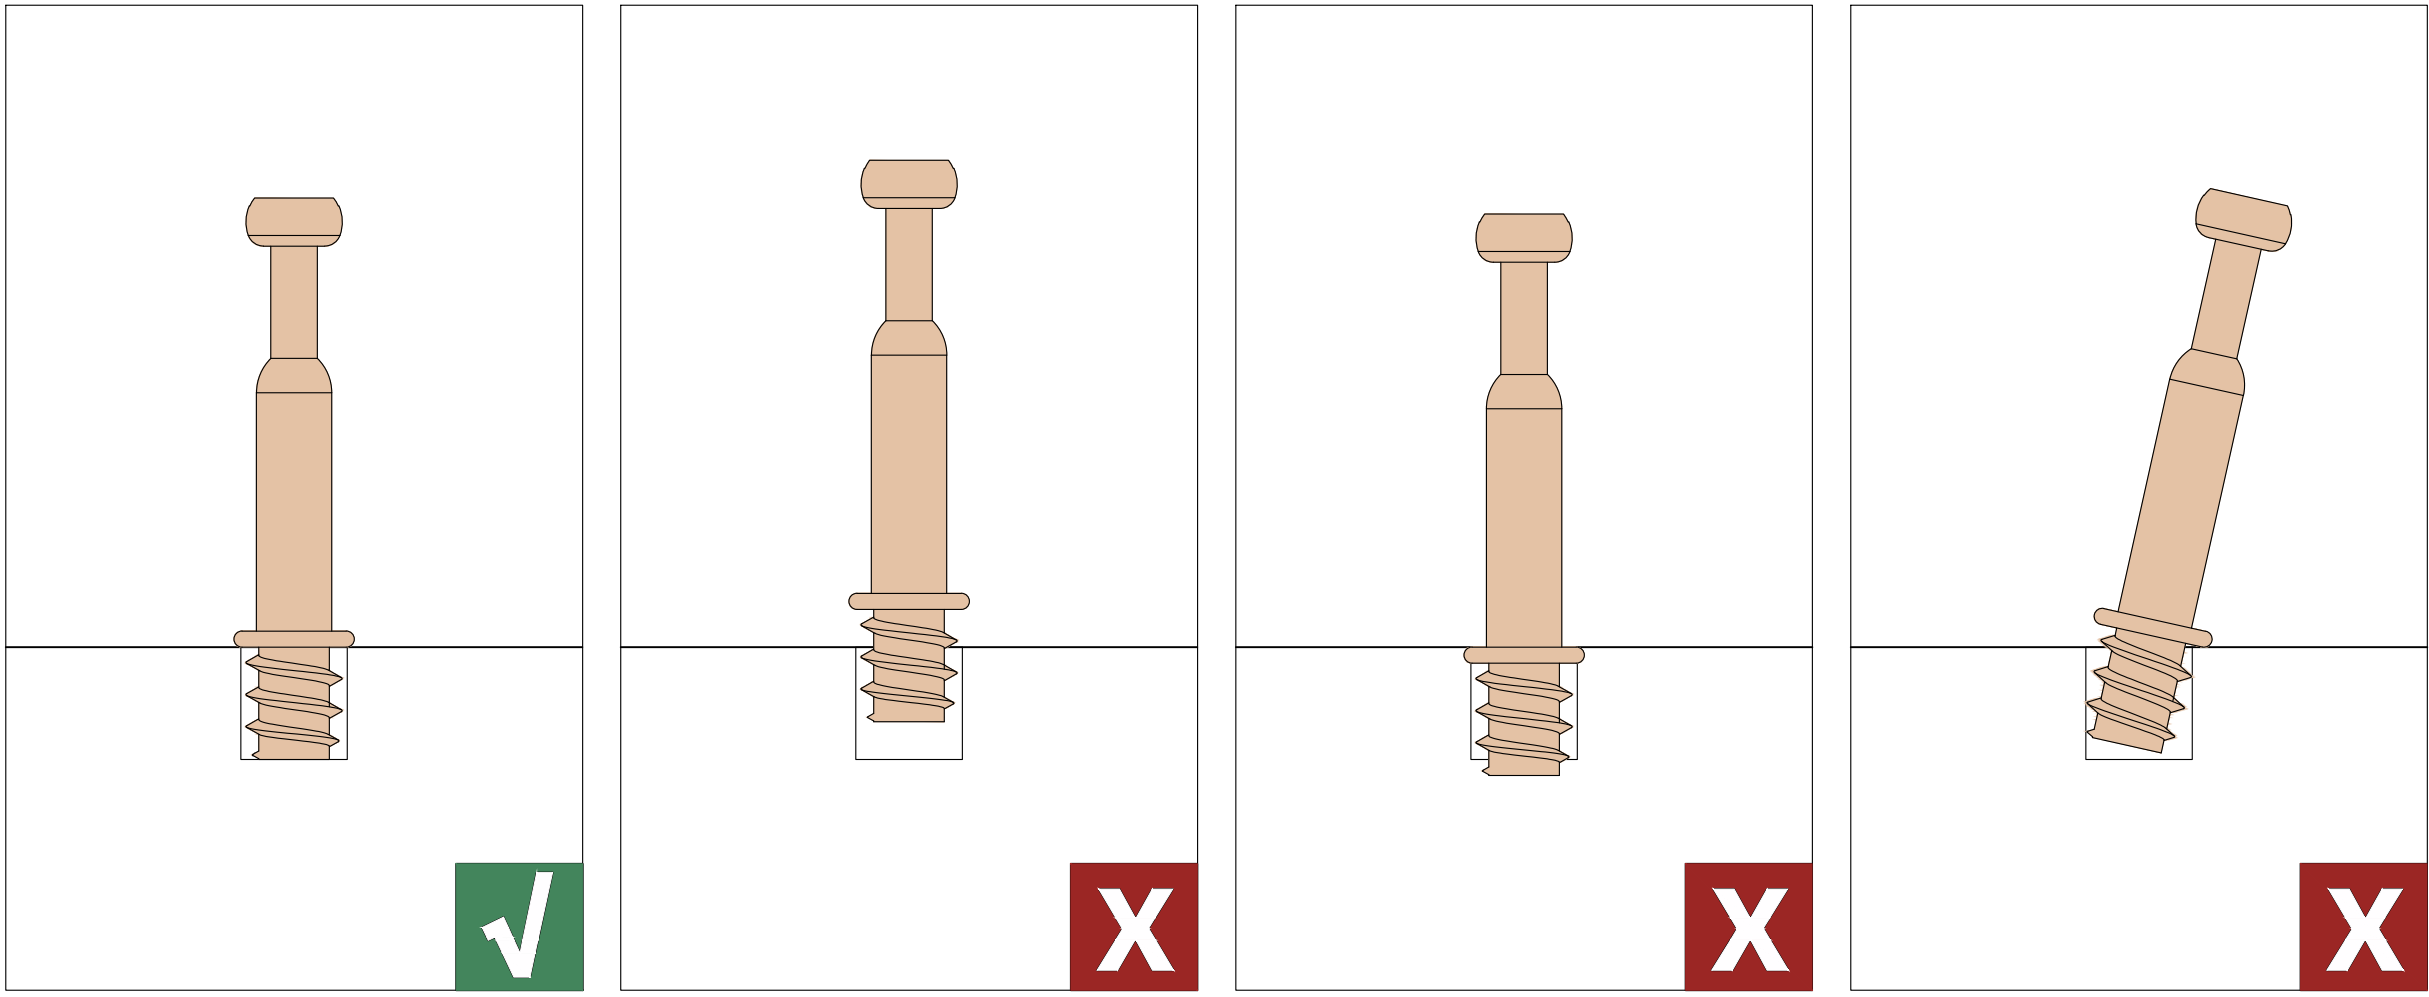
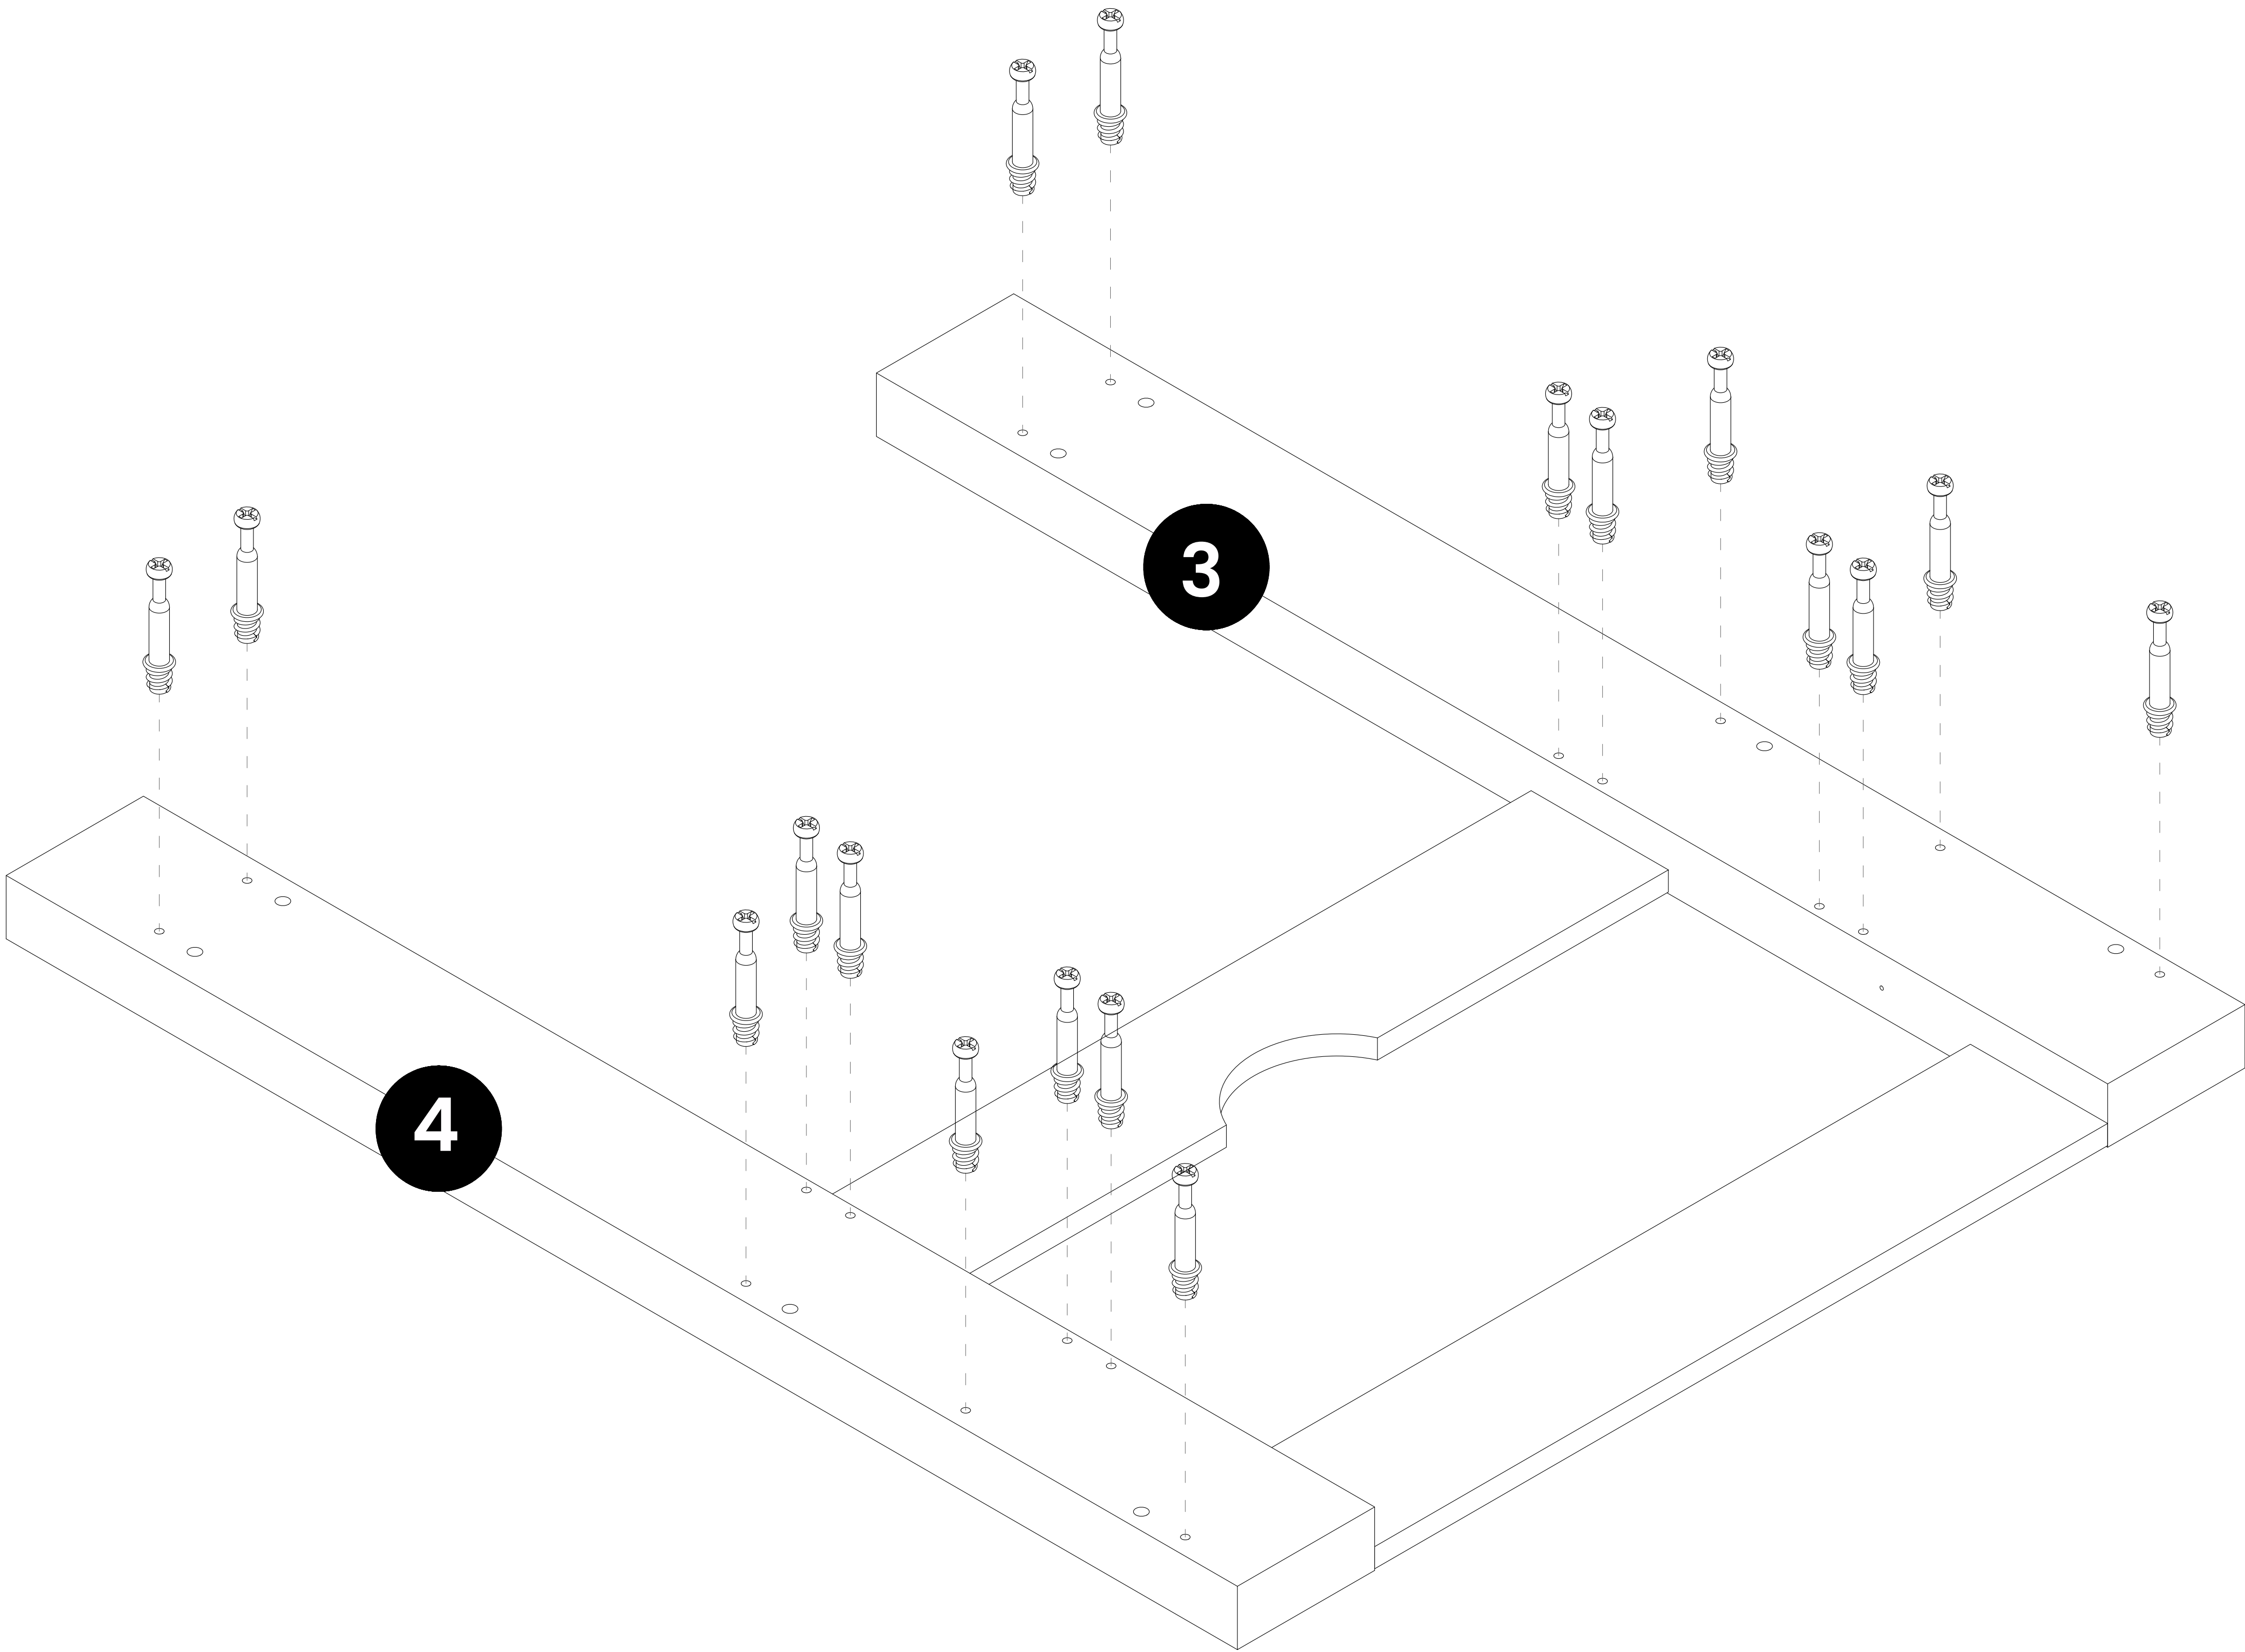
STEP 8

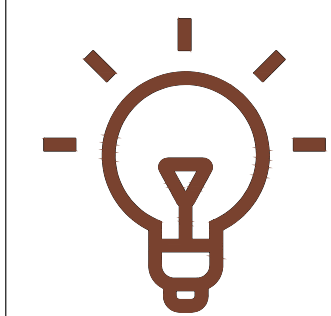
-  **B** x8
-  **C** x4



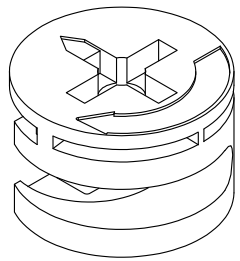
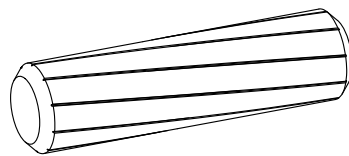
STEP 9

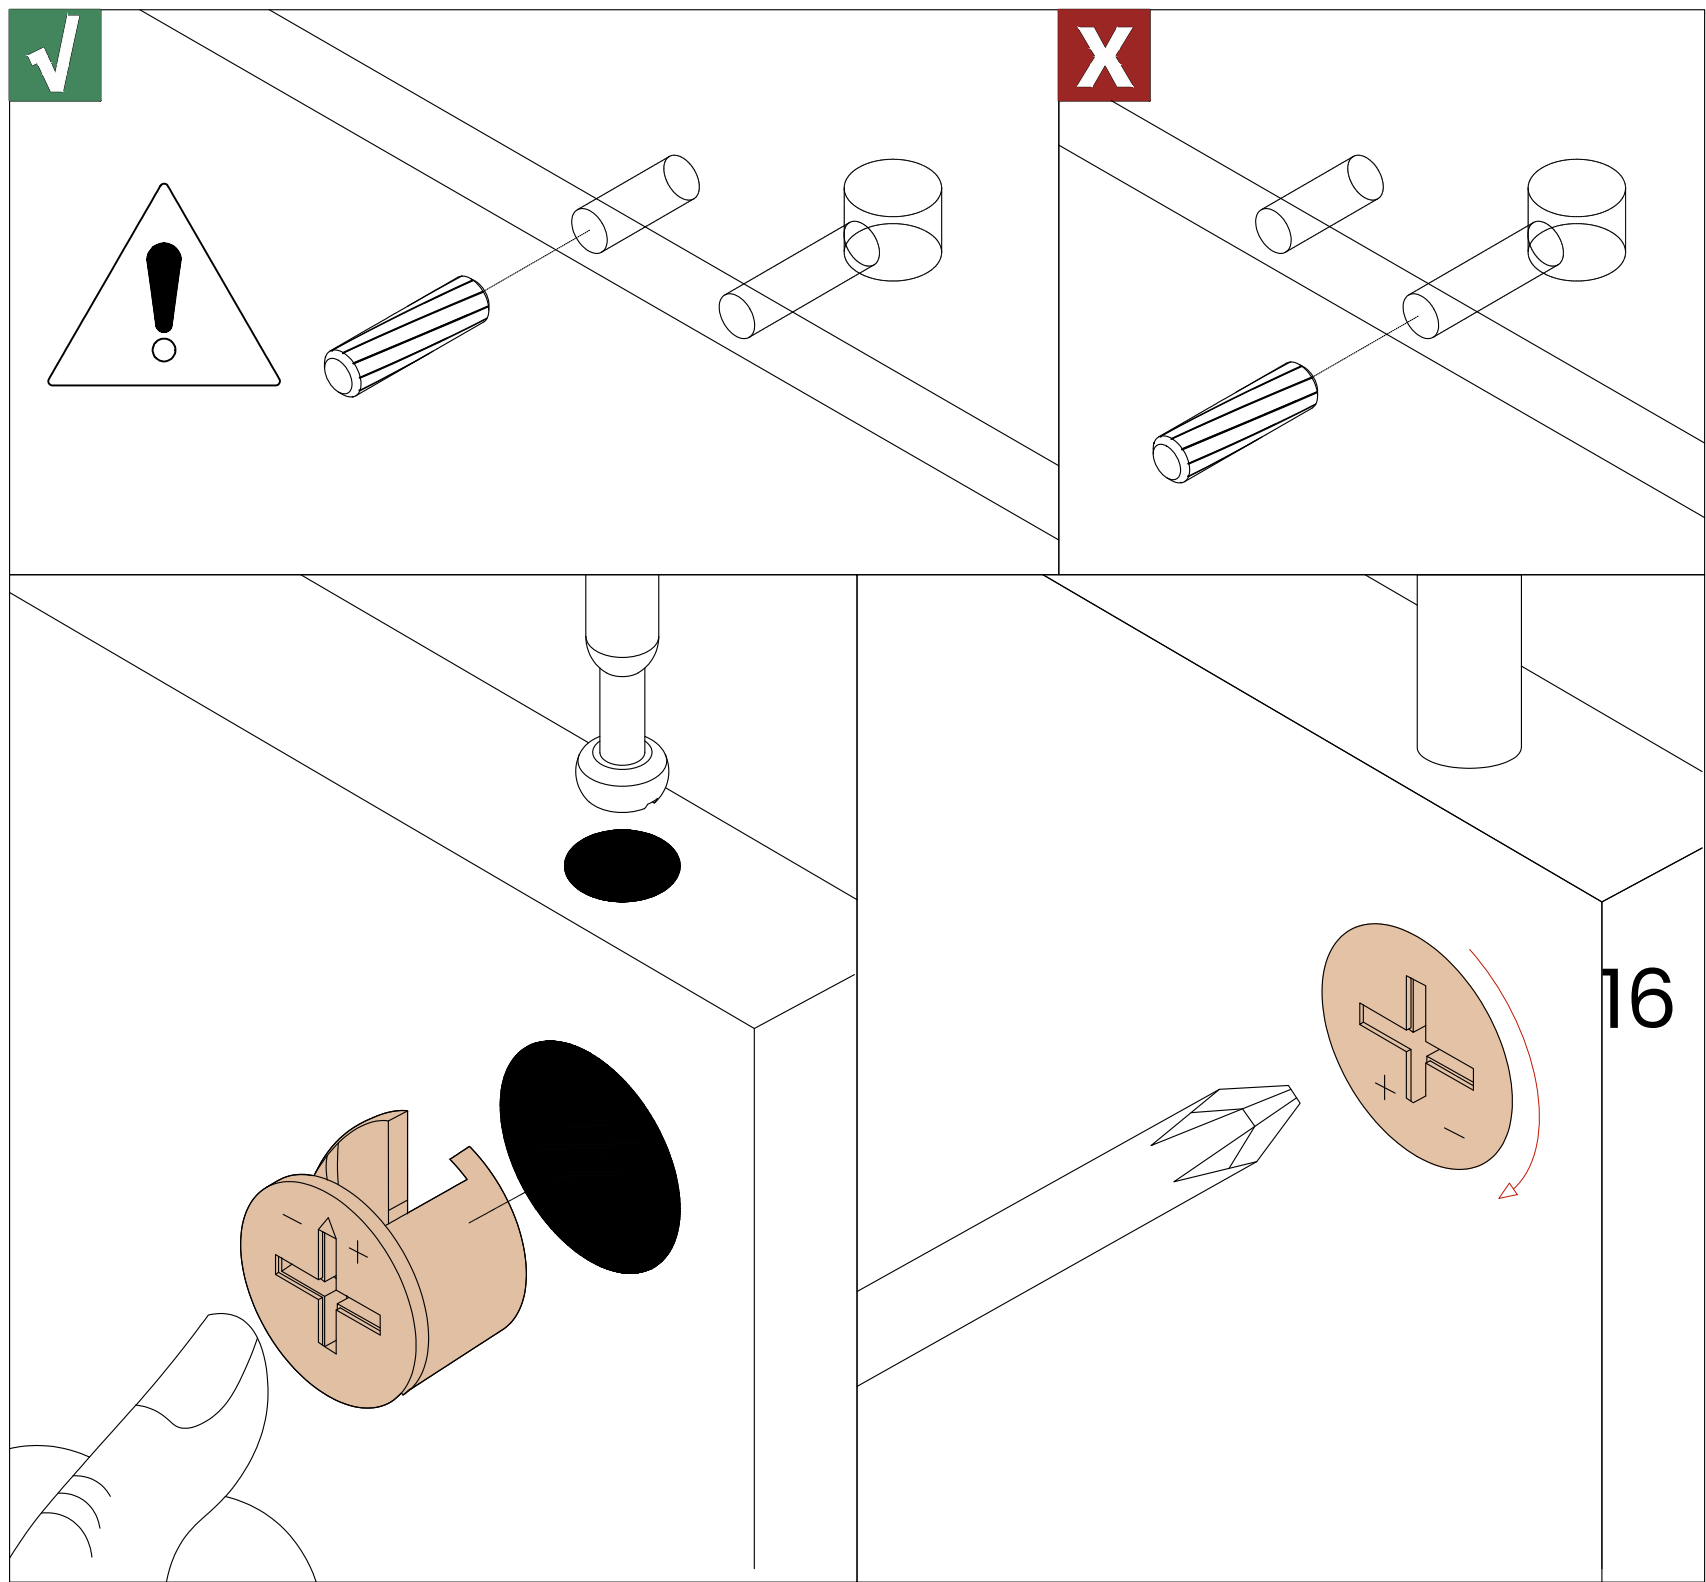
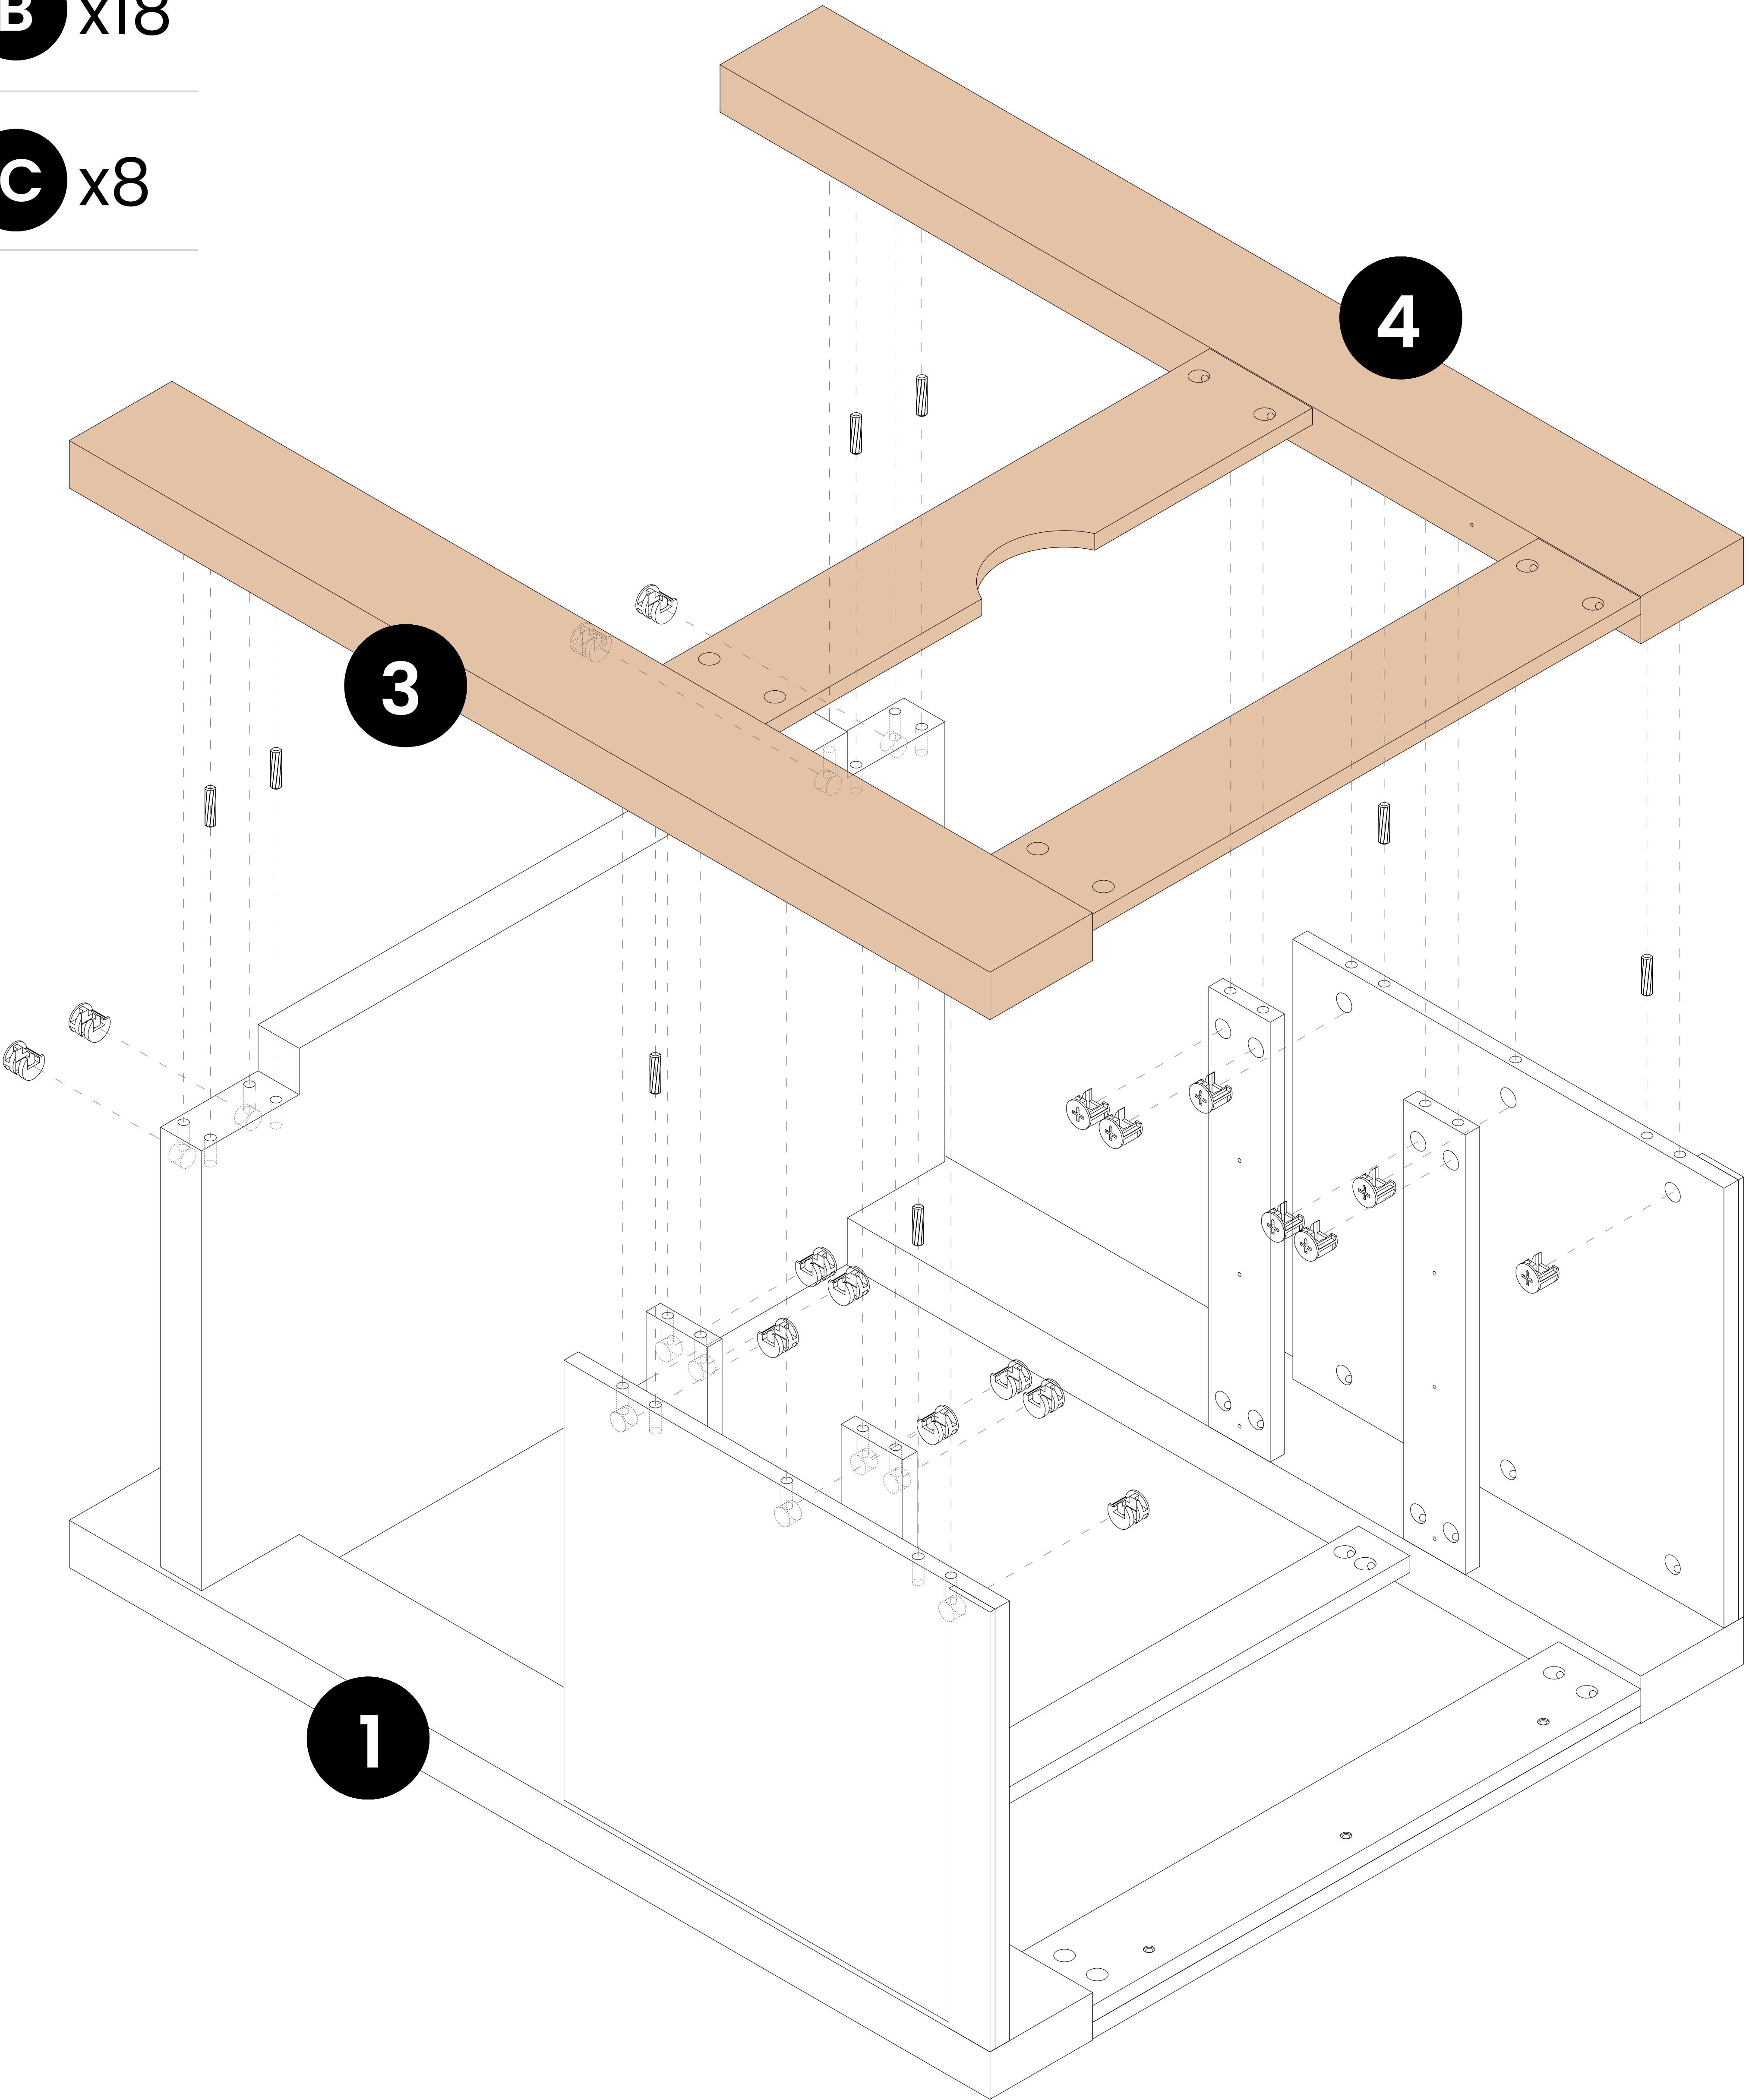
 **A** x18



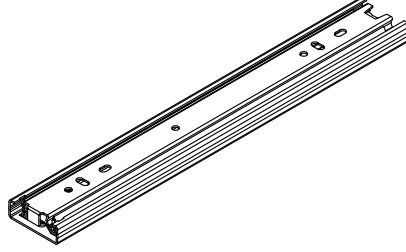
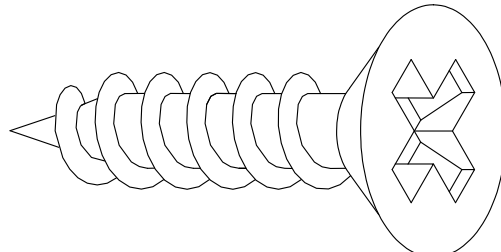
 Install the screw correctly to secure the screw.

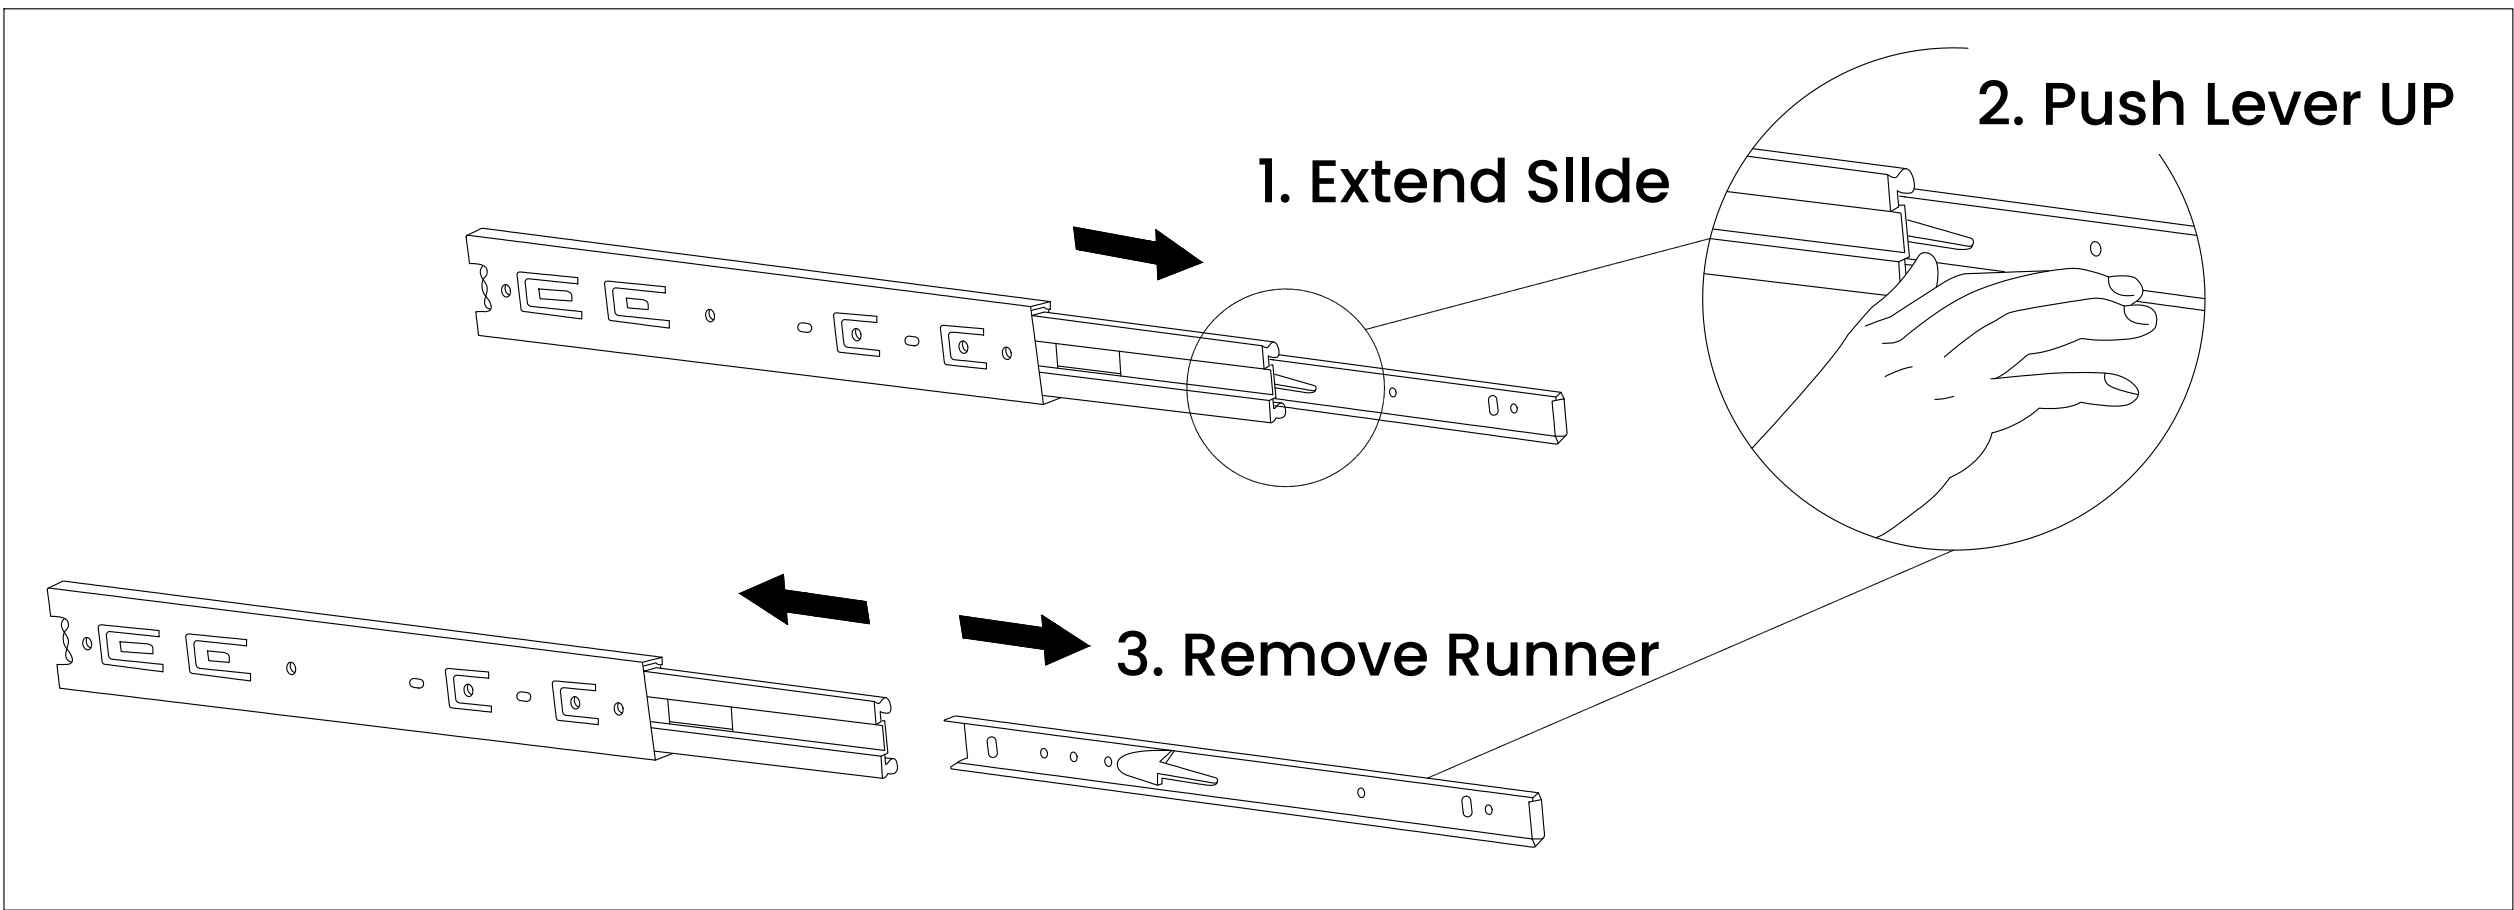
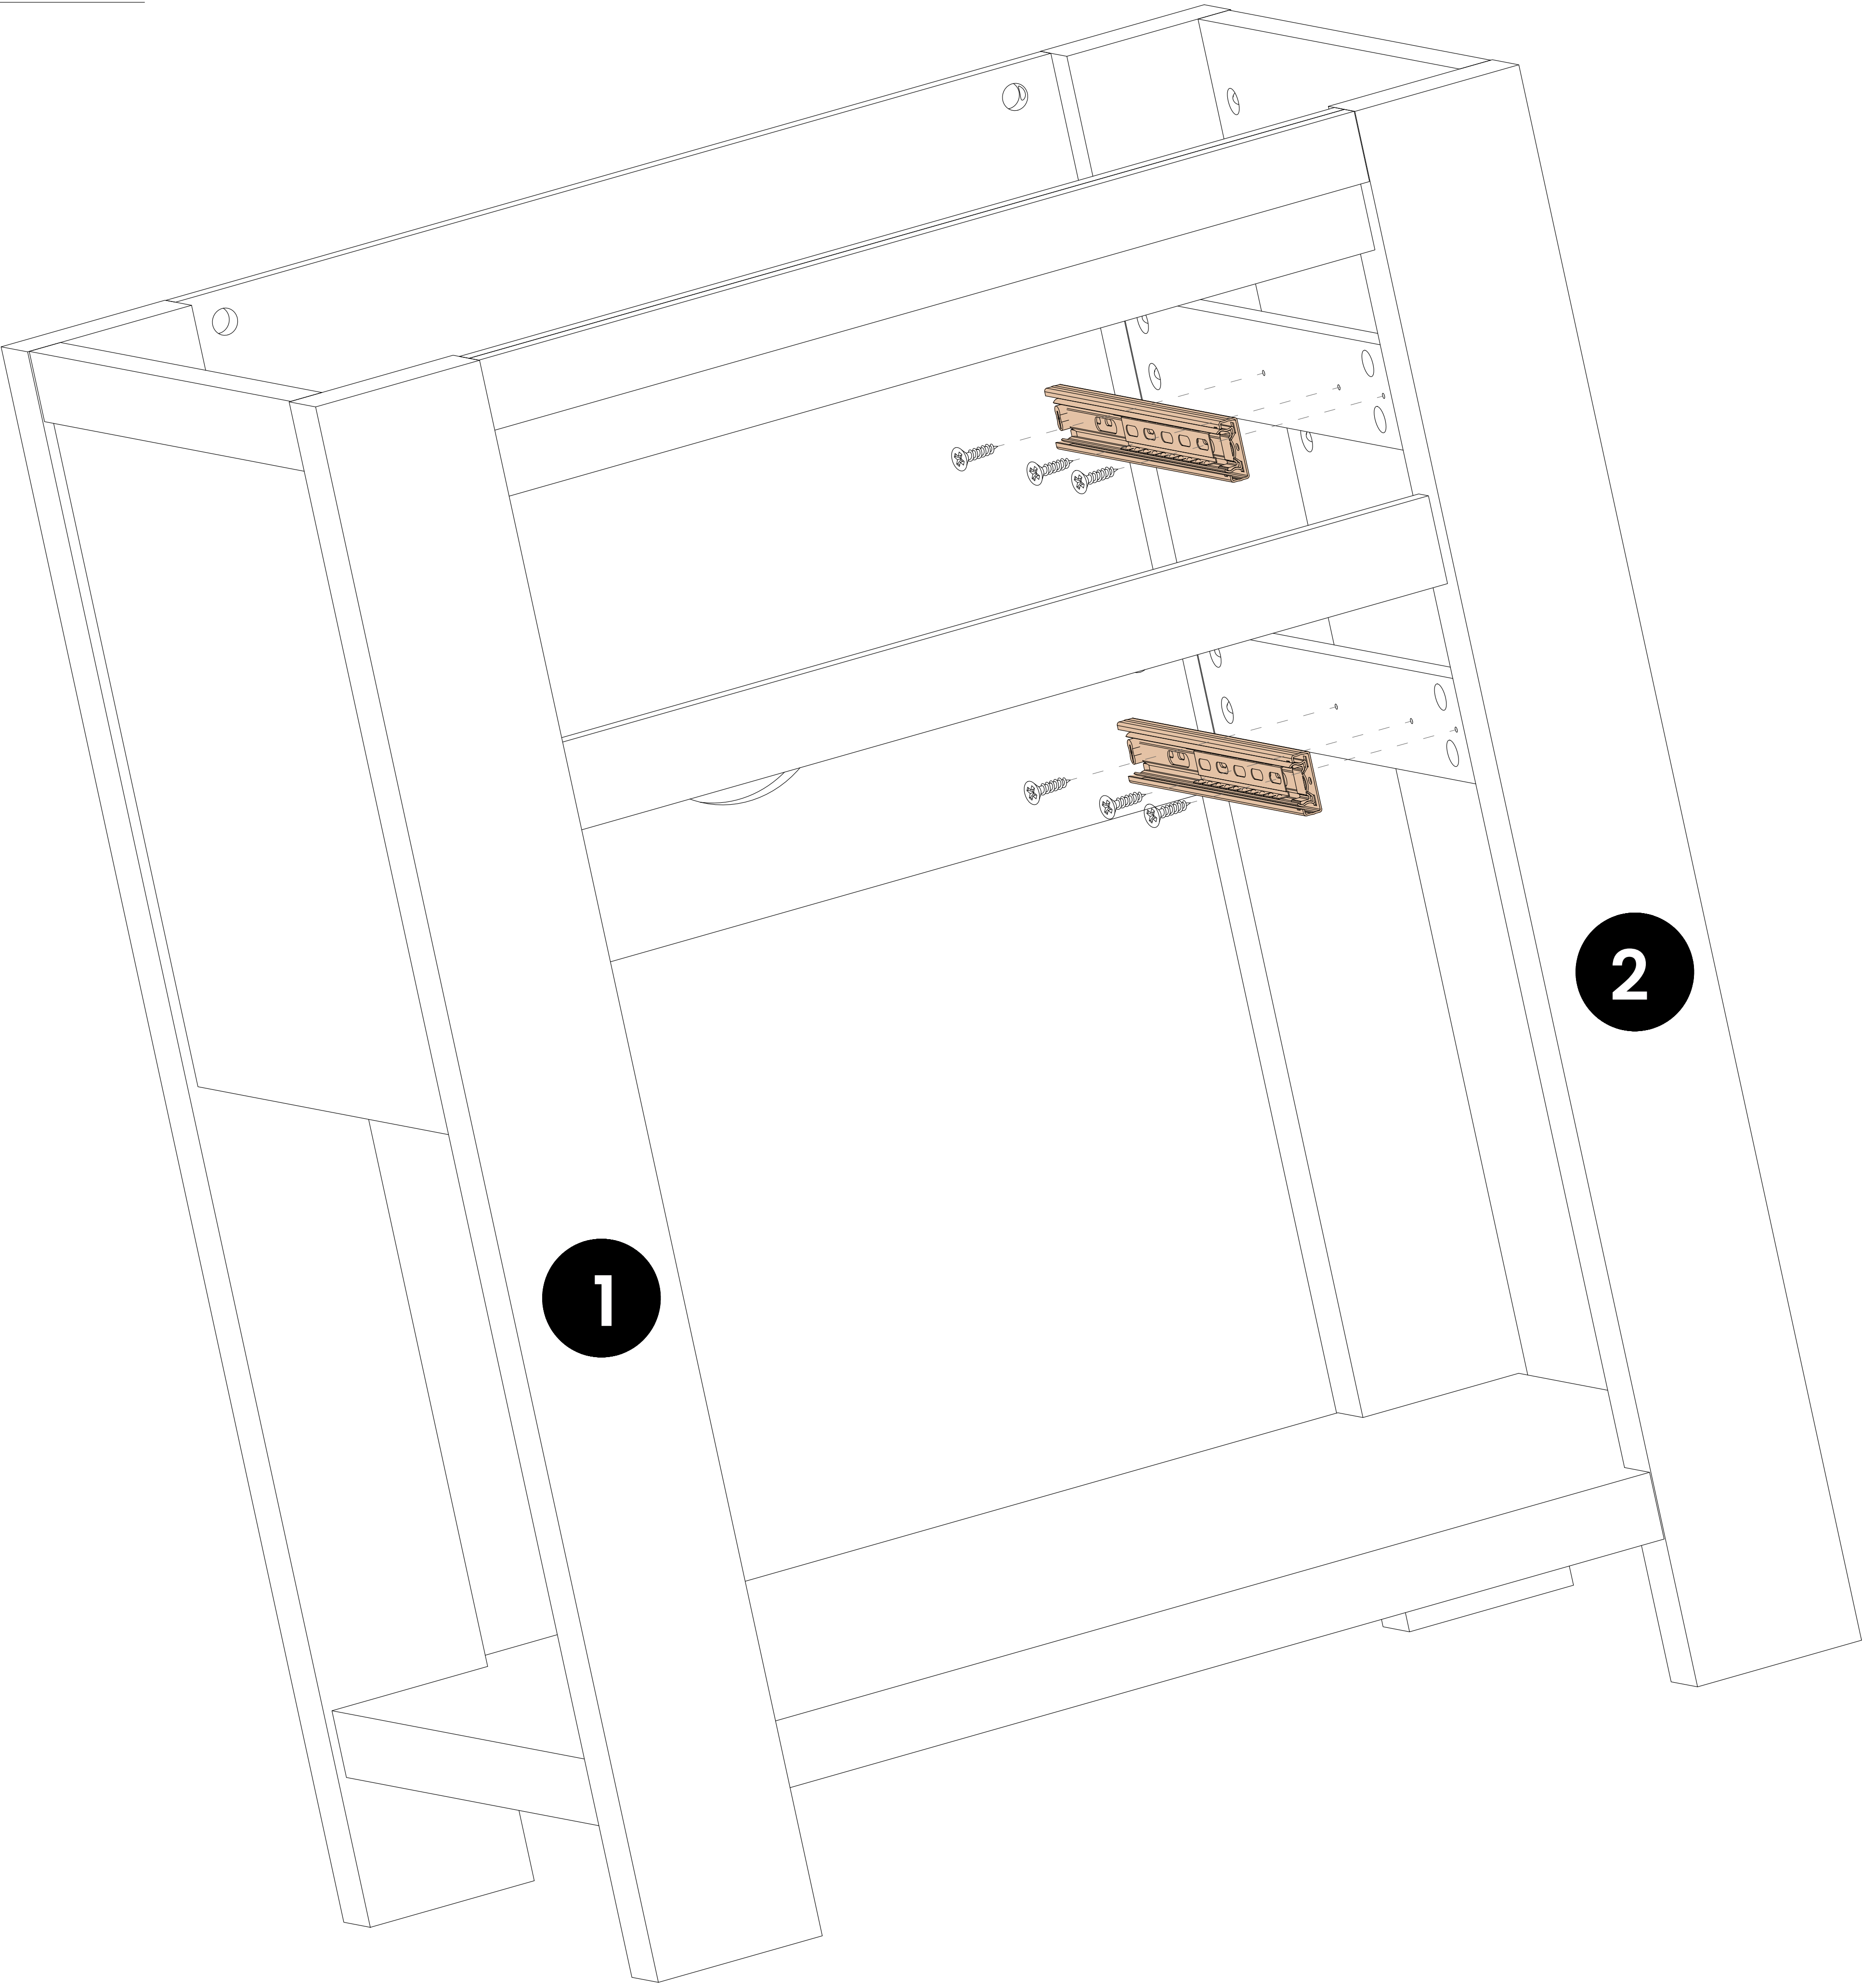
STEP 10

-  **B** x18
-  **C** x8

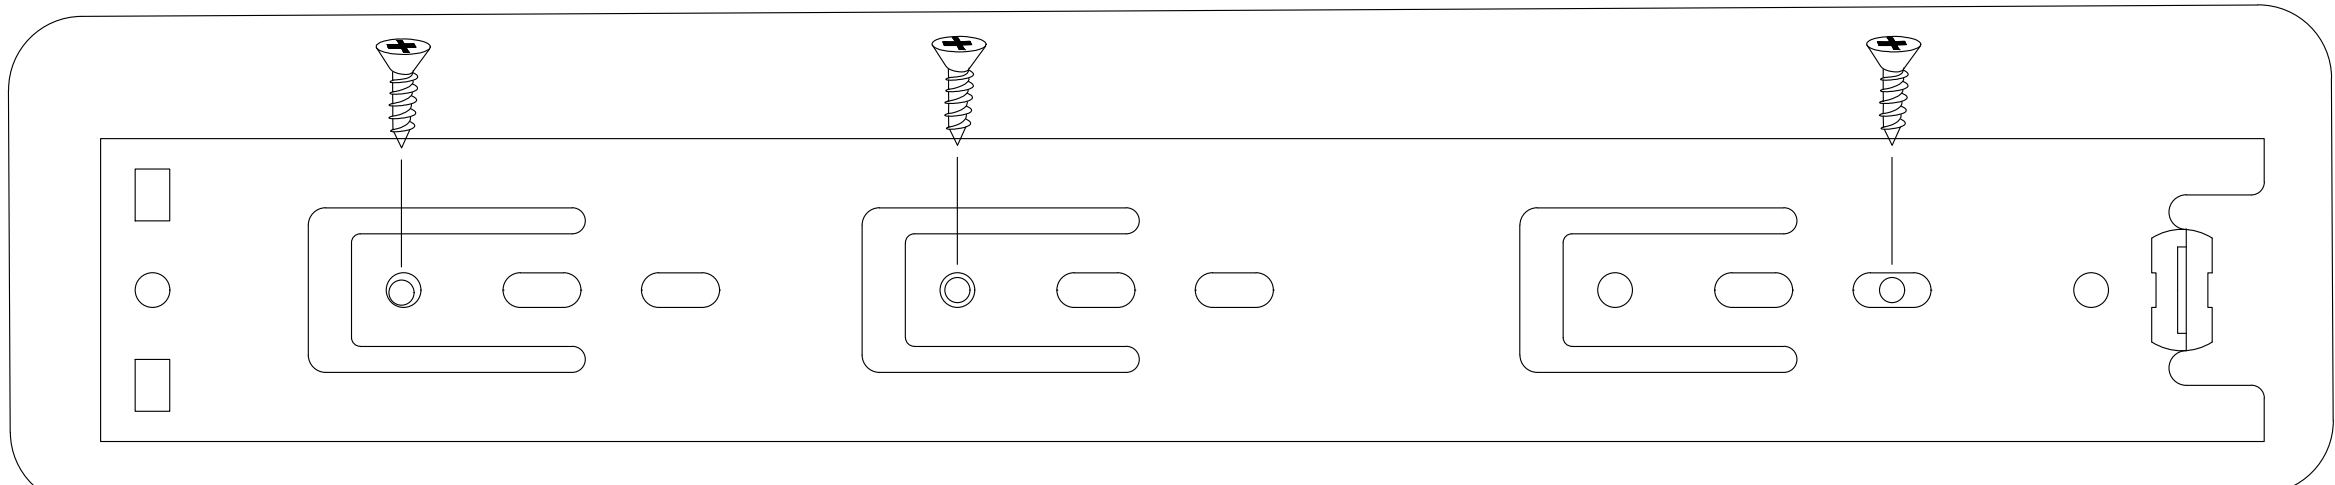


STEP 11

- **J** x2
- **F** x6

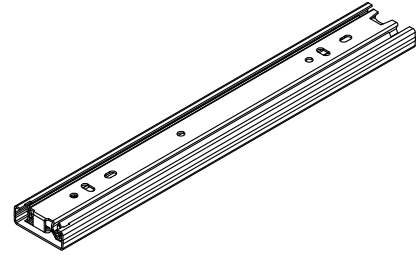
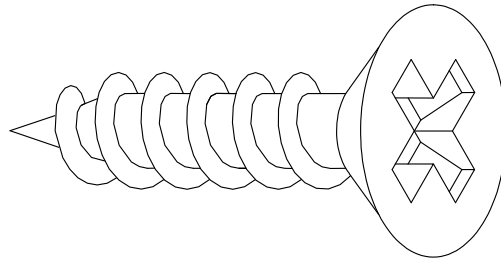


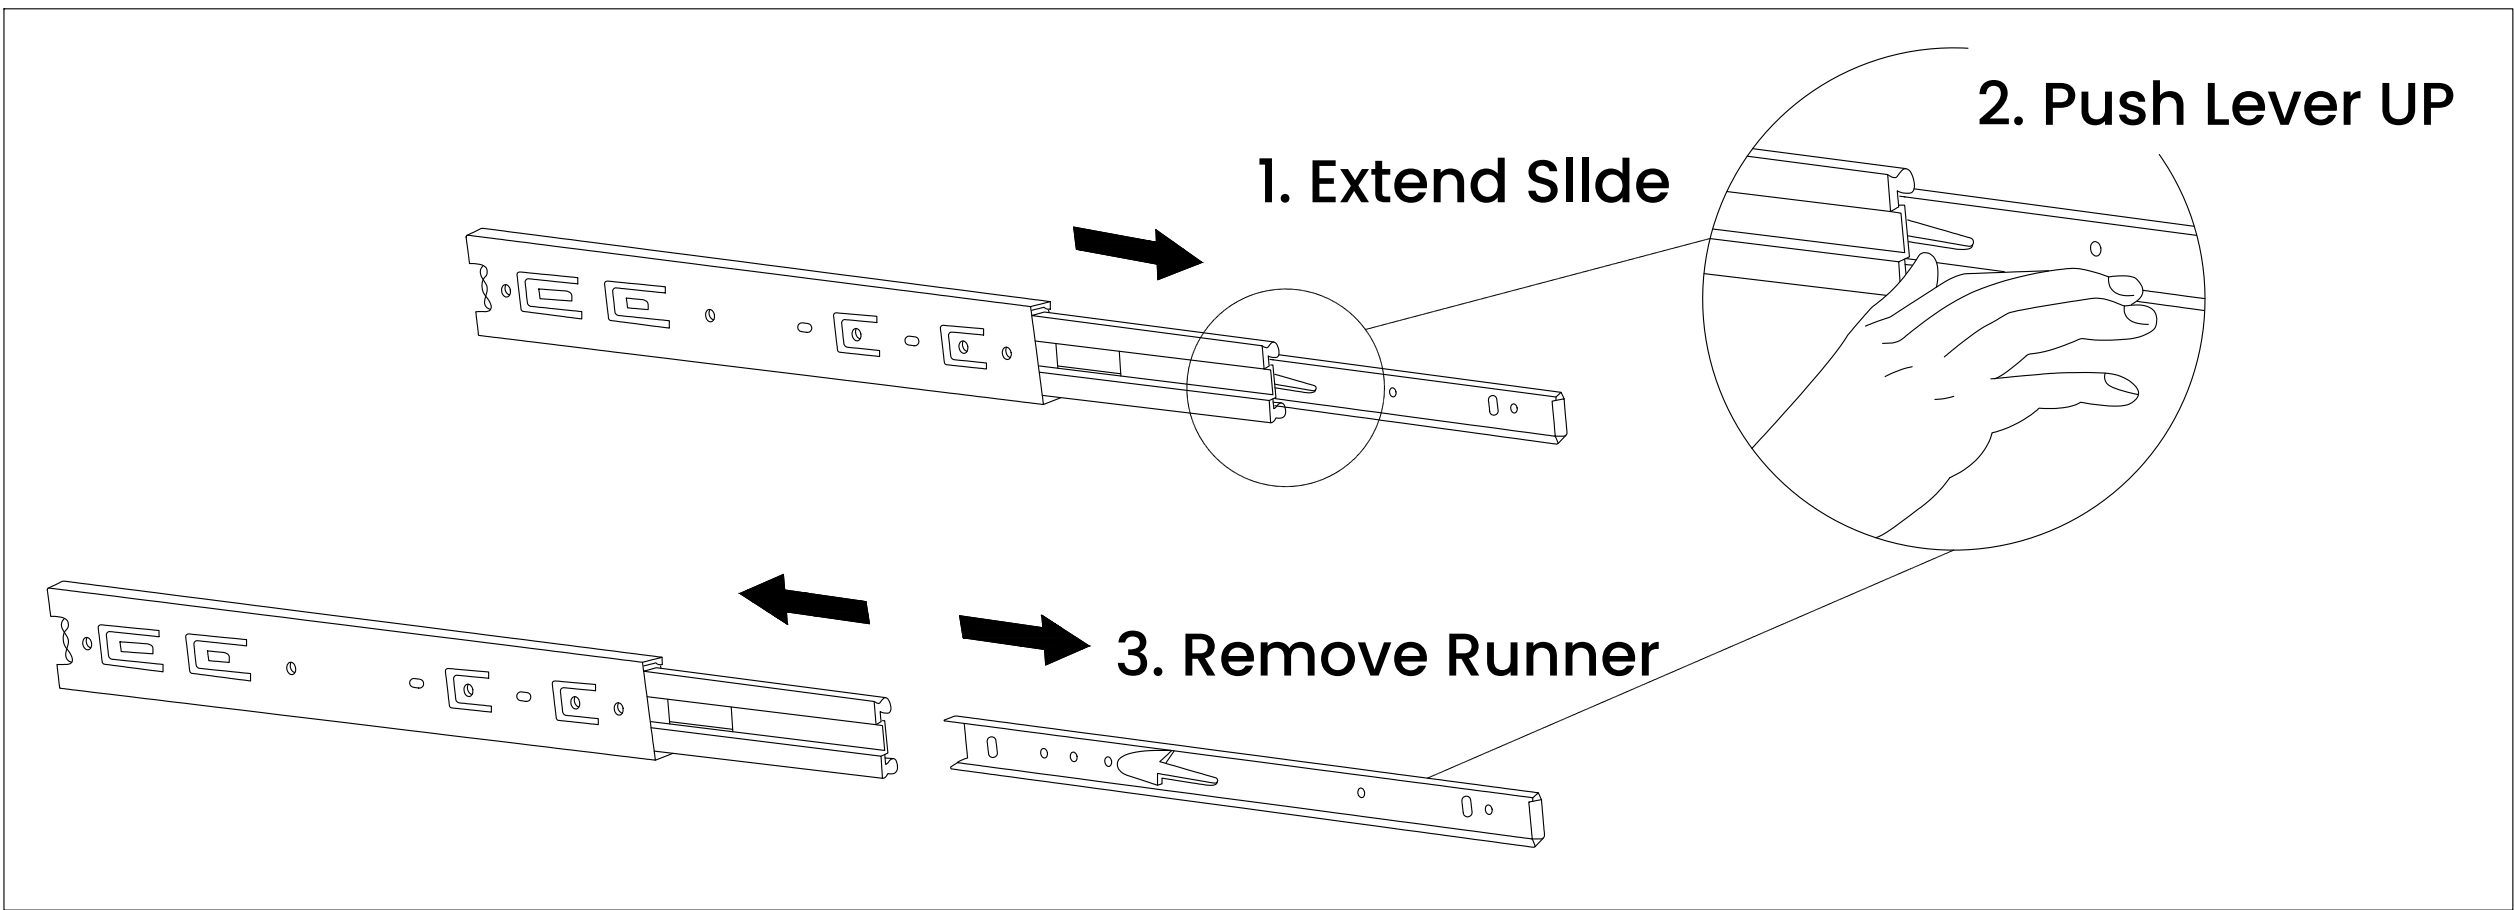
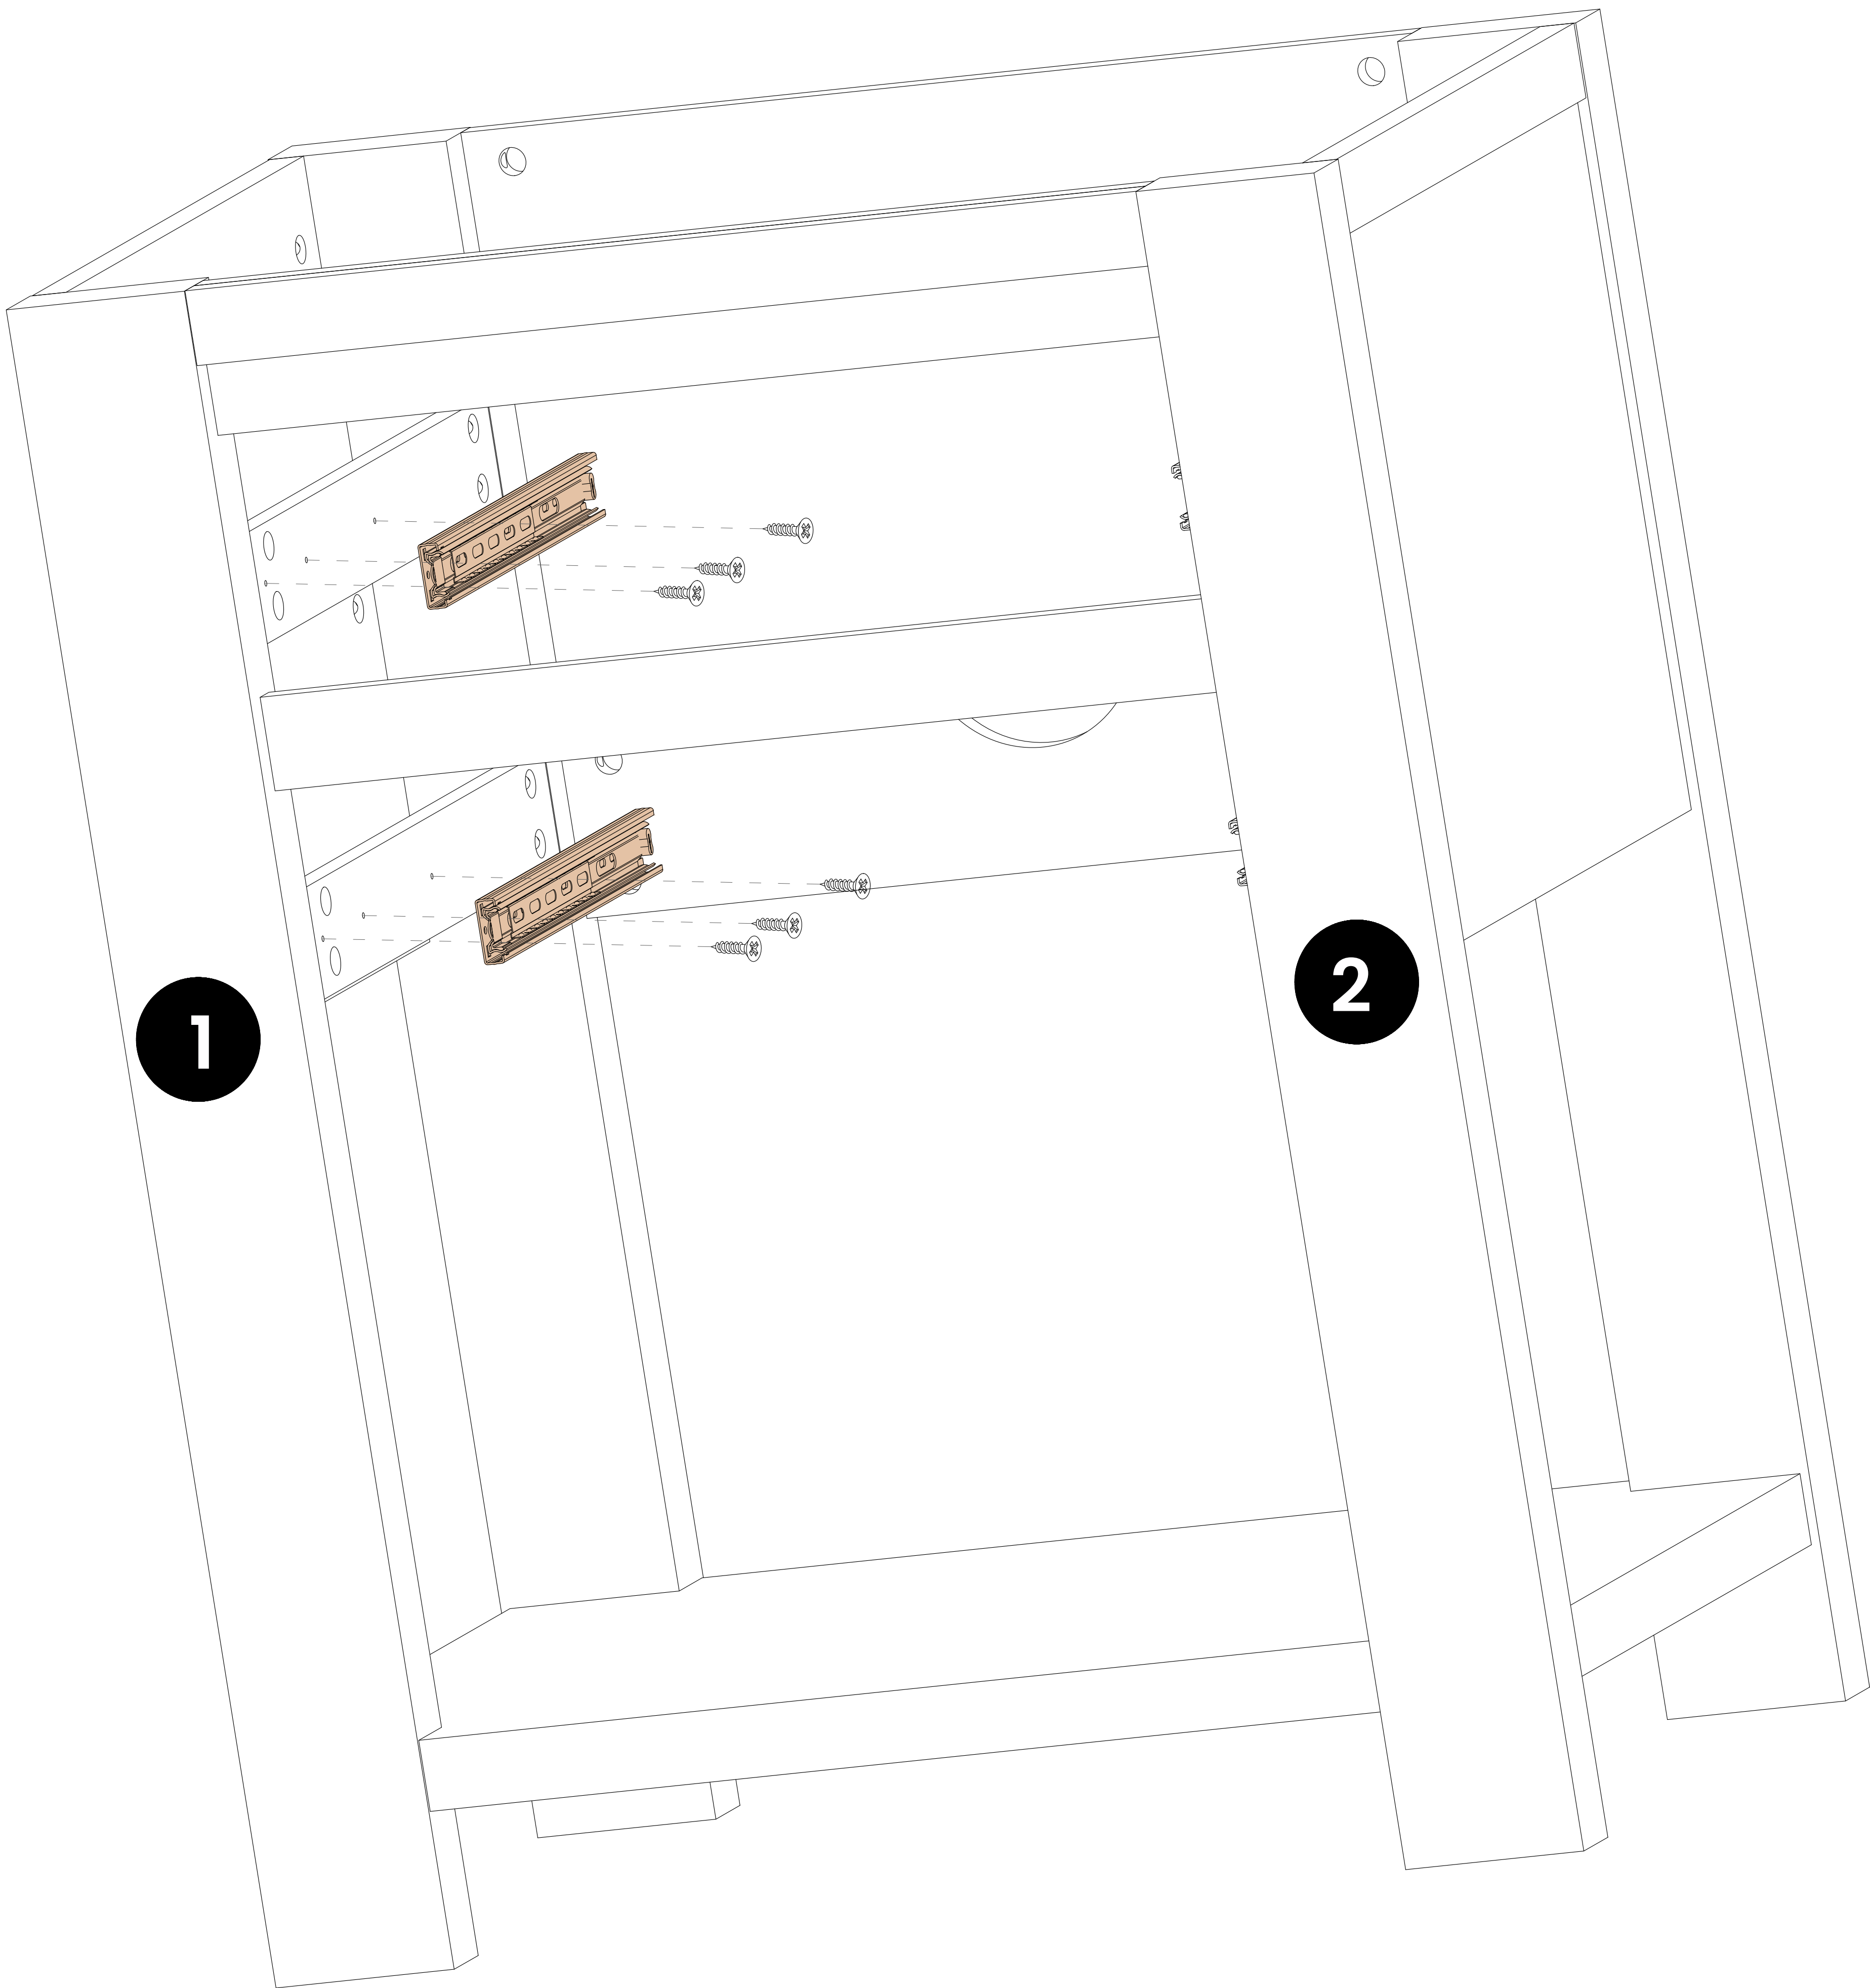
Front



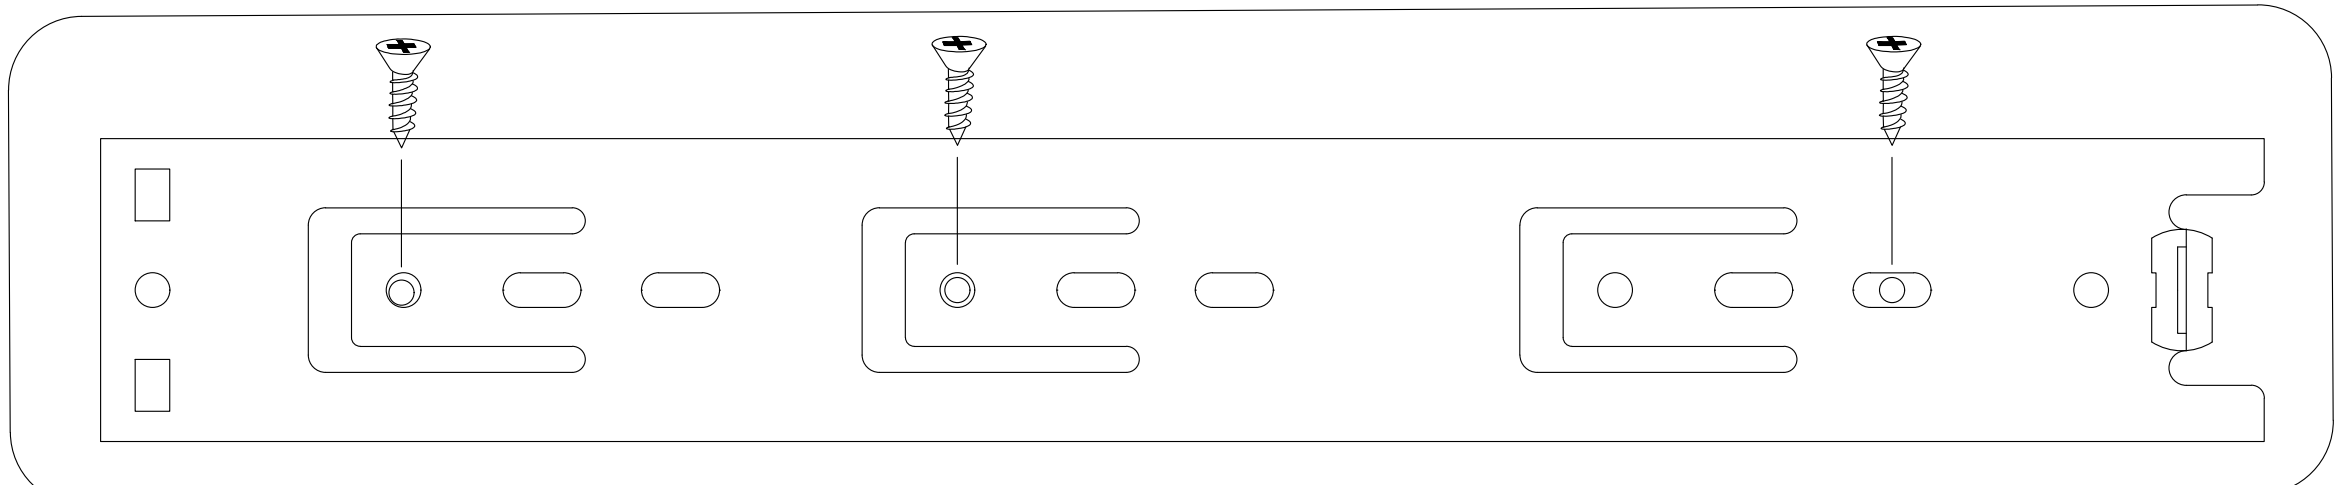
! Pay attention to the position of the screws

STEP 12

-  **J** x2
-  **F** x6


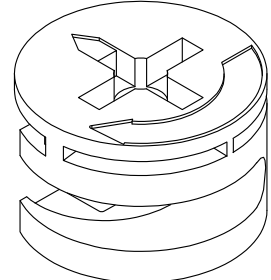
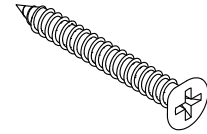


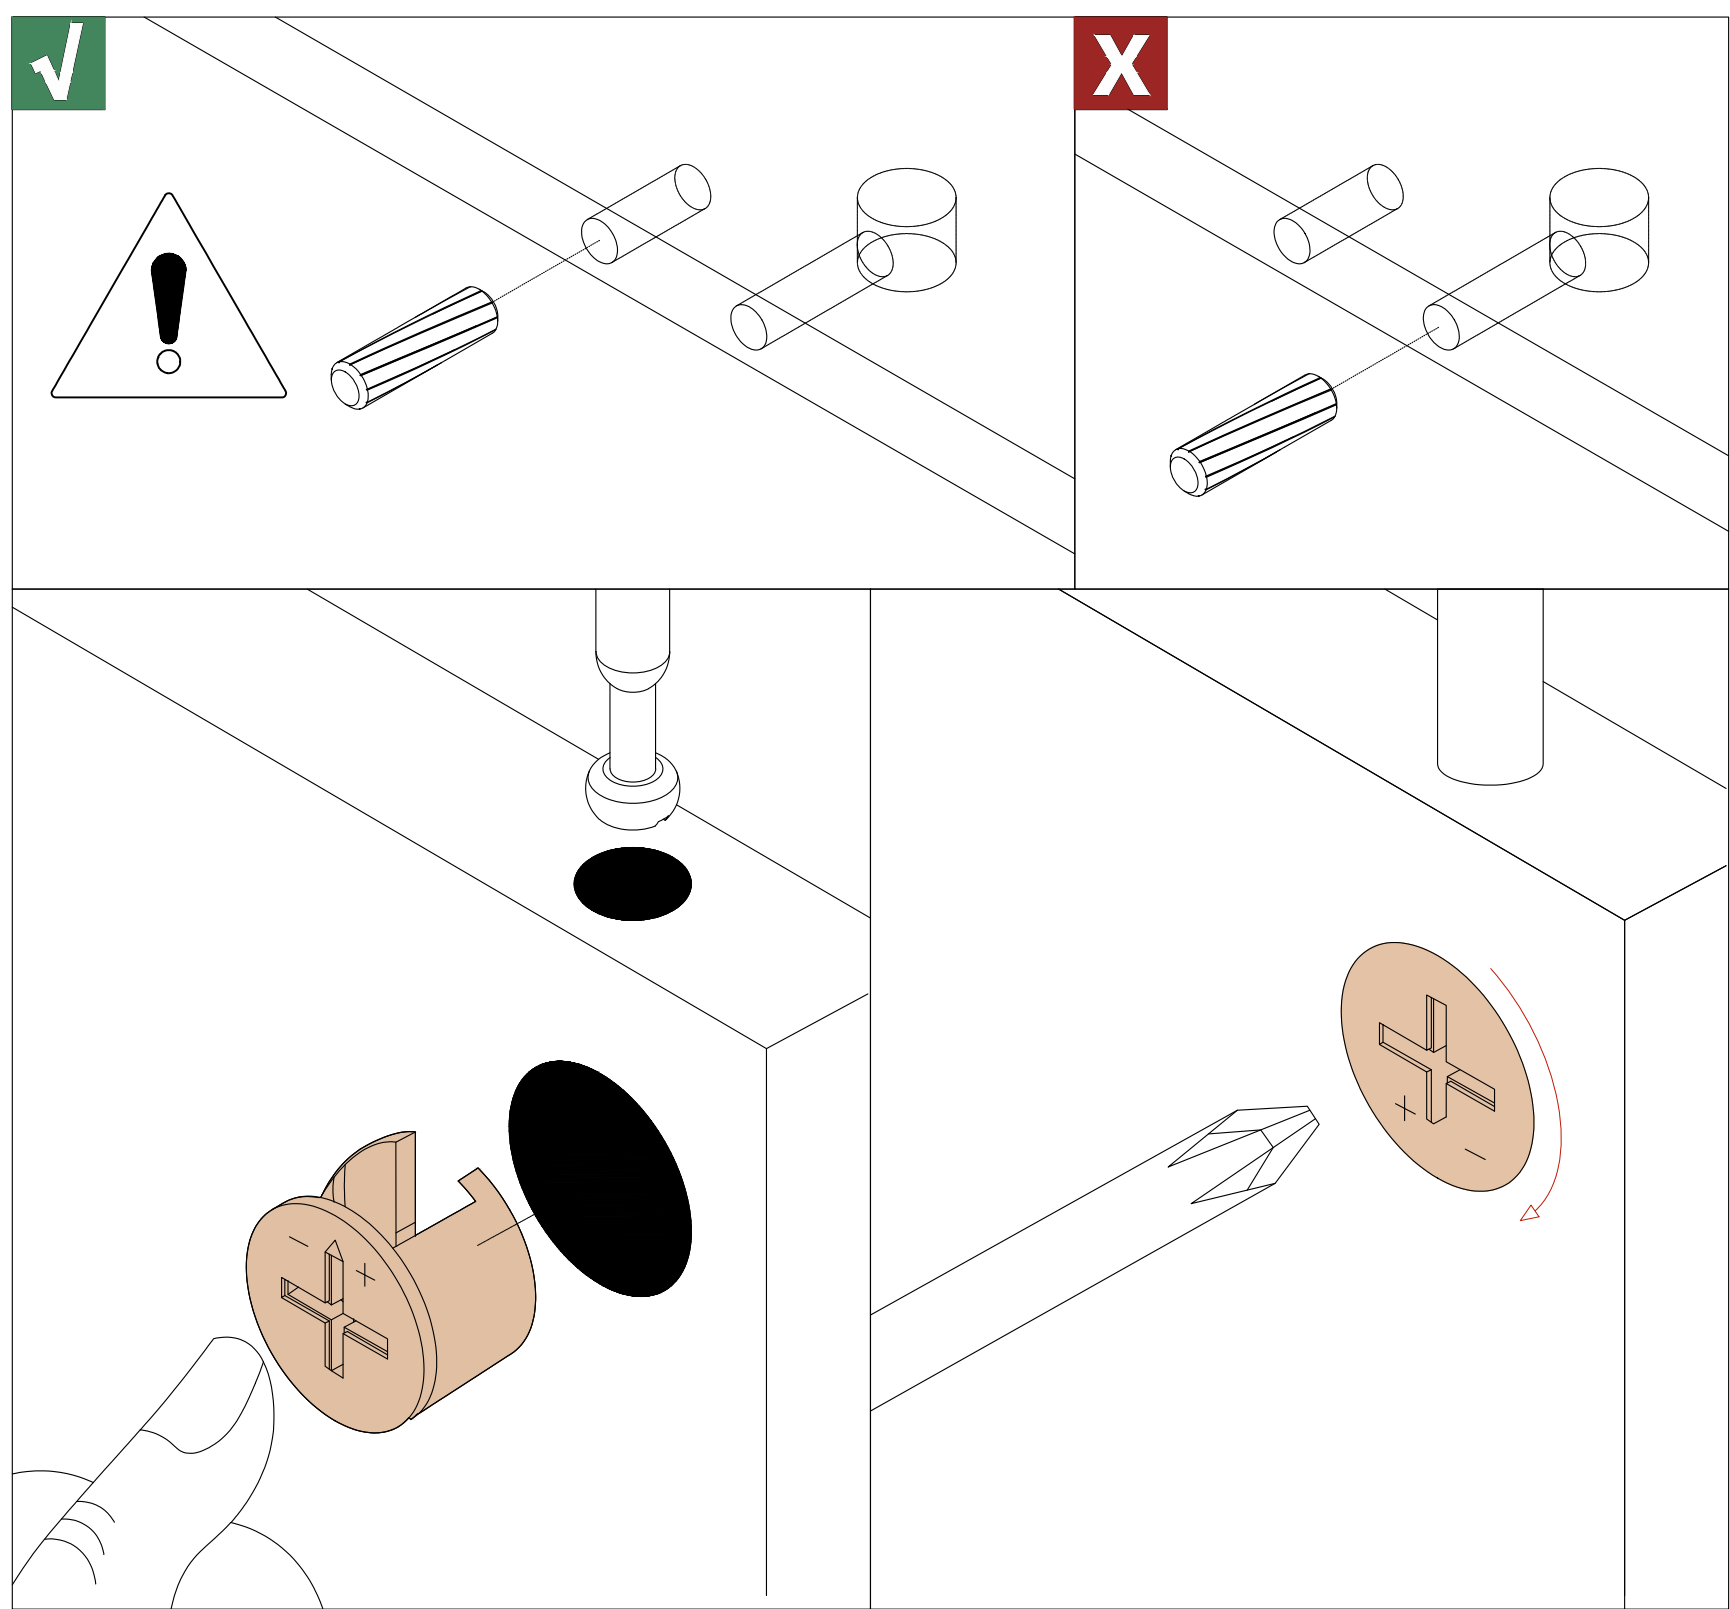
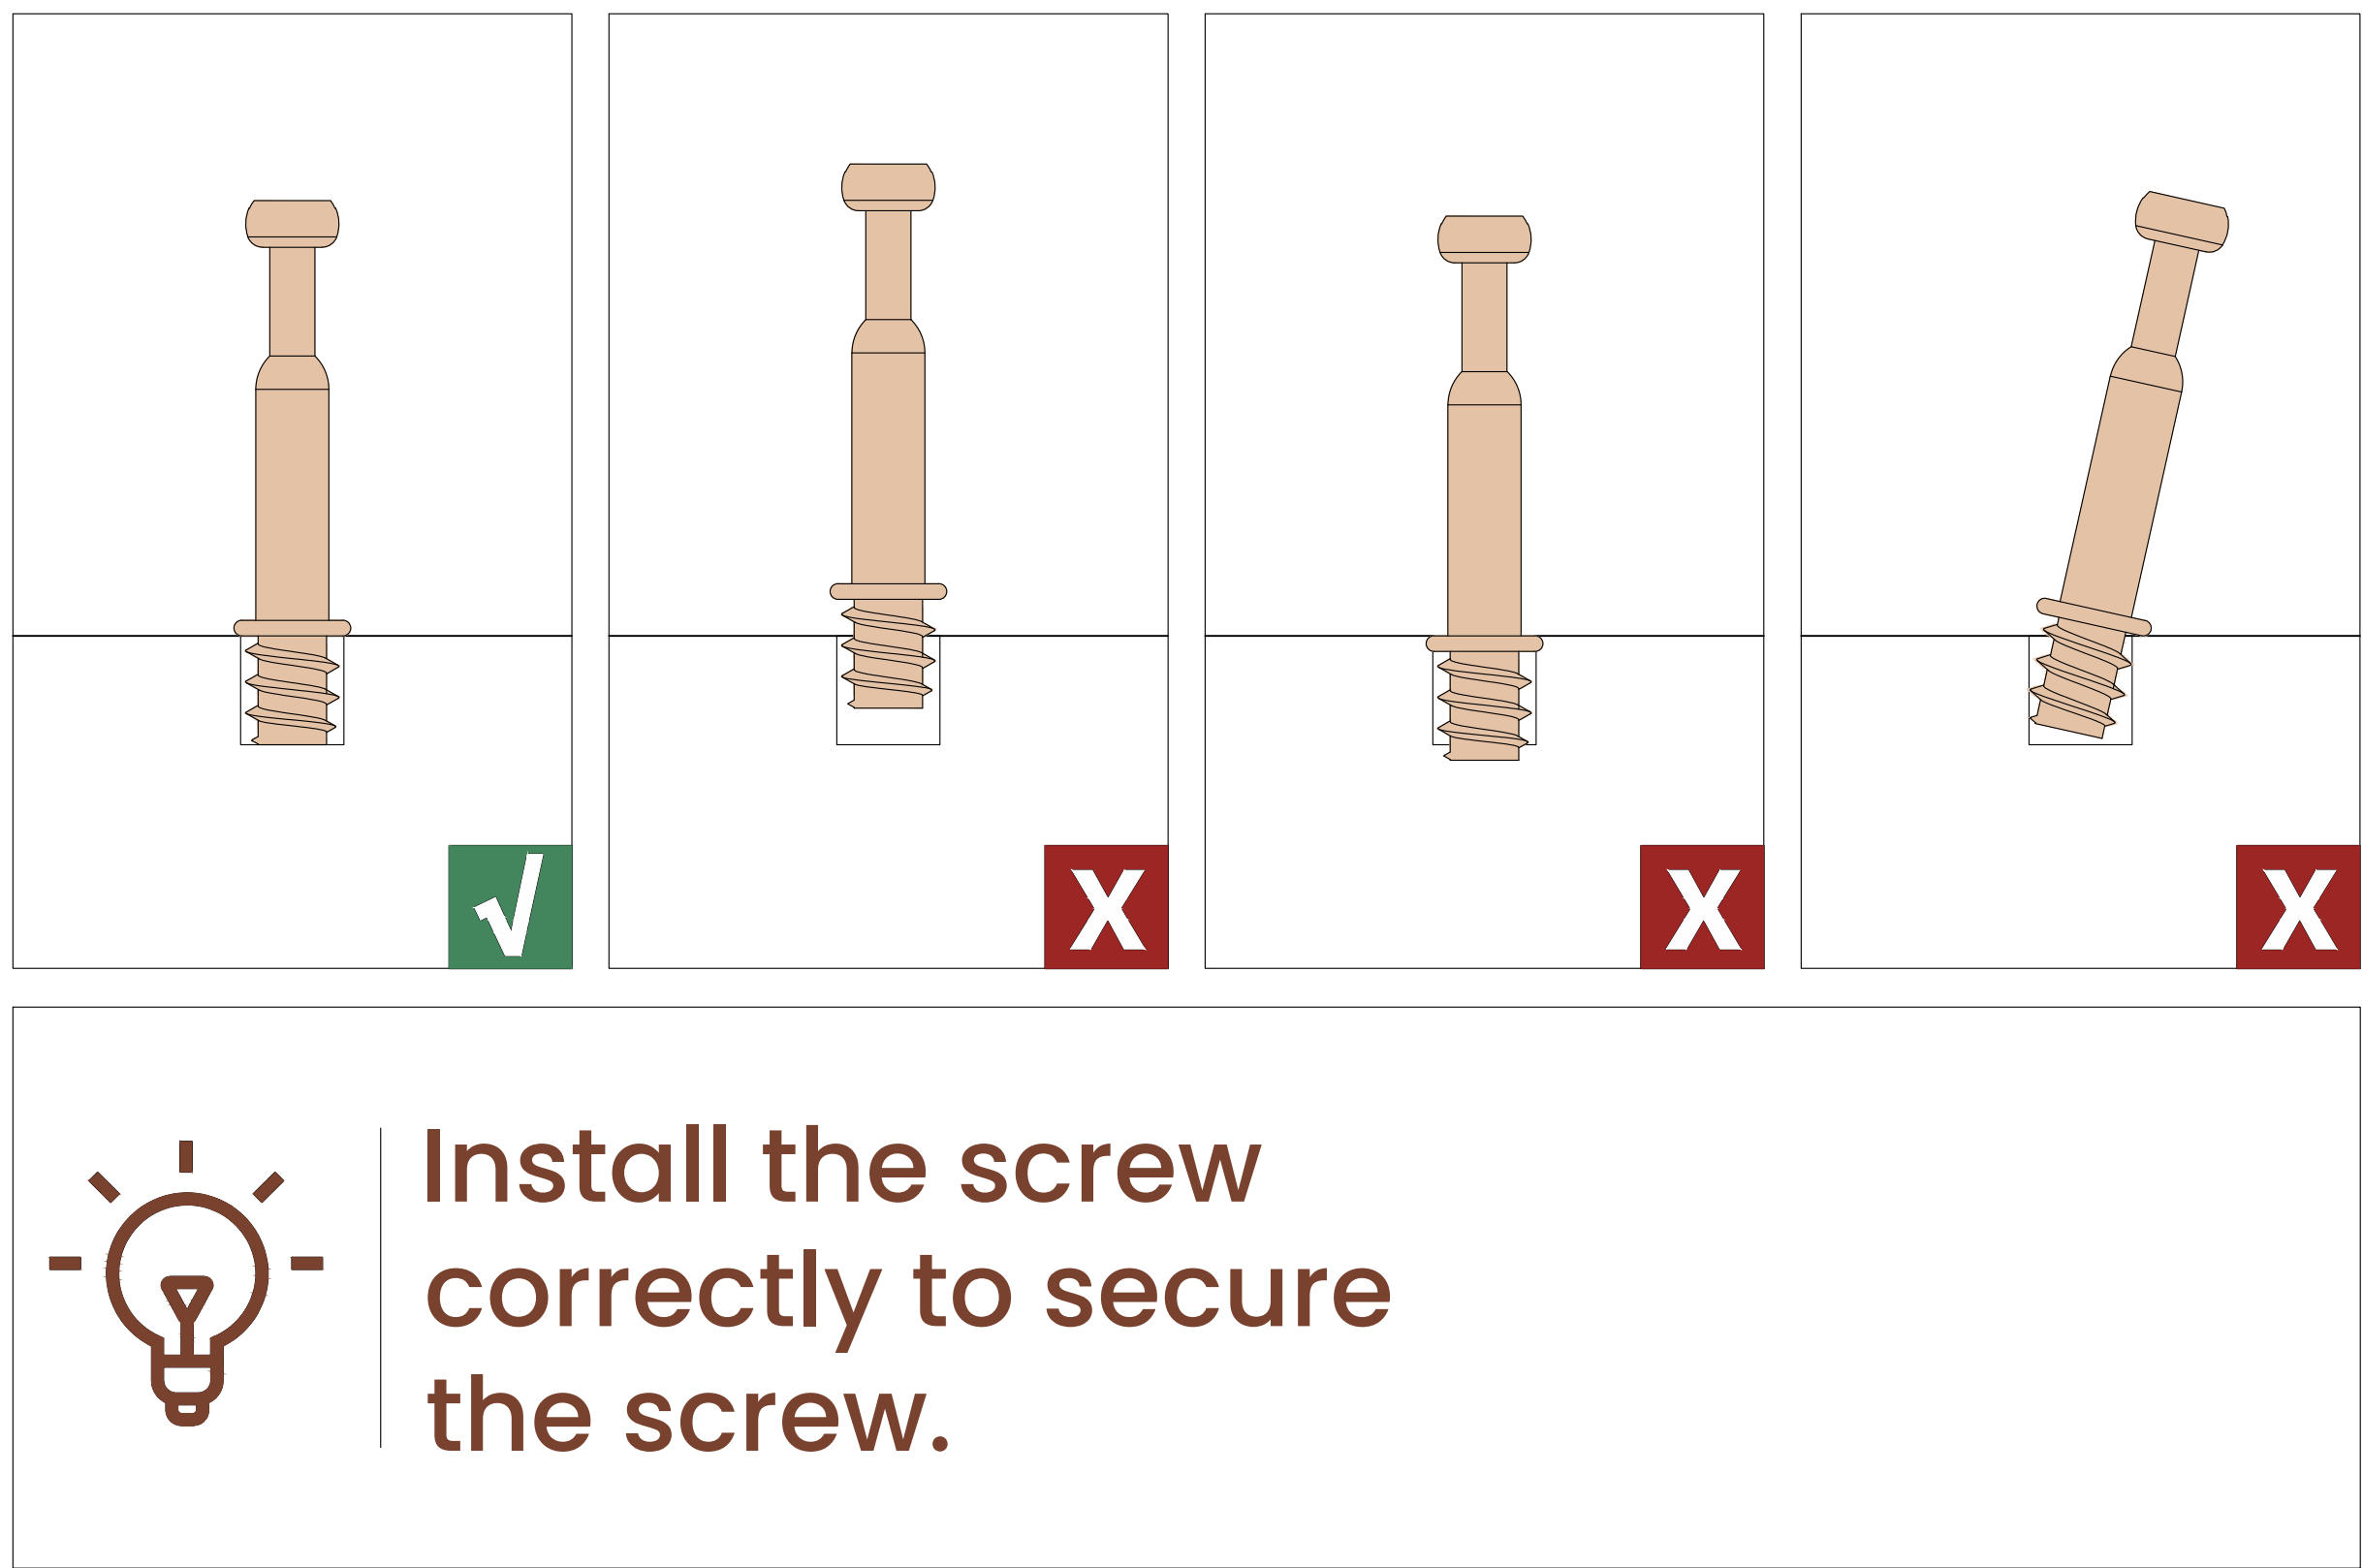
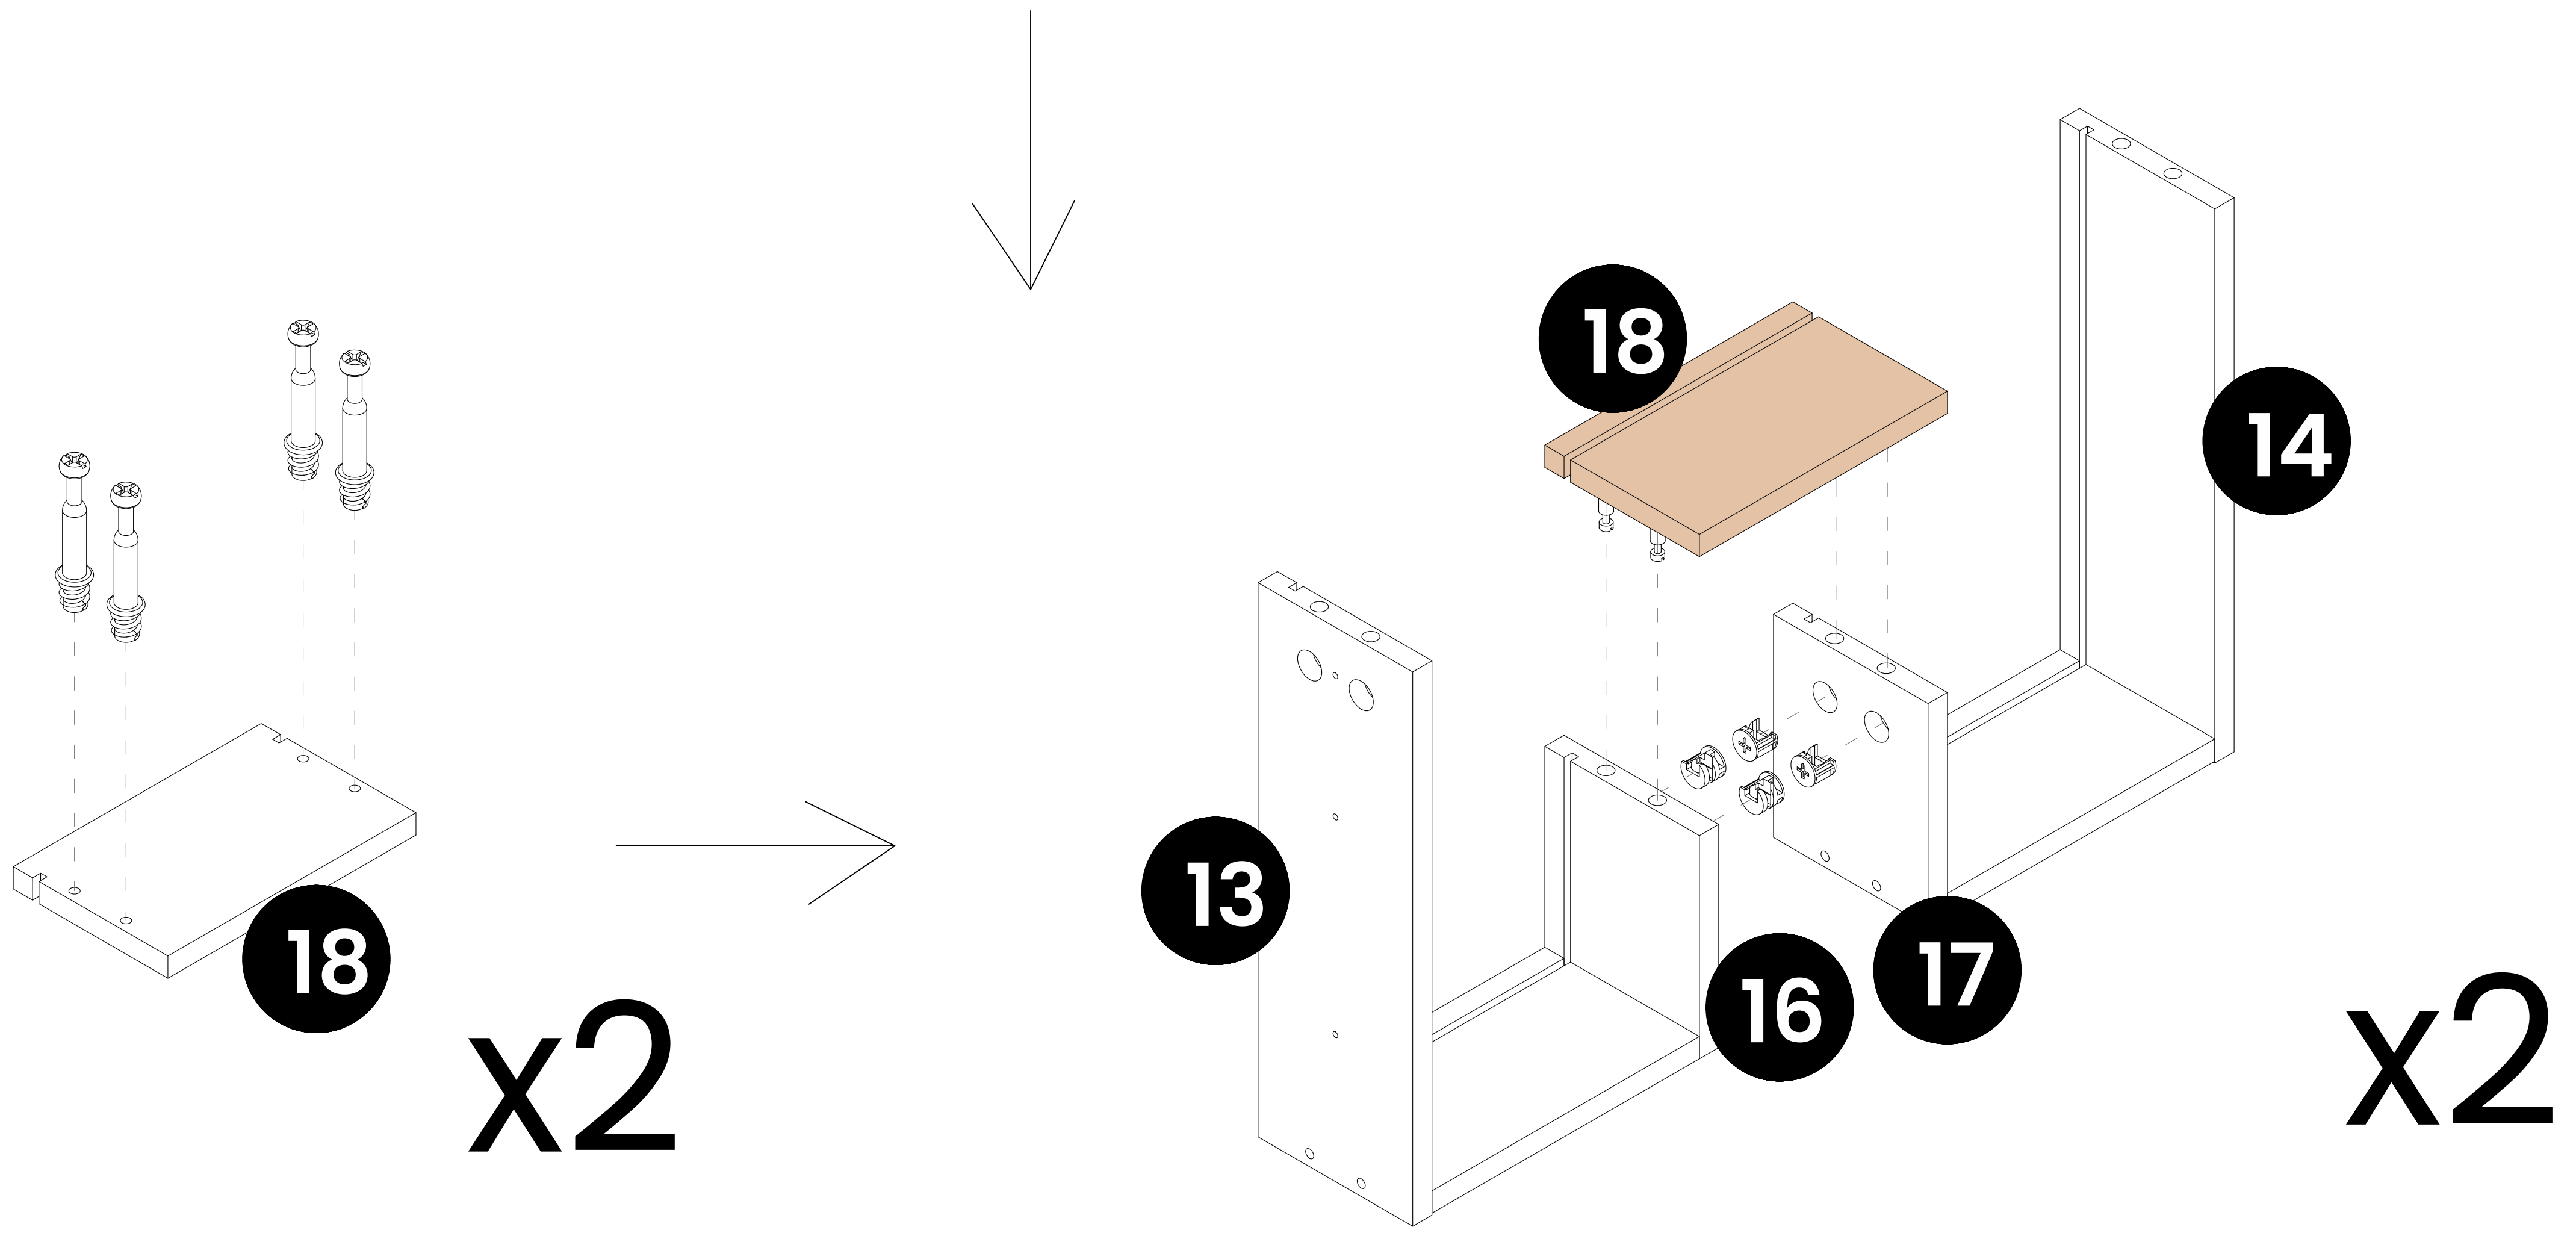
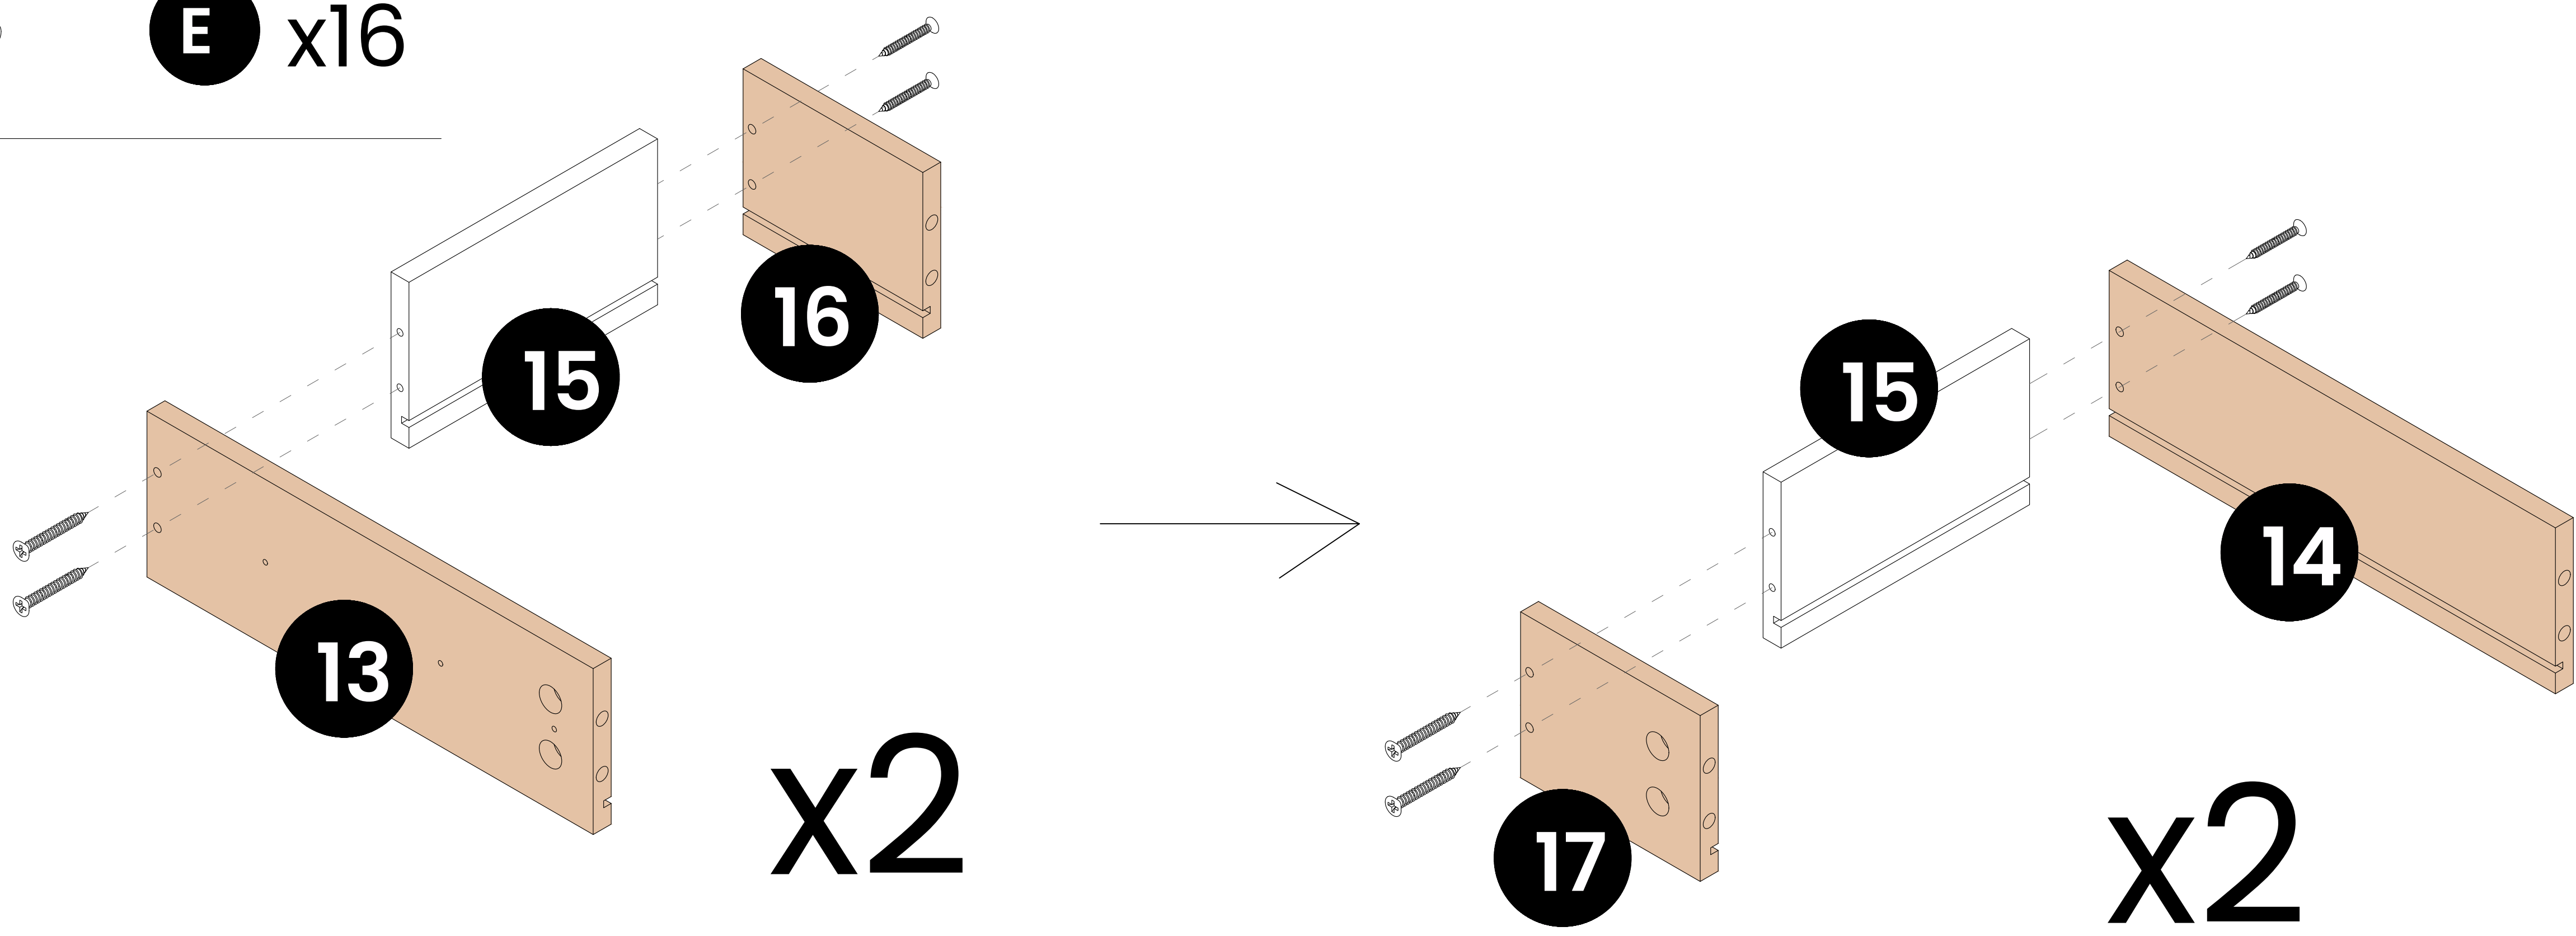
Front




! Pay attention to the position of the screws

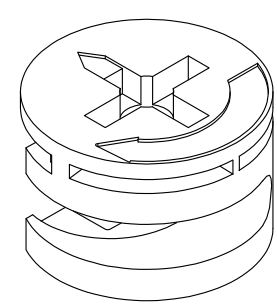
STEP 13

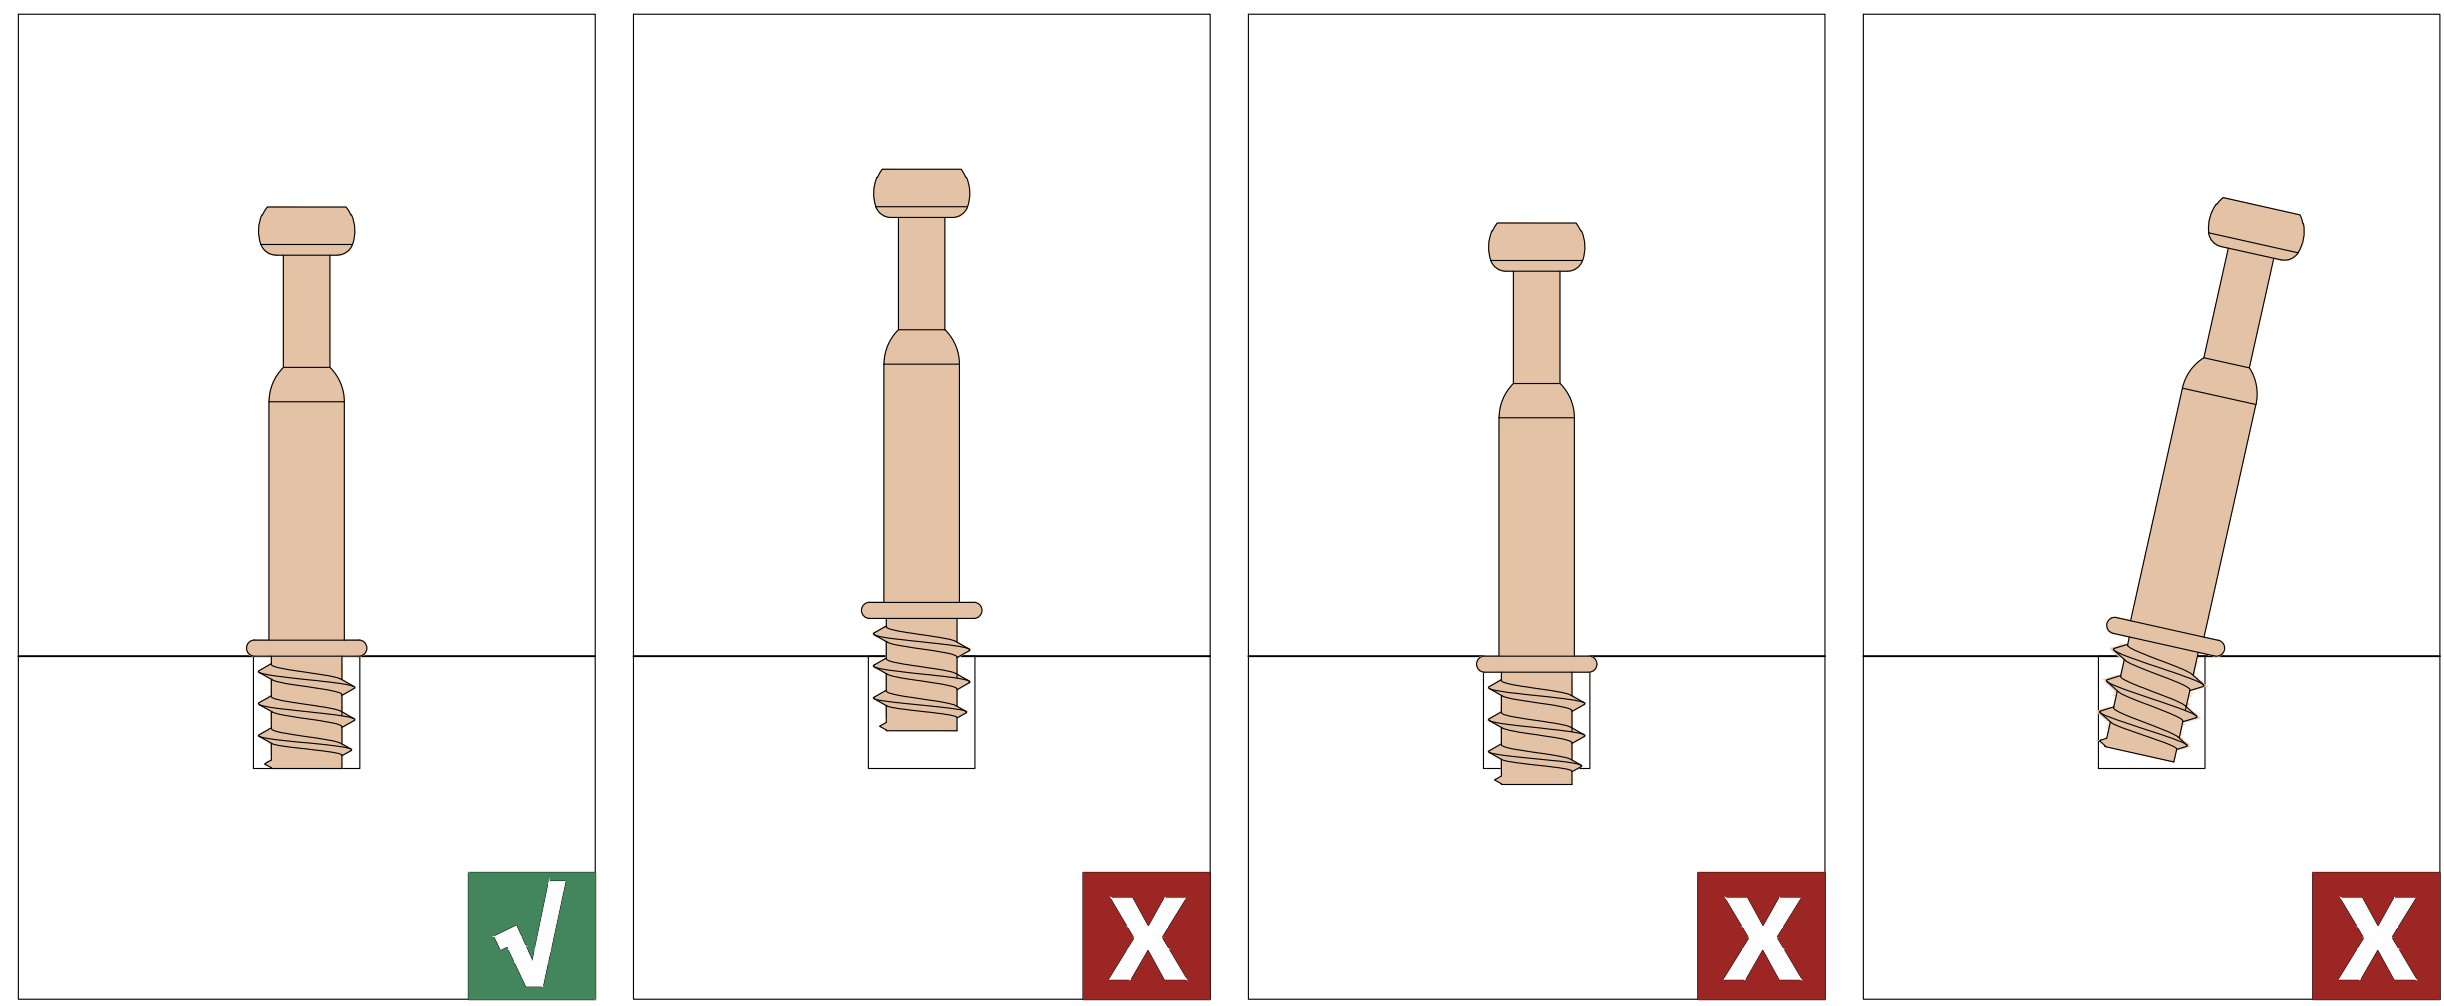
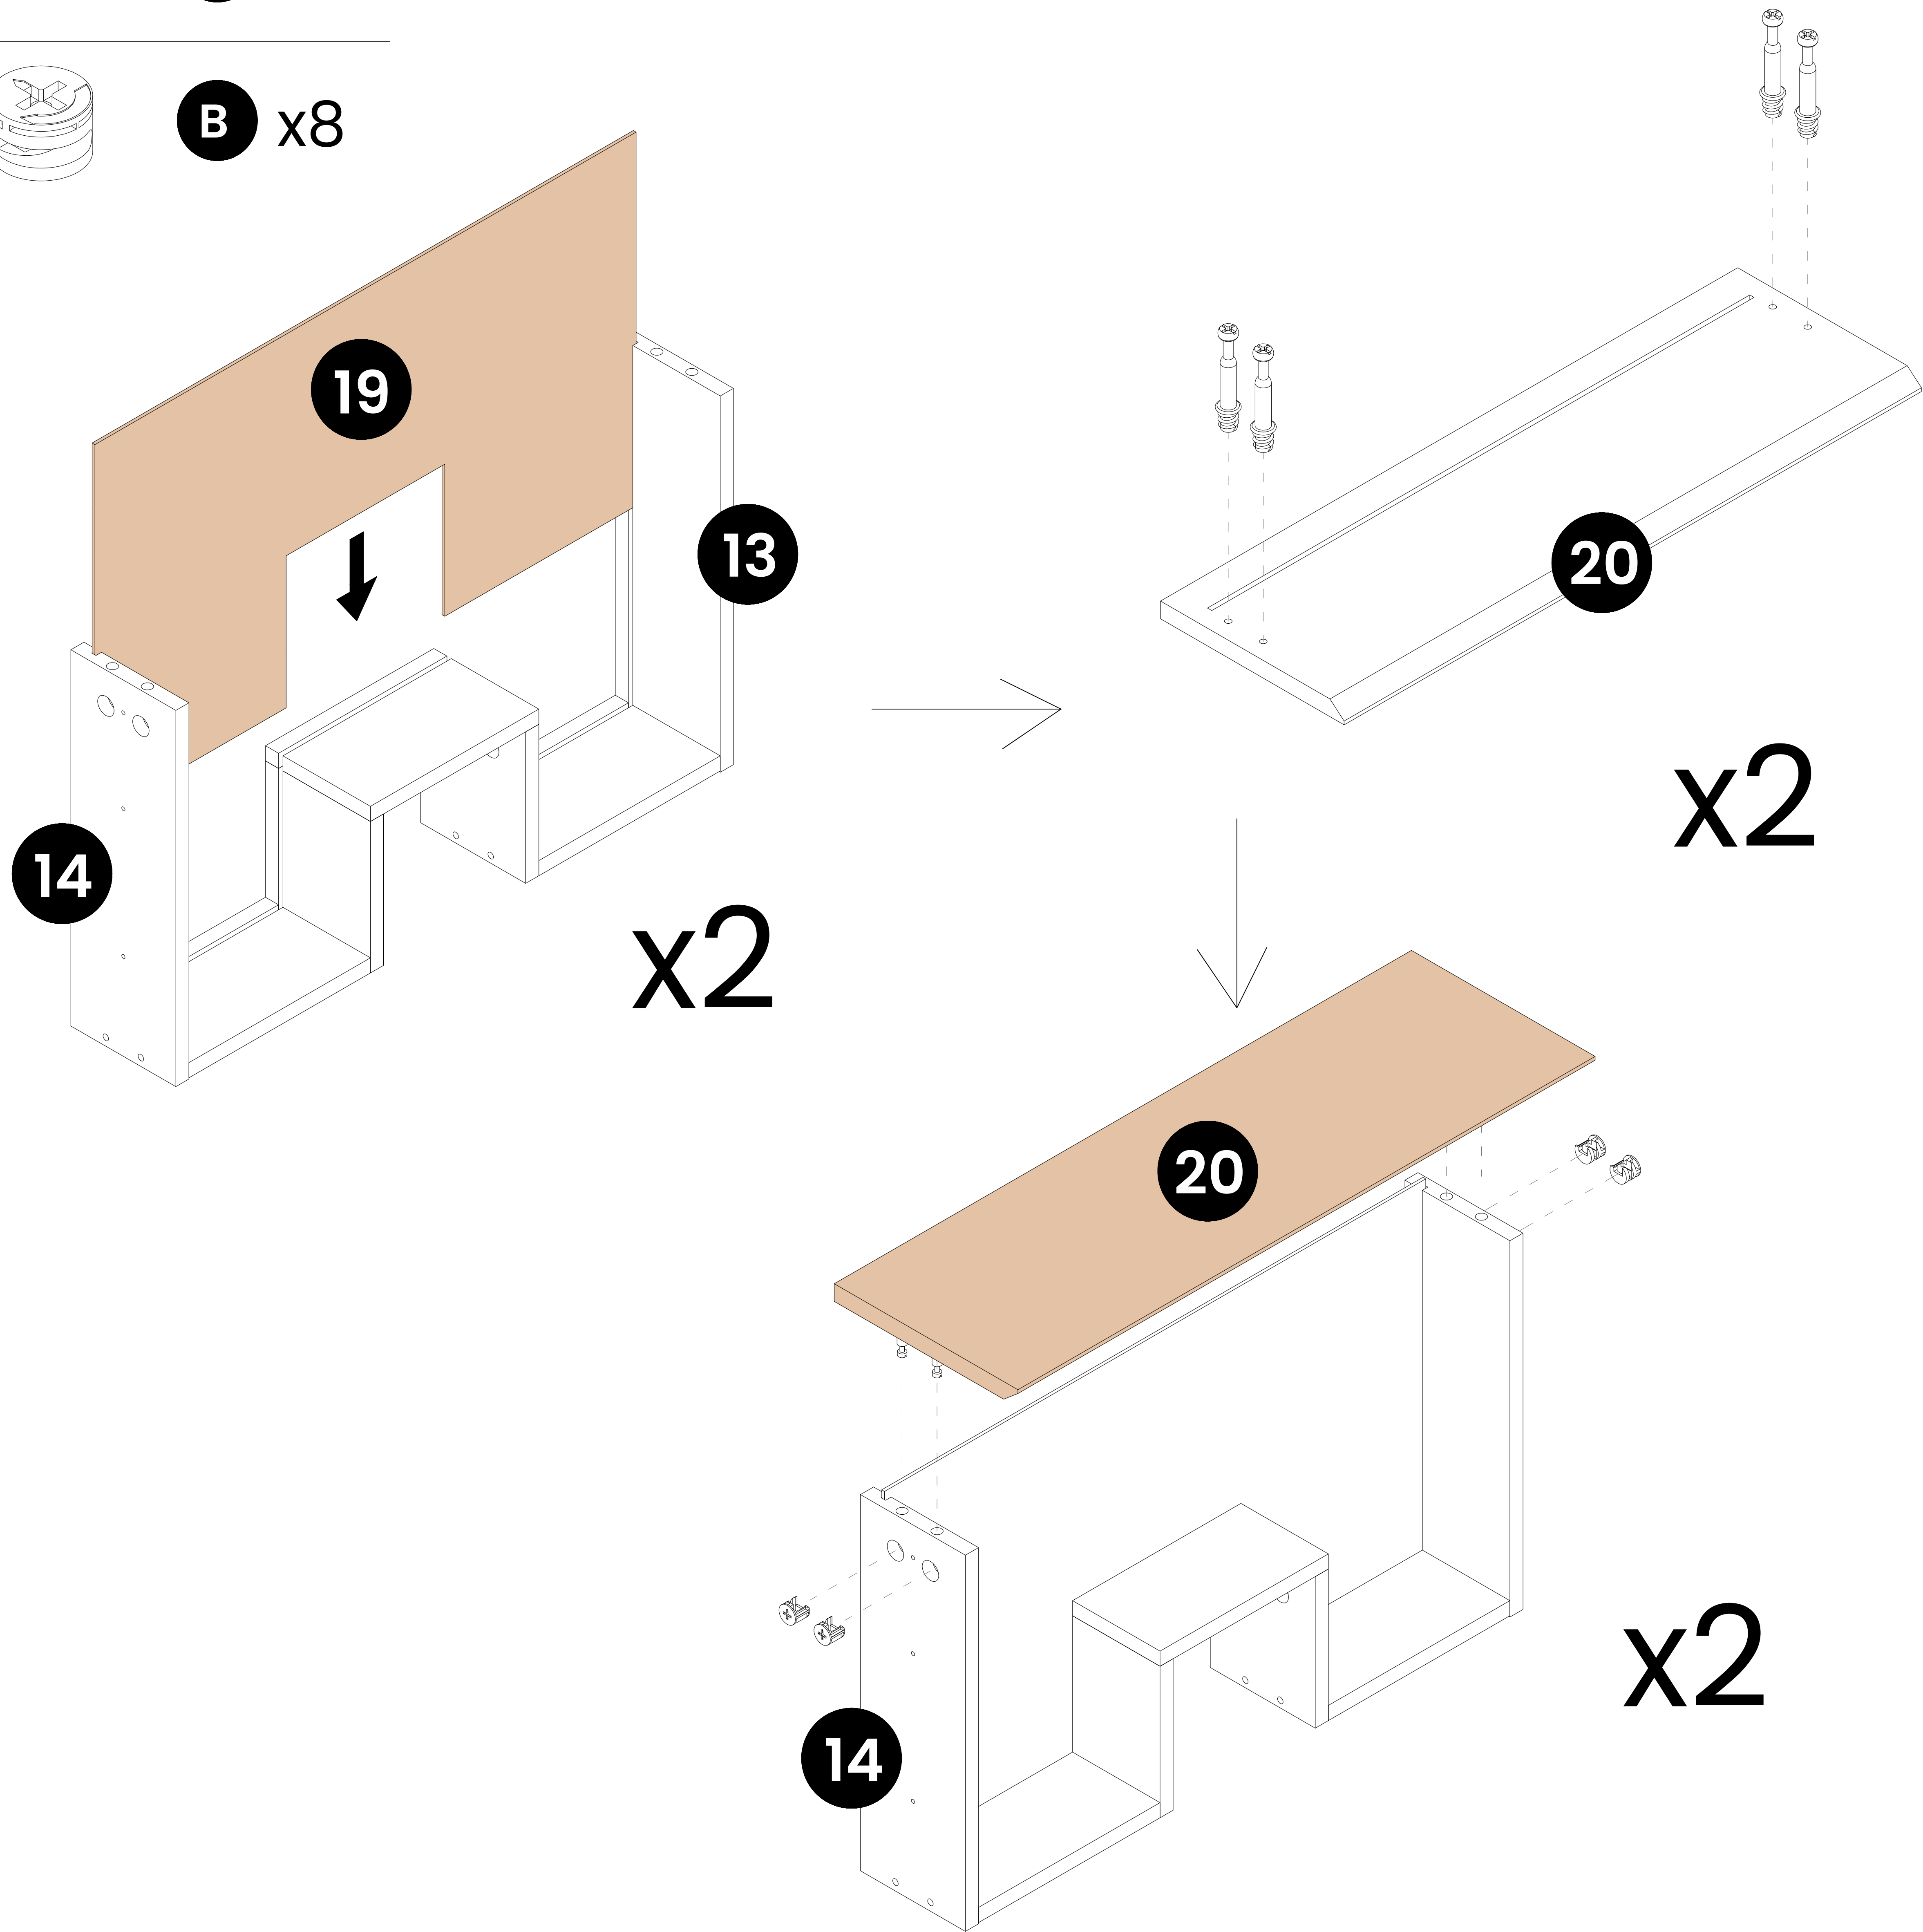
-  **A** x8
-  **B** x8
-  **E** x16



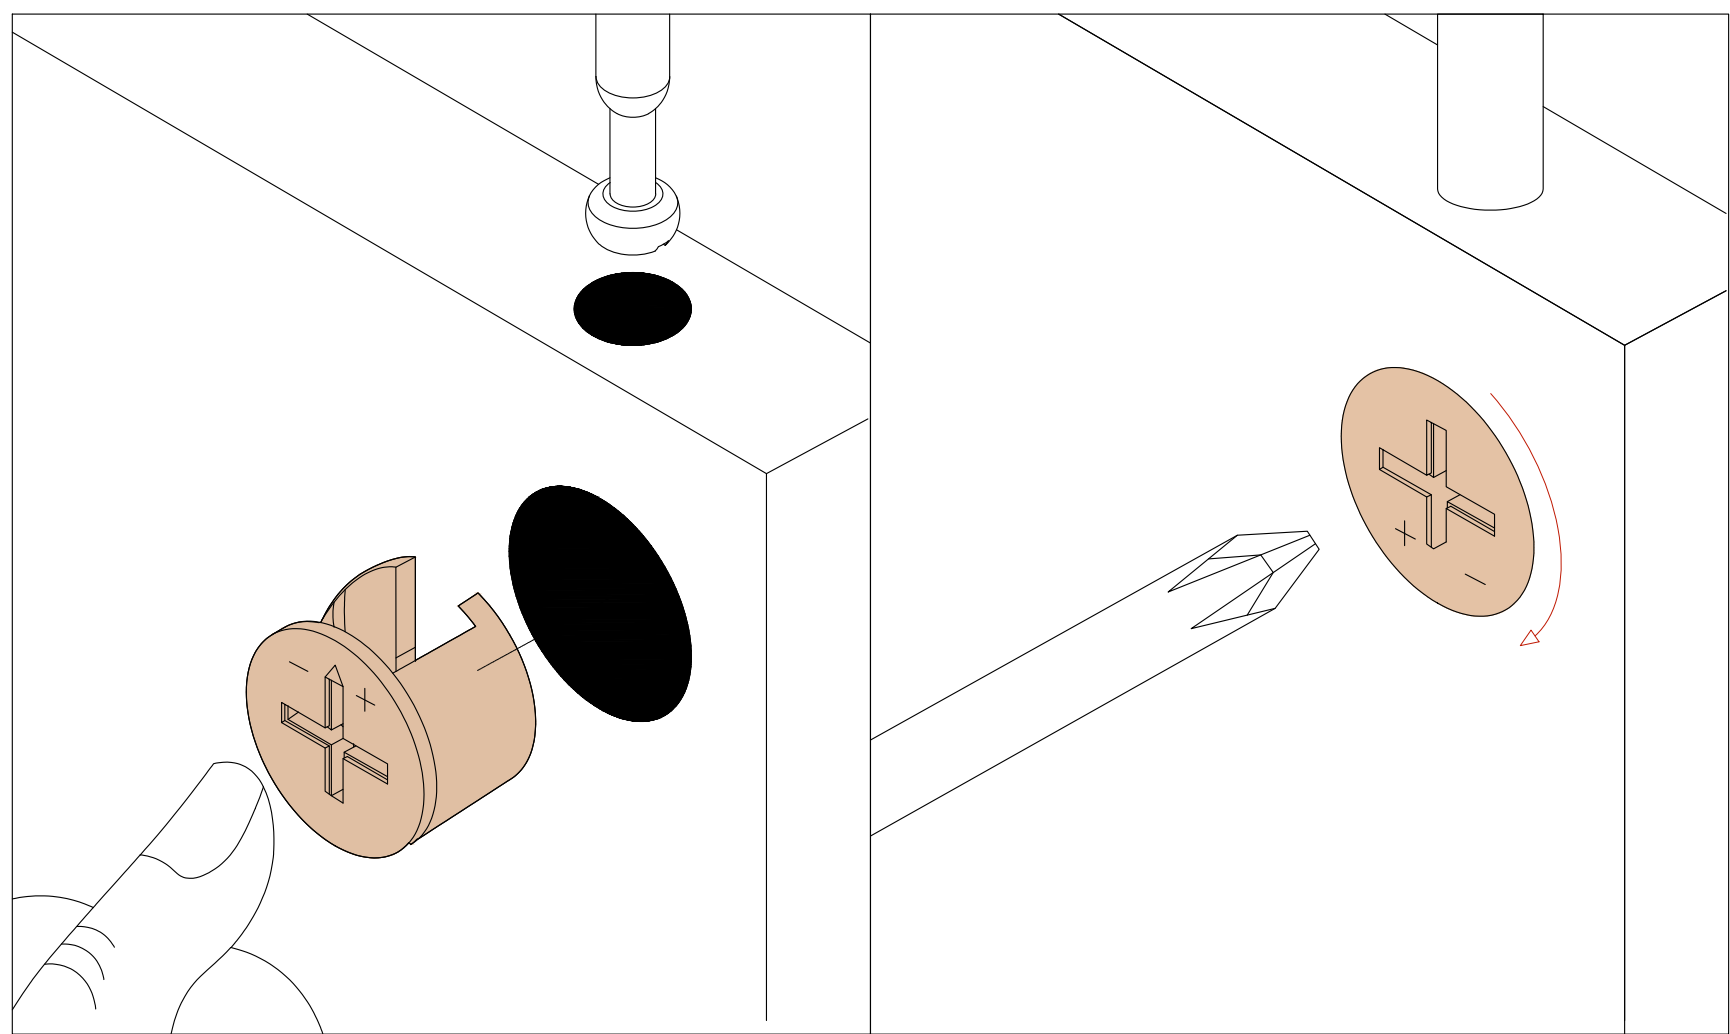
STEP 14

 **A** x8

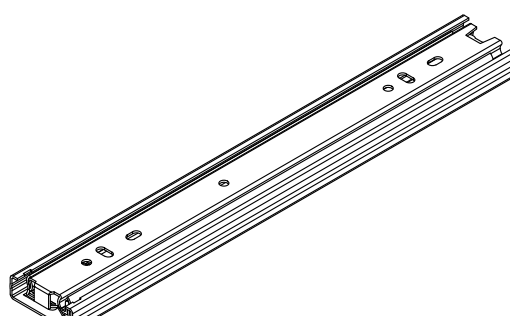
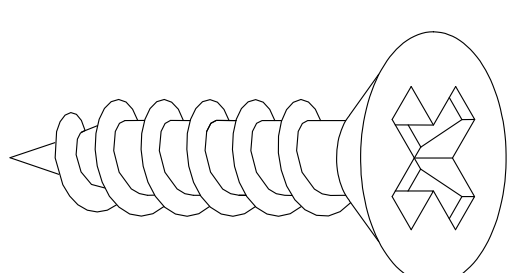
 **B** x8

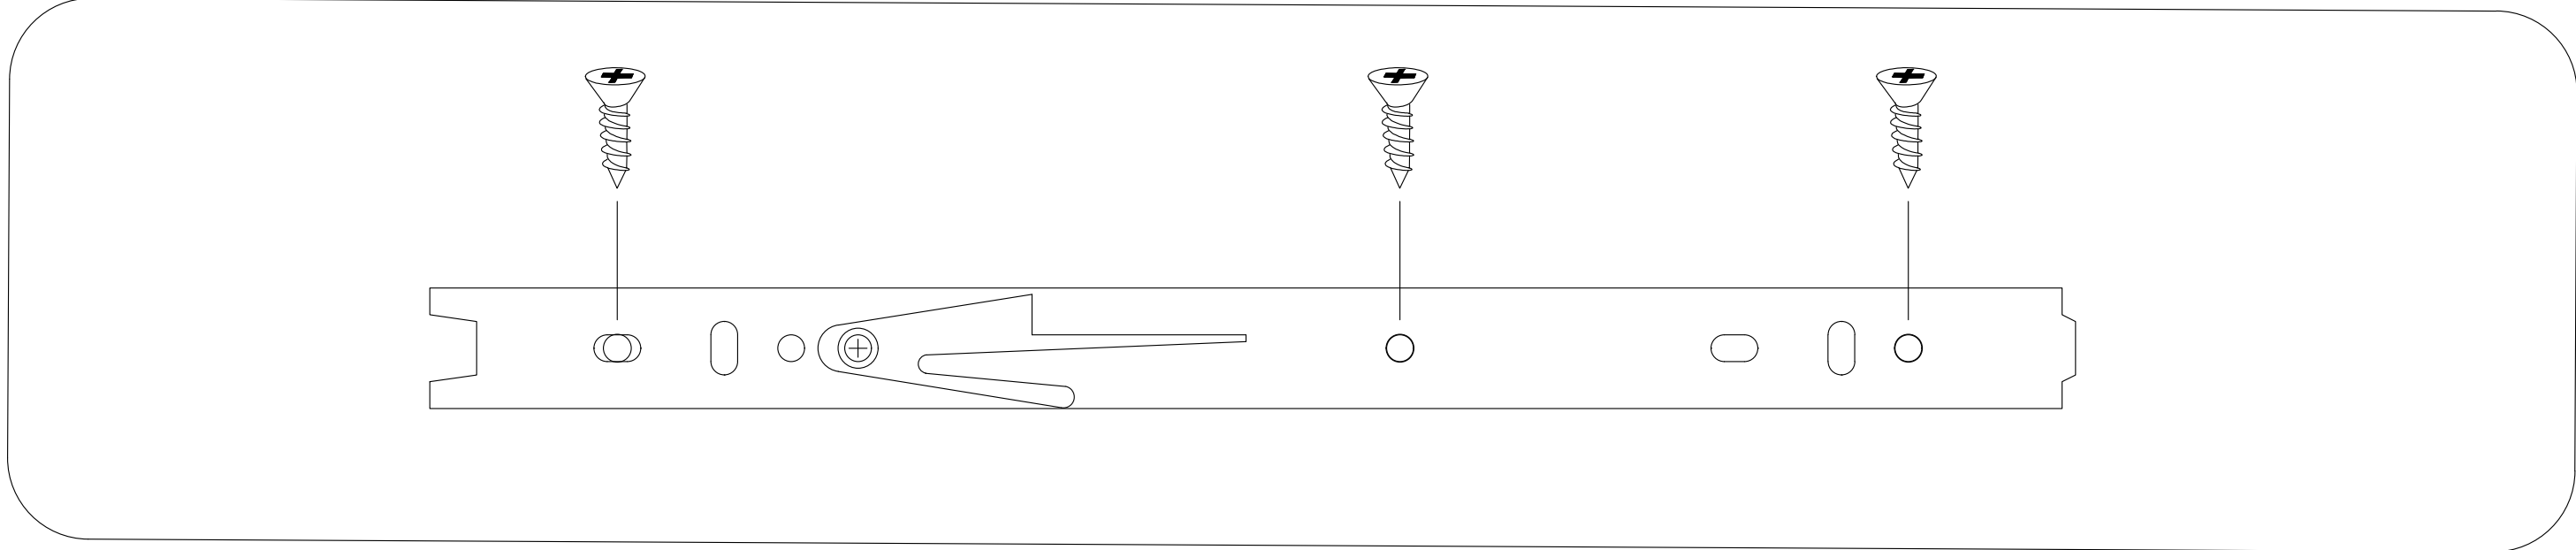
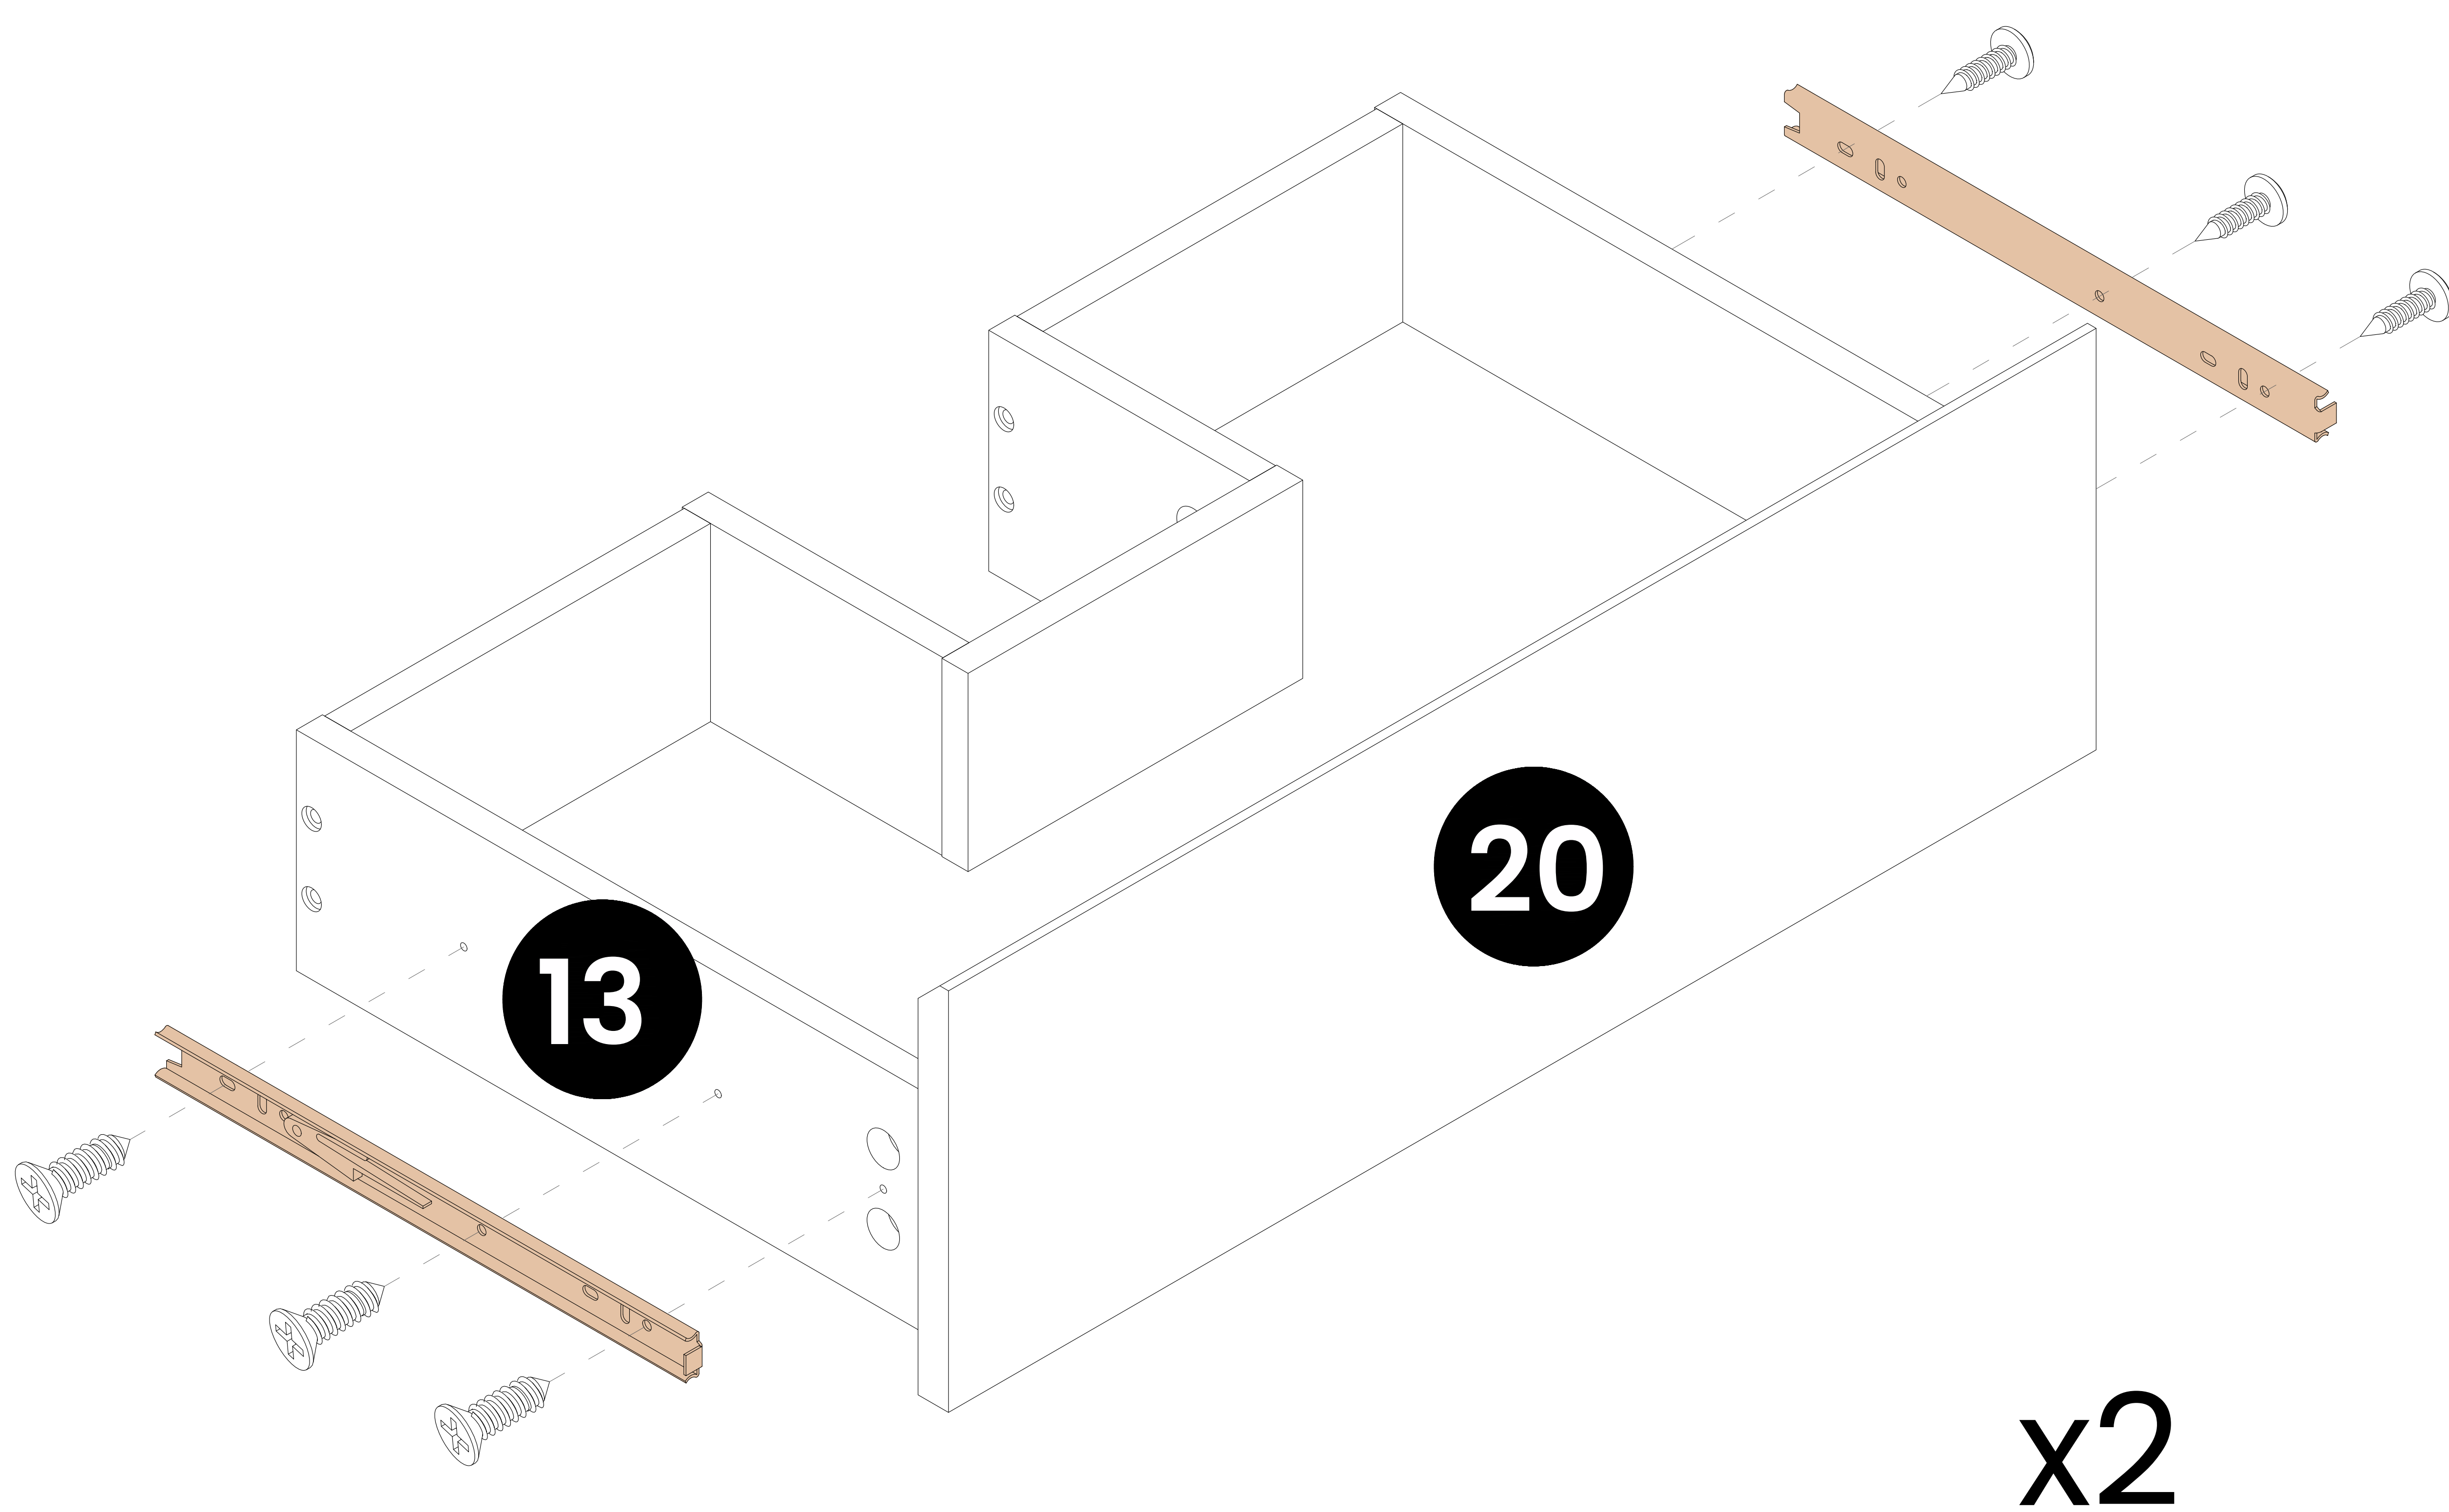


Install the screw correctly to secure the screw.



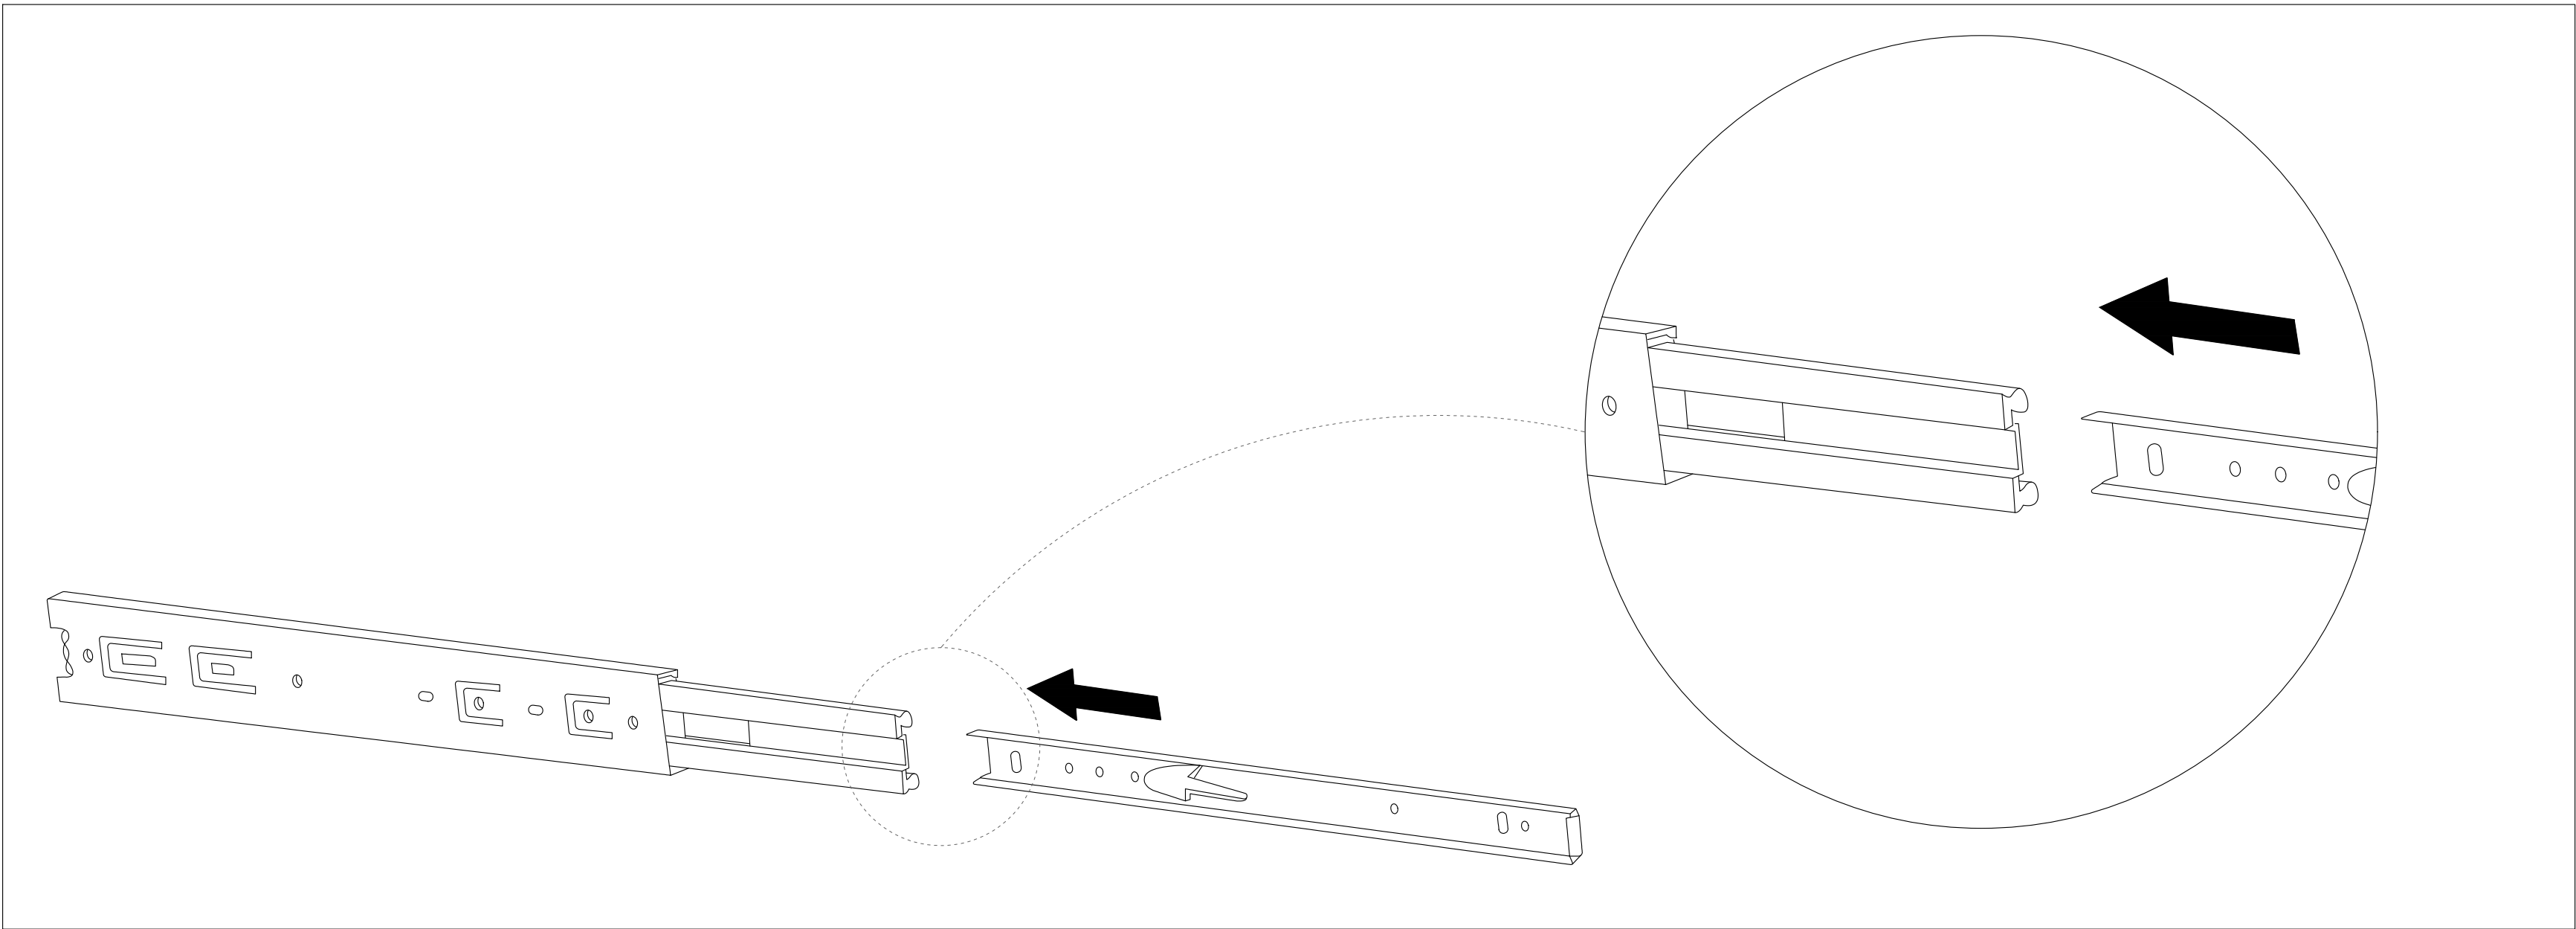
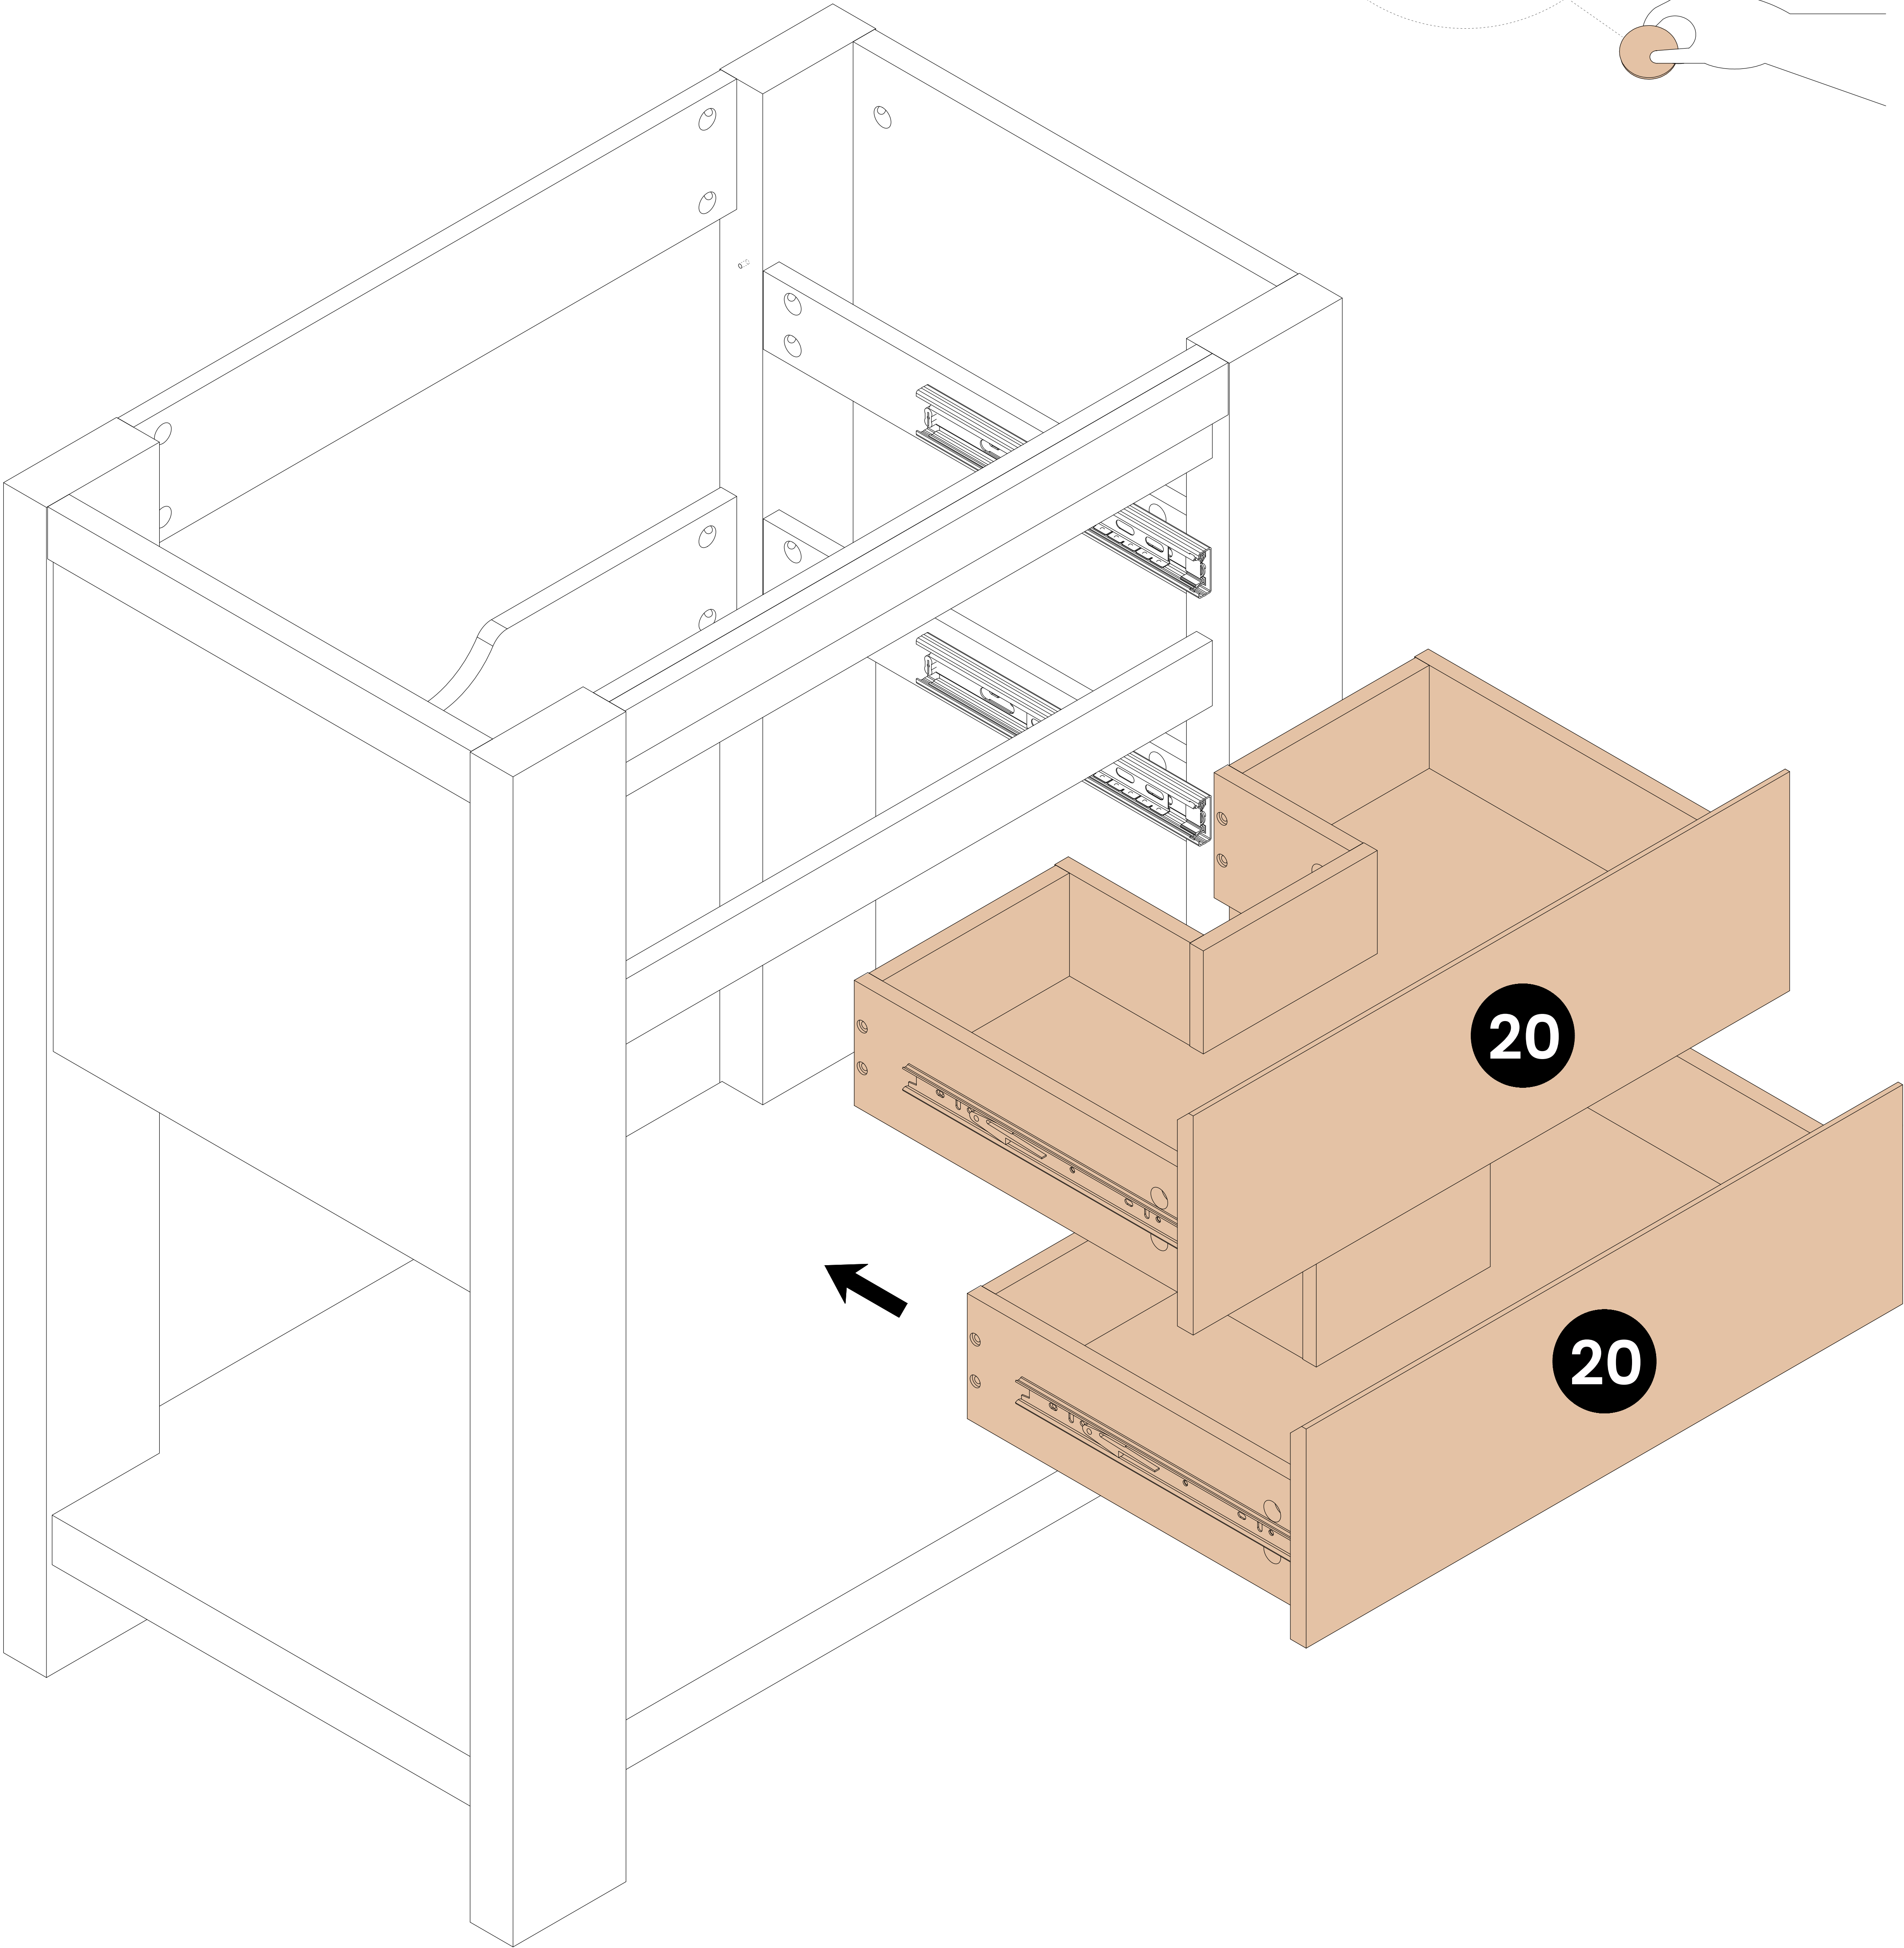
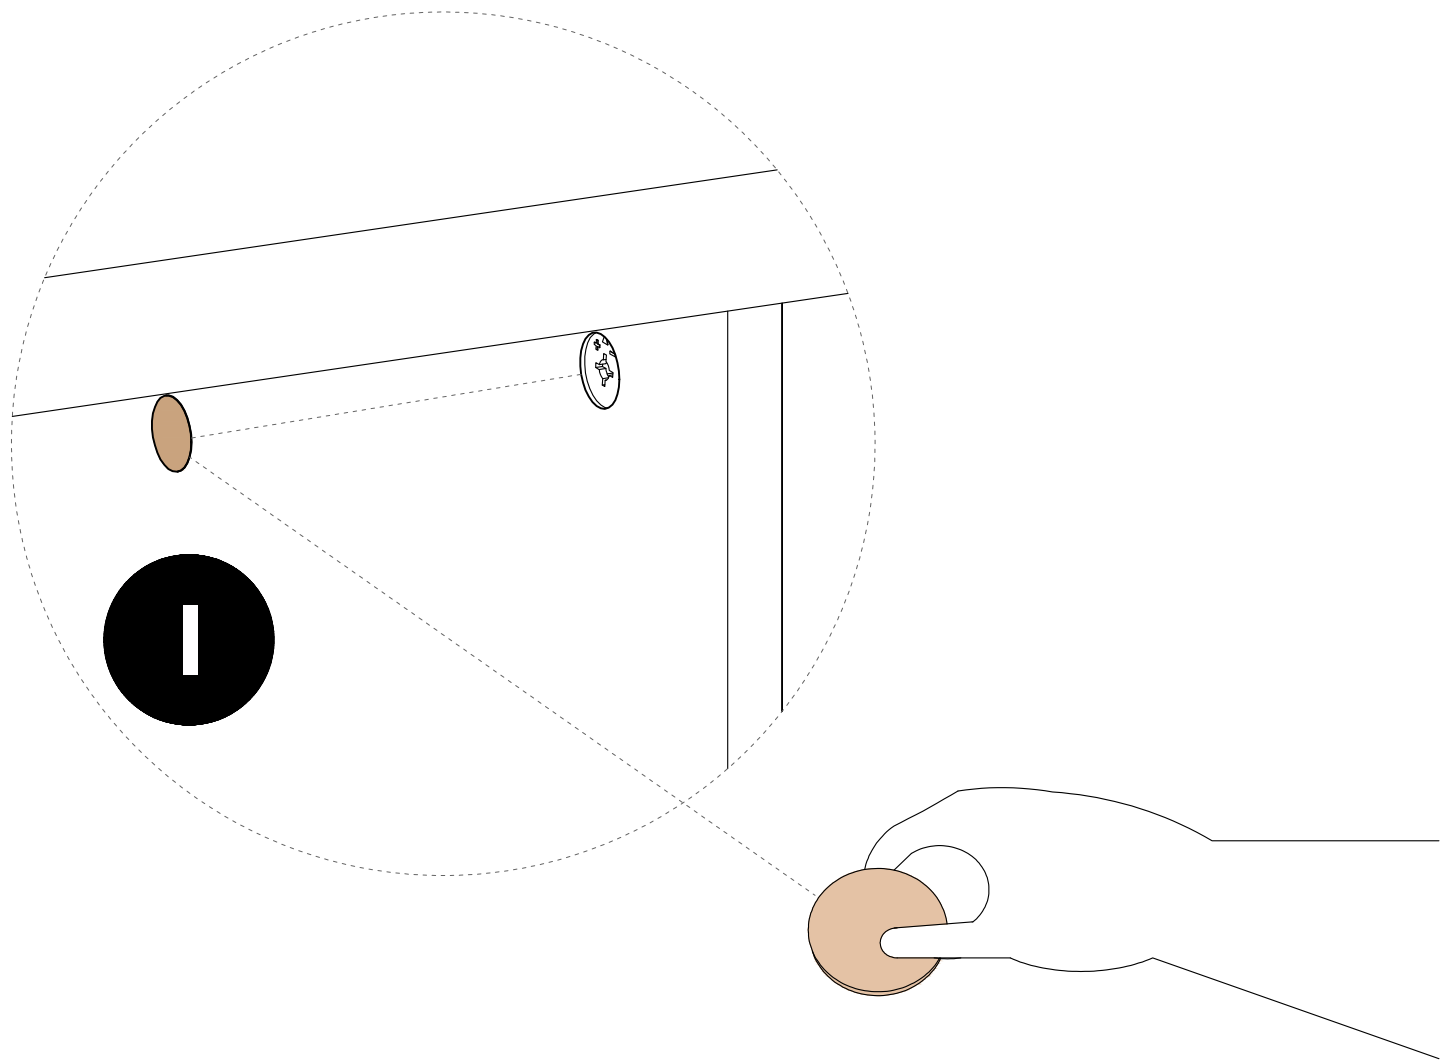
STEP 15

-  **J** x2
-  **F** x12



 Pay attention to the position of the screws

STEP 16



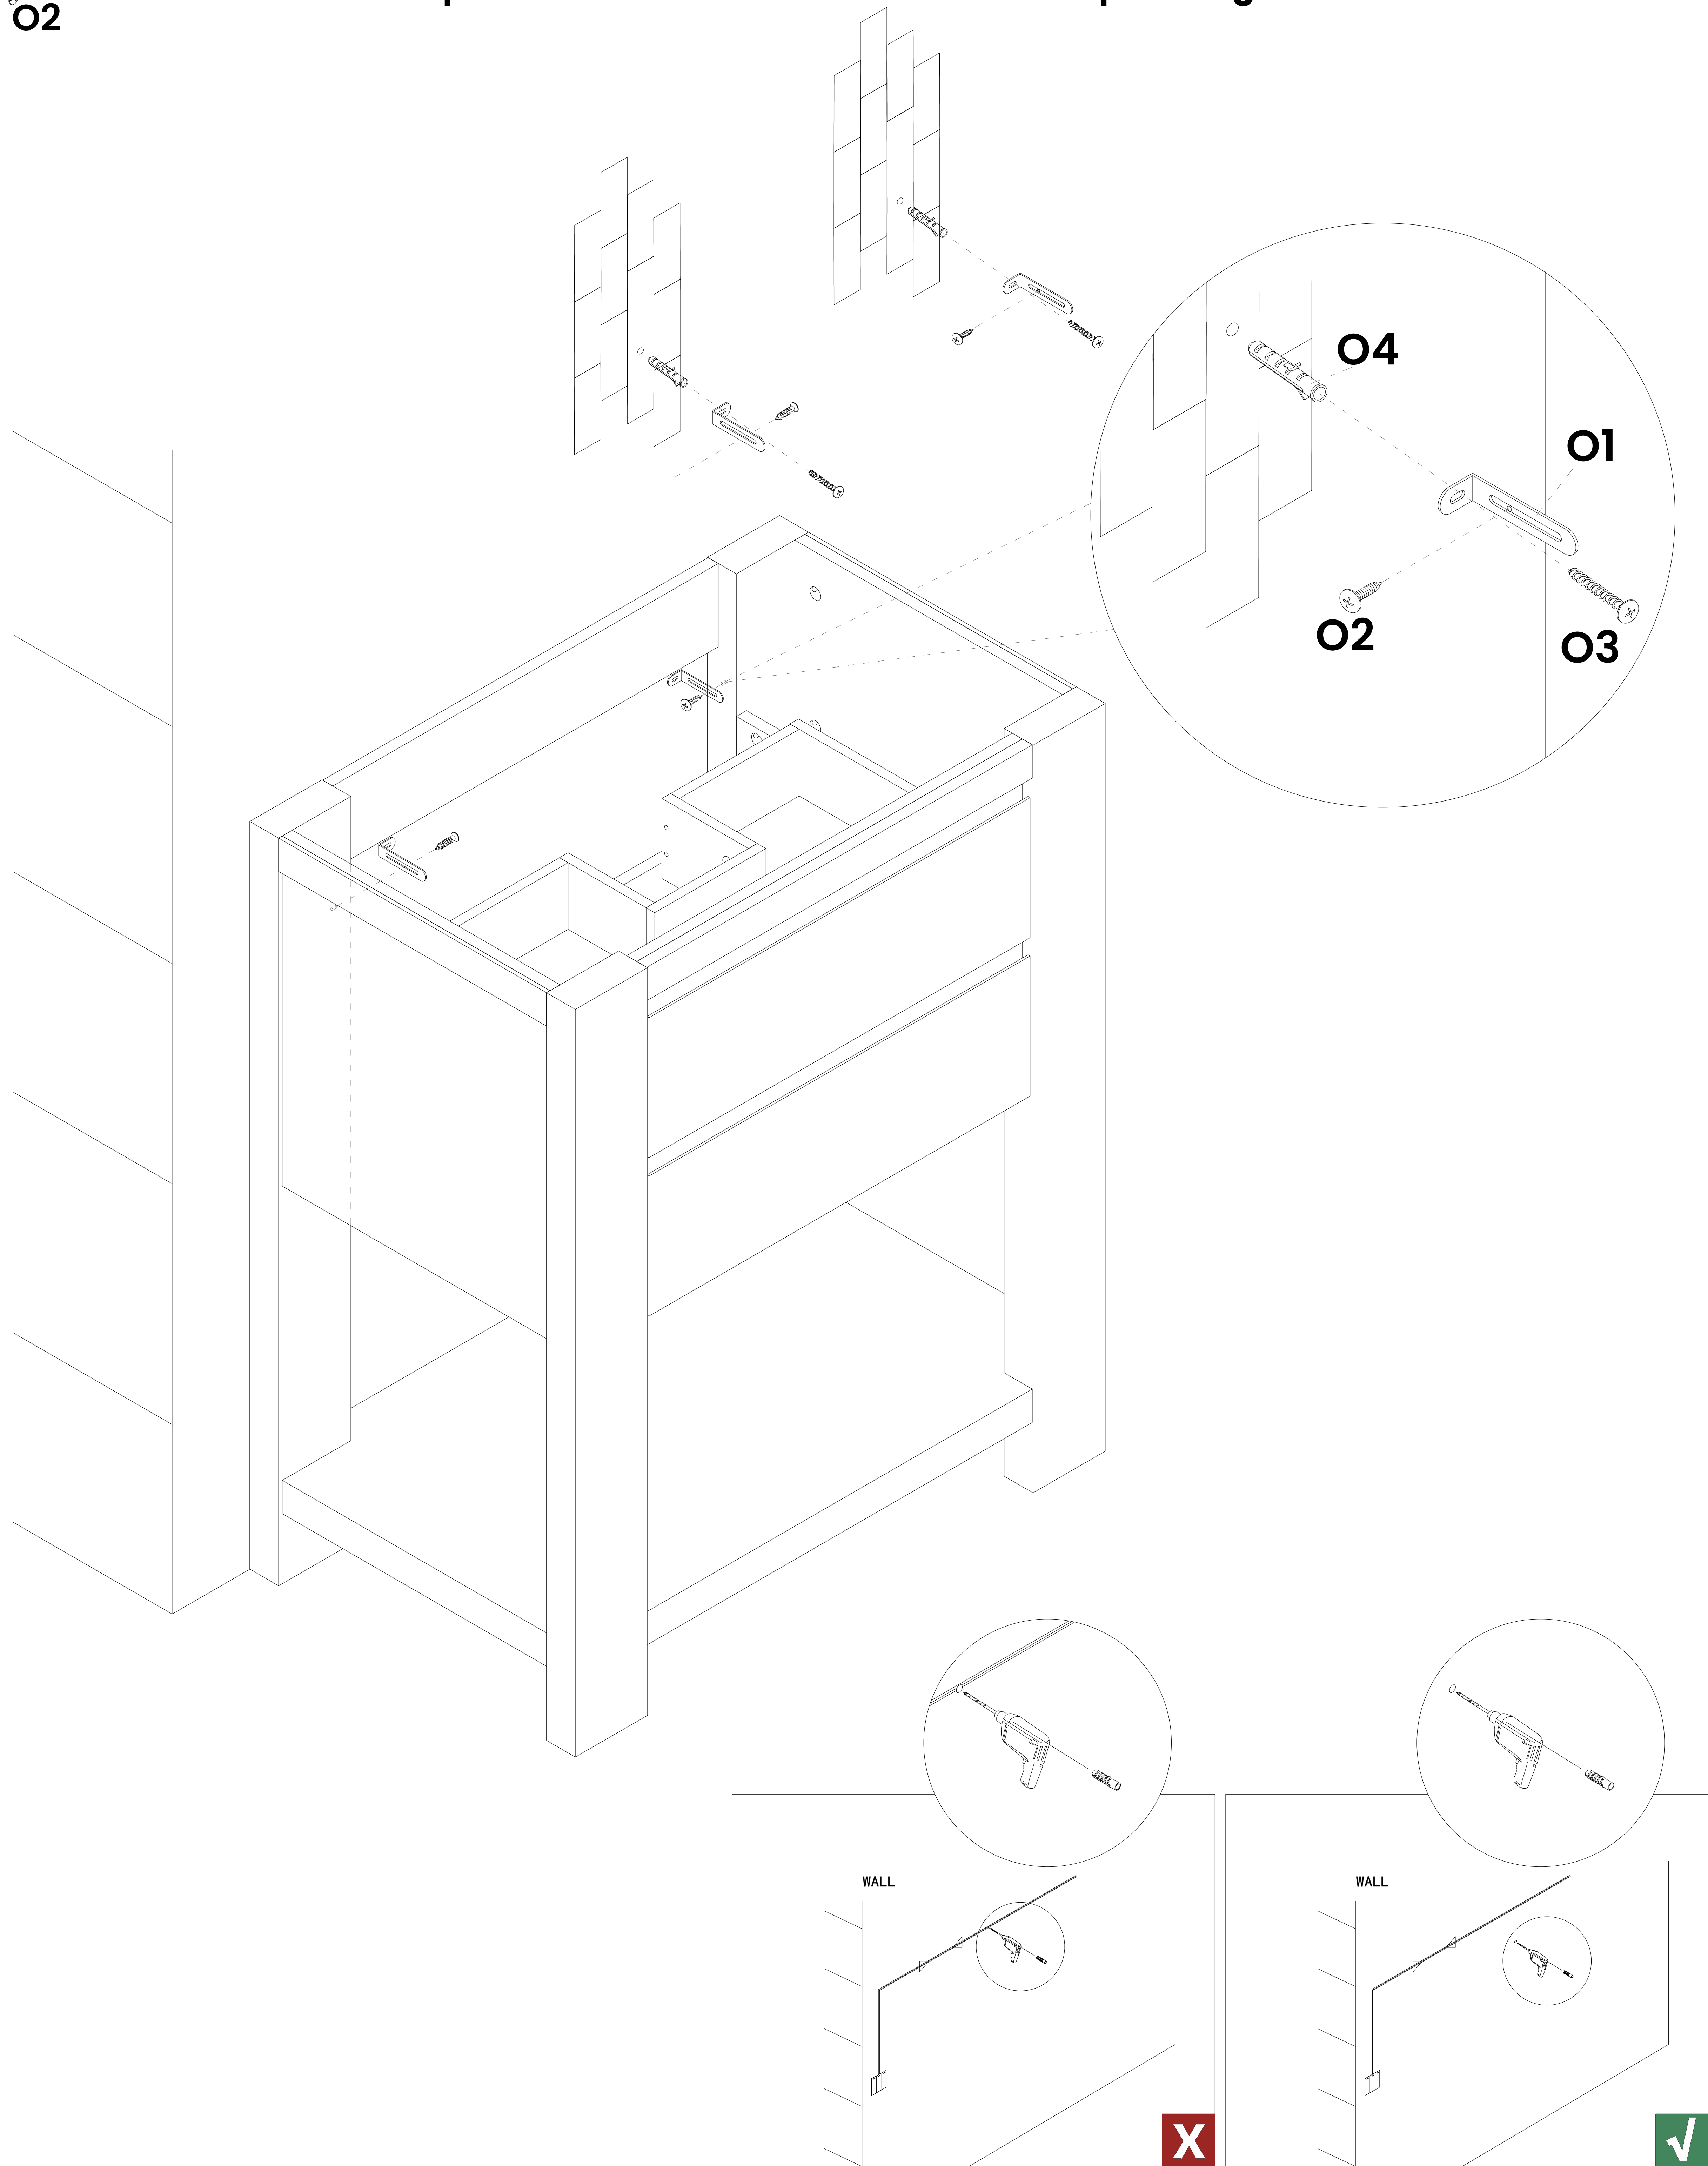
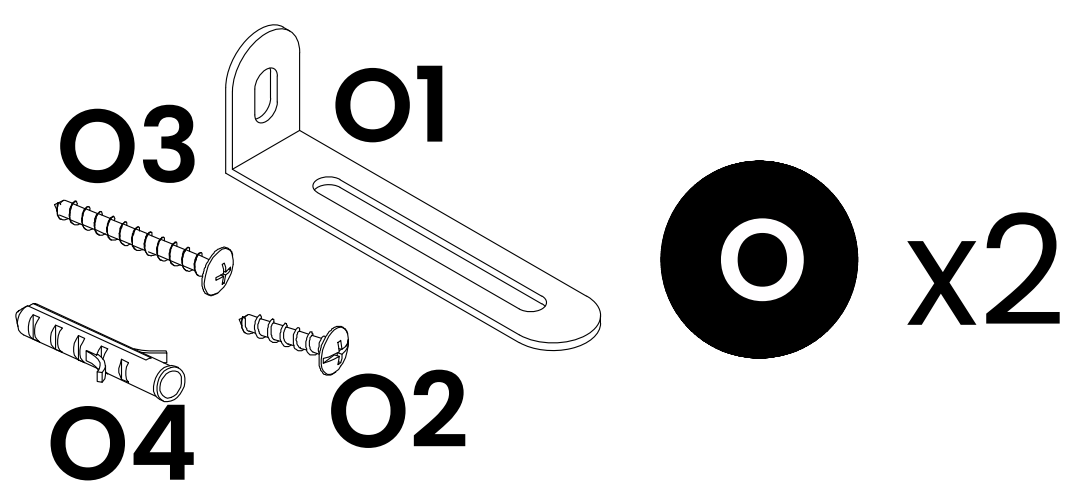
STEP 17

Wall-Mounted Installation

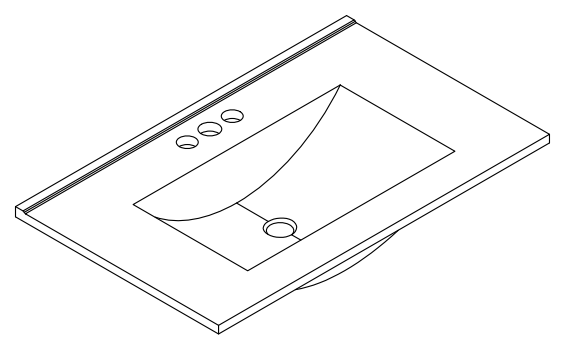
Step 1: Identify the correct location for the anti-tipping device on the wall and make a clear mark.

Step 2: Drill a hole, then fix the expansion plug firmly in the wall.

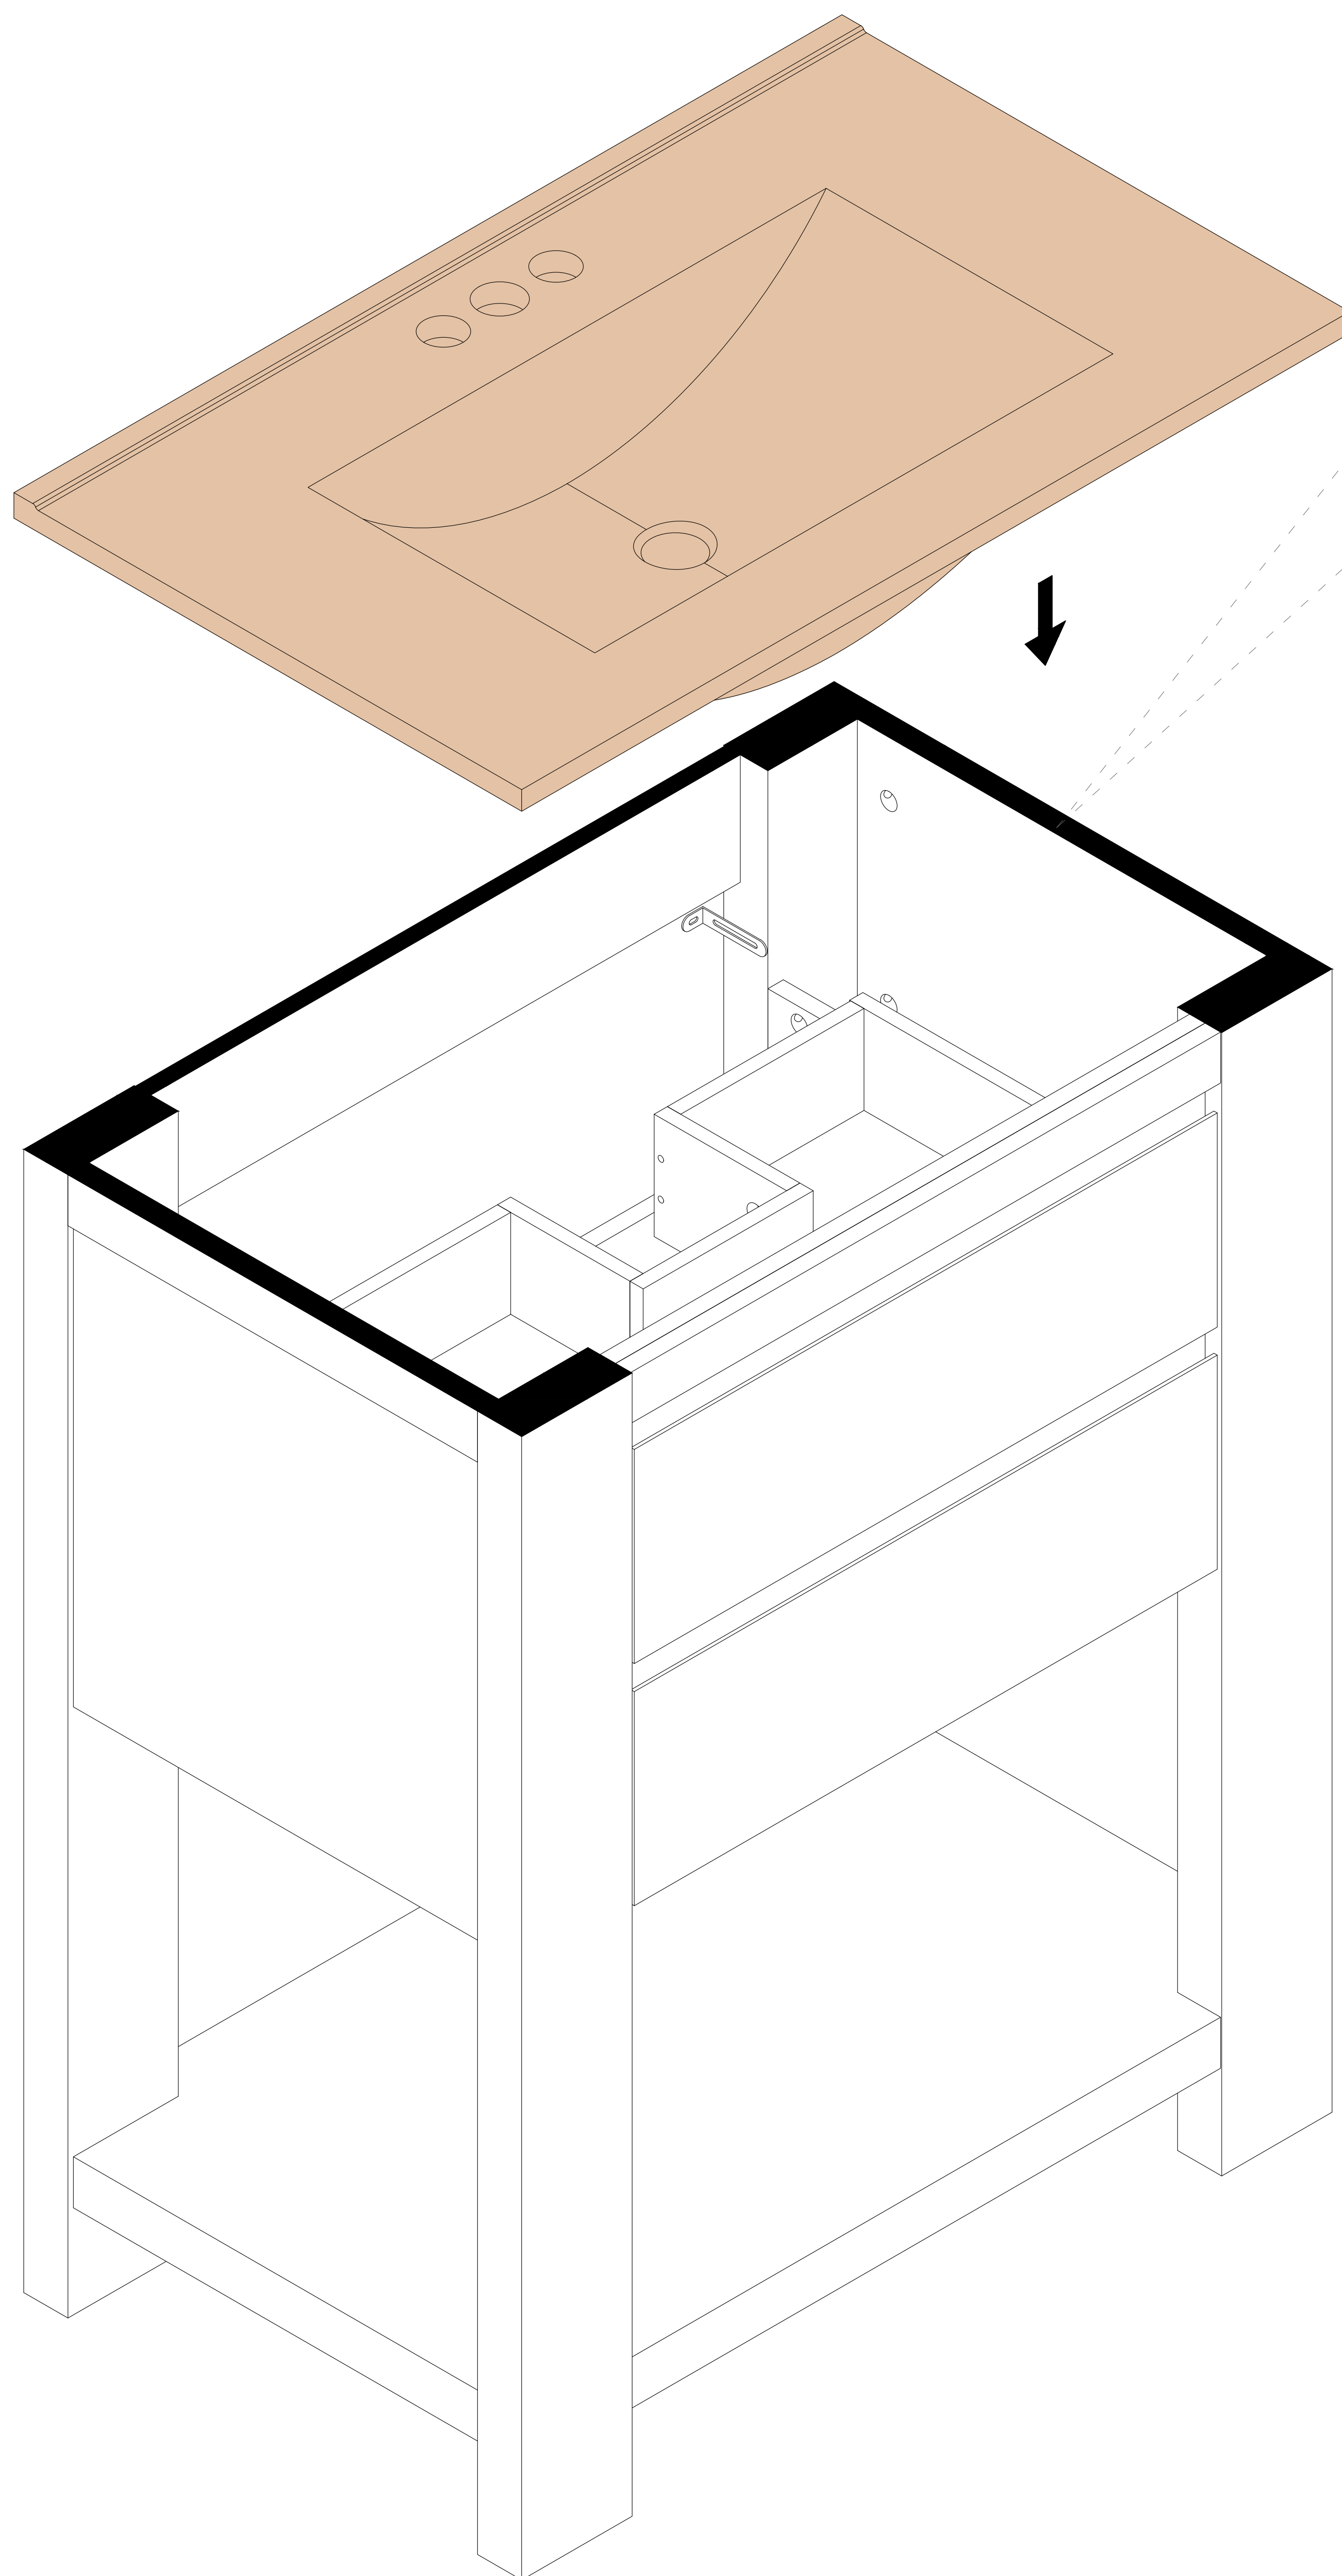
Step 3: Use screws to attach the L-shaped angle bracket to the wall.



STEP 18



x1



***Apply stain free silicone or latex silicone caulk (not included) to the top edge of vanity. With the help of another adult, gently lower top onto the vanity. Wipe away any excess caulk with a soft cloth, and wait approximately 24 hours for it to dry.**



After-Sales Service Hotline: (800) 661-5928