

ASSEMBLY INSTRUCTION

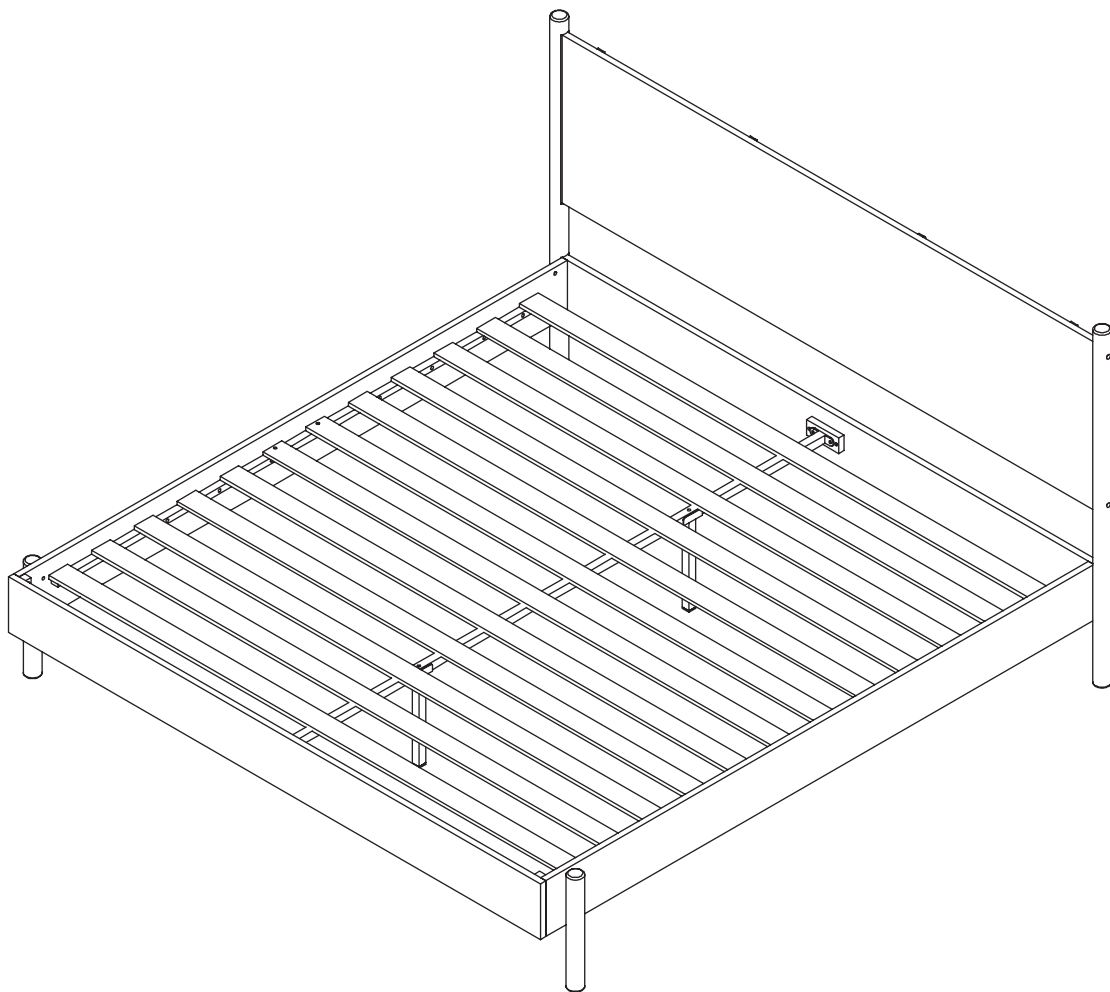
LYRA BED FRAME KING/QUEEN SIZE



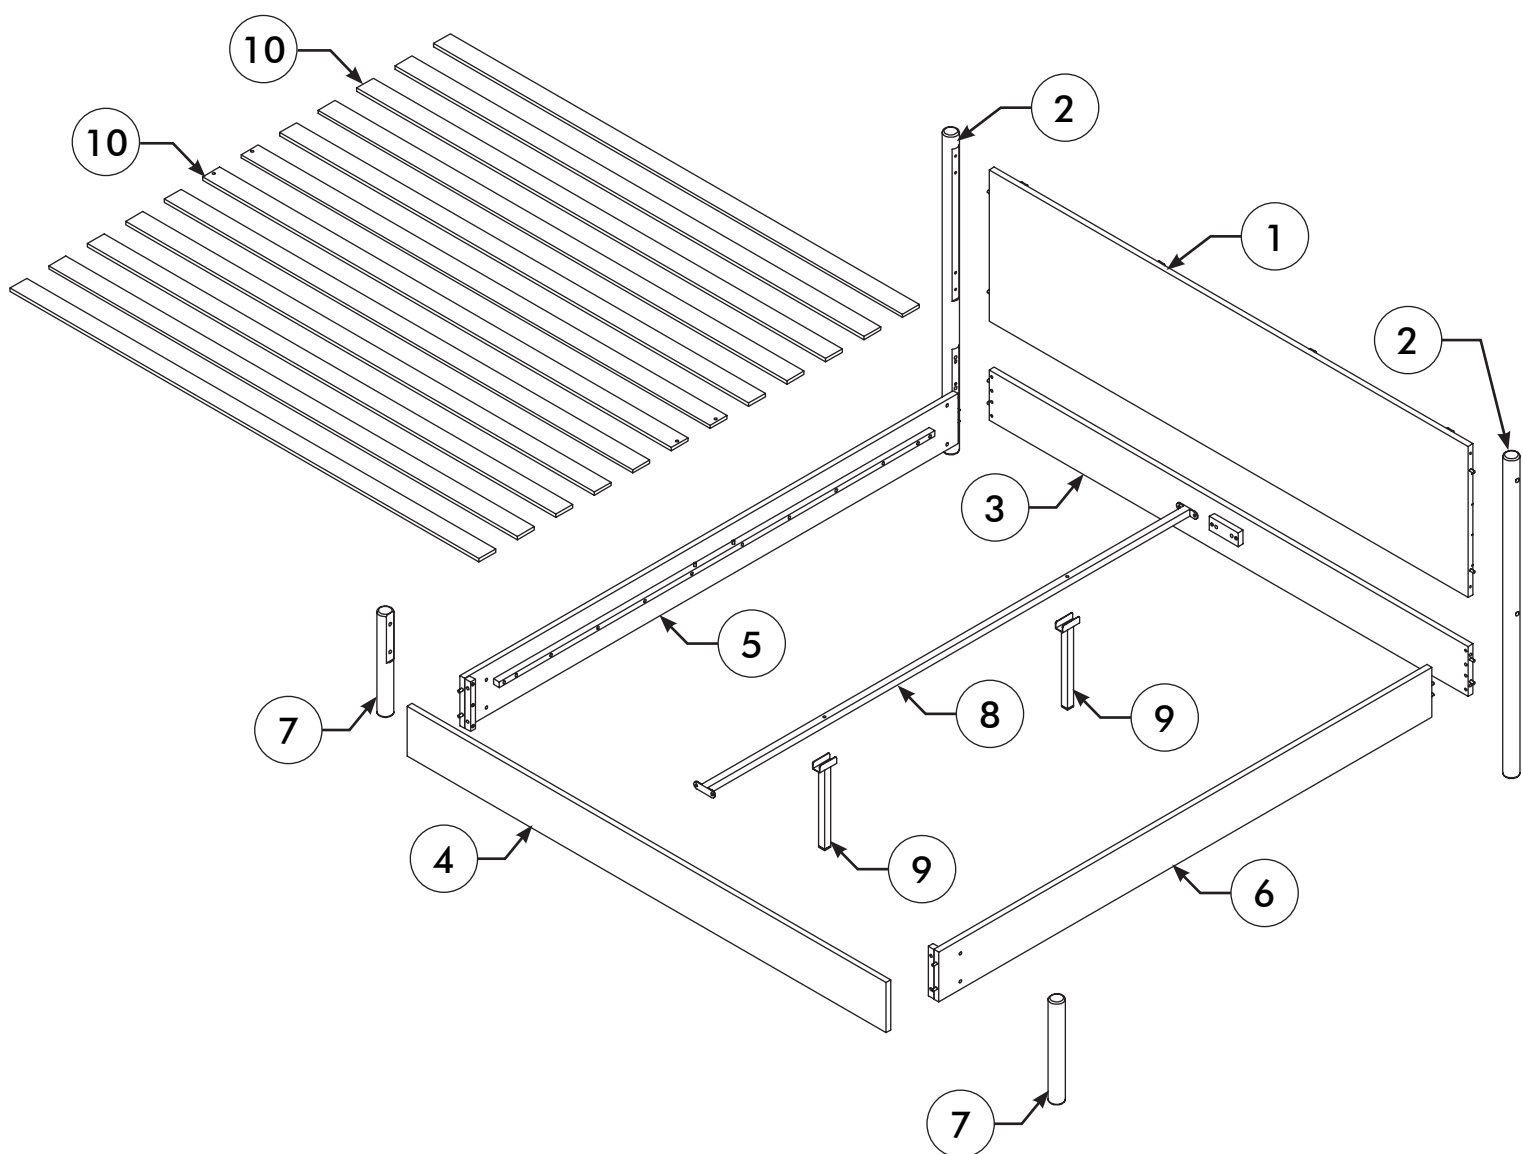
45 min



Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts list below.












NOTICE: DO NOT use the power tools for assembly.
This can cause the bolts to be over tightened.
DO NOT over tighten hardware, damage may occur.

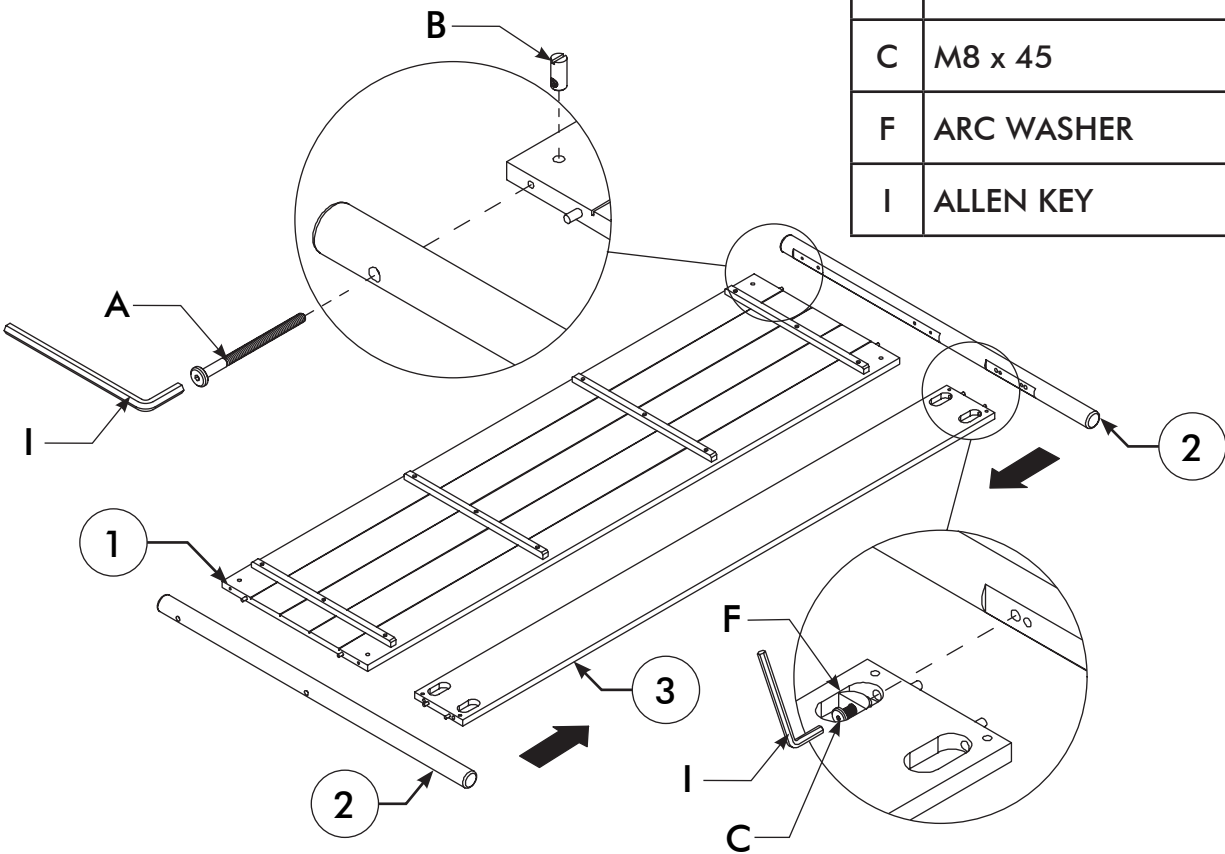







THE PART LAYOUT

HARDWARE

A	M6 x 90		8 PCS
B	DOWEL NUT		8 PCS
C	M8 x 45		4 PCS
D	M8 x 35		10 PCS
E	M8 x 20		4 PCS
F	ARC WASHER		4 PCS
G	2 x Ø8.5 x Ø22		14 PCS
H	2 x Ø6.5 x Ø19		4 PCS
I	ALLEN KEY		1 PC

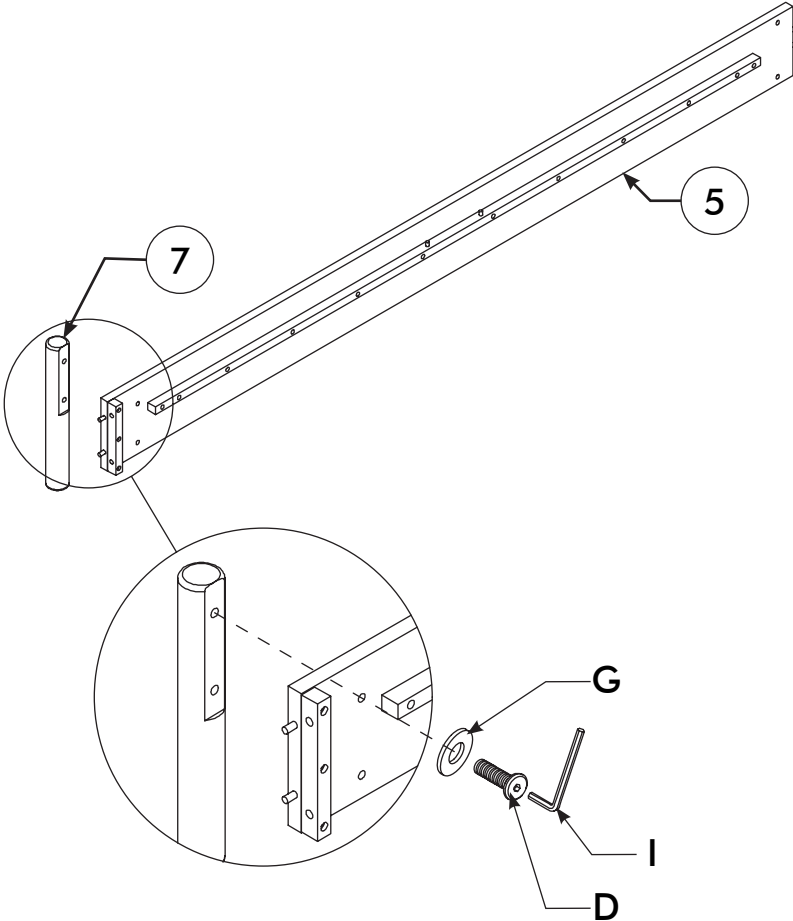
STEP 1 LAY THE HEAD BOARD FACE DOWN ON THE GROUND BEFORE ASSEMBLING.






A	M6 x 90		8 PCS
B	DOWEL NUT		8 PCS
C	M8 x 45		4 PCS
F	ARC WASHER		4 PCS
I	ALLEN KEY		1 PC




NOTICE: When assembling, place all parts on a soft, clean, and flat surface such as a carpet to prevent scratches

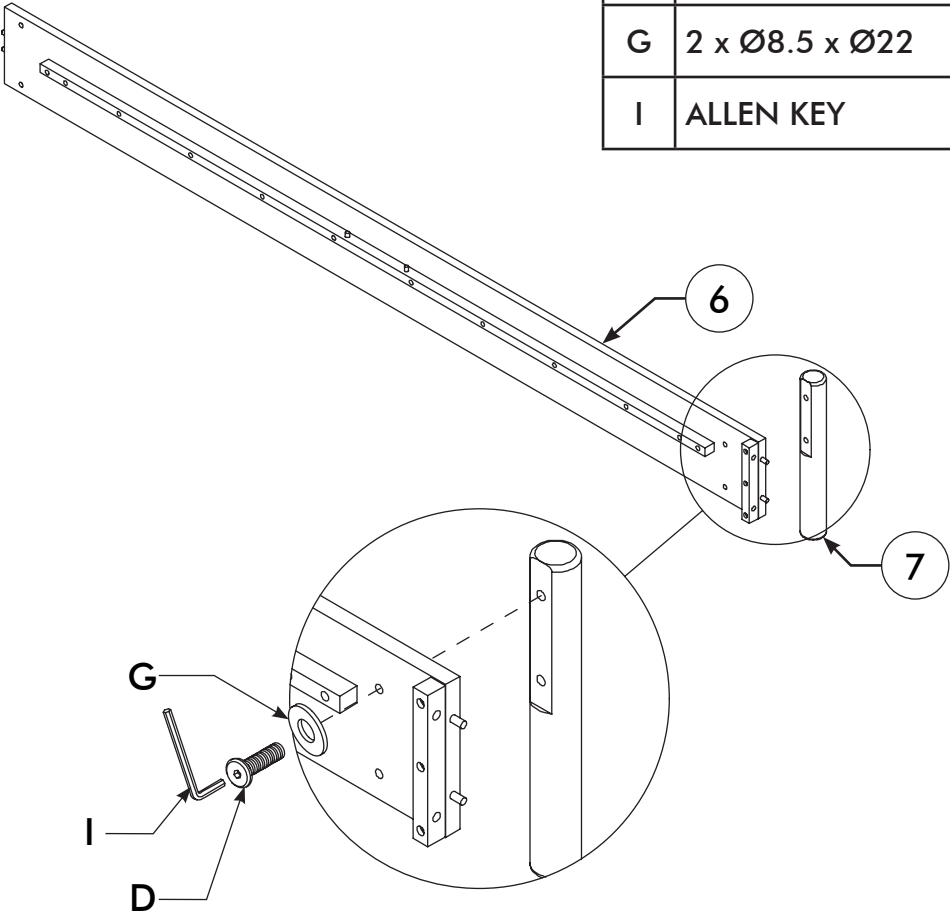
STEP 2







D	M8 x 35		2 PCS
G	2 x Ø8.5 x Ø22		2 PCS
I	ALLEN KEY		1 PC

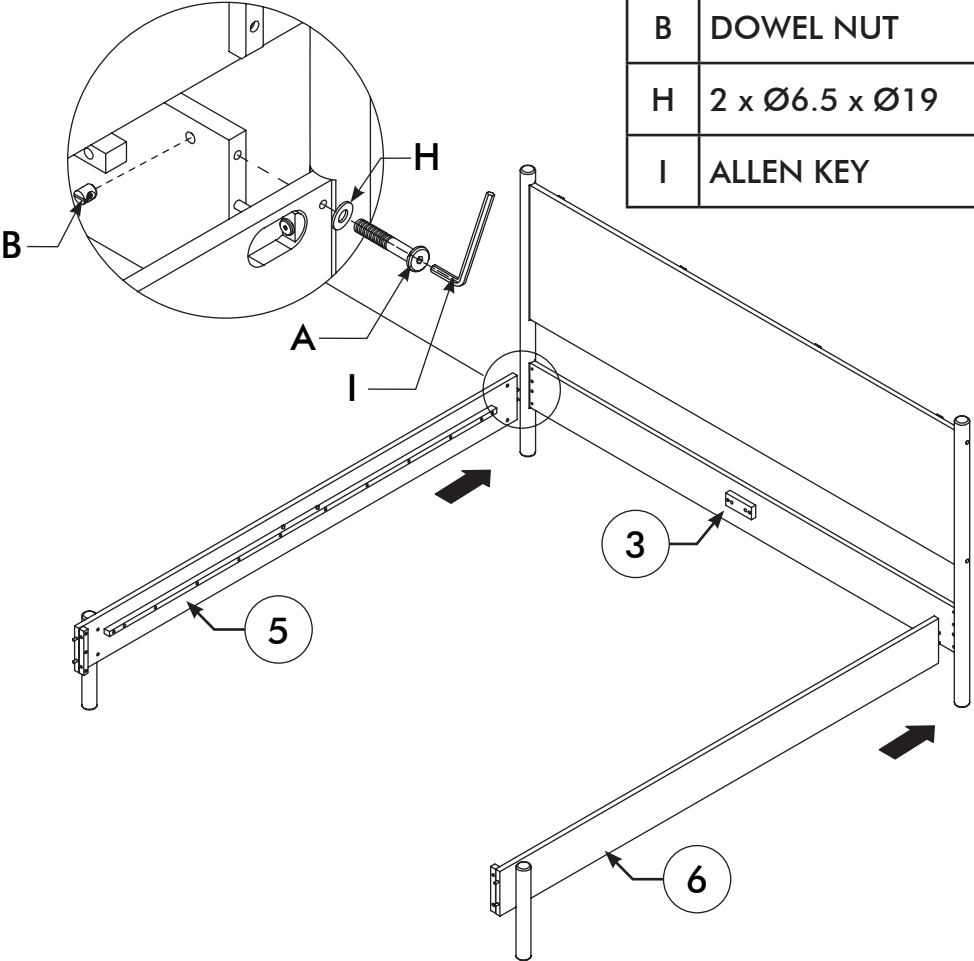
STEP 3

D	M8 x 35		2 PCS
G	2 x Ø8.5 x Ø22		2 PCS
I	ALLEN KEY		1 PC






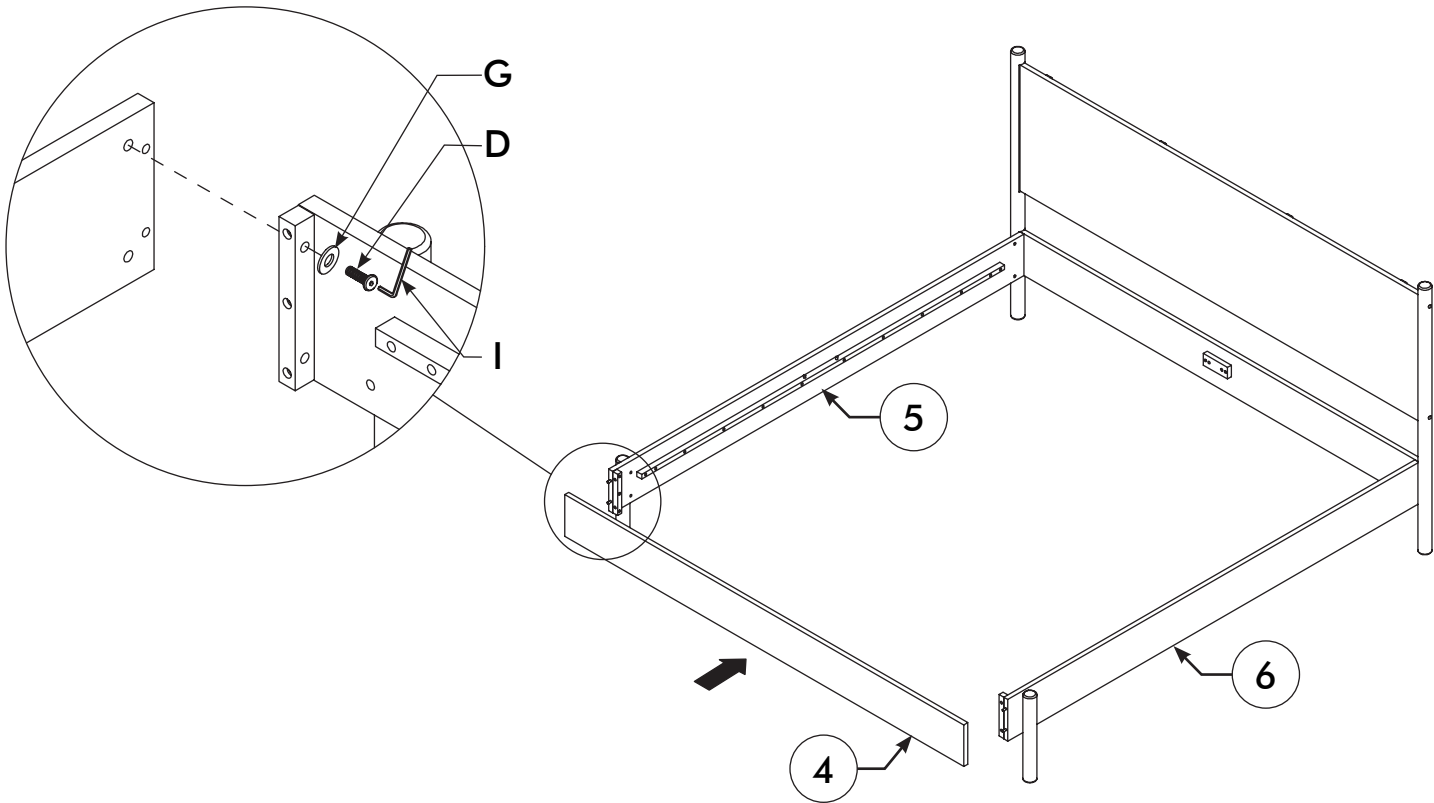
STEP 4

A	M6 x 90		4 PCS
B	DOWEL NUT		4 PCS
H	2 x Ø6.5 x Ø19		4 PCS
I	ALLEN KEY		1 PC






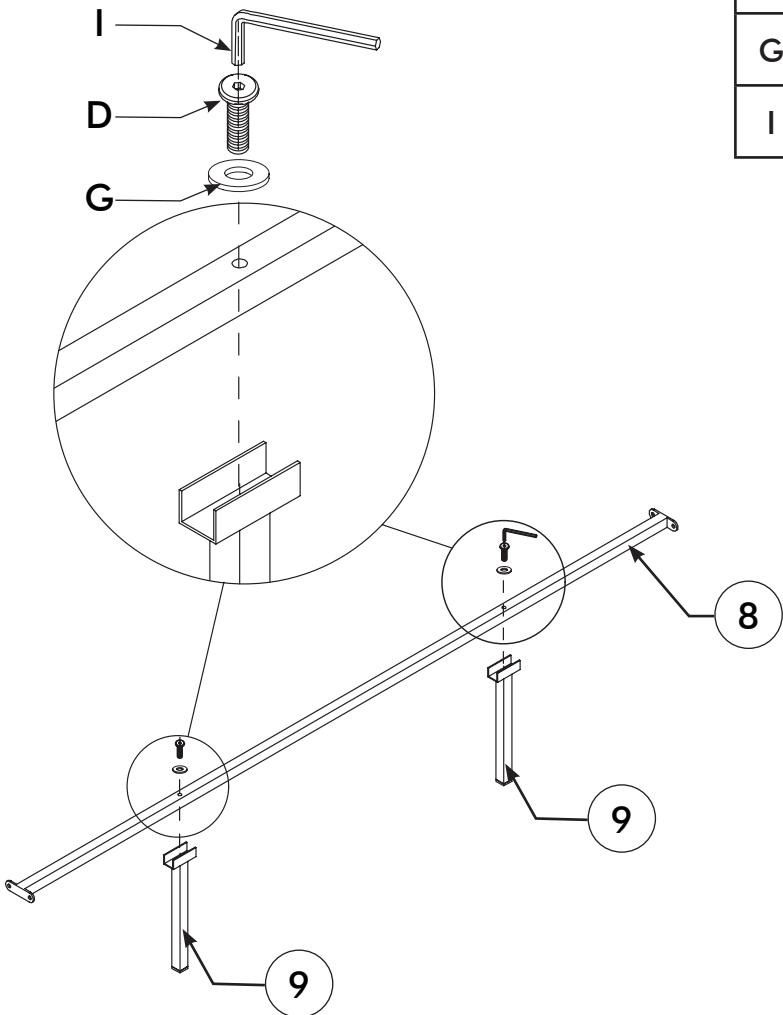
STEP 5

D	M8 x 35		4 PCS
G	2 x Ø8.5 x Ø22		4 PCS
H	ALLEN KEY		1 PC






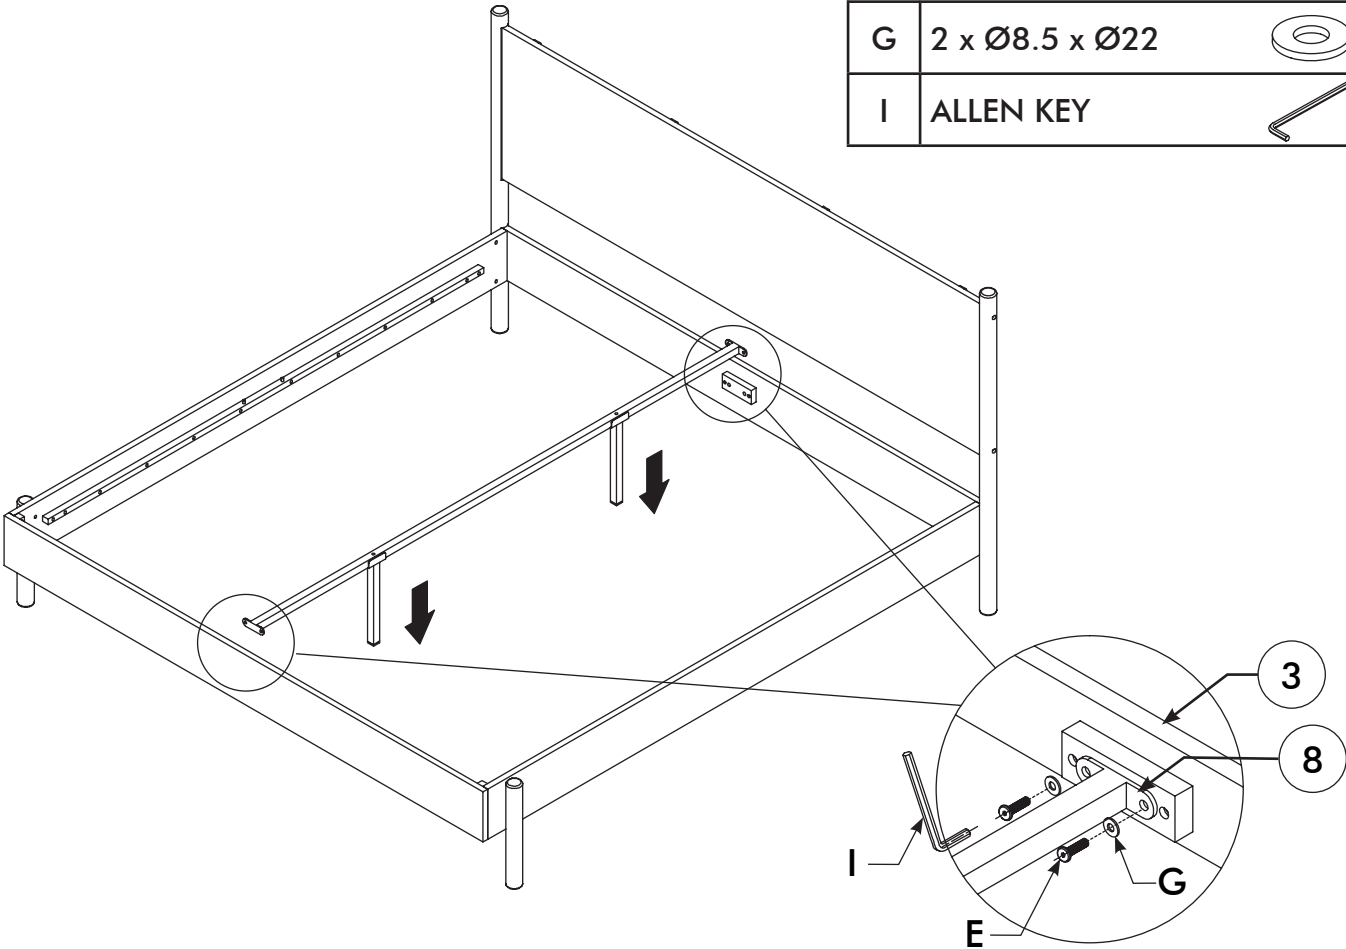
STEP 6

D	M8 x 35		2 PCS
G	2 x Ø8.5 x Ø22		2 PCS
I	ALLEN KEY		1 PC

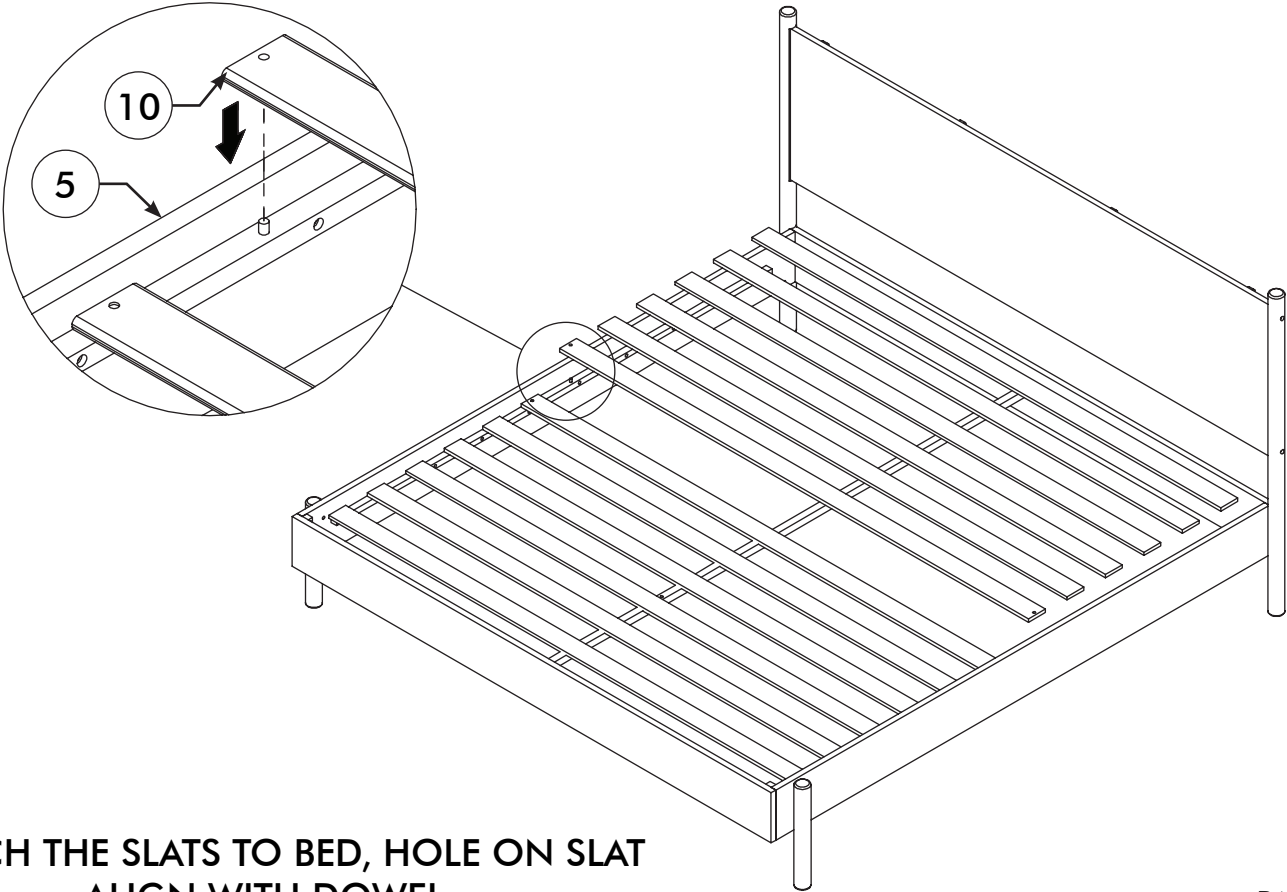


STEP 7

E	M8 x 20		4 PCS
G	2 x Ø8.5 x Ø22		4 PCS
I	ALLEN KEY		1 PC



STEP 8



ATTACH THE SLATS TO BED, HOLE ON SLAT
ALIGN WITH DOWEL.