


Assembly Instructions

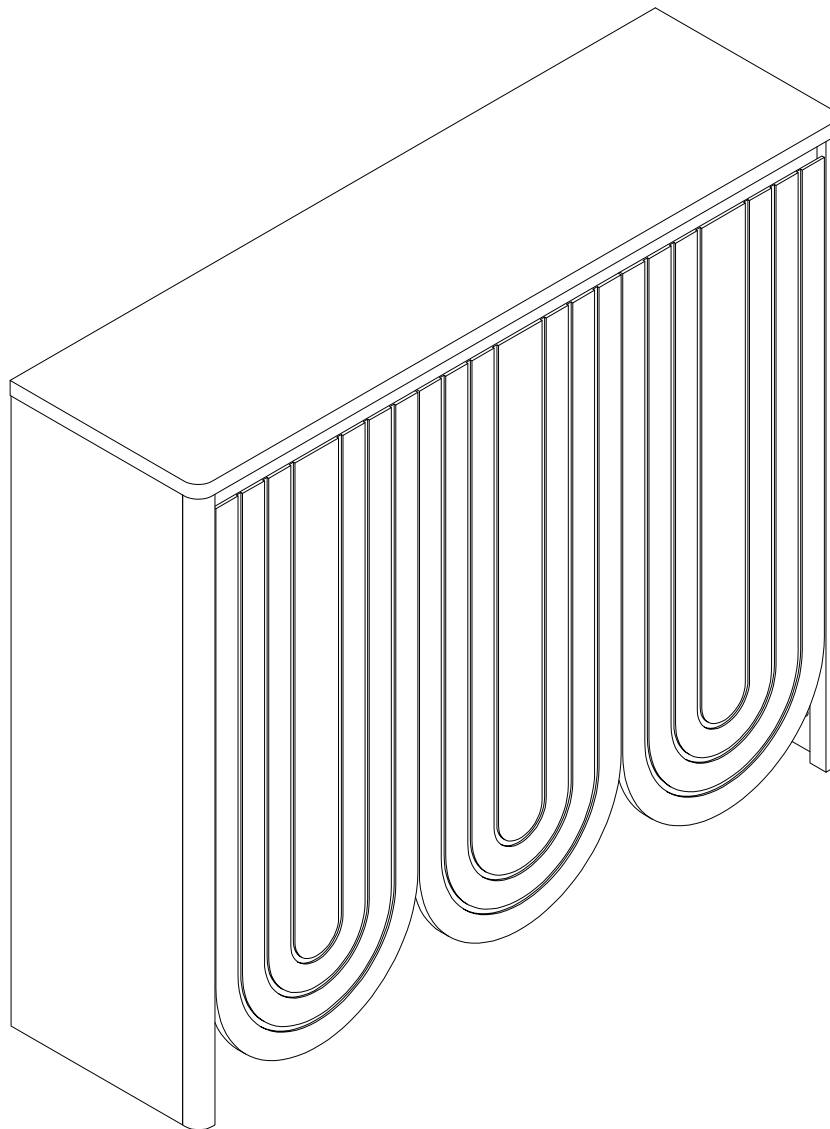

“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”


Before Assembly

1. Assembly requires two or more people to complete.
2. Using power tools will make the installation finish faster.

Tips Before Your Start:


- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until the assembly is completely assembled.
- Keep all hardware parts out of reach of children.

QUICKFIT

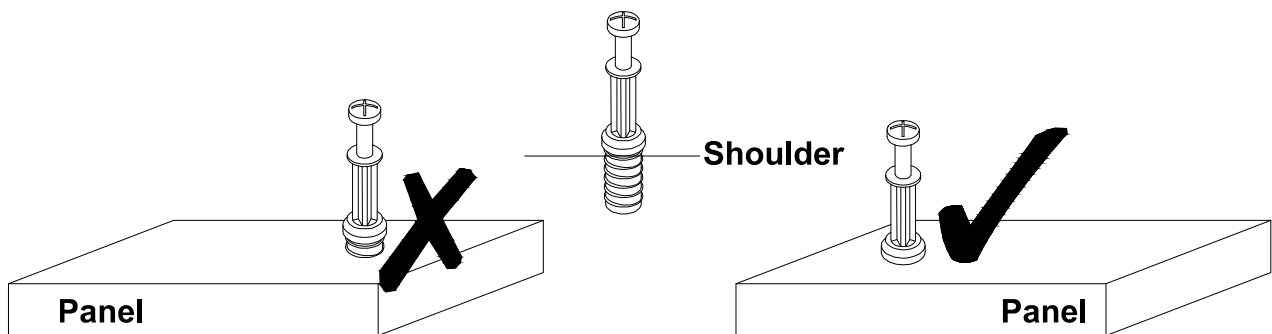


Tighten quickfit until shoulder is flush with panel. Do not overtighten or undertighten.

CAM LOCK

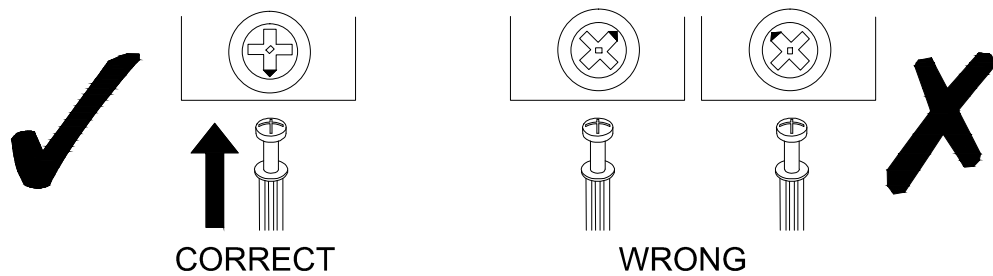


When fitting a cam lock, ensure the starting position is correct before inserting the connecting QUI CKFIT

"Ensure the arrow on the Cam Lock (B) is pointing towards the hole for the Cam Lock Dowel (A) before inserting."

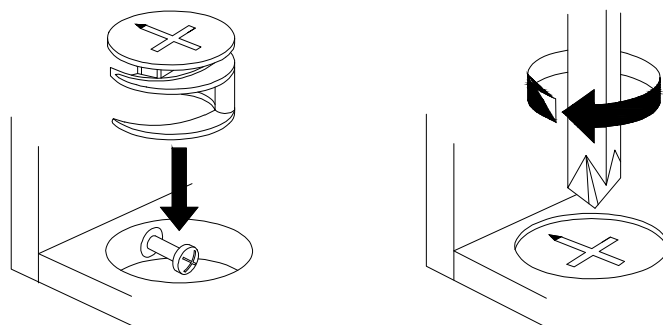

Turn cam lock clockwise to tighten.

Product structure








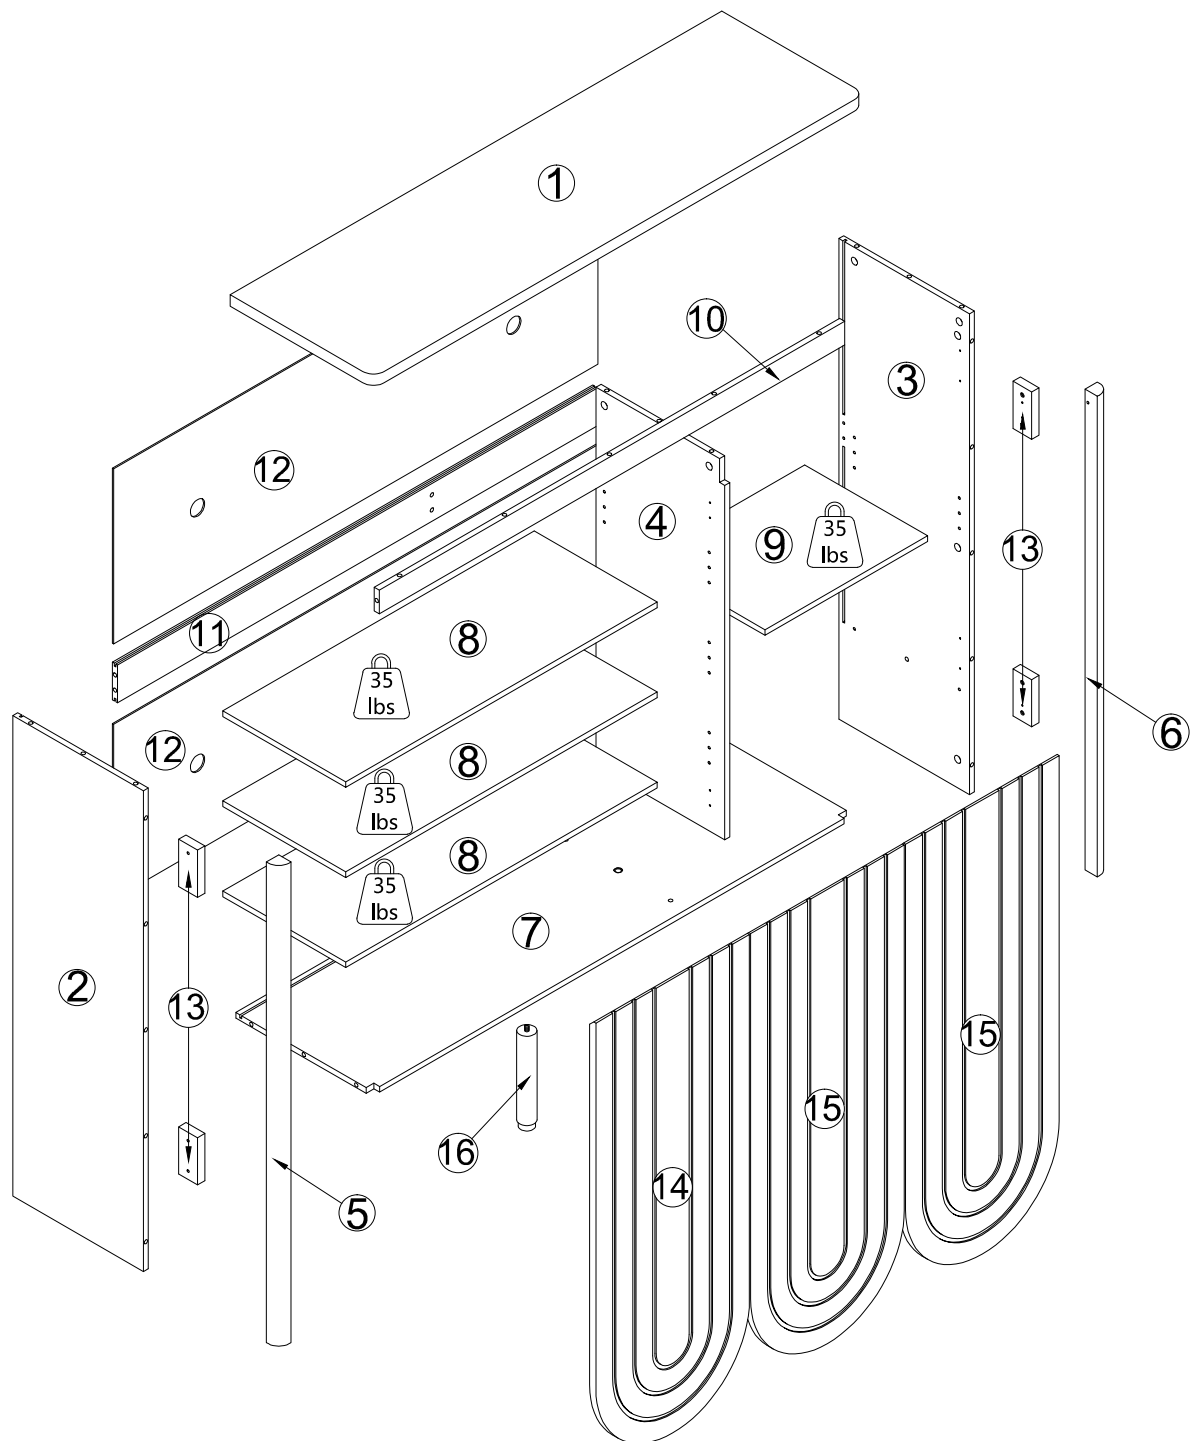


"Assemble on a soft surface, such as a carpet or the original packaging box, to avoid scratches to the panels."


Part List



“Please check all parts and hardware against the list before assembly. If any parts are missing or damaged, please contact us immediately.”

No. A Quantity:25 Pcs Cam Lock Dowel 8*28mm 	No. B Quantity:25 Pcs Cam φ15 	No. C Quantity:25 Pcs Sticker Ø20 	No. D Quantity:11 Pcs Dowel 8*30mm 
No. E Quantity:2 Pcs Straight Bend Door Hinge 	No. F Quantity:4 Pcs Large Curved Door Hinge 	No. G Quantity:36 Pcs Screw M3.5*14mm 	No. H Quantity:4 Pcs Screw M6*40mm 
No. I Quantity:4 Pcs Foot Pad Ø15 	No. J Quantity:16 Pcs Shelf Support M5*15mm 	No. K Quantity:1 Pc Allen Key 4# 	No. L Quantity:1 Pc Adjust The Foot 
No. M Quantity:8 Pcs Screw M3.5*20mm 	No. N Quantity:8 Sets Plastic Wedge 	No. O Quantity:1 Sets Anti-falling Parts 	


STEP 1

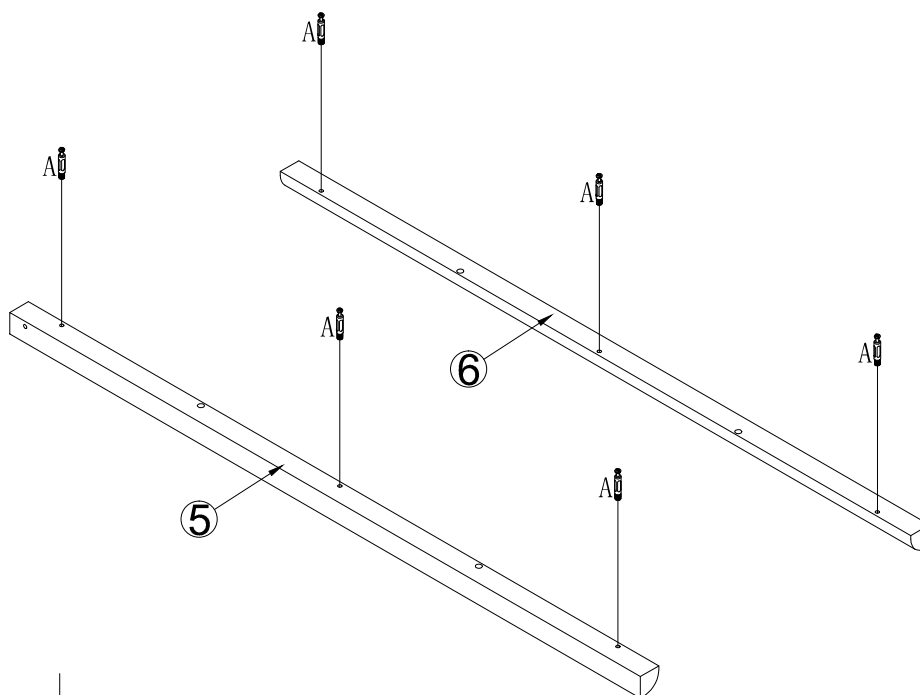

No. A
Quantity: 6 Pcs
8*28 mm



STEP 2

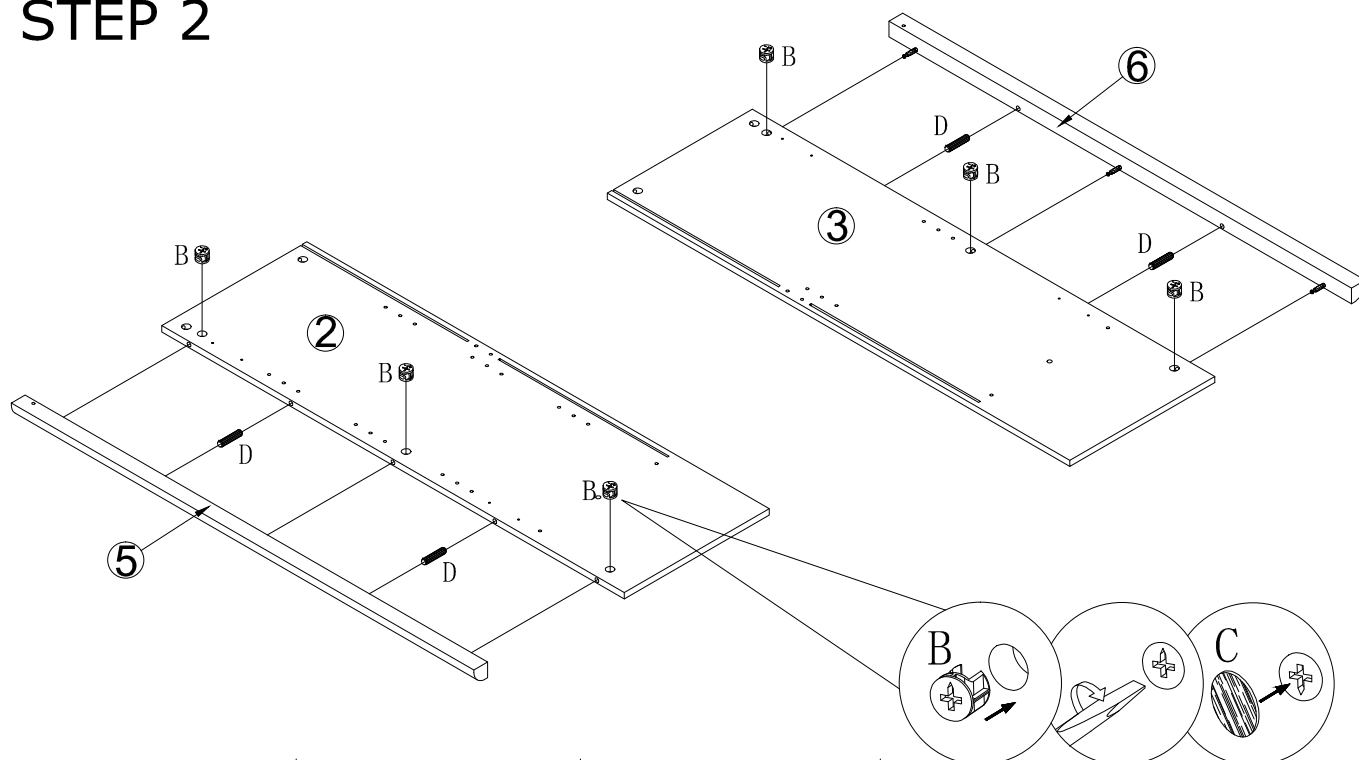


No. B
Quantity: 6 Pcs
Ø15




No. C
Quantity: 6 Pcs
Ø20




No. D
Quantity: 4 Pcs
8*30mm



STEP 3

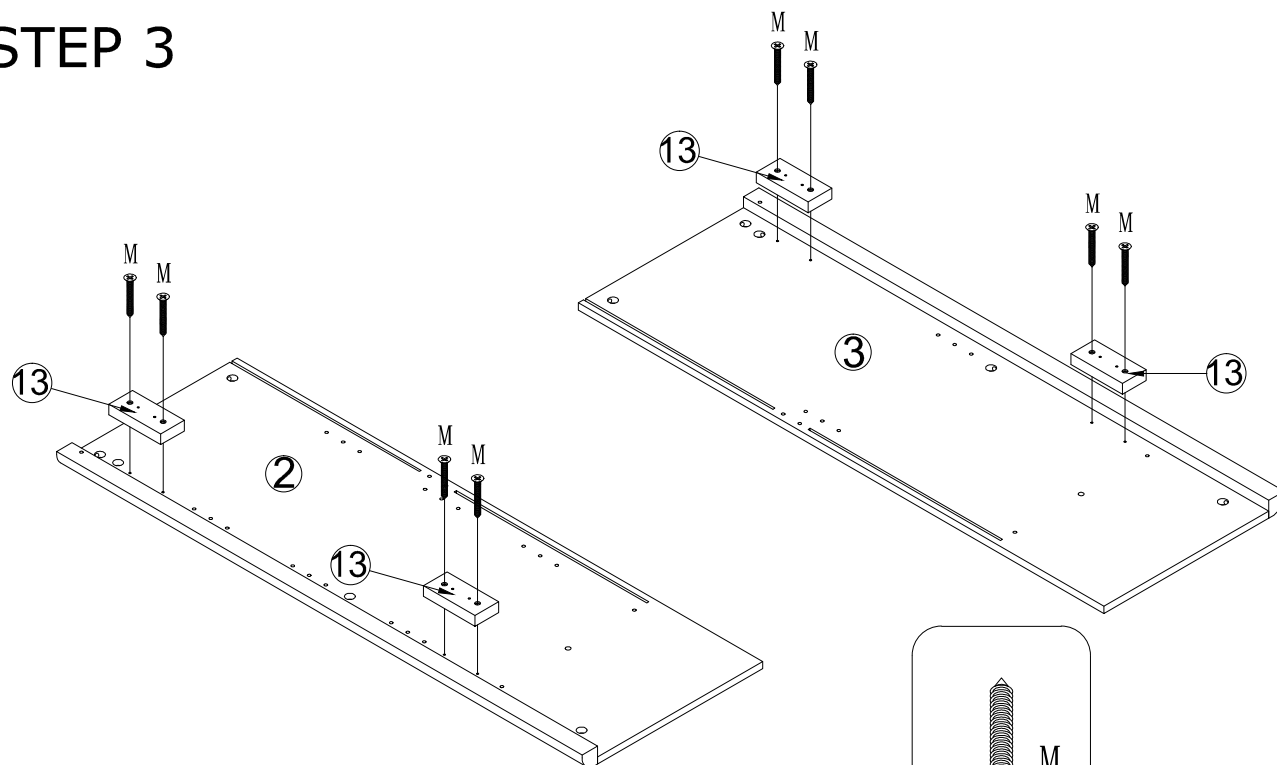


No. M
Quantity: 8 Pcs
M3.5*20mm



The screw length in the diagram is 1:1;
compare the length first before installation.


STEP 4

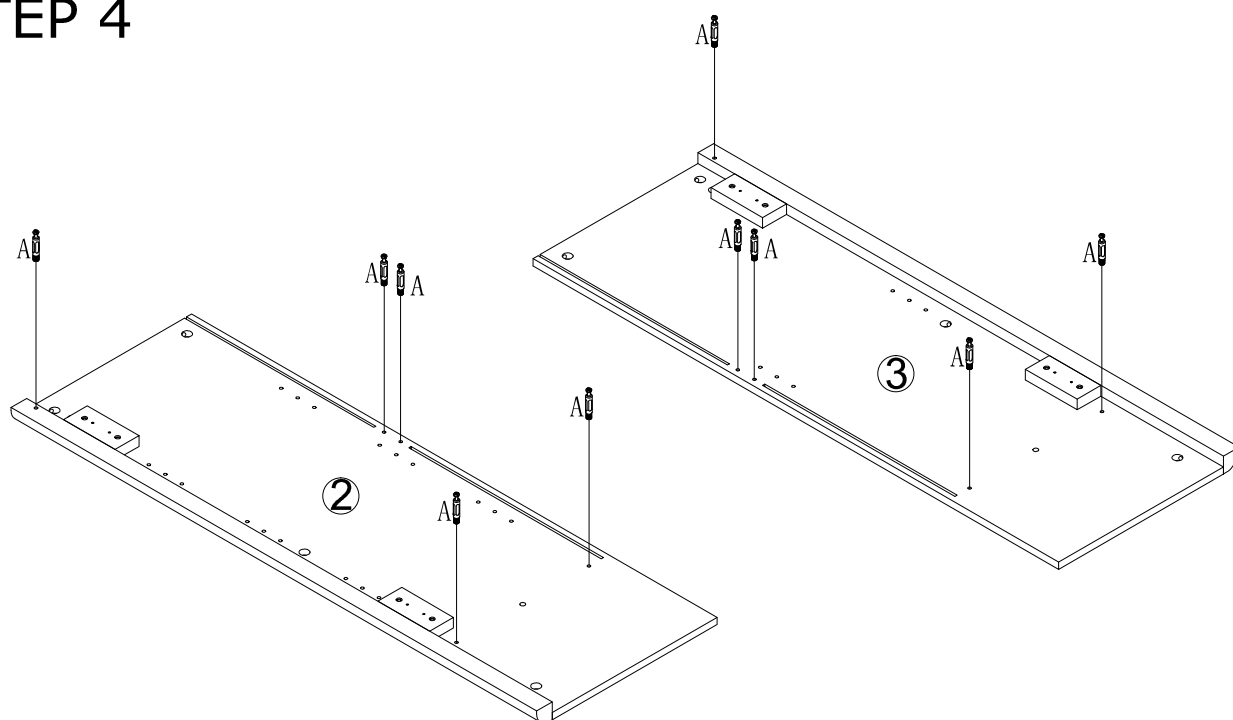

No. A
Quantity: 10 Pcs
8*28 mm





STEP 5

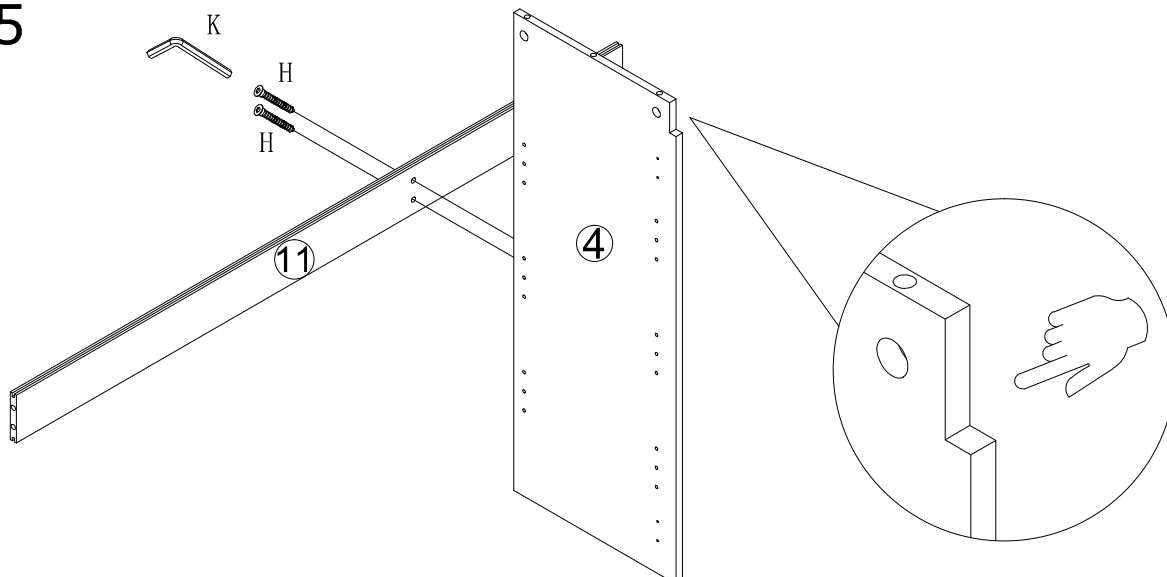

No. H
Quantity: 2 Pcs
M6*40mm




No. K
Quantity: 1 Pc
4#

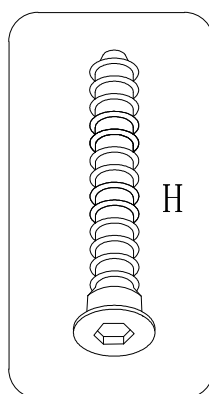

The screw length in the diagram is 1:1; compare the length first before installation.


STEP 6

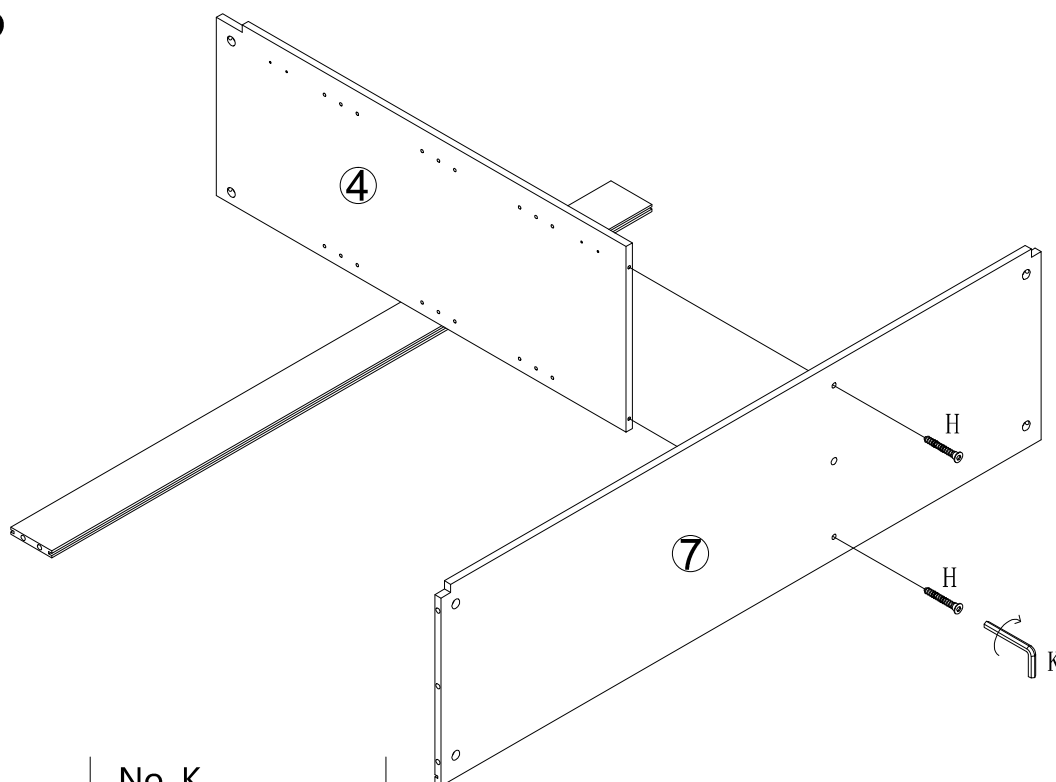


No. H
Quantity: 2 Pcs
M6*40mm



No. K
Quantity: 1 Pc
4#



STEP 7

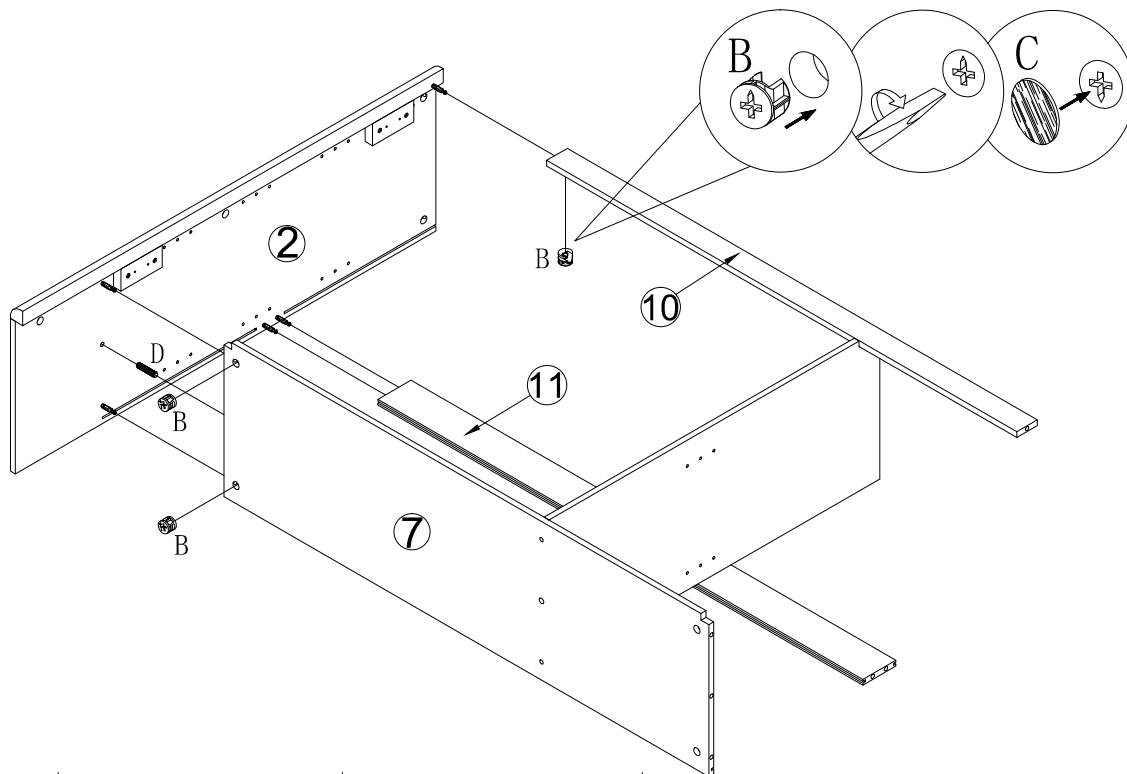


No. B
Quantity: 3 Pcs
Ø15




No. C
Quantity: 3 Pcs
Ø20




No. D
Quantity: 1 Pcs
8*30mm



STEP 8

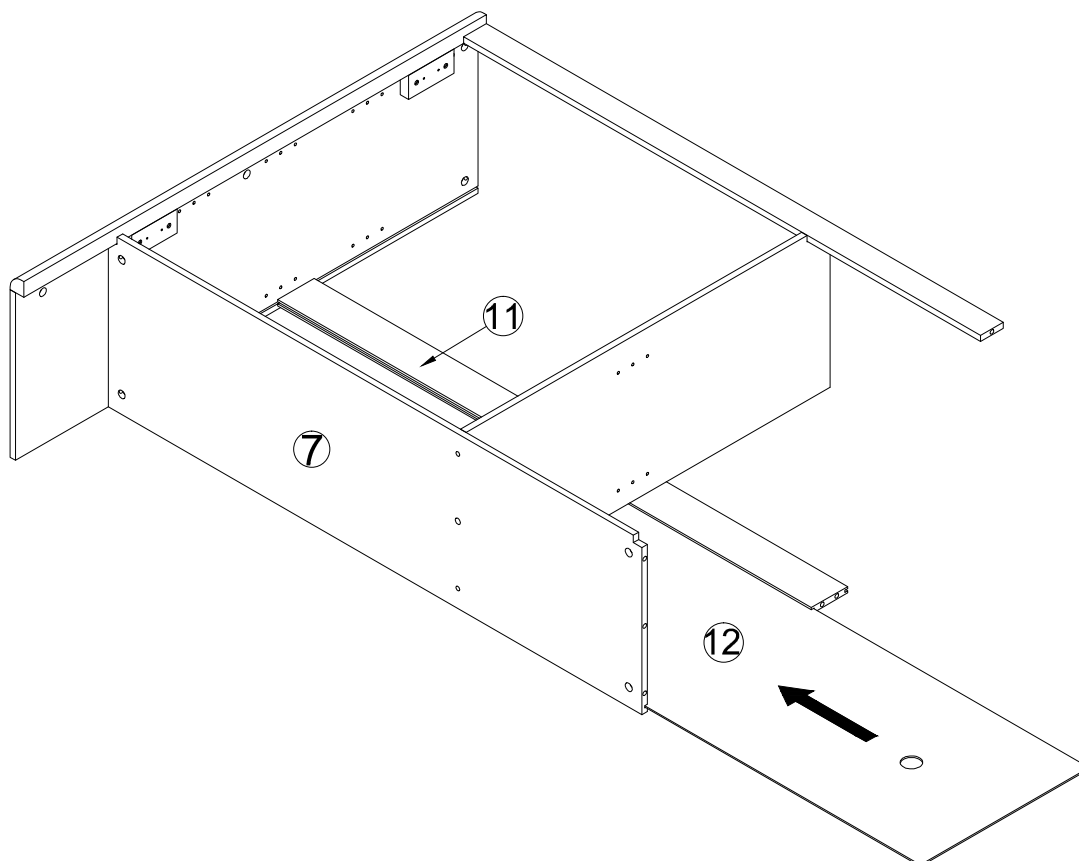

STEP 9

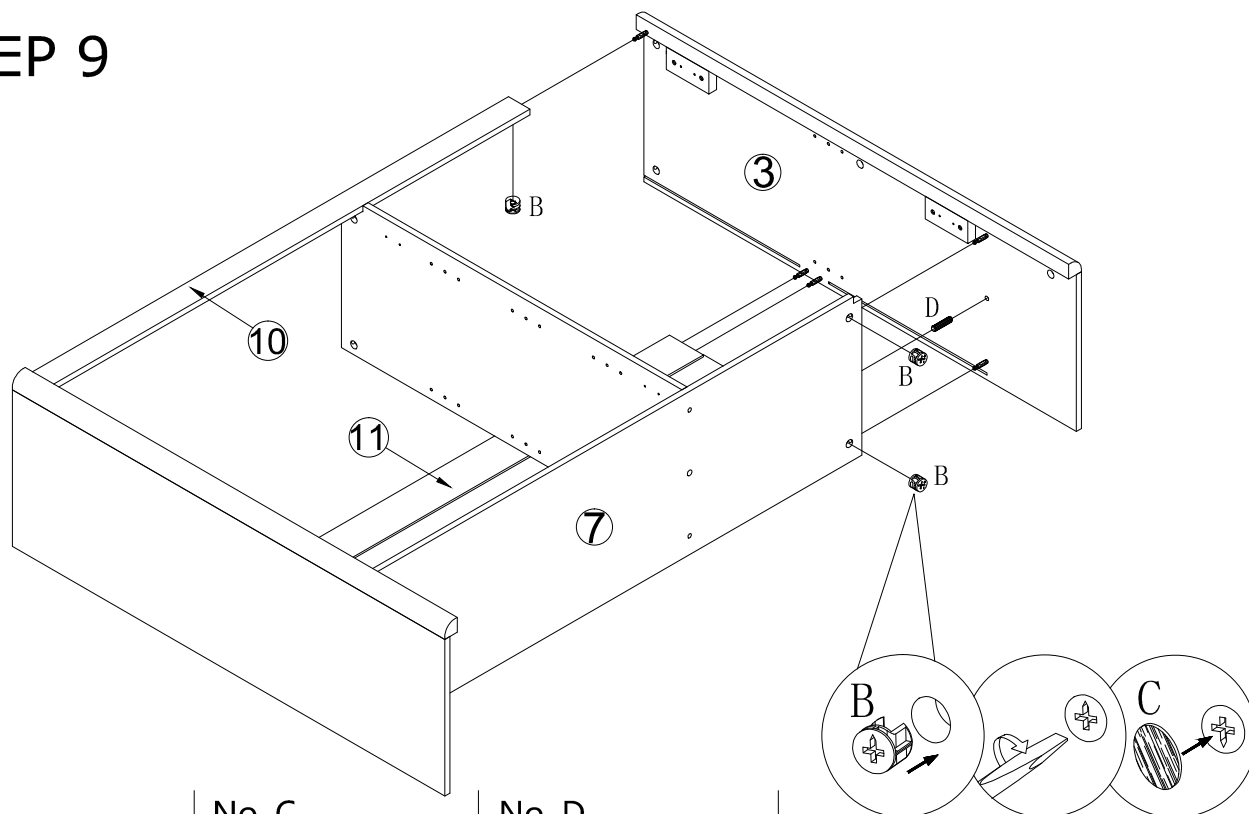


No. B
Quantity: 3 Pcs
Ø15




No. C
Quantity: 3 Pcs
Ø20



No. D
Quantity: 1 Pcs
8*30mm



STEP 10

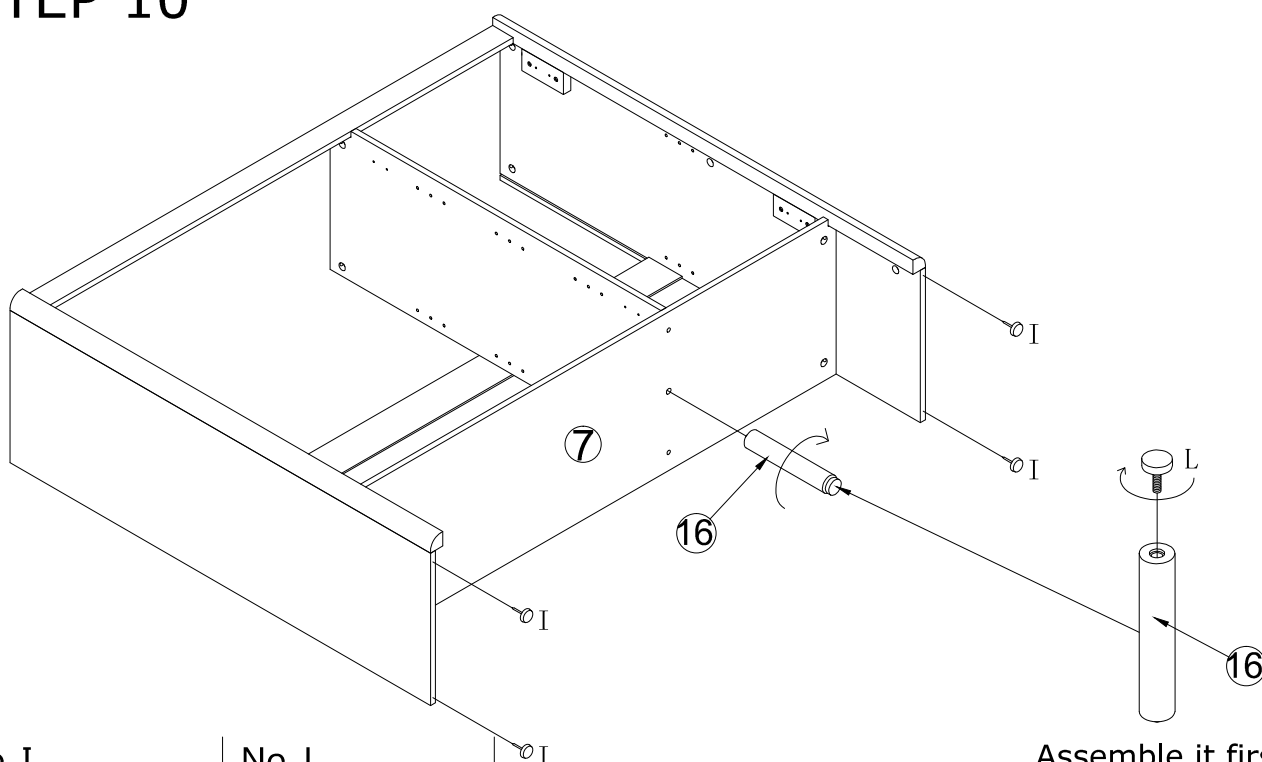

No. I
Quantity: 4 Pcs
Ø15



No. L
Quantity: 1 Pc




Assemble it first

STEP 11


No. B
Quantity: 4 Pcs
Ø15




No. C
Quantity: 4 Pcs
Ø20

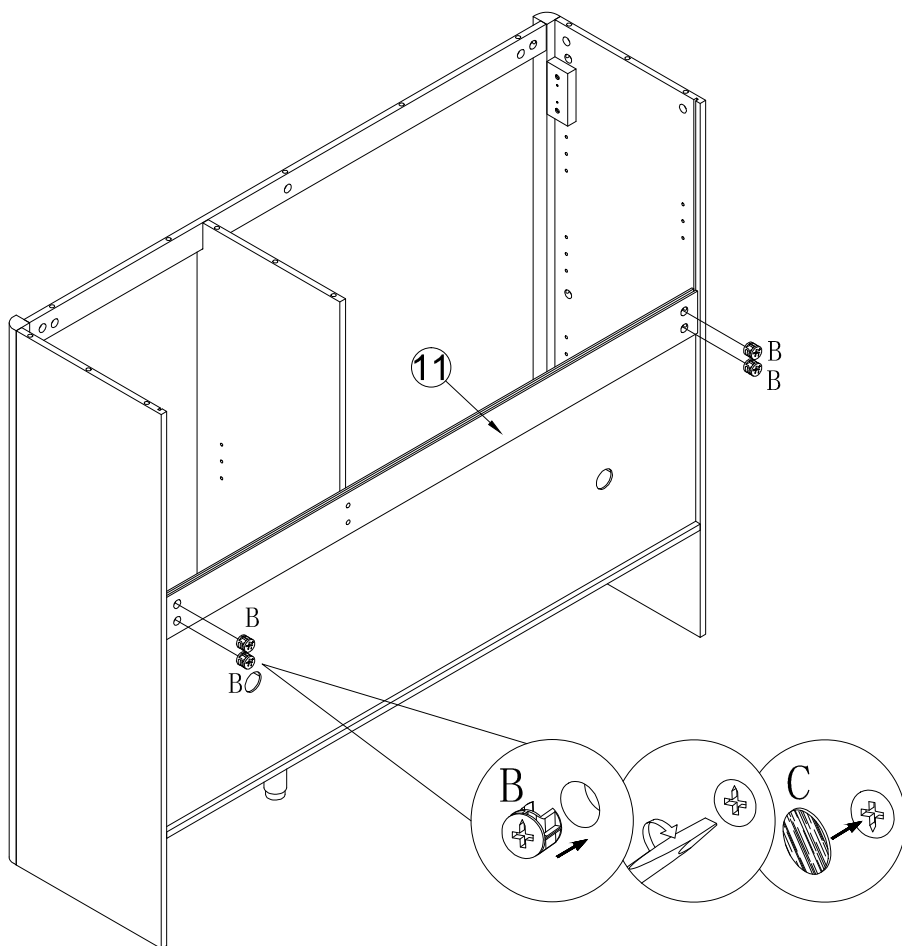

STEP 12

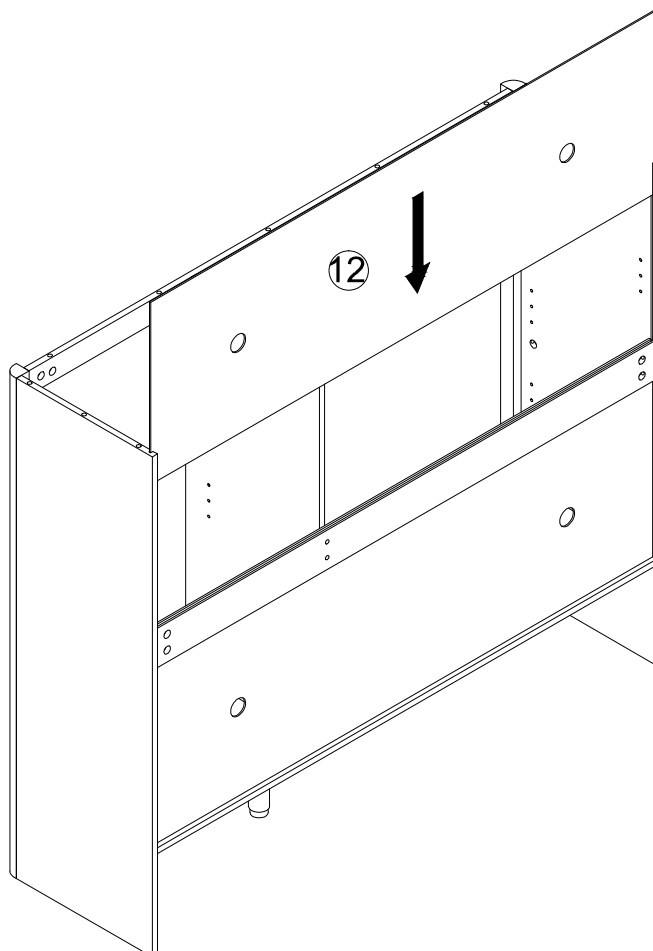


STEP 13

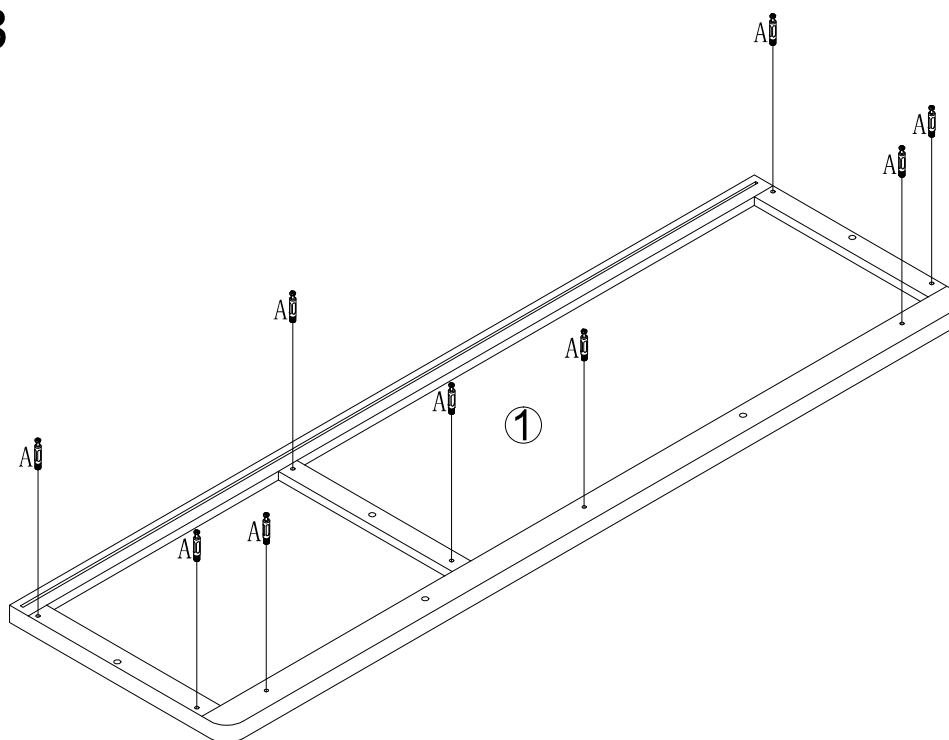

No. A
Quantity: 9 Pcs
8*28 mm



STEP 14

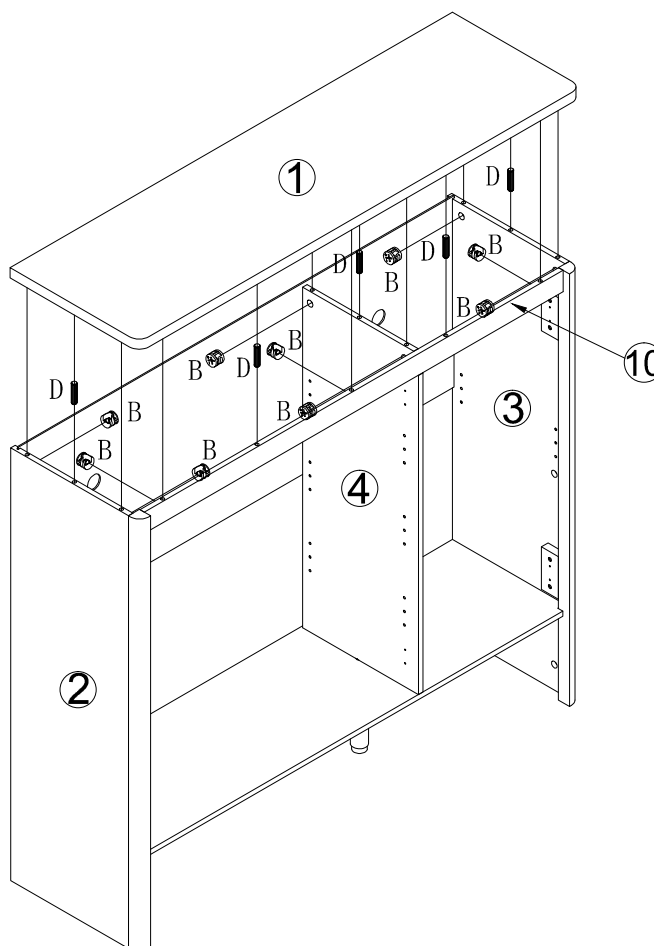


No. B
Quantity: 9 Pcs
Ø15




No. C
Quantity: 9 Pcs
Ø20



No. D
Quantity: 5 Pcs
8*30mm




STEP 15

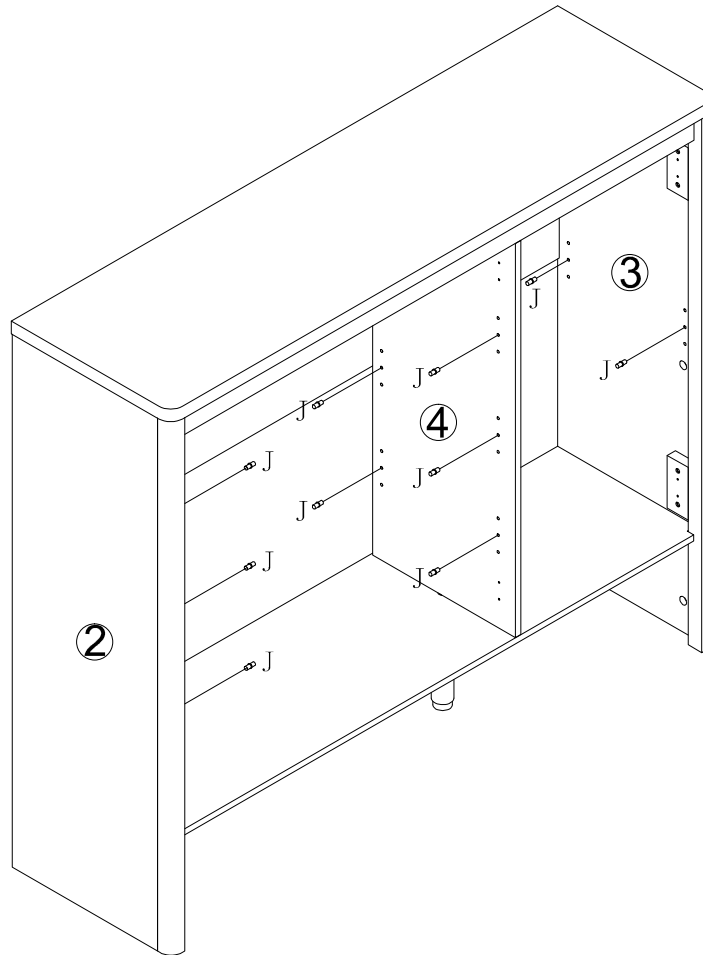

No. J
Quantity: 16 Pcs
M5*15mm




STEP 16


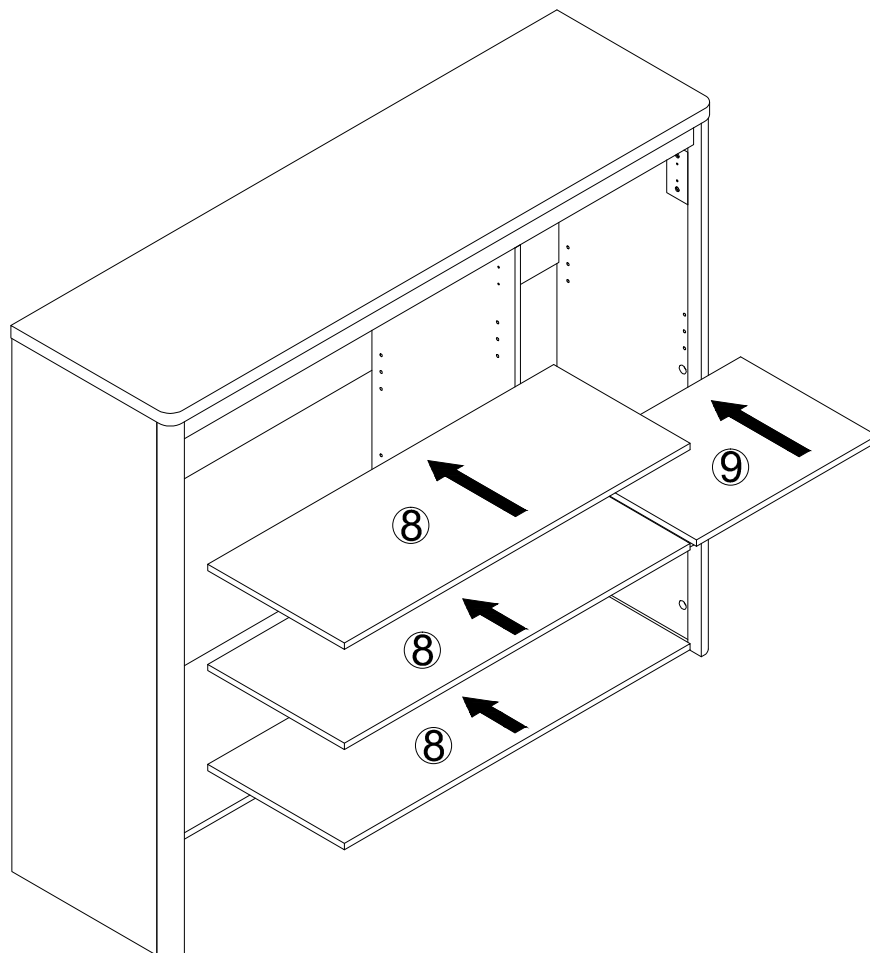


STEP 17

No. E
Quantity: 2 Pcs



No. G
Quantity: 4 Pcs
M3.5*14mm

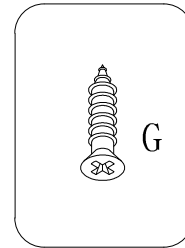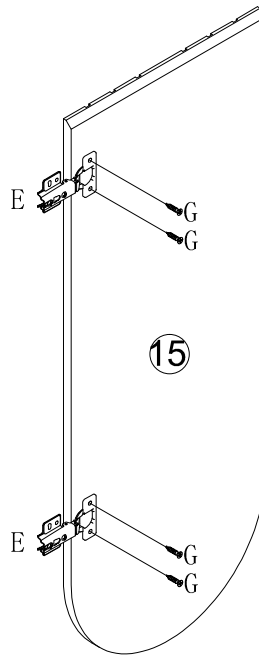


The screw length in the diagram is 1:1; compare the length first before installation.




We recommend using a manual screwdriver for the hinges. Power tools can easily strip the screws.

STEP 18

No. G
Quantity: 8 Pcs
M3.5*14mm

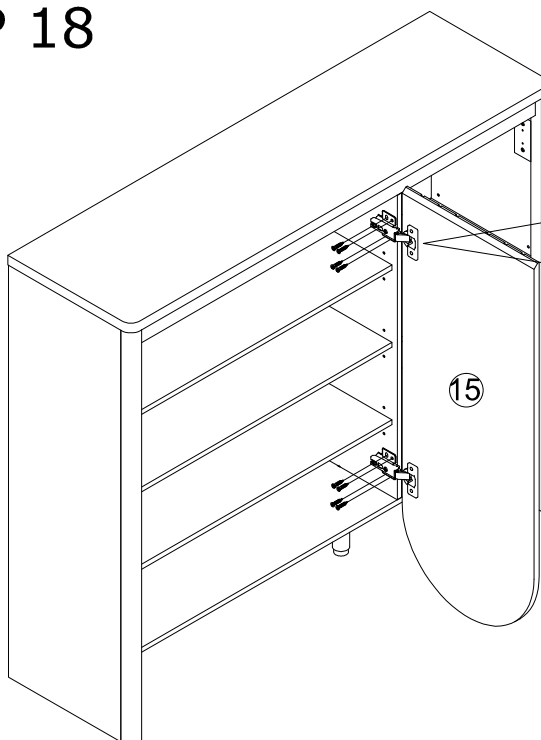


First, use screws to secure the two rear guide holes of the door hinge into the two guide holes of the side panel.

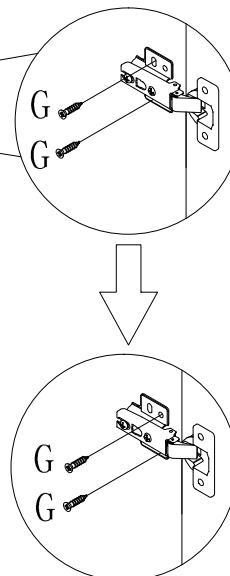


If you encounter difficulties during adjustment, please refer to the guidance on pages 13 and 14 to adjust the gaps of the cabinet doors. After making the gaps even, please tighten the two screws on the front side.

The way to adjust the door by hinge.


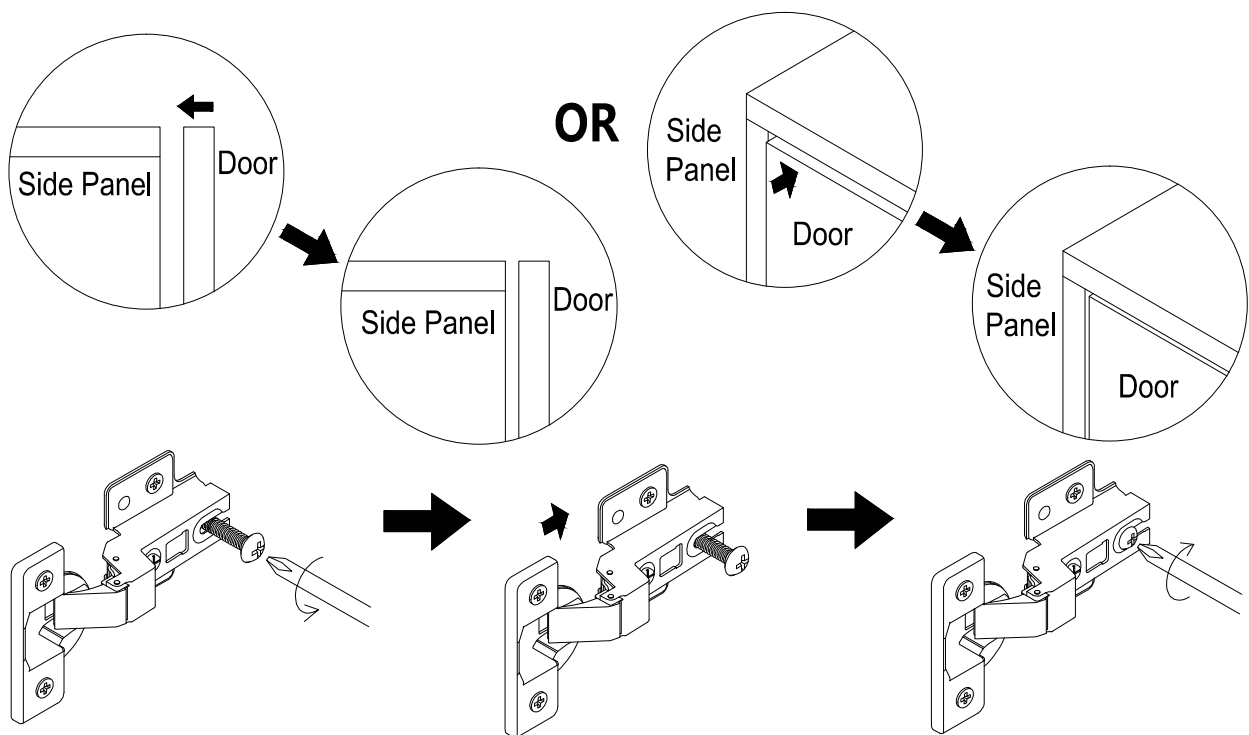


(In-and-Out Adjustment) : Adjust the front screw to ensure the door is flush with the cabinet side panel.


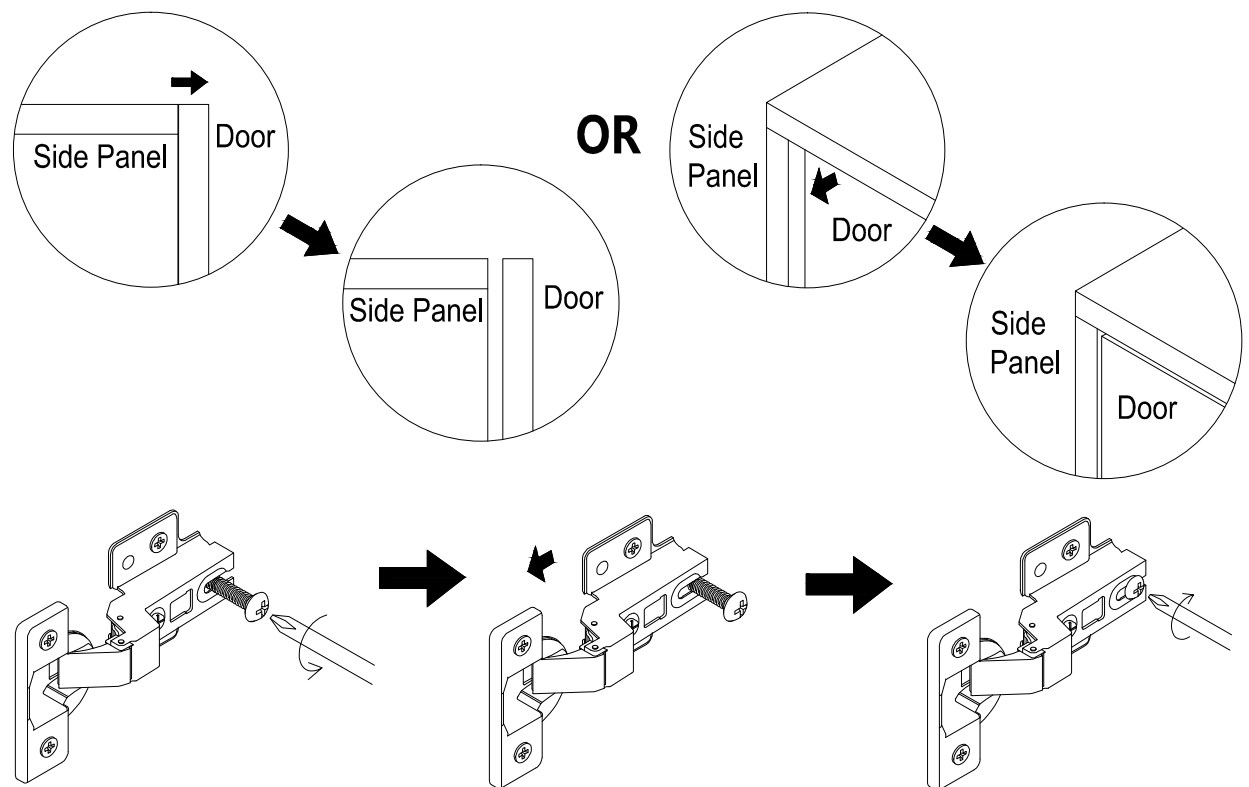


(In-and-Out Adjustment) : Adjust the front screw to ensure the door is flush with the cabinet side panel.



! IMPORTANT: When making height or depth adjustments, please ensure you adjust **BOTH** the top and bottom hinges of the door simultaneously. Adjusting only one hinge will be ineffective and may cause stress on the hardware.

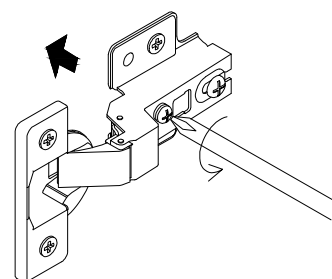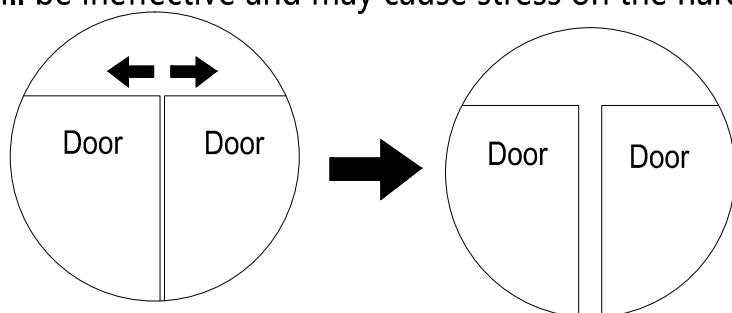


(Side-to-Side Adjustment) : Turn the middle screw to adjust the gap between the two doors.

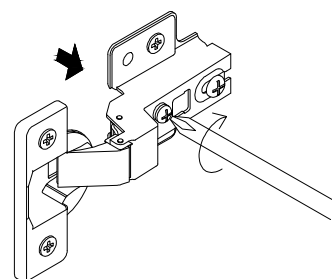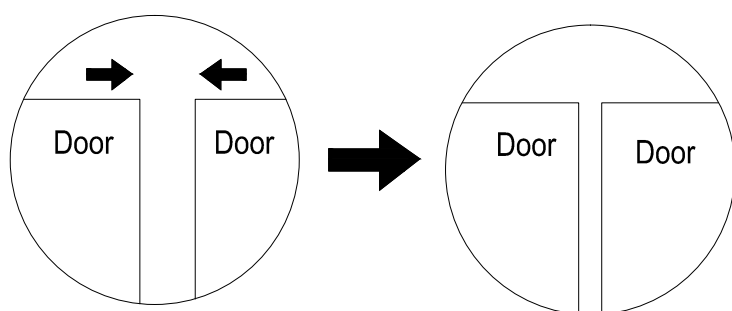

(Side-to-Side Adjustment) : Turn the middle screw to adjust the gap between the two doors.

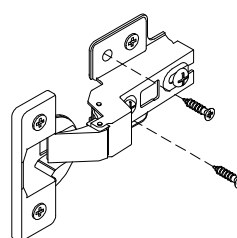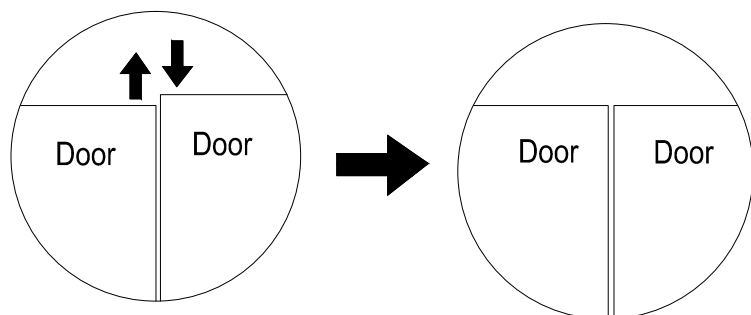

Attention:
After adjusted Hinges,
then lock screws.

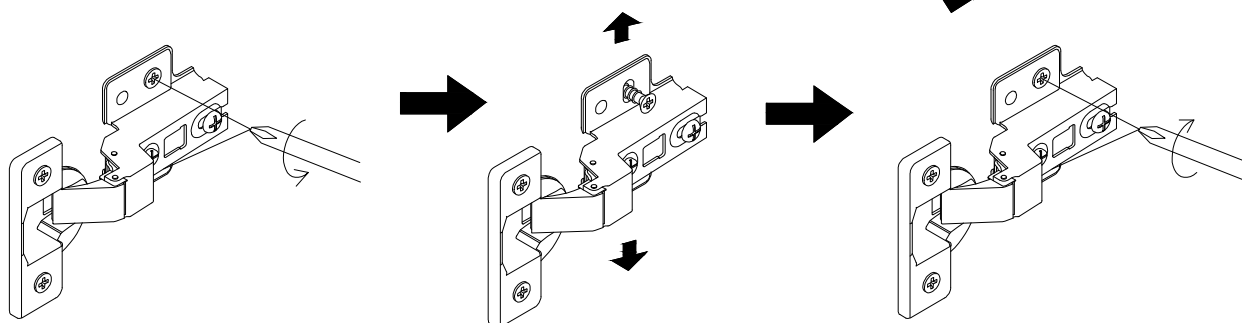


(Up-and-Down Adjustment) : Loosen the back screws on the hinge wing to shift the door up or down.

STEP 19





We recommend using a manual screwdriver for the hinges. Power tools can easily strip the screws.


No. F
Quantity: 4 Pcs

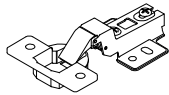


No. G
Quantity: 8 Pcs
M3.5*14mm

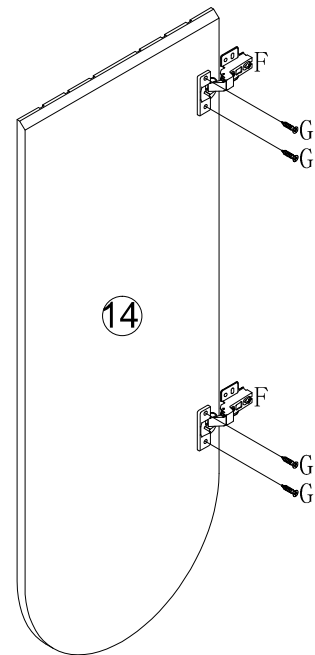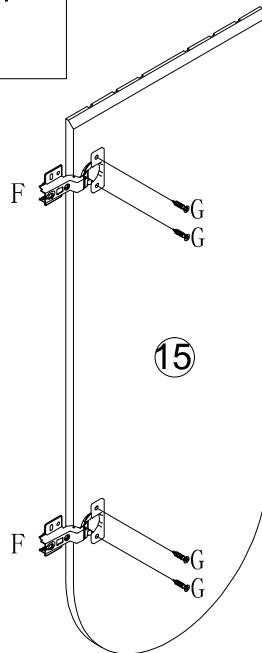

STEP 20

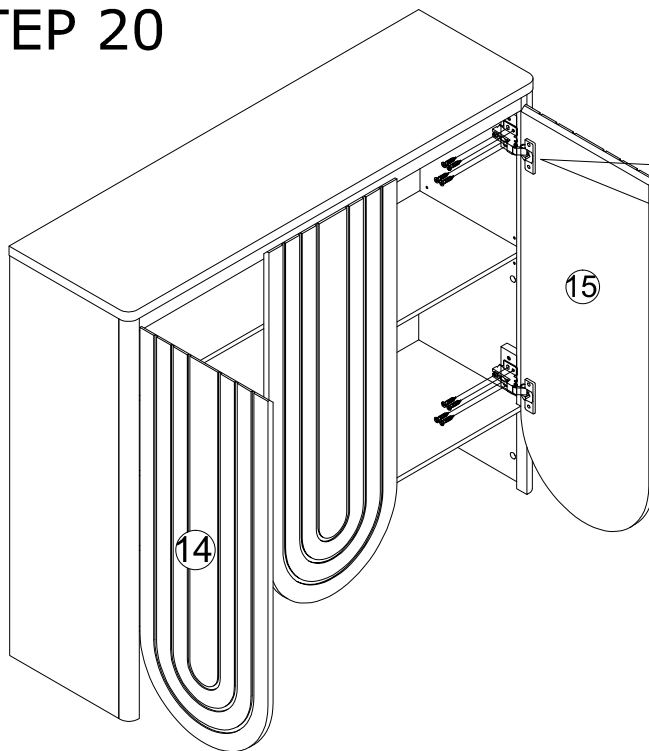

First, use screws to secure the two rear guide holes of the door hinge into the two guide holes of the side panel.

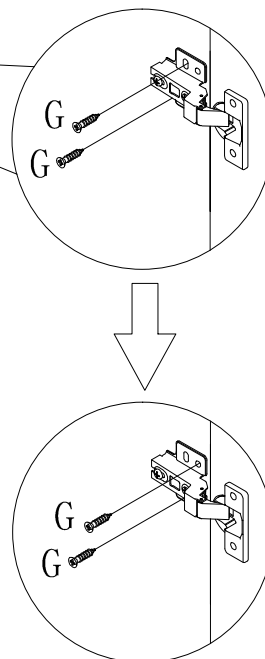

No. G
Quantity: 16 Pcs
M3.5*14mm




If you encounter difficulties during adjustment, please refer to the guidance on pages 13 and 14 to adjust the gaps of the cabinet doors. After making the gaps even, please tighten the two screws on the front side.

STEP 21



CRITICAL STEP: DO NOT skip Step 21. Failure to install all Plastic Wedges (N) will result in a wobbly cabinet.

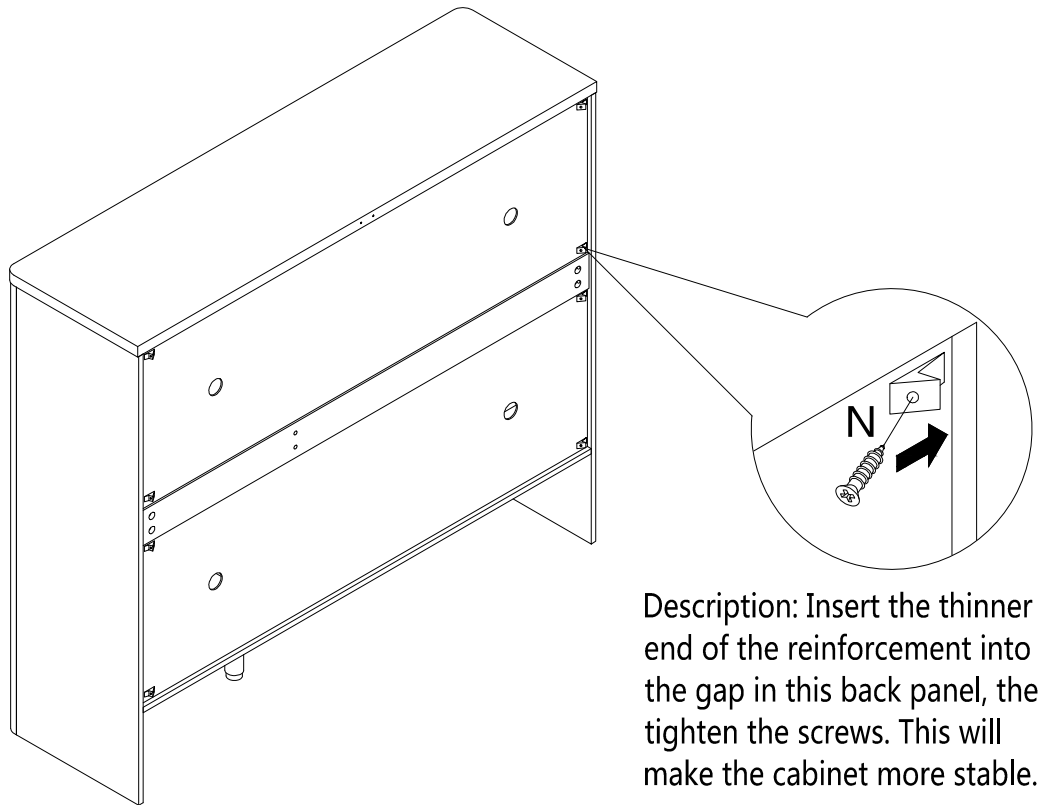


No. N
Quantity: 8 Sets



Description: Insert the thinner end of the reinforcement into the gap in this back panel, then tighten the screws. This will make the cabinet more stable.

STEP 22





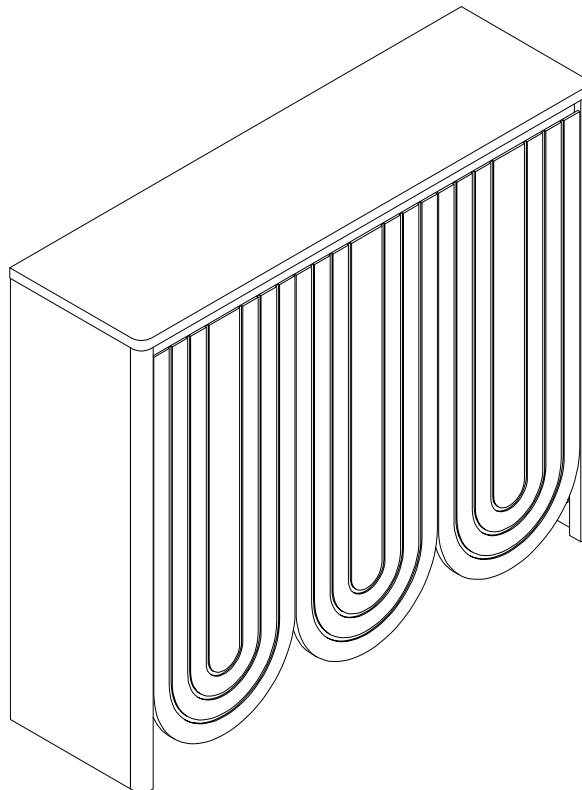


STEP 23


Anti-tipping Kit



WARNING: ALWAYS LIFT the cabinet when moving it. **NEVER DRAG** it across the floor. Dragging will cause the legs to fail and may lead to serious injury or property damage.

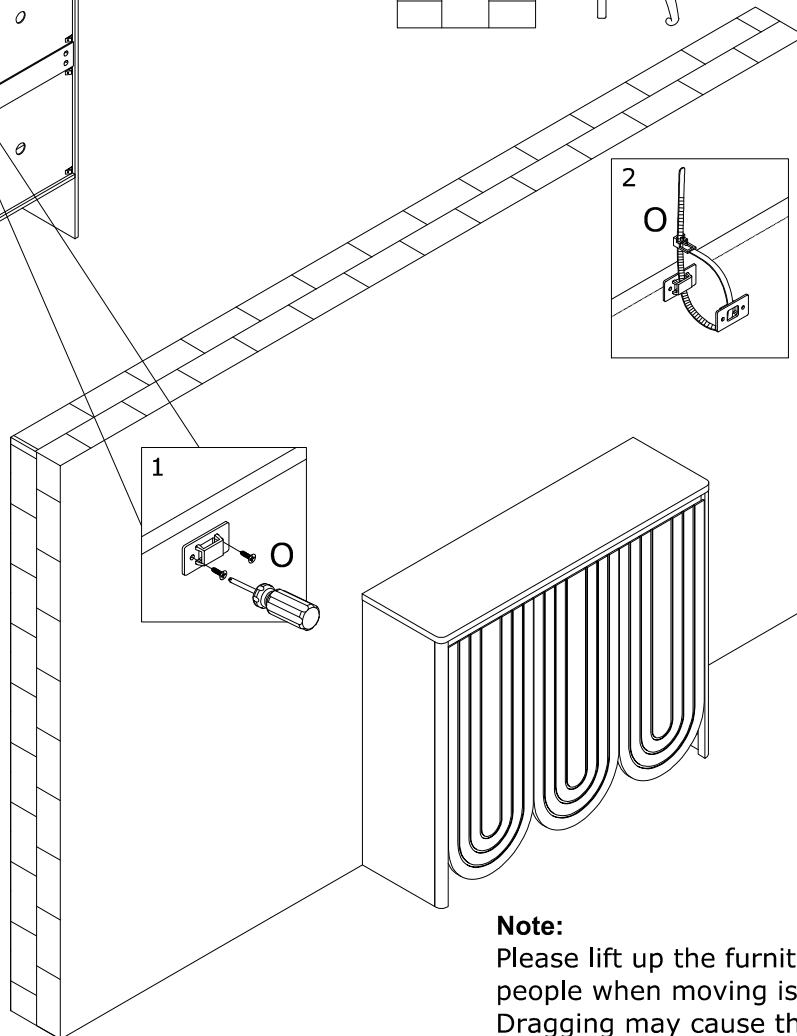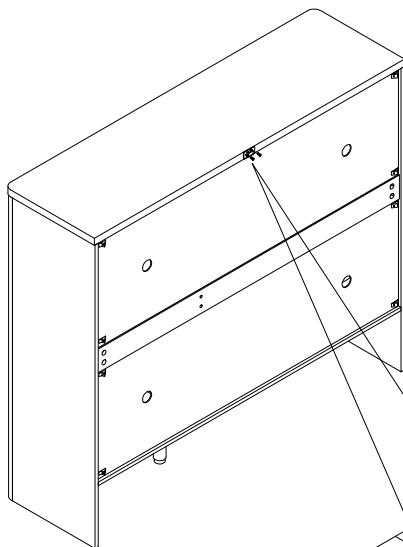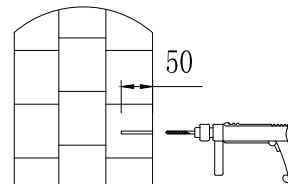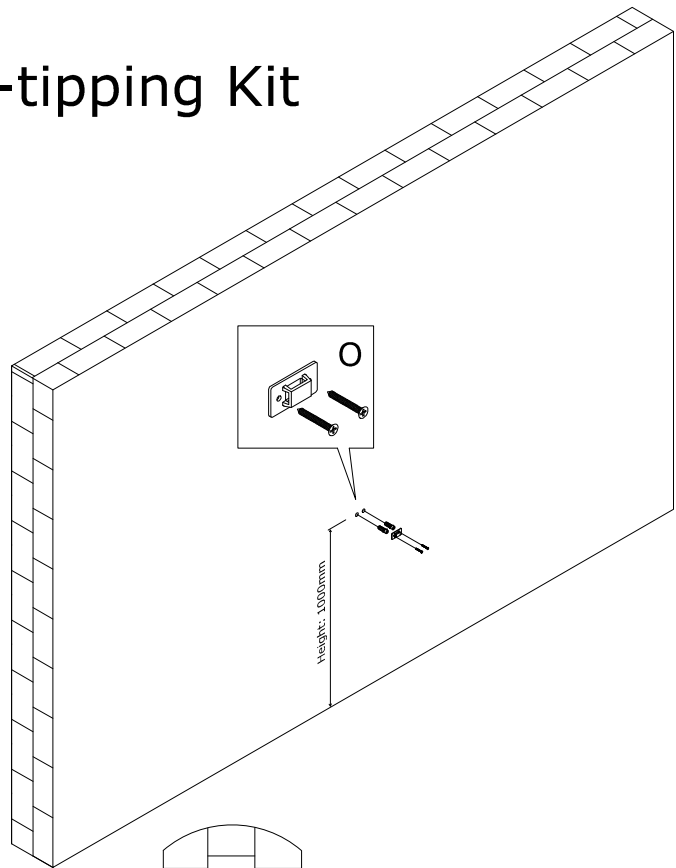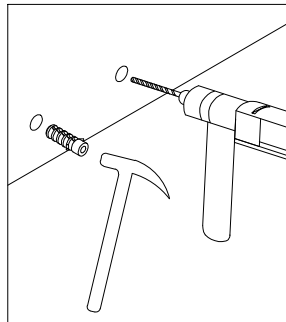

No. O
Quantity: 1 Sets

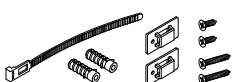

Note:
Please lift up the furniture by two people when moving is needed. Dragging may cause the legs failure.