



INSTALLATION INSTRUCTIONS FOR MULTI-SIDED CEILING ROD SET

NOTE: Finials shown are for illustration purposes only.


Brackets: Align & mount closer to finials, they will serve to "lock" curtains in place when sliding.

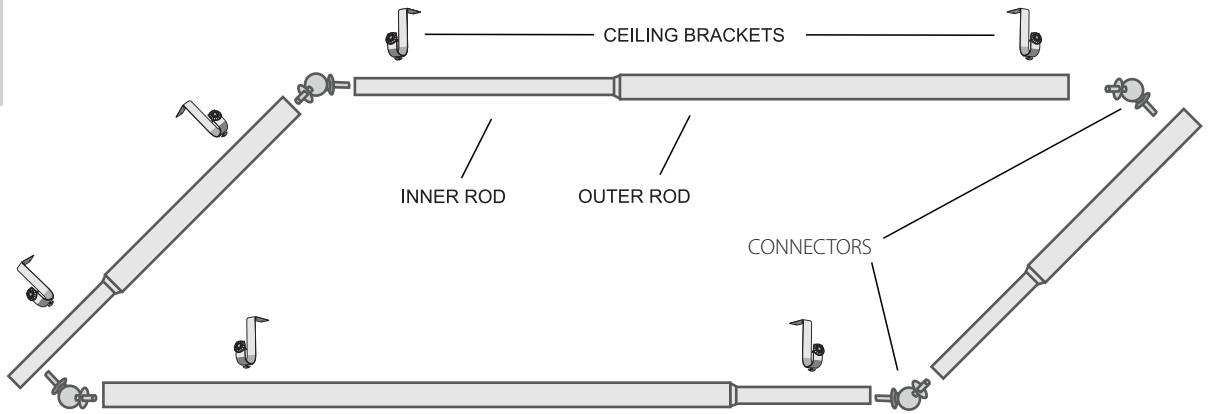

- 1** Place brackets against ceiling at desired locations. Mark screw holes with pencil. Be sure marks are level across opening.

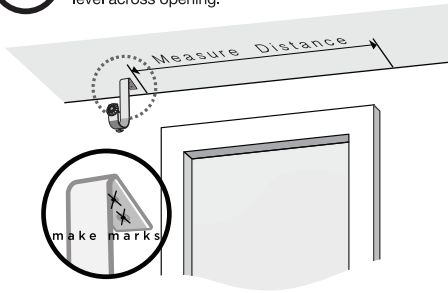

- 2** If screws are going directly into wood studs or ceiling drywall, drill a 1/8" pilot hole at pencil marks. If screwing into drywall, follow drywall anchor instruction at the bottom of the page.

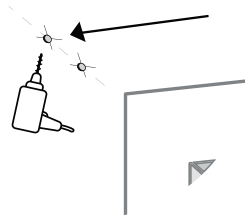


- 3** Assemble the rod by inserting and sliding the smaller diameter rod into the larger diameter rod. Ensure that finials inserts are exposed on each open end after rod assembly

2Rods


3Rods

4Rods


When ready, slide drapery onto the pole.

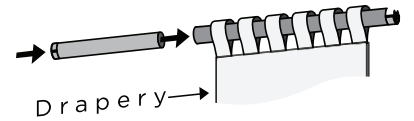


- 4** Insert the rod connector to one rod and loosen the connector tightening screw. Adjust connector to desired angles. Tighten screw on the connector to lock angle in place. Slide the other rod onto the open end of rod connector.

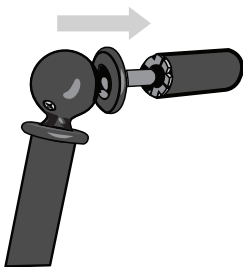

- 5** Hang the completed assembly by loosening the brackets front adjustment screws and dropping the rods in. Once hung, tighten both the brackets tightening screws and the connector tightening screws.

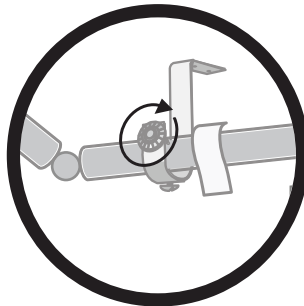

- 6** (OPTIONAL, depending on amount of side rods) Install finials by sliding their posts into the rod insert adapters.

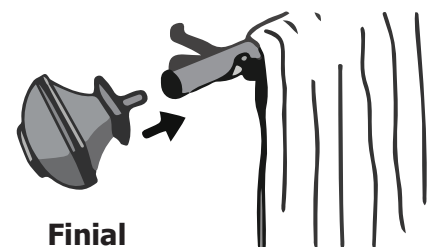

DRYWALL ANCHOR INSTALLATION



If screws are going directly into wood trim or wall studs - drill 1/8" (3mm) holes and install screws through bracket. If screws are going into hollow wall - drill 3/16" (5mm) holes and push or lightly hammer plastic anchors into holes. Then install screws through brackets. Do not tighten screws too much - just snug is best.