












YMX-83

Accessories list(sitting sofa)


Carton 1/2

A  Left seat frame(1)	B  Left armrest(1)	C  Double seat cushion(1)	D  Back cushion(4)	E  Ottoman panel(2)	F  Sofa legs(7)
G  Ottoman base plate(1)	H  Ottoman side panel(6)	I  Rear support bar(2)	N  Ottoman cushion(1)	⑤  Anti-slip pad(7)	


Carton 2/2

J  Right seat frame(1)	K  Right armrest(1)	L  Left backrest(1)	M  Right backrest(1)	G  Ottoman base plate(1)	H  Ottoman side panel(2)
C  Double seat cushion(1)	N  Ottoman cushion(1)	O  Armrest soft bag(2)	F  Sofa legs(7)	P  M5*105*55 Wrench(1)	Q  8*60 Screw(14)
R  18mm Gasket(18)	S  Bracket(4)	T  6x35 Screw(16)	U  16mm Gasket(58)	V  M4*100*30 Wrench(2)	W  Metal plate(2)
X  8x25 Screw(4)	Y  Metal plate(1)	Z  6*25 Screw(2)	①  M4*65*23 Wrench(1)	②  Corner brace connector(8)	③  6*20 Screw(48)
④  Hardware(4)	⑤  Anti-slip pad(7)				


Note: Take out the backrest cushion and armrest soft bag of the armrests before installation

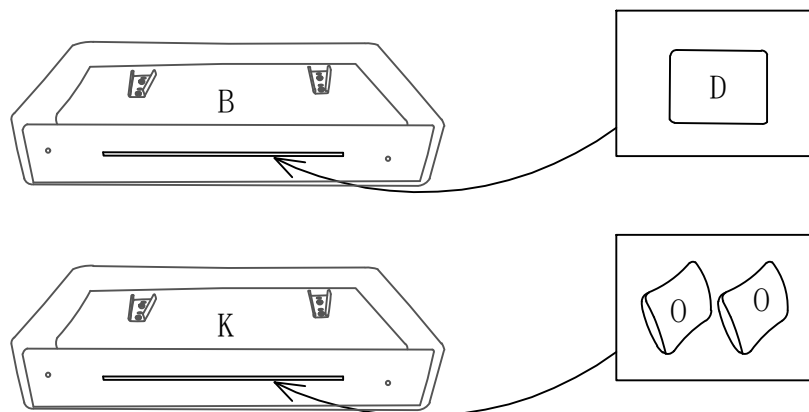


STEP 1: Use hardware ④ attach rear support bar(I) to the seat frame(A and J)

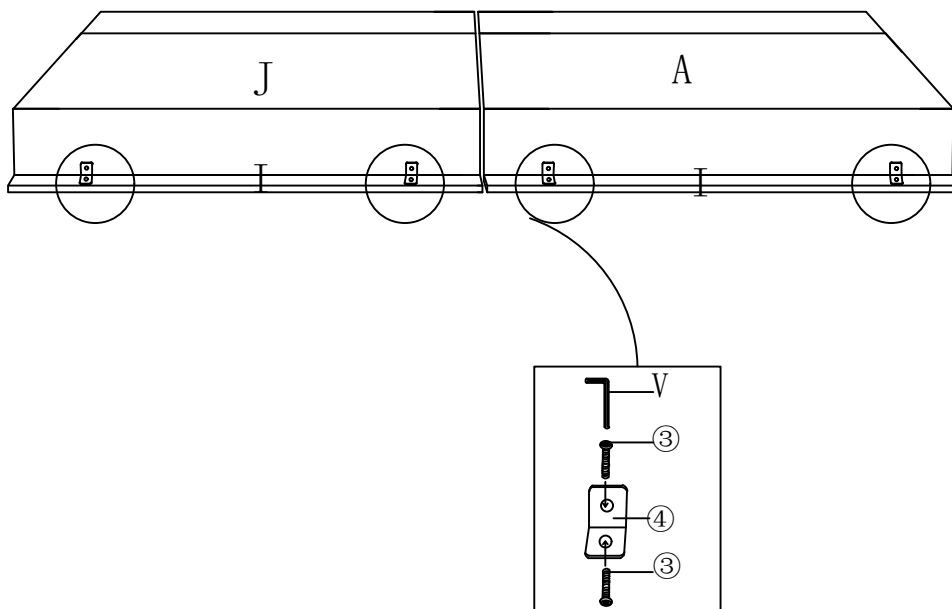


STEP 2: On the back of seat frame(A and J), install the bracket (S)

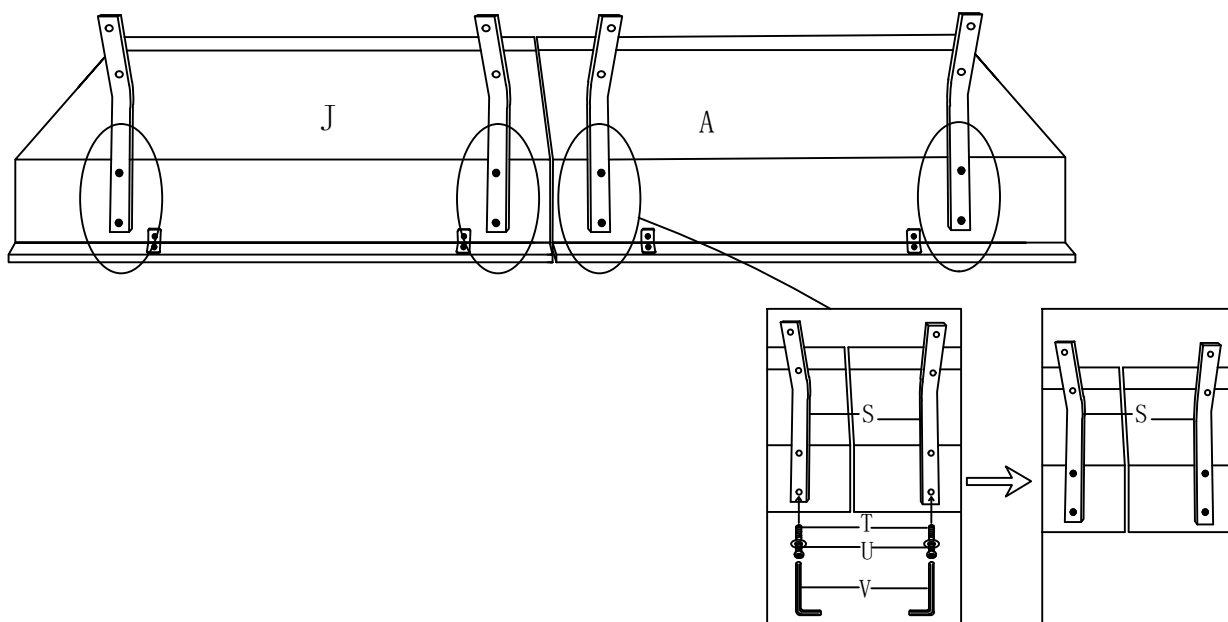


STEP3: Install the backrest, aligning holes in backrest (M and L) and bracket (S)

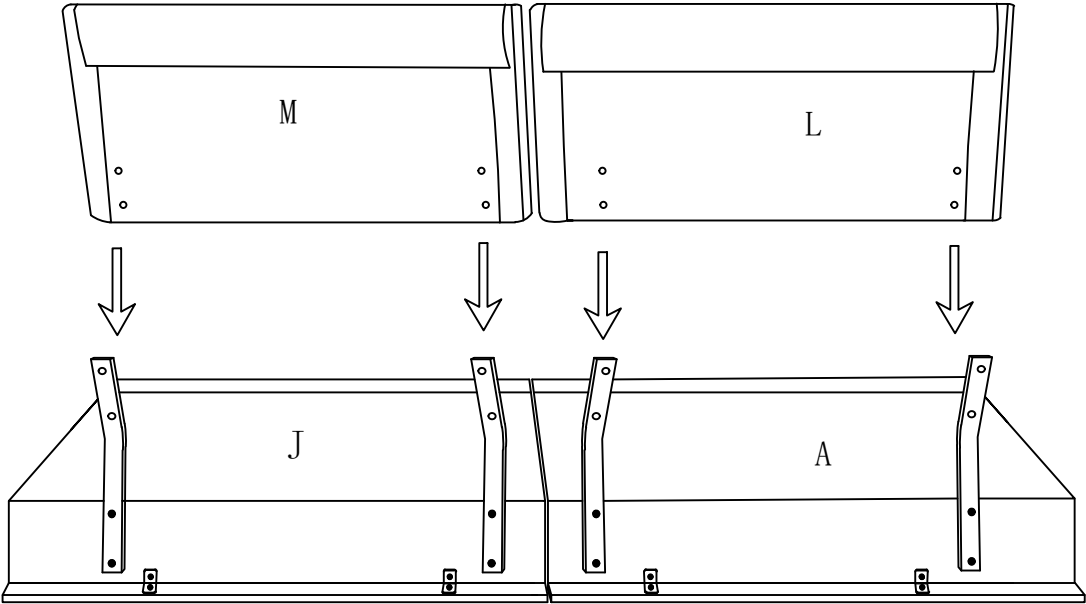


STEP 4: Install bracket screws

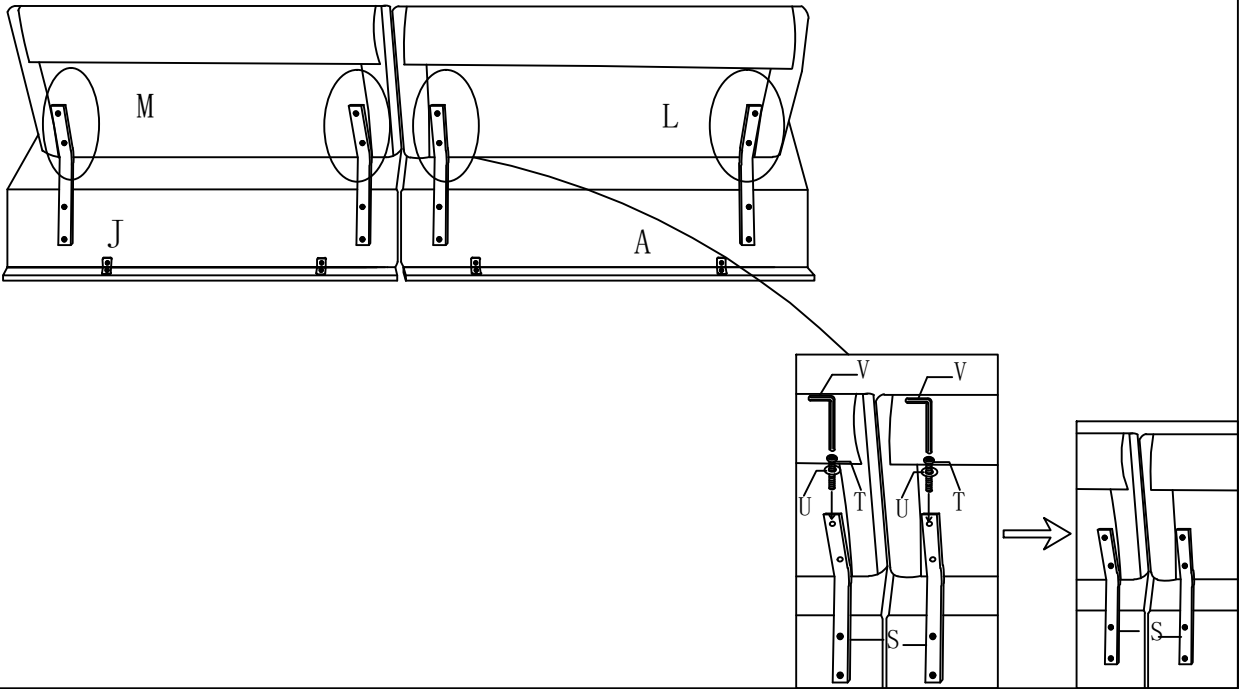


STEP 5: Lift the cover behind the backrest, peel the backing of velcro, then press the cover down the seat frame

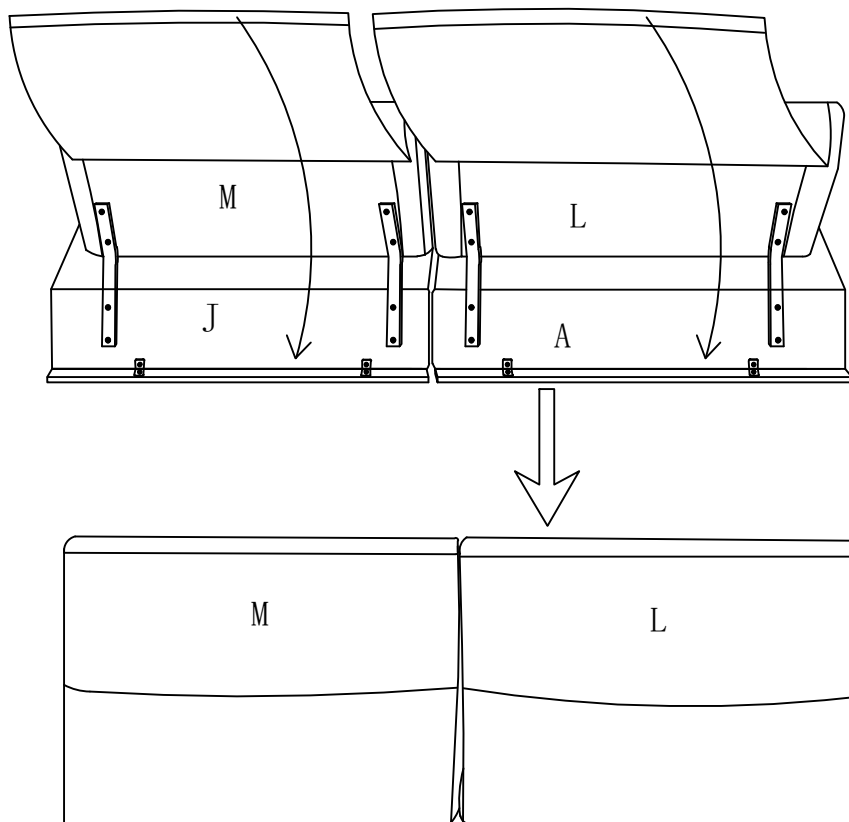


STEP6: Lift the right seat frame (A) and insert it into the right armrest (K)

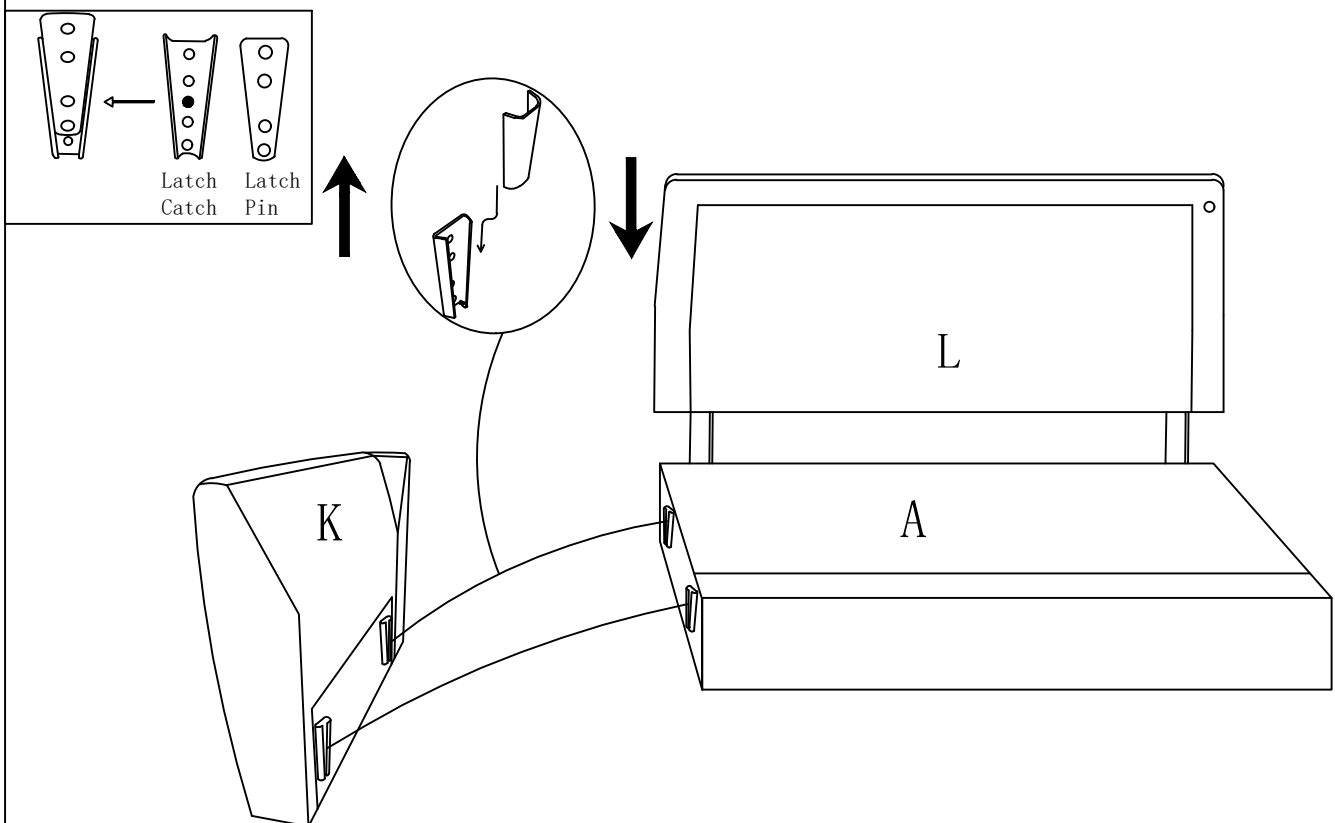


STEP7: Lift the left seat frame(J) and insert it into the left
armrest(B)

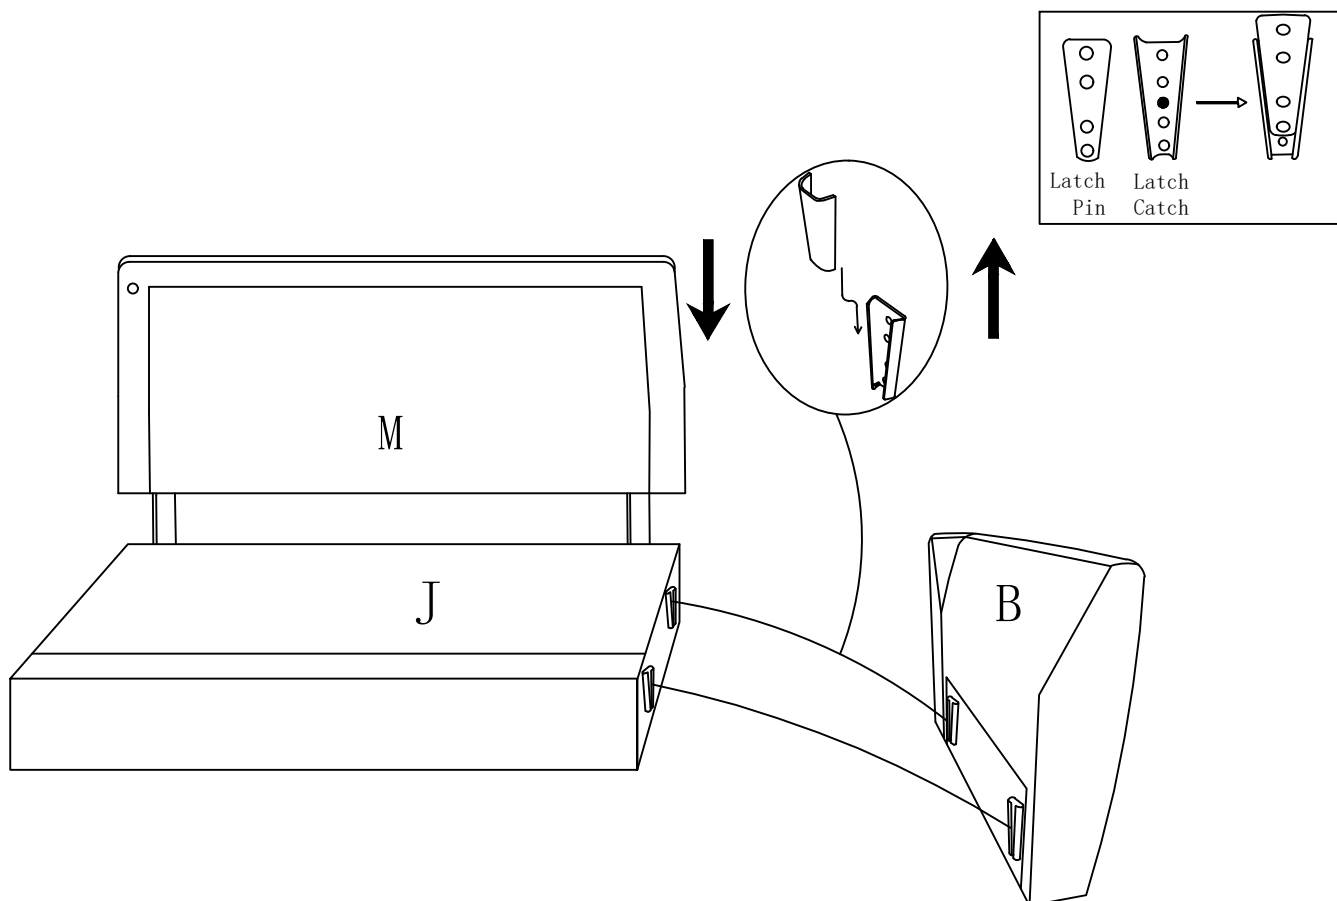


STEP8: Use metal plate(Y) secure right and left backrest

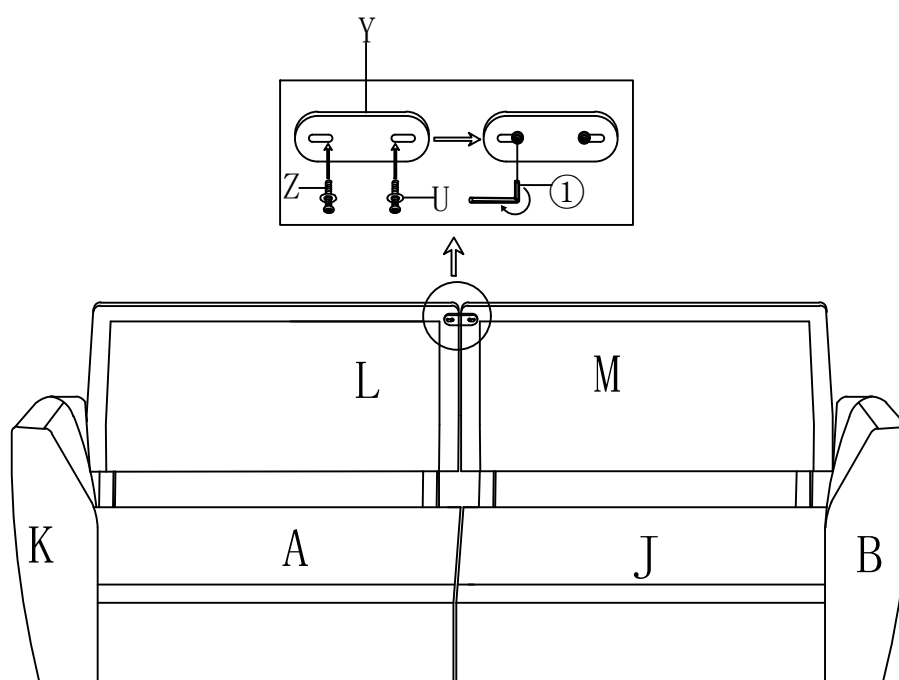


STEP9: Install the legs of sofa

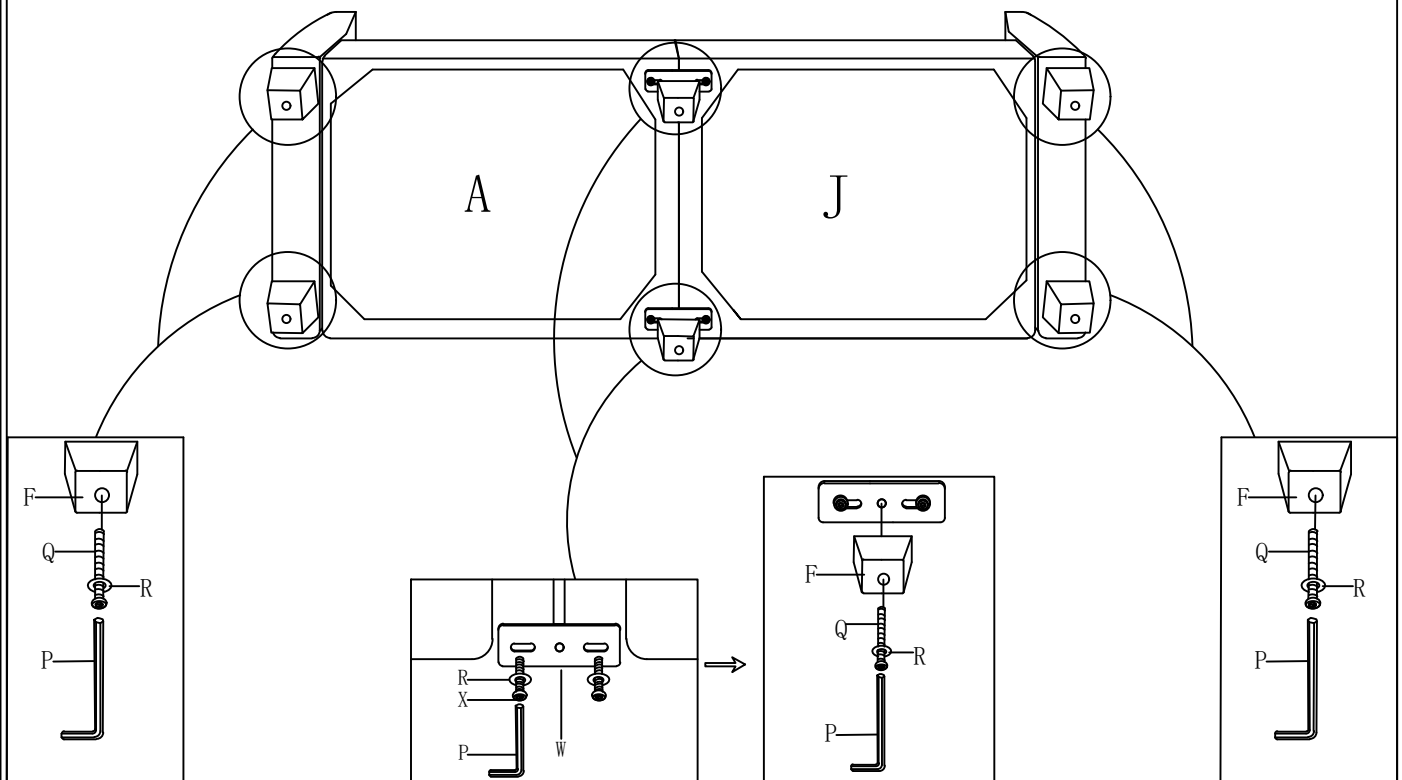


STEP10: Install sofa feet to the base plate of ottoman with hardware
Note: Hardware face the smooth surface of ottoman base.

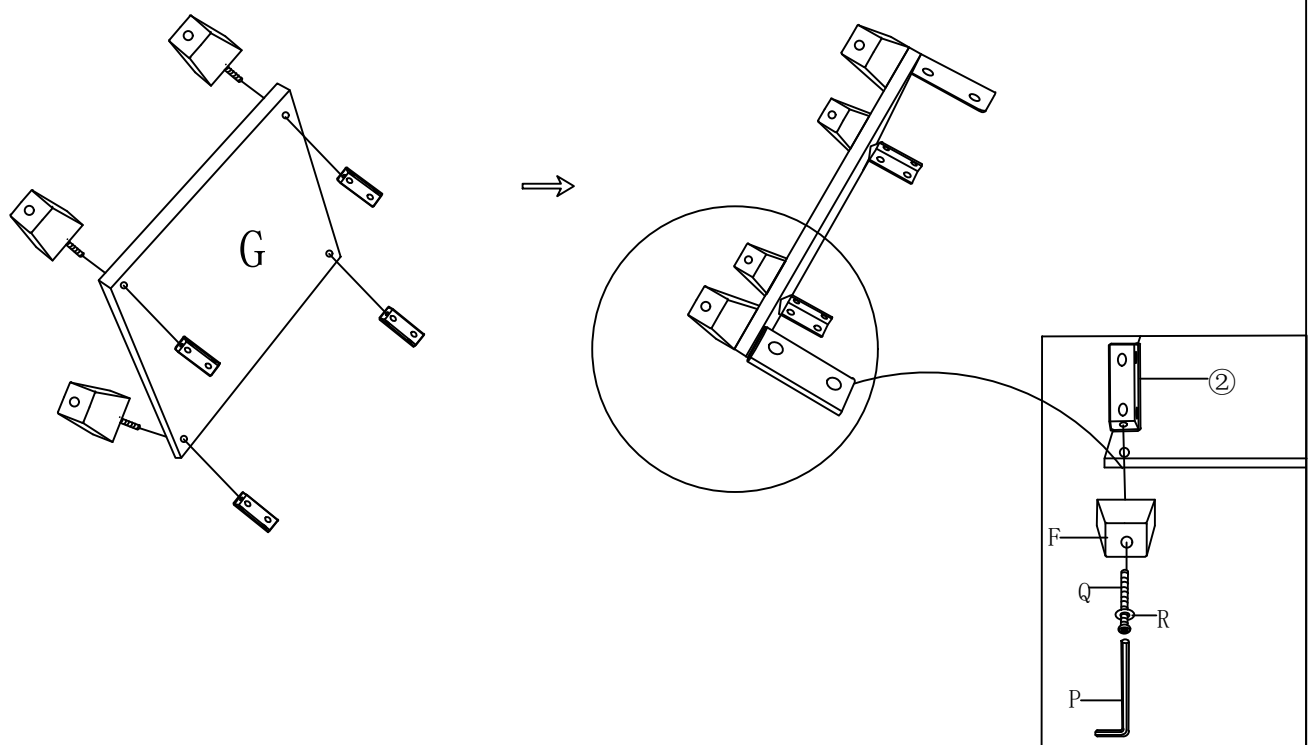


STEP11: Connect the side panels of ottoman to the base plates with conner brace connector. Note: please distinguish between top and bottom of the side panels

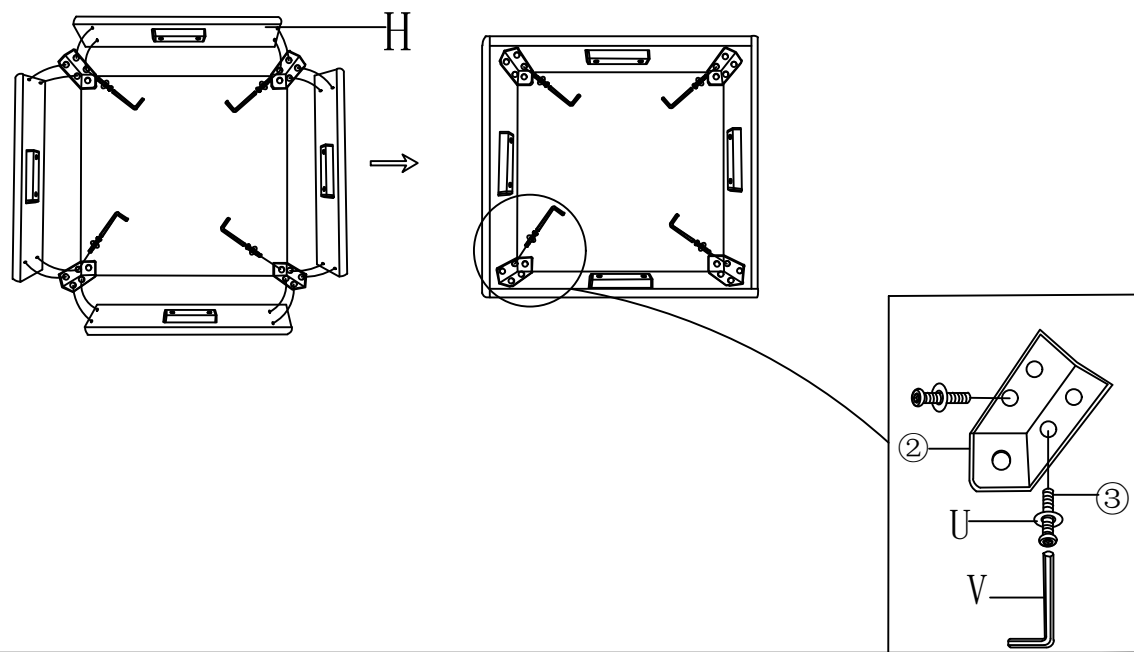


STEP12: Place the ottoman panel on the ottoman frame

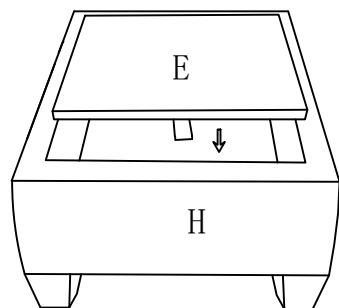

STEP13: Cut the compressions bags

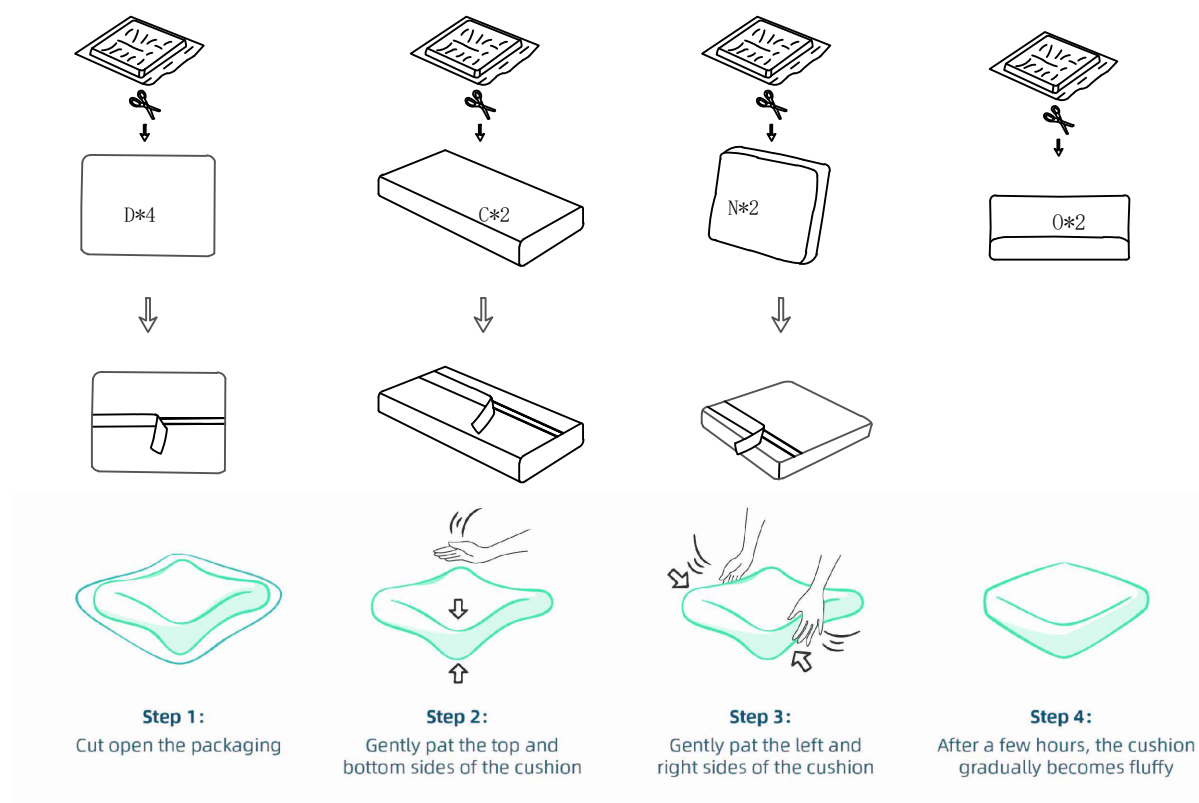

STEP14: The assembly is complete

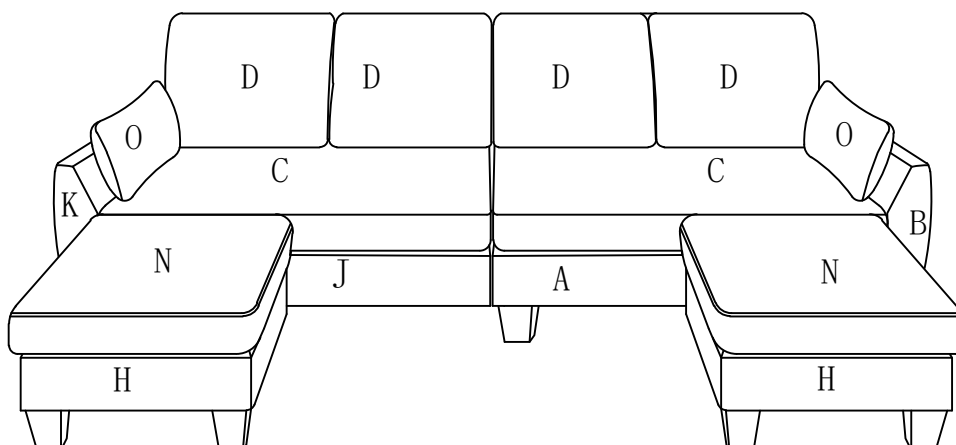

Customer Support E-mail Address: service-jarenie@hotmail.com

1. Part A、B、C、D、E、F、G、H、I、N、⑤、 are placed in the box 1/2 (A)
 2. Part J、K、L、M、G、H、C、N、O、F、P、Q、R、S、T、U、V、W、X、Y、Z、
 ①、②、③、④、⑤、 are placed in the box 2/2 (J)

