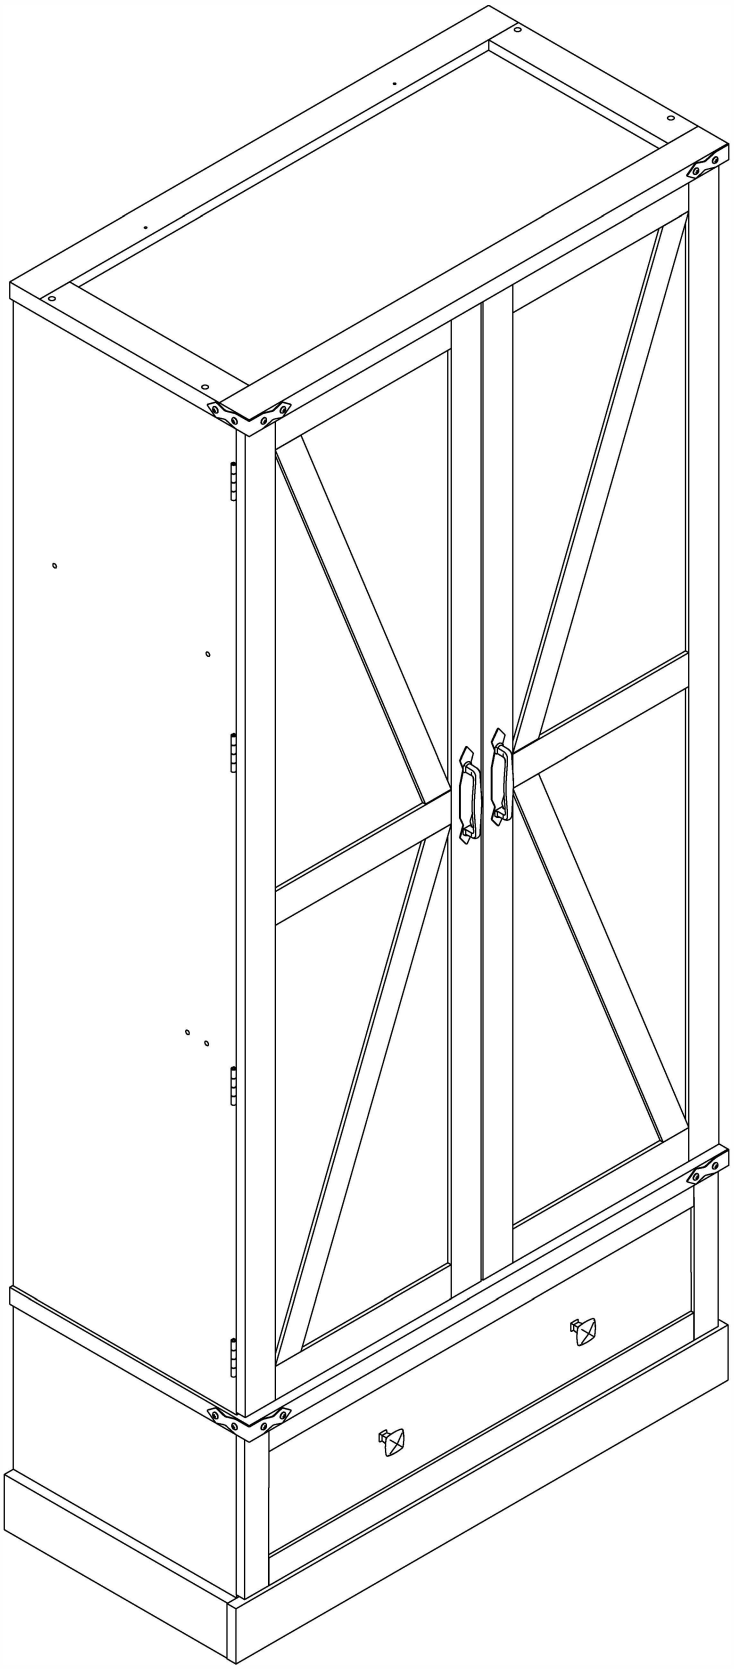
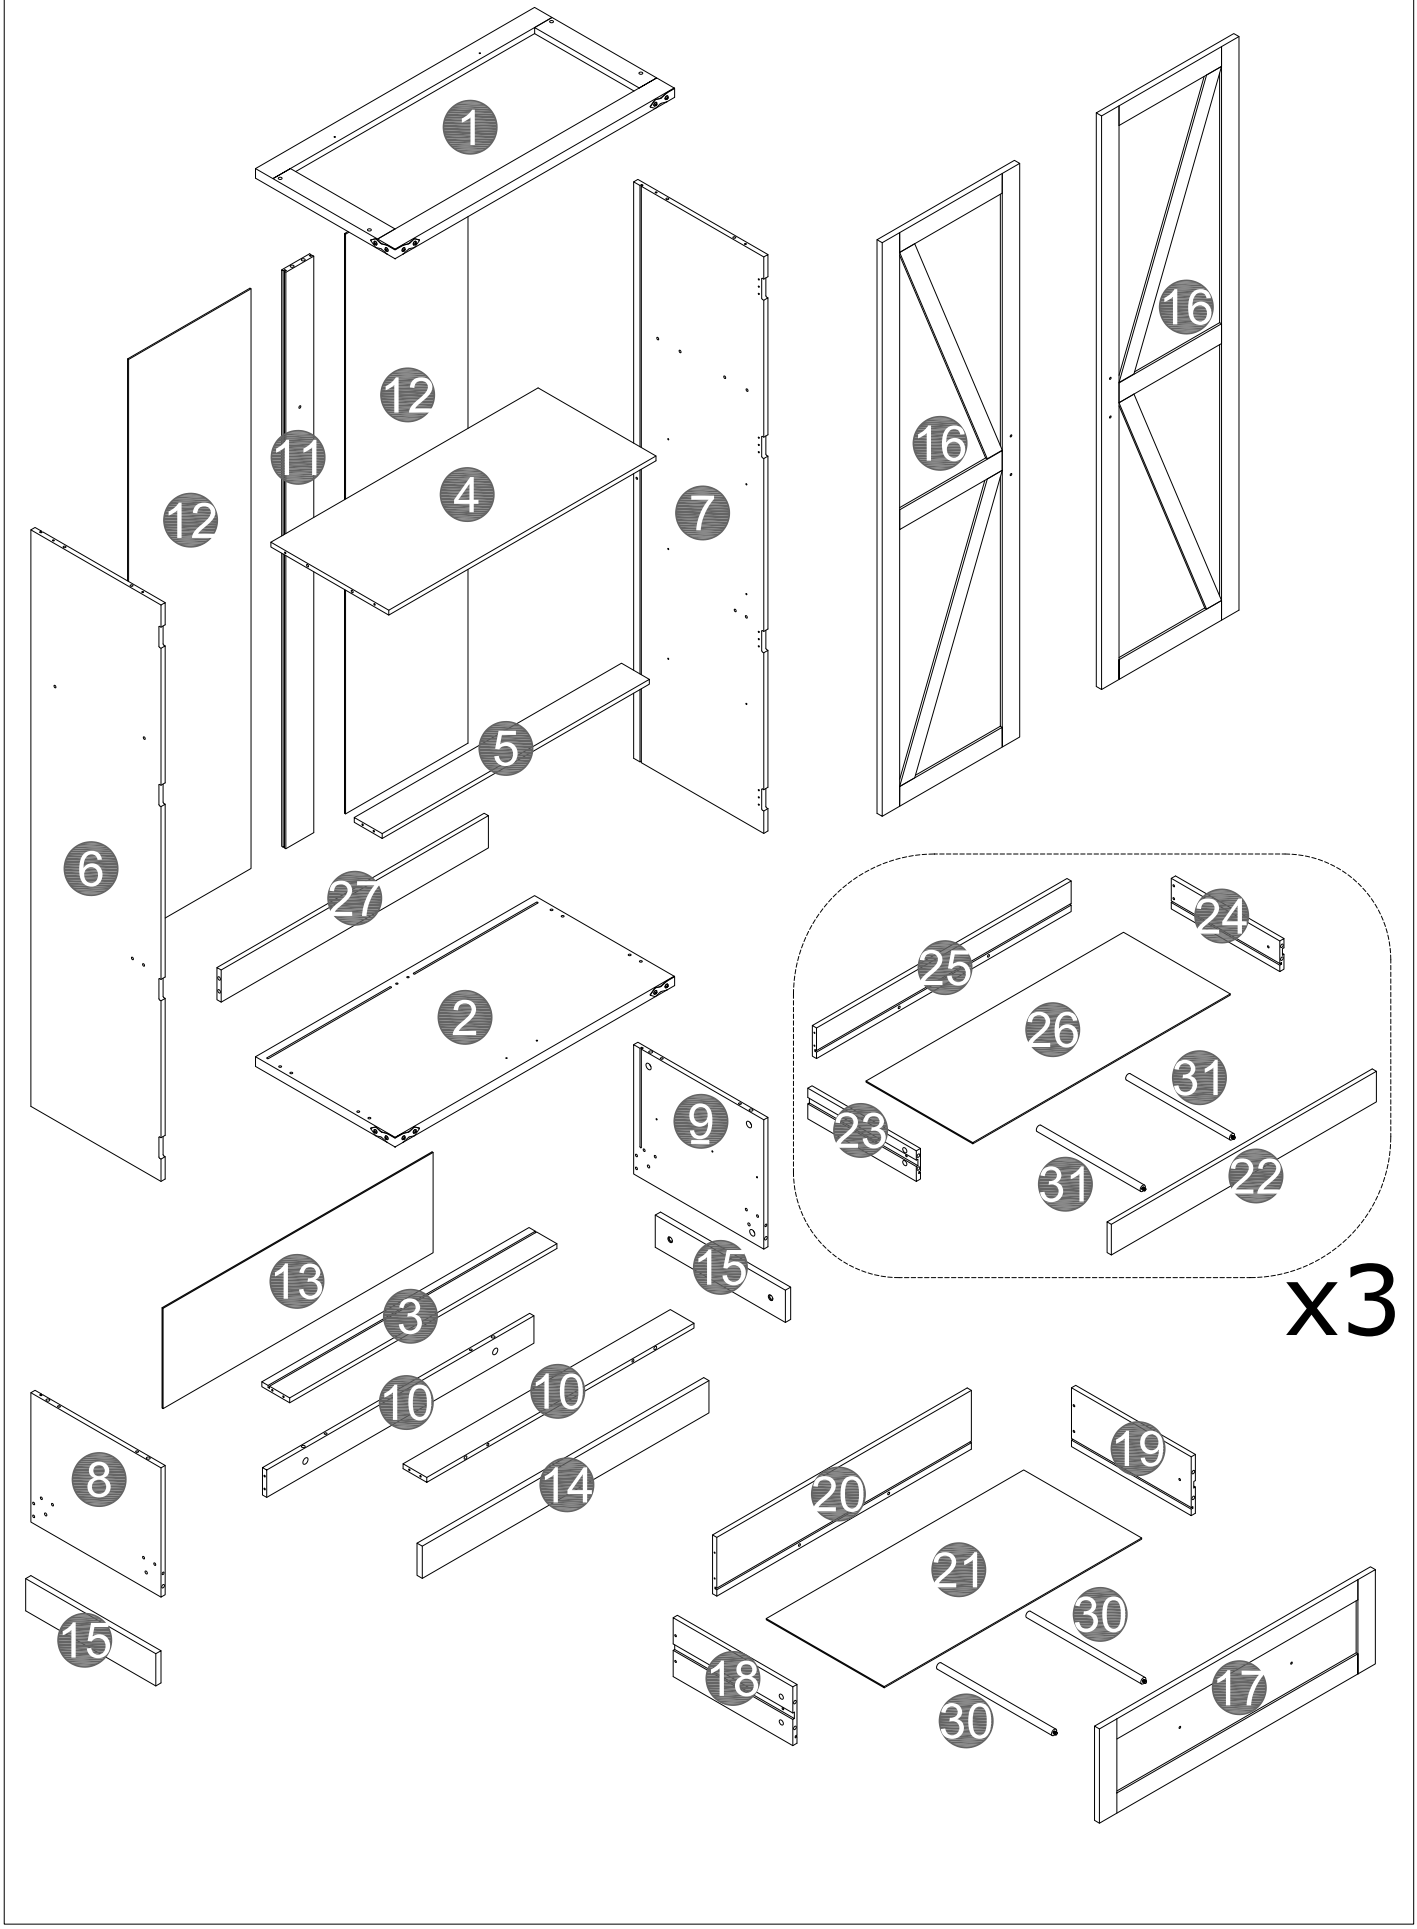
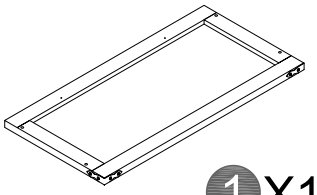
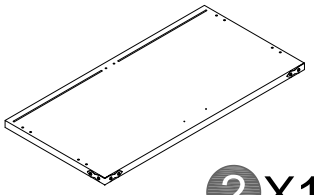
Installation & Assembly

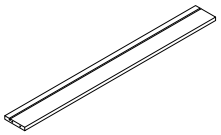


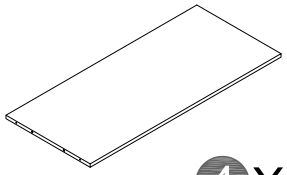

1
12
11
4
7
12
16
16
5
6
27
2
24
25
26
31
23
31
22
x3
9
15
13
3
10
10
14
8
15
19
20
21
30
18
30
17

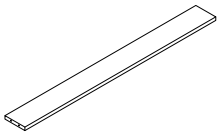
PARTS LIST



1X1



2X1



3X1



4X1

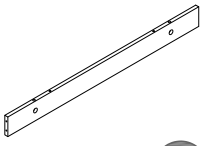

5X1


6X1


7X1

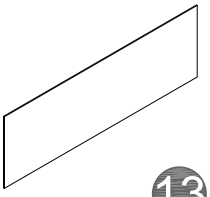

8X1

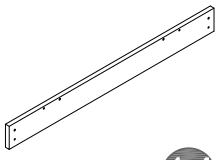

9X1



10X2



11X1

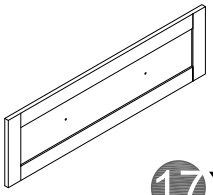

12X2



13X1



14X1

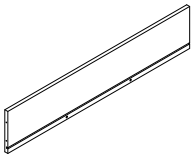

15X2

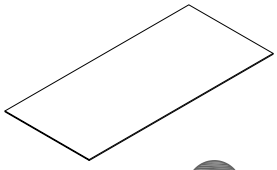

16X2

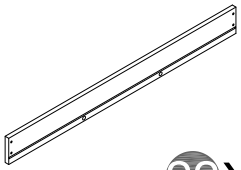

17X1



18X1



19X1

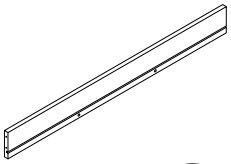

20X1

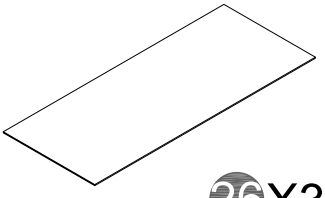

21X1

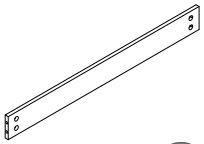

22X3



23X3



24X3

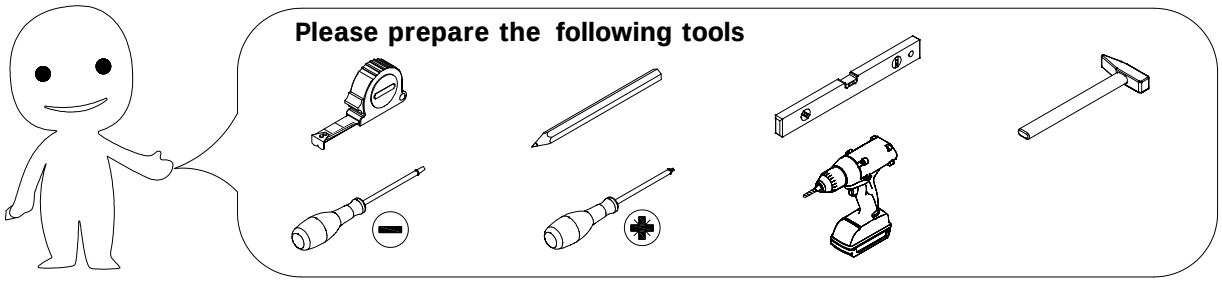

25X3







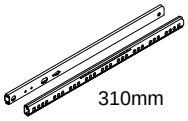
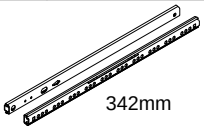
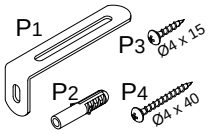

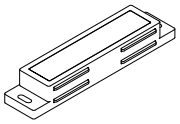


26X3


27X1


30X2


31X6

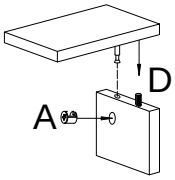


A 18+2 PCS  Ø15 x 9.5 mm	A2 16+2 PCS  Ø12 x 9.5 mm	B 34+2 PCS 	C 42+2 PCS 	D 22+2 PCS  Ø6 x30 mm
E 29+2 PCS  Ø5 x40 mm	F2.3 12+2 PCS  M6 x 23	I 2 PCS 	I2 2 PCS 	I3 2 PCS 
J 4+1 PCS  M4 x 18	J2 2 PCS  M4 x 12	J3 8+2 PCS  M4 x 10	L 3 set  310mm	L2 1 set  342mm
MH3 8 PCS 	N 66+2 PCS  Ø3.5 x 12	N1 4 PCS  Ø3 x 12	N3 16+2 PCS  Ø3.5 x 30	N7 18+2 PCS  Ø3 x 16
P 2 PCS 	Q 14+2 PCS 	V3 4+1 PCS  M6 x 15	X1 2 PCS 	X2 4 PCS 
Z 1 PC  4mm				

Tips: The number after "+" represents the spare hardware.

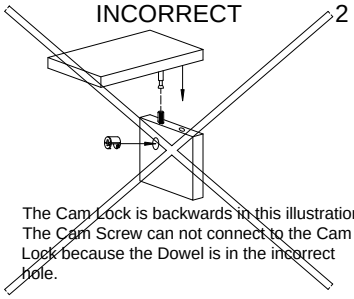
Cam Lock/Dowel Placement Supplement

CORRECT 1




When inserting the Cam lock, make sure that the open End of the cam Lock faces the Cam Screw Entry. The Dowel will be inserted in the hole NEXT to the Cam Lock/Cam Screw hole.

INCORRECT 2



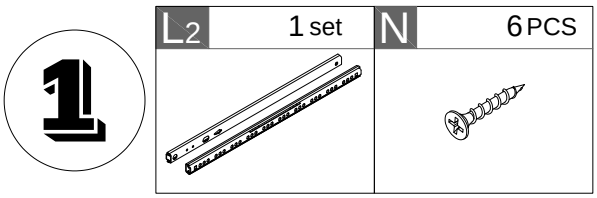
The Cam Lock is backwards in this illustration. The Cam Screw can not connect to the Cam Lock because the Dowel is in the incorrect hole.

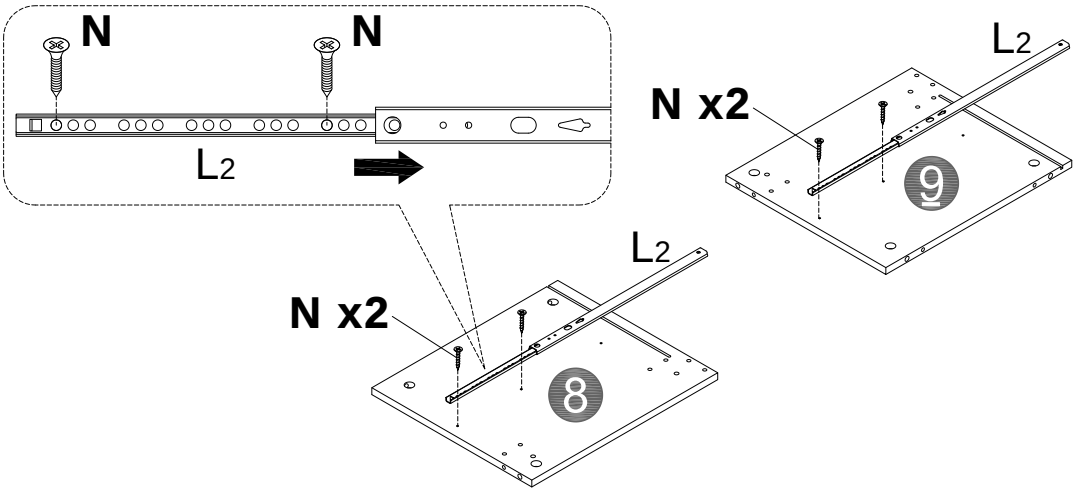
3

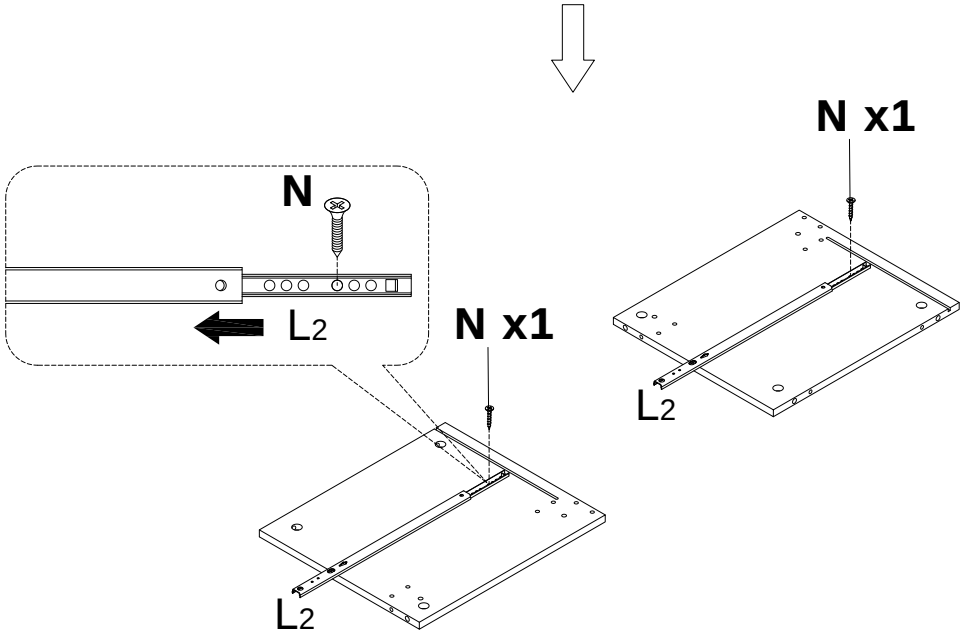


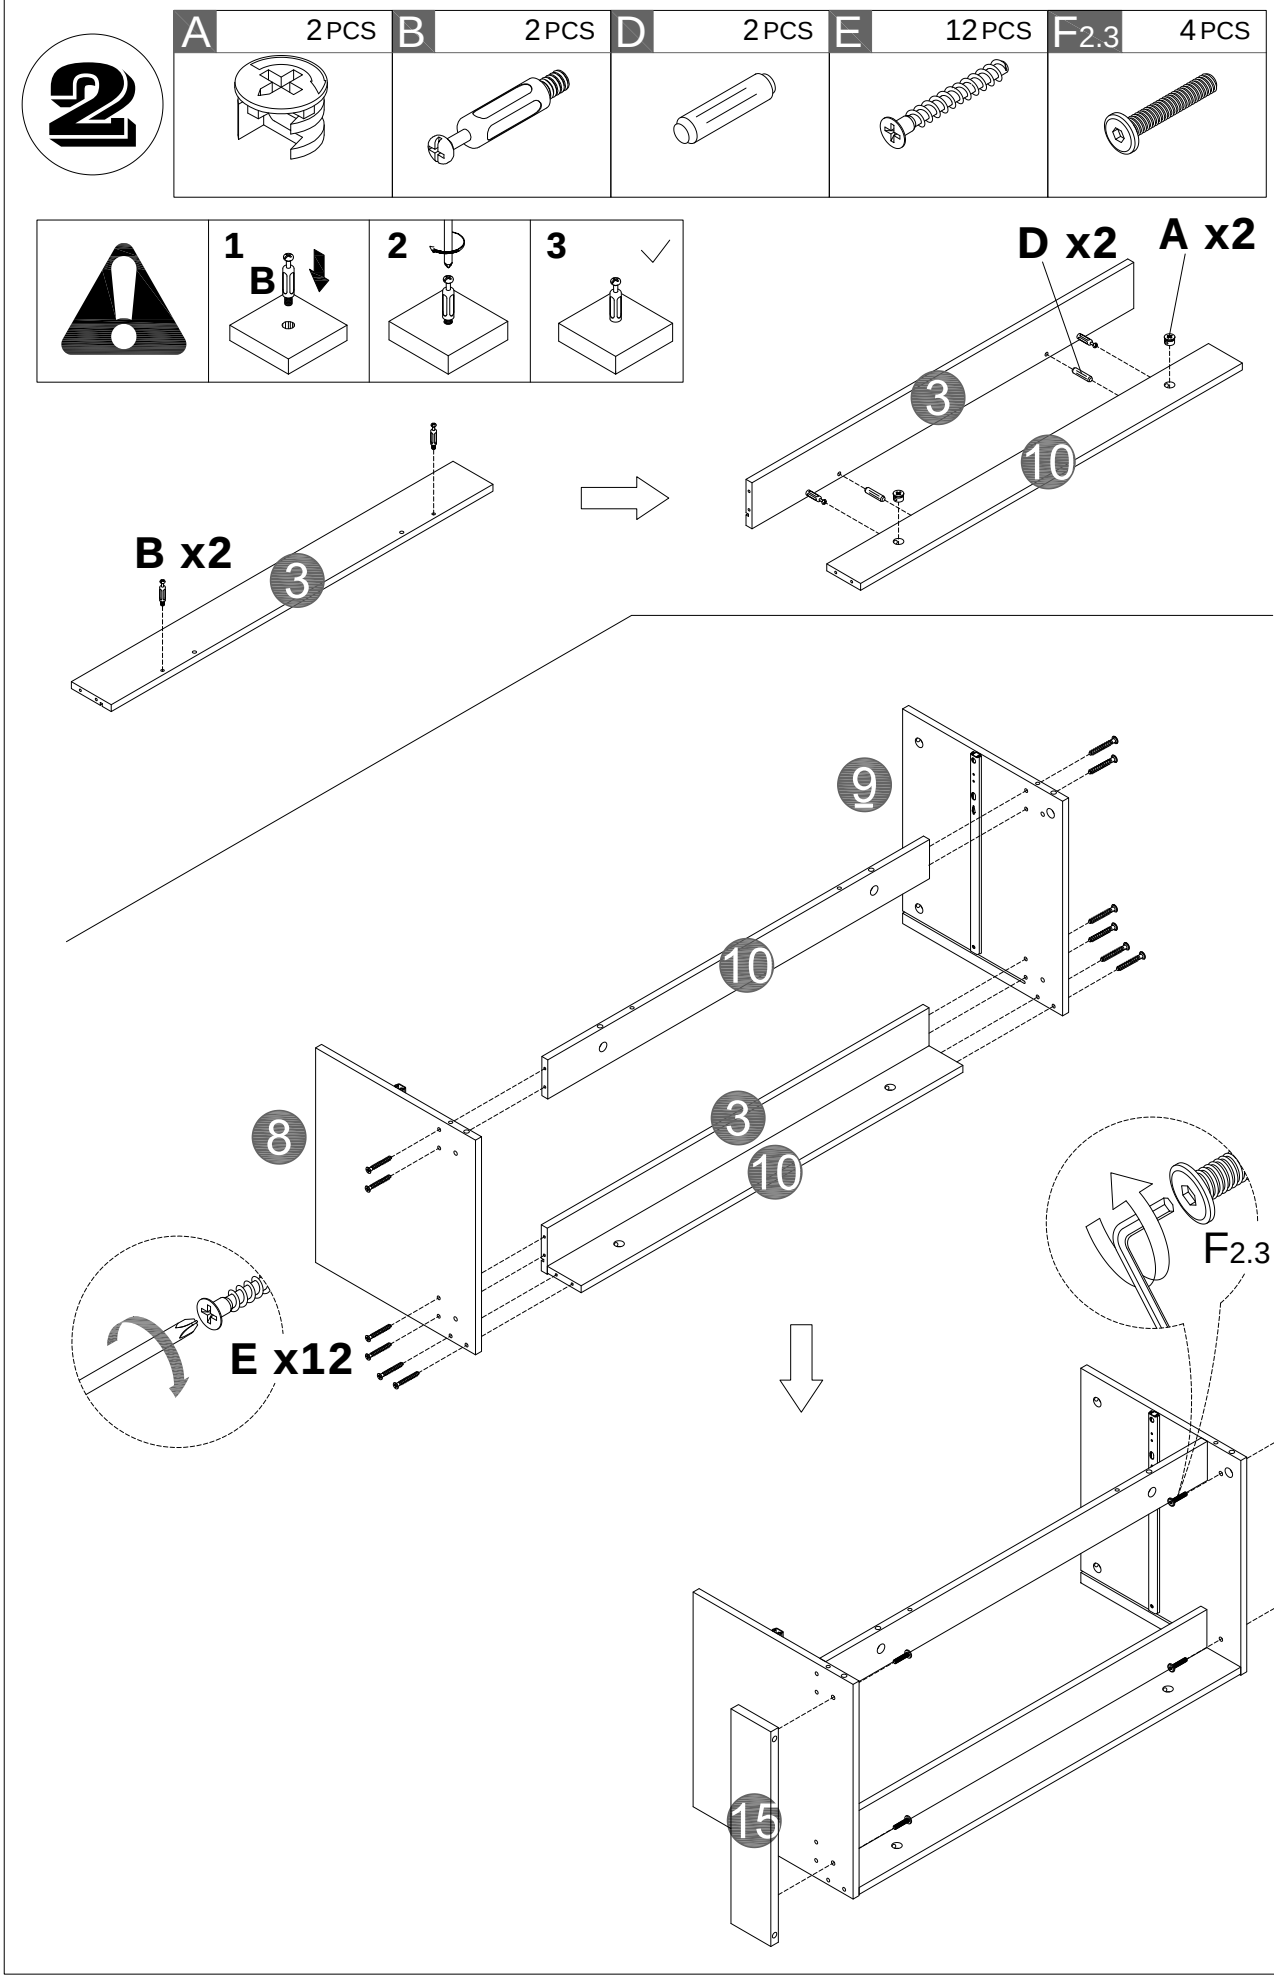
To tighten, turn the Cam Lock CLOCKWISE until the arrow or "△" signs point AWAY from the connected Panel.

***NOTE: DO NOT USE AN AUTOMATIC SCREWDRIVER TO TIGHTEN CAM LOCKS, DO NOT OVER-TIGHTEN**.





L2
1 set
N
6 PCS

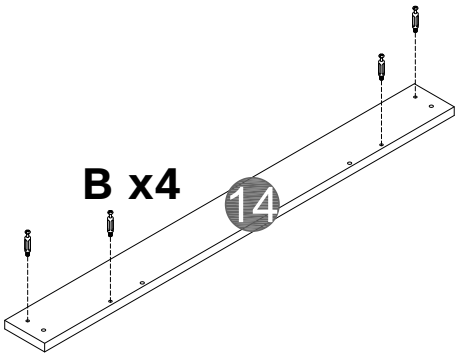

N
N
L2
N x2
L2
9
L2
N x2
8

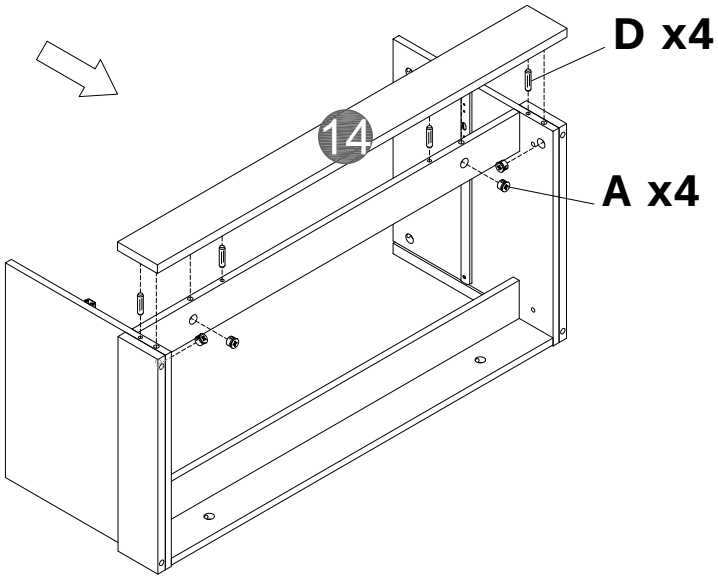

N x1
N
L2
N x1
L2
L2


2
A 2PCS
B 2PCS
D 2PCS
E 12PCS
F2.3 4PCS
1
B
2
3
D x2
A x2
3
10
B x2
3
9
10
8
3
10
E x12
F2.3 x4
15
15

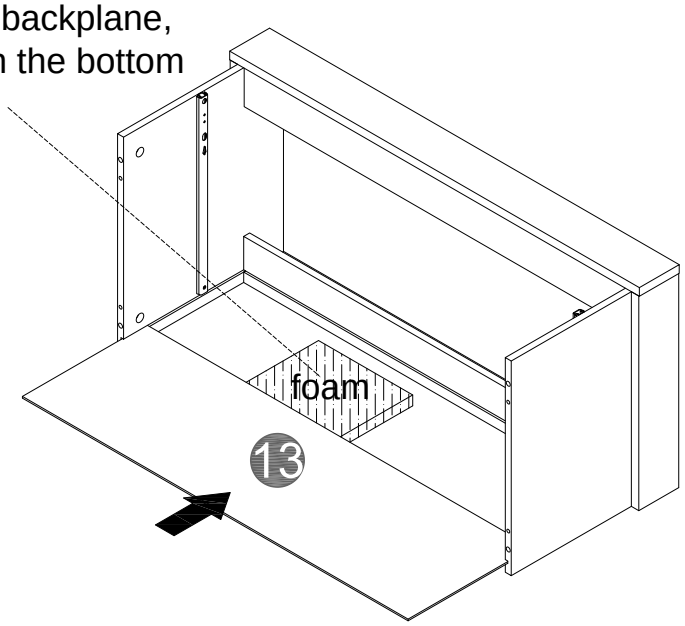
3

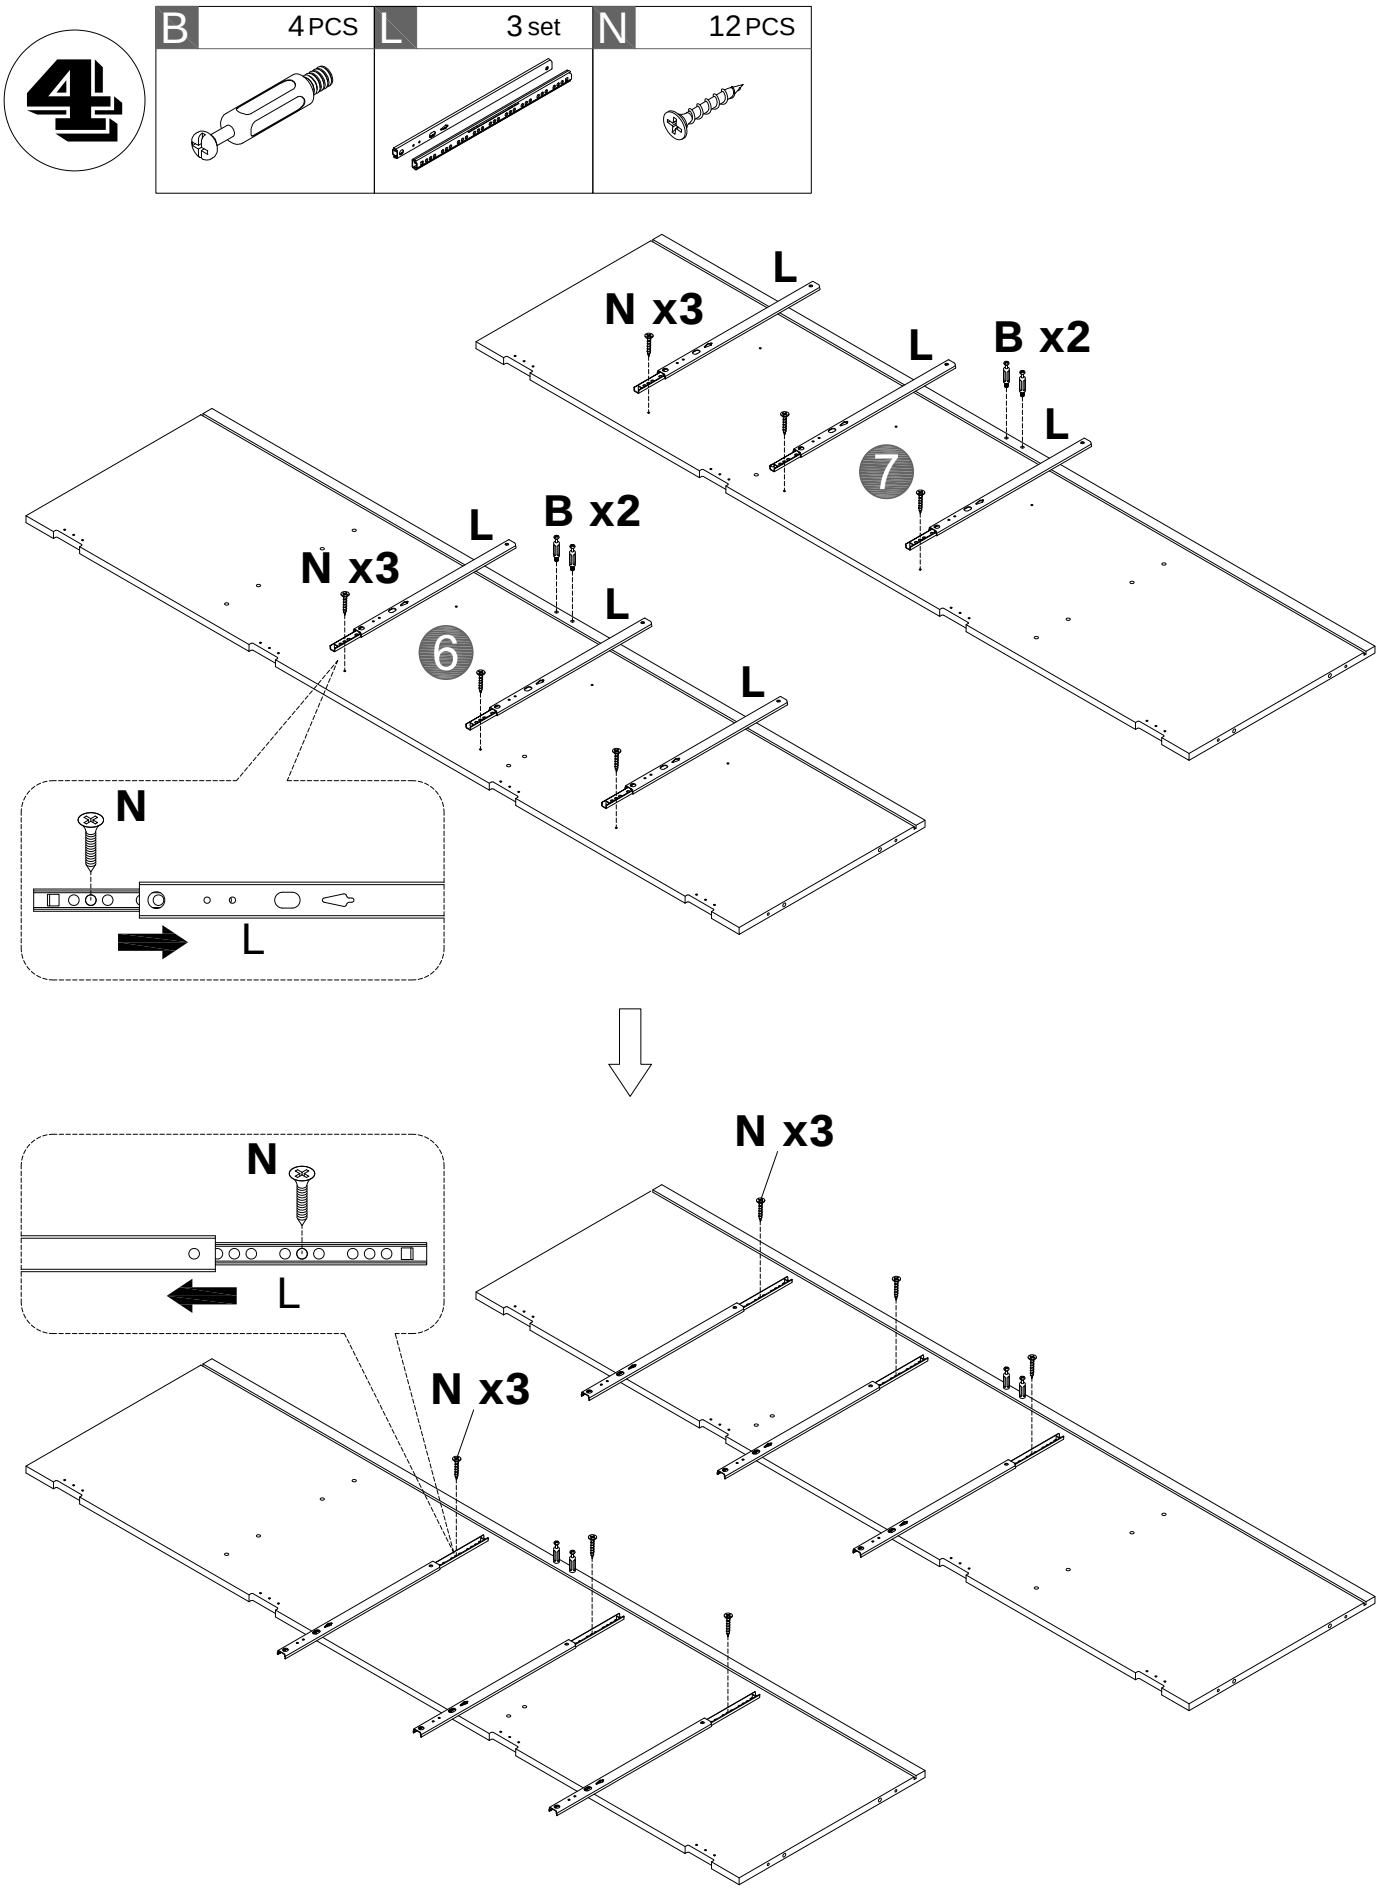
A 4PCS	B 4PCS	D 4PCS
		







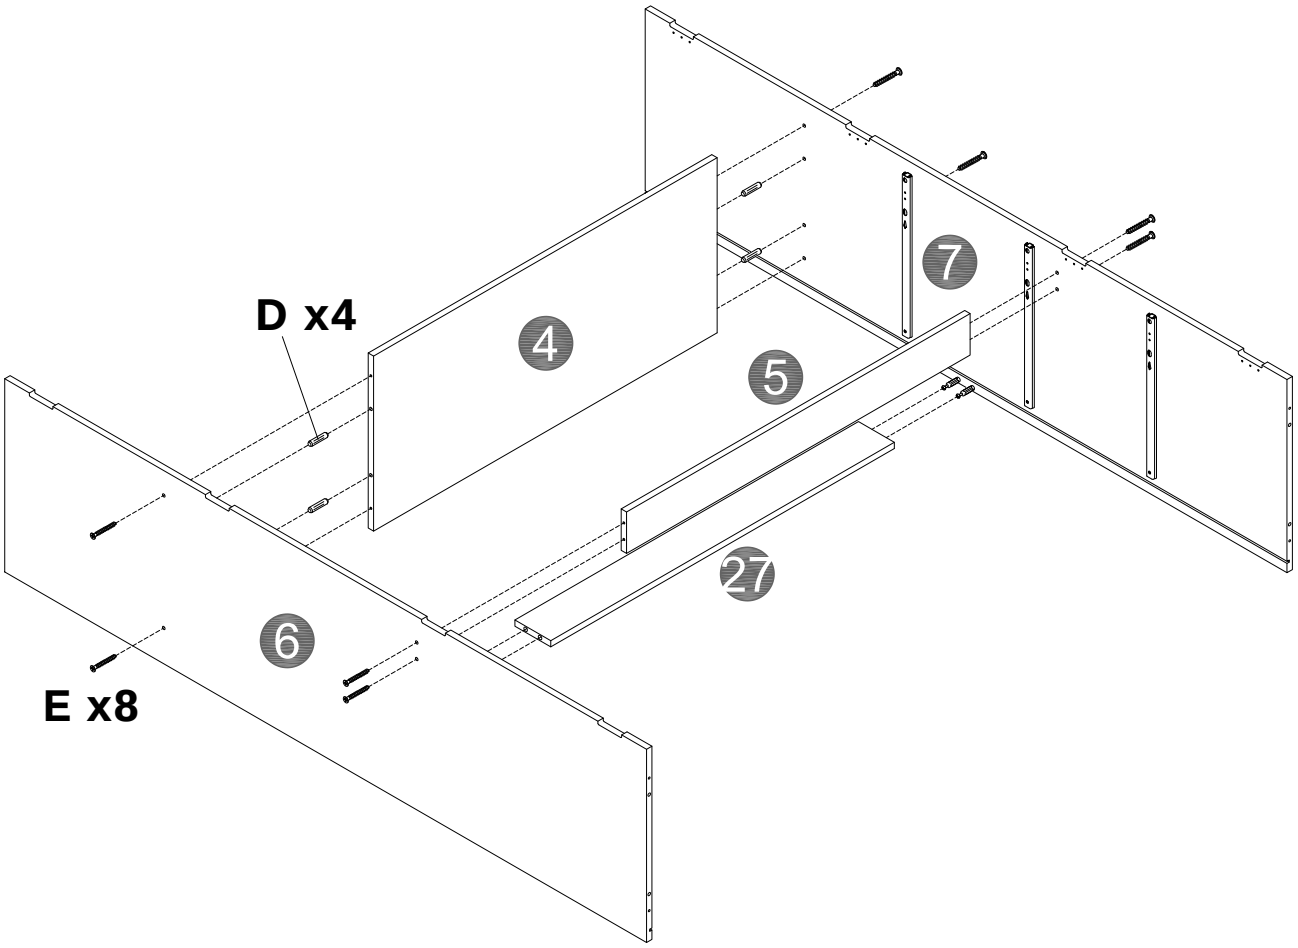
When installing the backplane, use foam to cushion the bottom of the backplane.



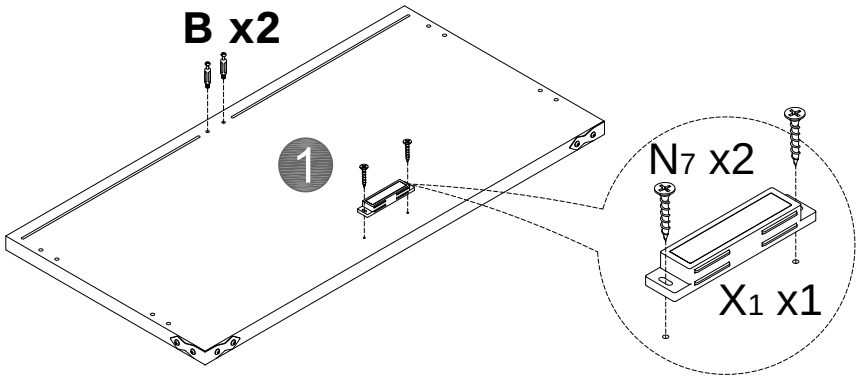

4
B 4PCS
L 3set
N 12PCS
L
N x3
L
B x2
L
7
L
B x2
N x3
L
6
L
N
L
N
L
N x3
N x3

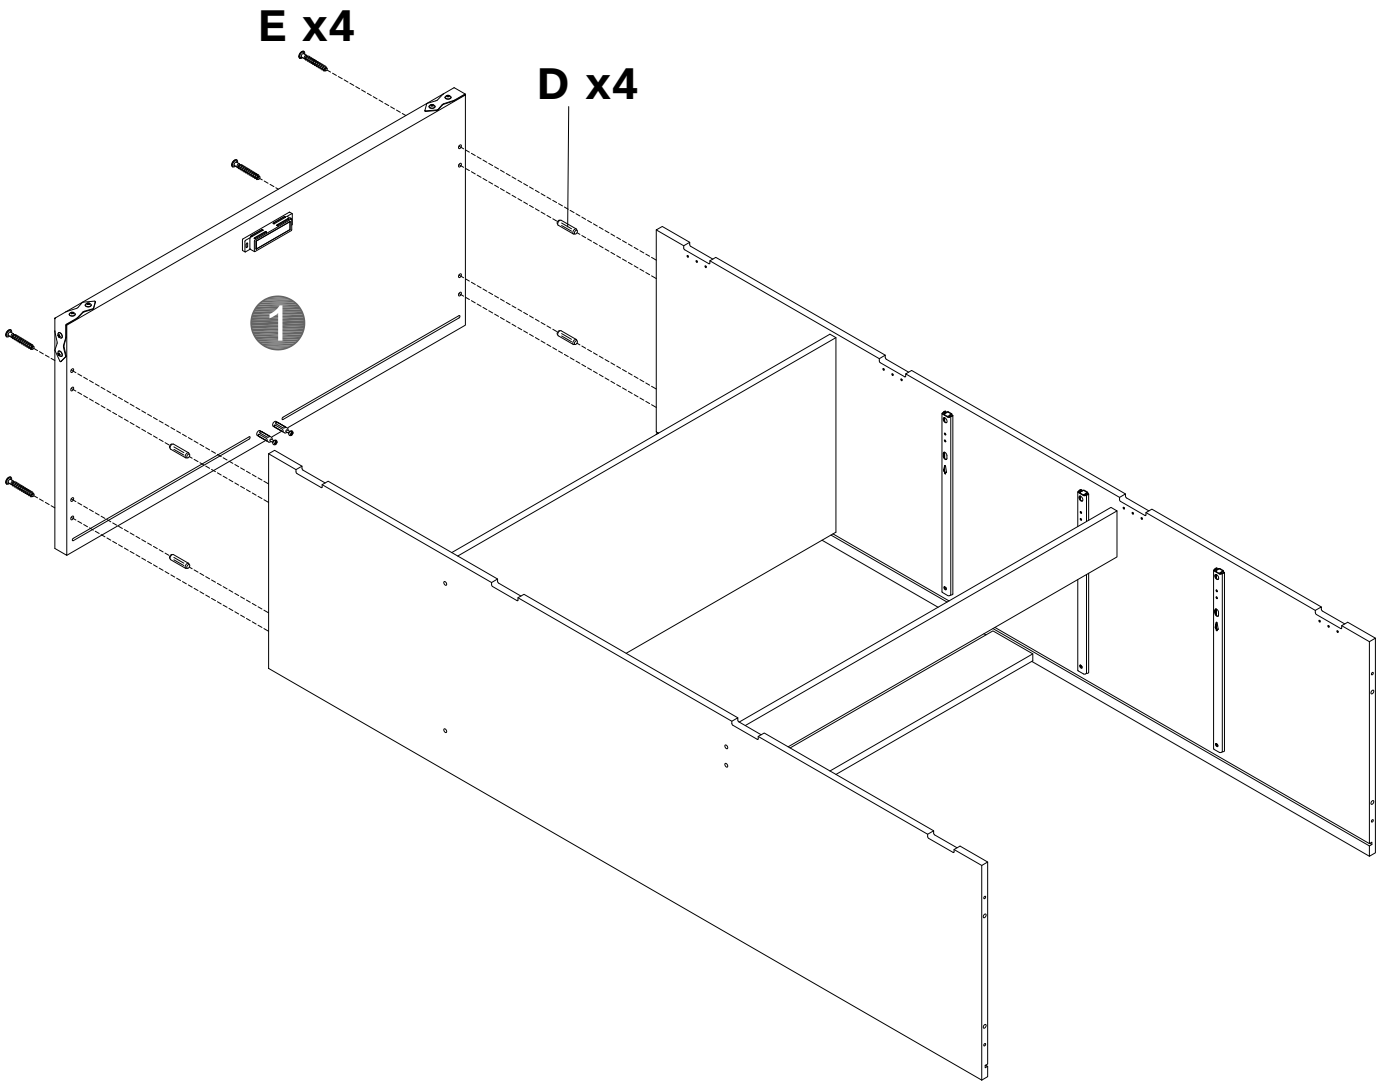
5

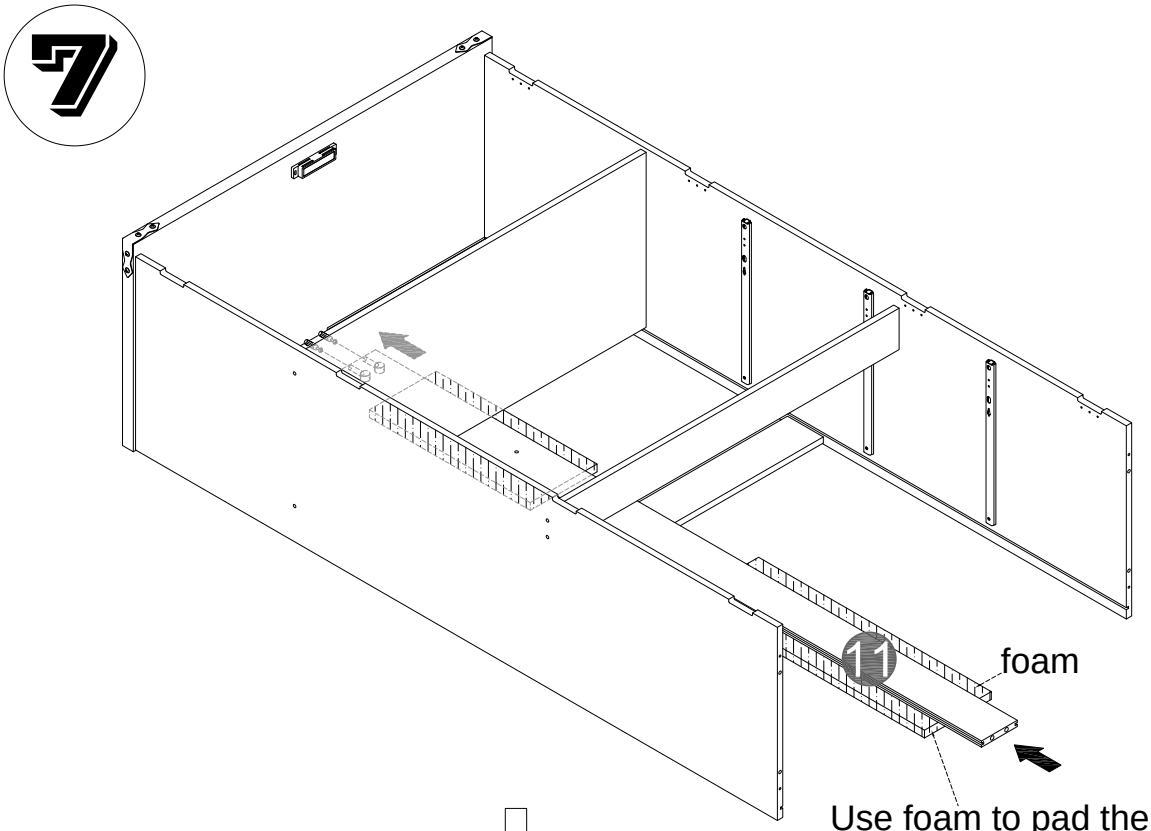
D	4 PCS	E	8 PCS
			



B	D	E	N7	X1
2 PCS	4 PCS	4 PCS	2 PCS	1 PCS

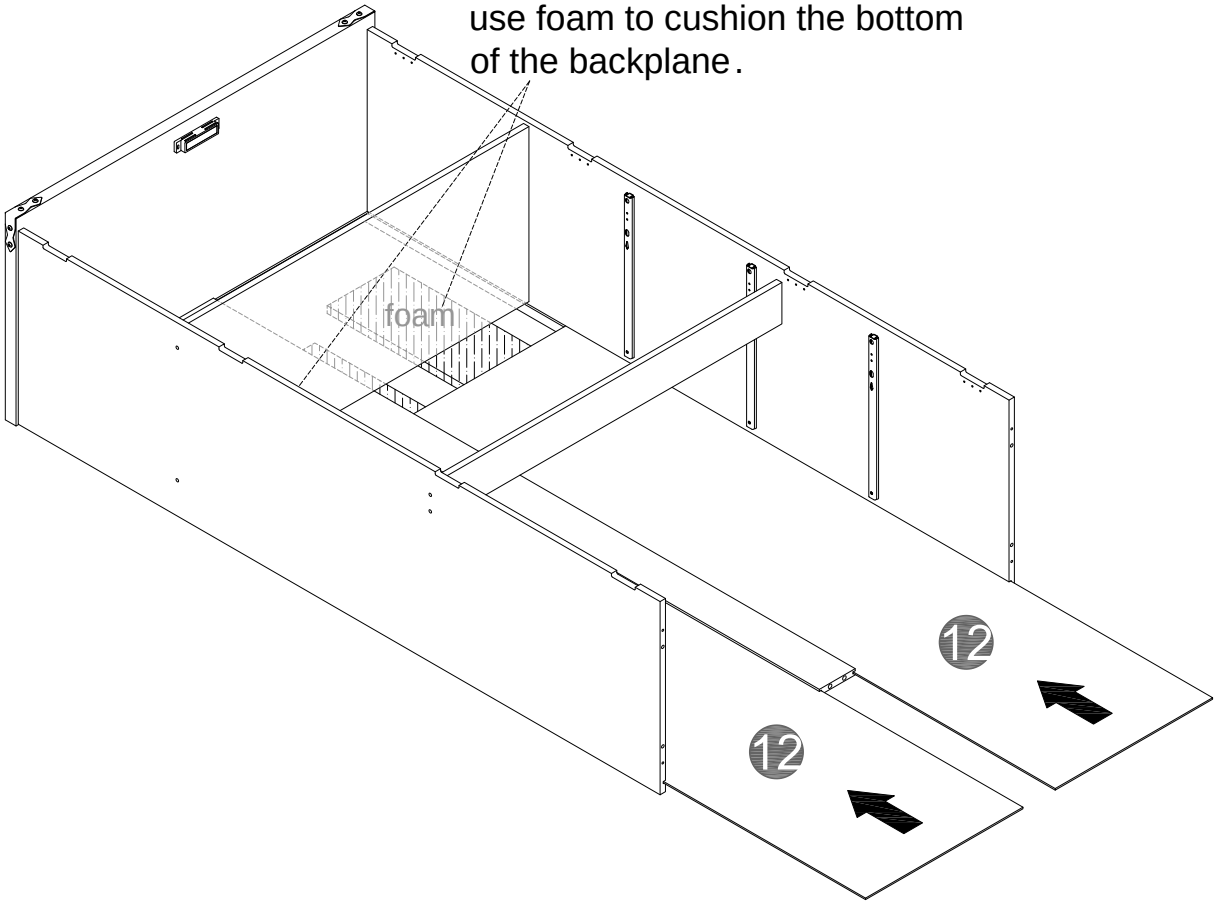






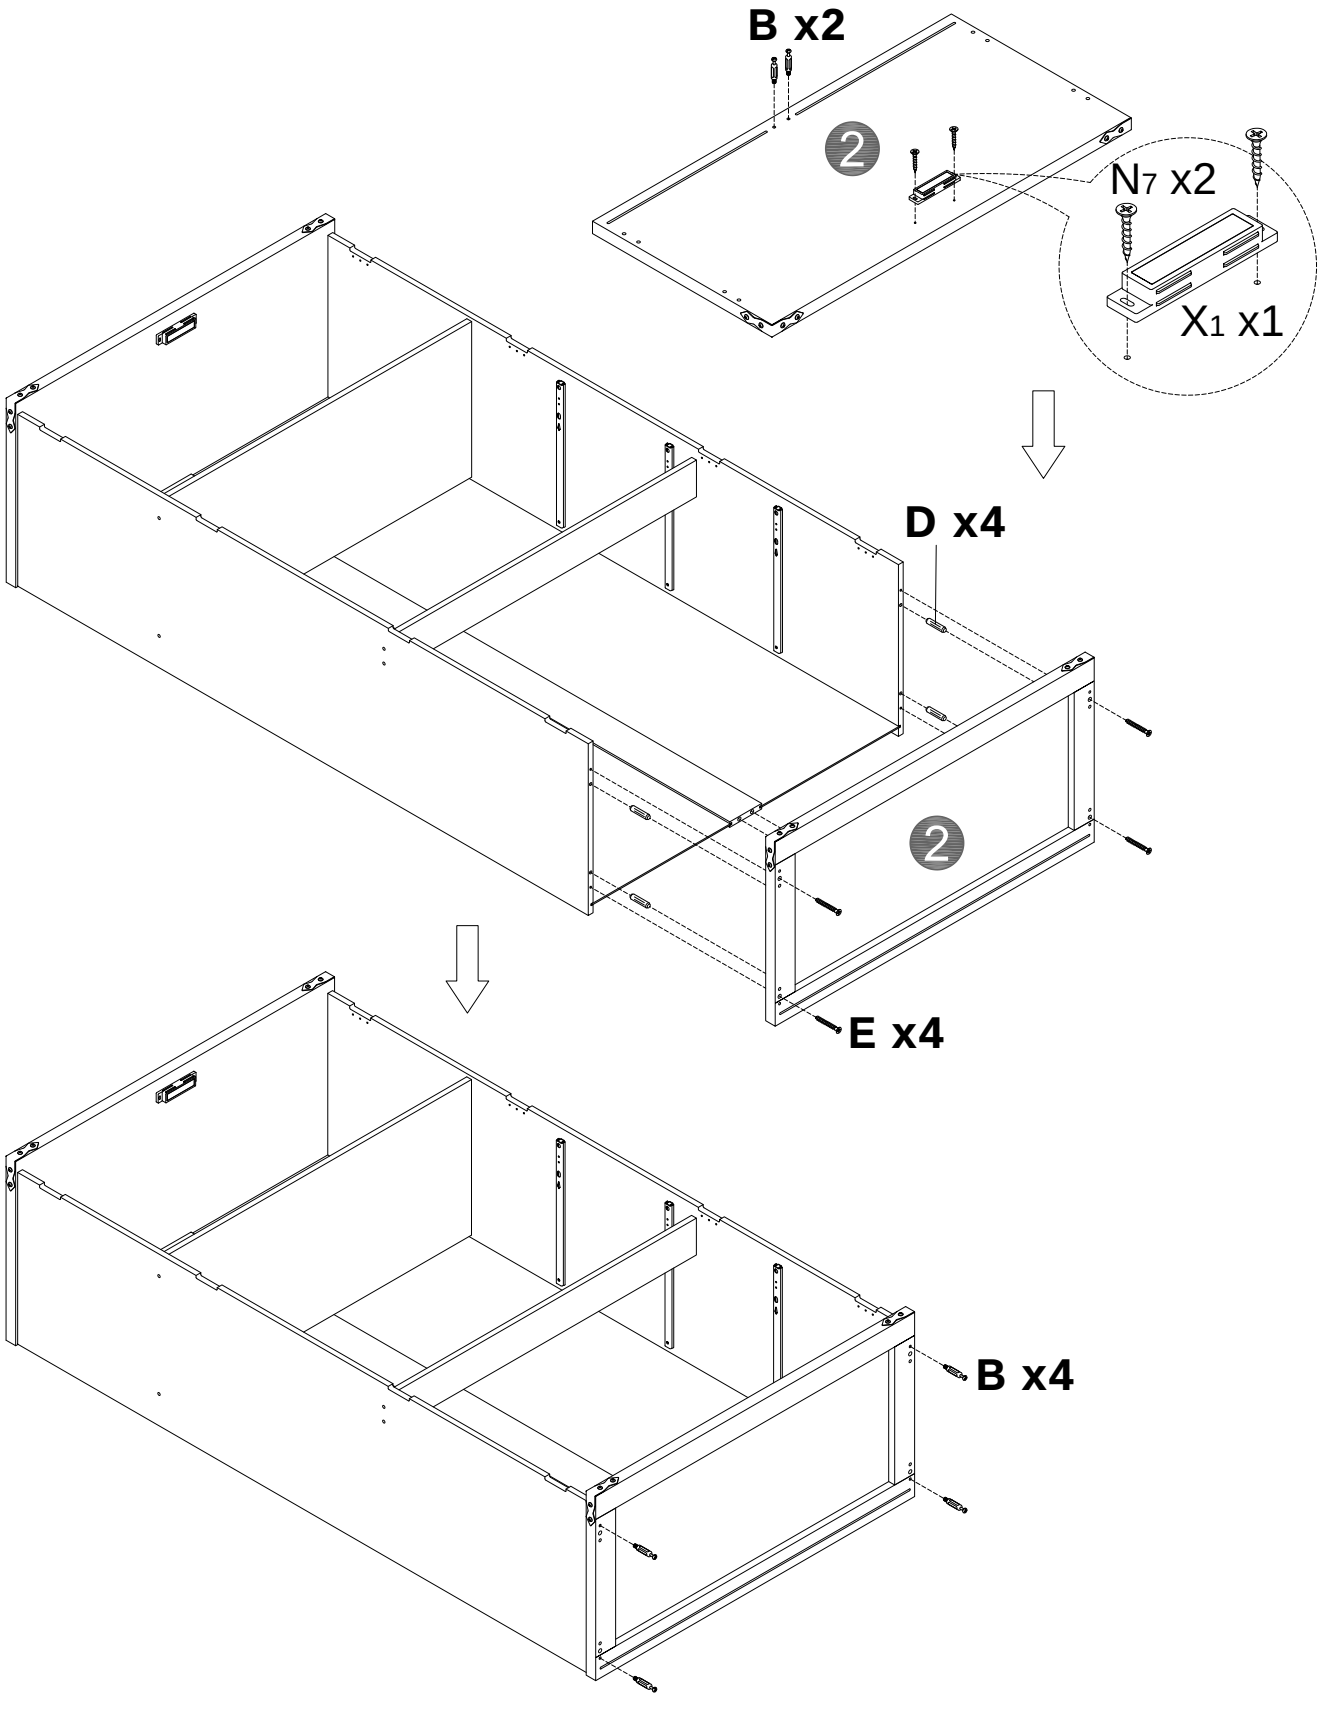
Use foam to pad the back brace so that its hole position is aligned.

When installing the backplane, use foam to cushion the bottom of the backplane.






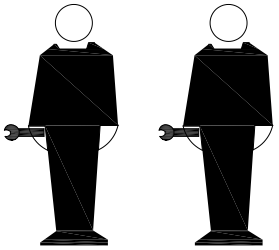
8

B	D	E	N7	X1
6 PCS	4 PCS	4 PCS	2 PCS	1 PCS

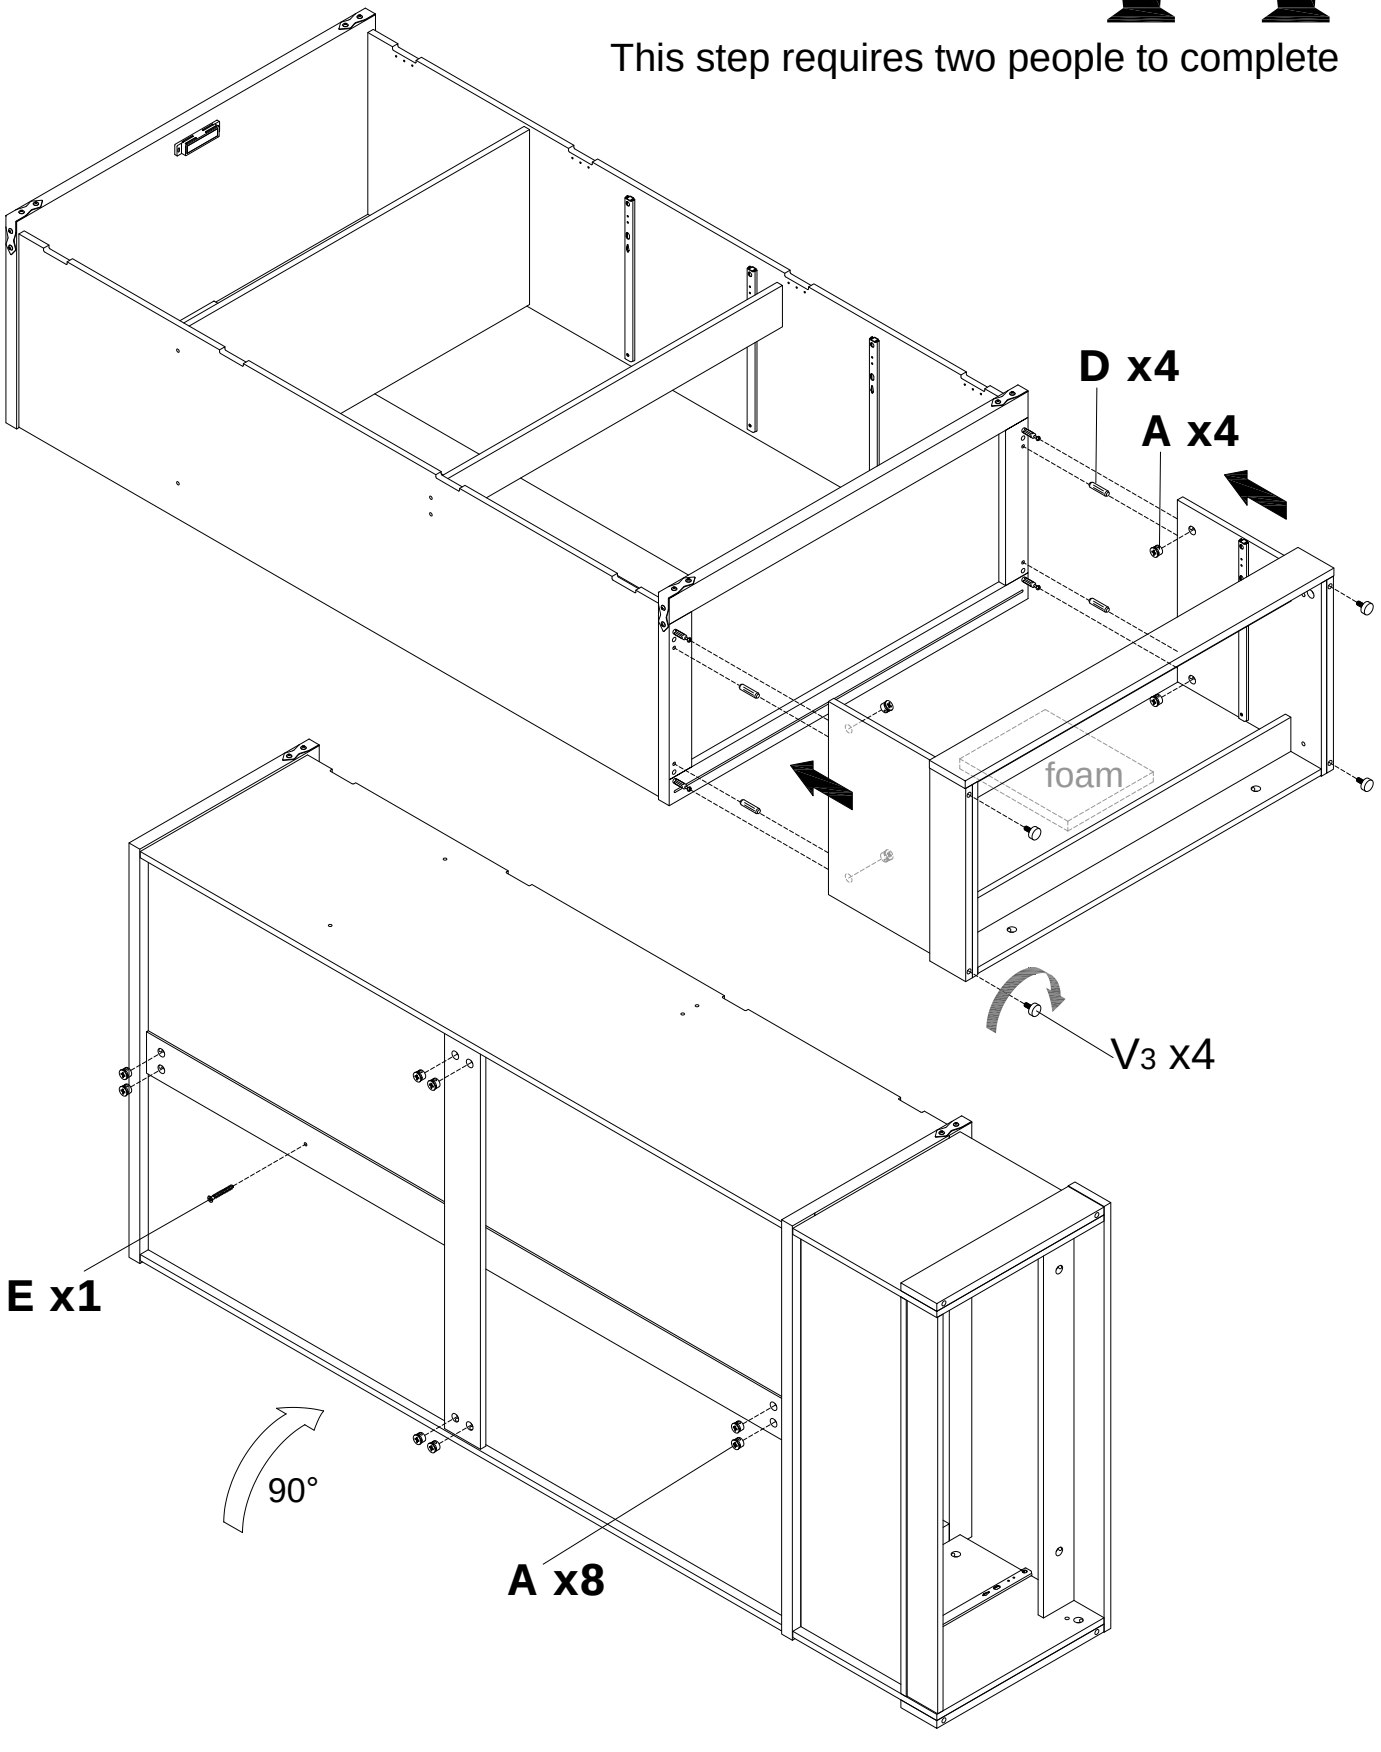


9

A	D	E	V3
12 PCS	4 PCS	1 PC	4 PCS
			

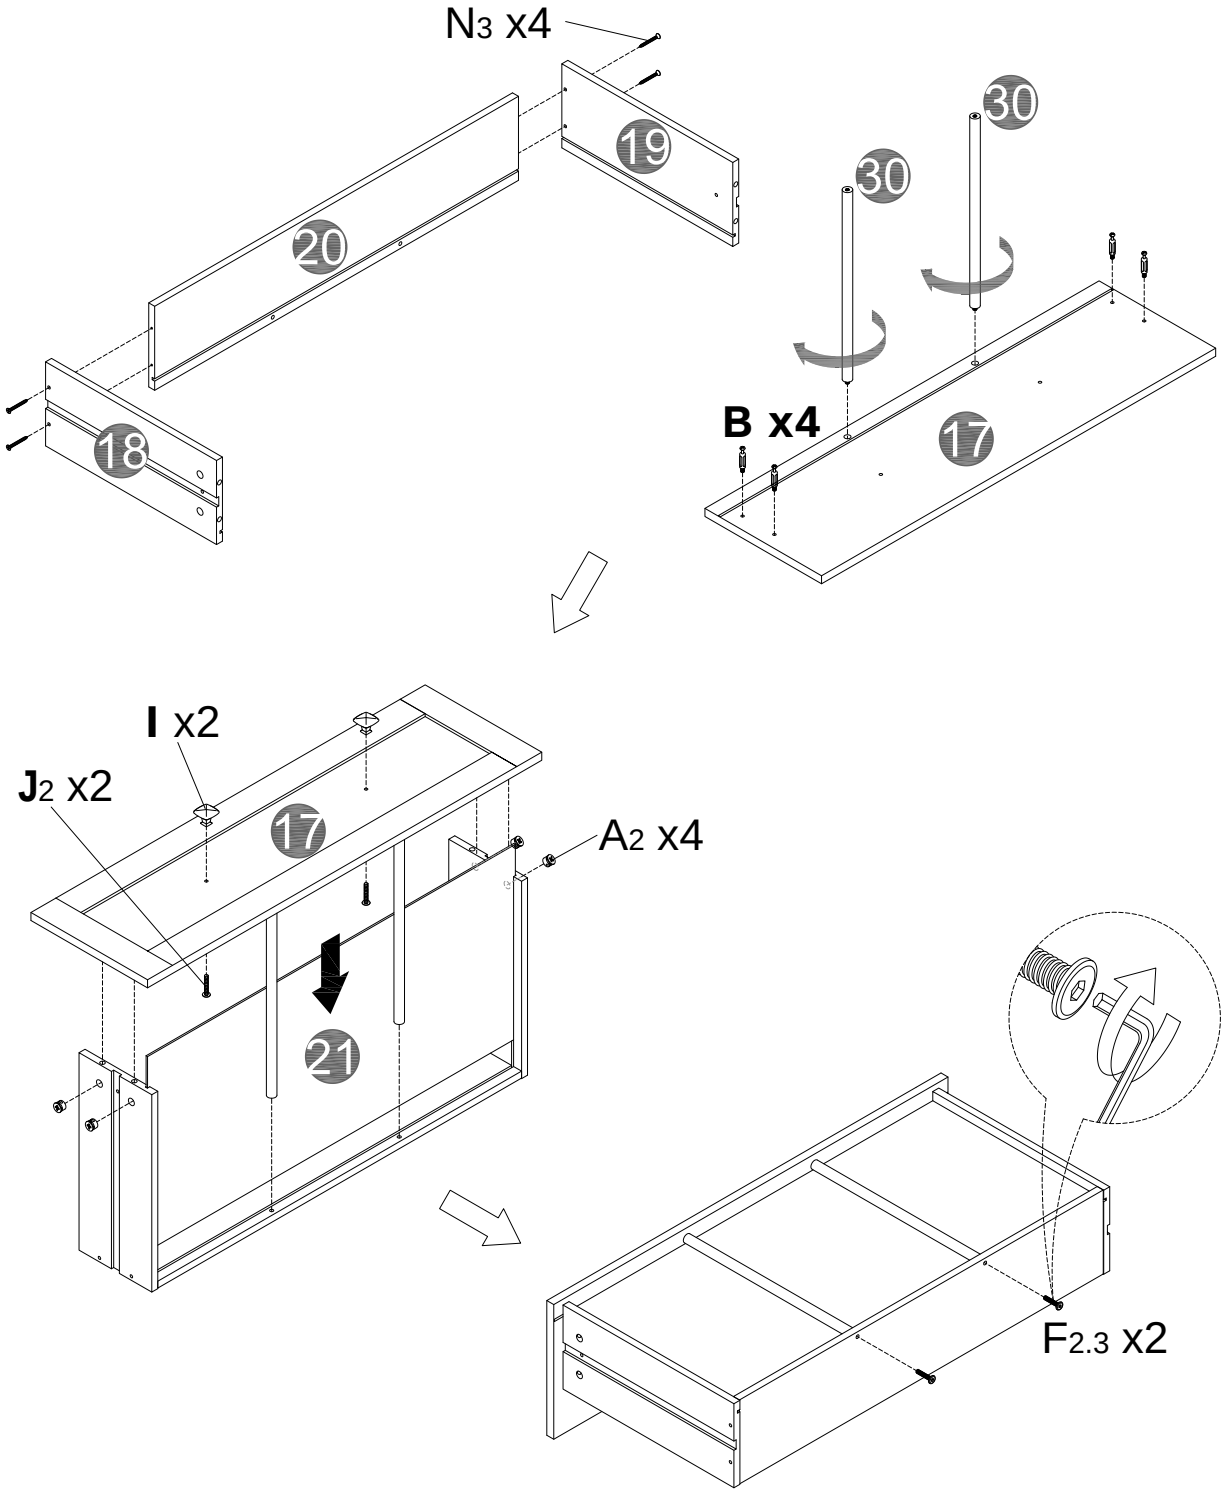


This step requires two people to complete





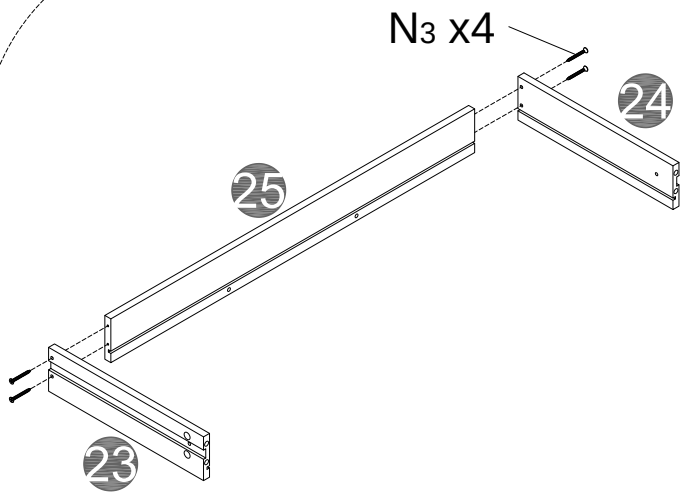
10

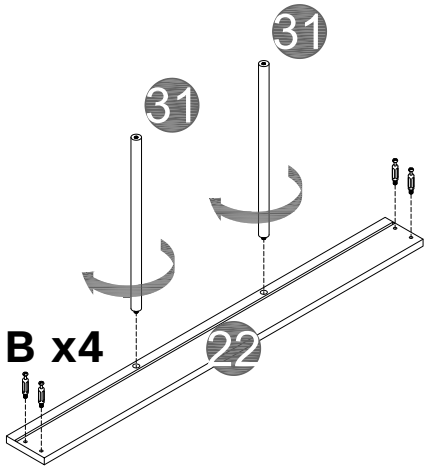
A2	B	F2.3	N3	I	J2
4 PCS	4 PCS	2 PCS	4 PCS	2 PCS	2 PCS

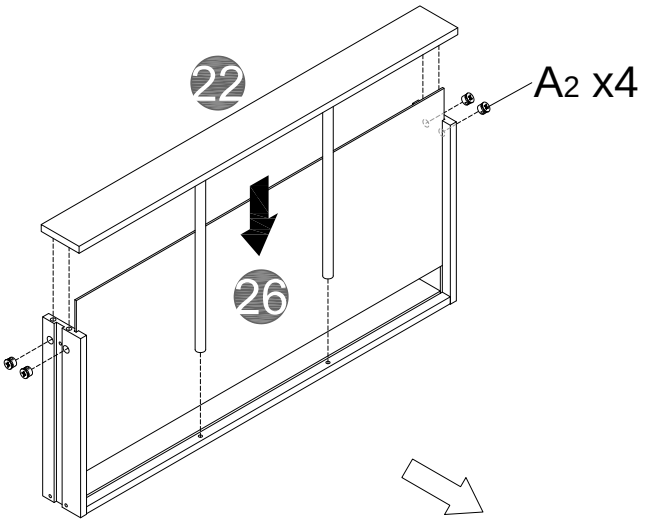


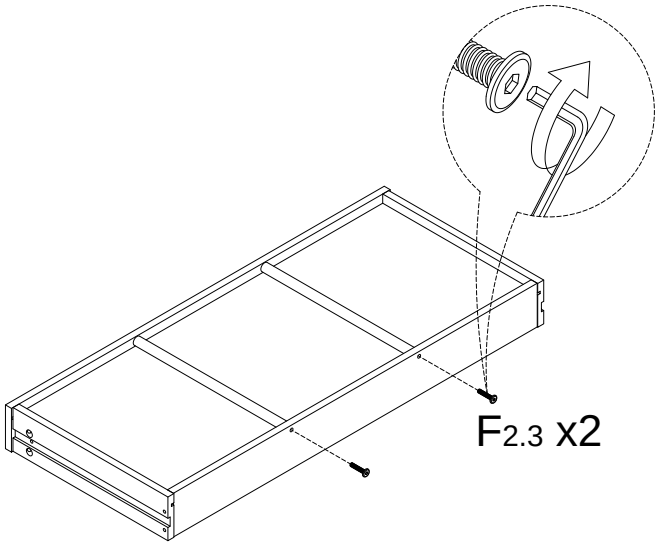
11

A2	12 PCS	B	12 PCS	F2.3	6 PCS	N3	12 PCS
							





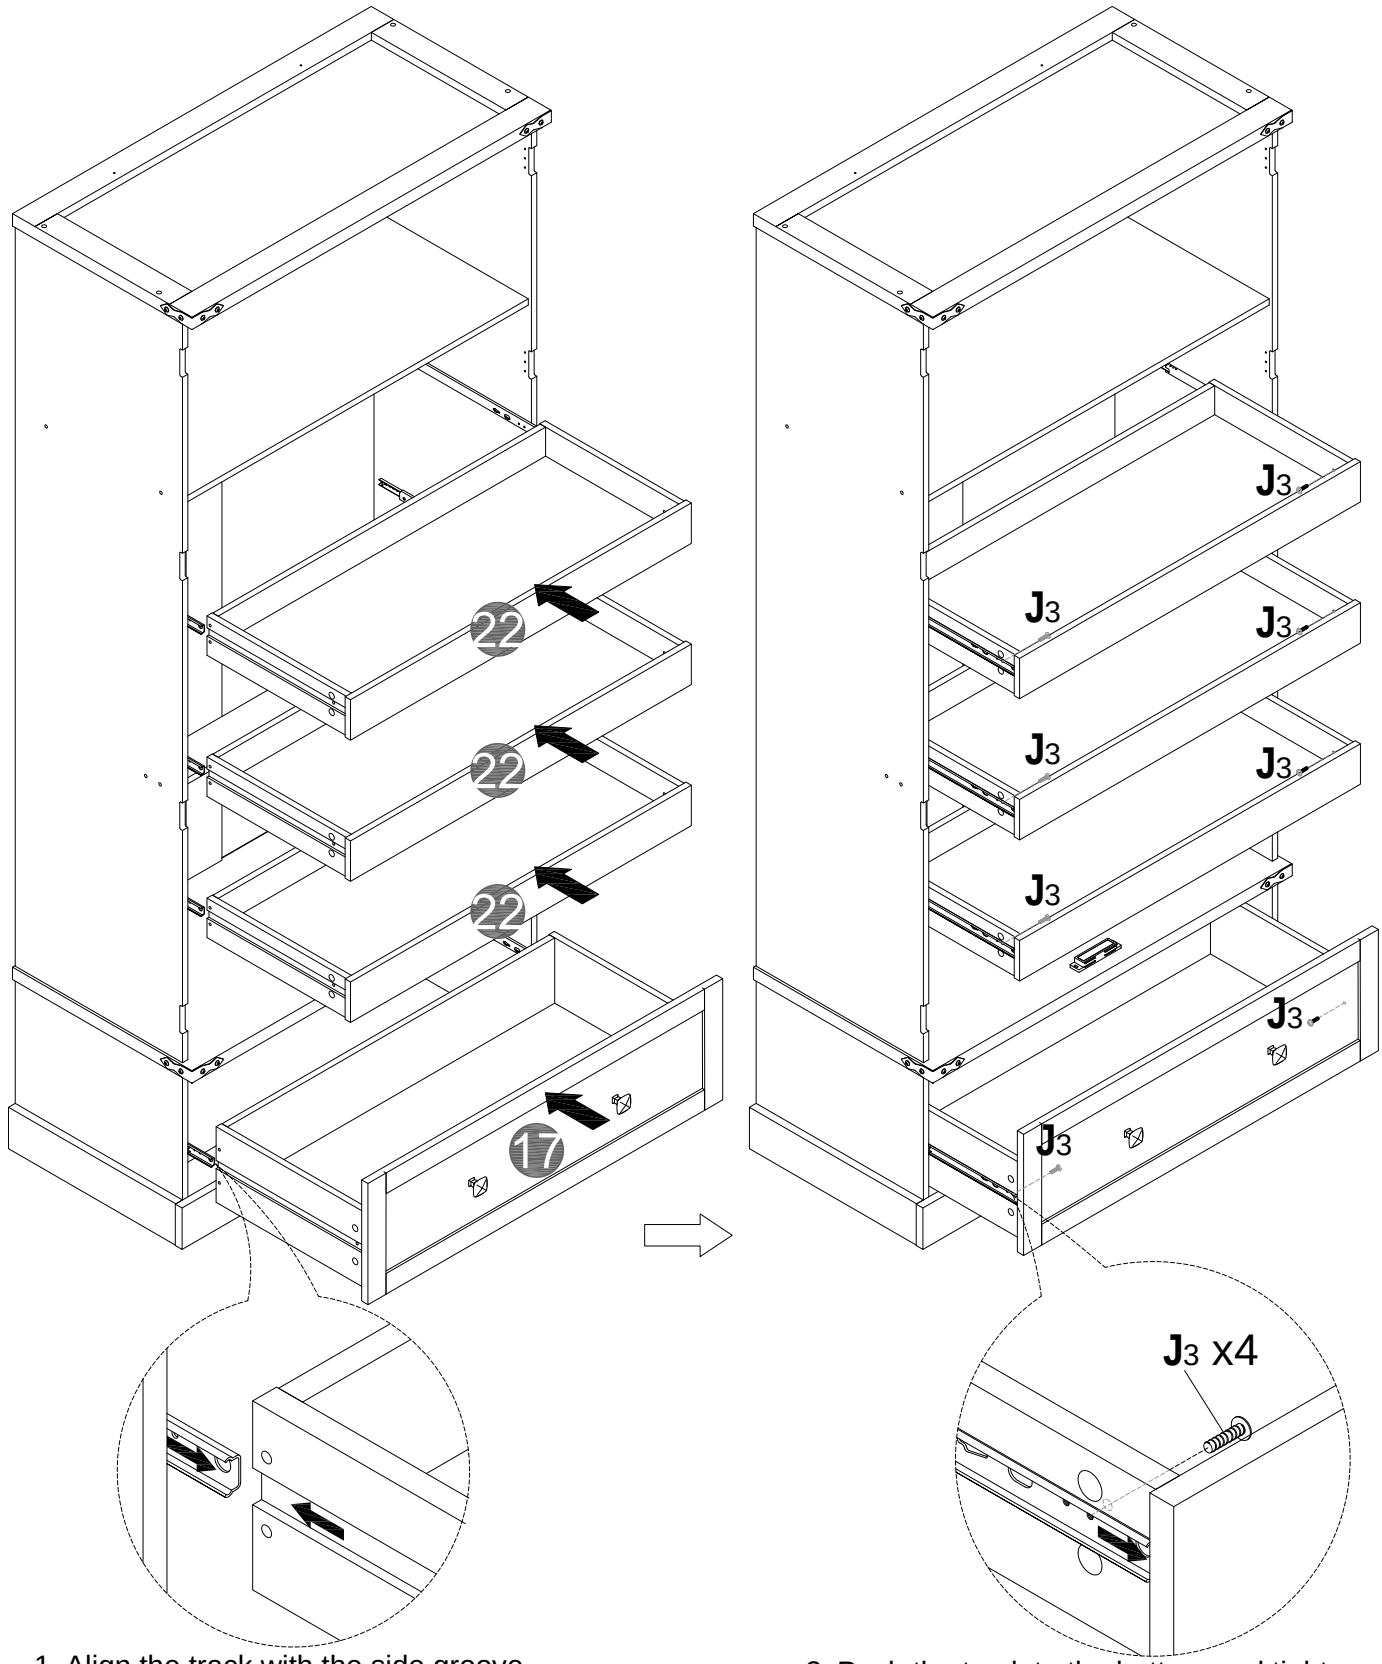




x3

12

J3 8PCS



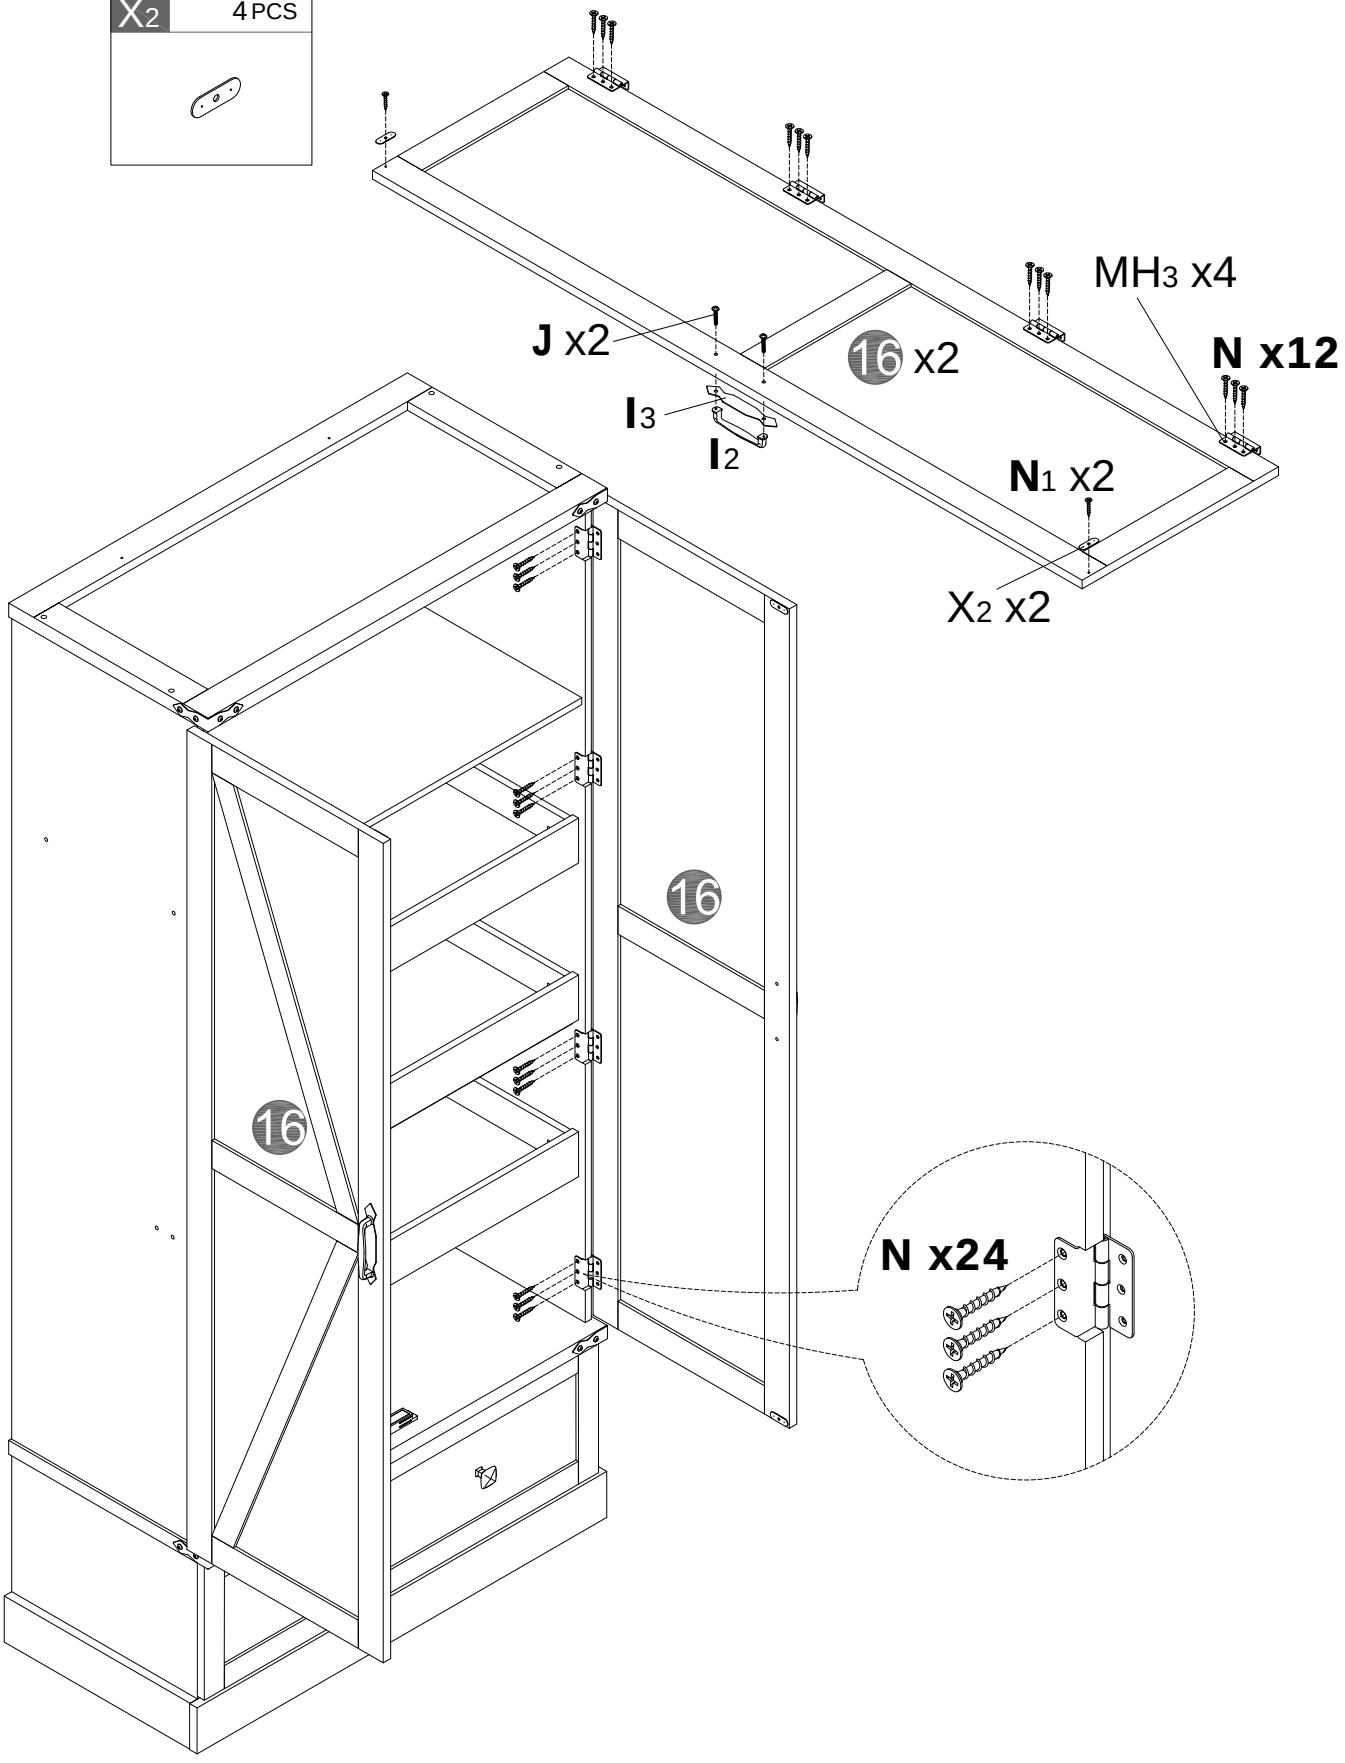
1. Align the track with the side groove and insert both sides simultaneously

2. Push the track to the bottom and tighten the screws from the inside of the board


13

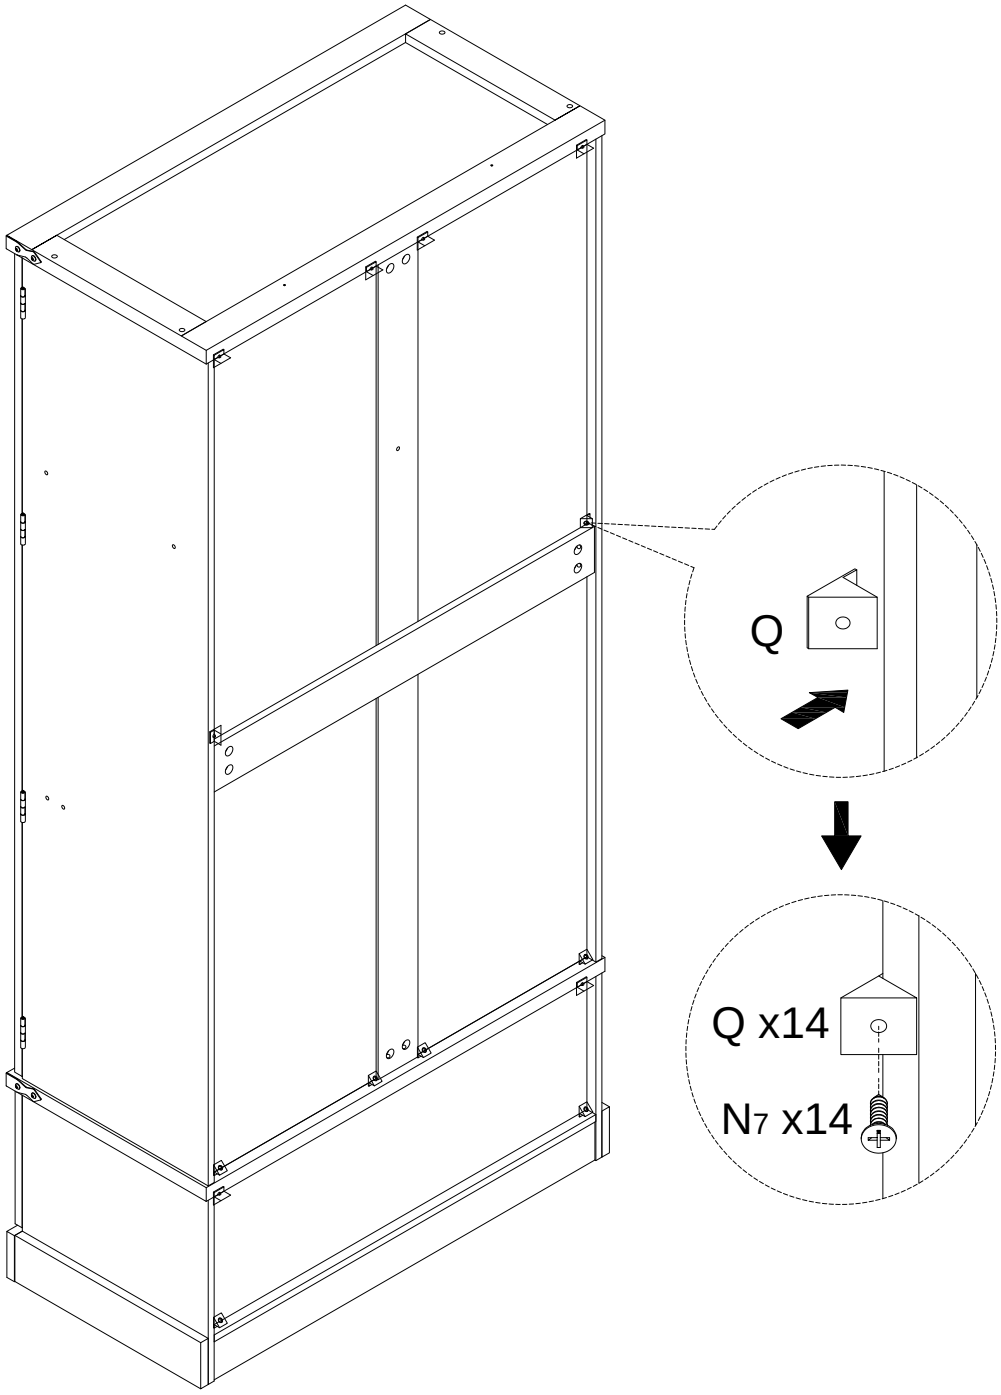
I2	I3	J	N	N1	MH3
2 PCS	2 PCS	4 PCS	48 PCS	4 PCS	8 PCS

X2
4 PCS

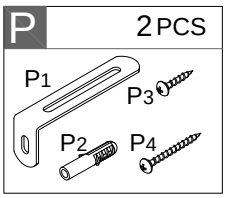


14

Q	14 PCS	N7	14 PCS
			

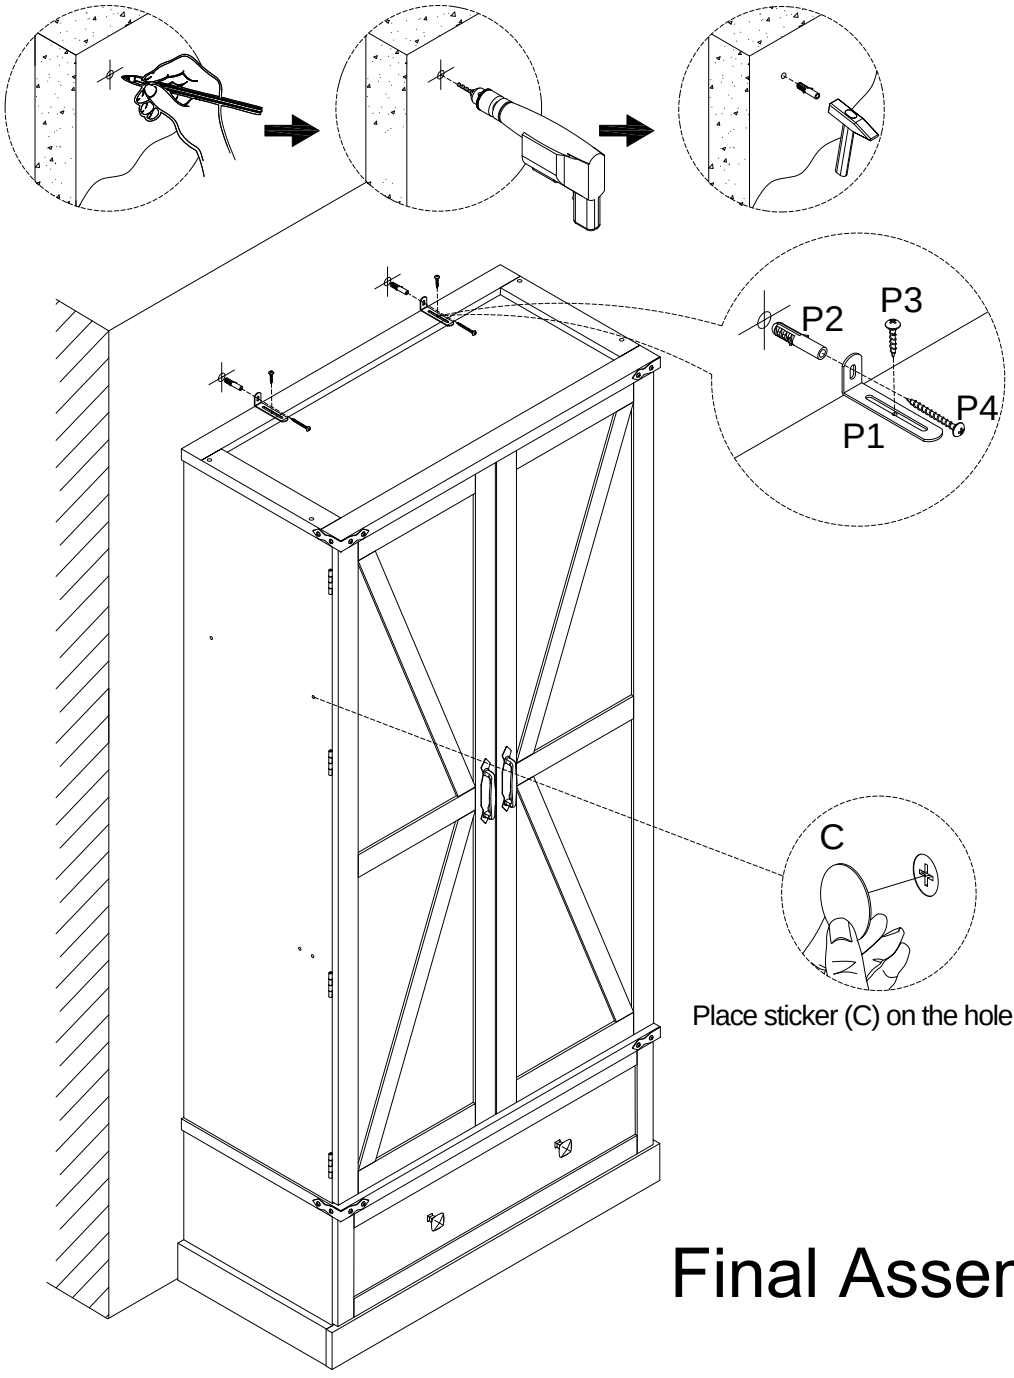


15



⚠ Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.



Place sticker (C) on the hole.

Final Assembly