

BCT402ZP

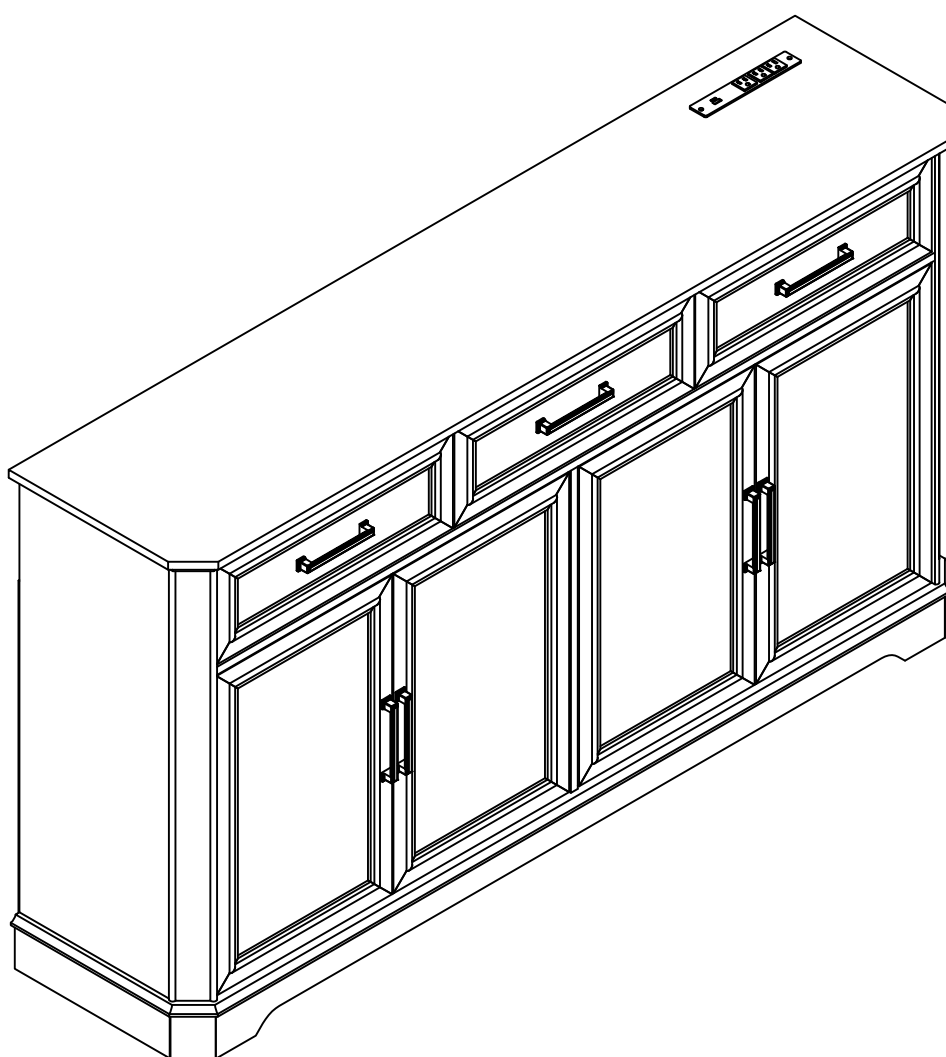


As this item contains many parts, please read the installation instruction carefully before installation . Please use tools properly and carefully. If you have any questions about the product and installation, please contact us.

sales@fiakoa.com

Our professional after-sales team will serve you online all day.

Before You Start

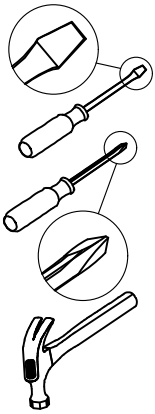


- ✓ Read through each step carefully and follow the proper order
- ✓ Separate and count all your parts and hardware
- ✓ Give yourself enough room for the assembly process
- ✓ Have the following tools: Flat Head Screwdriver, #2 Phillips Head Screwdriver and Hammer
- ✓ Caution: If using a power drill or power screwdriver for screwing, please be aware of to slow down and stop when screw is tight. (Assembly speed can be increased by using electric screwdriver)

Helpful Hints


PEOPLE NEEDED FOR ASSEMBLY: 1-2

- Open your item in the area you plan to keep it to avoid excessive heavy lifting.
- Identify, sort and count the parts before attempting assembly.
- Compression dowels are lightly tapped in with a hammer.
- Slides are labeled with an **R** (right) and **L** (left) for proper placement.
- Make sure to always face the point on the top of the Cam Lock towards the outer edge.
- If there is a back panel in the package, please install it to make sure your unit is complete and sturdy.
- Please fix all the screws provided for the back panel which can enhance product stability. If it is difficult to fix it when tightening, it can be fixed with the help of a hammer and then tightened.
- Do NOT use harsh chemicals or abrasive cleaners on this item.
- Never push, pull, or drag your furniture.

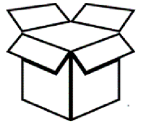


Board Identification


Not actual size

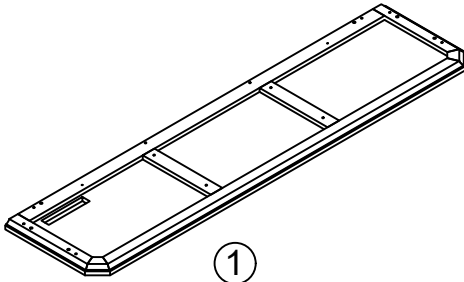


①
TOP
Qty:1

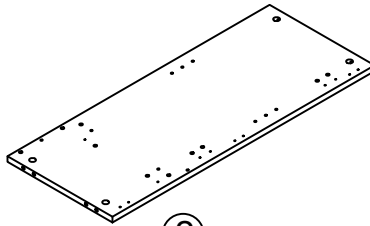


②
LEFT SIDE PANEL
Qty:1

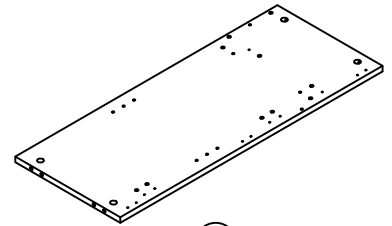


③
RIGHT SIDE PANEL
Qty:1

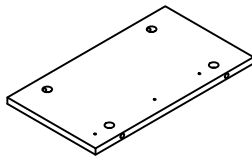


④
MIDDLE PANEL
Qty:2

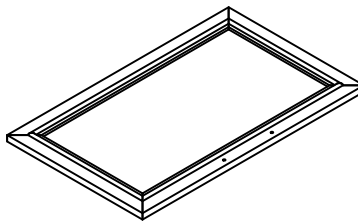


⑤
DOOR
Qty:4

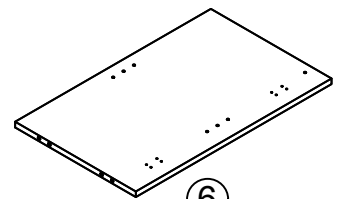


⑥
MIDDLE PANEL
Qty:1

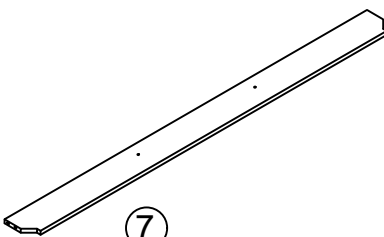


⑦
MIDDLE PANEL
Qty:1

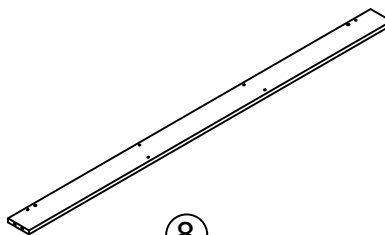


⑧
MIDDLE PANEL
Qty:1

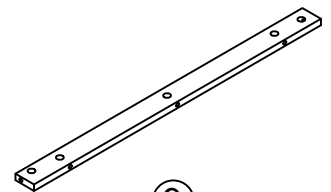


⑨
FRONT SLAT
Qty:2

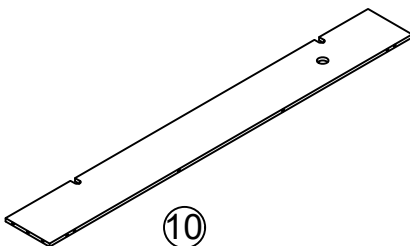

⑩
BACK PANEL
Qty:1

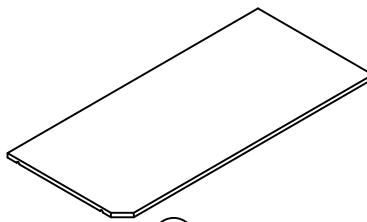


⑪
SHELF PANEL
Qty:1

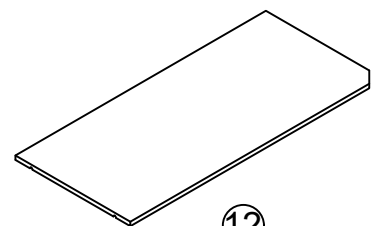


⑫
SHELF PANEL
Qty:1

Board Identification

Not actual size

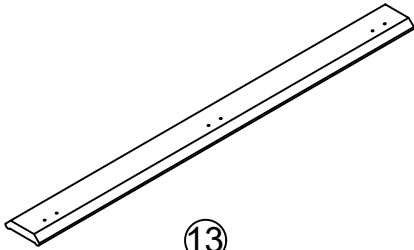


⑬
LEG
Qty:2




⑭
FILLER LATH FOR RUNNER
Qty:2




⑮
FILLER LATH FOR RUNNER
Qty:4

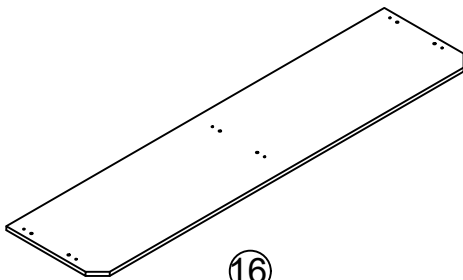


⑯
BOTTOM FRAME
Qty:1

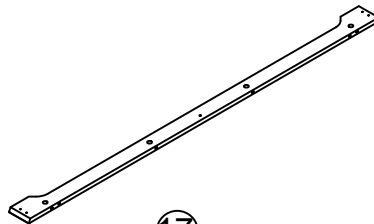


⑰
FRONT FOOT STRIP
Qty:1

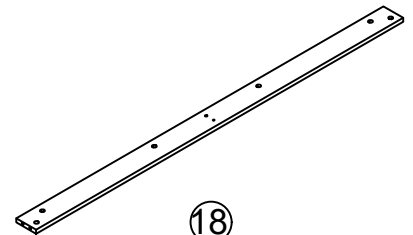


⑱
REAR FOOT STRIP
Qty:1

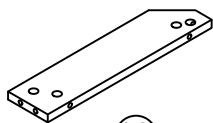

⑲
MIDDLE FOOT STRIP
Qty:1

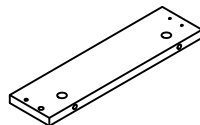


⑳
SIDE FOOT STRIP
Qty:1

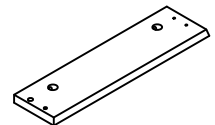


㉑
SIDE FOOT STRIP
Qty:1



㉒
SIDE FOOT STRIP
Qty:2

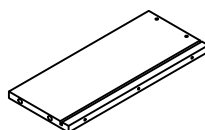


㉓
DRAWER LEFT SIDE
Qty:3

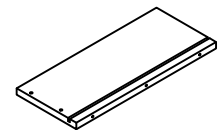

㉔
DRAWER RIGHT SIDE
Qty:3


Board Identification

Not actual size

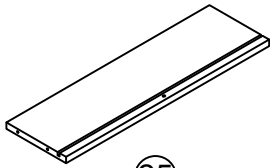


25

DRAWER BACK PANEL
Qty:3

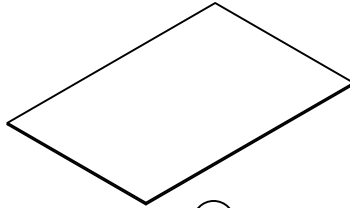


26

DRAWER BOTTOM PANEL
Qty:3




27

DRAWER BOTTOM SLAT
Qty:3

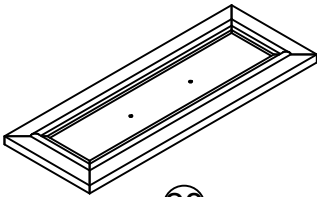


28

LEFT DRAWER FRONT PANEL
Qty:1

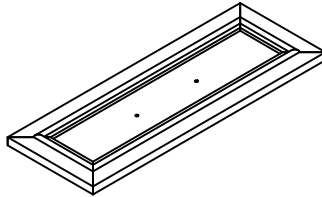


29

DRAWER FRONT PANEL
Qty:1

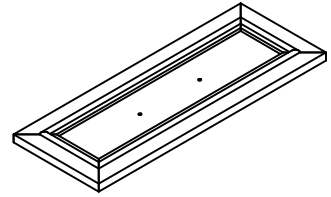

30

RIGHT DRAWER FRONT PANEL
Qty:1

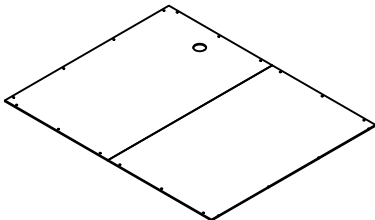


31


BACK PANEL
Qty:2

Board Identification


Not actual size

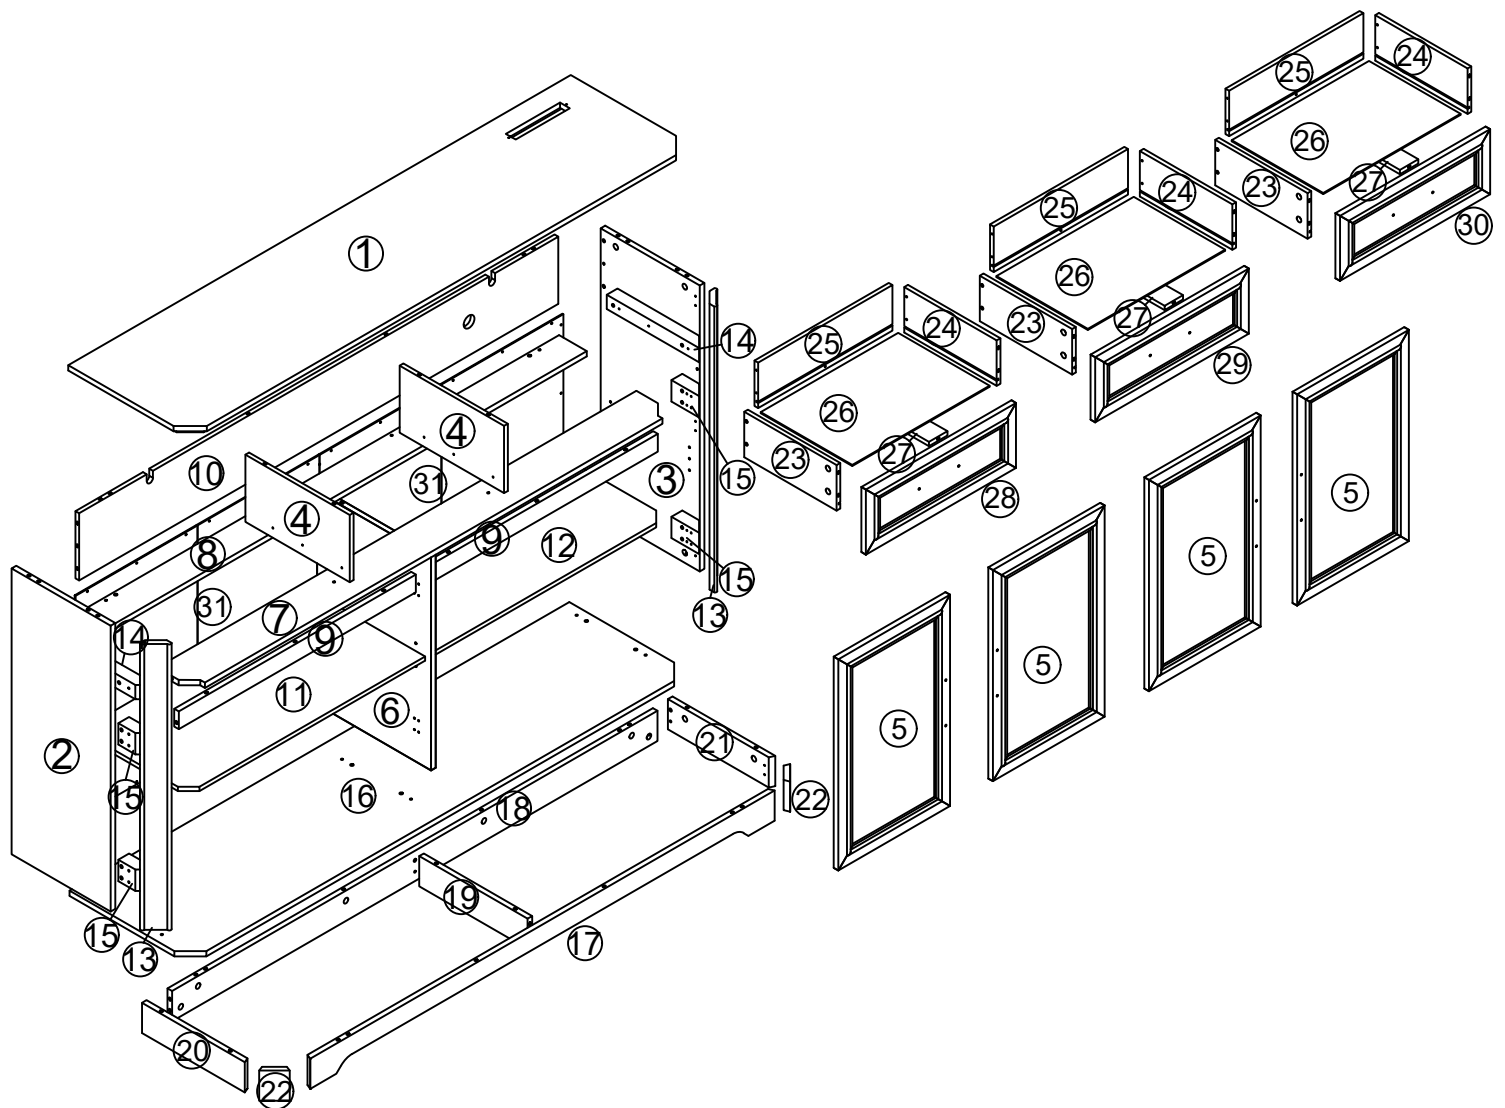


Part List

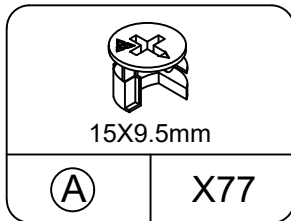


CAM LOCK
spare:3

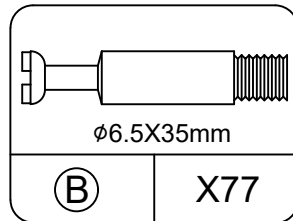


CAM BOLT
spare:3

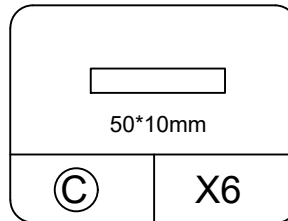


FLOOR-MATS
spare:1

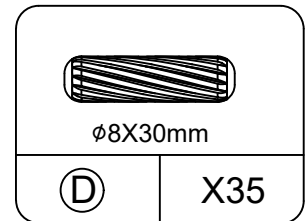


WOOD DOWEL
spare:3

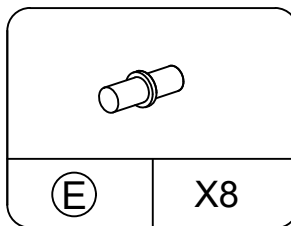


SHELF SUPPORT
spare:2

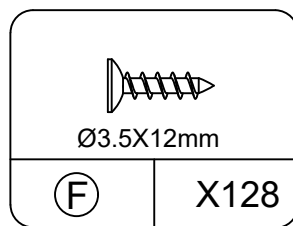


SCREW
spare:3

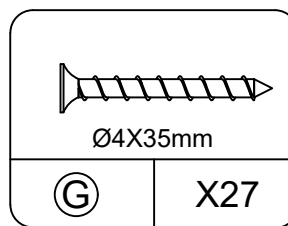


SCREW
spare:2

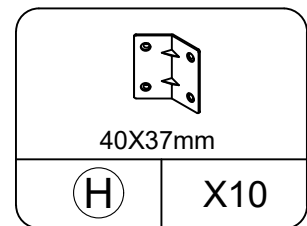


HANDLE

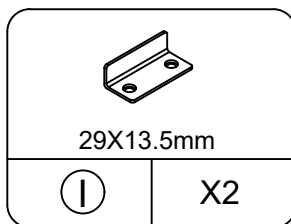


HANDLE

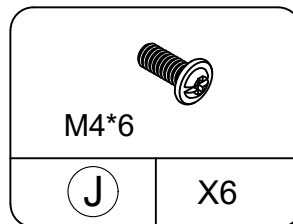


SCREW
spare:1

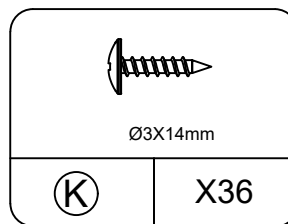


SCREW
spare:3

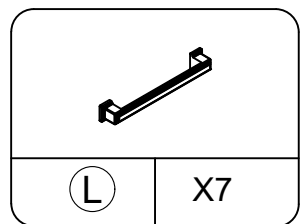


HANDLE

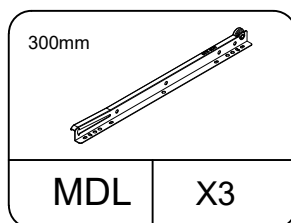


LEFT DRAWER RUNNER

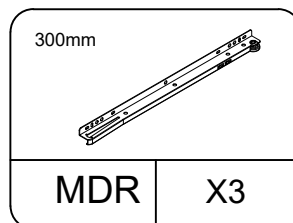

RIGHT DRAWER RUNNER

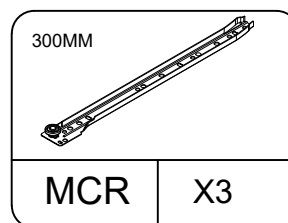


RIGHT CABINET MEMBER

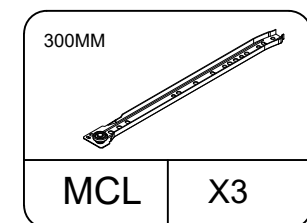


LEFT CABINET MEMBER


Part List

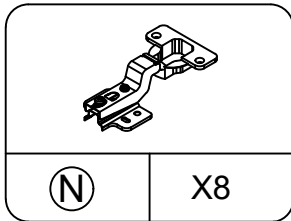


HANDLE

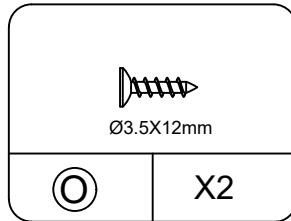


SCREW
spare:1

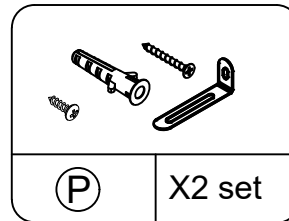


TIPPING RESTRAINT
HARDWARE KIT

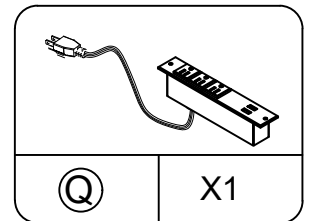

PLUG BOARD

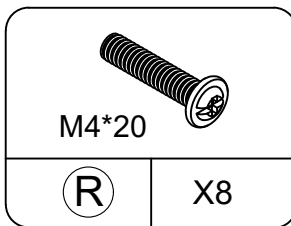


SCREW
spare:2

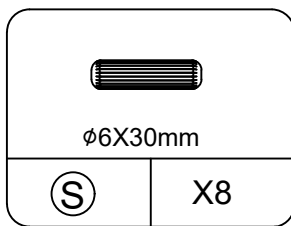







SCREW
spare:2

Insert the cam bolt into the hole first, then insert the cam lock and lock it.






Cam Lock Fastening System

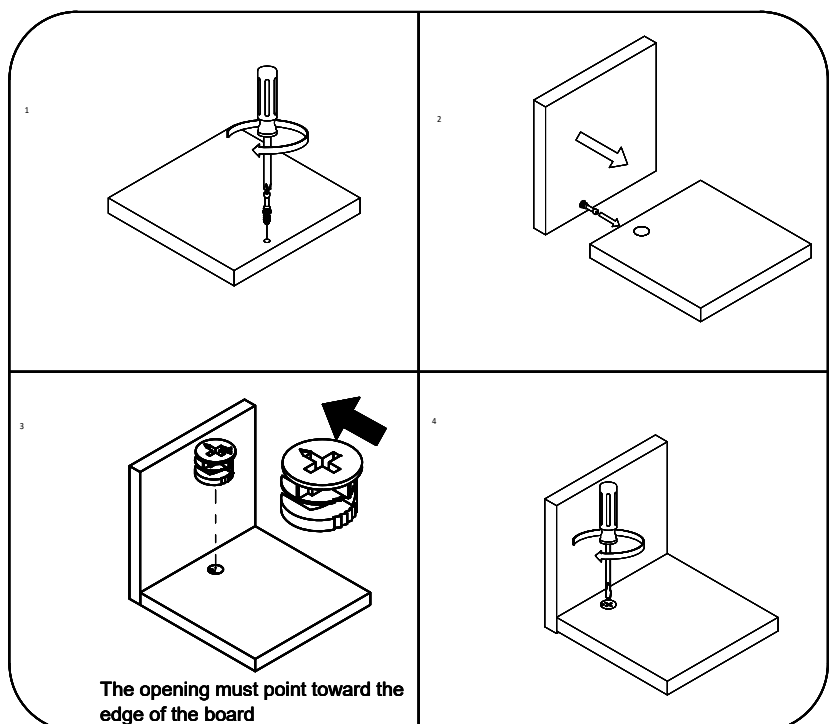


STEP 1

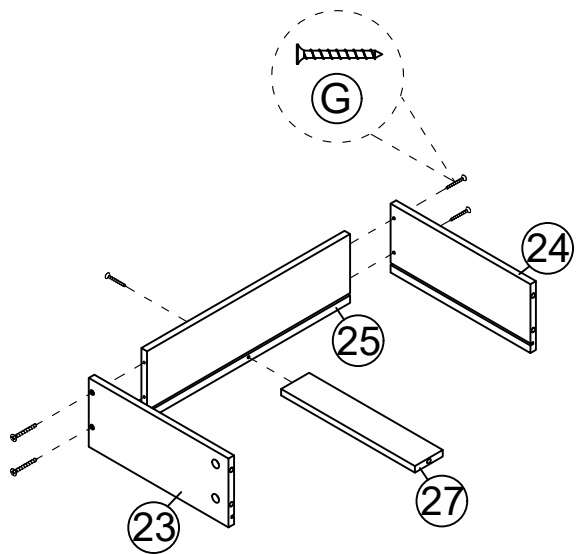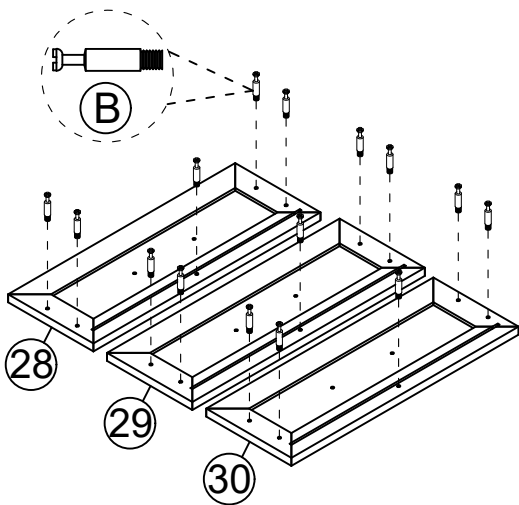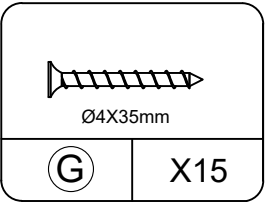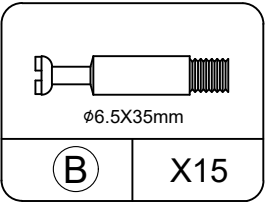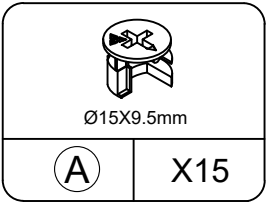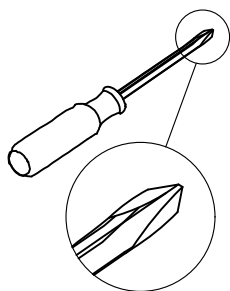


X 3

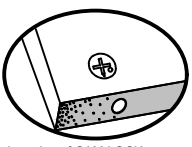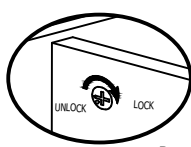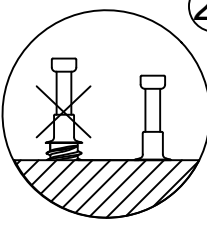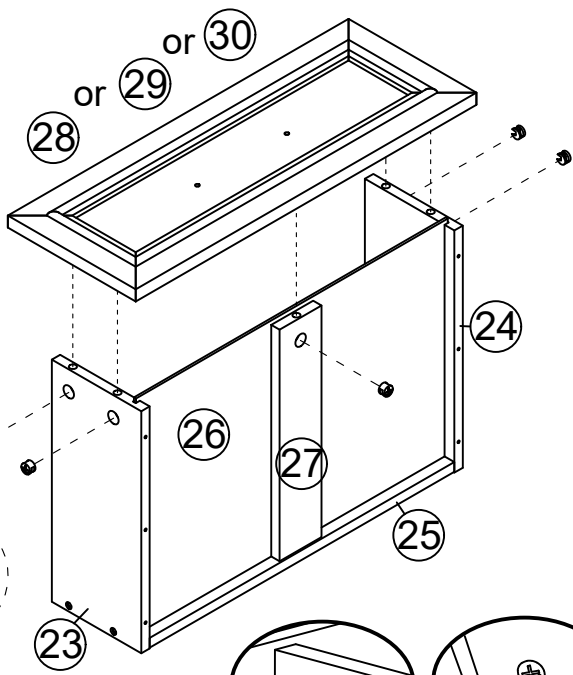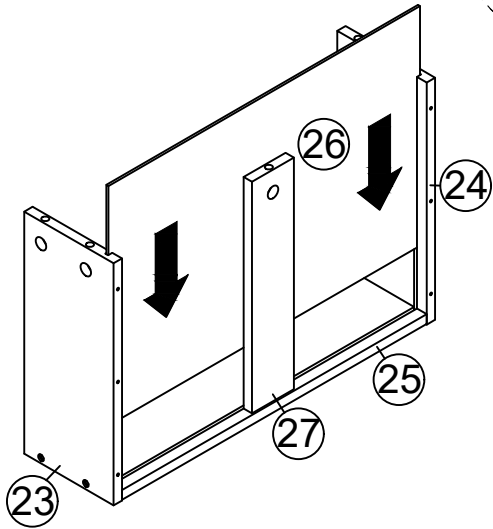



STEP 2

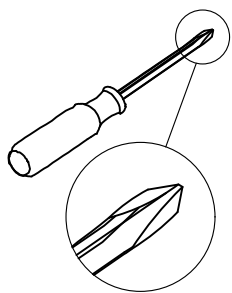






 Ø3.5X12mm	
(F)	X18

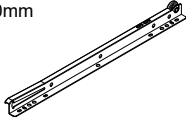300mm 	
MDL	X3





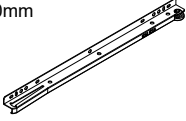
300mm 	
MDR	X3

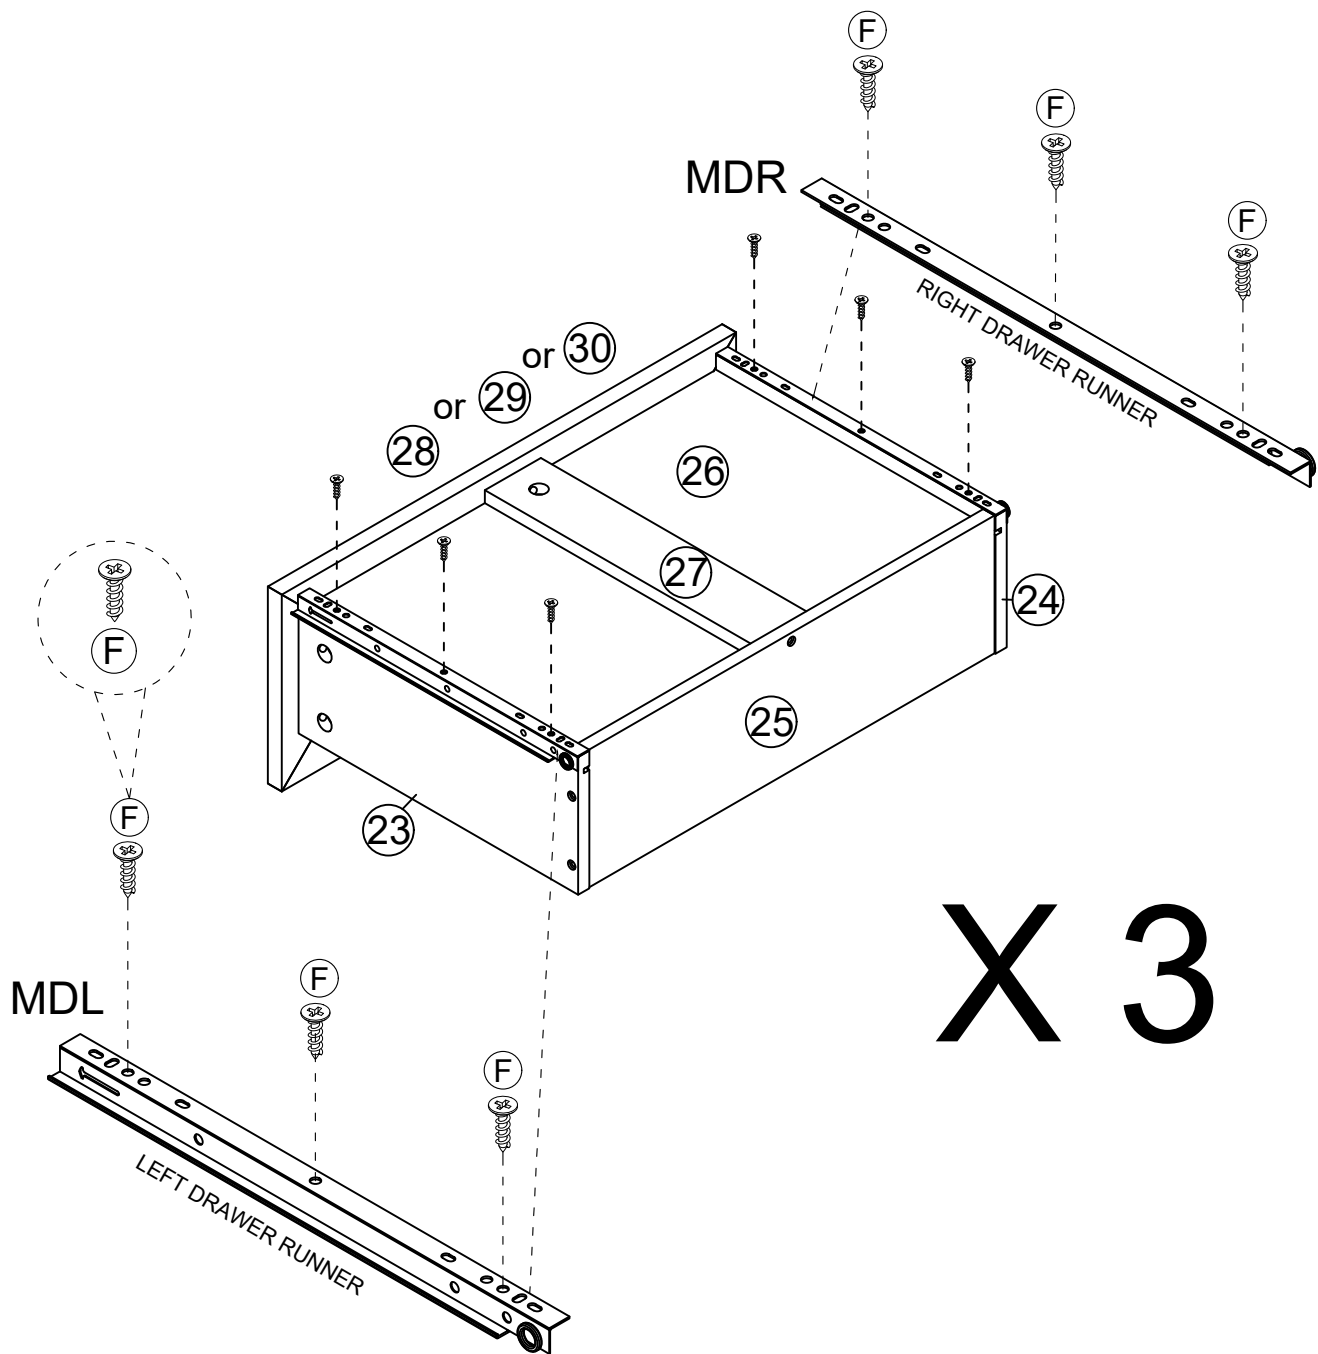




STEP 3

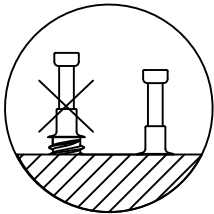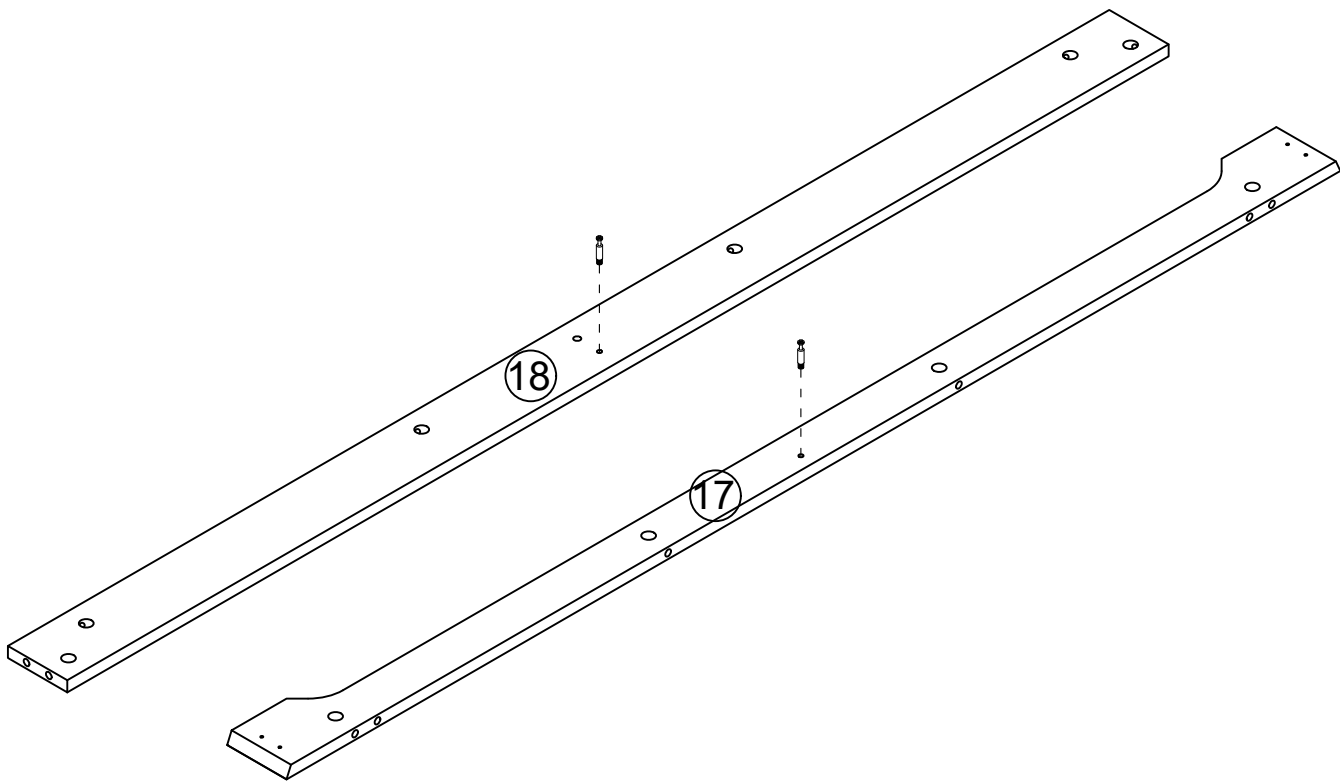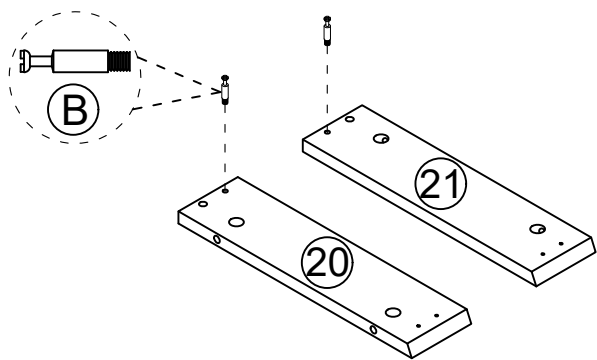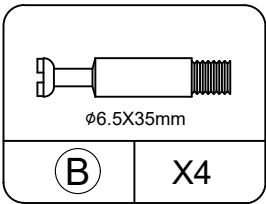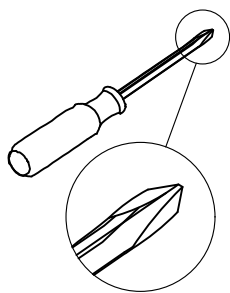





STEP 4

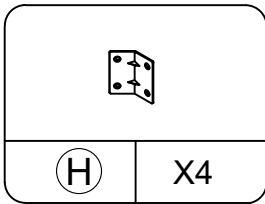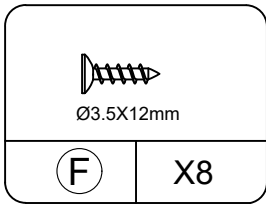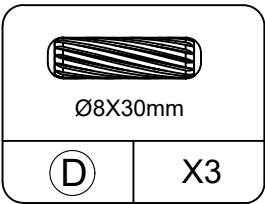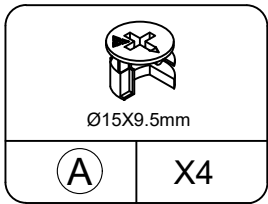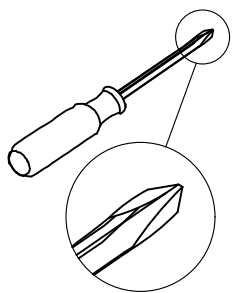







X 2

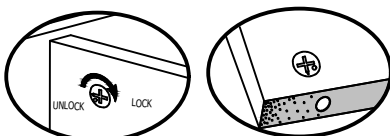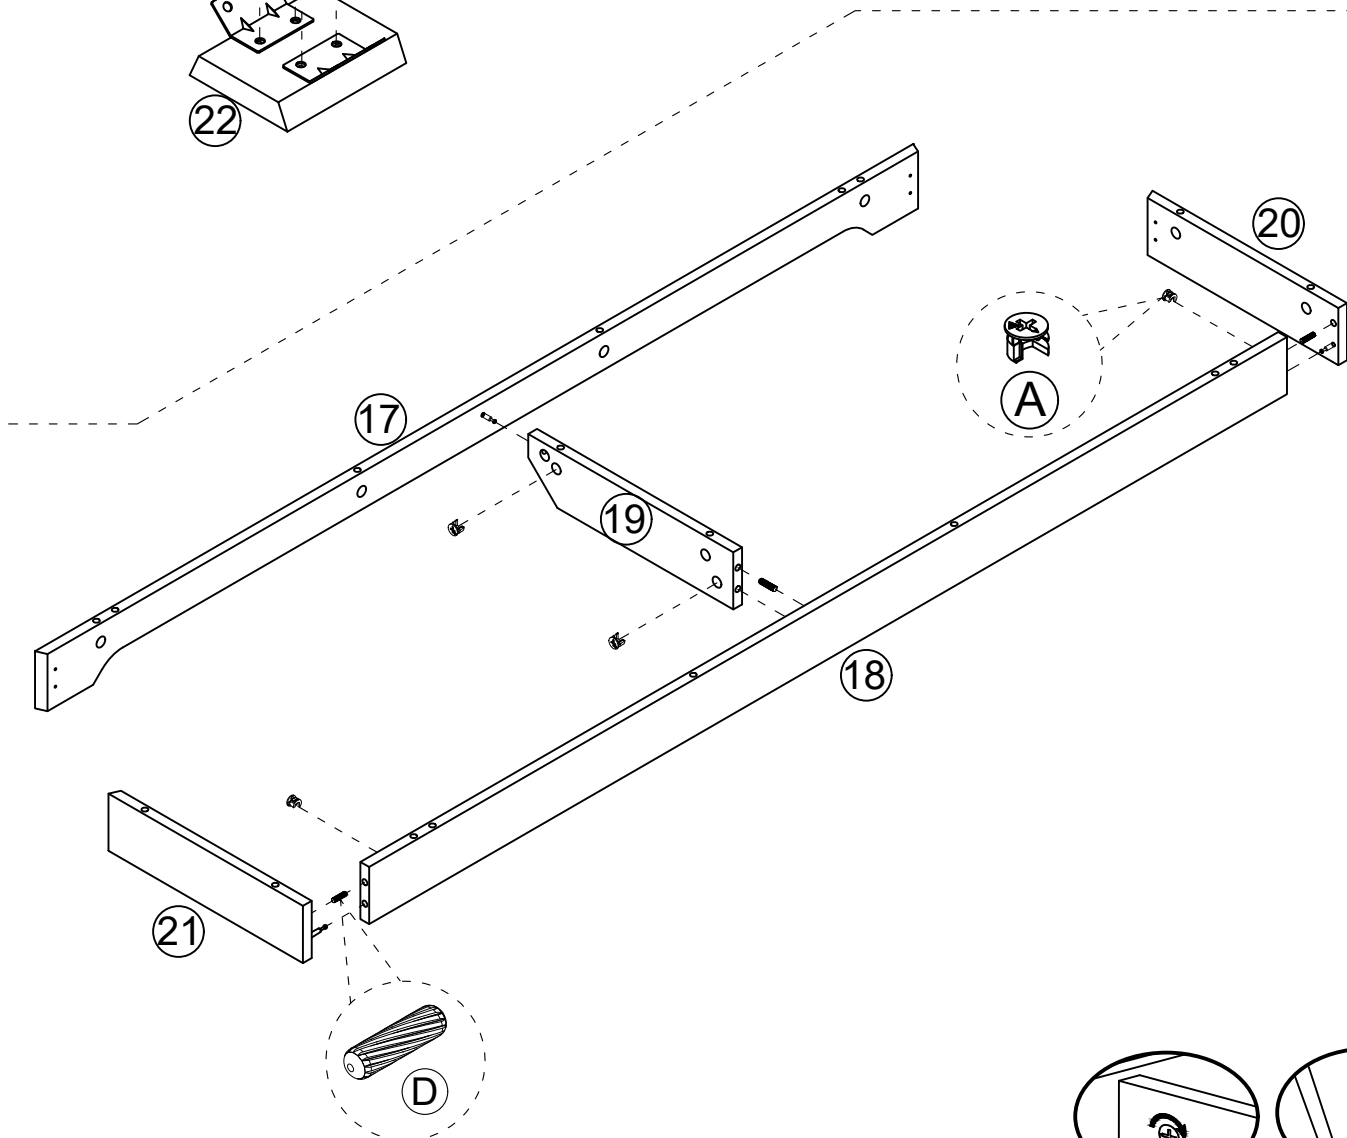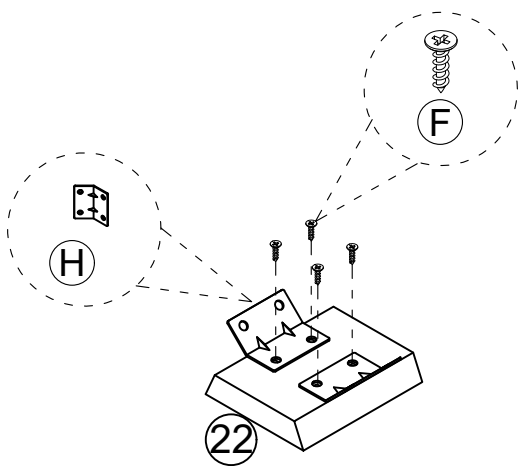

STEP 5

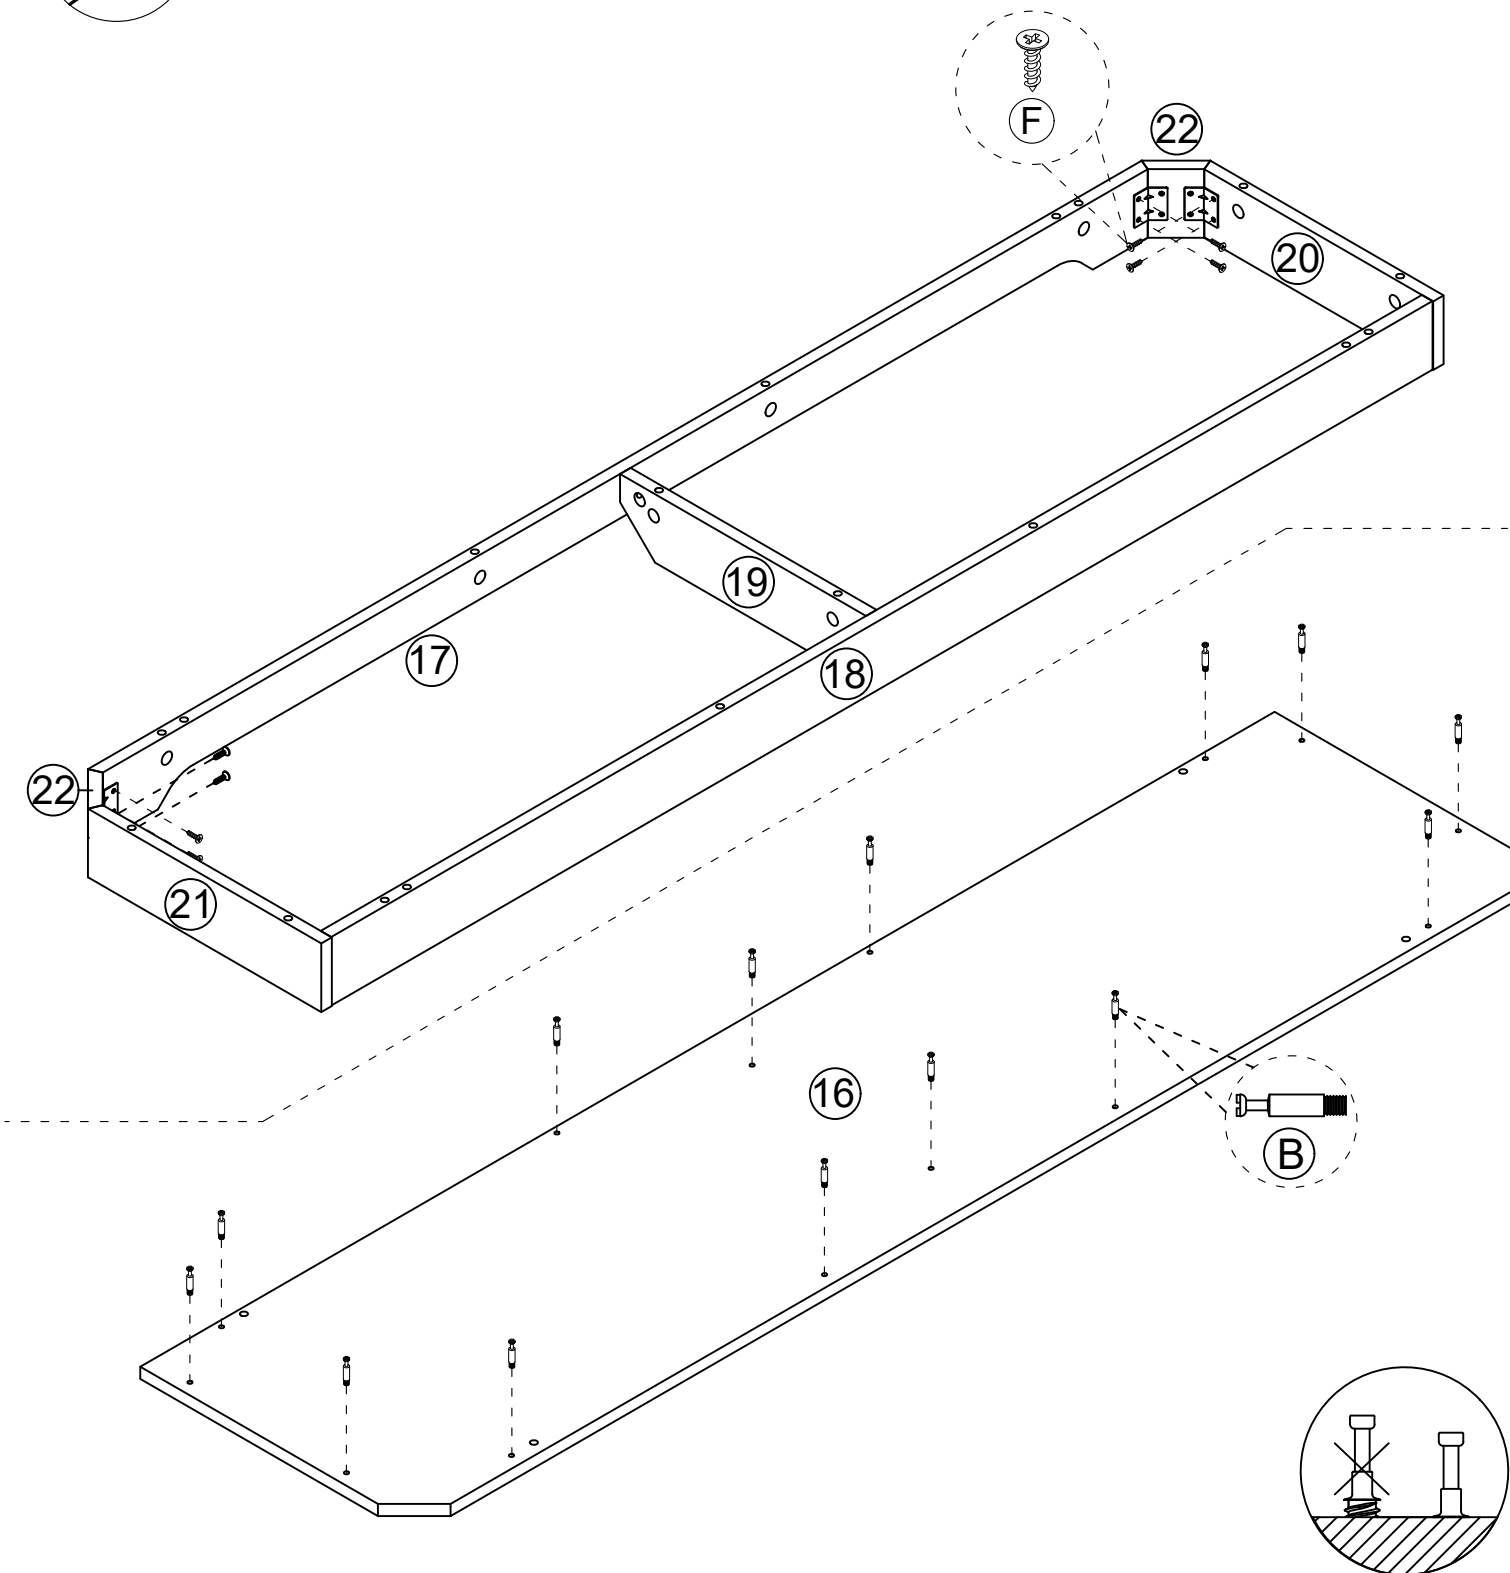
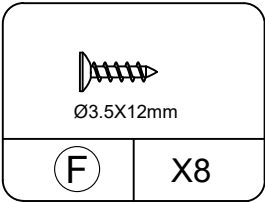
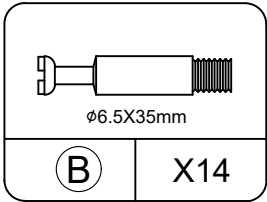
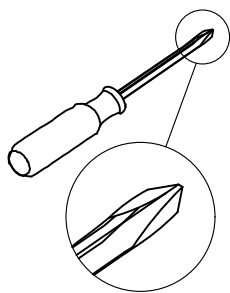


STEP 6

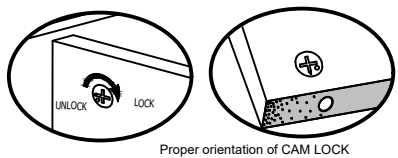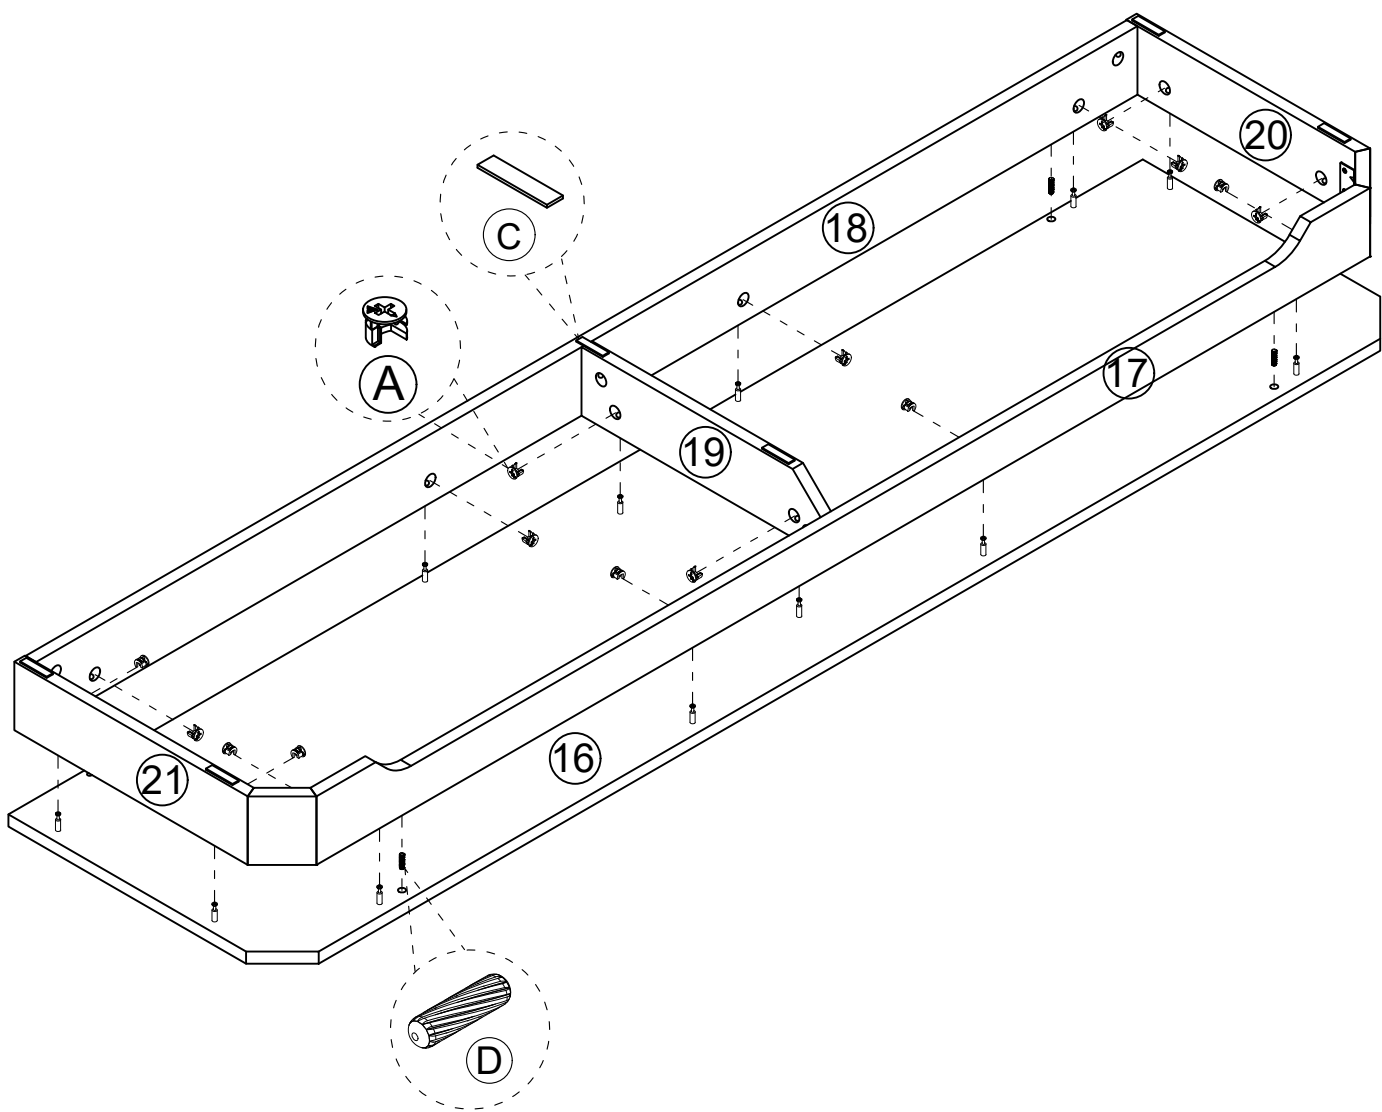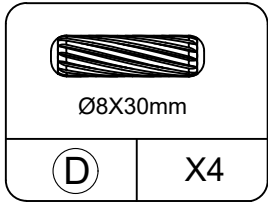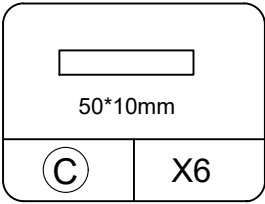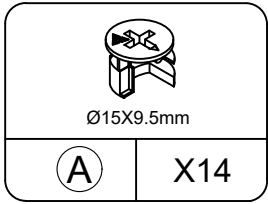
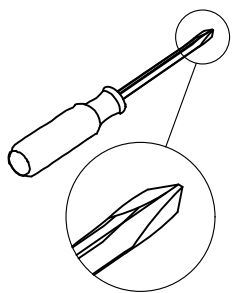


Proper orientation of CAM LOCK




STEP 7

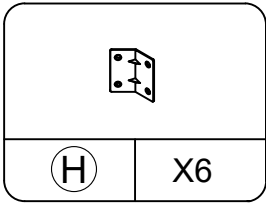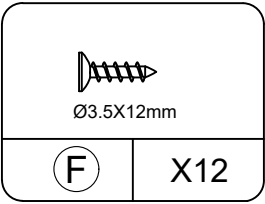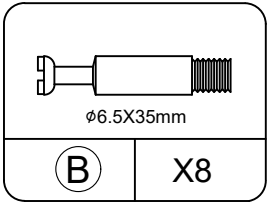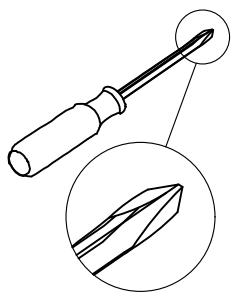





X 2

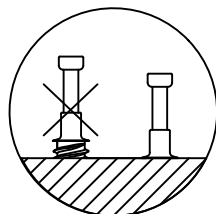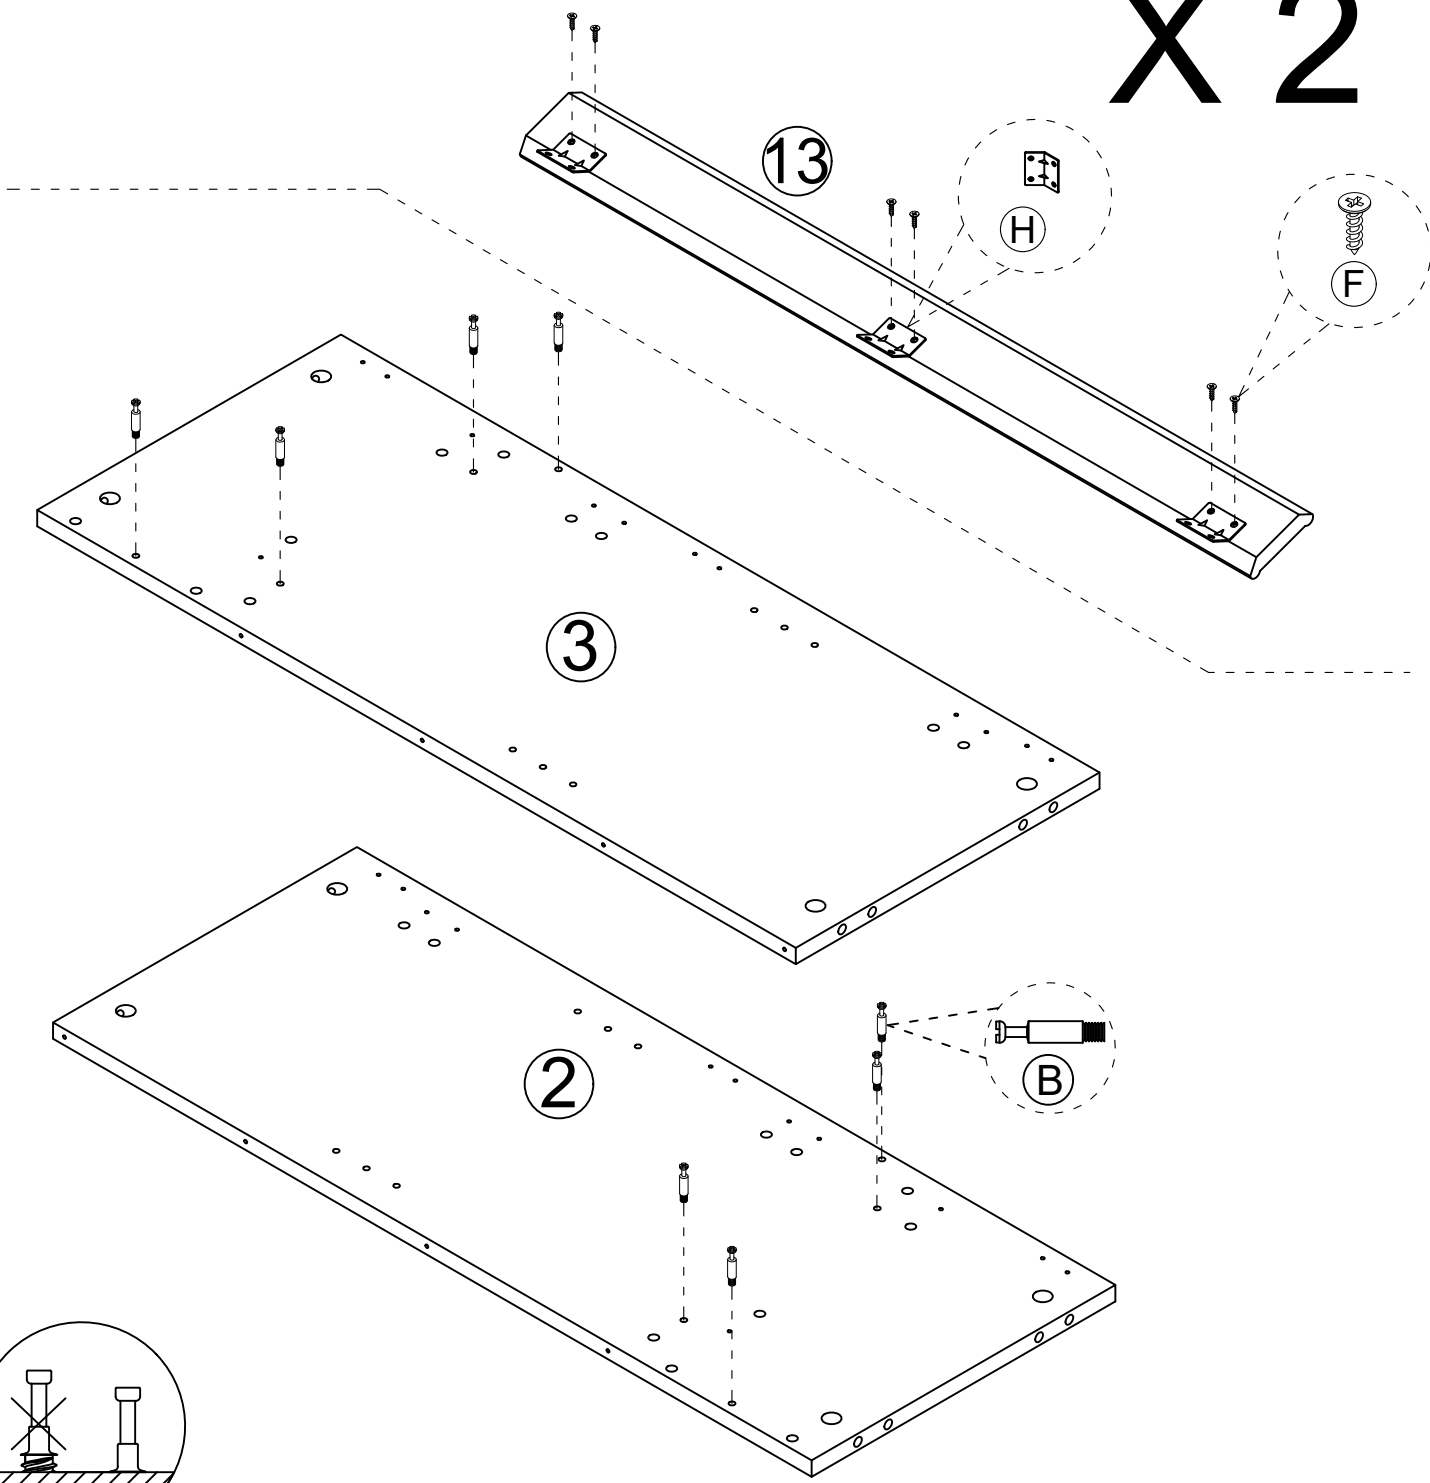


STEP 8

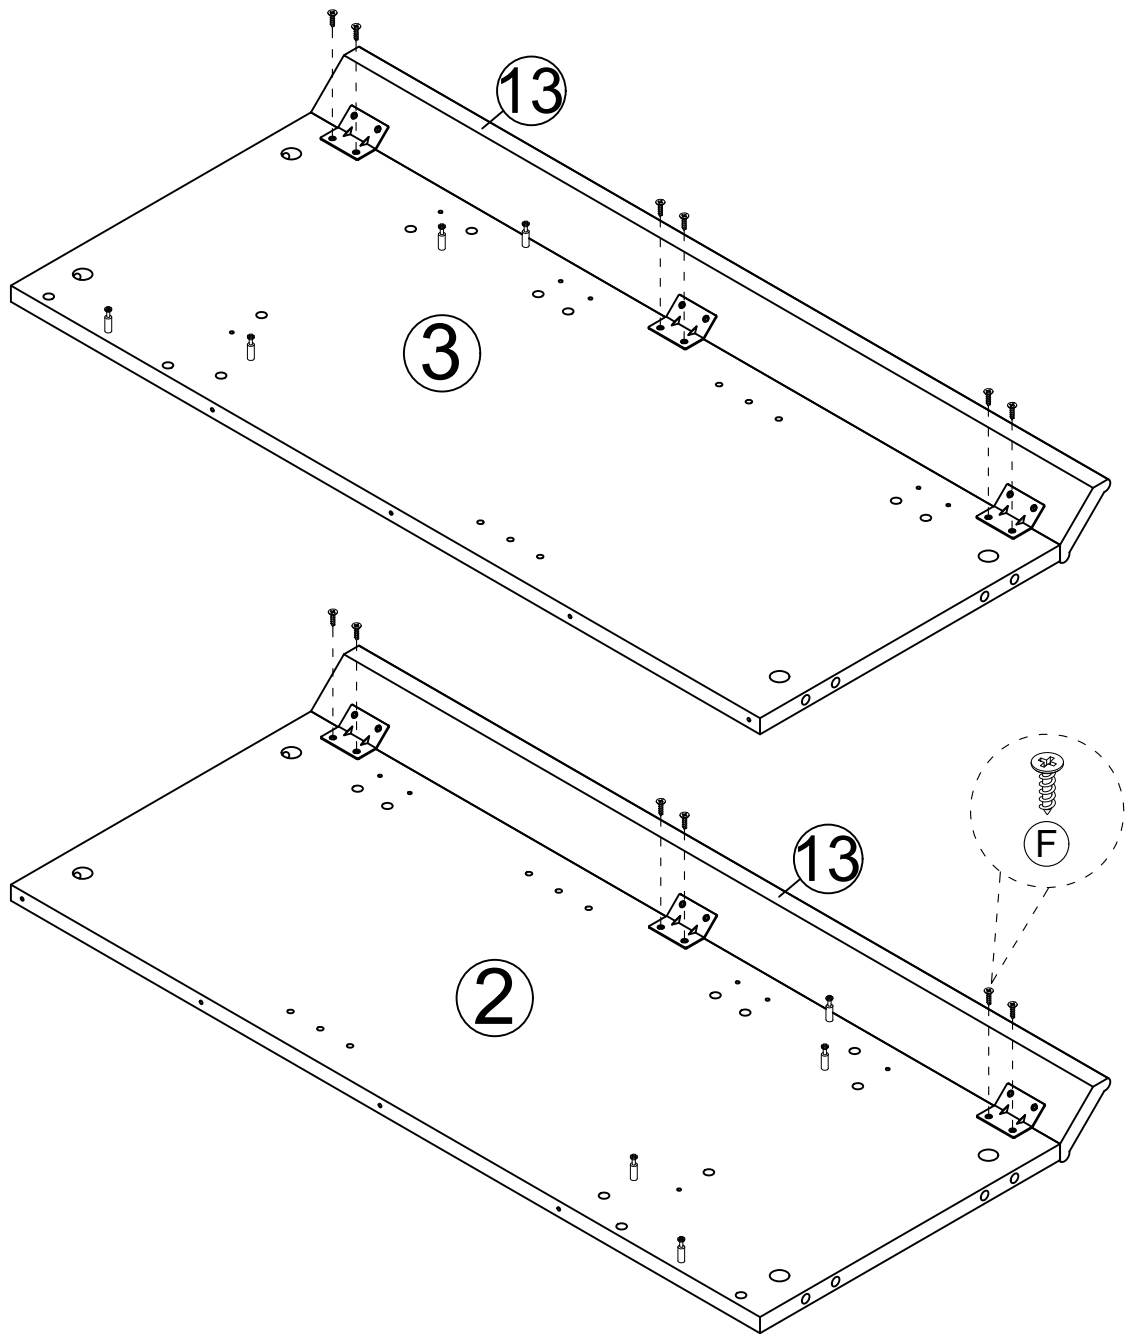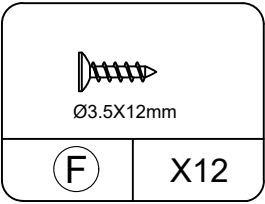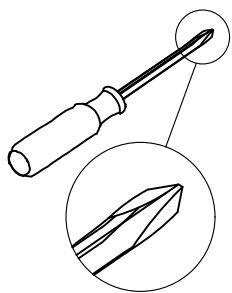


STEP 9

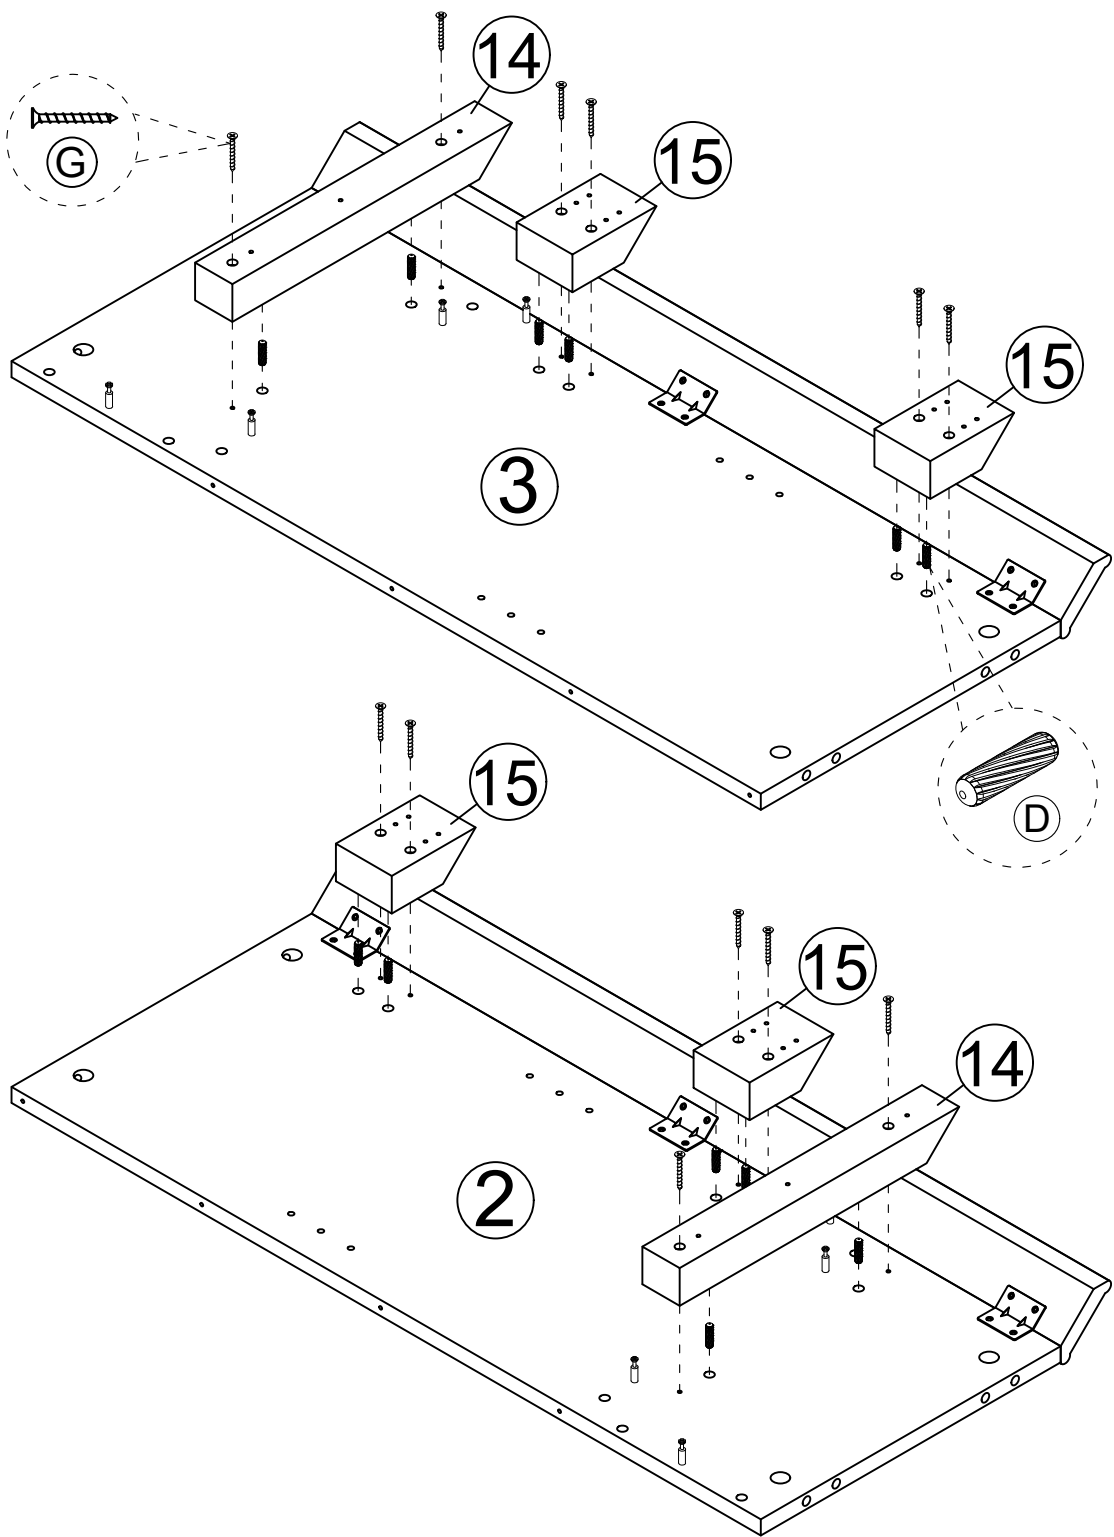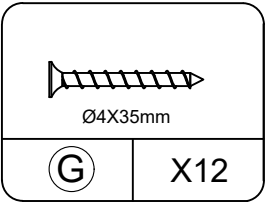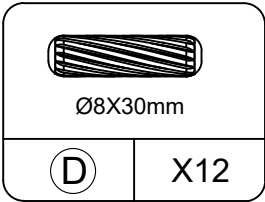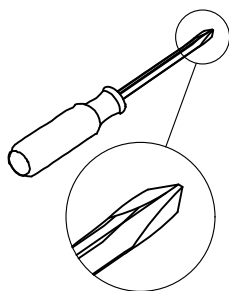



STEP 10

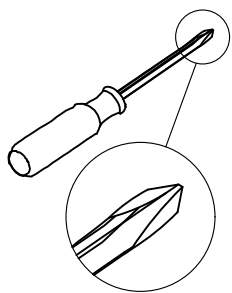





 Ø3.5X12mm	
(F)	X6

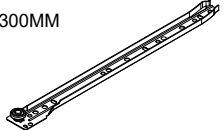300MM 	
MCR	X1




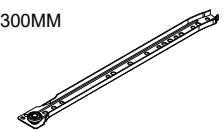
300MM 	
MCL	X1

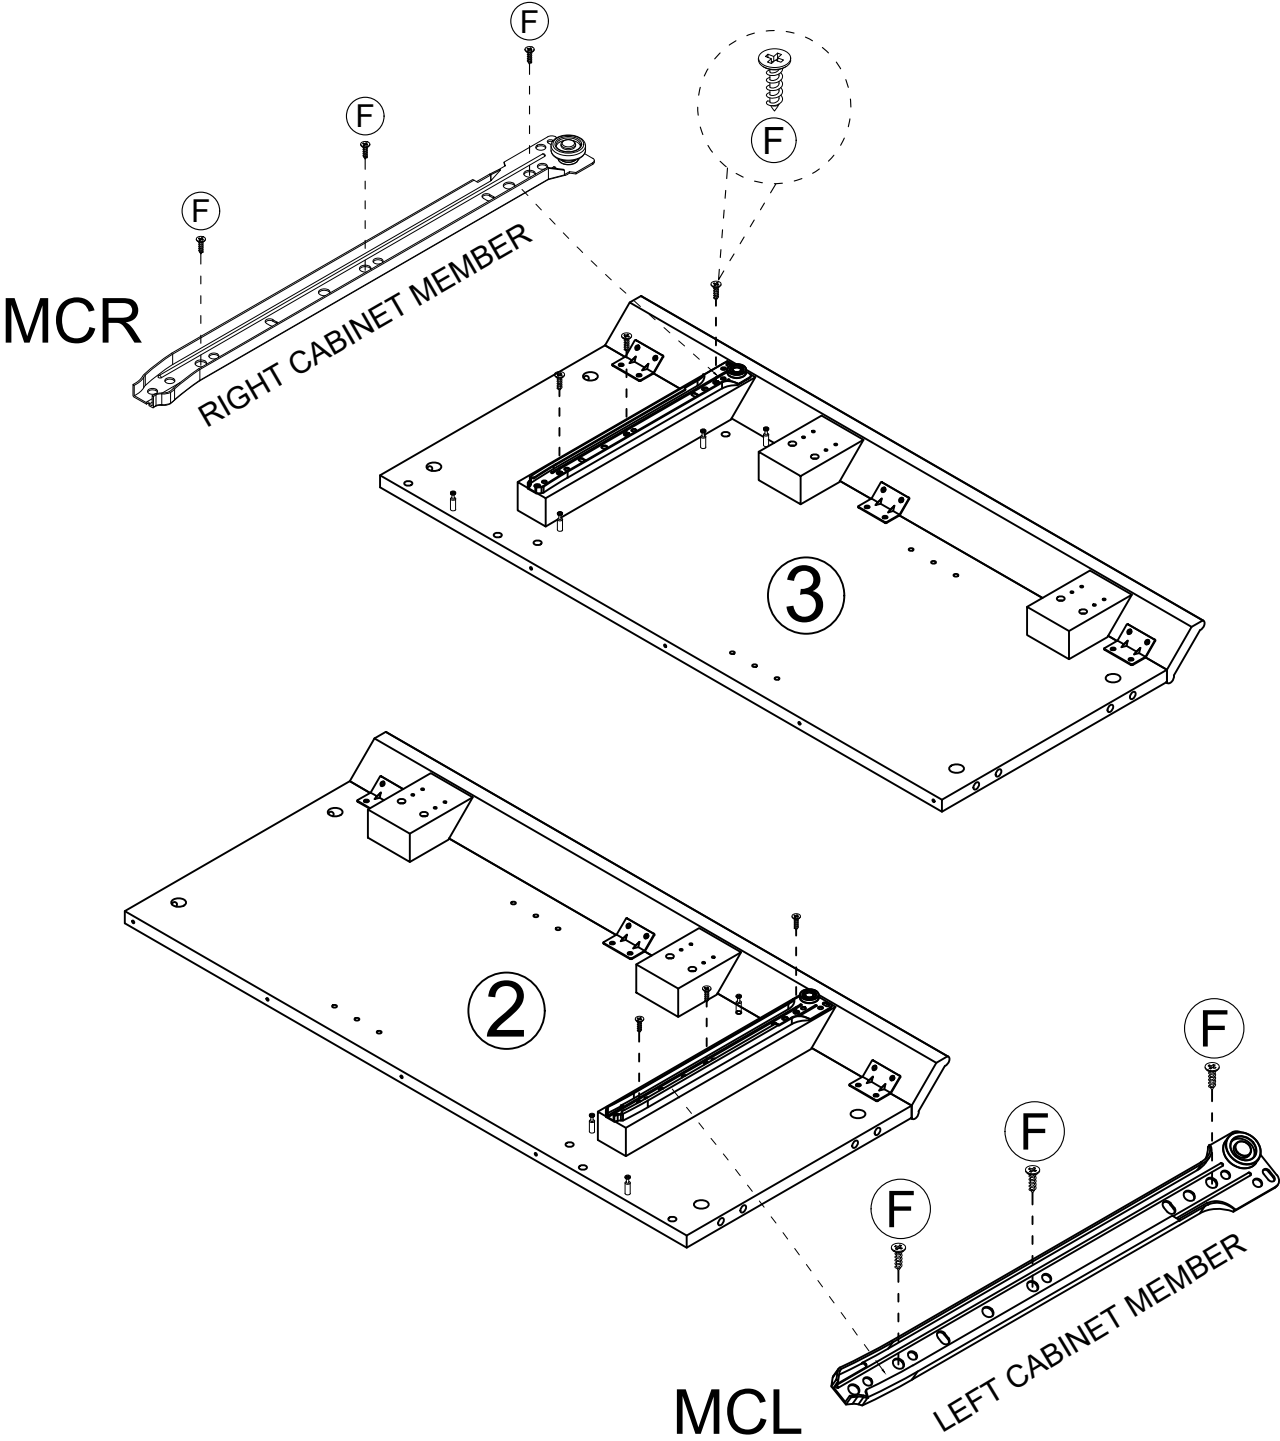





STEP 11

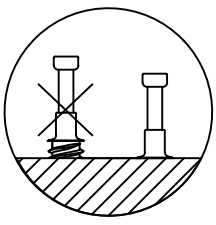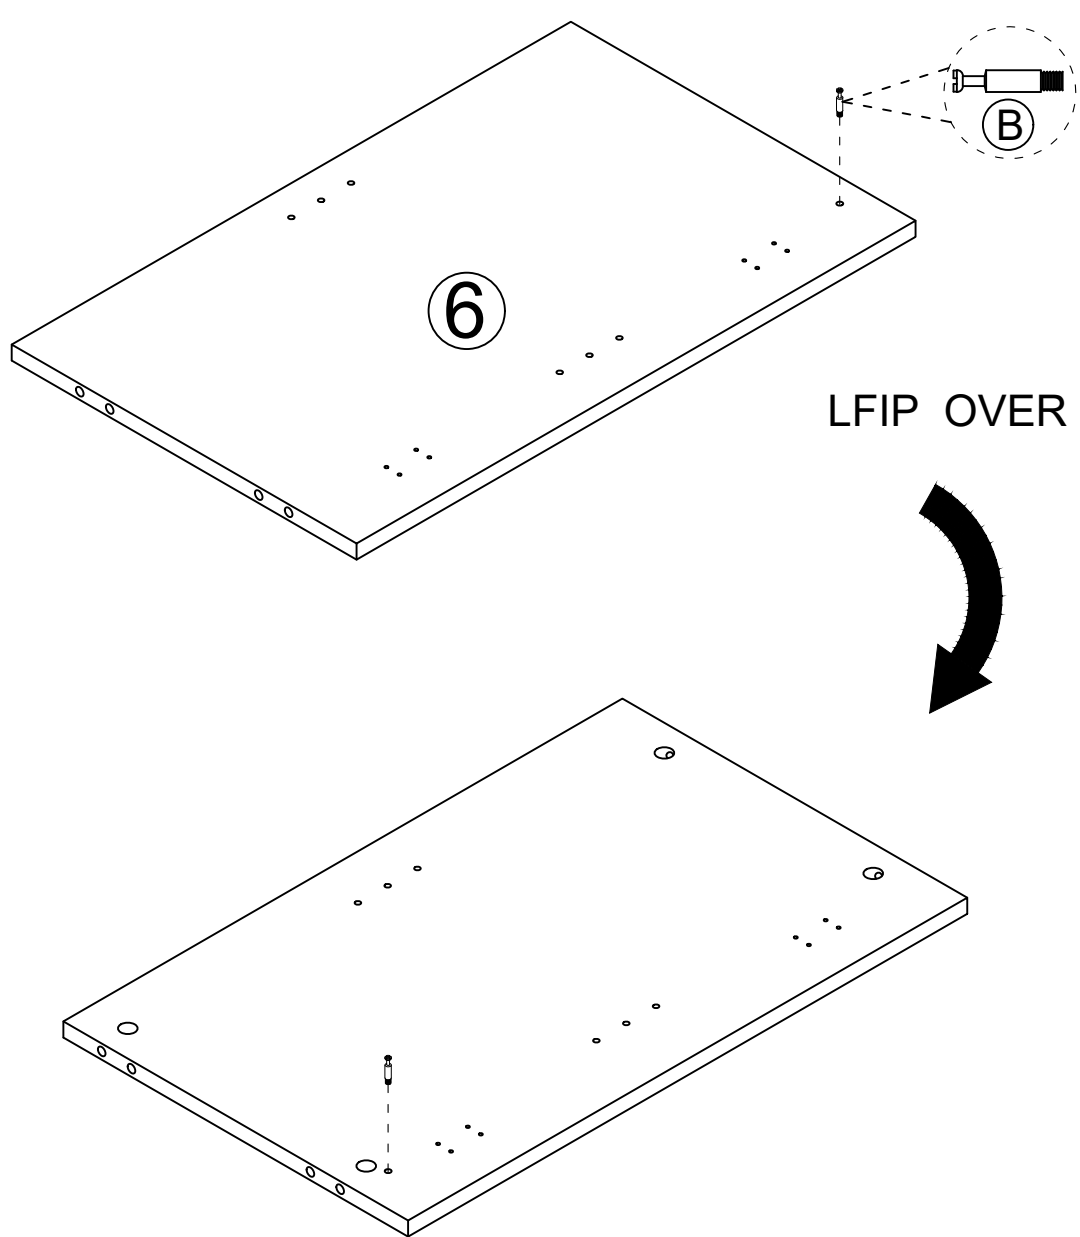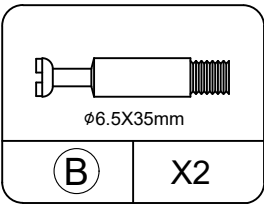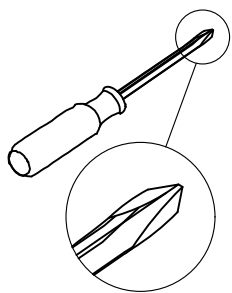

STEP 12

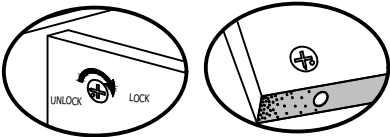
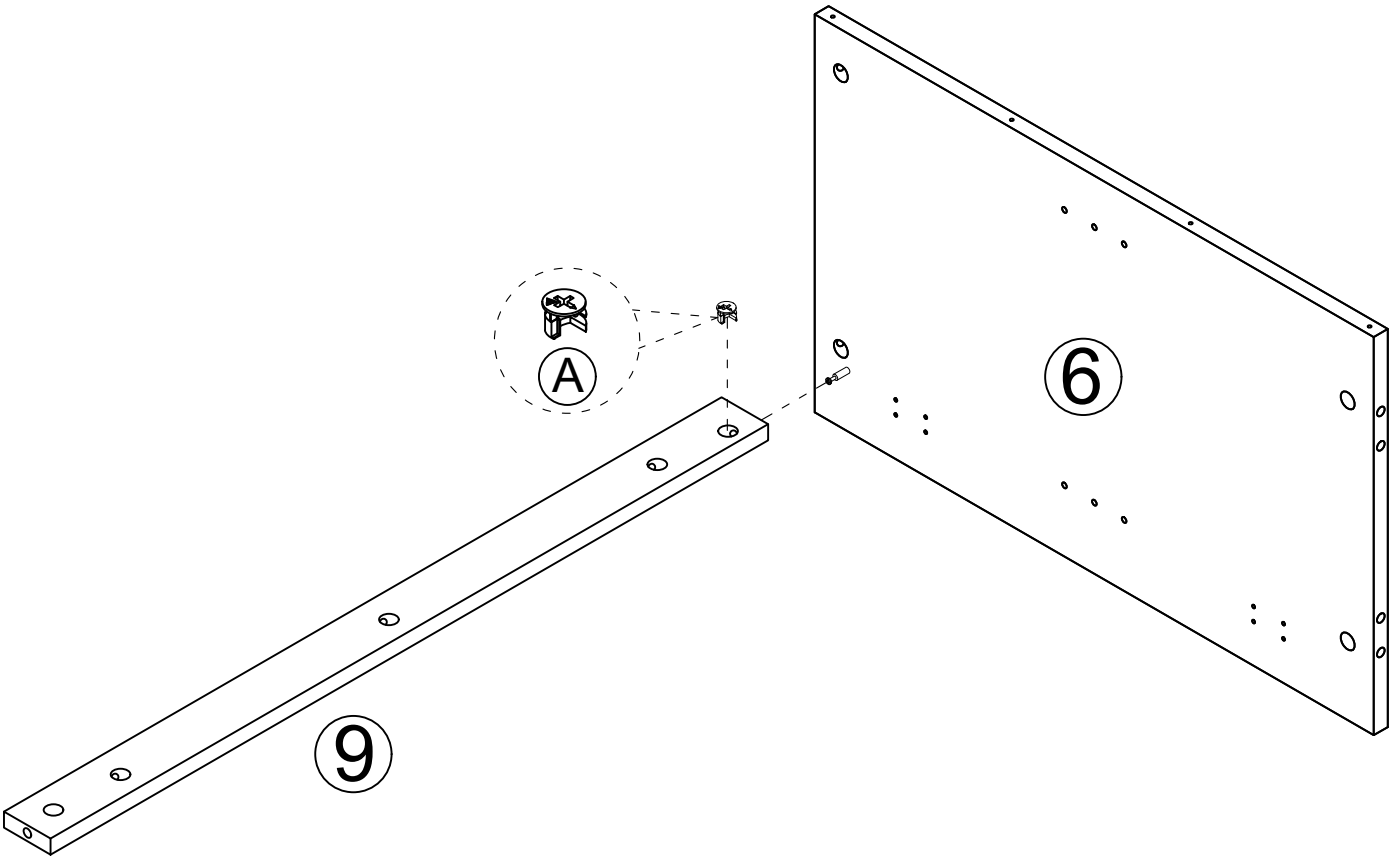
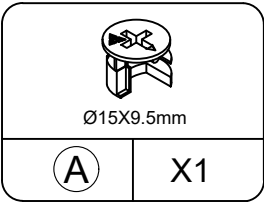
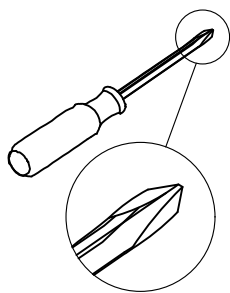


STEP 13



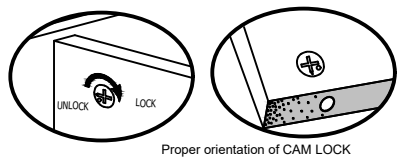
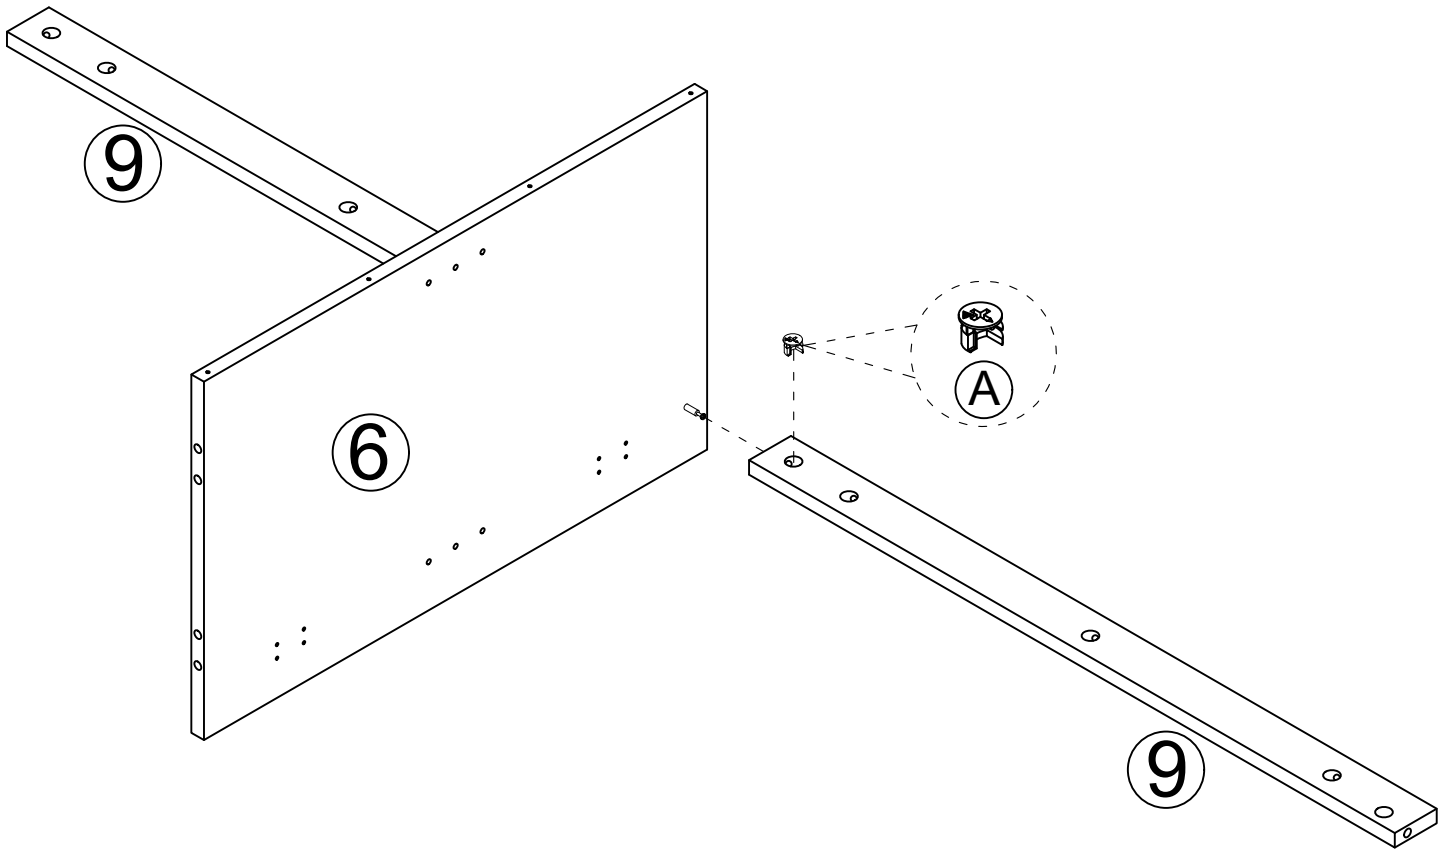
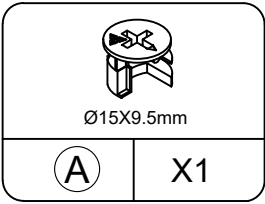
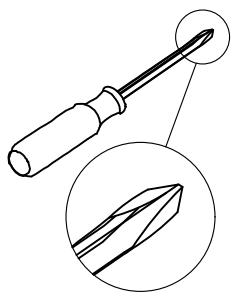


Proper orientation of CAM LOCK






STEP 14

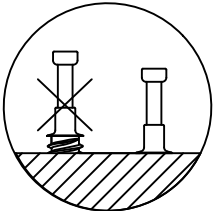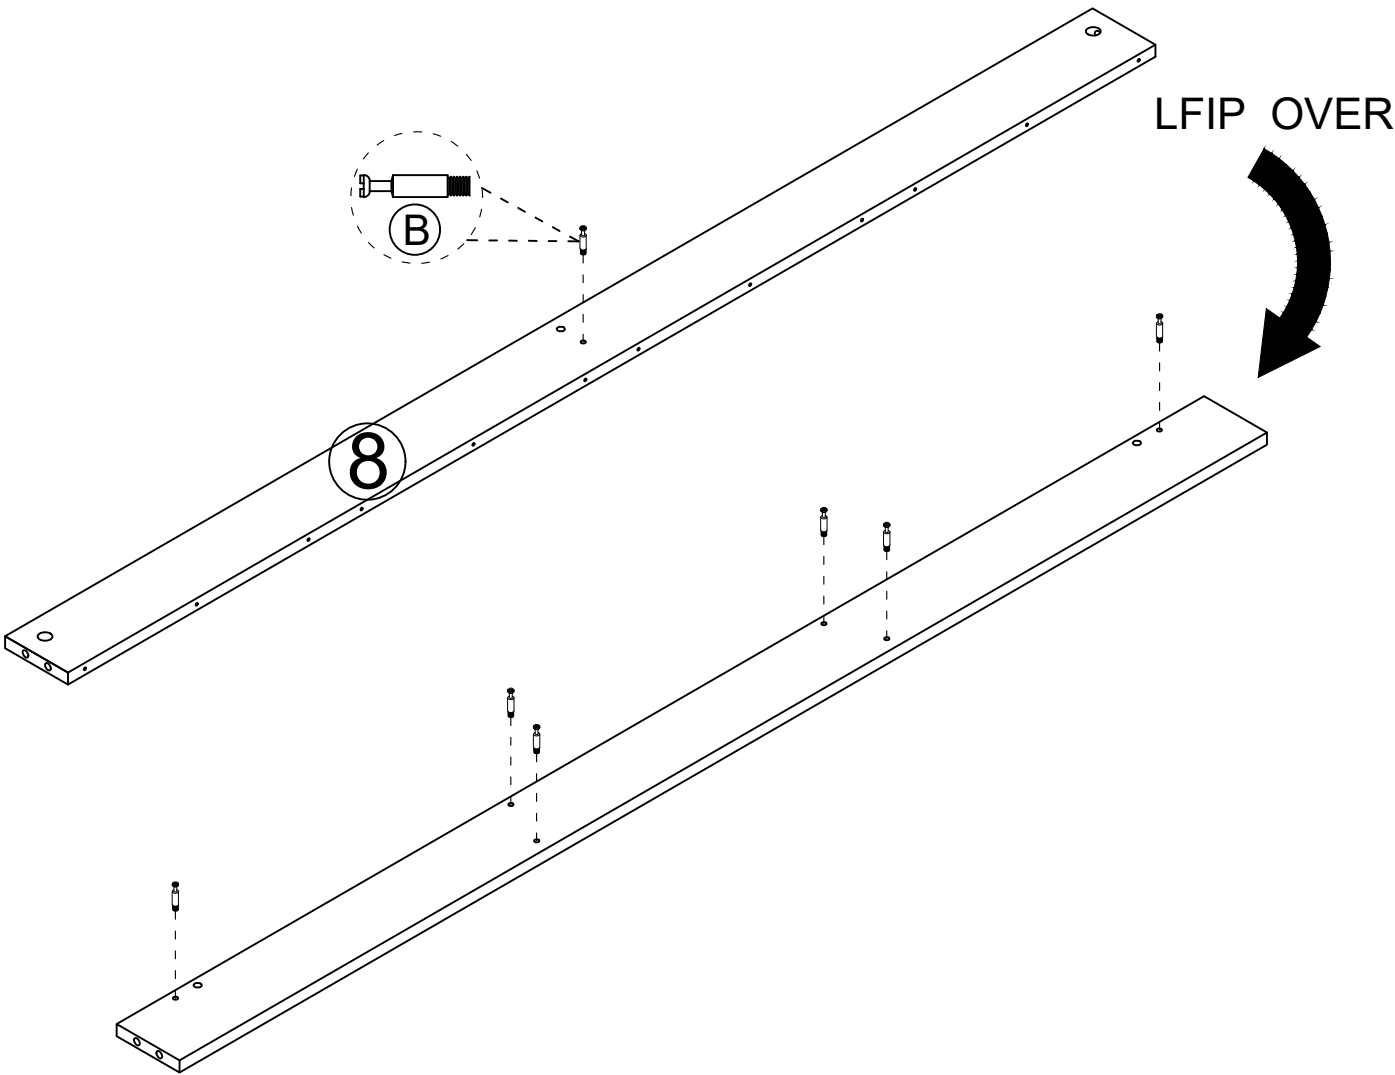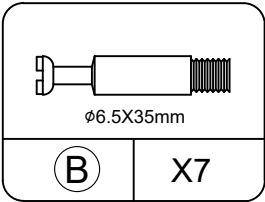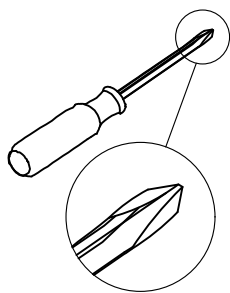


STEP 15

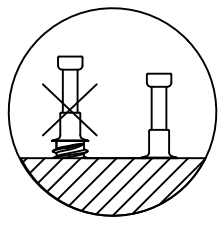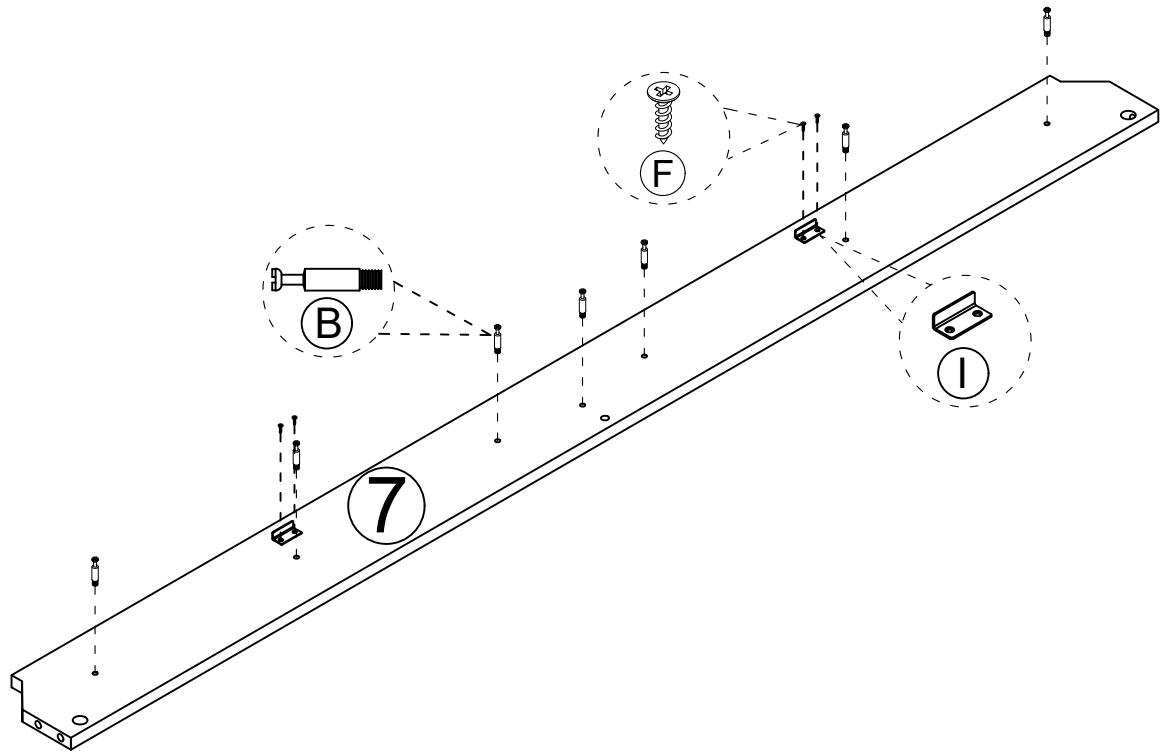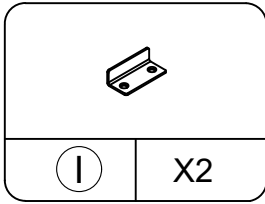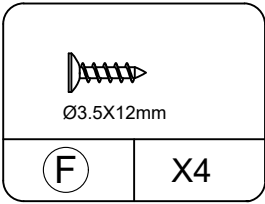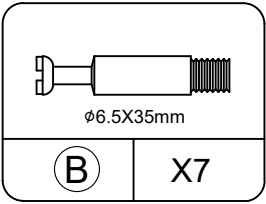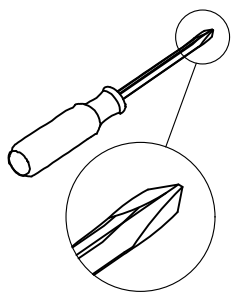

STEP 16

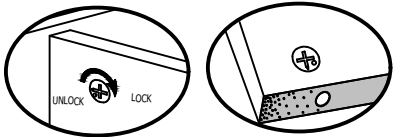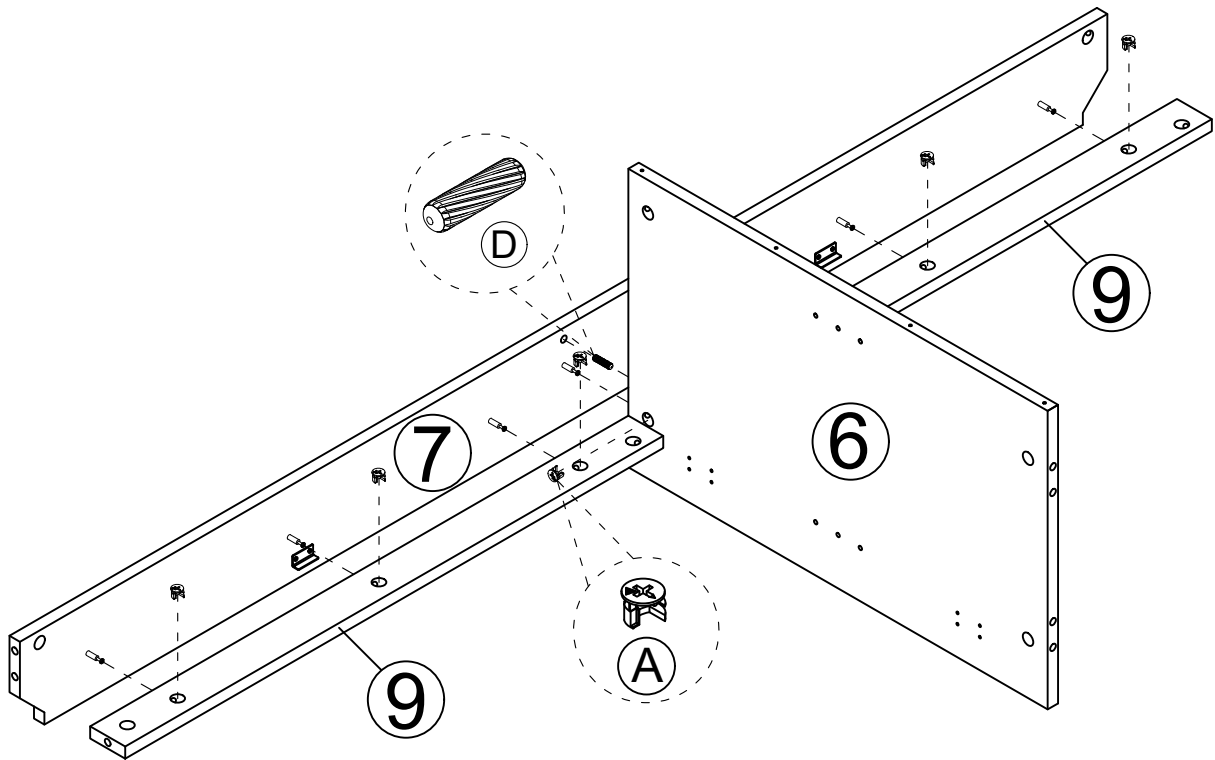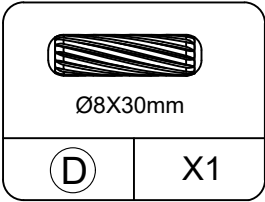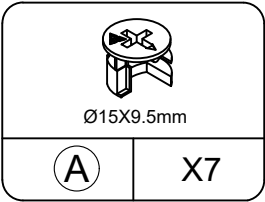
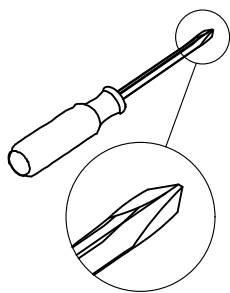


STEP 17





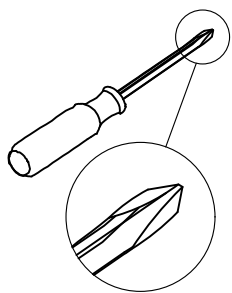


 Ø15X9.5mm	
(A)	X4

 Ø6X30mm	
(S)	X2





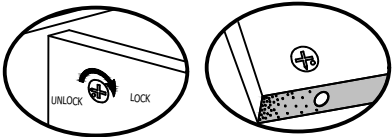
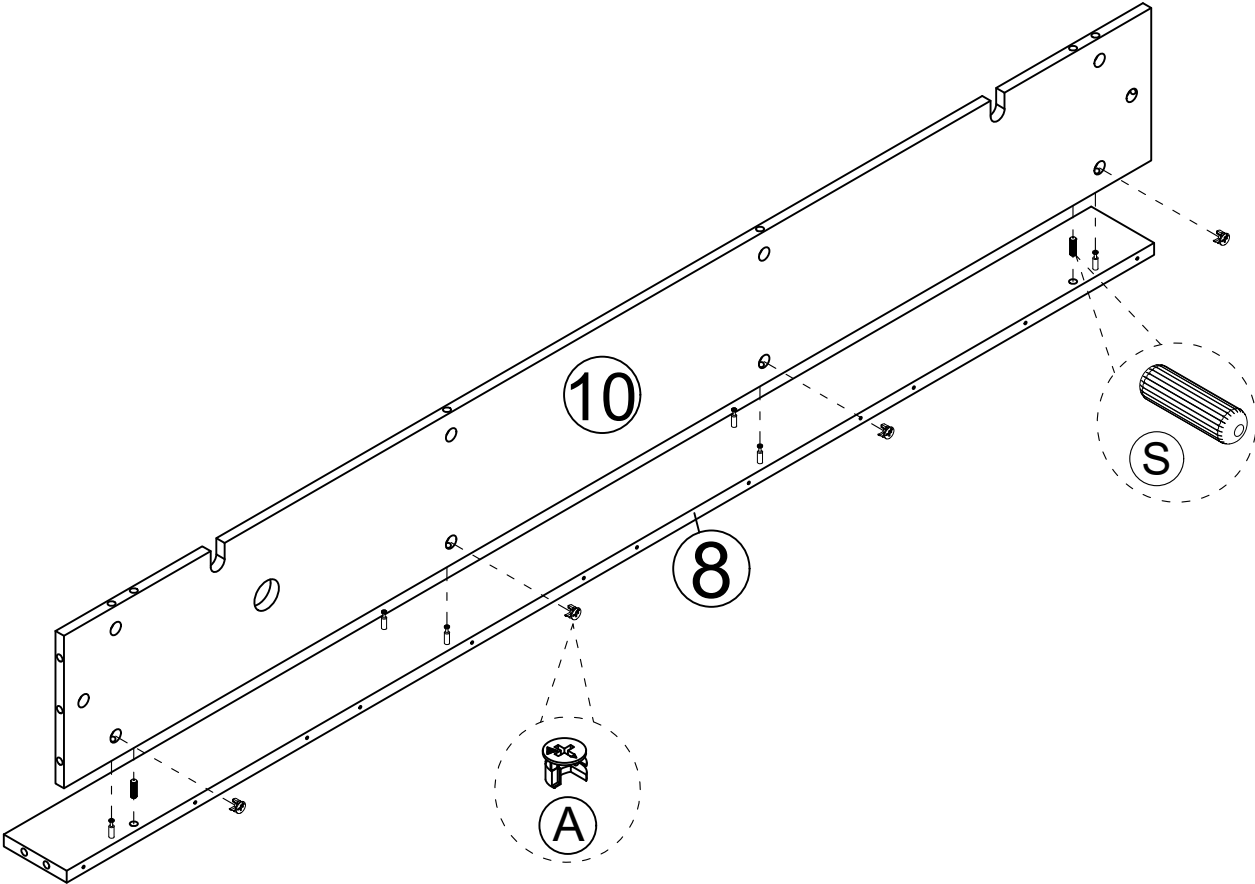


STEP 18

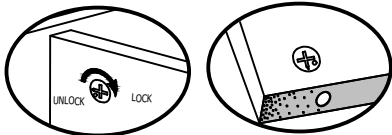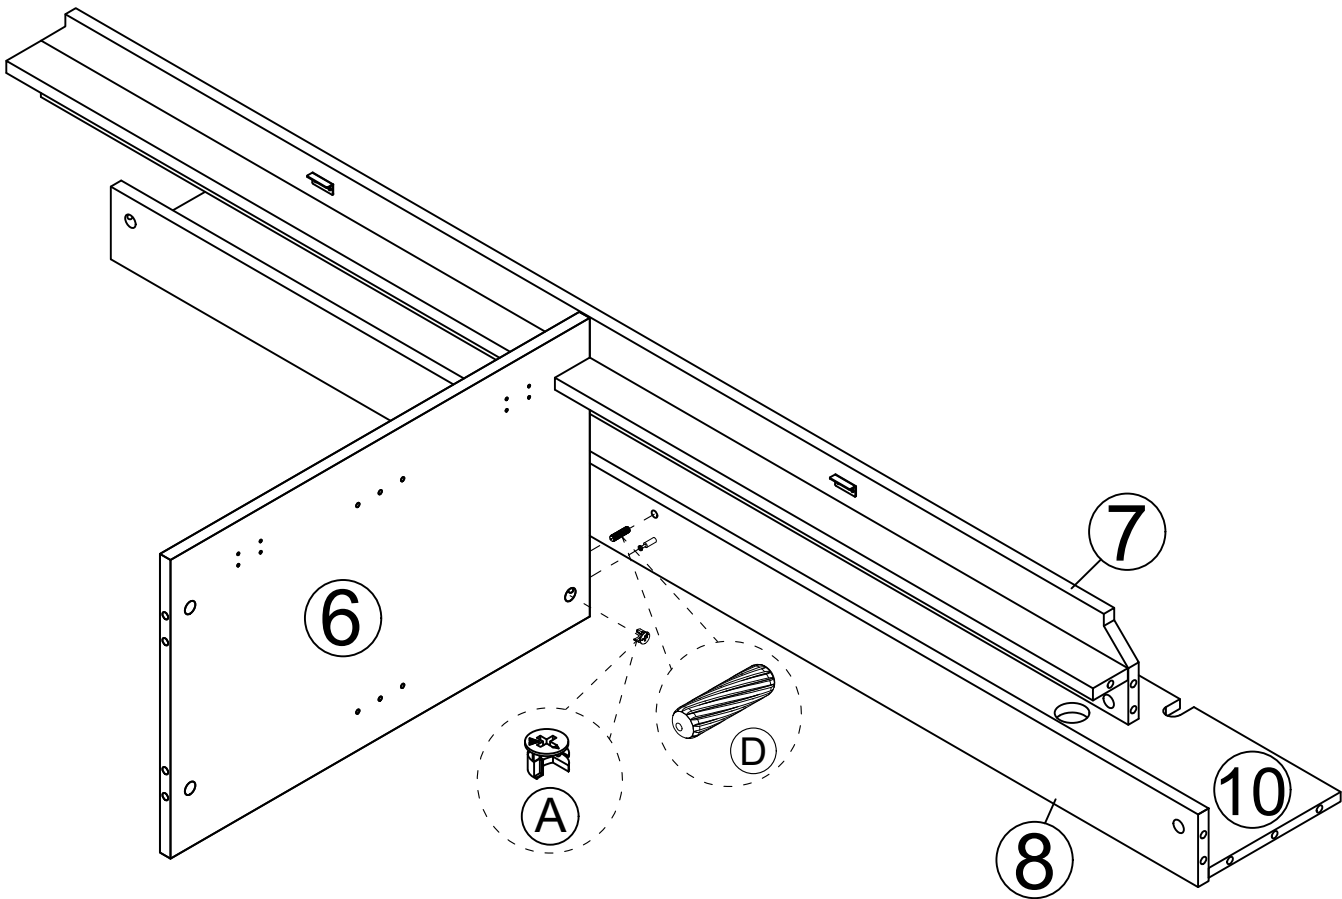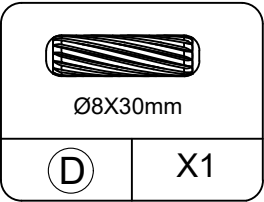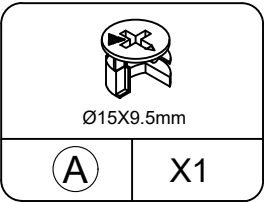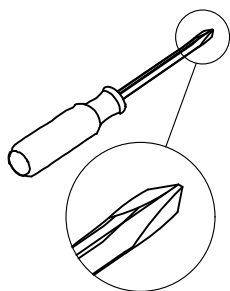







Proper orientation of CAM LOCK

STEP 19

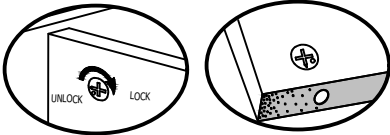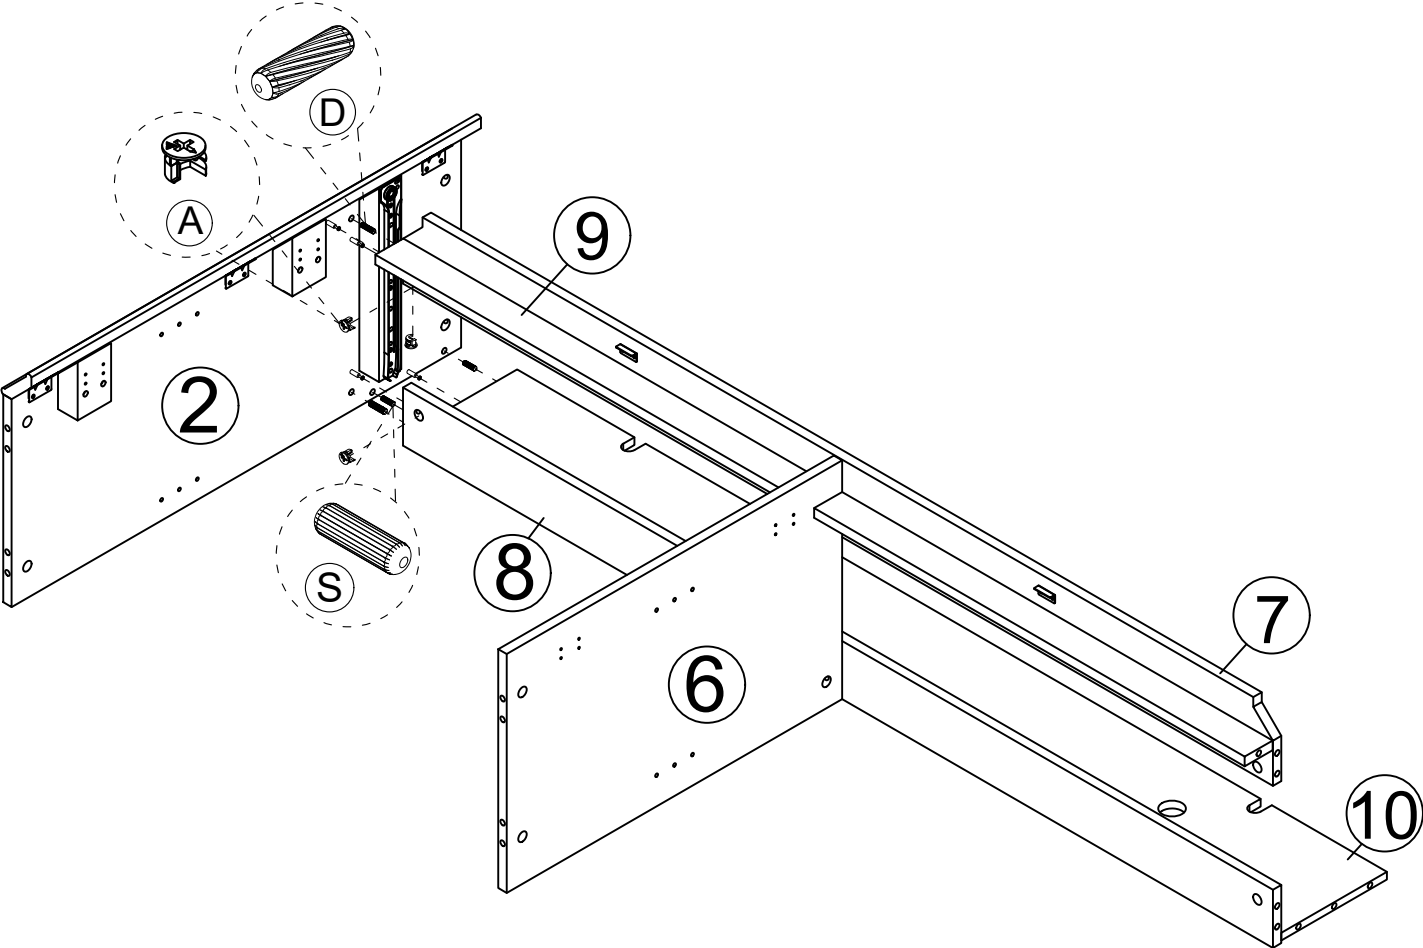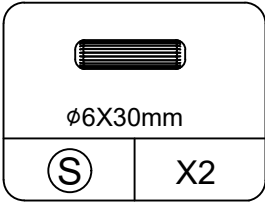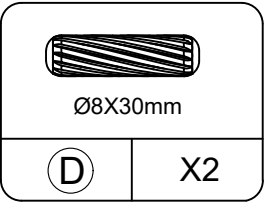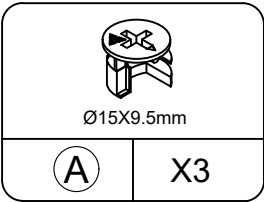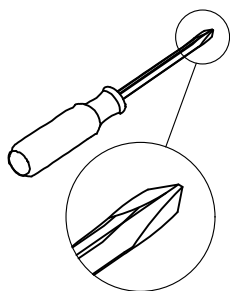





Proper orientation of CAM LOCK

STEP 20


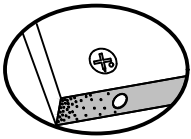
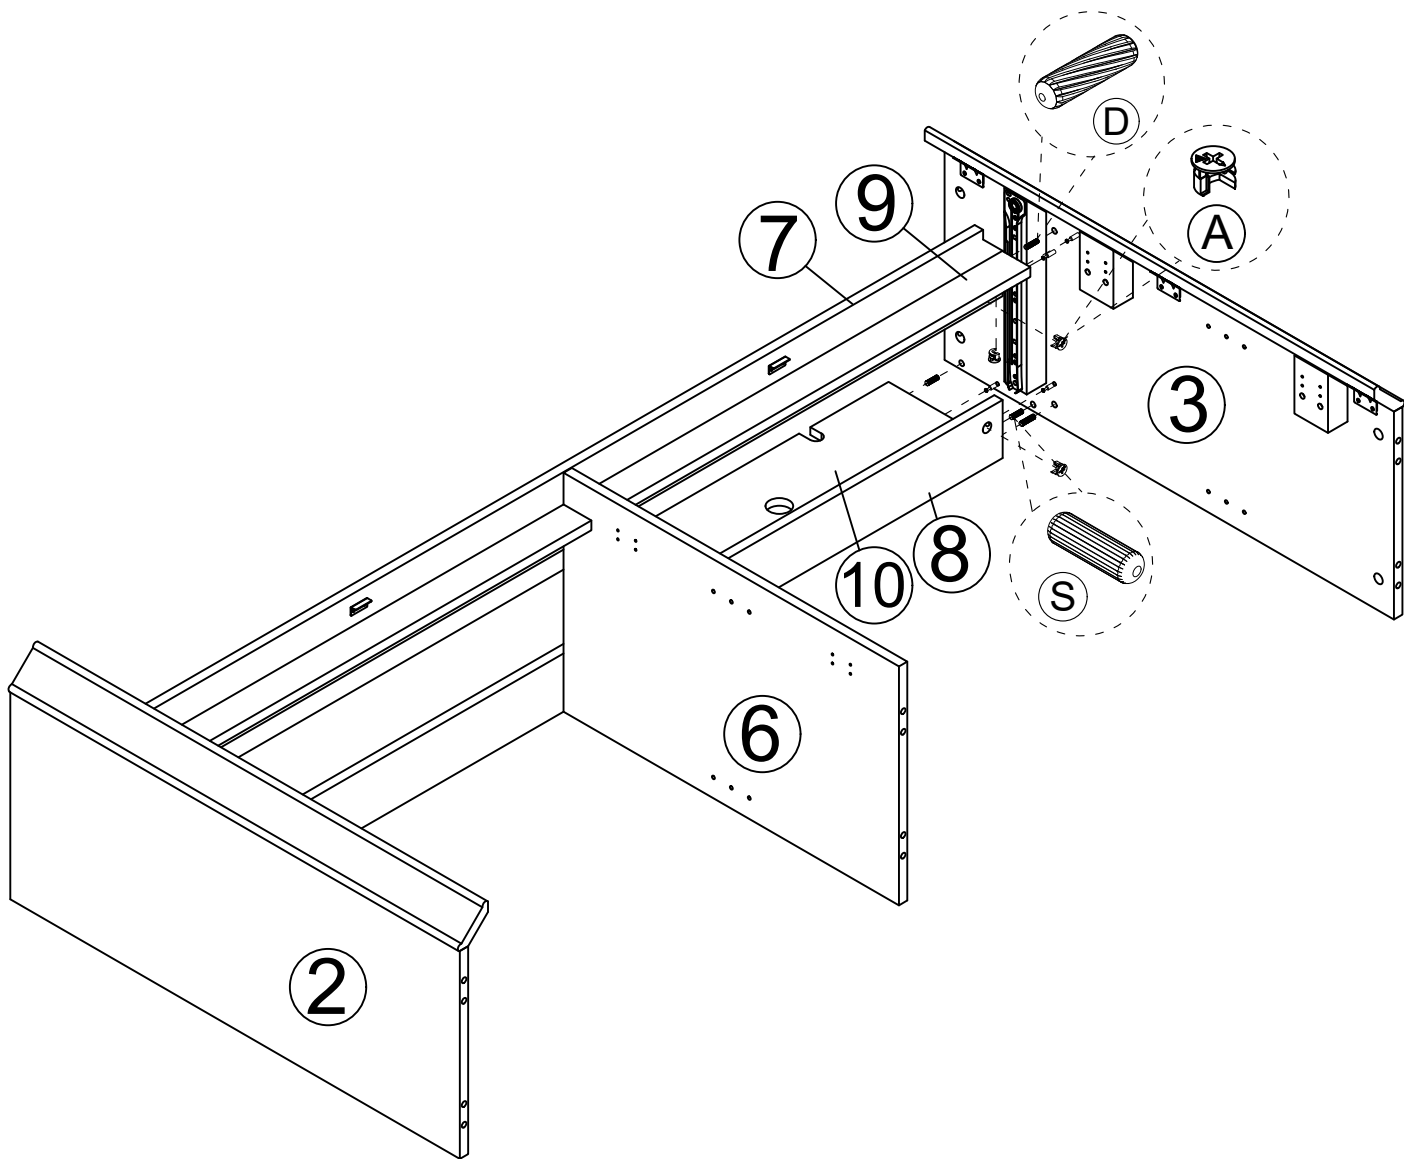
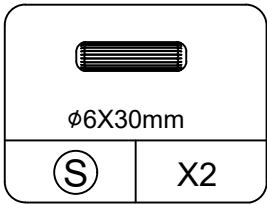
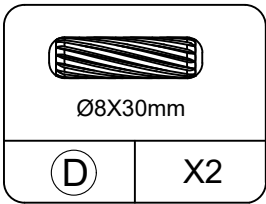
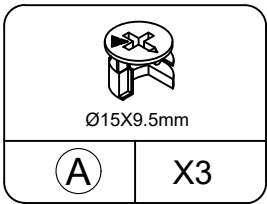
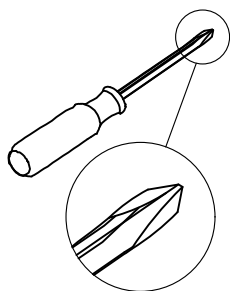


Proper orientation of CAM LOCK





STEP 21

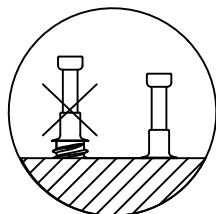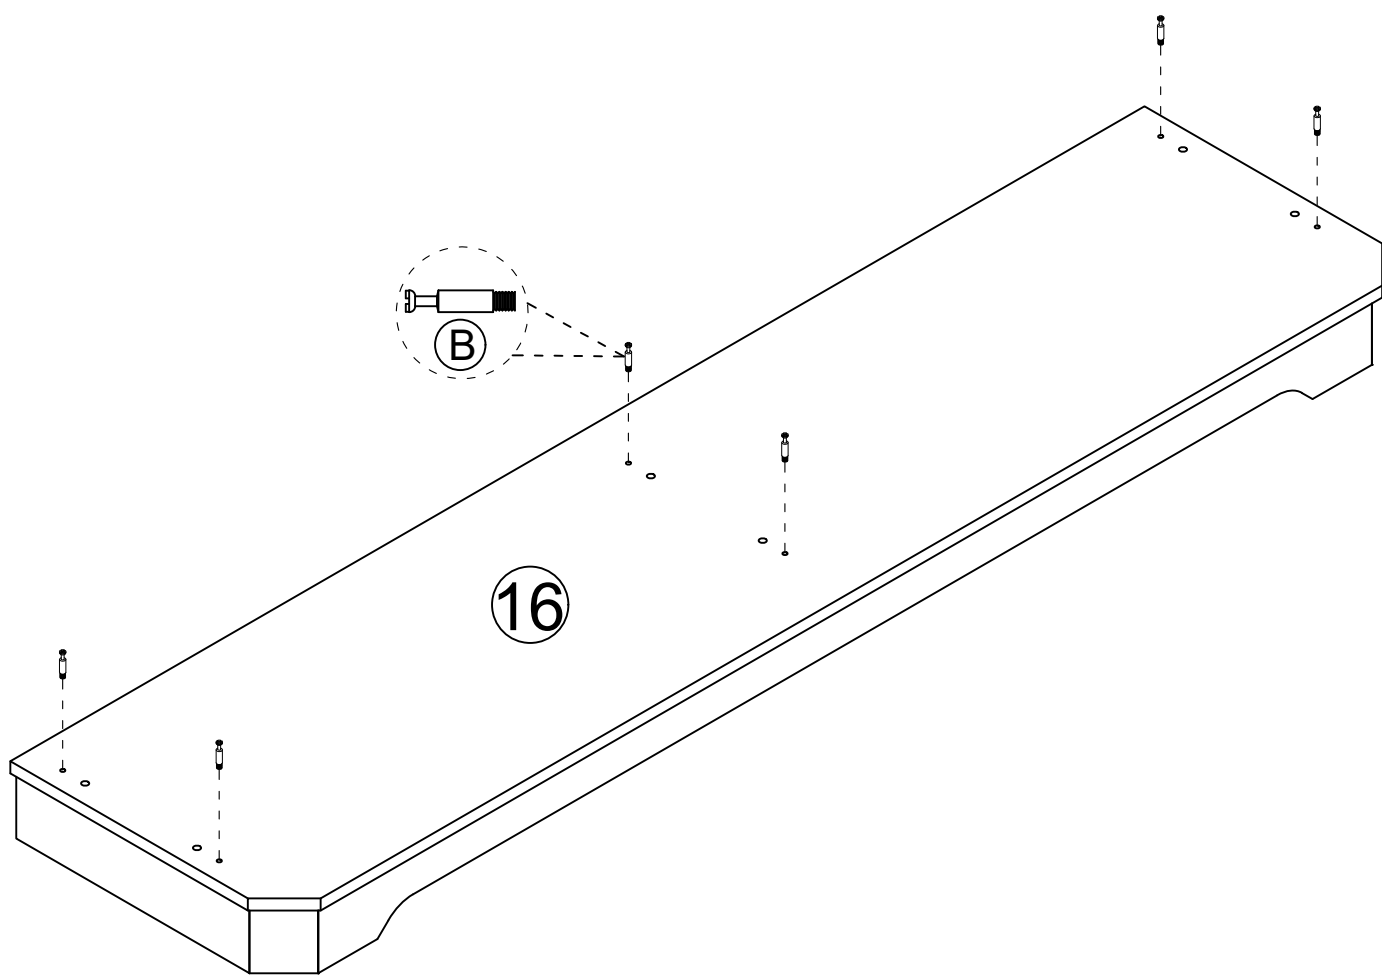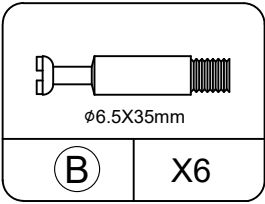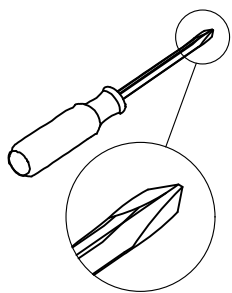

STEP 22

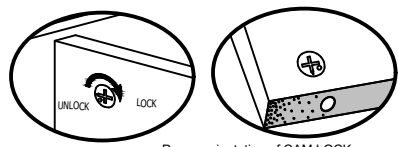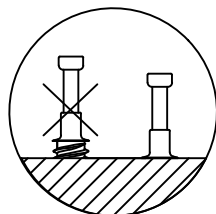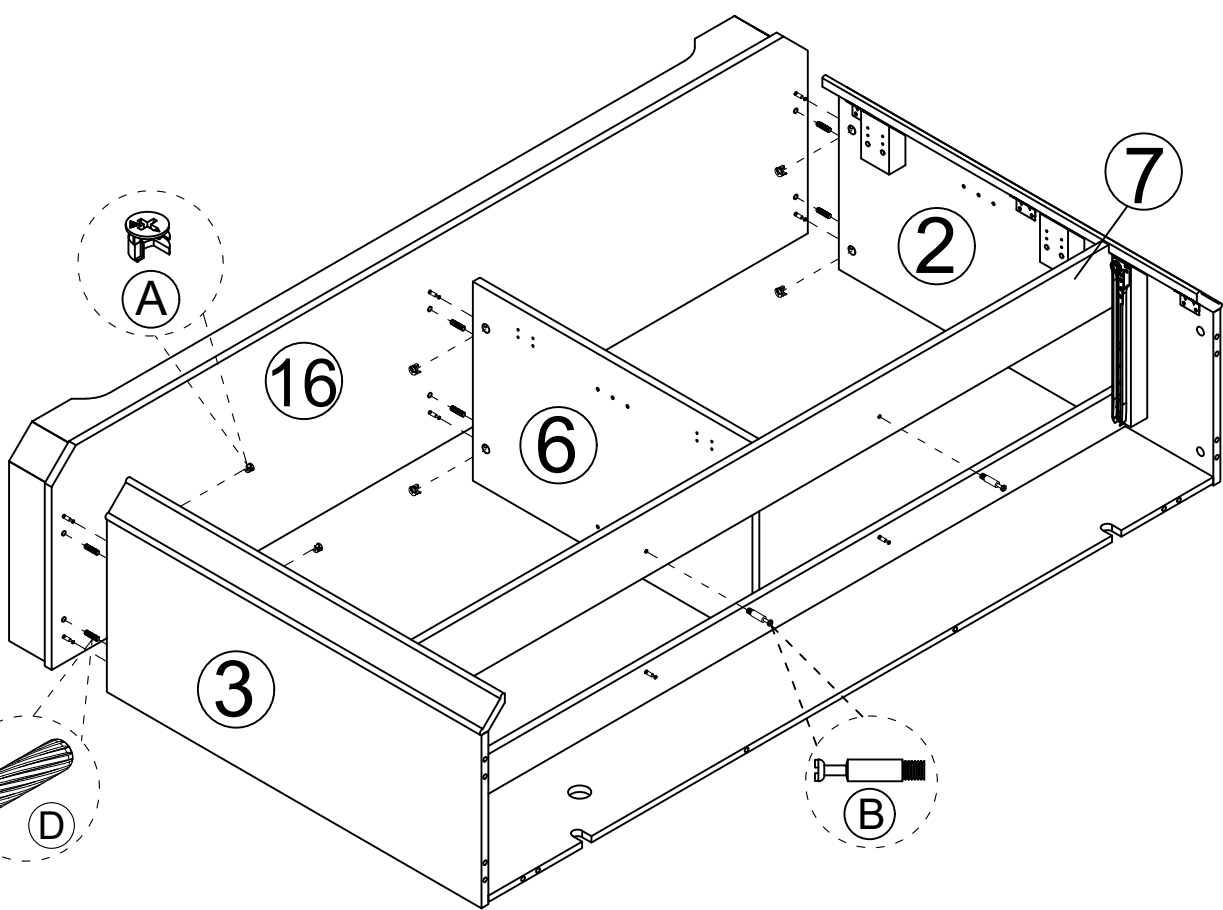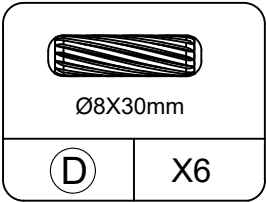
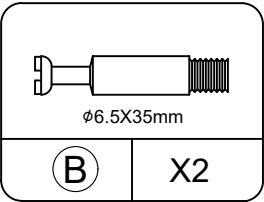
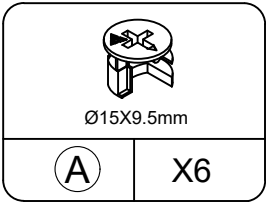
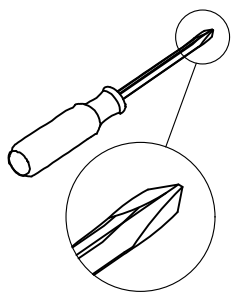


STEP 23

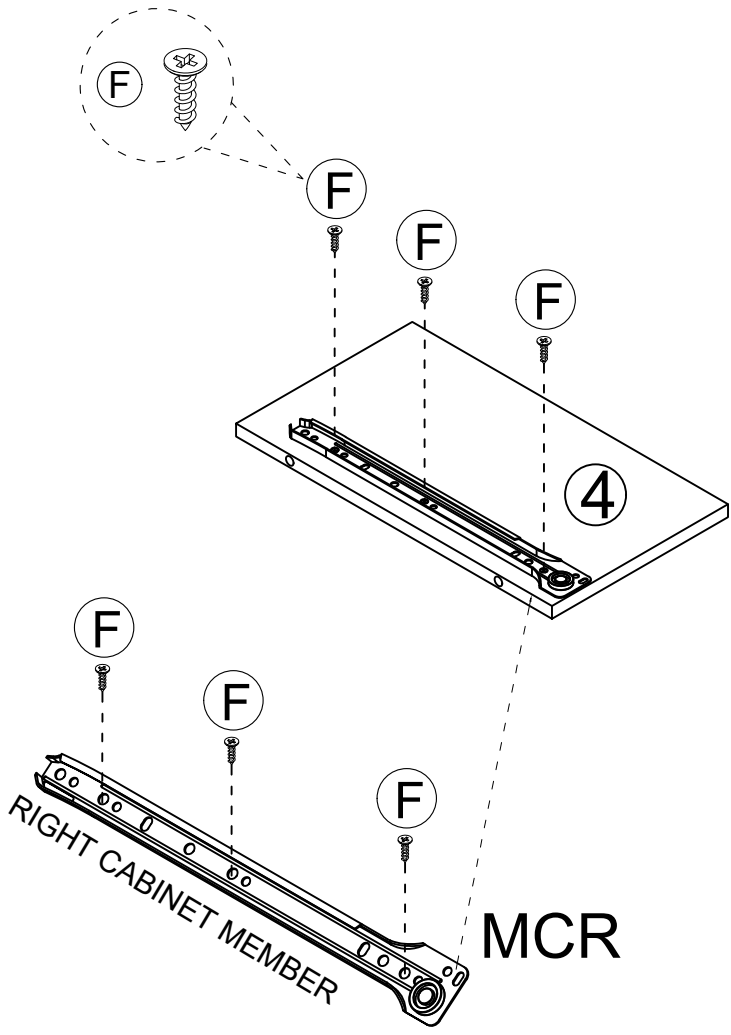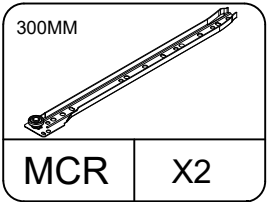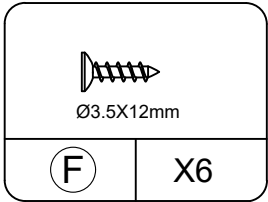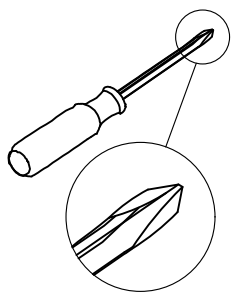


X 2

STEP 24

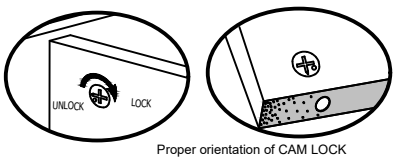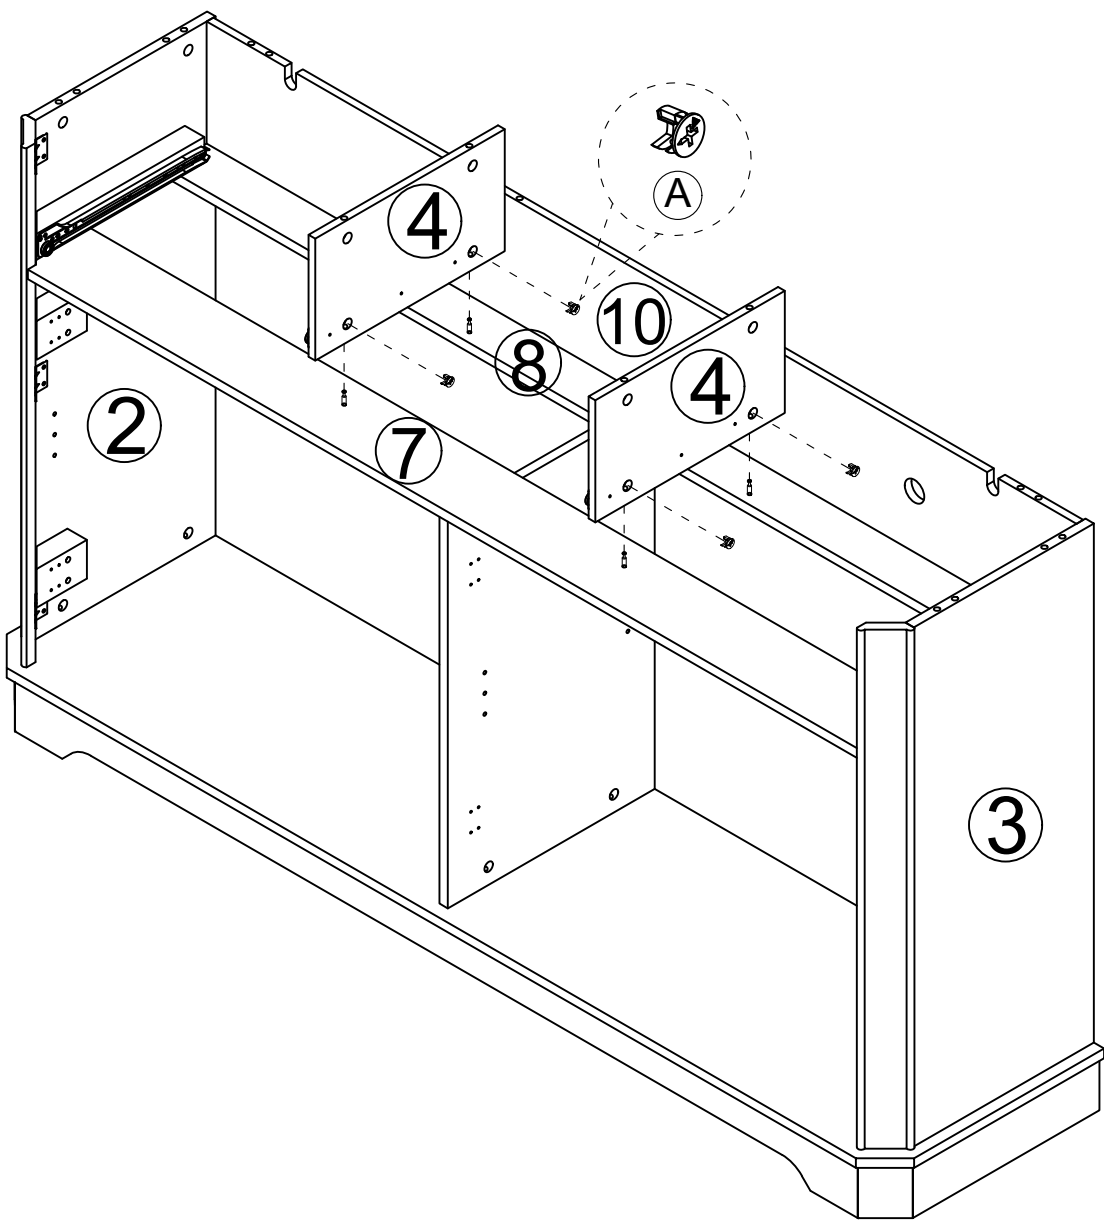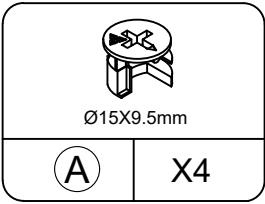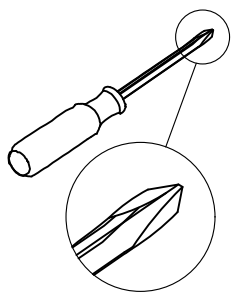


STEP 25




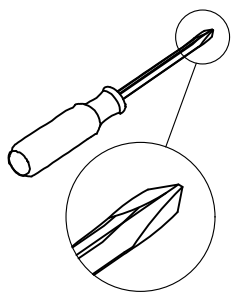


 Ø3.5X12mm	
(F)	X6





300MM 	
MCR	X2

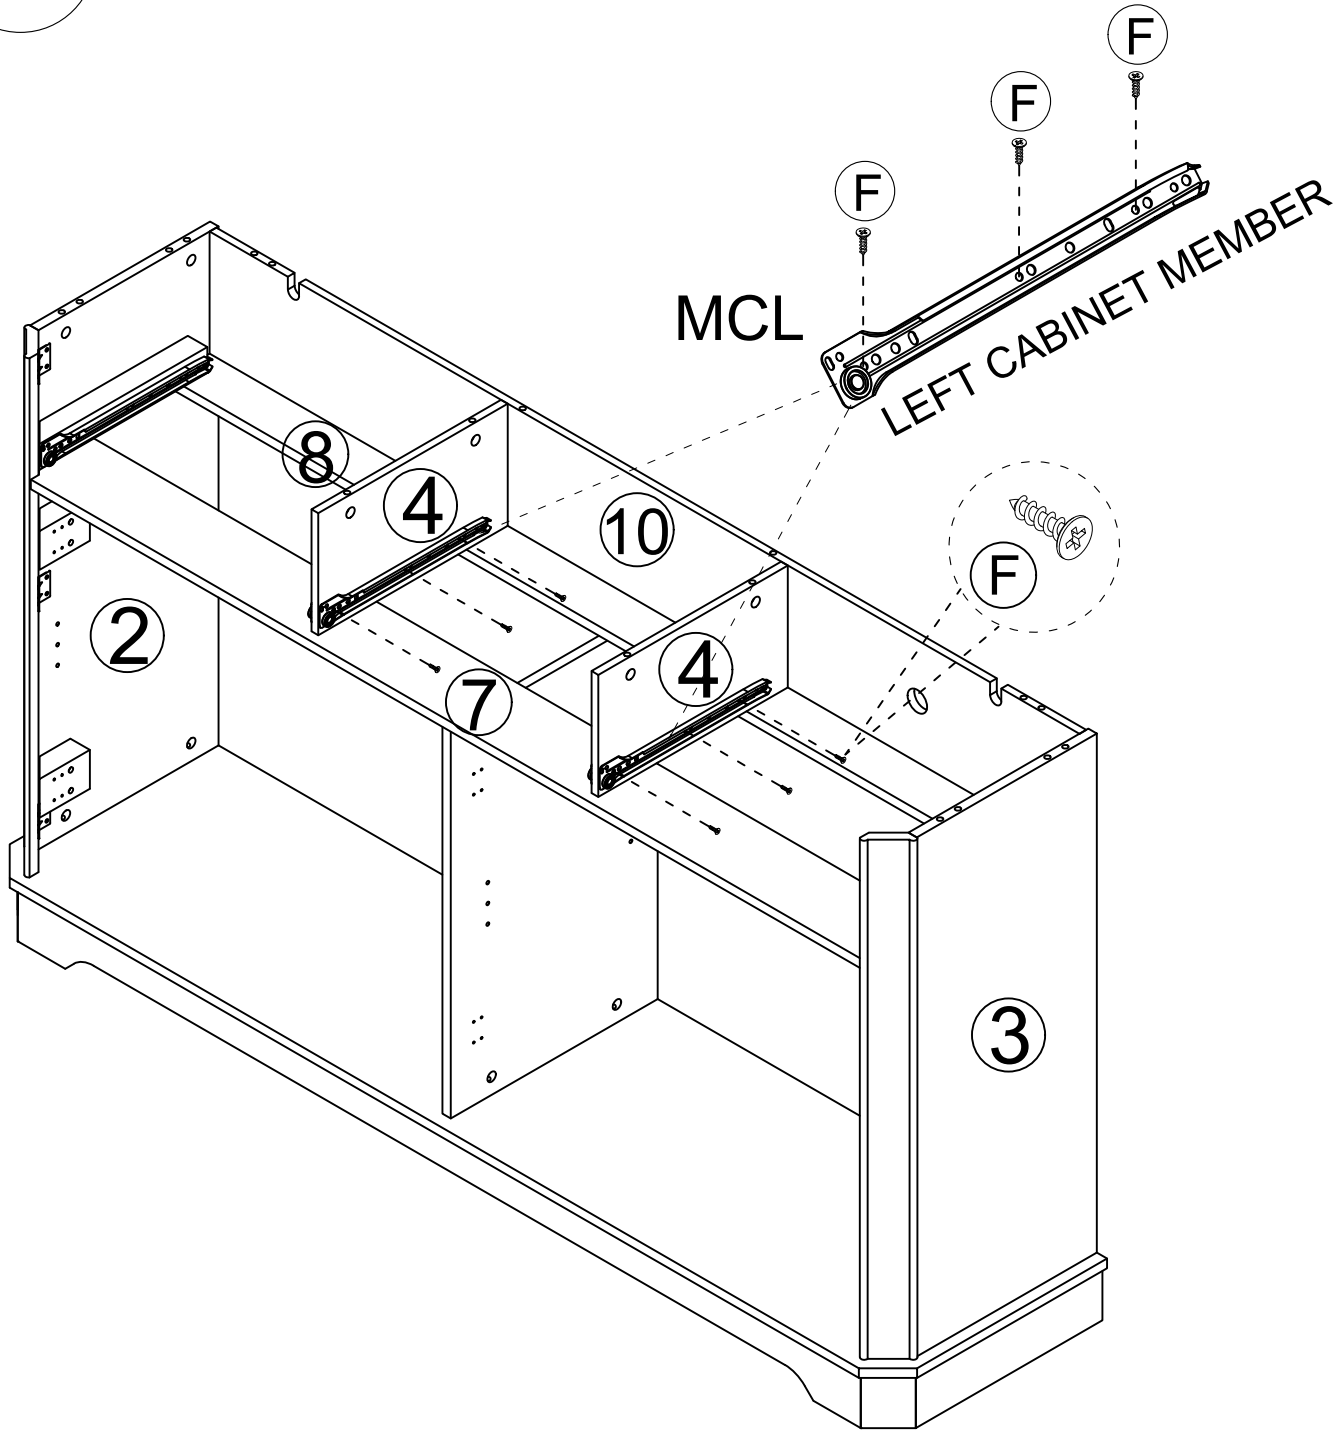


STEP 26

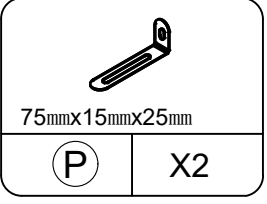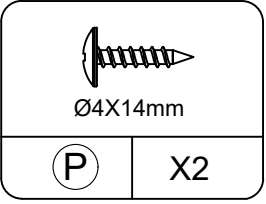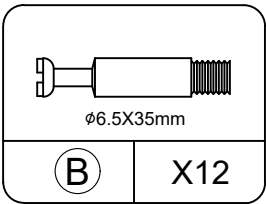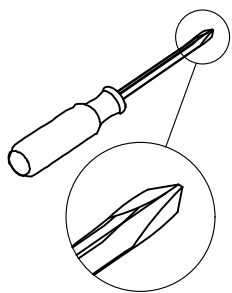

This tipping restraint hardware will be fixed to wall in Step 32 for the purpose of preventing tipping.

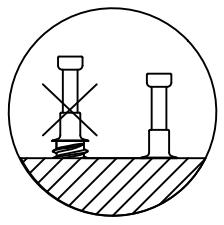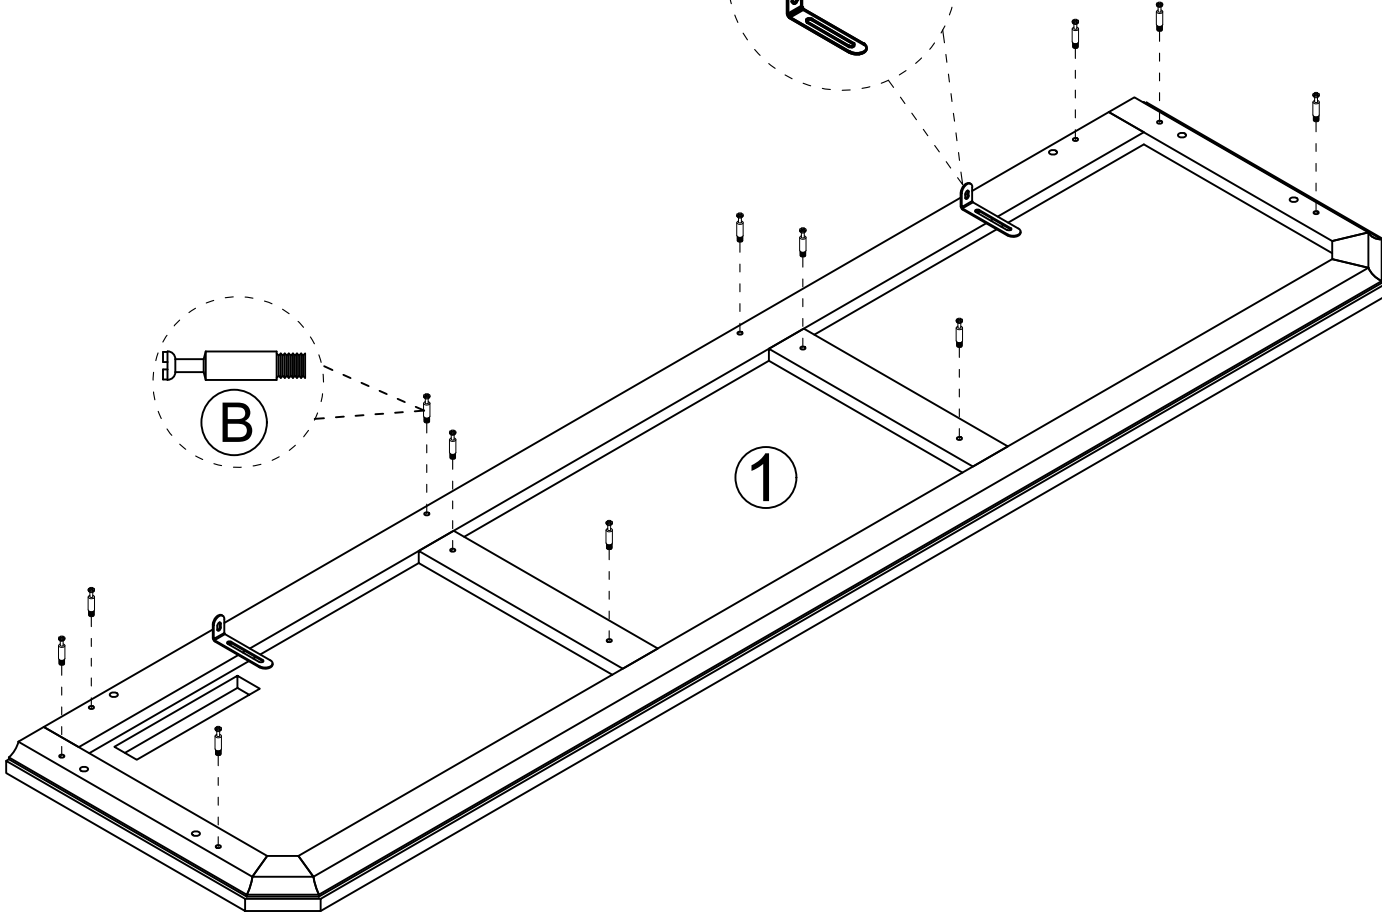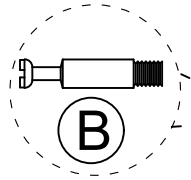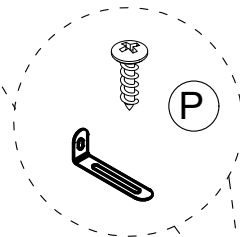



STEP 27

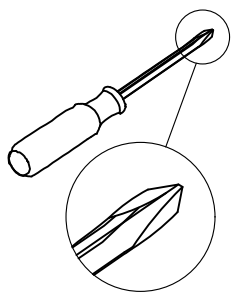

 Ø15X9.5mm	
(A)	X14




 Ø8X30mm	
(D)	X4

 Ø6X30mm	
(S)	X2



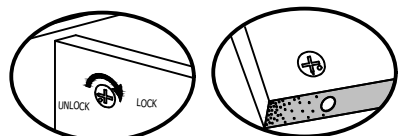
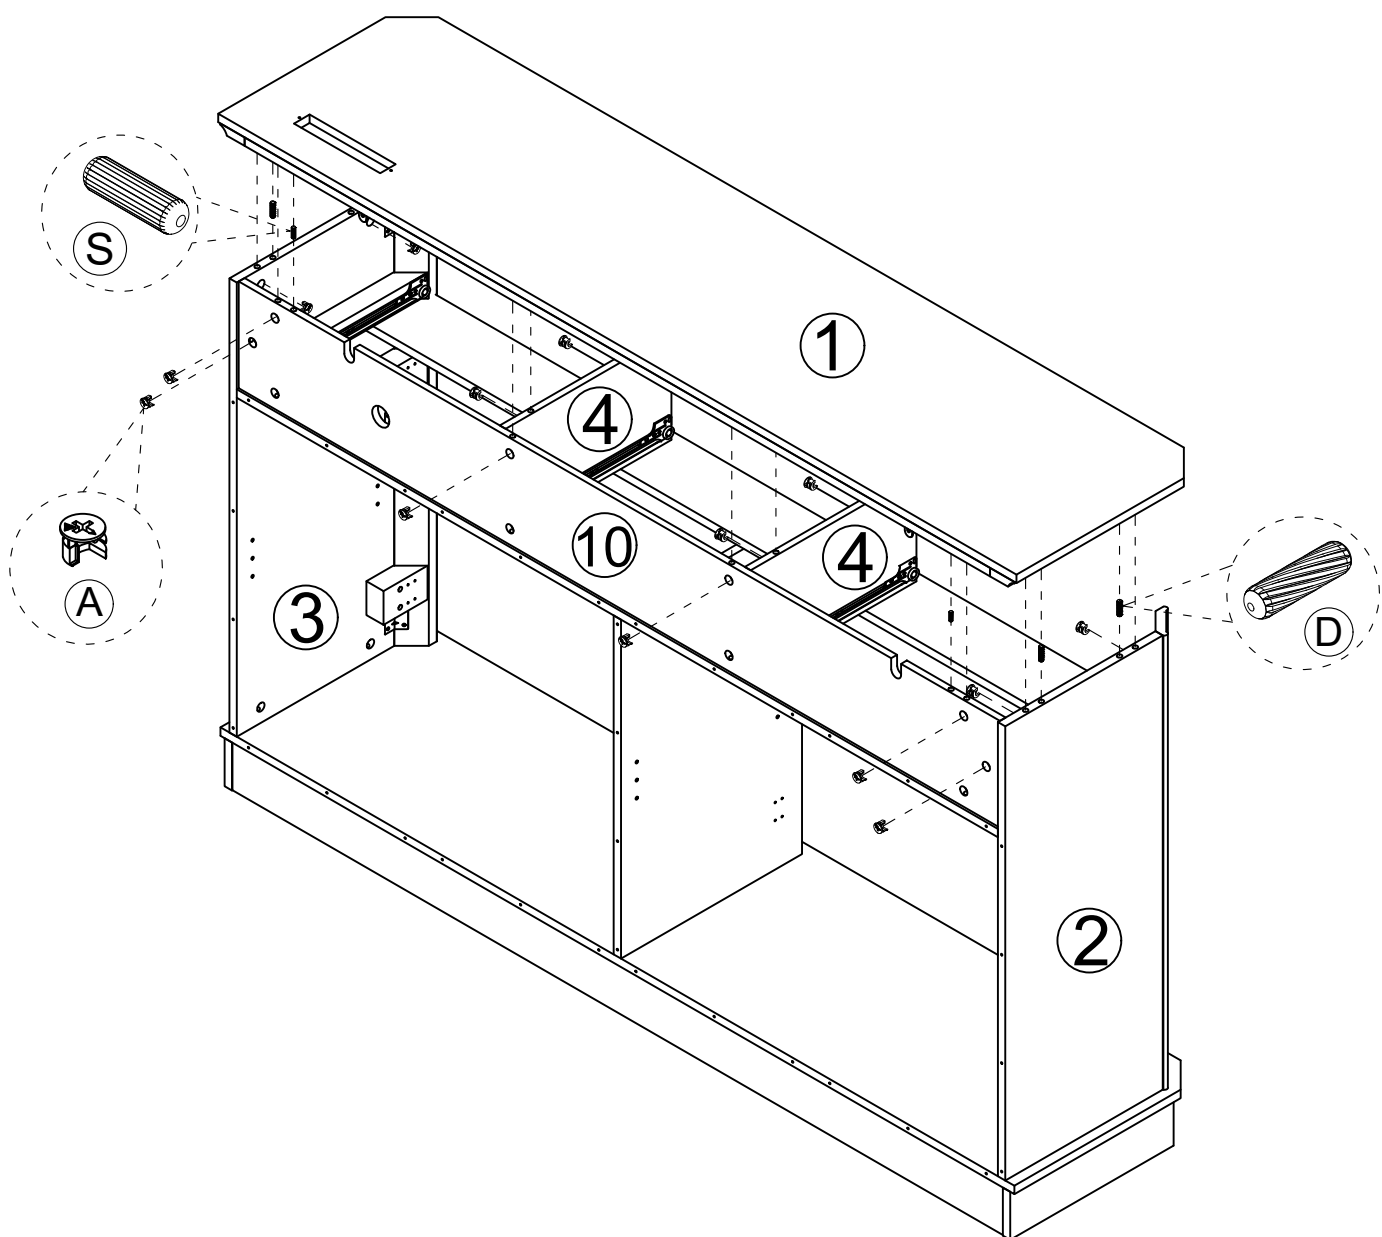


Proper orientation of CAM LOCK

STEP 28

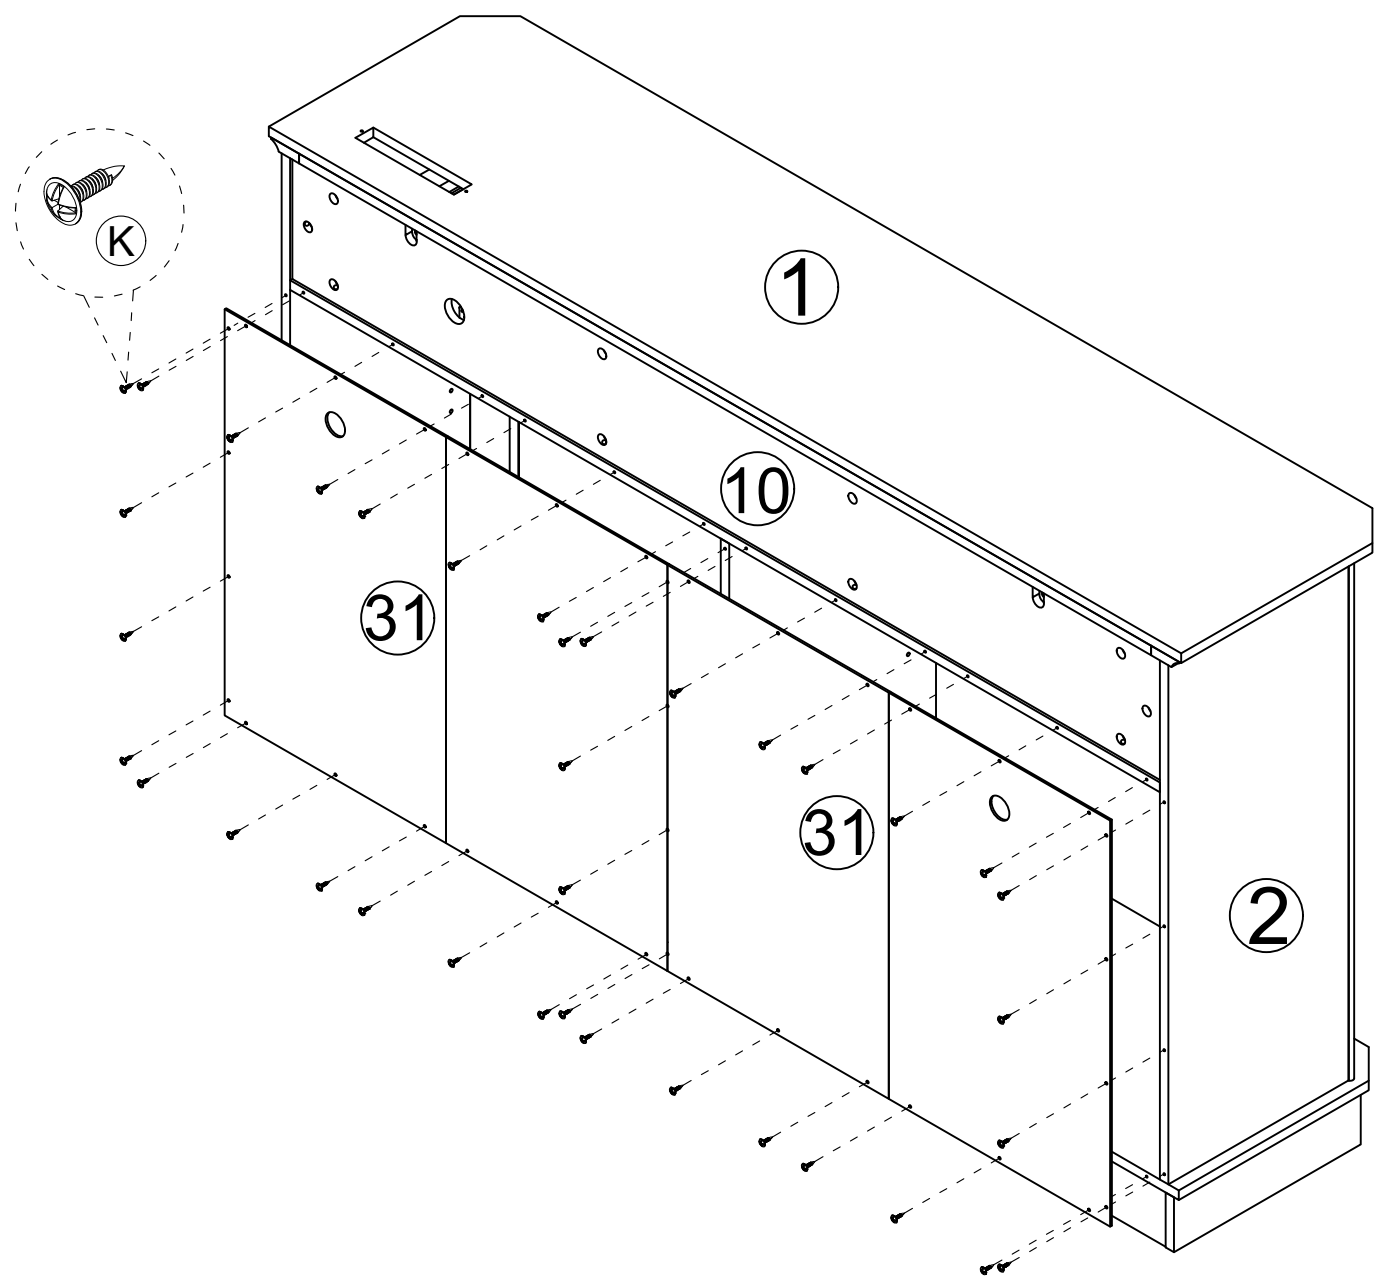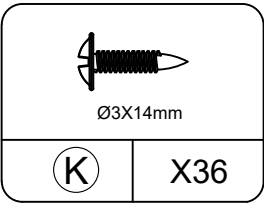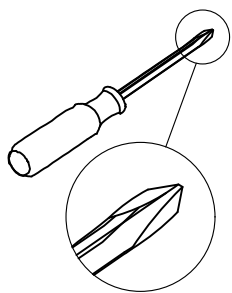

STEP 29

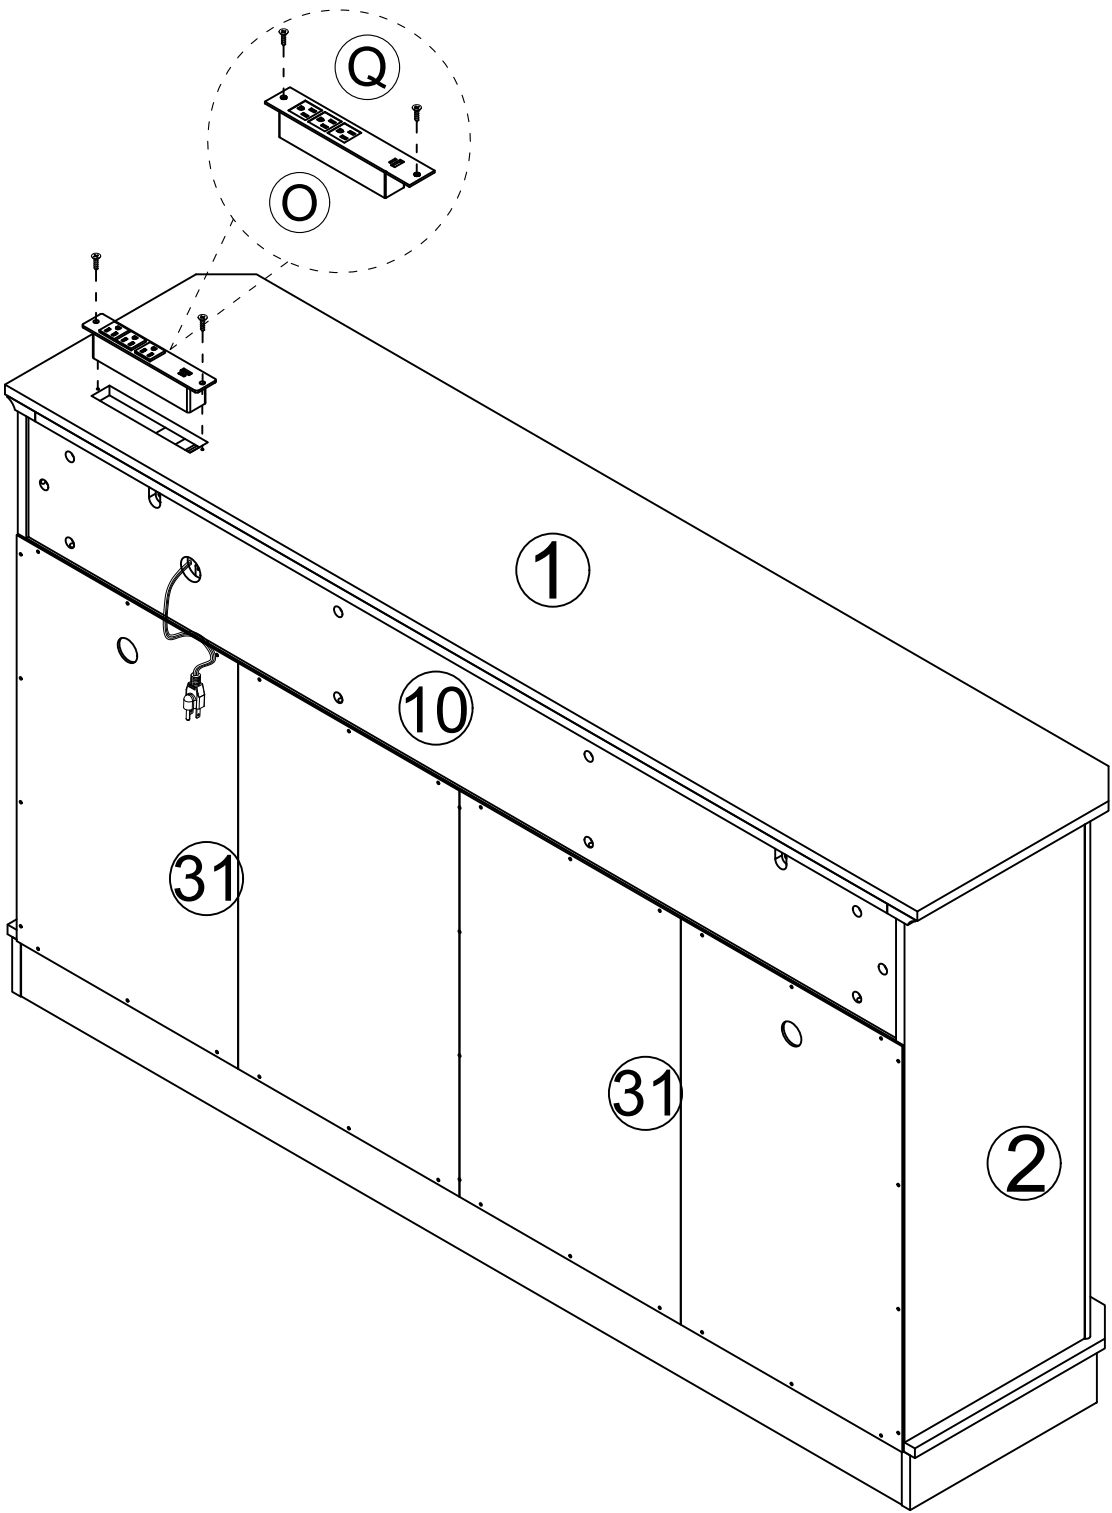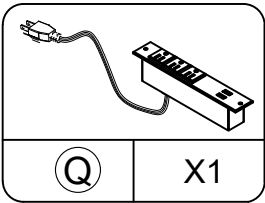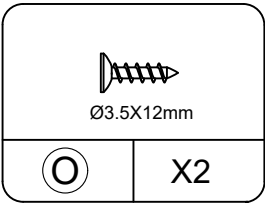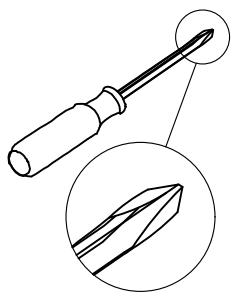


STEP 30


1PCS  Ø8X35mm	1PCS  Ø4X35mm
(P)	X2 set

We have included a set of tipping restraint hardware for this unit. You must install this hardware to prevent accidents or injuries that can result from the unit falling. When properly installed, this restraint can provide protection against the unexpected tipping of the unit due to small tremors, bumps or climbing. We strongly recommend mounting this hardware to a wall stud and your unit.


Install the tipping restraint hardware

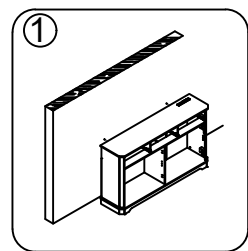


1. Push the cabinet close to the wall, make 2 marks on the wall through the holes in tipping restraint hardware;

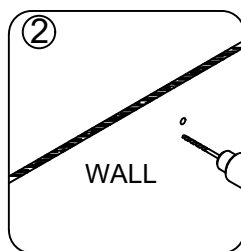

2. Move the cabinet away, and drill 2 6mm holes in the wall at the marked positions;

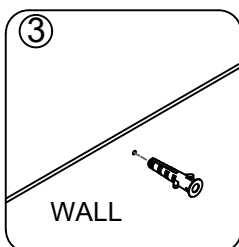


3. Insert 2 anchors into the holes;

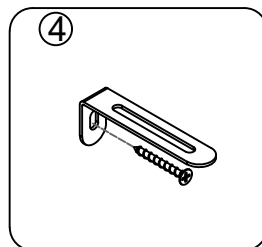




4. Push the cabinet close to the wall again, and fix the tipping restraint hardware to the wall with the long screws.



NOTE: The tipping restraint hardware included is for wooden stud wall construction. It must be attached to a wall stud. Depending upon your wall construction different anchor hardware maybe required. Please contact your local hardware store for assistance. Young children can be seriously injured by tipping furniture. You must install the tipping restraint hardware with the unit to prevent the unit from tipping, causing any accidents or damage. The tipping restraints are intended only as a deterrent and are not a substitute for proper adult supervision. The tipping restraints are not earthquake restraints. If you wish to add the extra security of earthquake restraints, they must be purchased and installed separately.






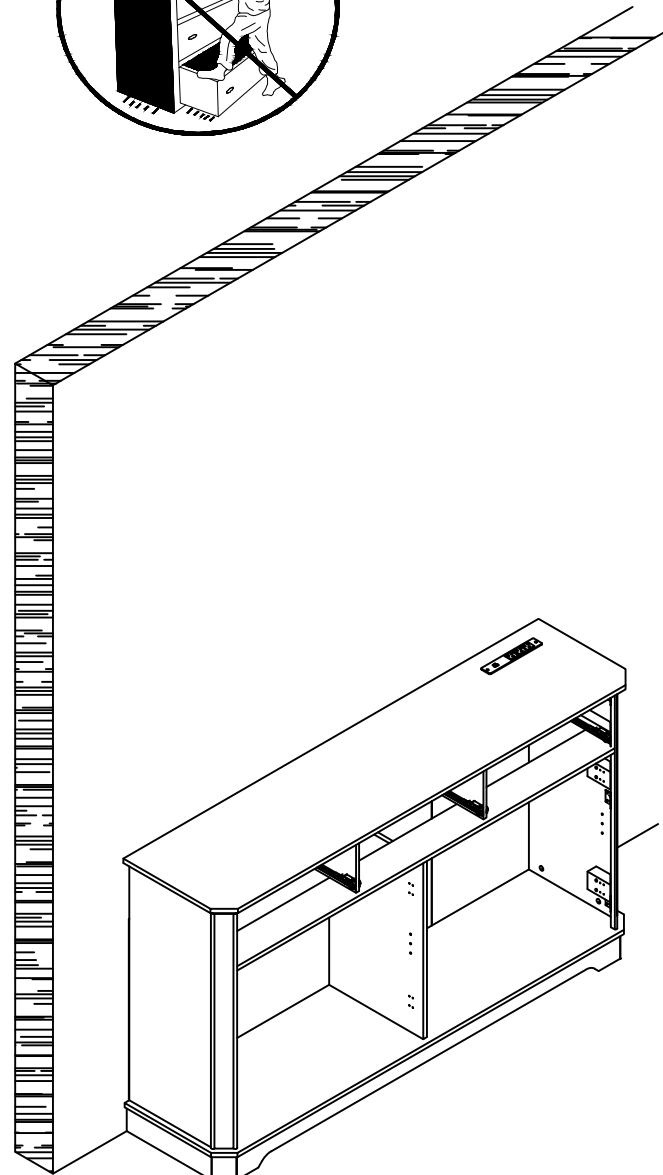


STEP 31

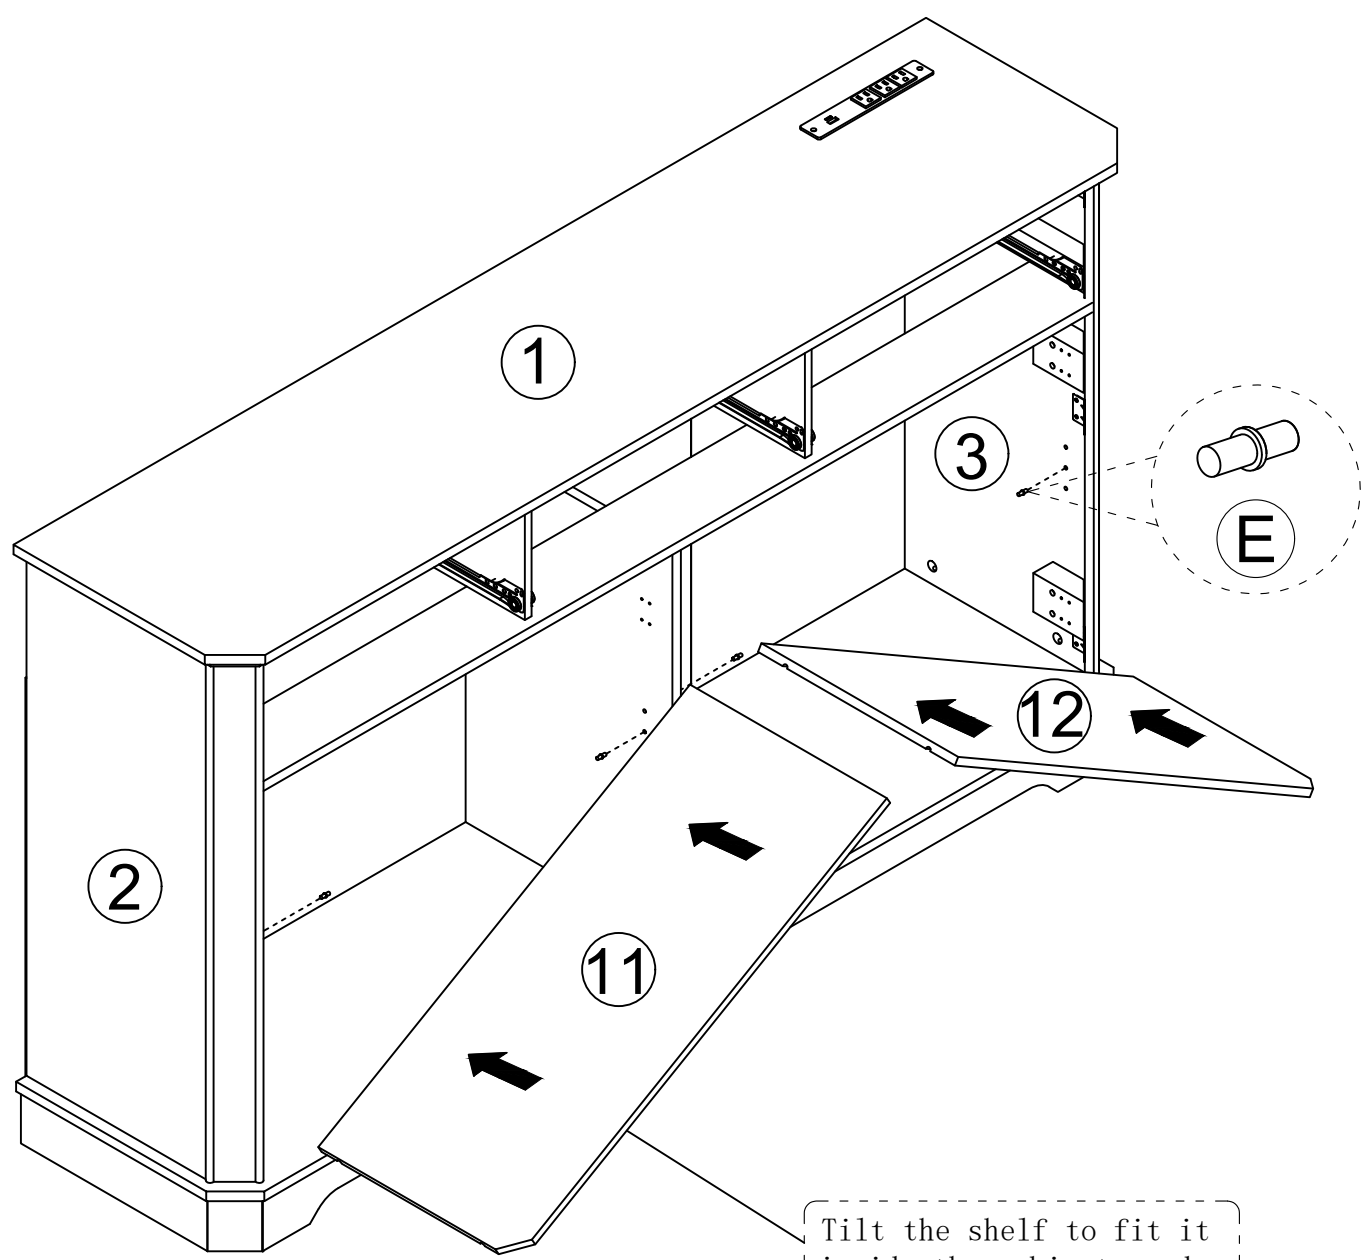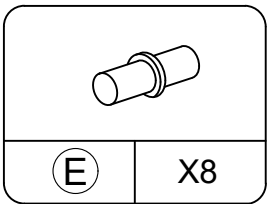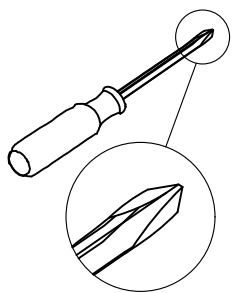


Tilt the shelf to fit it inside the cabinet, and then lay it flat onto the shelf carriers.

STEP 32

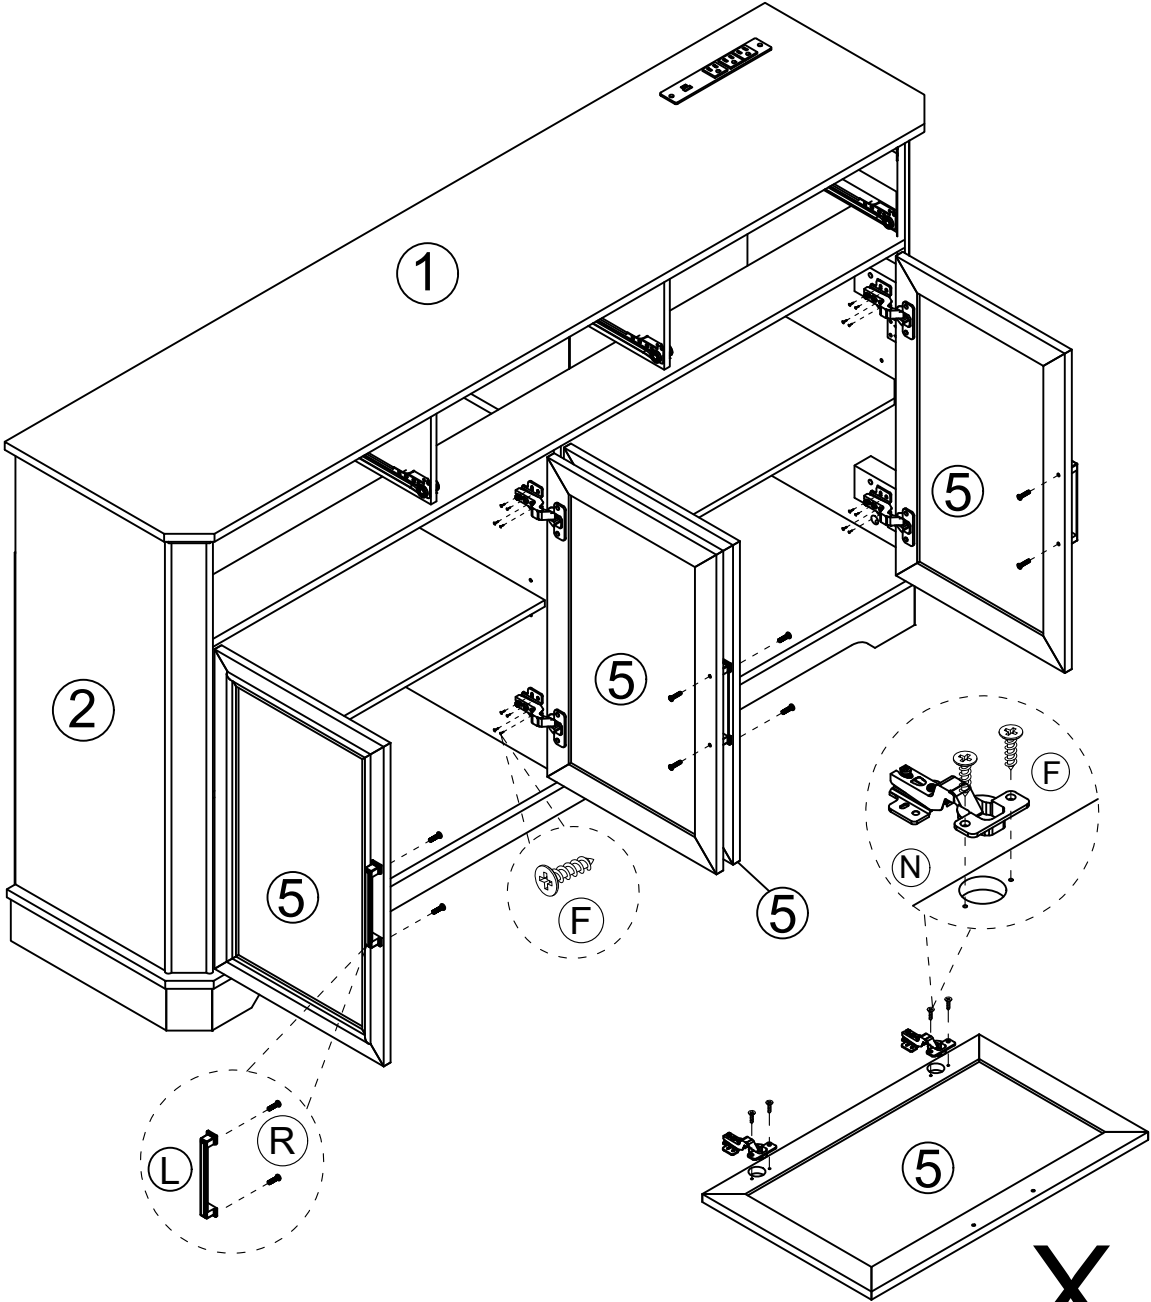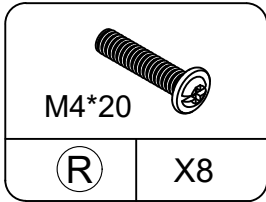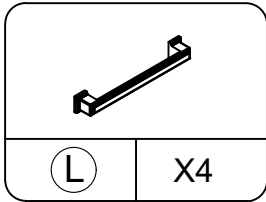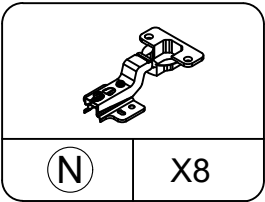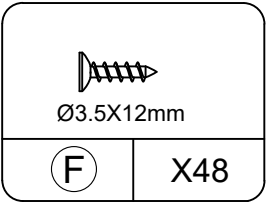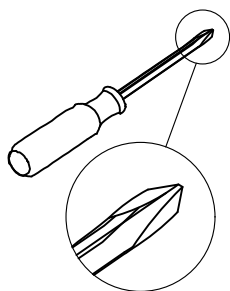


X 4

STEP 33

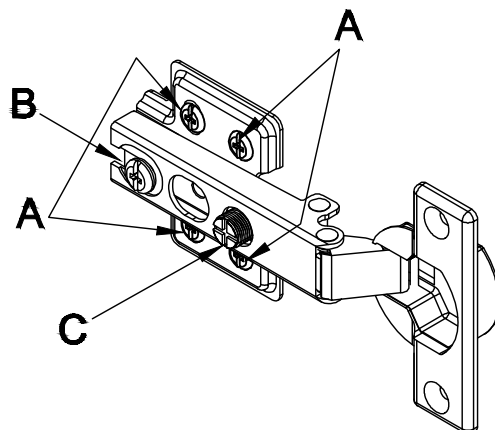


To adjust the vertical height.

Loosen the four screws "A" on both hinges. Two of them are usually in slotted holes which allows you to adjust up or down by a few mm. Then tighten back up.

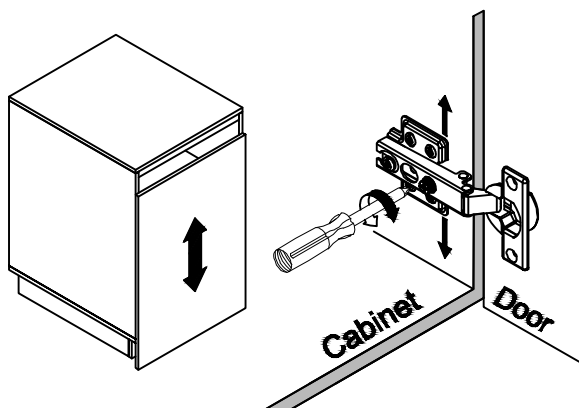


To adjust depth.

Loosen screw "B" and adjust door, if the door can not be adjusted, please loosen screw "C", then try again. Tighten screw "B" and "C".



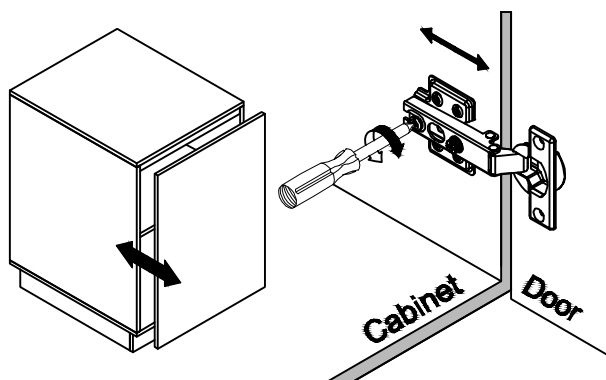


To adjust side ways.

Turning the screw "C" on BOTH hinges on each door.

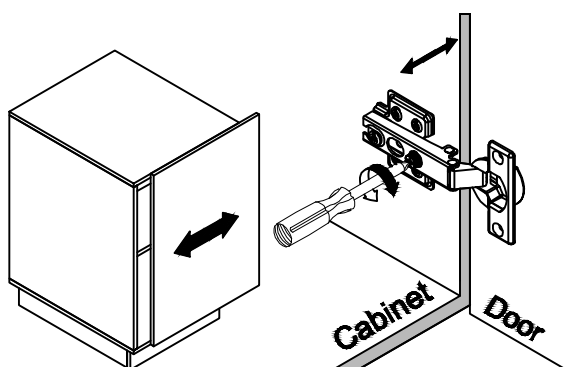


STEP 34

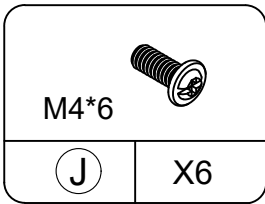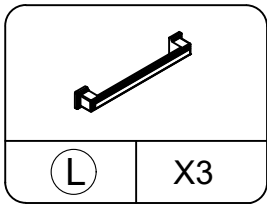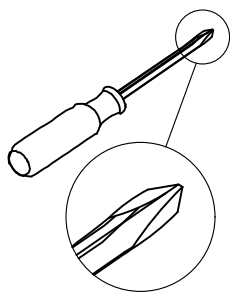

Cabinet Slide

Drawer Slide

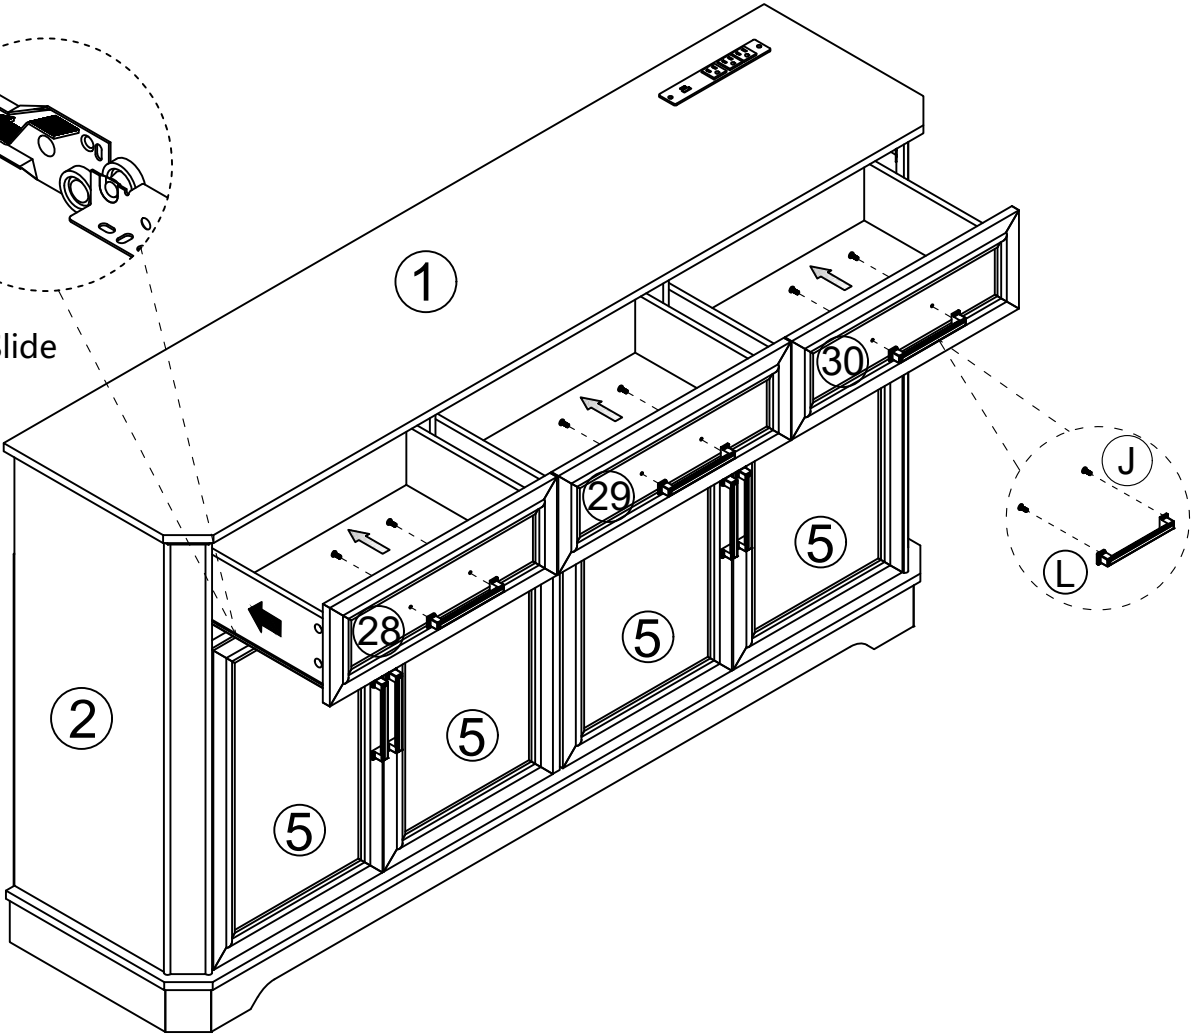

WARNING



Children have died from furniture tipover. To reduce the risk of furniture tipover:

- ALWAYS install tipover restraint provided.
- NEVER put a TV on this product.
- NEVER allow children to stand, climb or hang on drawers, doors, or shelves.
- NEVER open more than one drawer at a time.
- Place heaviest items in the lowest drawers.
- Do not defeat or remove the drawer interlock system.

This is a permanent label.

Do not remove!

ATTENTION



Des enfants sont morts du basculement des meubles. Pour réduire le risque de basculement des meubles:

- TOUJOURS installer la retenue de basculement fournie.
- NE JAMAIS mettre de téléviseur sur ce produit.
- NE JAMAIS permettre aux enfants de se tenir debout, de grimper ou de s'accrocher à des tiroirs, des portes ou des étagères.
- N'ouvrez JAMAIS plus d'un tiroir à la fois.
- Placez les objets les plus lourds dans les tiroirs les plus bas.
- Ne désactivez pas et ne retirez pas le système de verrouillage du tiroir.

Ceci est une étiquette permanente.

Ne pas enlever!

WARNUNG



Kinder sind an einem Möbelkipp gestorben. So verringern Sie das Risiko eines Umkippens von Möbeln:

- Installieren Sie IMMER die mitgelieferte Kipprückhaltevorrichtung.
- Stellen Sie NIEMALS einen Fernseher an dieses Produkt.
- Lassen Sie Kinder NIEMALS an Schubladen, Türen oder Regalen stehen klettern oder hängen.
- Öffnen Sie NIEMALS mehr als eine Schublade gleichzeitig.
- Legen Sie schwerste Gegenstände in die untersten Schubladen.
- Besiegen oder entfernen Sie das Schubladenverriegelungssystem nicht.

Dies ist ein dauerhaftes Etikett.

Nicht entfernen!