



SUGGESTED TOOLS




SILICONE SEALANT

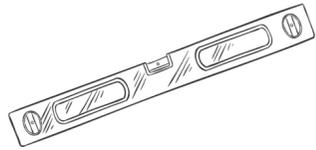

LEVEL

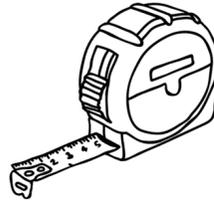


TAPE MEASURE

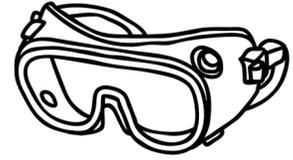


SAFETY GLASSES

WARNING!


Even though our solid surface resin material is durable, when handled incorrectly, it can become fragile. In order to ensure proper handling and usage, below are some tips!

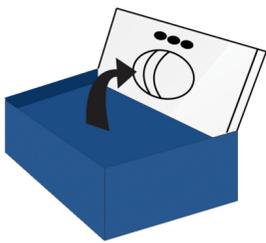

Remove the vanity from the box vertically.

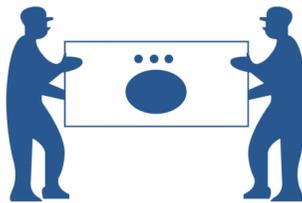


Carry the vanity top in an upright position. NEVER carry it flat. Ensure that there are two people carrying the top.

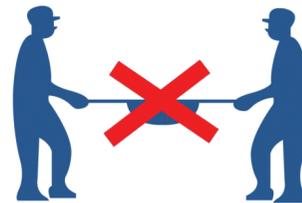

PRODUCT CARE AND MAINTENANCE

	<p>In order to clean the vanity top, please only use soft cotton cloth or soft sponge.</p>
	<p>Never use acidic, alkali, or any products that state on their label that they're not suitable for using on poly-marble or natural stone, to clean the vanity top.</p>
	<p>To clean the vanity top, wet the surface of the top, apply cleaning product with cloth or sponge and then use water to clean and rinse. Ensure that no cleaning products are left over on the top as it may leave residue.</p>

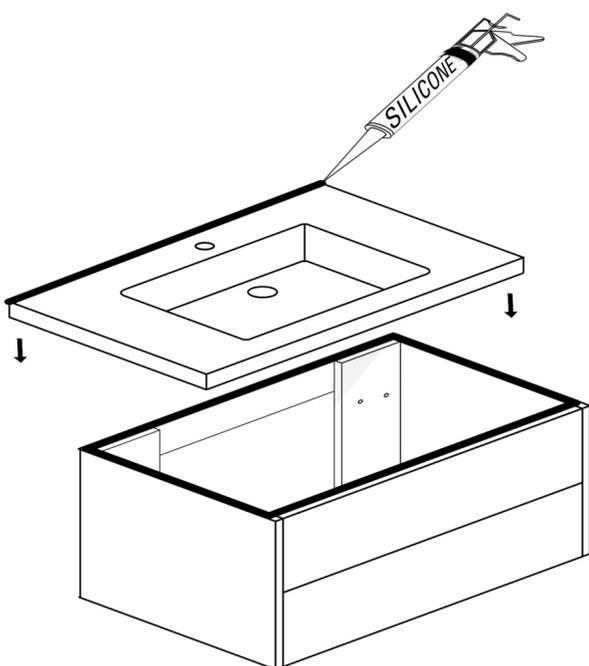

NOTE: Top style, shape cutout on the top vanity may vary from the picture above. Instructional purposes only.

1

Carefully remove the vanity top from the box, making sure to gently place it on an even surface. At this point, it would be best to install the faucet and drain as per the manufacturer's instructions.

2

Apply silicone to the top of the cabinet. Make sure to use enough so as to ensure that the vanity will firmly stay in position.

3

If there is any excess silicone, clean it off gently with a soft cotton cloth or sponge.

4

Gently pick up the vanity top and place on the top of the cabinet, as shown in the diagram.

5

Enjoy your new bathroom vanity with your Streamline® vanity top!

VANITÉ POUR ÉVIER


MANUEL D'INSTALLATION

Streamline

OUTILS SUGGÉRÉS




MASTIC SILICONE

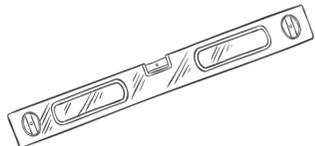

NIVEAU À BULLE




MÈTRE RUBAN

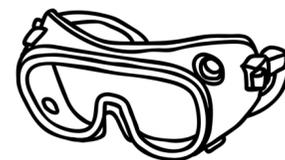


LUNETTES DE SÉCURITÉ

ATTENTION!!


Même si notre surface en résine est résistante, si elle n'est pas manipulée avec assez de précautions, elle peut se briser. Afin d'assurer une manipulation et utilisation sans risques, voici quelques conseils!

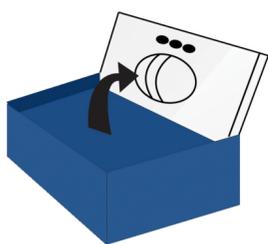

Sortez la plaque de la boîte à a verticale.

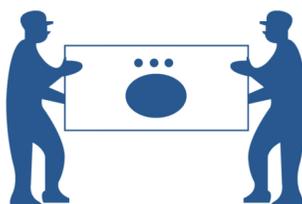


Transportez le vanité à la verticale. NE JAMAIS le porter à plat. Assurer que deux personnes portent la plaque.

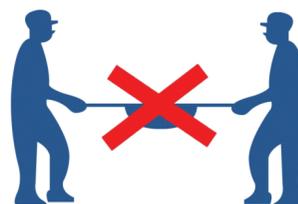

D'USAGE ET D'ENTRETIEN

	Pour nettoyer le vanité, utiliser une éponge douce ou un tissu en coton.
	Ne jamais utiliser de l'acide, de l'alcali ou autre produit qui ne conviennent pas aux pierres naturelles ou au marbre pour nettoyer ce meuble.
	Pour nettoyer ce meuble, mouiller la plaque, appliquer un produit de nettoyage avec une éponge ou un tissu en coton puis rincer à l'eau. Assurez-vous de ne pas laisser de traces de produit de nettoyage sur la surface.

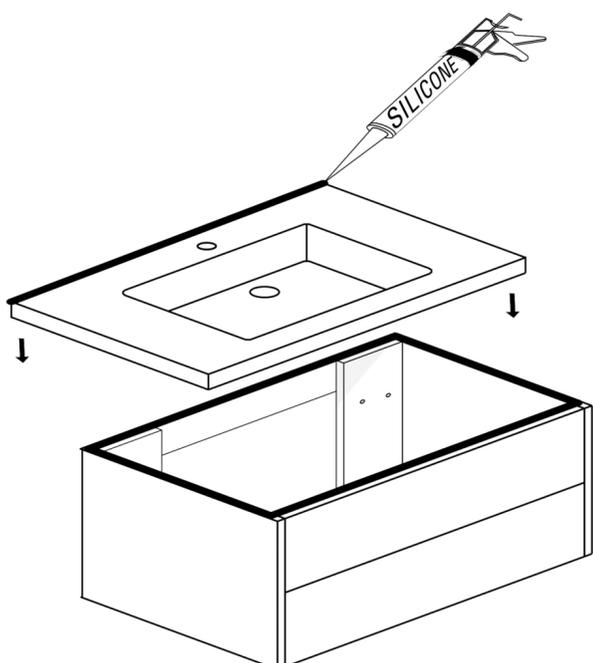

NOTE : La forme du meuble et de la plaque peuvent varier des diagrammes de ce manuel en fonction des modèles.

1

Sortez le dessus de vanité de la boîte avec précautions, en vous assurant de la poser sur une surface plane. Pensez à installer le drain et le robinet en suivant les instructions du fabricant avant de continuer.

2

Disposer le mastic silicone sur le dessus du meuble. Assurez-vous qu'il y en ait assez pour que la plaque reste en place.

3

S'il y a trop de silicone, enlevez délicatement l'excès avec une éponge ou un tissu en coton.

4

Soulevez la plaque du vanité et placez la sur le meuble, comme sur le diagramme.

5

Profitez de votre nouveau meuble de salle de bain Streamline® !