



ASSEMBLY INSTRUCTIONS

TWIN FLOOR BED WITH BOOK SHELF (NO DOOR)






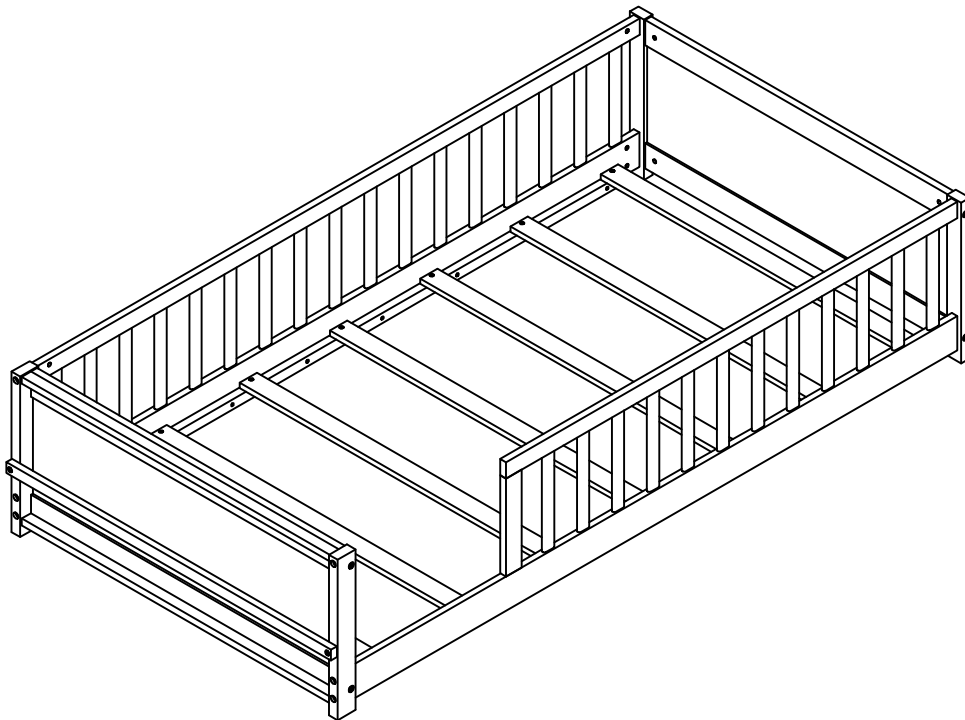


SA33818




Detail View

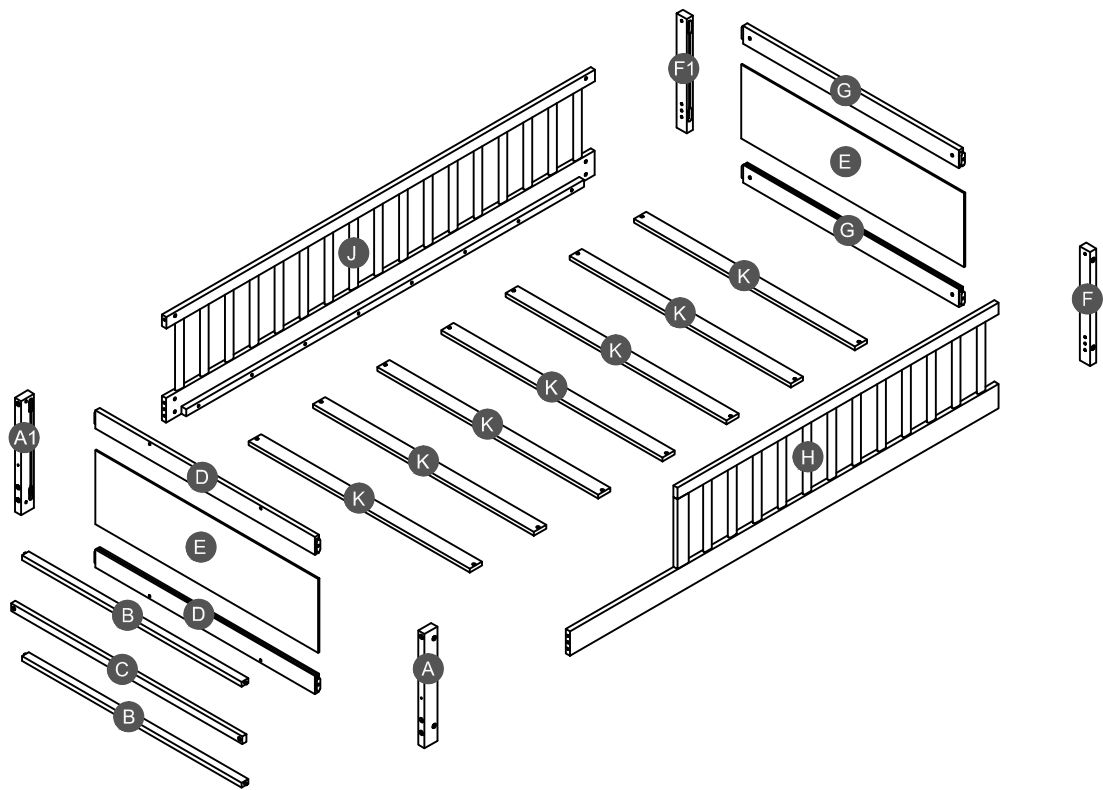


Part List

A  Leg (Left Front) - 1pc	A1  Leg (Left Back) - 1pc	B  Horizontal bar FB - 2pcs
C  Divider horizontal bar FB - 1pc	D  Horizontal bar FB - 2pcs	E  Side panel HB/FB - 2pcs
F  Leg (Right Front) - 1pc	F1  Leg (Right Back) - 1pc	G  Horizontal bar HB - 2pcs
H  Guard rail (Front) - 1pc	J  Guard rail (Back) - 1pc	K  Slats - 7pcs

Hardware List


1  Ø8*30mm Wood dowel (4pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (5pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (10pcs)
4  (Ø12)1/4"*70mm Hex-Head bolts (4pcs)	5  1/4"*15 (9.5mm) Horizontal-Hole bolts(19pcs)	6  (Ø12)1/4"*40mm Hex-Head bolts (6pcs)
7  Ø4*30mm Wood screws (14pcs)	8  (1/4")4.5*58mm Allen key (1pc)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

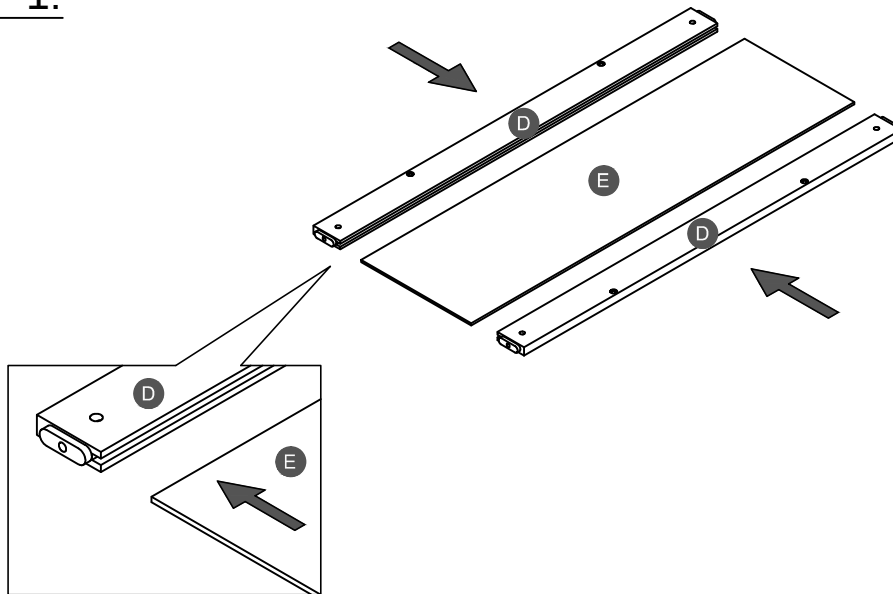

STEP 2:

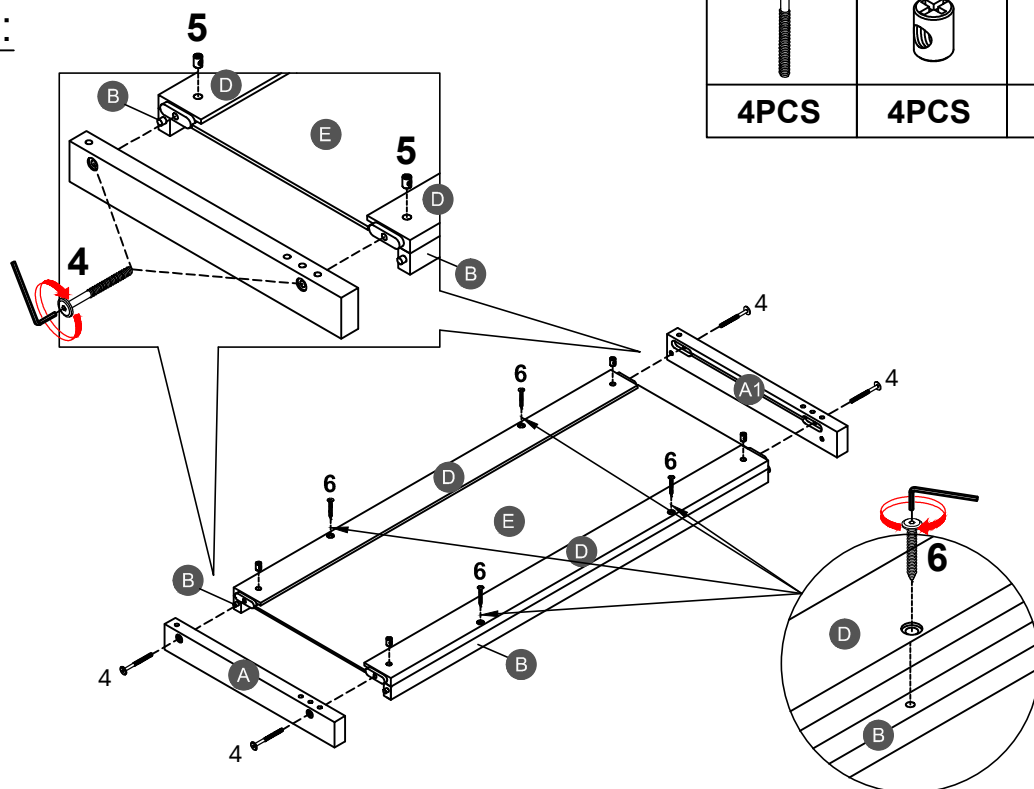


4	5	6
4PCS	4PCS	4PCS

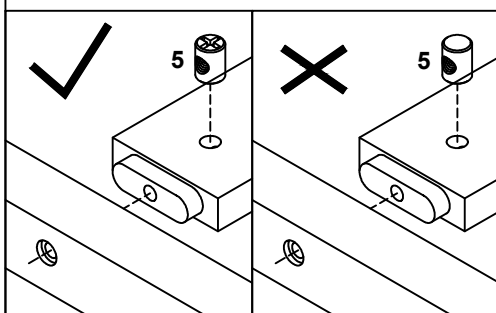


Note: Part 5 will face up with the "x" mark on it, otherwise it cannot be tightened


STEP 3:

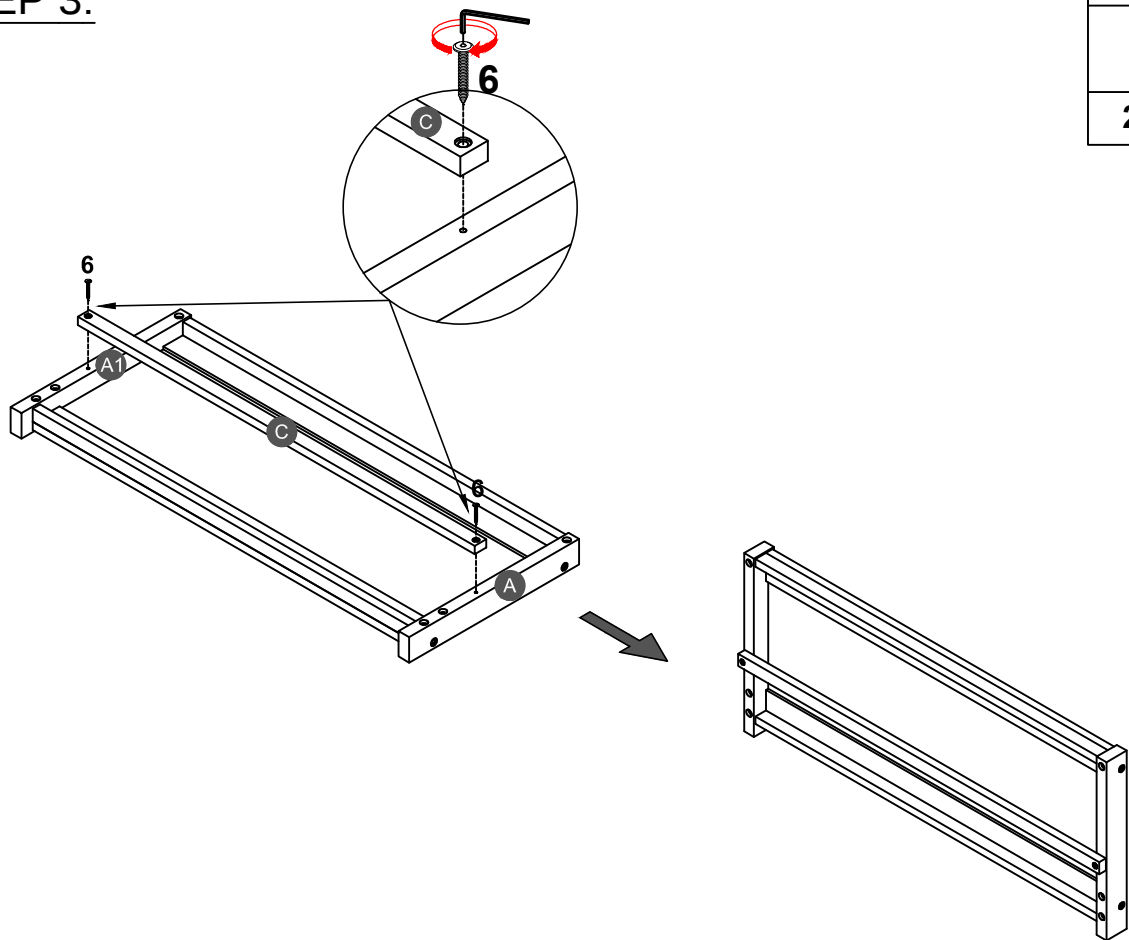

STEP 4:

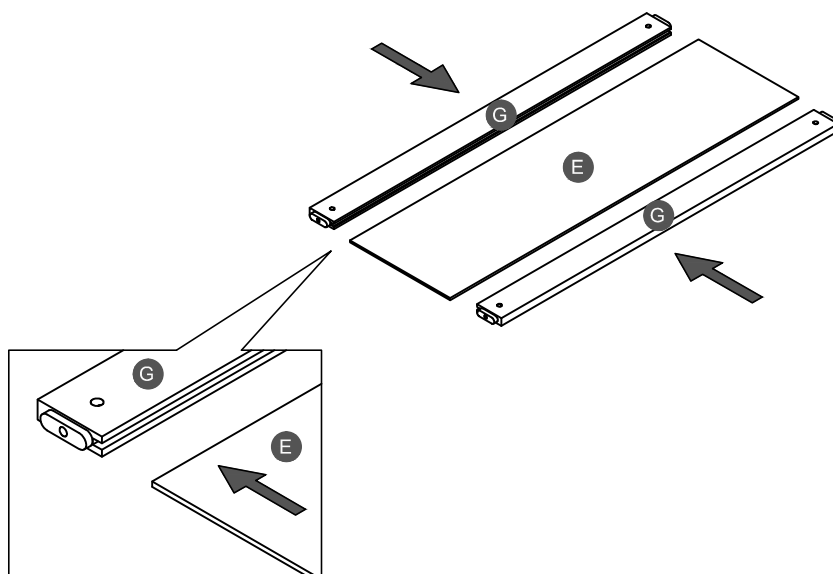


STEP 5:

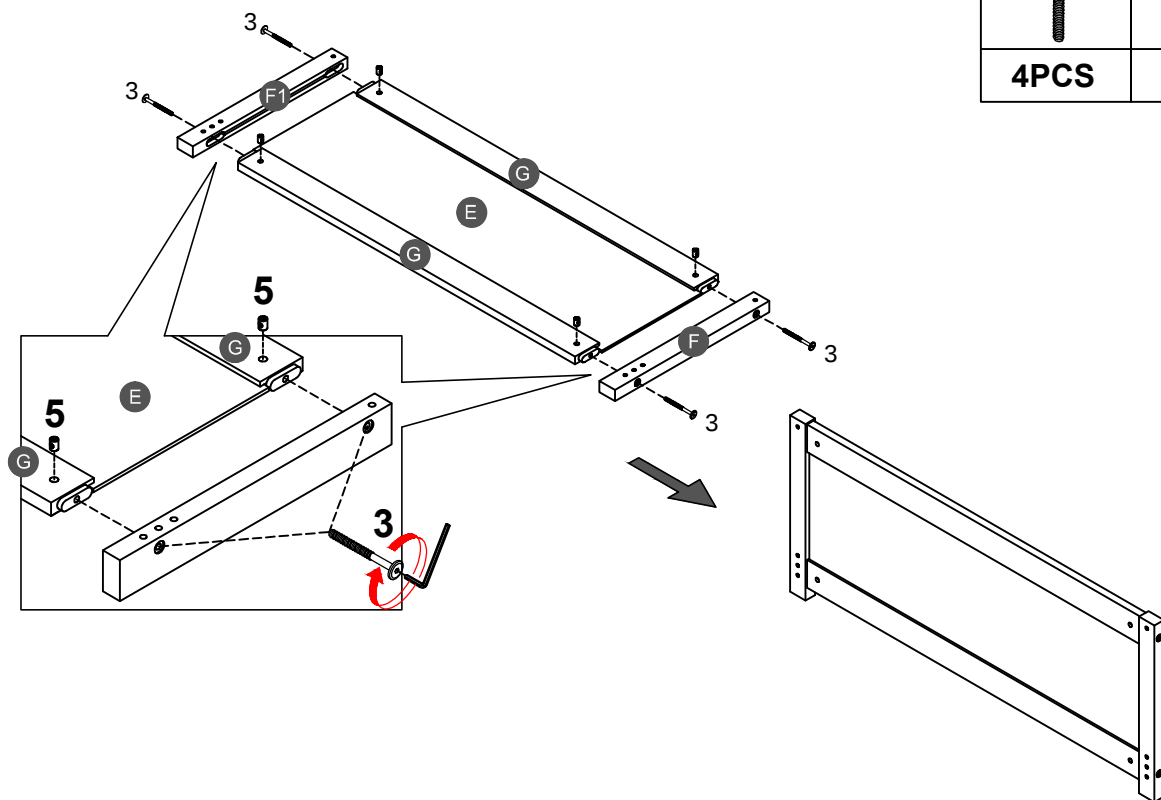

3	5
	
4PCS	4PCS

STEP 6:

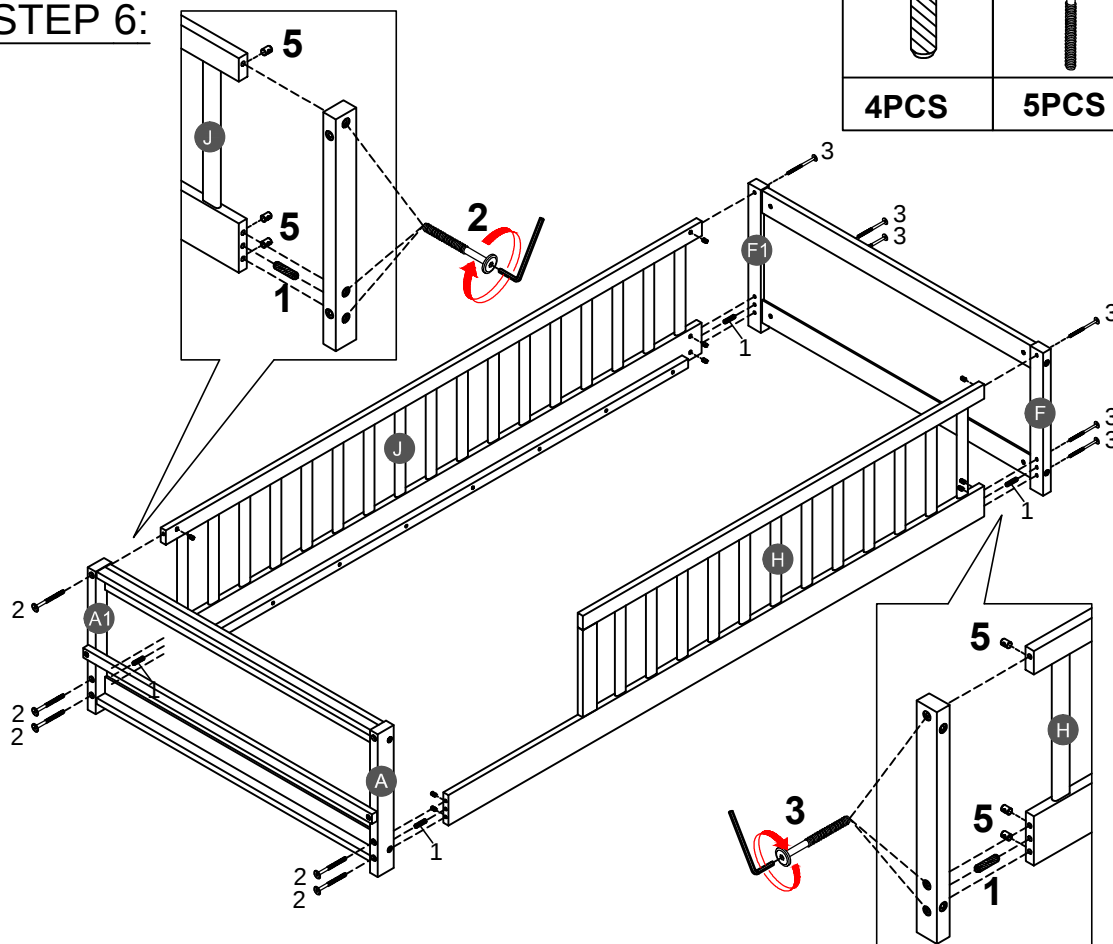

1	2	3
		
4PCS	5PCS	6PCS

5





11PCS

STEP 7:

7



14PCS

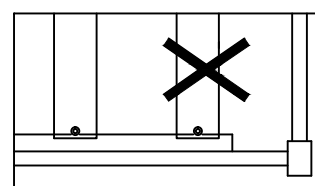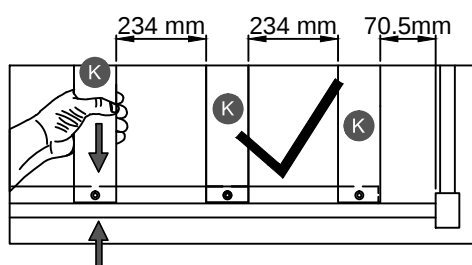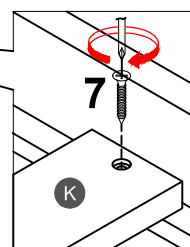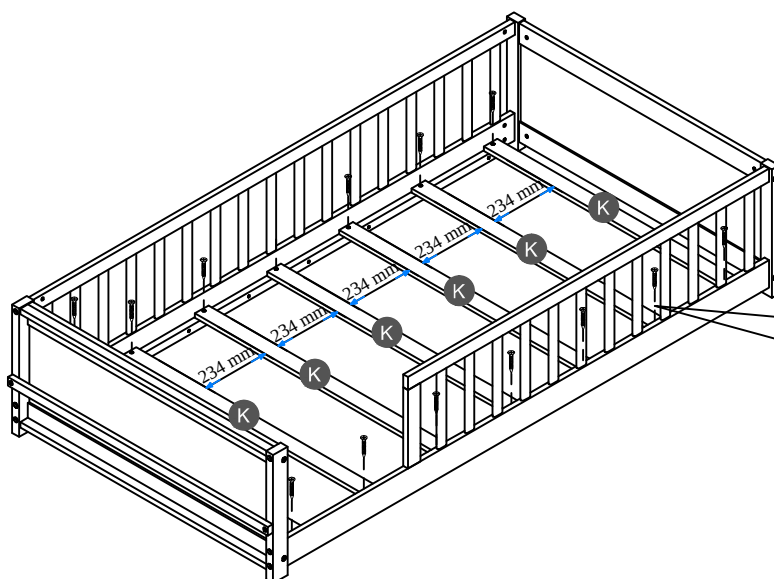

NOTE: Please make sure the bed slats close to the side rail before locking the screws to avoid breakage. This step is required for both the left and right sides. Moreover, please do not lock the screws of the bed slats at the outermost edge to avoid damaging

