

# **Assembly Instruction**

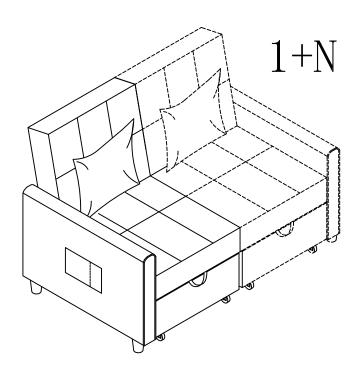





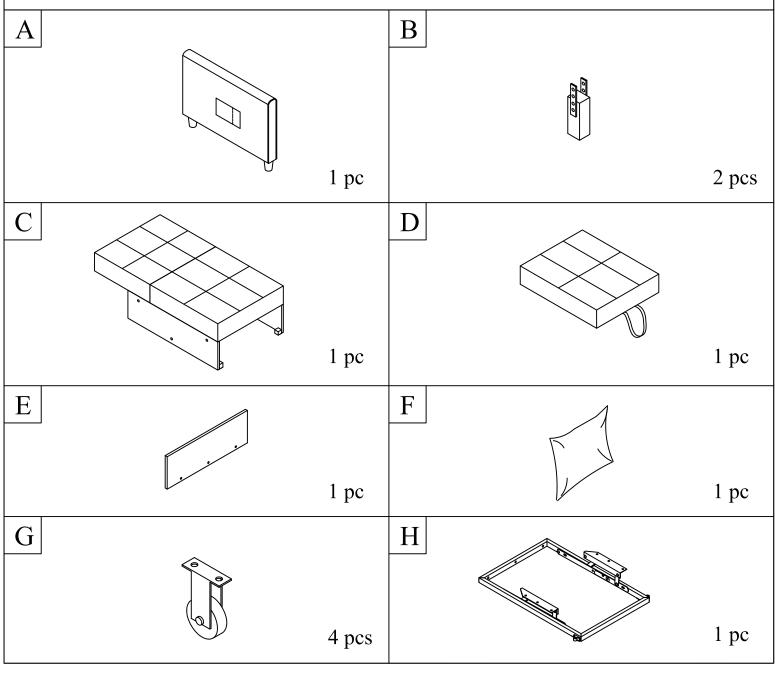


#### **Hardware List** (1)Ø5/16inX2 inL 3 PCS **3** $9_{PCS}$ Ø5/16in 3 (4) Ø5/16inXØ7/8in **9** PCS *O* $\emptyset 1/4 in X 3/4 in L$ **12** PCS (5) 0 6 Ø1/4inXØ5/8in 12 PCS **@** $\emptyset 1/4in$ **12** PCS (7)Ø1/4in **1** PC 8 Ø5/16in **1** PC *ODDDDDDD* Ø5/16inX1-1/2inL 6 PCS (10) Ø5/32inX3/4in Danaman $8_{\text{PCS}}$ (11) 3 PCS 12 Ø5/16inX3/4inL **1** PC




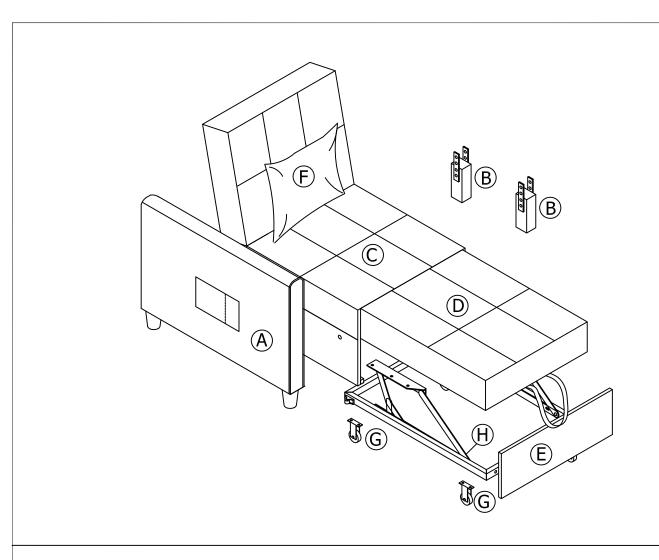


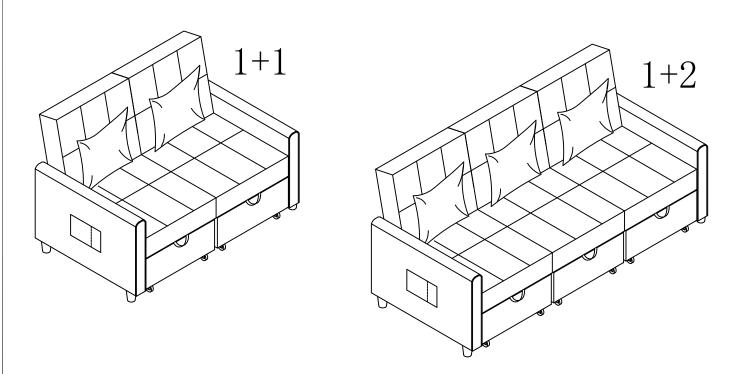


Please don't tighten the screws until all the screws are put into the hole. And if there is any problem, please contact us and we will help you to solve it.

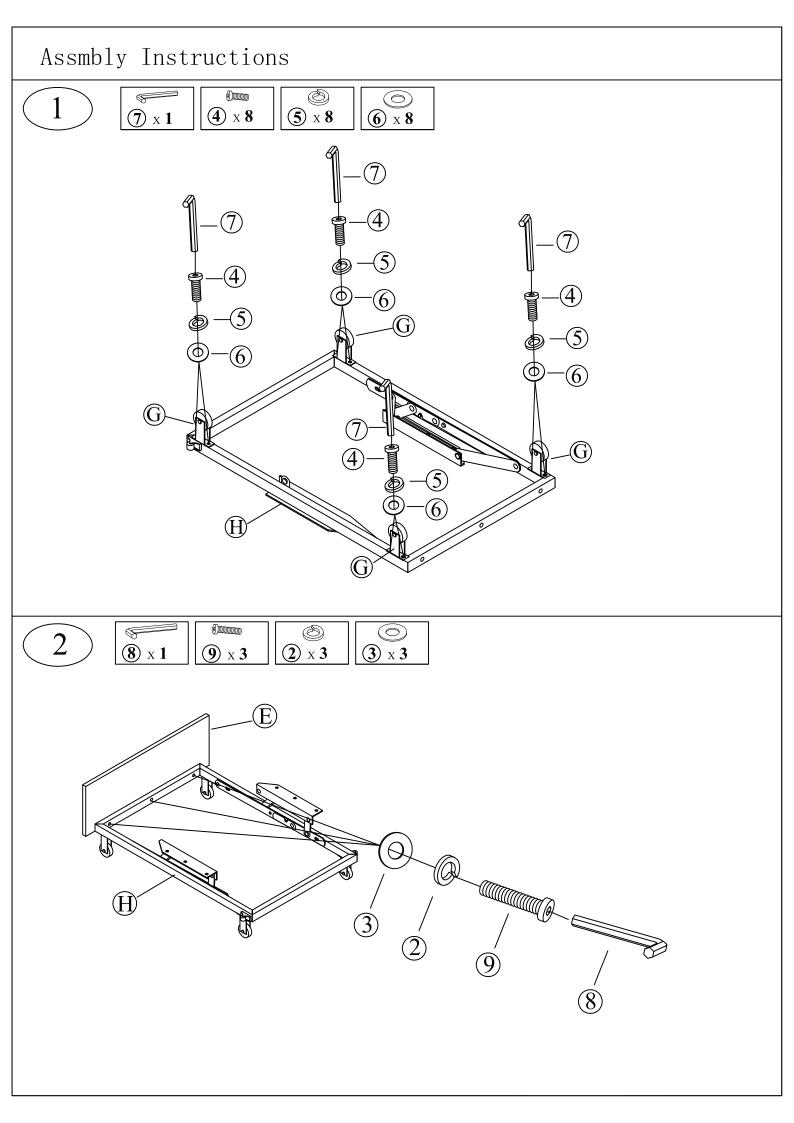

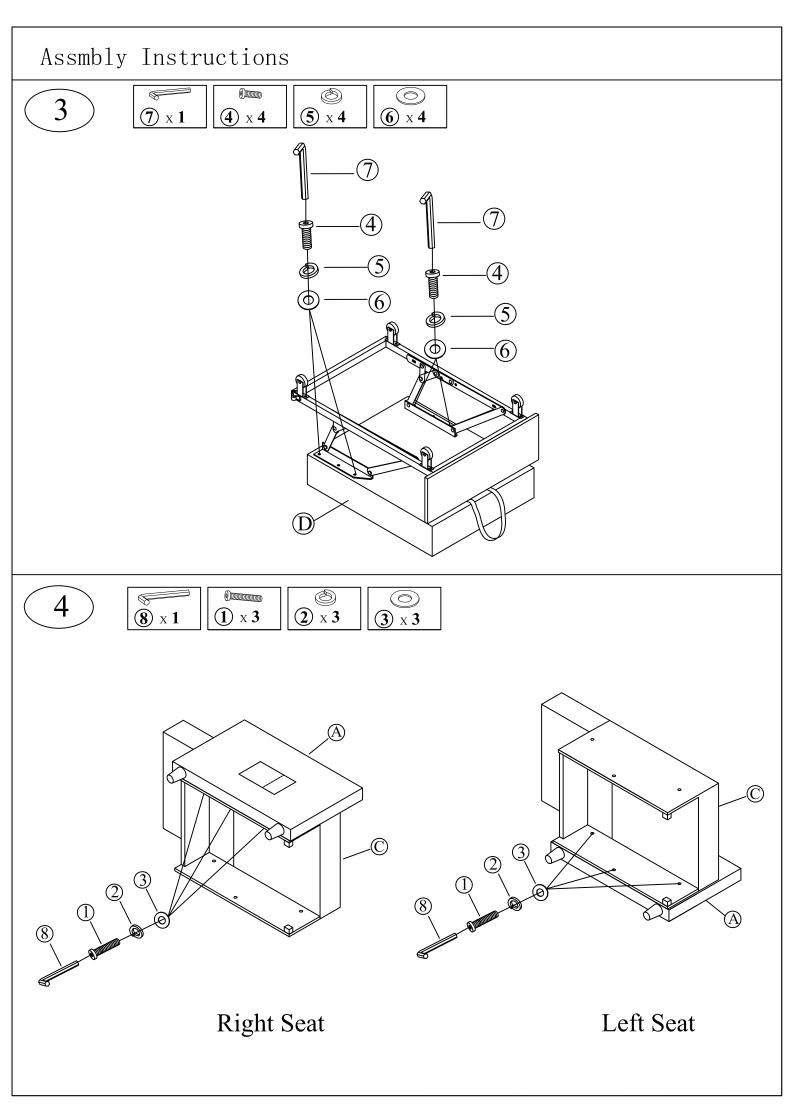


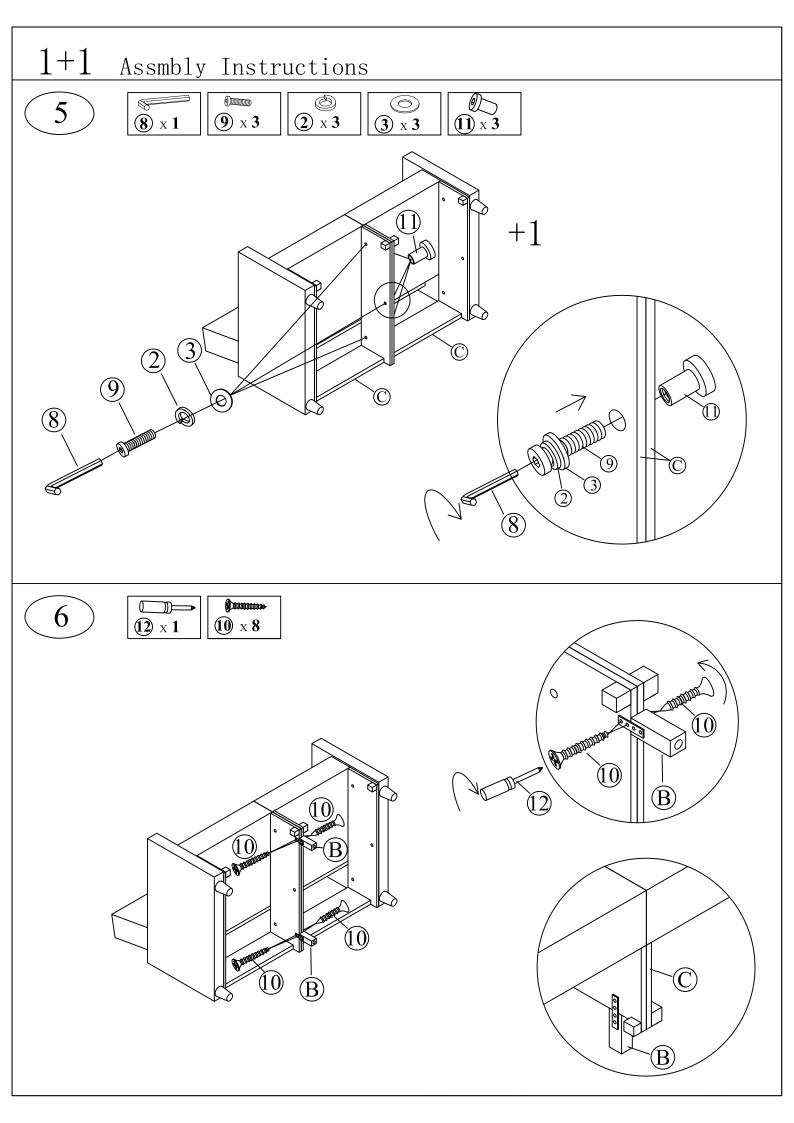

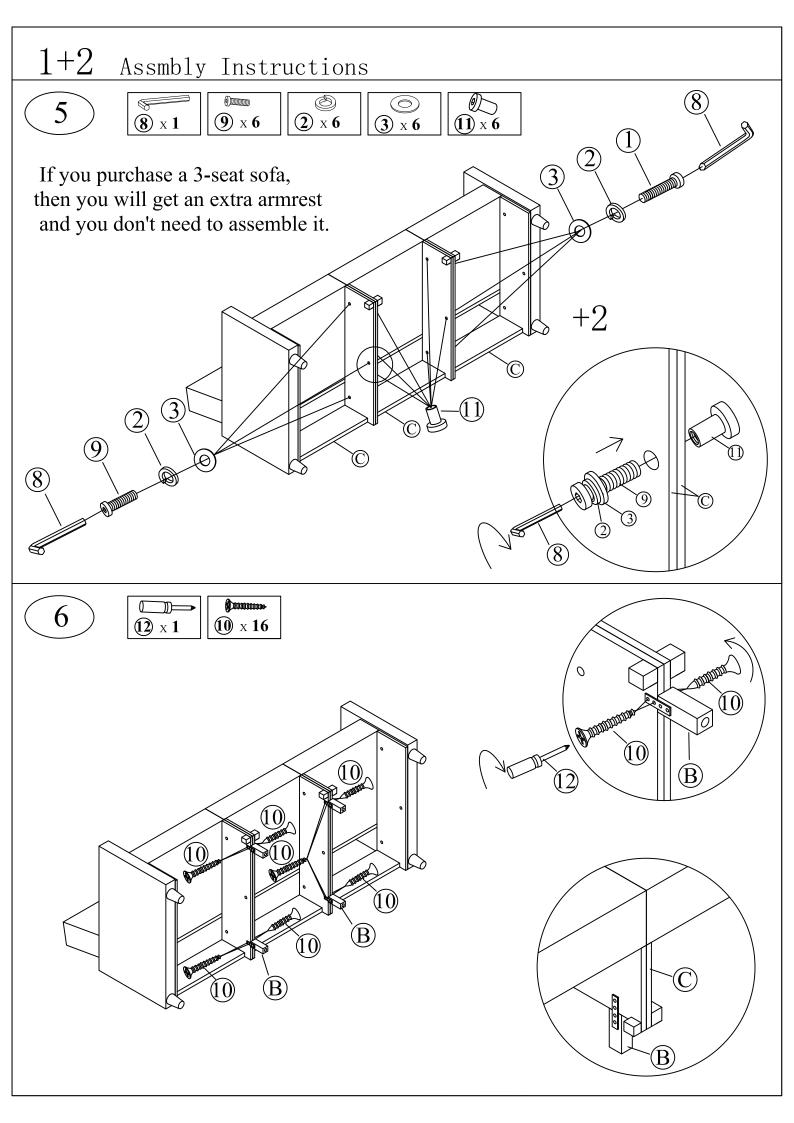



## Assmbly Instructions




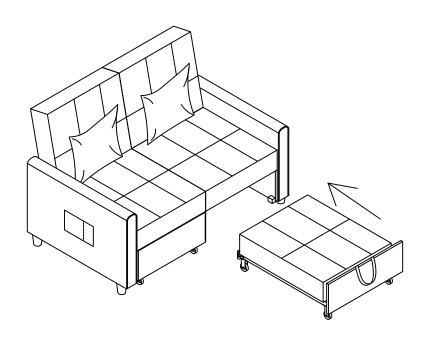

Way to Adjust the Footrest

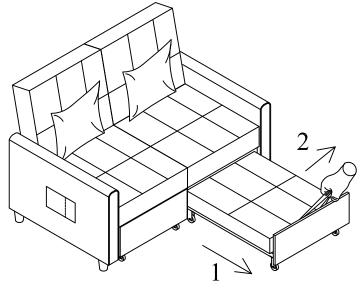


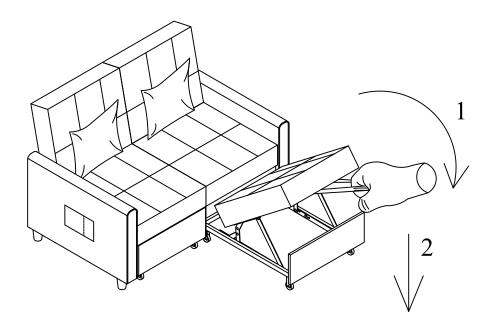



### Assmbly Instructions

#### Way to Adjust the Backrest

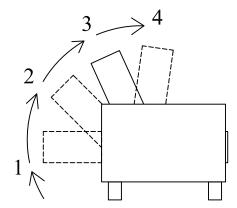

From the bottom to the top: First click: locking into recliner. Second click: releasing recliner. Third click: locking into chair. Fourth click: releasing chair.

