


ASSEMBLY INSTRUCTION



ROPE DINING SET

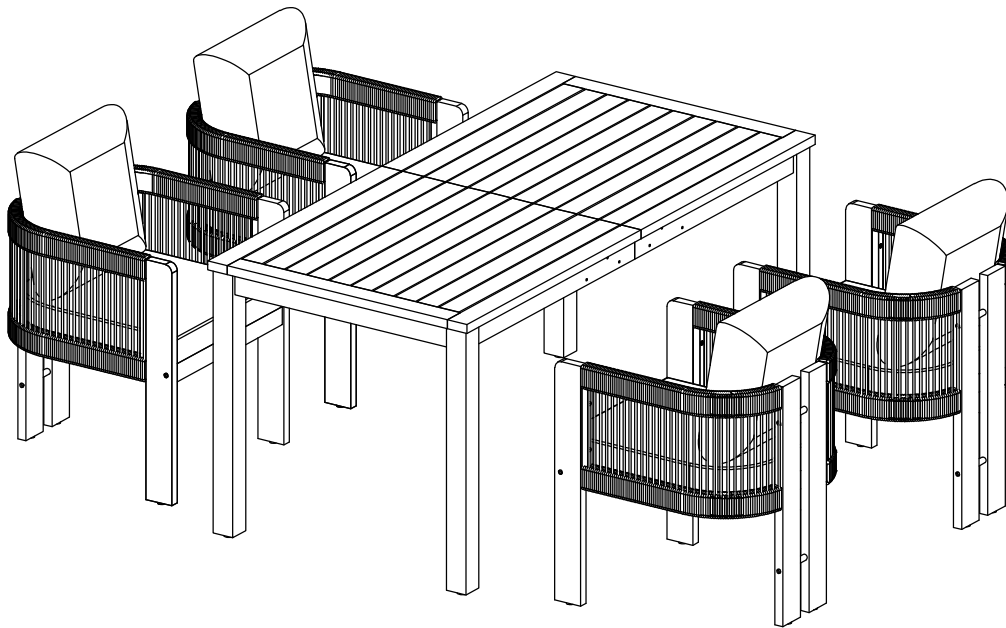






N711P450812- N711P450813- N711P450814











Notice

1. 50% Tighten before fixings all screws, Allen wrench is recommended instead of an electric drill.
2. Place the item on a flat ground to adjust and make sure it remains stable.
3. Tighten up all screws with tools gradually.
4. If the screws are not aligned with holes during assembly, please loosen all the other screws to 50% and continue the assembly process.
5. If the item is not stable, please loosen all the screws, adjust it on a flat ground and tighten up all screws again.
6. Note: If one or more screws are fully tightened during assembly, chances are the others will not be aligned with holes. In addition, all the holes are designed to be relatively larger to provide more space for the adjustment of the screws.

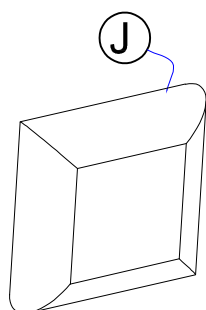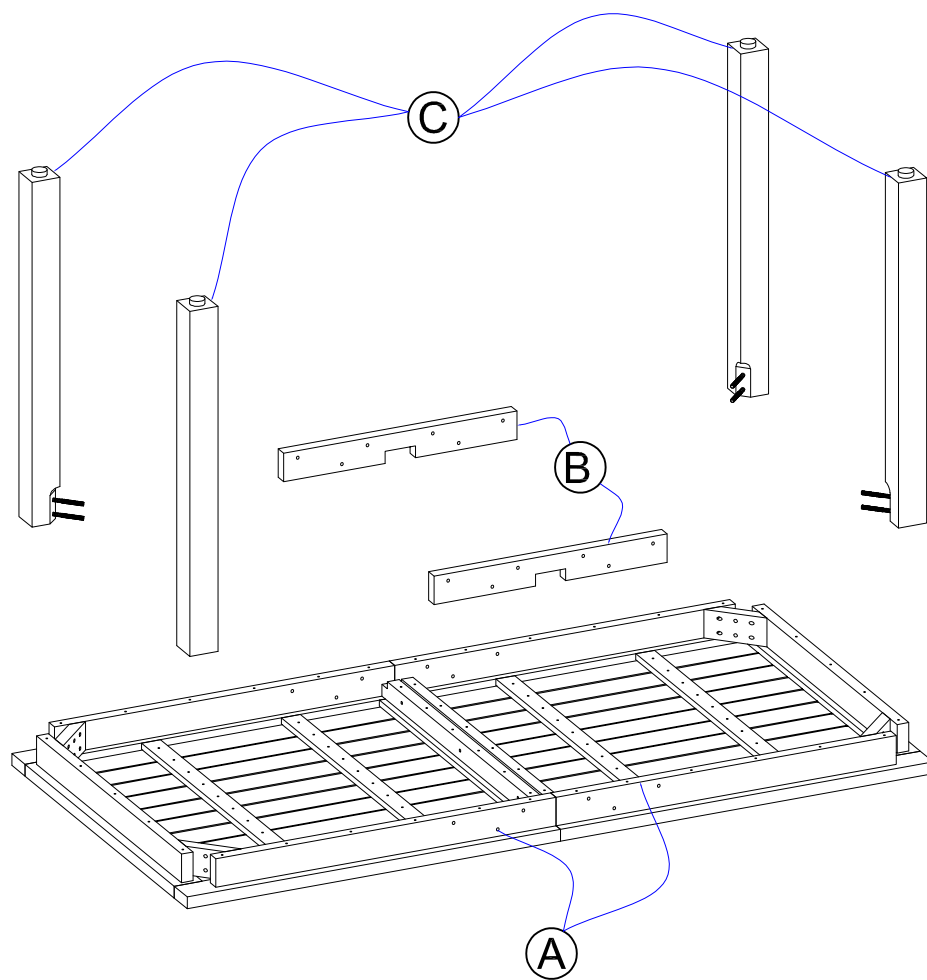


X4

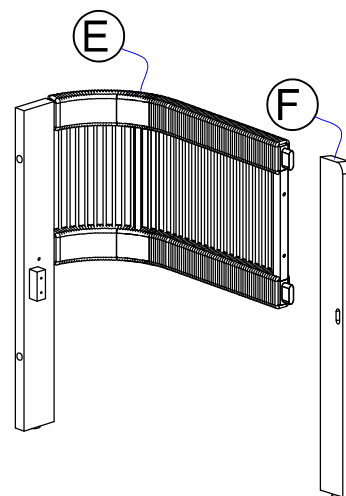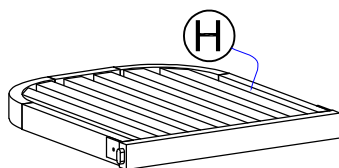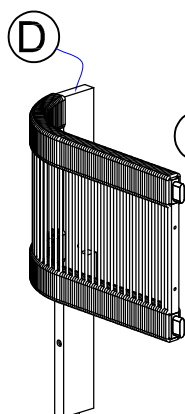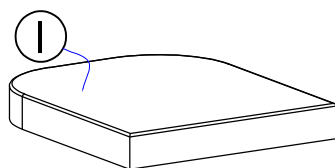

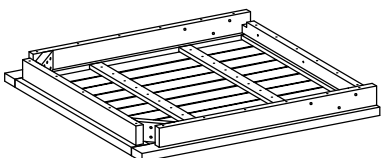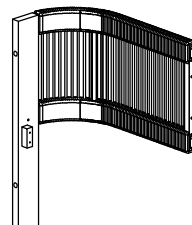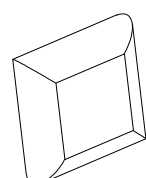A  2 pcs	B  2 pcs	C  4 pcs		
D  4 pcs	E  4 pcs	F  4 pcs		
G  4 pcs	H  4 pcs	I  4 pcs		
J  4 pcs	1  BOLT M6*40mm (31pcs) + EXTRA (1PC)	2  SLEEVE NUT M6*15mm (15pcs)		
3  NUT M8 (8pcs)	4  WASHER 8.5*18*2mm (8pcs)	5  ALENKEY (2pcs)		
6  (1pc)	7  SCREW M6*60mm (8pcs)	8  SCREW M6*40mm (16pcs)		
9  BOLT M8*80mm (16pcs) + EXTRA 1PC	10  Ø16*60mm (8pcs)	11  WOODEN PEGS Ø10*30mm (2pcs)	12  PLASTIC FOOT M6 (16pcs)	13  PLASTIC FOOT M8 (4pcs)


N711P450812

A

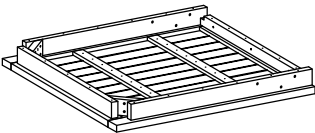

2 pcs

B



2 pcs

C



4 pcs


N711P450813

D



2 pcs

E

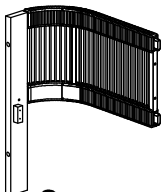


2 pcs

F



2 pcs



G




2 pcs

H




2 pcs

I



2 pcs

J



2 pcs


N711P450814

D



2 pcs

E

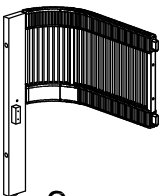

2 pcs

F



2 pcs

G




2 pcs

H




2 pcs

I





2 pcs

J





2 pcs

Step 1

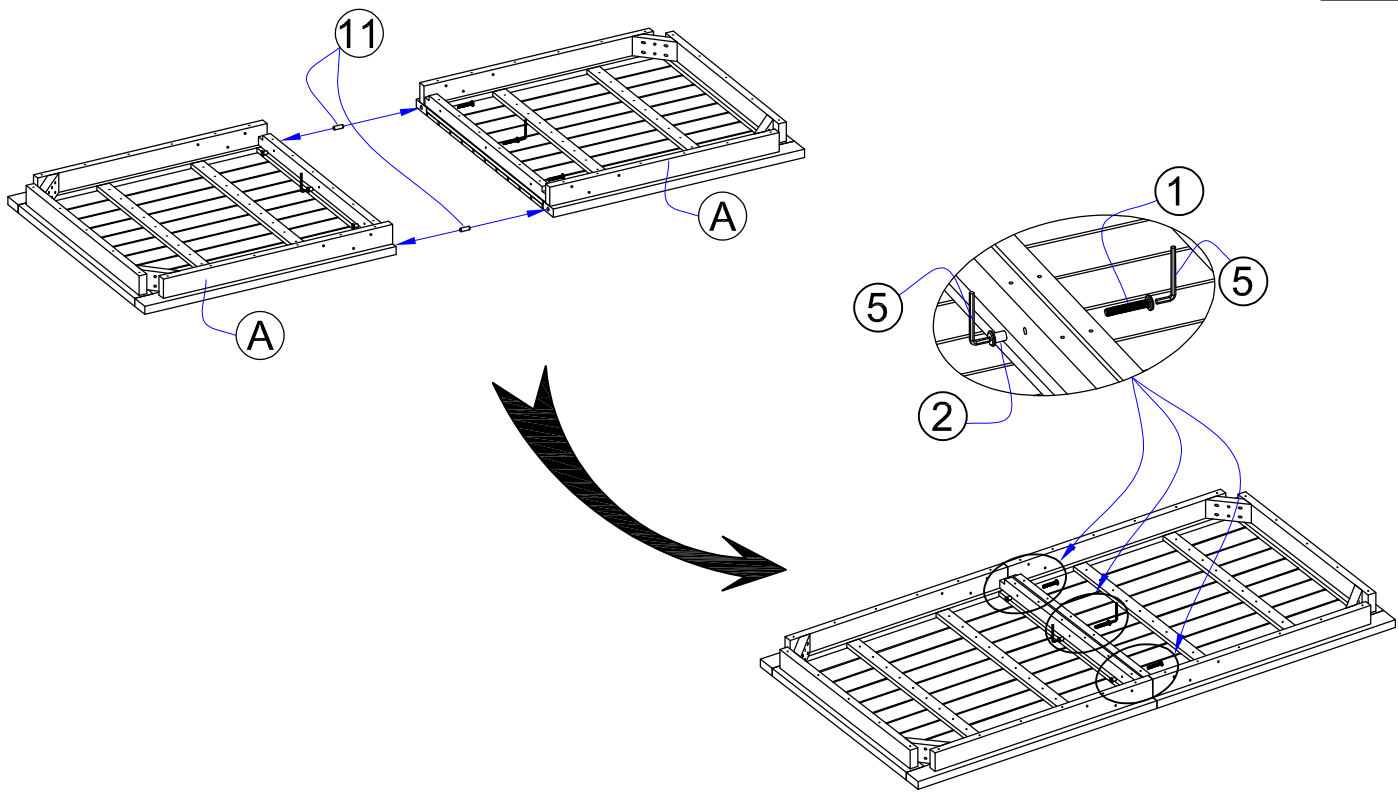





- | | | | | |
|------|------|------|------|------|
| Ⓐ X2 | ① X3 | ② X3 | ⑤ X2 | ⑪ X2 |
|------|------|------|------|------|

Step 2

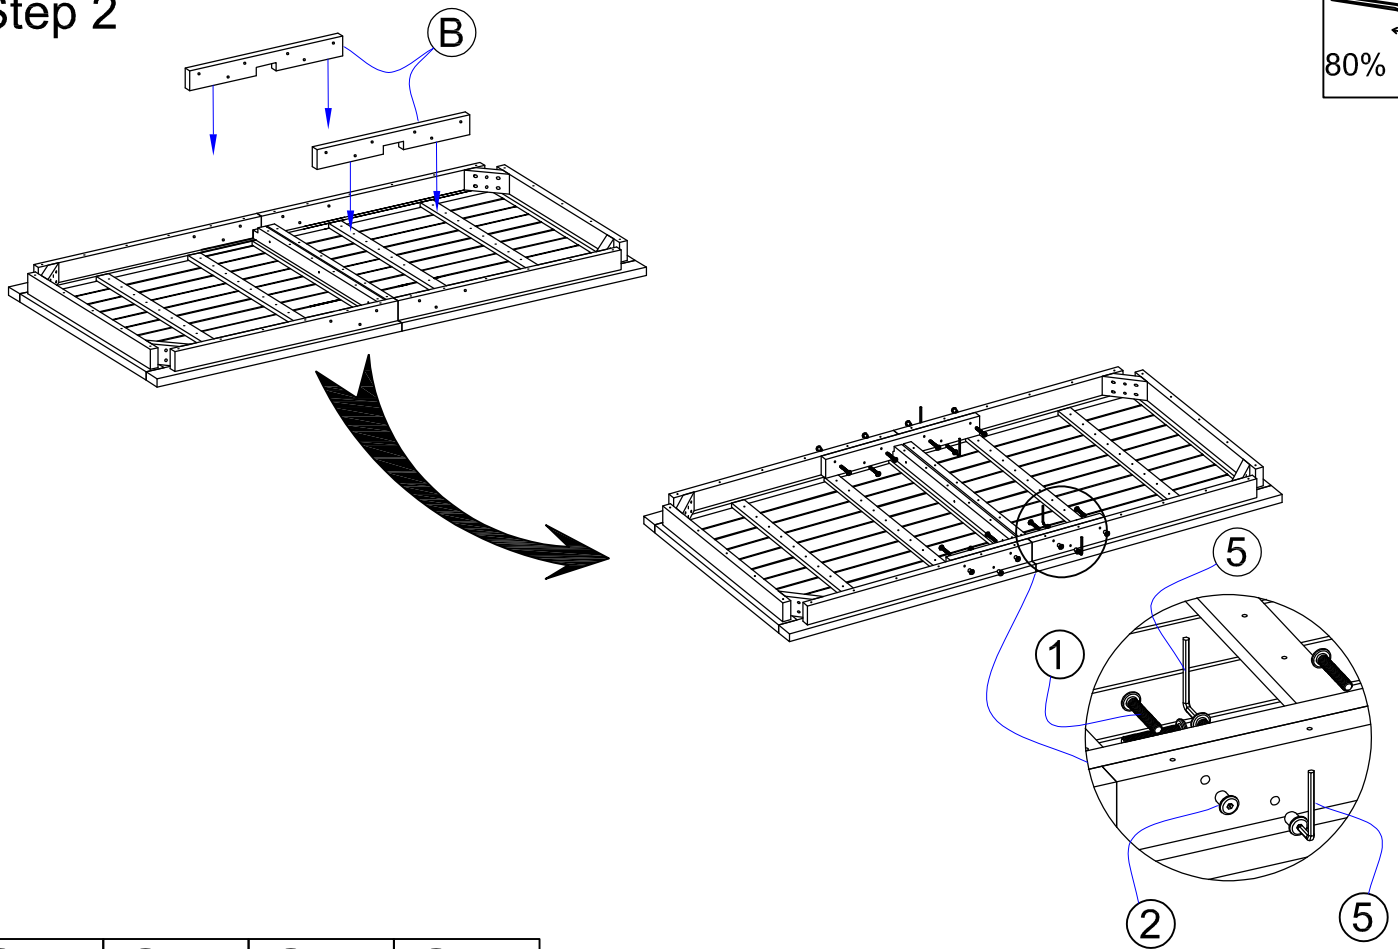




- | | | | |
|------|-------|-------|------|
| Ⓑ X2 | ① X12 | ② X12 | ⑤ X2 |
|------|-------|-------|------|

Step 3

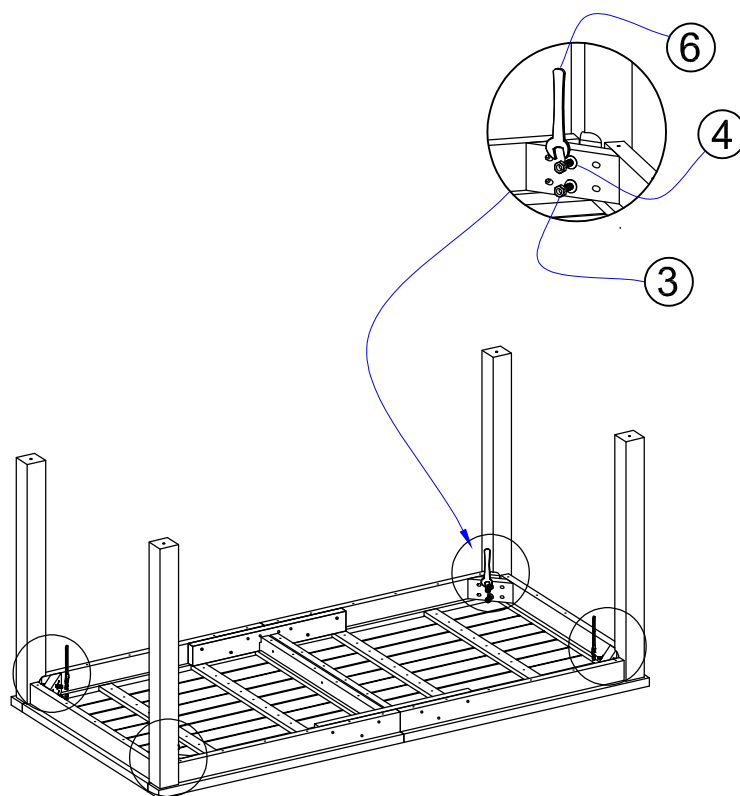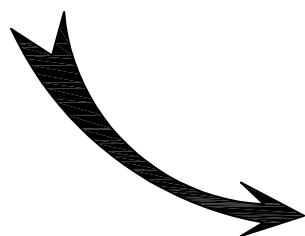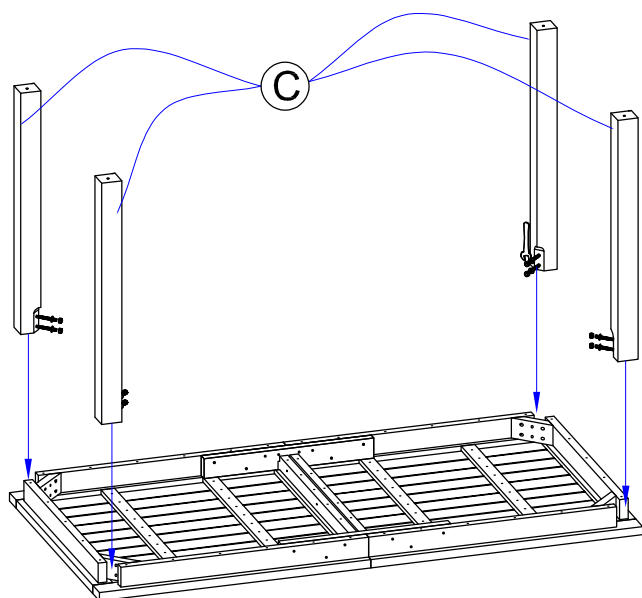


C X4
 6 X1
 3 X8
 4 X8

Step 4

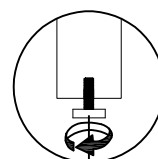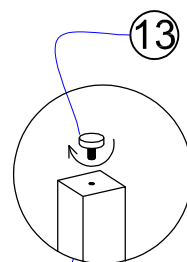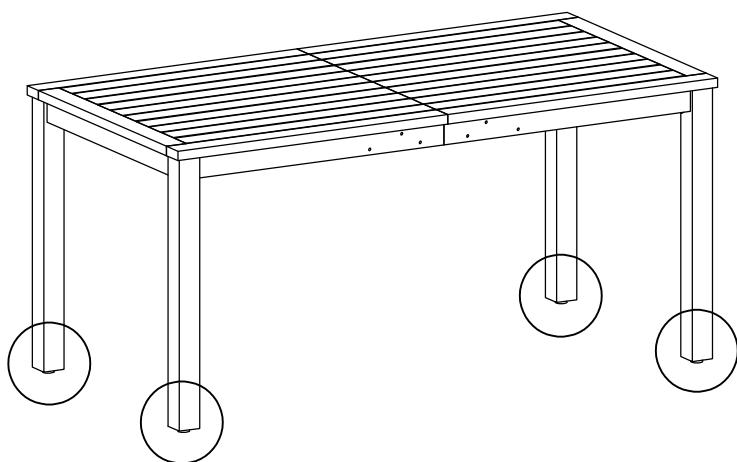

Adjust height for balance

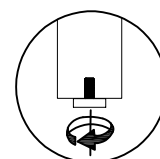


Adjust low for balance

Adjust Pre- installed Levellers
height for balance

13 X4

Step 5


X4

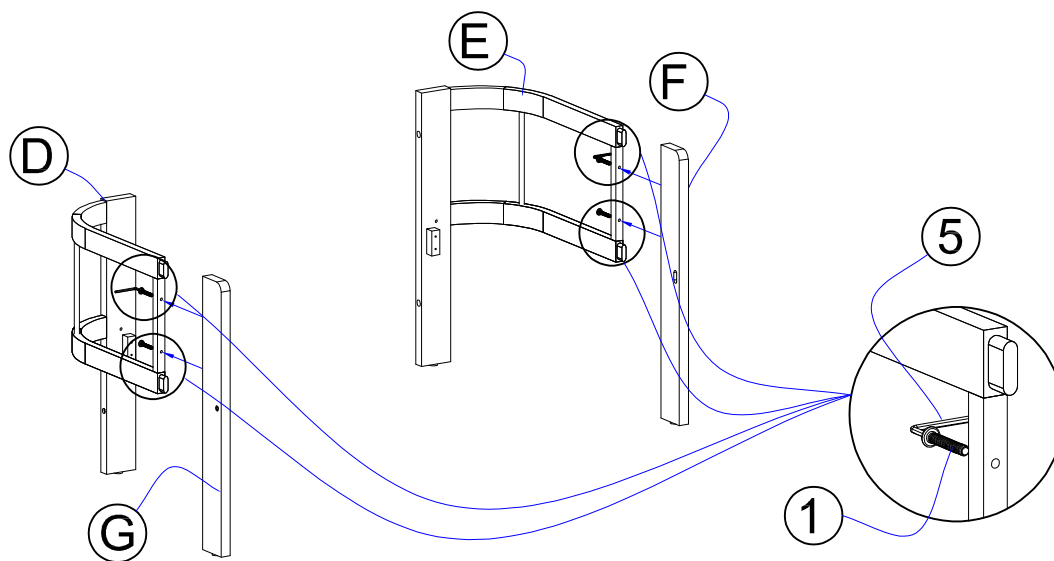

ⓓ X1	ⓔ X1	ⓕ X1	ⓖ X1	① X4	⑤ X1
------	------	------	------	------	------


Step 6

X4

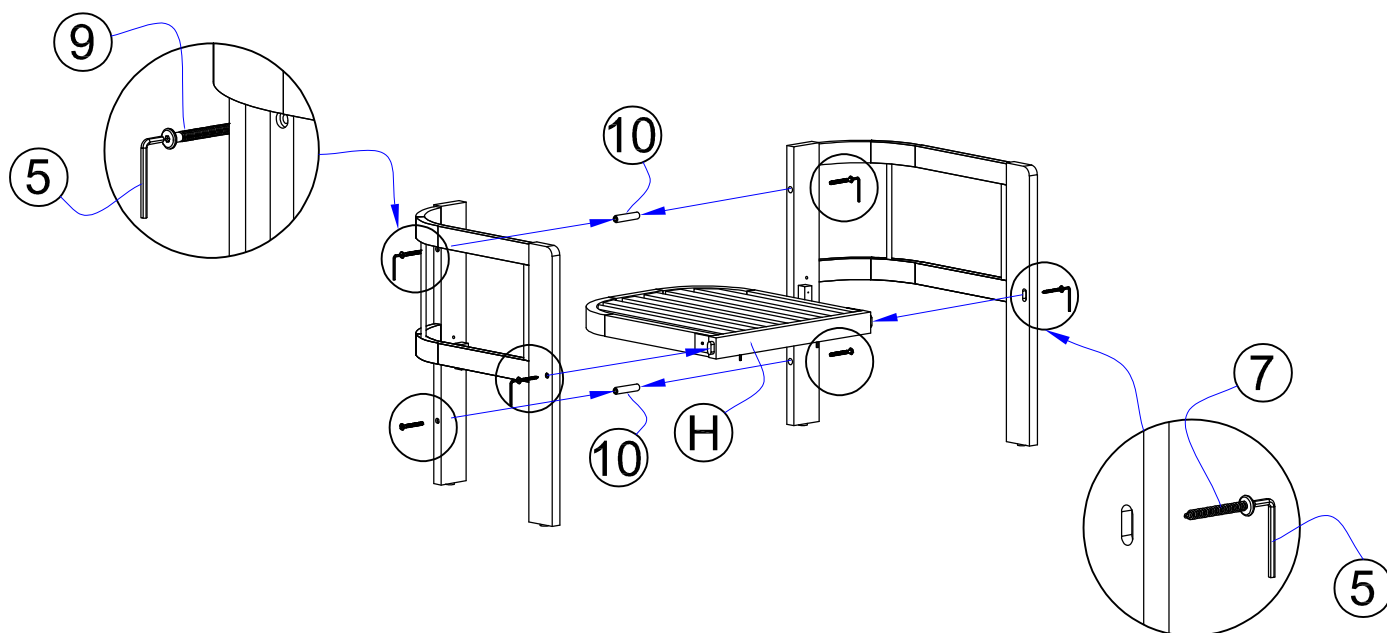


ⓓ X1	⑨ X4	⑩ X2	⑦ X2	⑤ X1
------	------	------	------	------

Step 7 X4

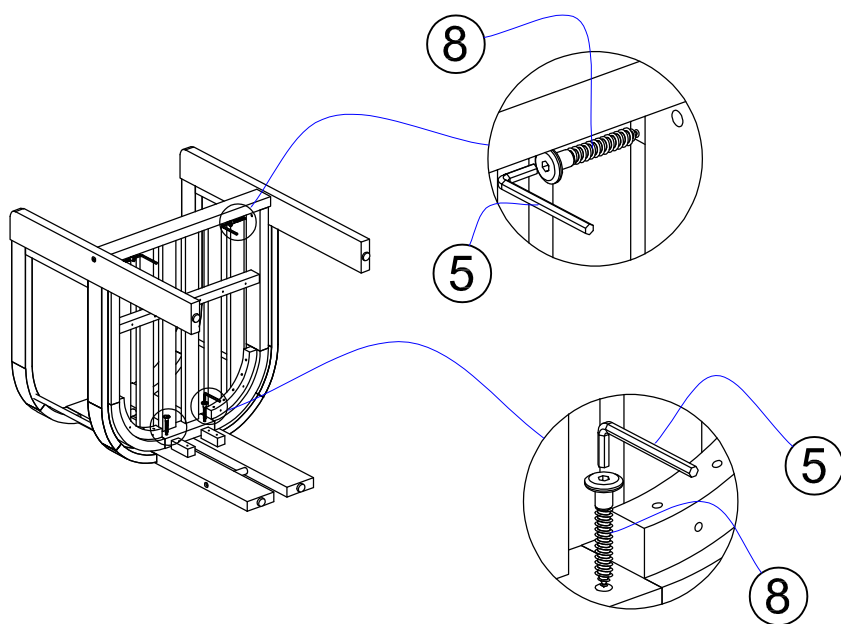



⑧ X4 ⑤ X1

Step 8 X4

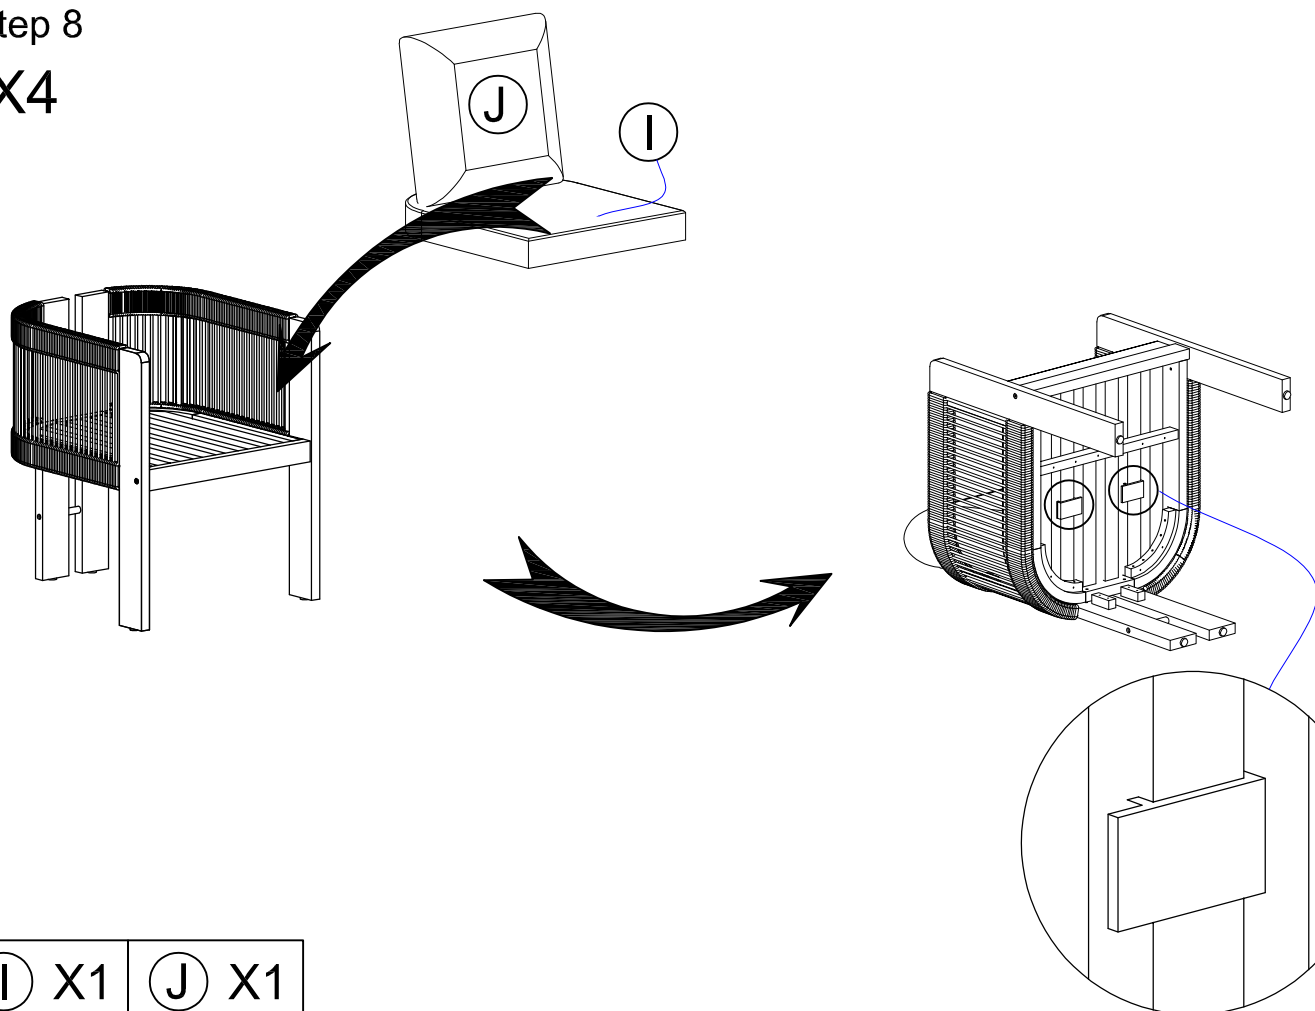


① X1 ② X1

Step 9
X4

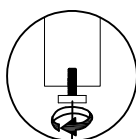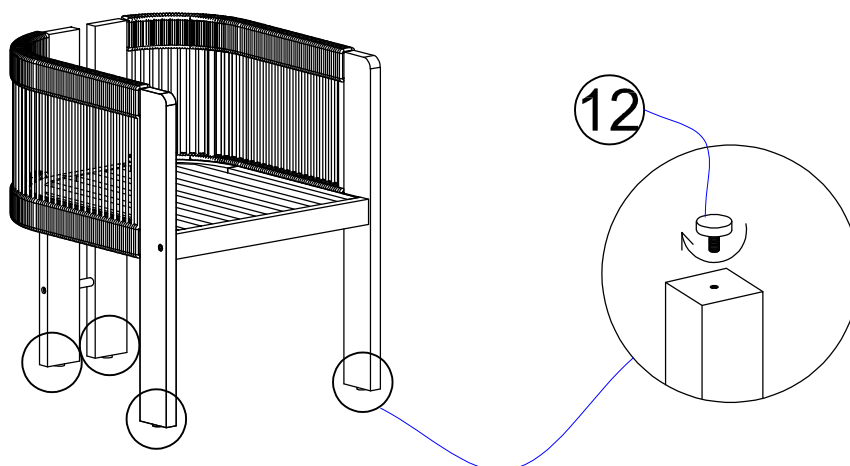

Adjust height for balance

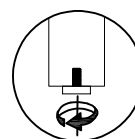

Adjust low for balance

Adjust Pre- installed Levellers
height for balance

12 X4

Step 10
X4

