


ASSEMBLY INSTRUCTIONS

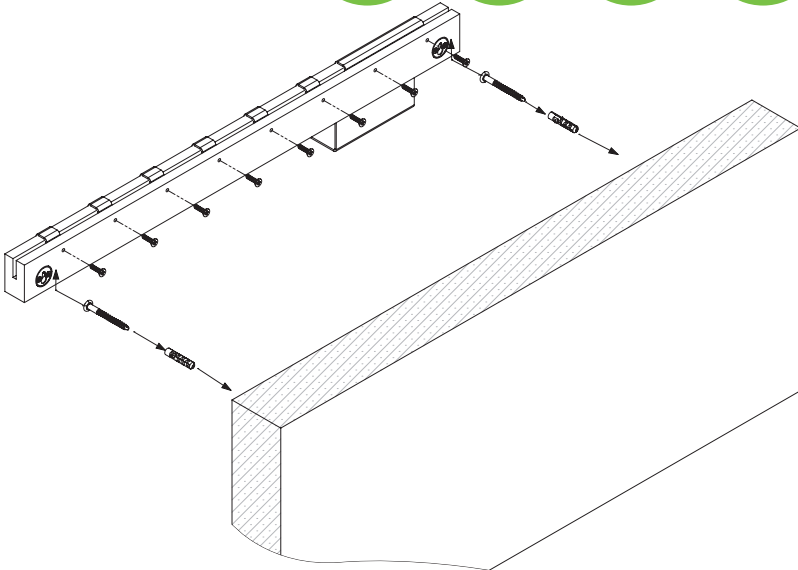

1. Measure and mark the mounting keyholes onto the paper ruler provided.
2. Tape and level the paper ruler on the wall.
3. Drill suitable holes into the marked locations and insert wall plugs into the drilled holes.
4. Insert screws into the plug leaving suitable space.
5. Hang hook to wall matching slots on back of hook to wall screws.
6. If needed, fix hooks with the screws.

Please note that product is treated with oil and it can rub off on clothing when opening the packaging. This is due to natural differences of the wood as various parts of an item will absorb the oil differently.