

Installation Manual of Trim Kit

for EF42-45&302




DO NOT RETURN!

Contact customer service team for help first

customerservice@puraflame.com







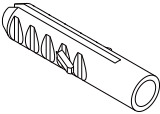


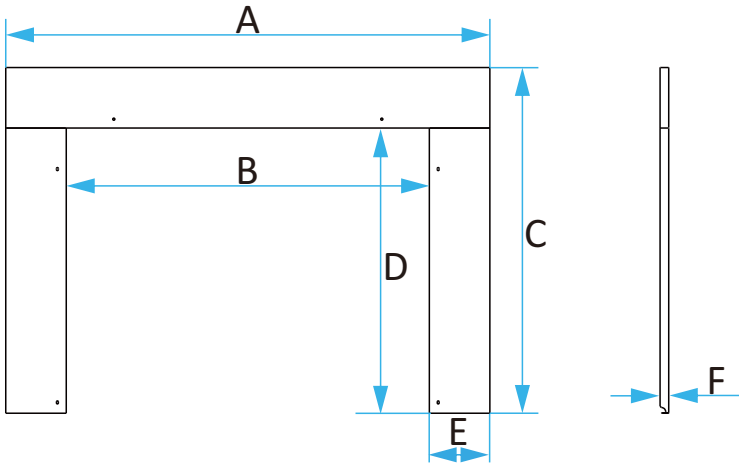
Call: 909-206-6608

Product Dimensions

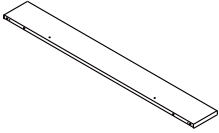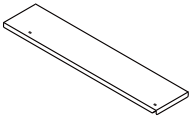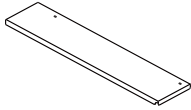

SKU	Unit	A	B	C	D	E	F
TR42	mm	860	580	660	520	140	20
	inch	33 ⁵⁵ / ₆₄	22 ⁵³ / ₆₄	25 ⁶³ / ₆₄	20 ¹⁵ / ₃₂	5 ³³ / ₆₄	²⁵ / ₃₂
TR43	mm	940	660	740	600	140	20
	inch	37 ¹ / ₆₄	25 ⁶³ / ₆₄	29 ⁹ / ₆₄	23 ⁵ / ₈	5 ³³ / ₆₄	²⁵ / ₃₂
TR44	mm	1040	760	740	600	140	20
	inch	40 ¹⁵ / ₁₆	29 ⁵⁹ / ₆₄	29 ⁹ / ₆₄	23 ⁵ / ₈	5 ³³ / ₆₄	²⁵ / ₃₂
TR45	mm	1120	840	800	660	140	20
	inch	44 ³ / ₃₂	33 ⁵ / ₆₄	31 ¹ / ₂	25 ⁶³ / ₆₄	5 ³³ / ₆₄	²⁵ / ₃₂
TR302	mm	1120	840	685	545	140	20
	inch	44 ³ / ₃₂	33 ⁵ / ₆₄	26 ³ / ₃₂	21 ²⁹ / ₆₄	5 ³³ / ₆₄	²⁵ / ₃₂

Parts List



		
Top Trim (1pc)	Right Trim (1pc)	Left Trim (1pc)
		
Screw ST4*8 (6pcs)	Screw M4*10 (4pcs)	Washer (4pcs)
		
Wall Plug ϕ 6*30 (2pcs)	Screw ST4*25 (2pcs)	Rubber Feet (2pcs)
		
Instruction Manual (1pc)		

Installation


Tools Required

A screwdriver, a $\phi 8$ mm impact drill and a hammer will be needed.

STEP 01

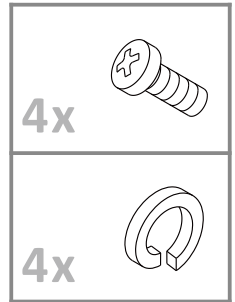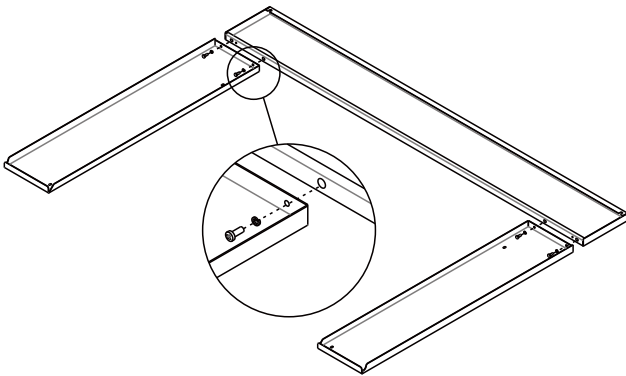


STEP 02

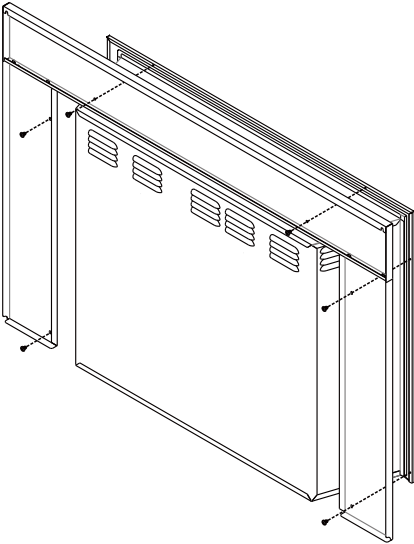



Secure the trim kit to the fireplace.

STEP 03

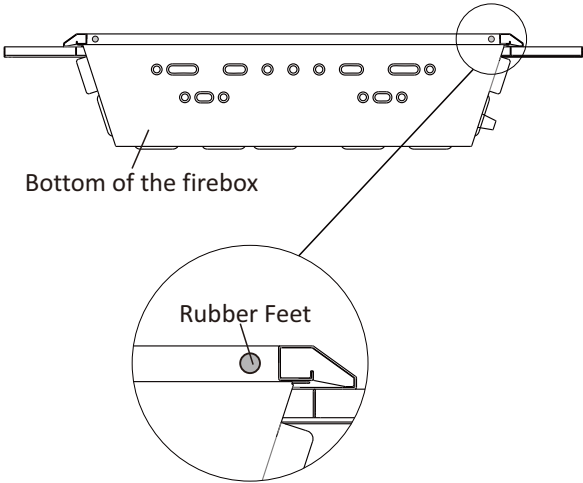

Attach to rubber feet on the front edge of the fireplace bottom.


STEP 04

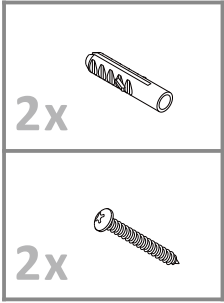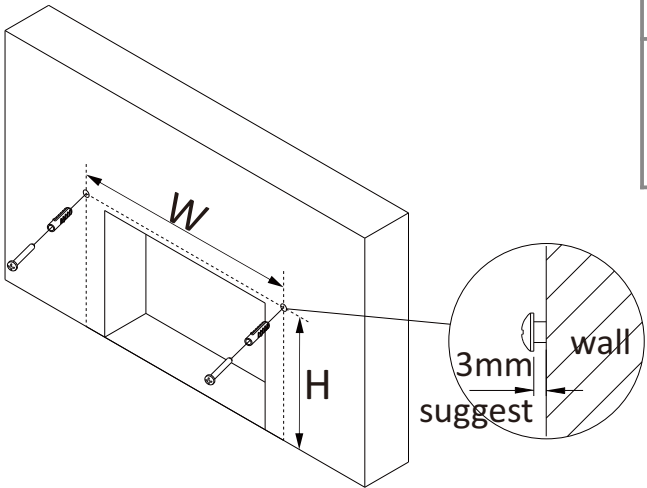

Model	Unit	W	H
TR42	inch	32 ⁶¹ / ₆₄	25 ¹⁹ / ₃₂
	mm	837	650
TR43	inch	36 ⁷ / ₆₄	28 ⁴⁷ / ₆₄
	mm	917	730
TR44	inch	40 ³ / ₆₄	28 ⁴⁷ / ₆₄
	mm	1017	730
TR45	inch	43 ³ / ₁₆	31 ⁷ / ₆₄
	mm	1097	790
TR302	inch	43 ³ / ₆₄	26 ³⁷ / ₆₄
	mm	1097	675

Fix the wall plugs into the wall with a hammer and the distance required above, then insert the screws into, make sure the head of the screws is out of the wall surface, 3mm (1/8 inches) is suggested.

STEP 05

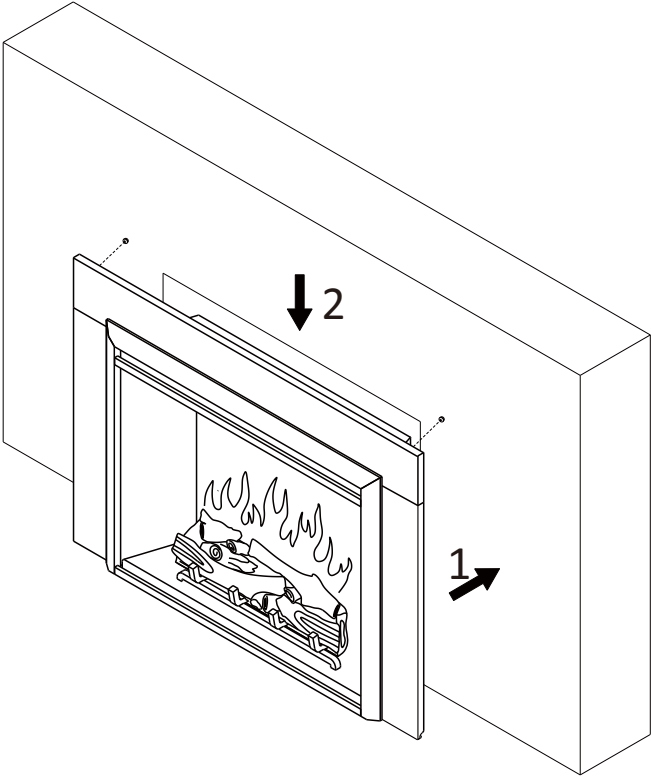

Lift the whole unit a little to plug the unit to the screws on the wall, then put it down gently.

Ningbo Richen Electrical Appliance Co., Ltd.

Address: No.19, Yongdinghe Road Xiapu, Beilun Ningbo, P.R. China

www.puraflame.com