


Installation Guide

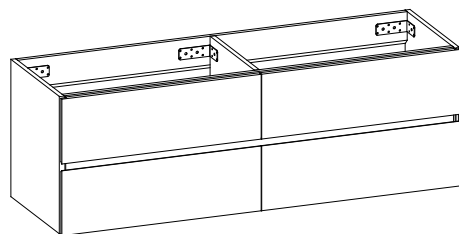

Edi 72

1

Hole
dia=Φ5
Depth=40

D *1

4

C

C *6

6

wall

wall

Tools required for installation



Electric drill



Drill bit
(Φ 8 Φ 5)



Tape measure
(3m~5m)



Silicone



Pencil



Screwdriver

2

Screw position
Horizontal line

680mm

5



A

D

A *6

680mm

7

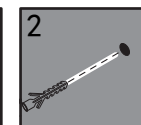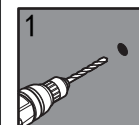

3


B *6

C *6

CABINET




A=6



B=6



C=12



D=1

3

Hole
dia=Φ8
Depth=40

680mm

8

silicone

silicone