



ASSEMBLY INSTRUCTION

- Read the assembly instructions carefully before beginning assembly.
- Ensure the safety of the glass during assembly.
- Do not over tighten the screws and bolts as this may damage the threads.
- Insert the screw into the hole as shown in the figure, follow the arrow in the picture, and then rotate 90° or 180° clockwise.
- Keep the small accessories in the accessory bag away from children.
- The remaining parts are spare parts.
- Kind tips: when installing the white backboard, install the white side inward.

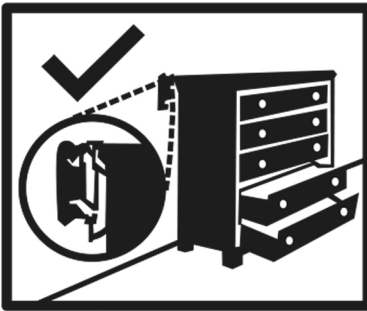

WARNING

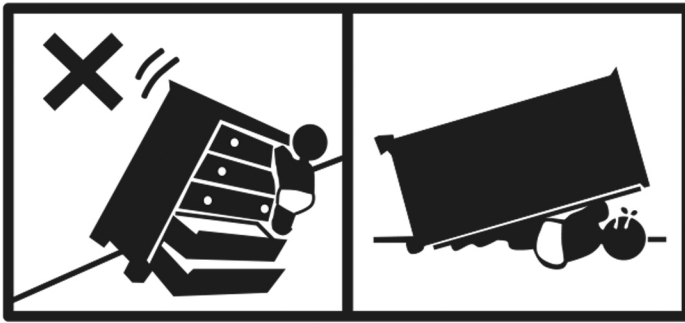

Children have died from furniture tip over. To reduce the risk of tip over:

- ALWAYS secure this furniture to the wall using an anti-tip device.
- NEVER allow children to stand, climb, or hang on drawers, doors or shelves.

Do not defeat or remove the drawer interlock system.



Place heaviest items in the lowest drawers.

NEVER put a TV on this furniture.



Hardware installation demonstration


- Please make sure "A" hardware tightened and can't be pulled out

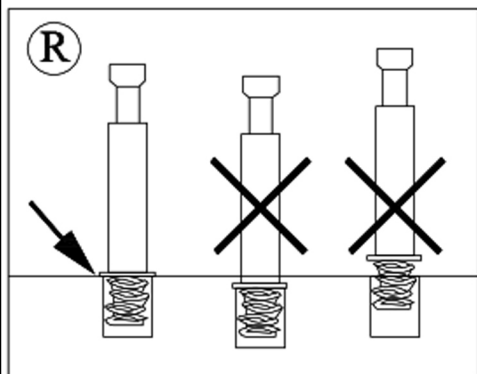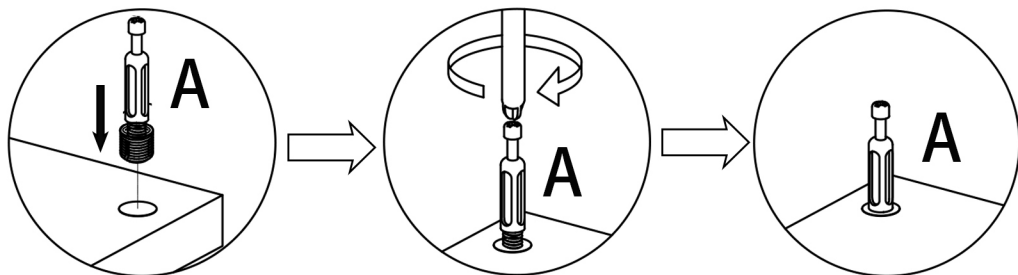



Hardware installation demonstration


- When inserting cam ensure arrowhead on cam points toward the hole on the panel edge

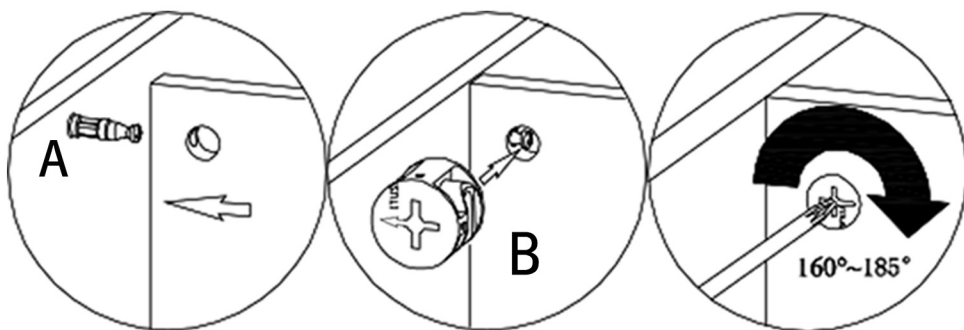



Hardware installation demonstration

- Before installing the drawer rail, you need to separate the KA1 and KA2 first.

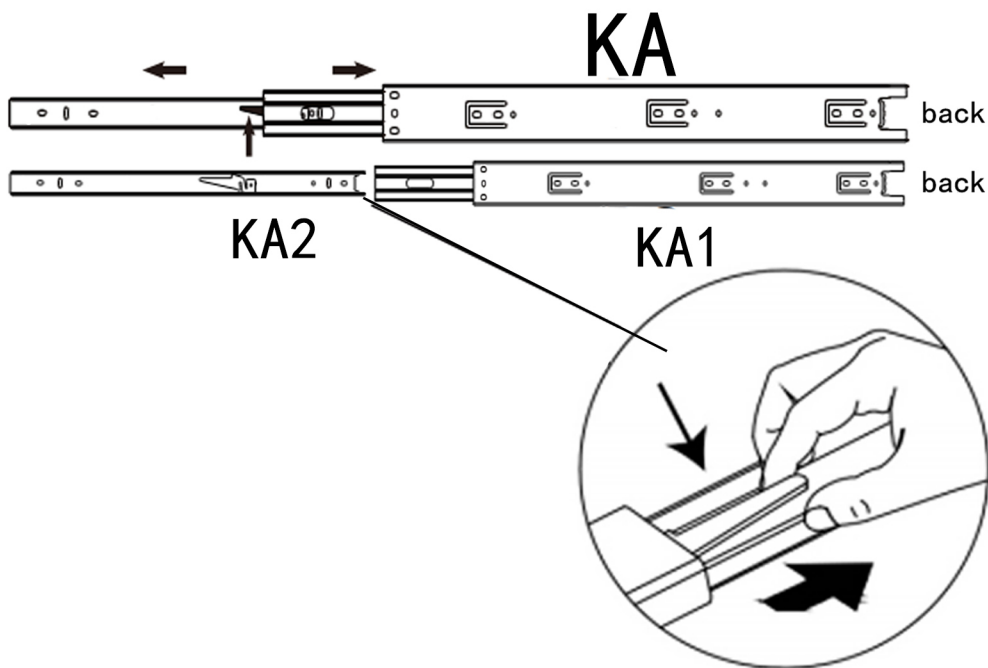


Warm Reminder: Press it and split




Hardware installation demonstration





The first screw hole should corresponded with the board location hole

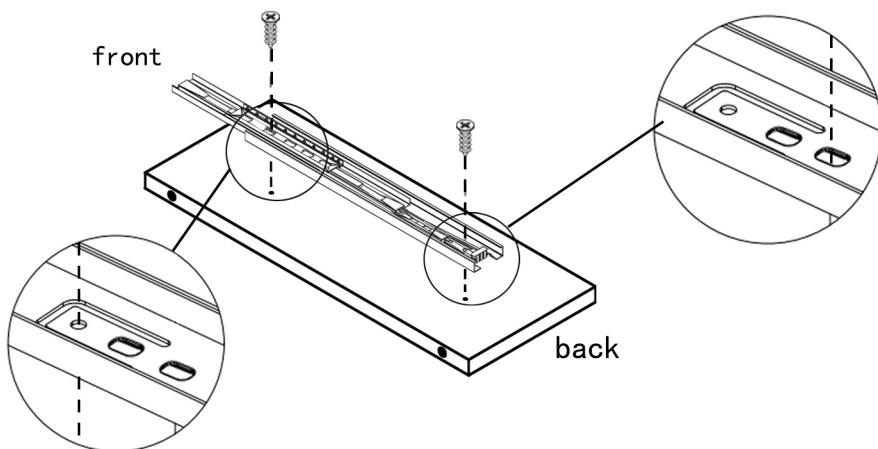

The first screw hole should corresponded with the board location hole

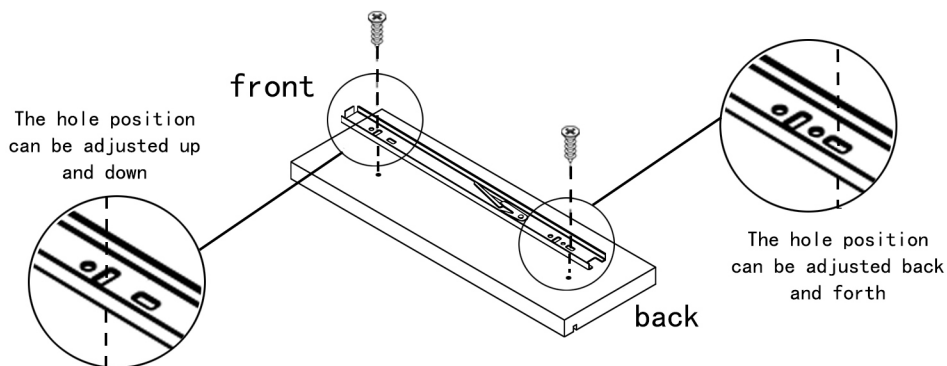


STEP 1

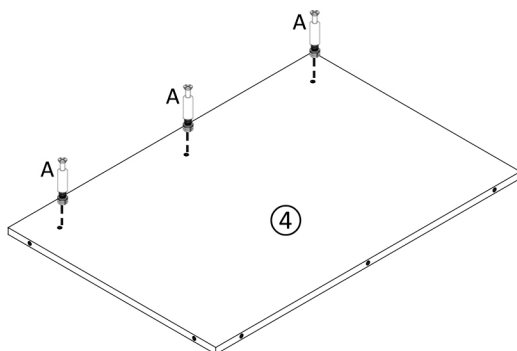


 A*3

STEP 2





 90°
Flip

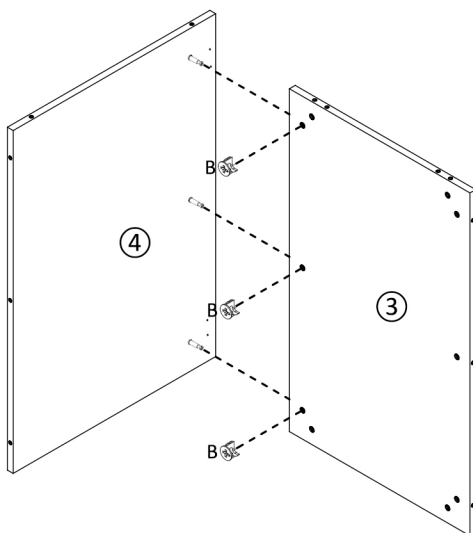

B*3

STEP 3

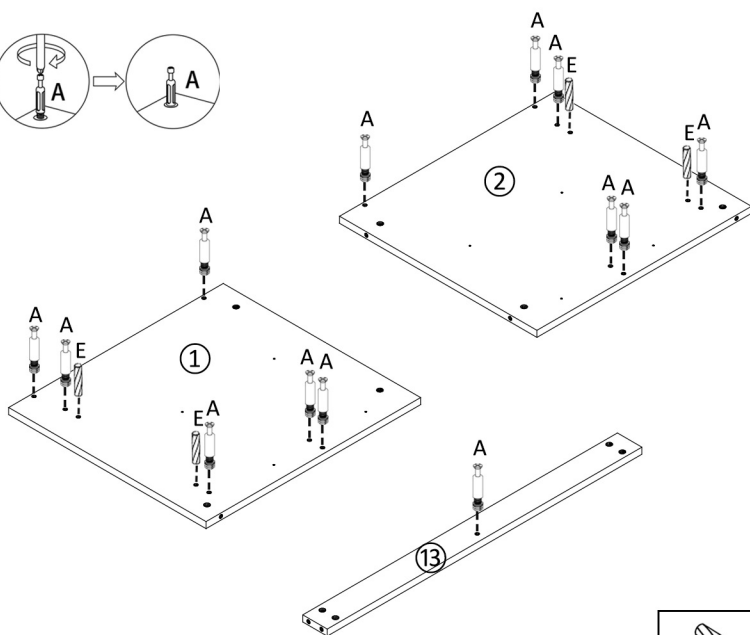



E*4



A*13

STEP 4

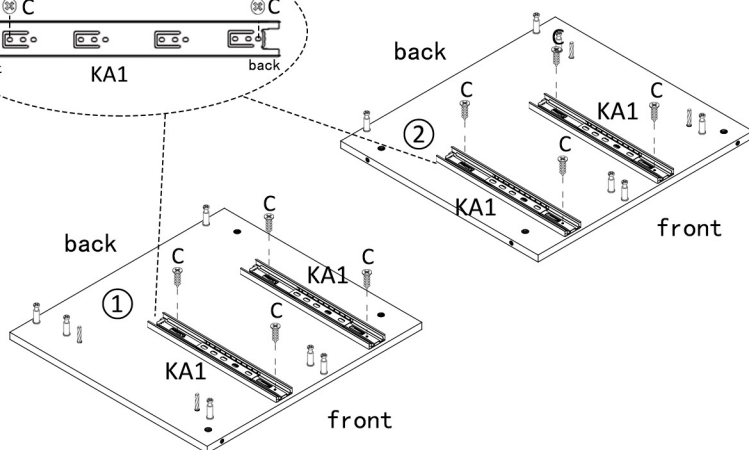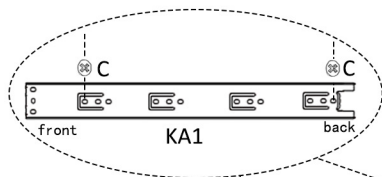

1.Check the slide rail exploded view for disassembly.

2.Align mounting holes using the sectional view.





C*8





KA1*4

STEP 5

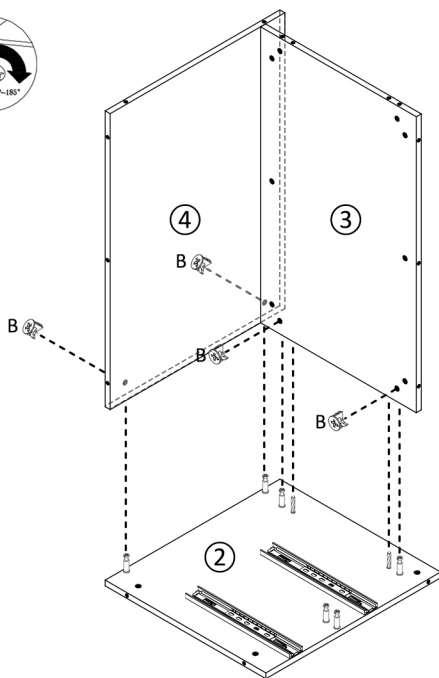



B*4

STEP 6

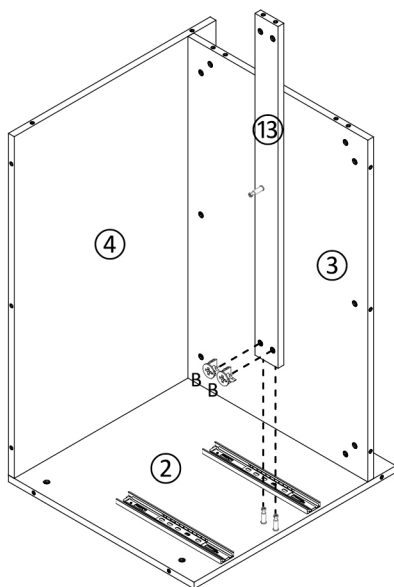



B*2

STEP 7

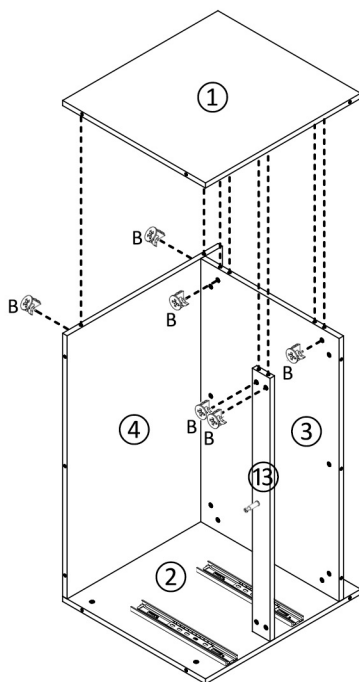

B*6

STEP 8

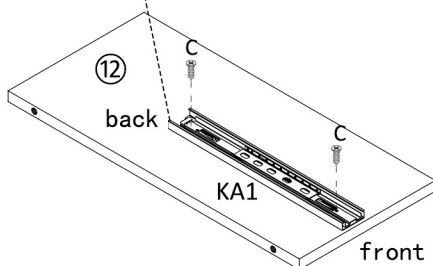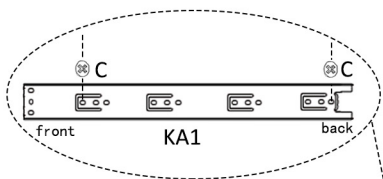

1.Check the slide rail exploded view for disassembly.

2.Align mounting holes using the sectional view.




C*2



KA1*1

STEP 9

- 1.Check the slide rail exploded view for disassembly.
- 2.Align mounting holes using the sectional view.

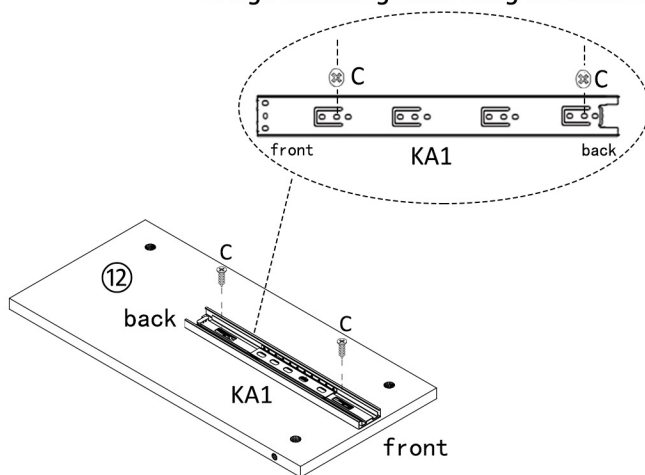

Attention!

The corresponding positions of the screw holes on this slide rail are different. Please carefully view the enlarged diagram to clarify the details of the hole positions.





C*2



KA1*1

STEP 10

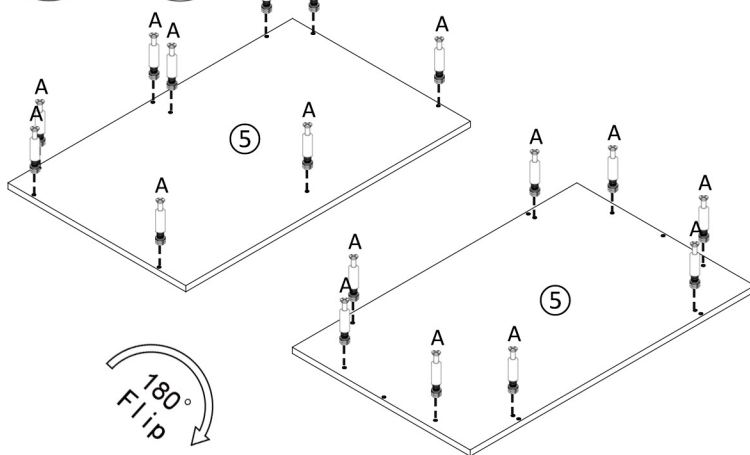



Flip board #5 180 degrees and install hardware fittings on the opposite side





A*17

STEP 11

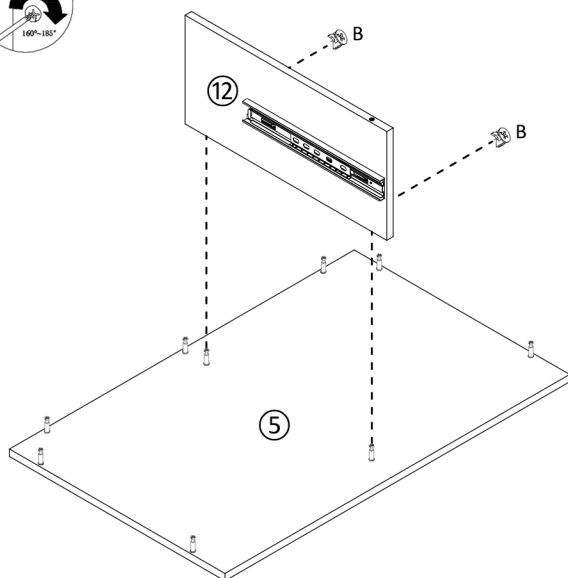



B*2

STEP 12

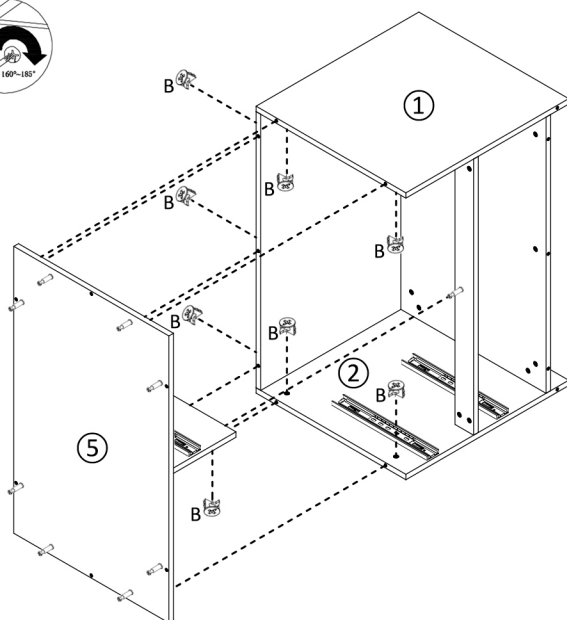



B*8

STEP 13

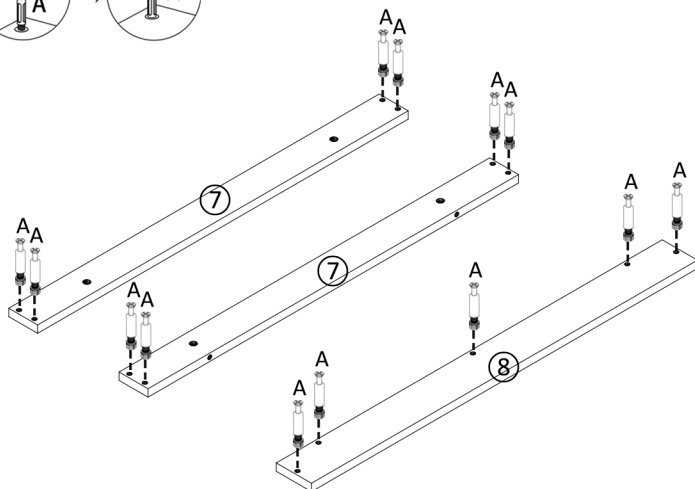



A*13

STEP 14

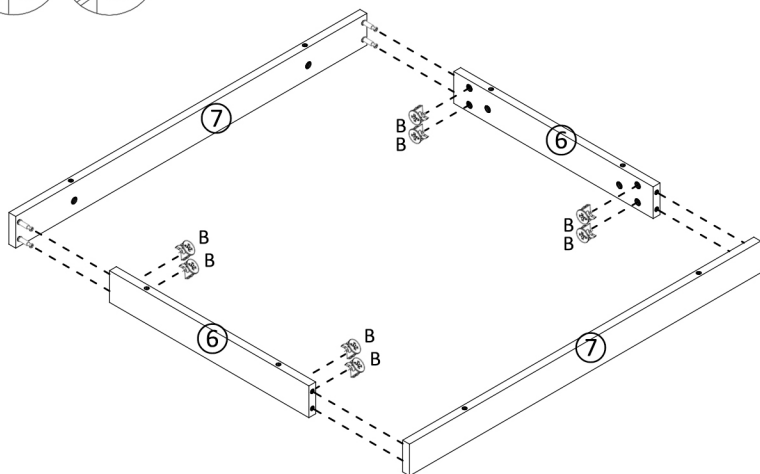



B*8

STEP 15

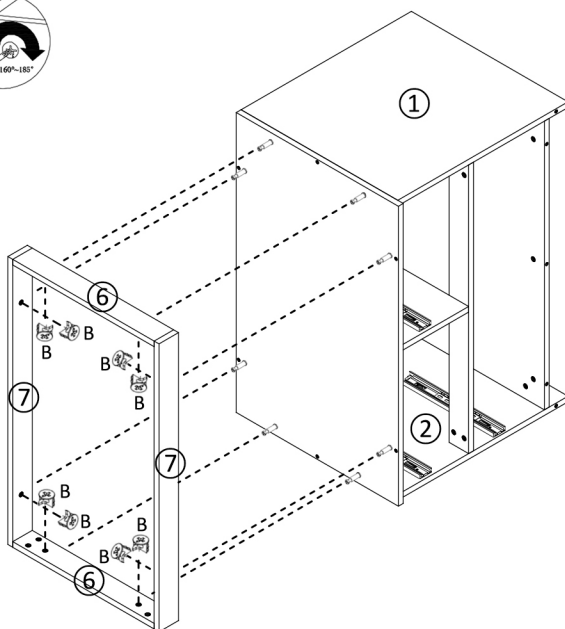



B*8

STEP 16

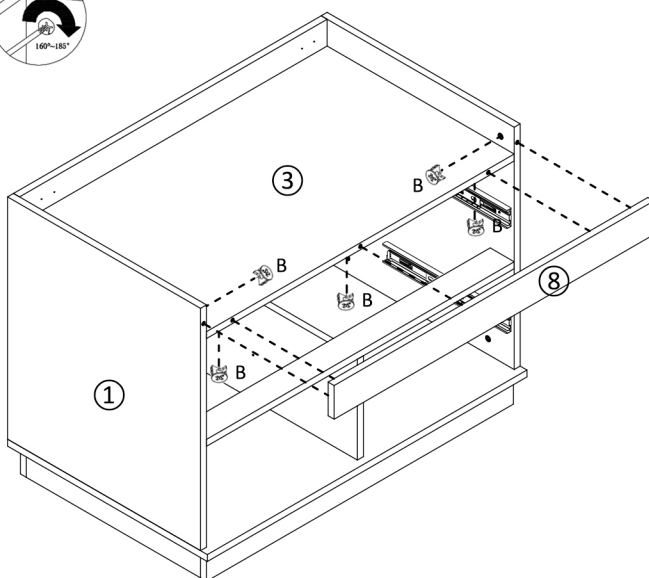



B*5

STEP 17

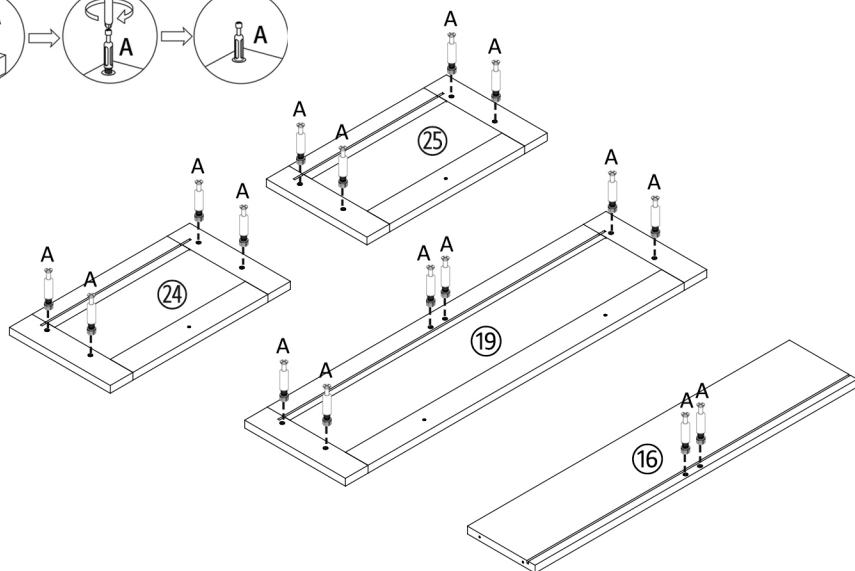



A*16

STEP 18

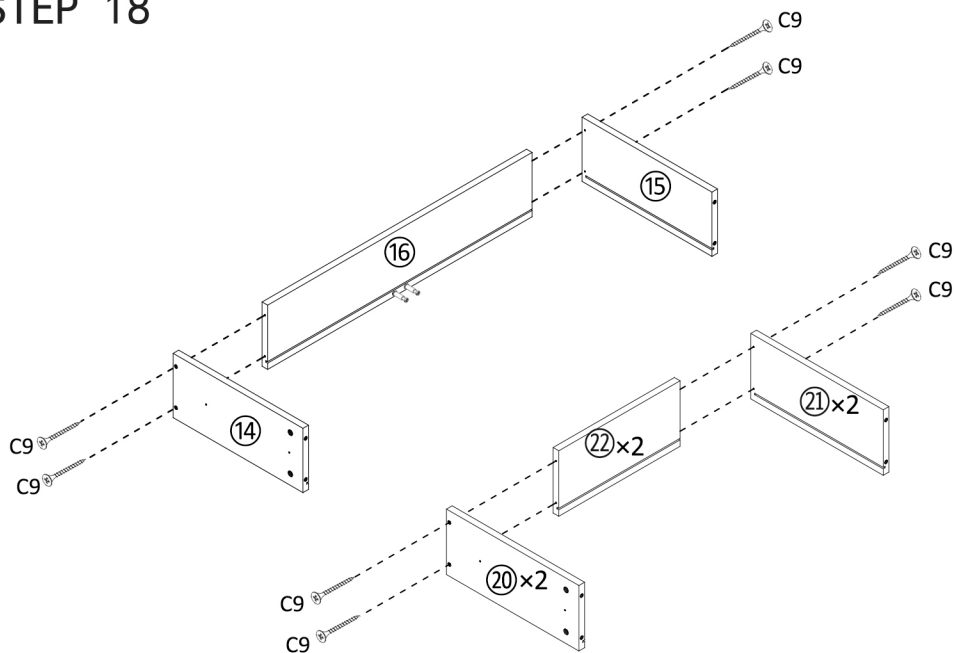


C9*12

STEP 19

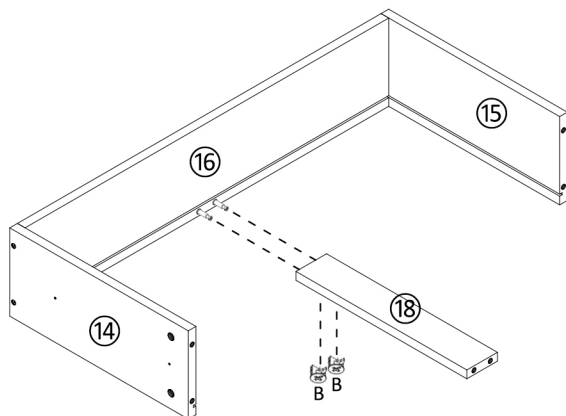



B*2

STEP 20


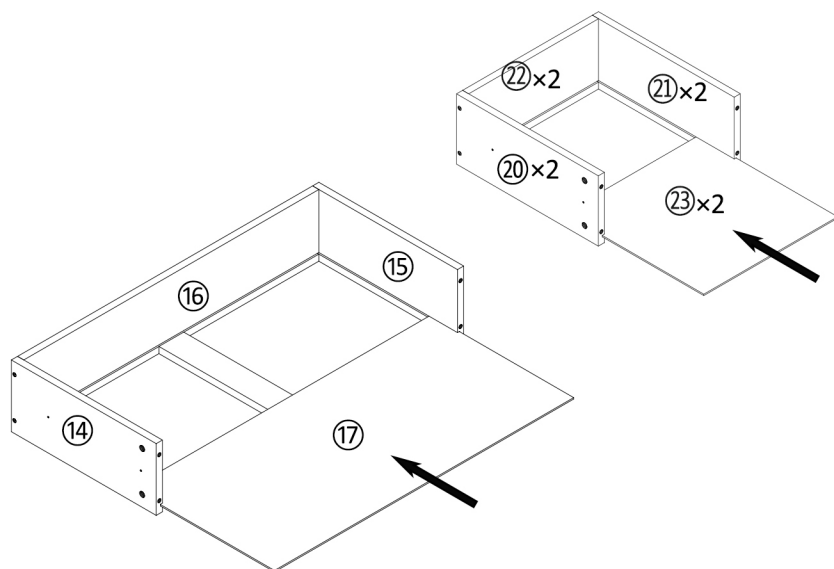


STEP 21

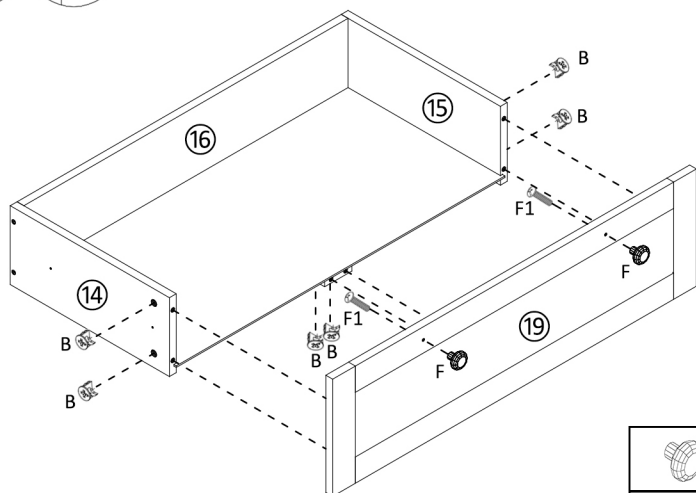



	F*2
	F1*2
	B*6

STEP 22

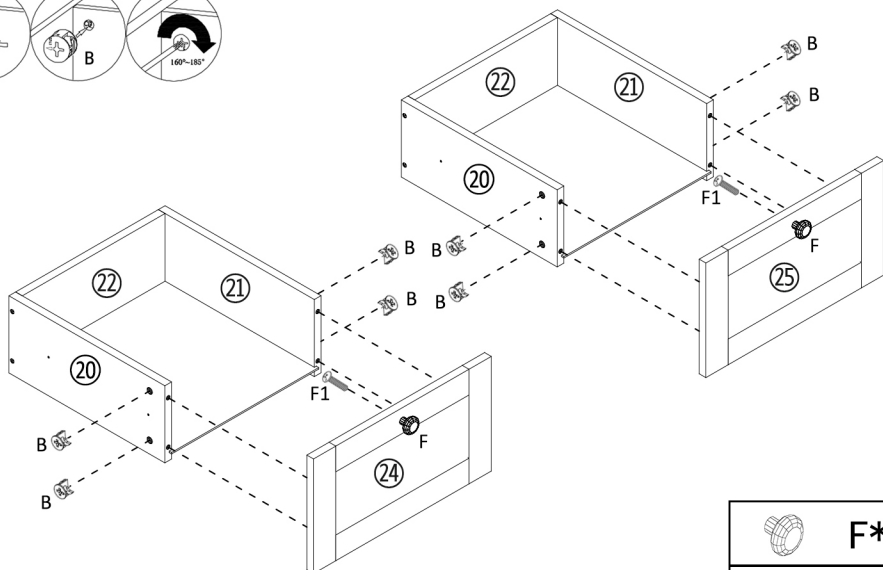



	F*2
	F1*2
	B*8

STEP 23

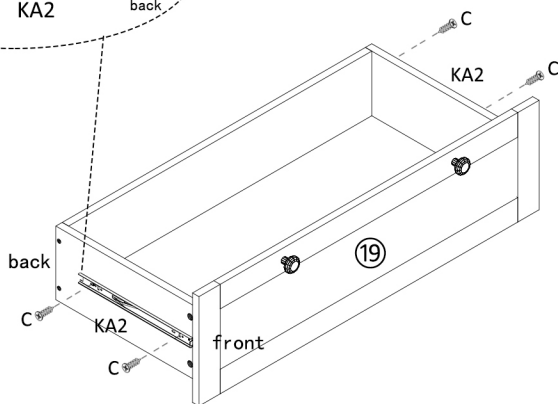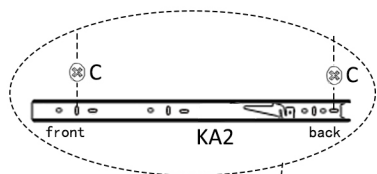




	KA2*2
	C*4

STEP 24

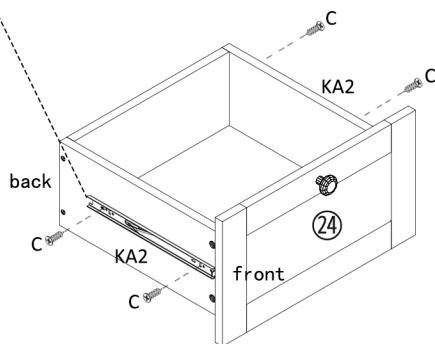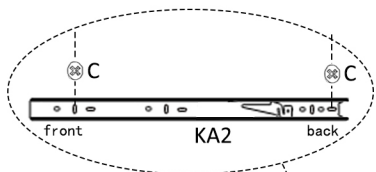


	KA2*2
	C*4

STEP 25

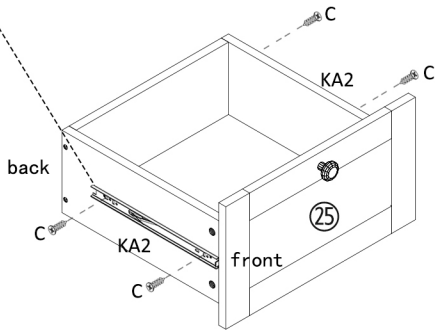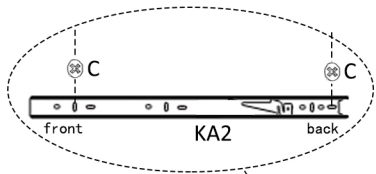


STEP 26

Note: When assembling the inner slide rail, it is necessary to place the inner slide rail on the steel ball component first, and push the inner rail parallel to the outer rail together. Direct violence will lead to the falling off or deformation of the rail steel ball.

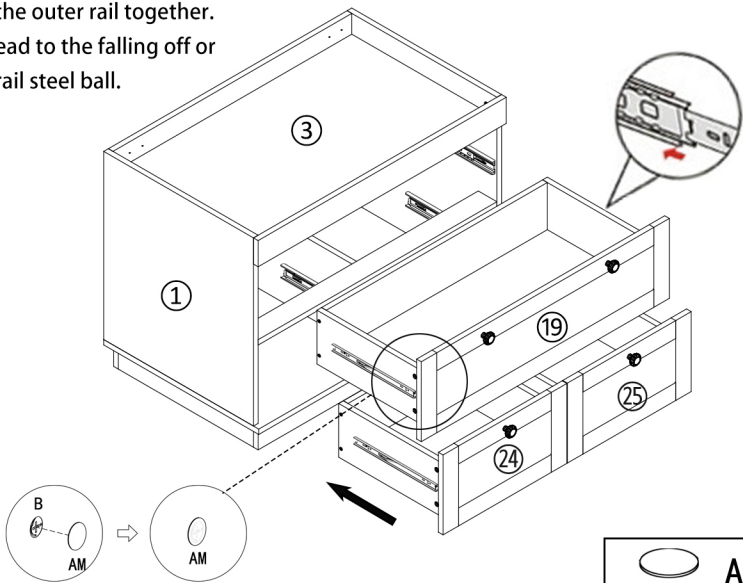


STEP 27

Plan 1

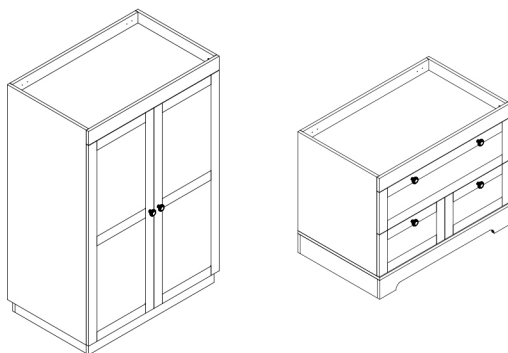



or

Plan 2

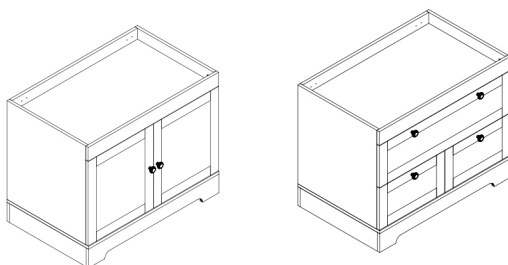



If you have purchased two cabinets, please follow the steps below to install them.

STEP 28

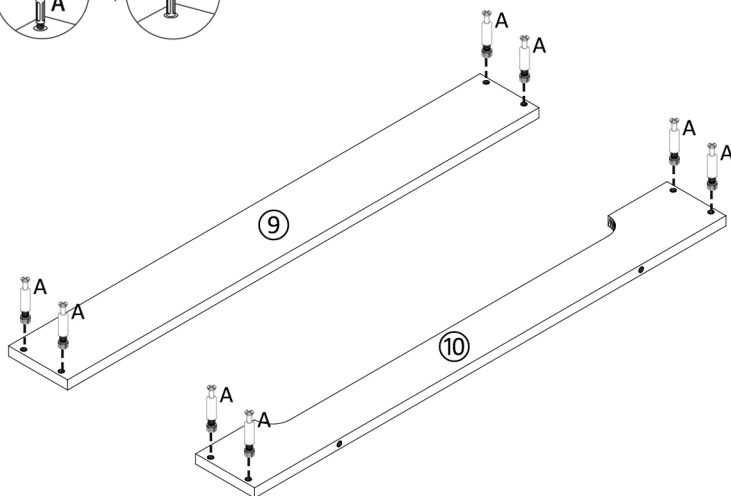


A*8

STEP 29

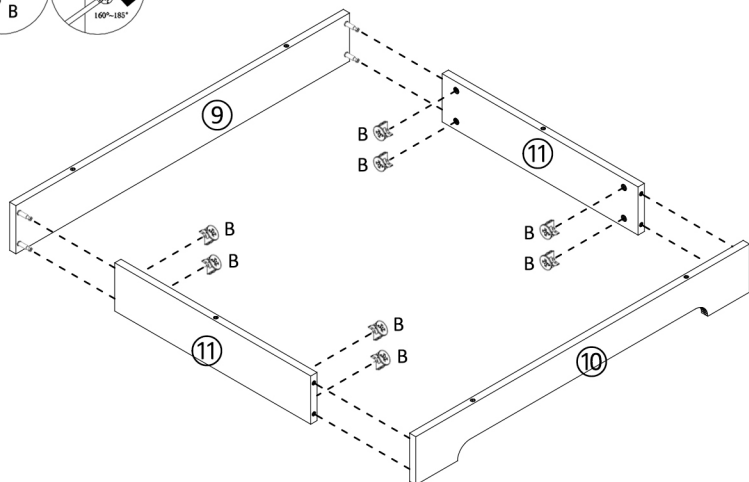


B*8

STEP 30

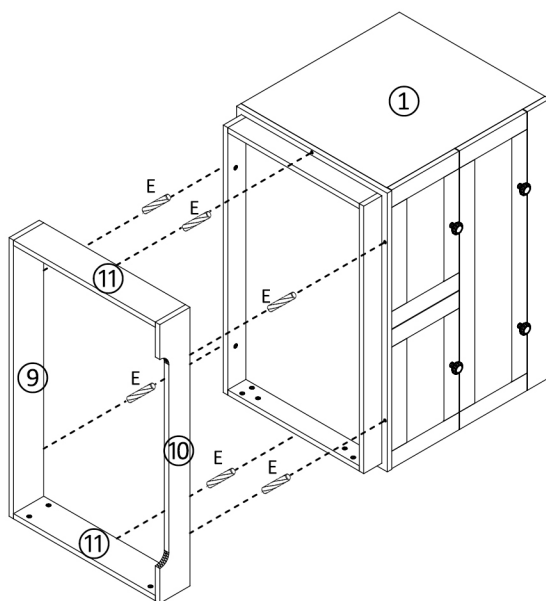

E*6





STEP 31

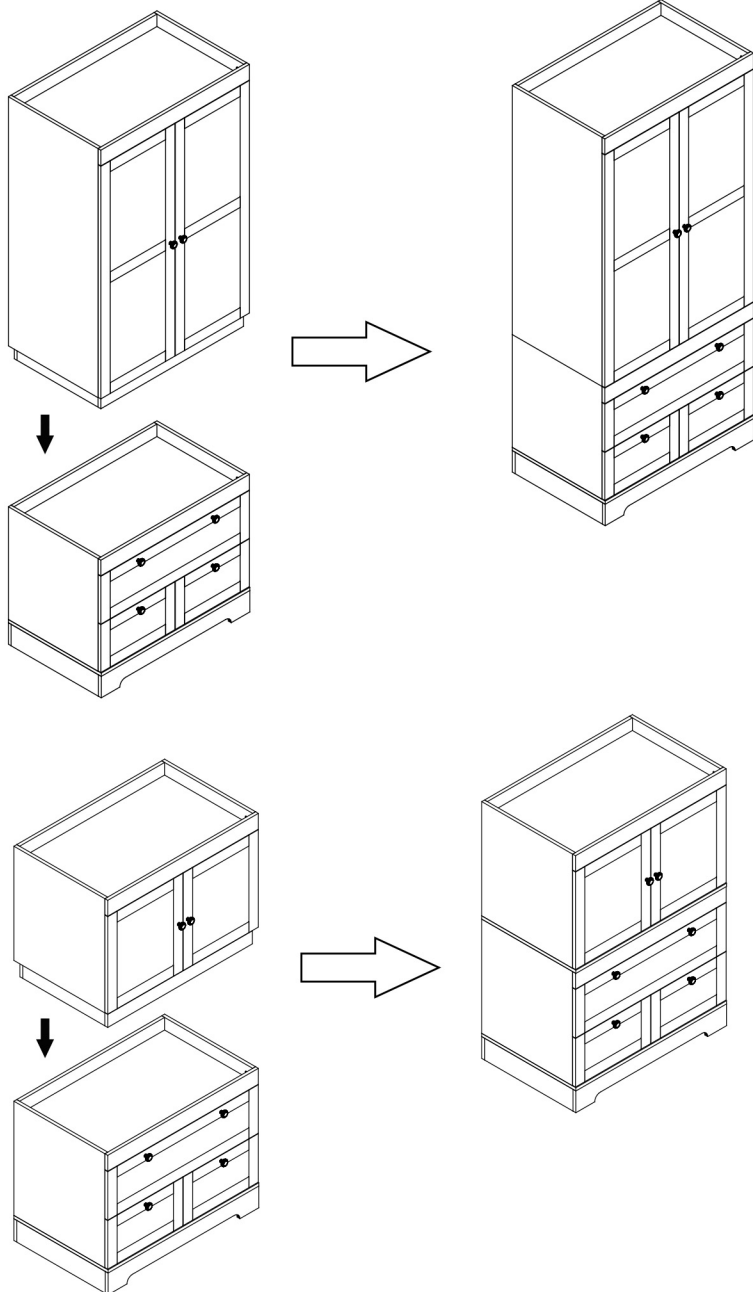




Note:

- 1.The cabinets located above do not need to be assembled with bases.
- 2.Install the anti-tipping devices after stacking the cabinets neatly.
- 3.Be careful when opening/closing the door.


STEP 32

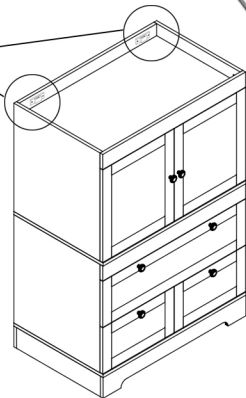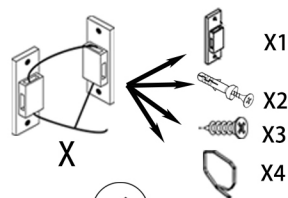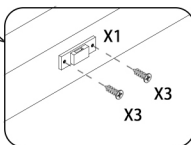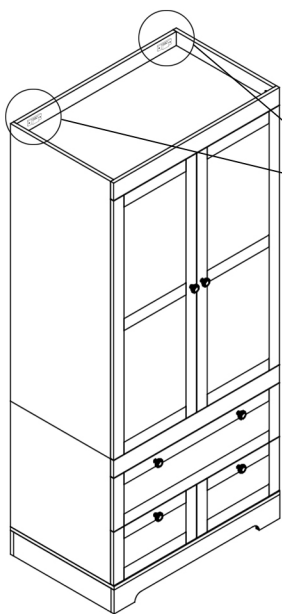


1. One side of the anti-toppling safety belt is installed on the cabinet body
2. The other side of the anti-toppling safety belt is mounted on the wall
3. The seat belt is fastened through both safety buckles and then tightened

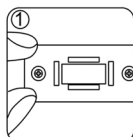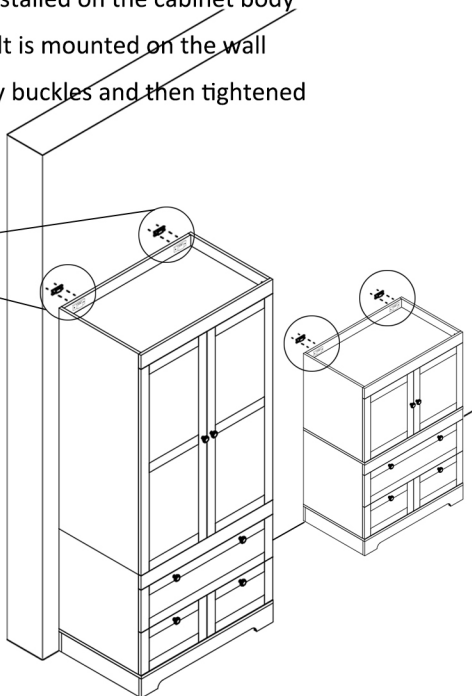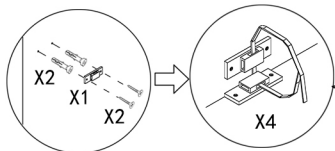


1. make mark on the wall

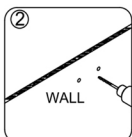


2. drill two Ø6 holes on the wall

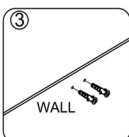

3. put two anchors in the holes

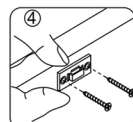

4. fix the device (X1) on the wall by the long screws (X2)

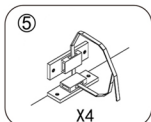

5. Push the cabinet close to the wall so that the two bases are close to each other, and then put on belt (X4) to tighten it.



X*2