

9001-3/4


INSTRUCTION MANUAL


FITTINGS

A.  6x14 *9


B.  6x20 * 9

C.  6x25 * 9


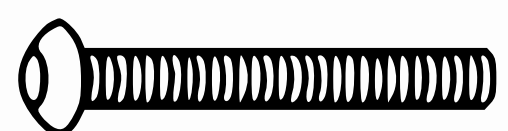
D.  6x35 * 9

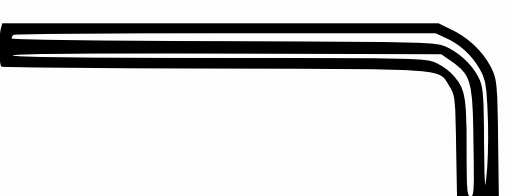E.  * 1


ASSEMBLY ICON

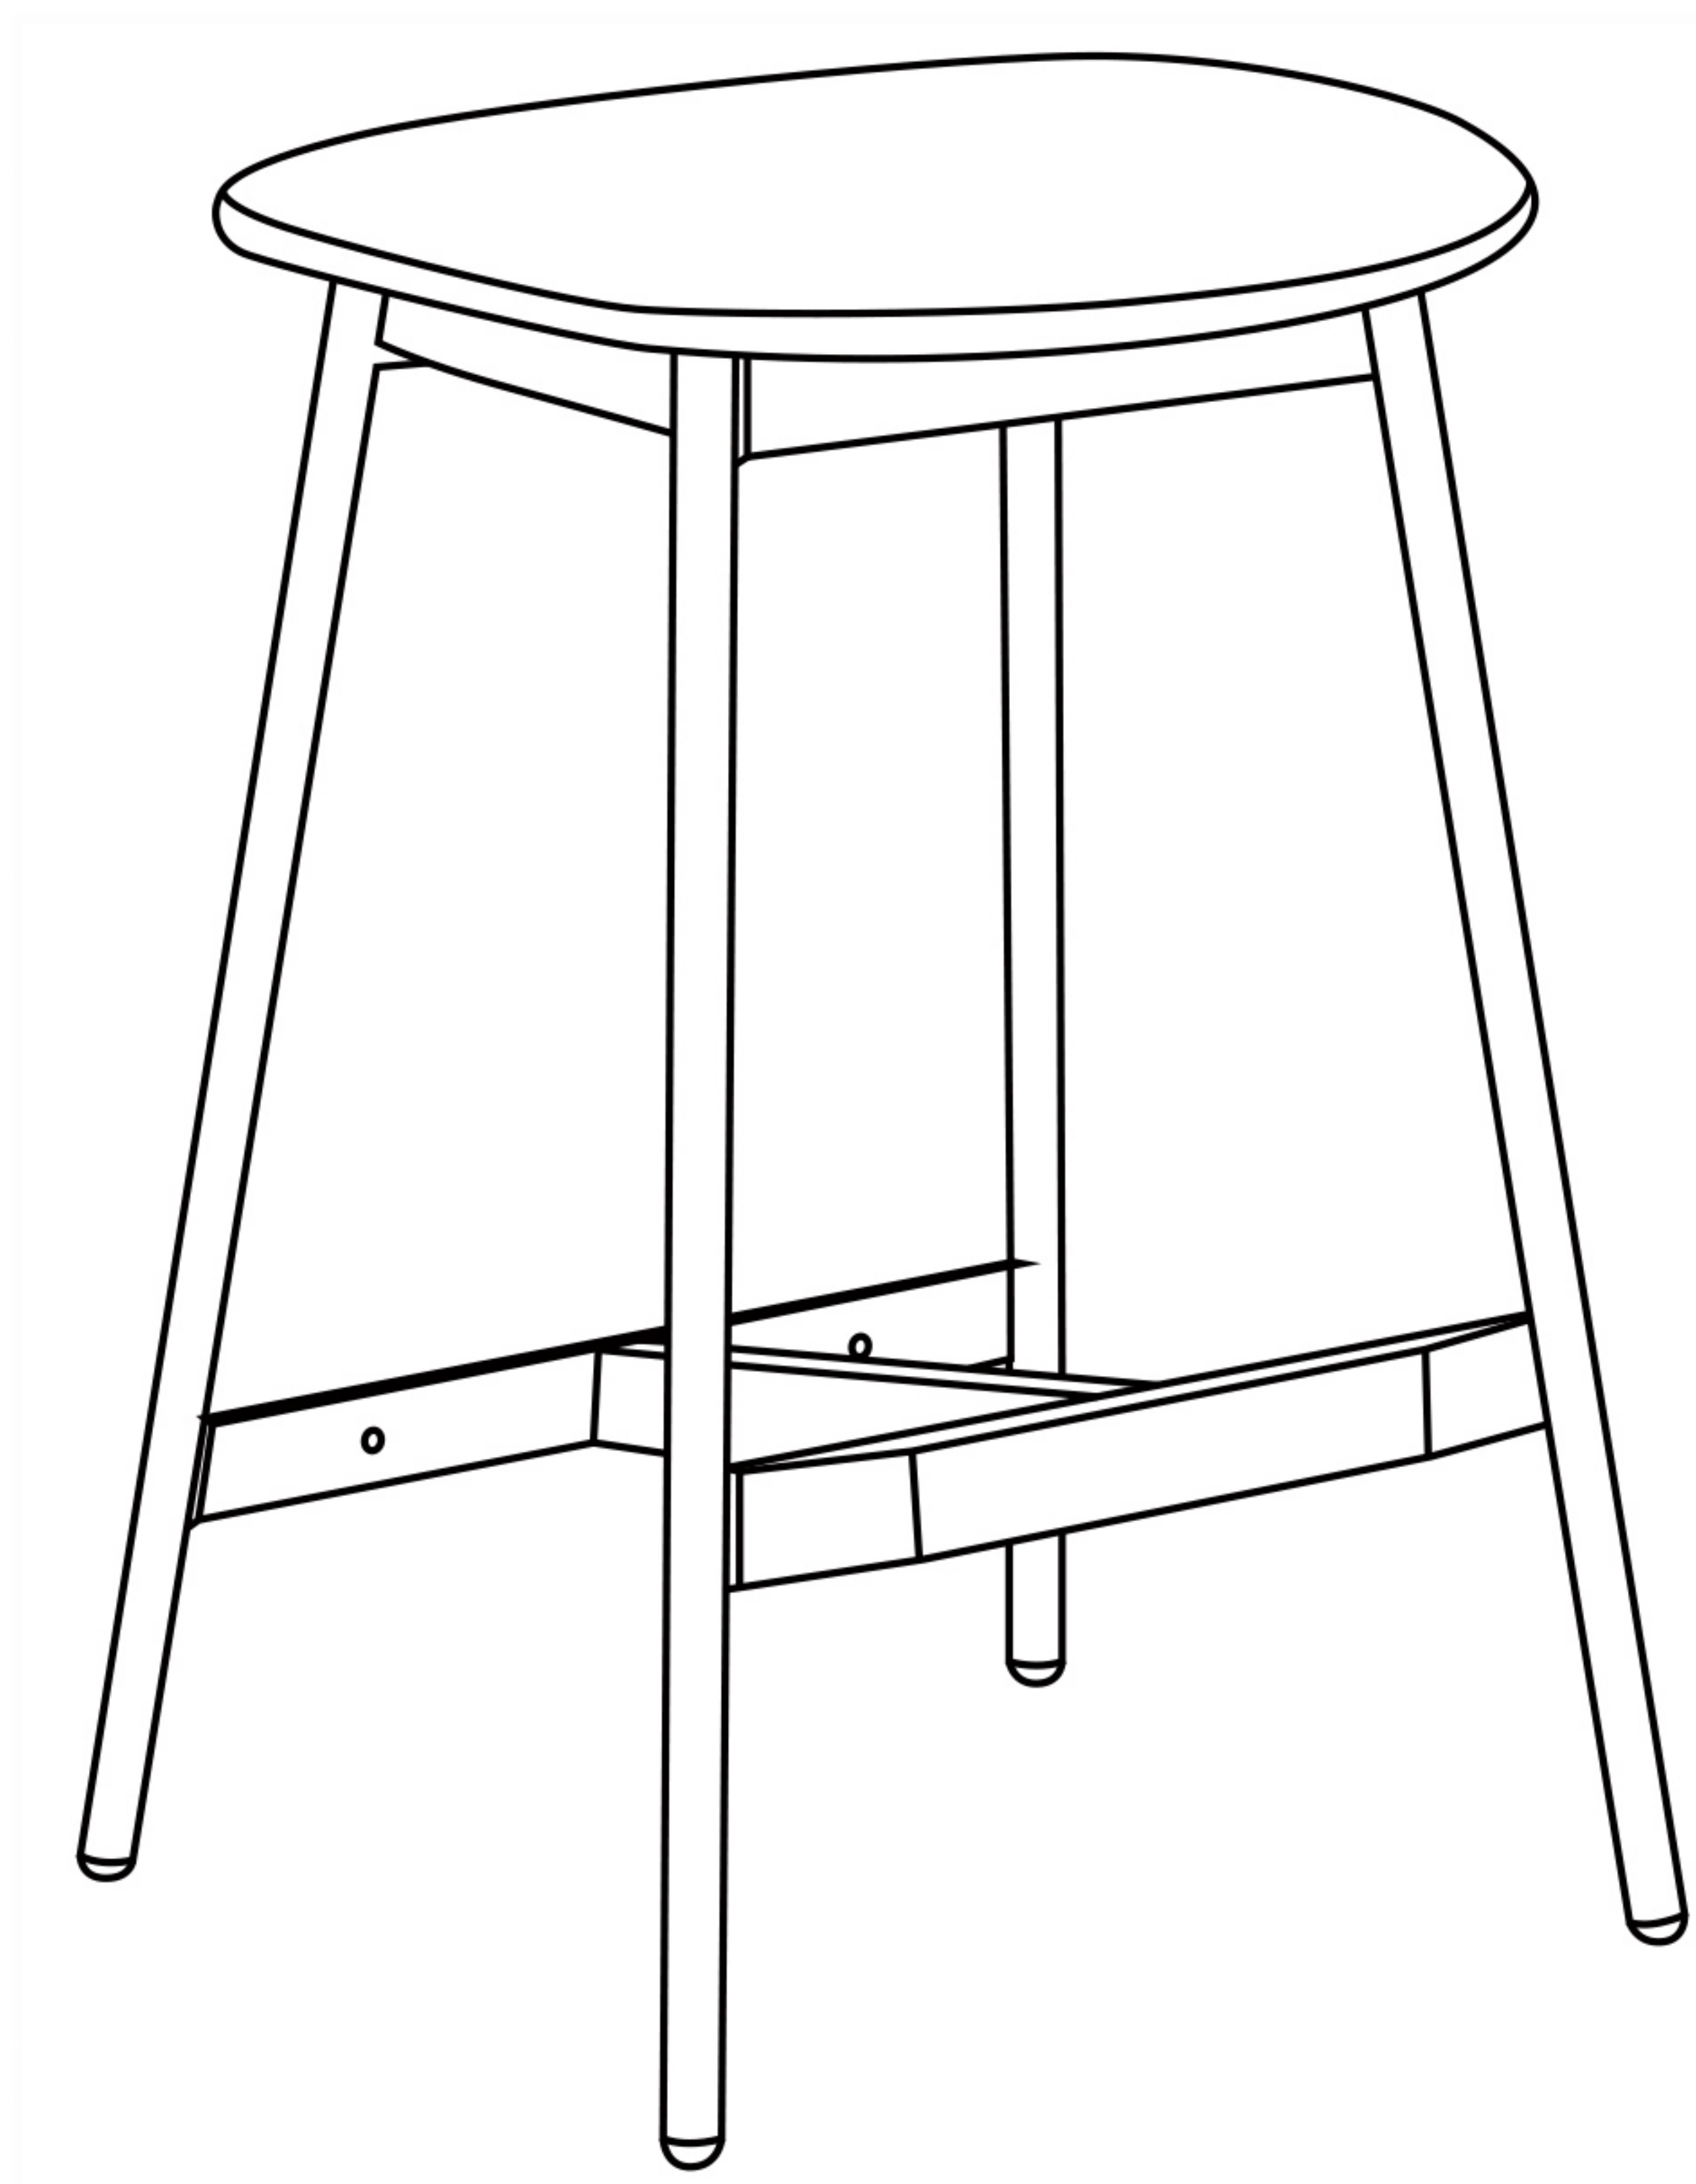

Tighten the product as shown in the figure above.

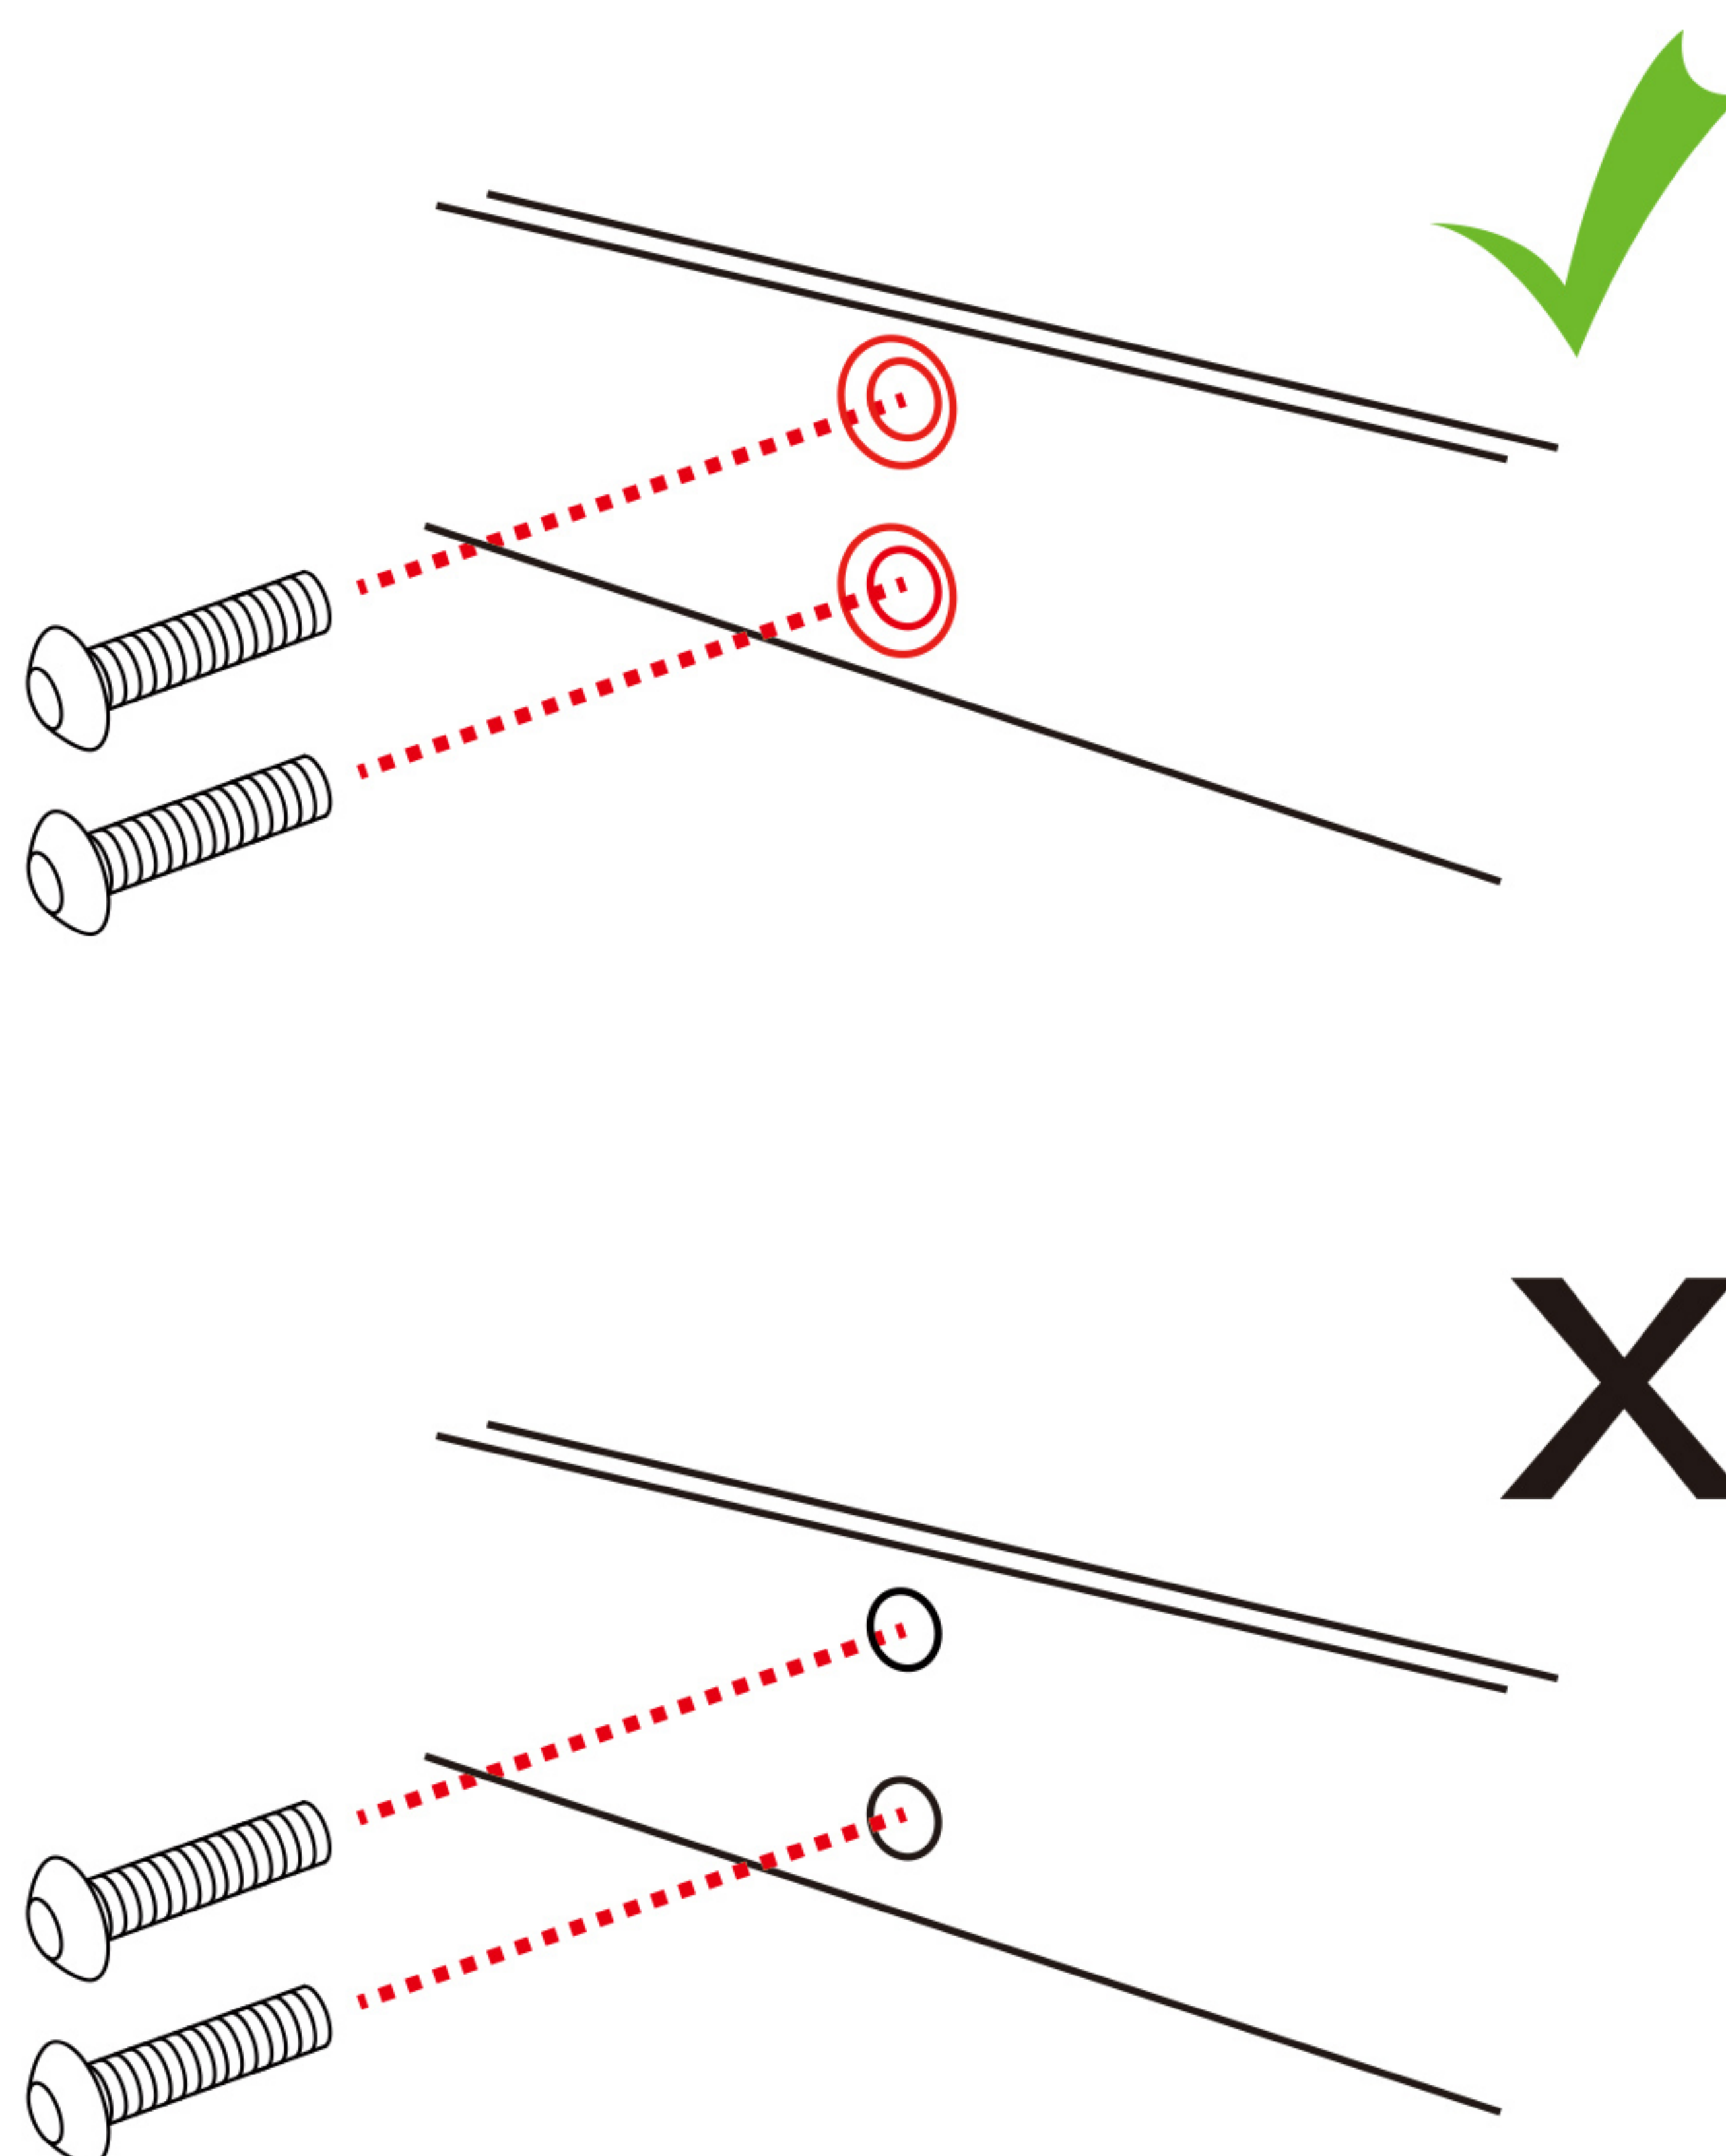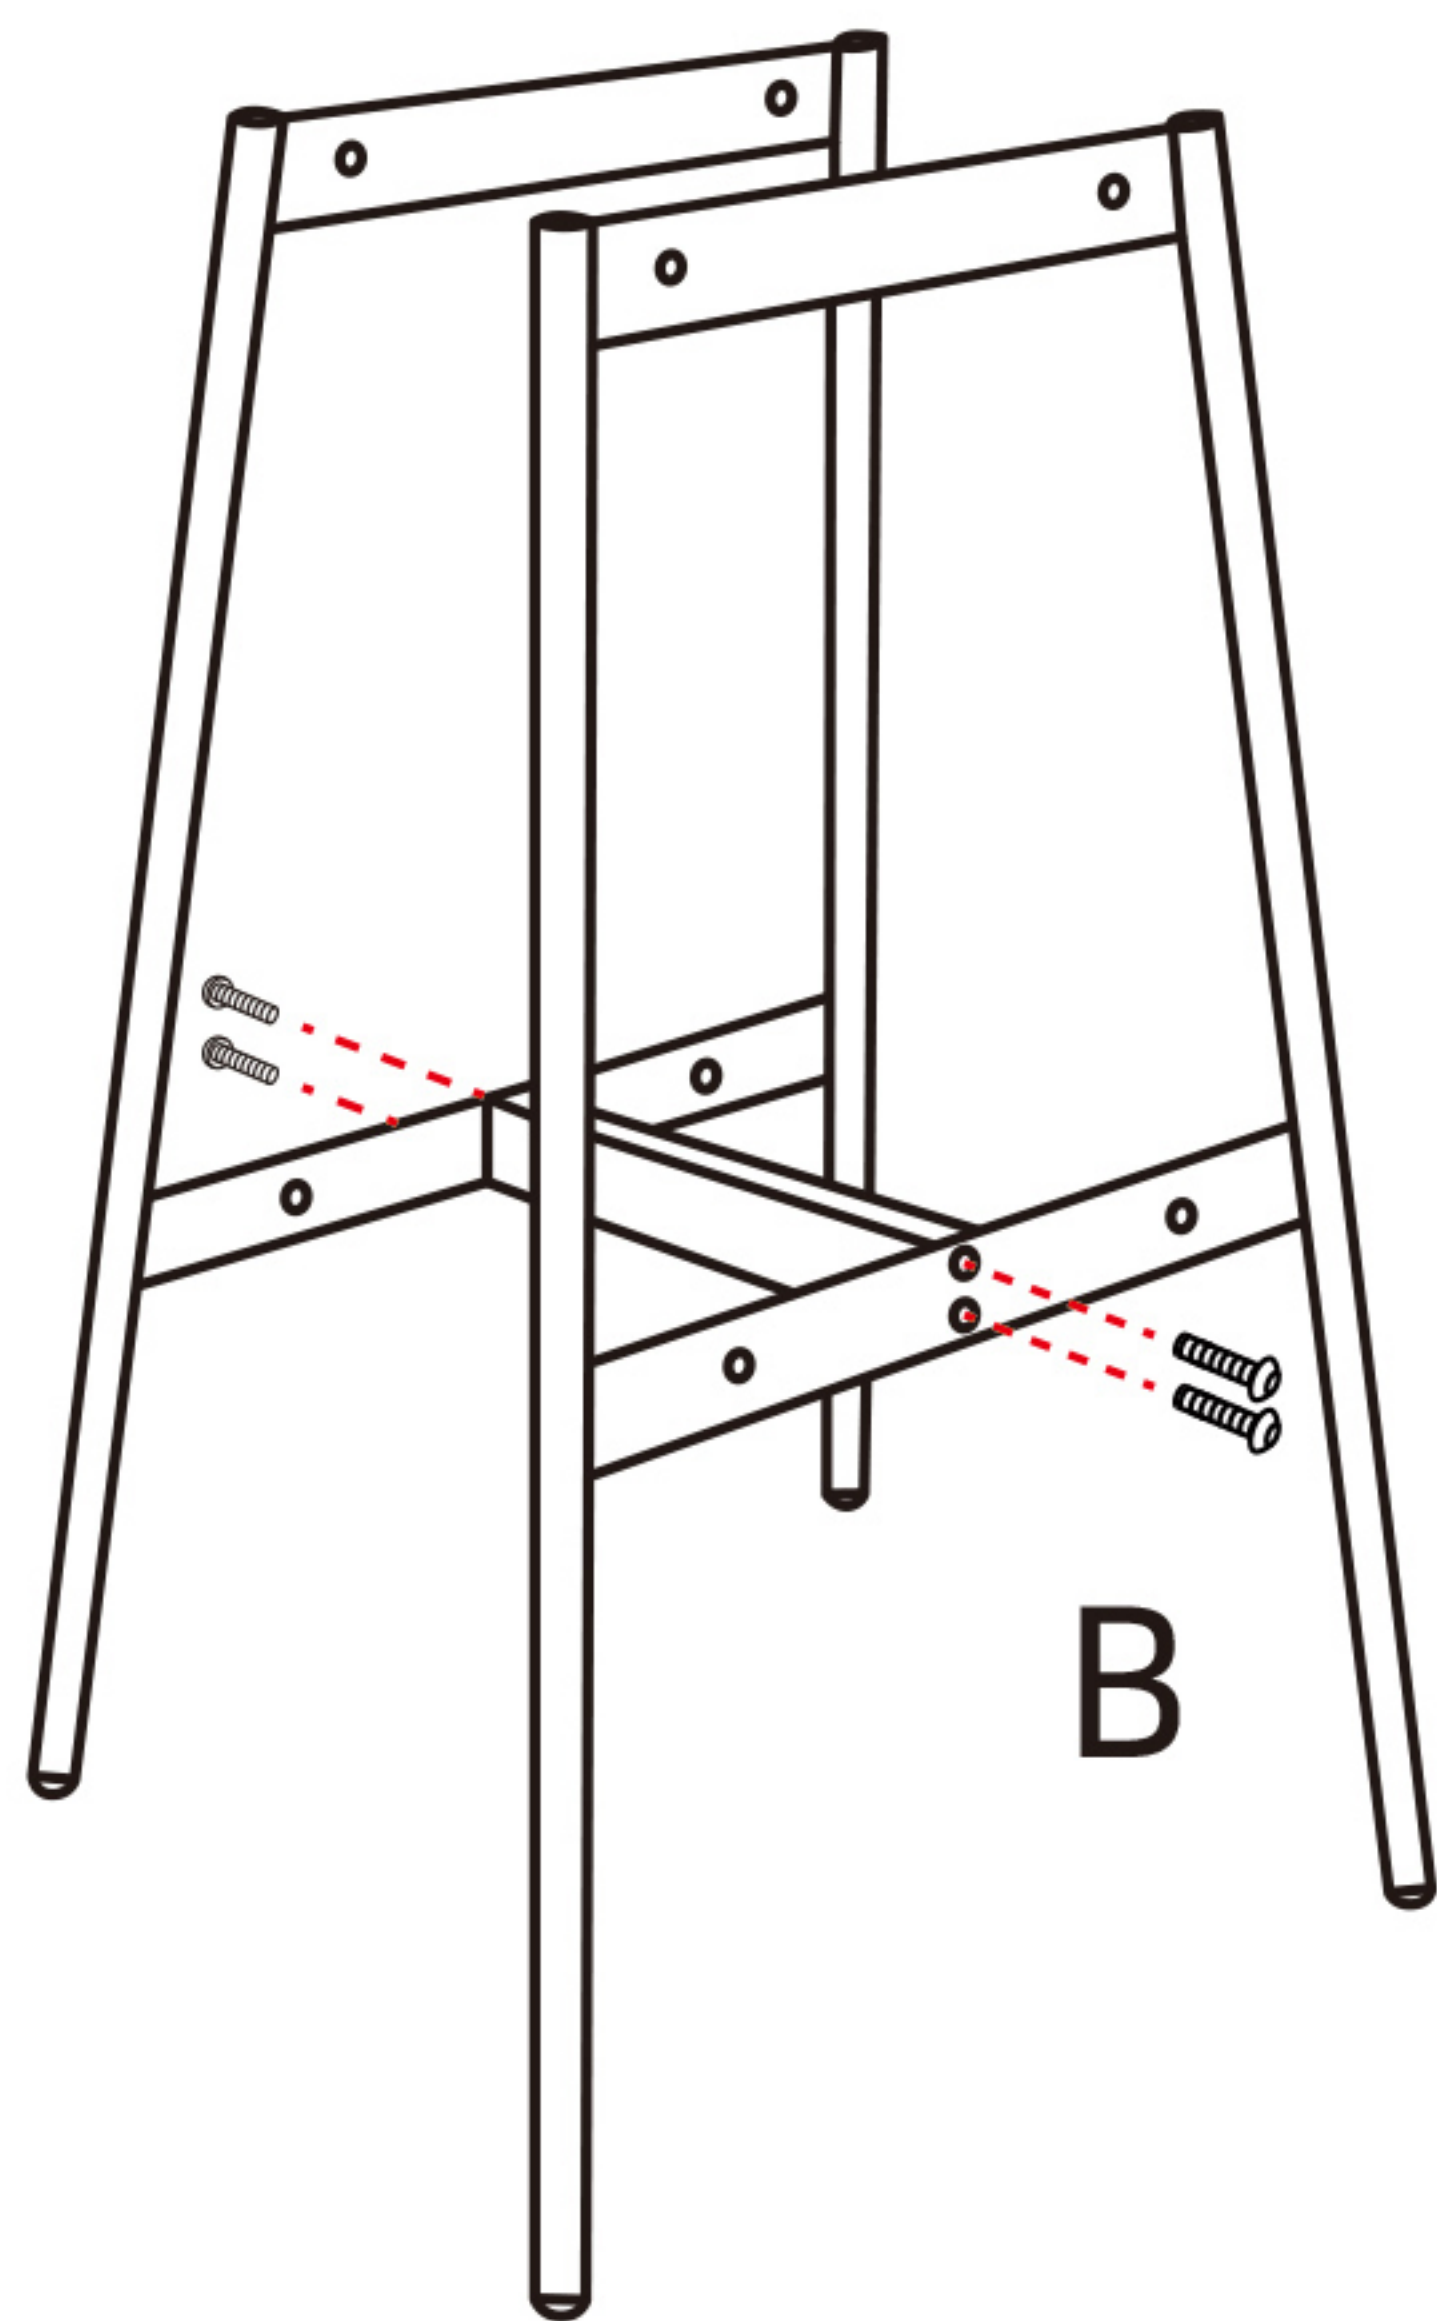


- 1、 Install the iron rod between the two iron legs, ensuring that the screws pass through the recessed holes for installation.

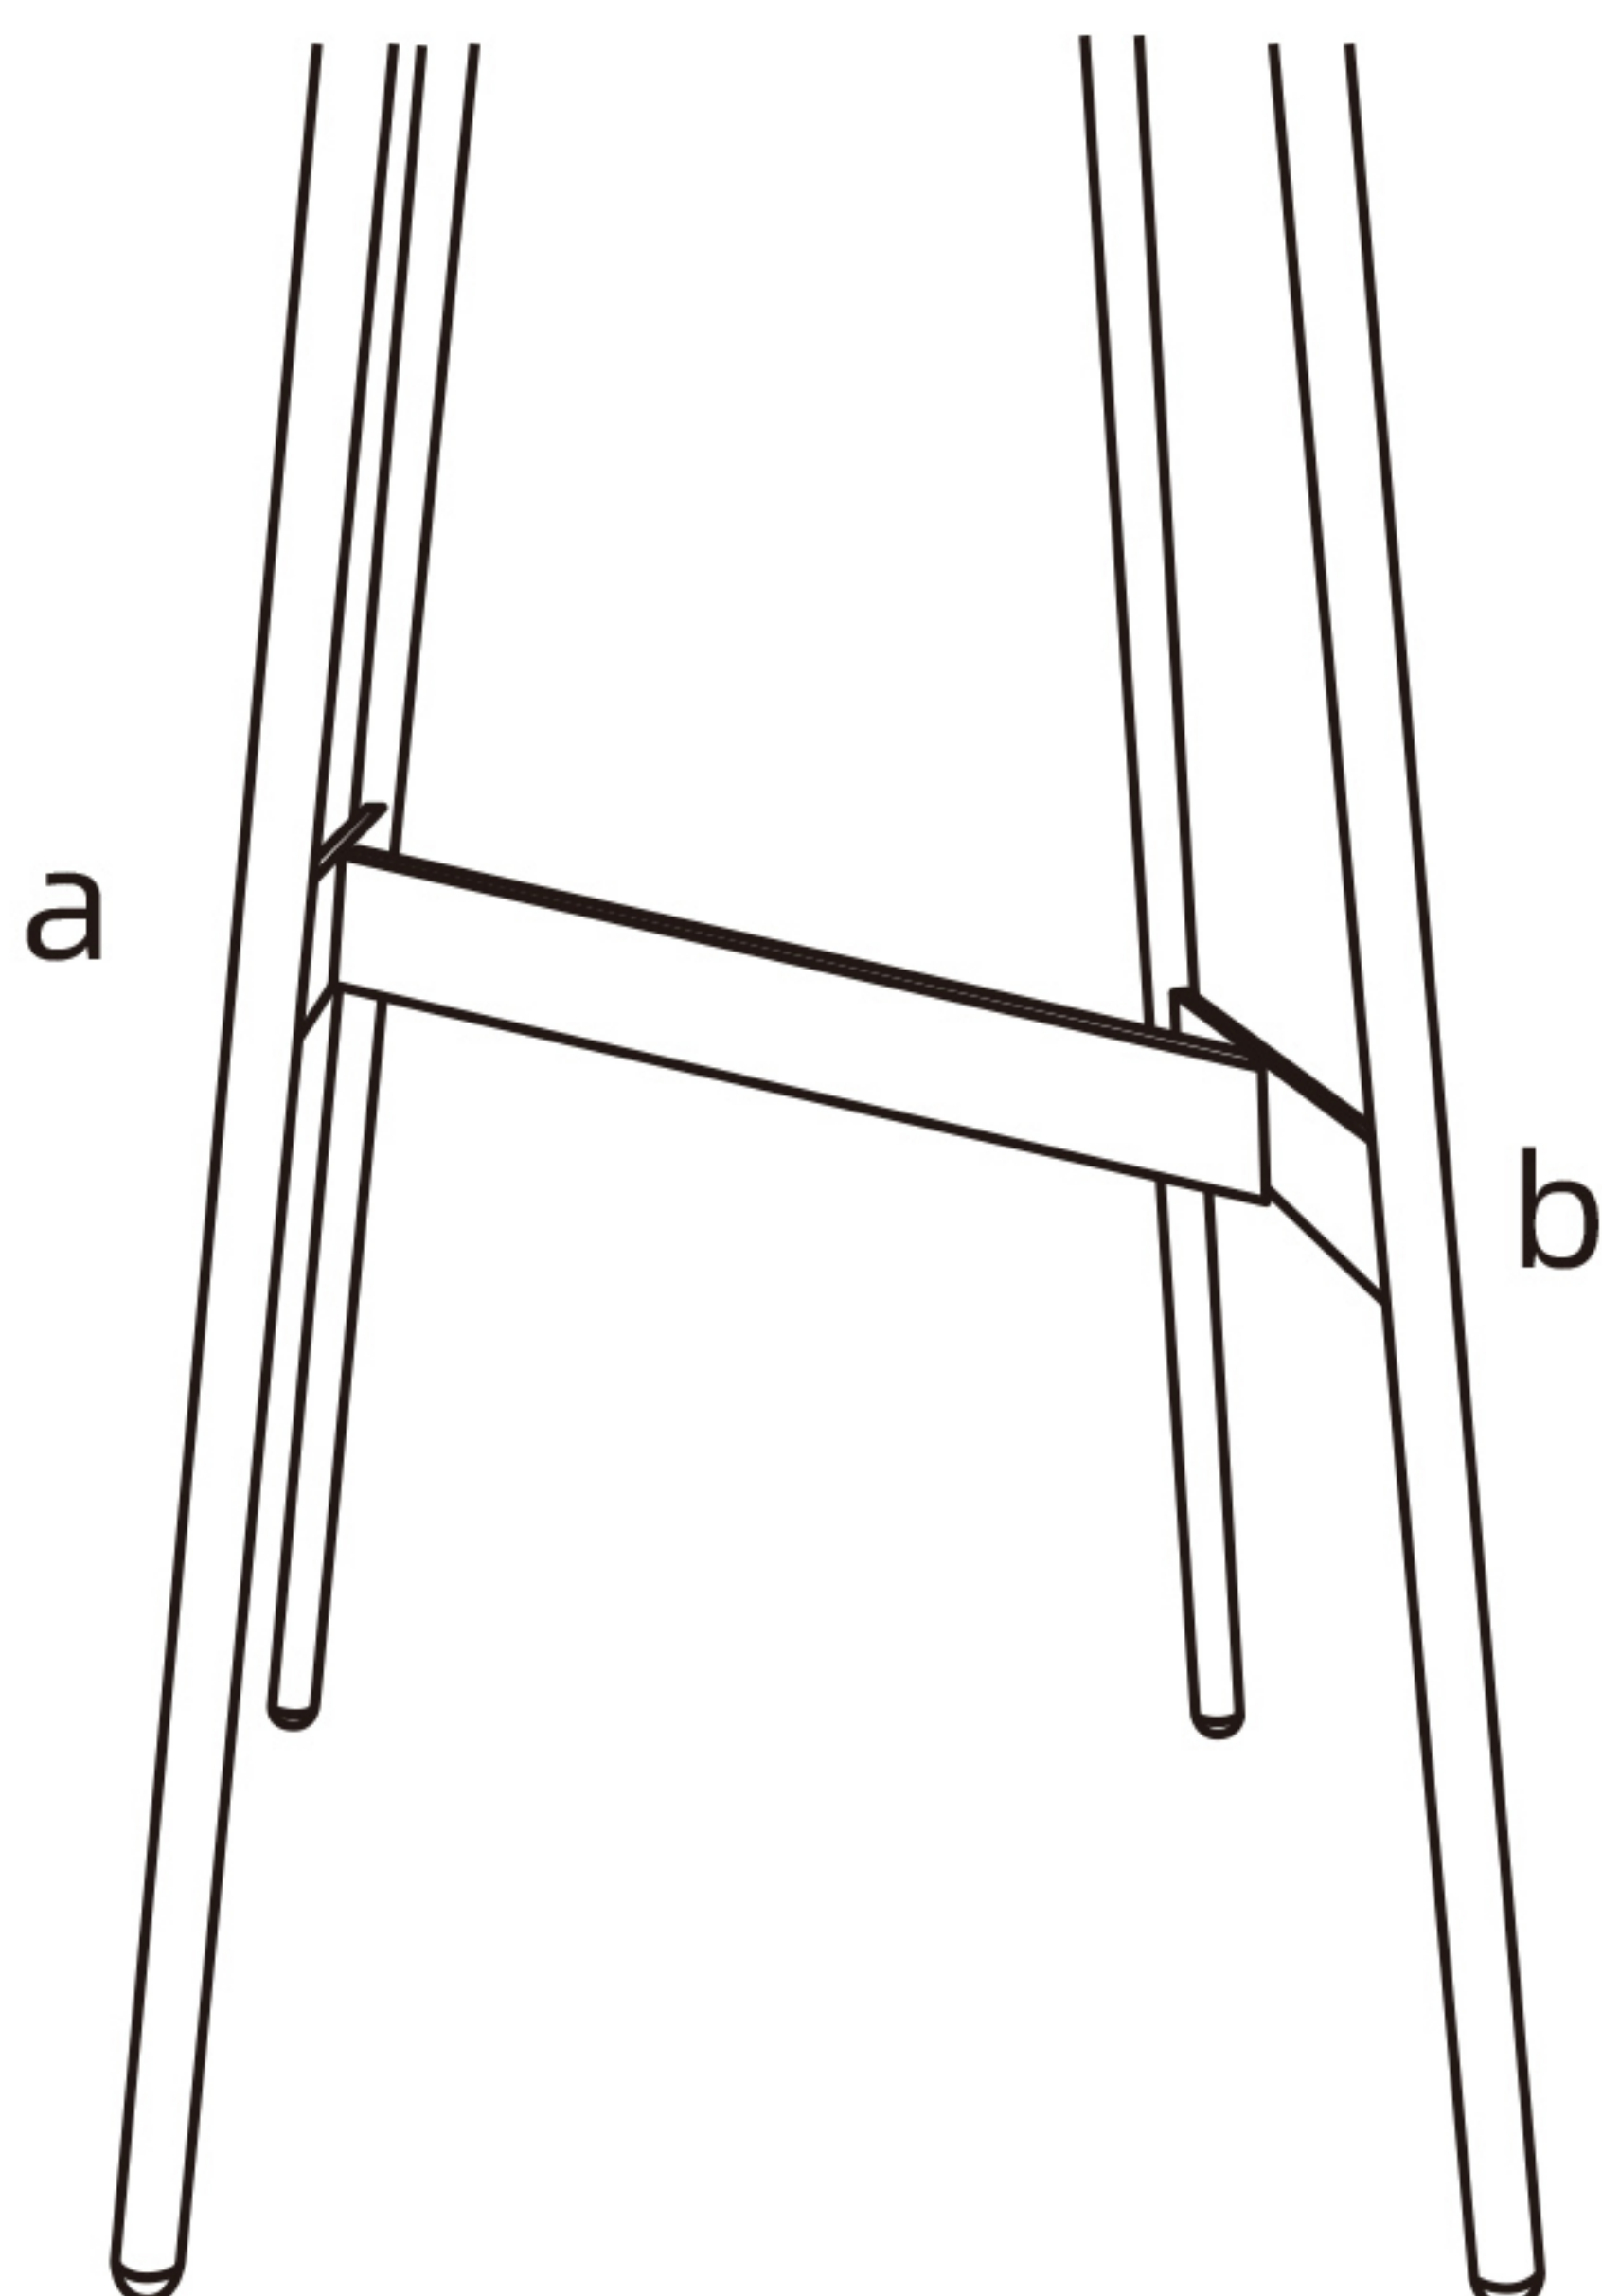


Pay attention to the orientation of the iron rod port (a&b) , as shown in the diagram.


Firstly tighten all the screws 70%
when finished the assemble tighten all the screws 100%

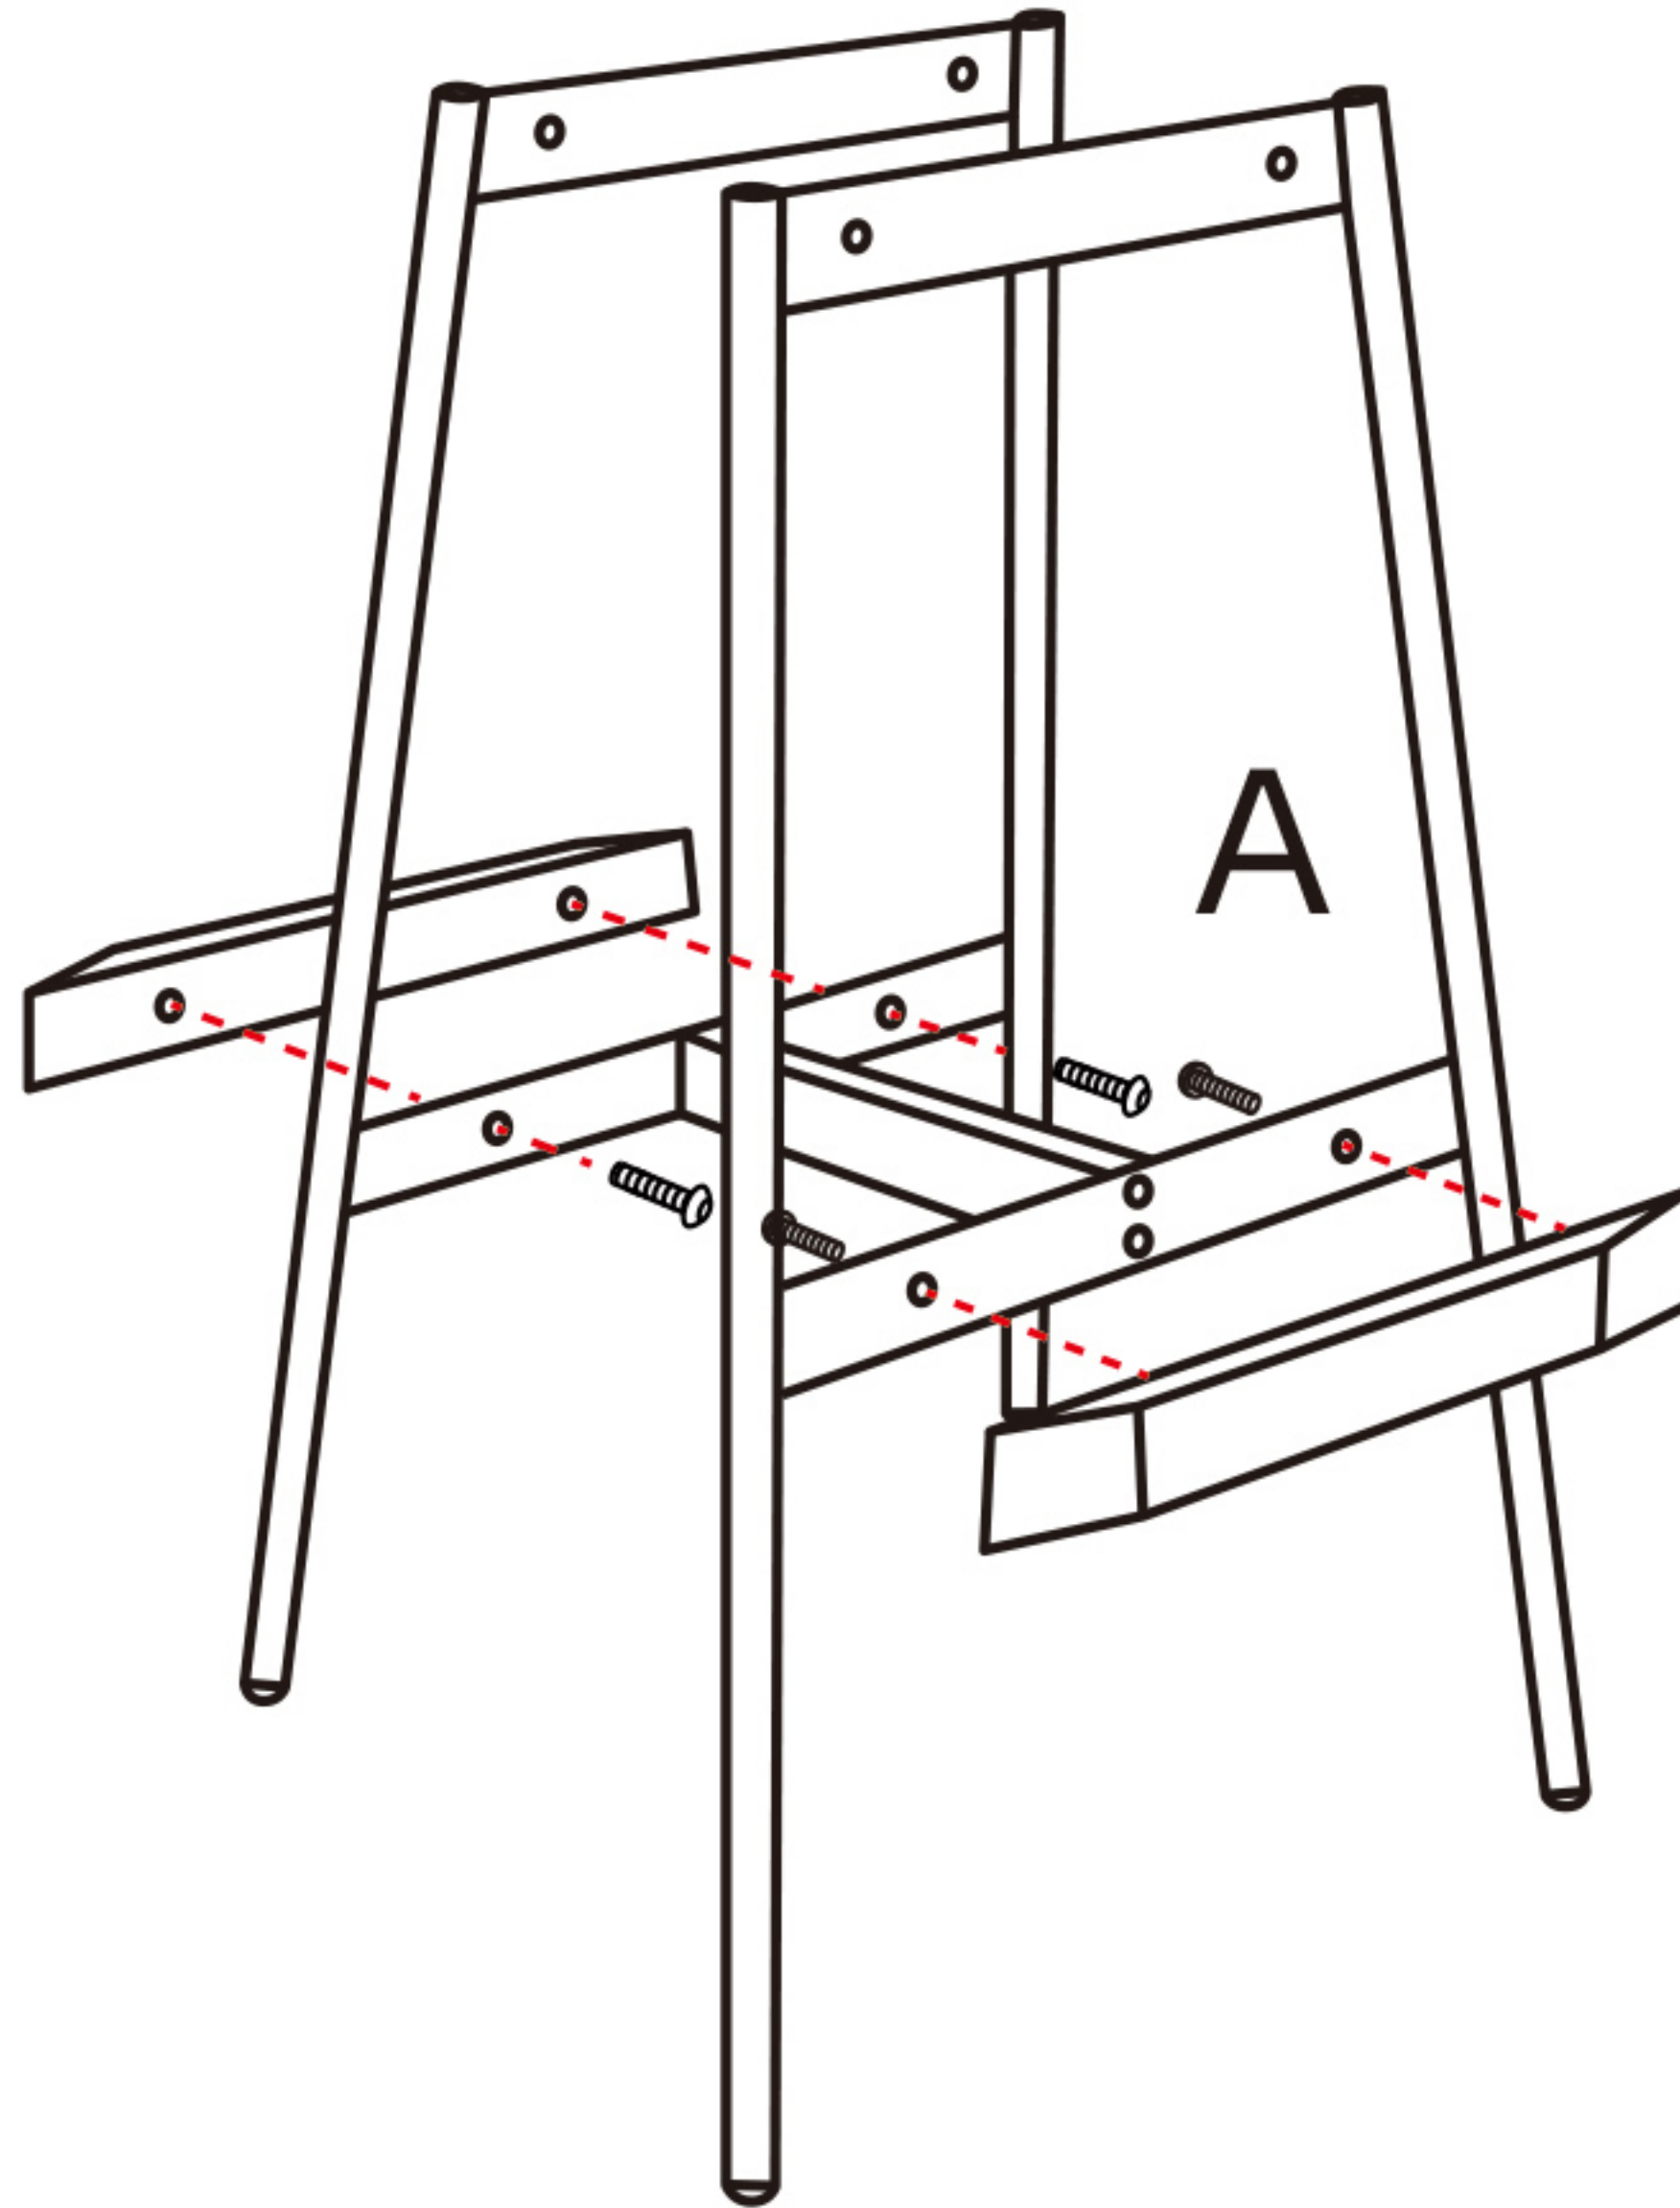

2、 Install the two batten onto the iron frame, making sure to consider their lengths.

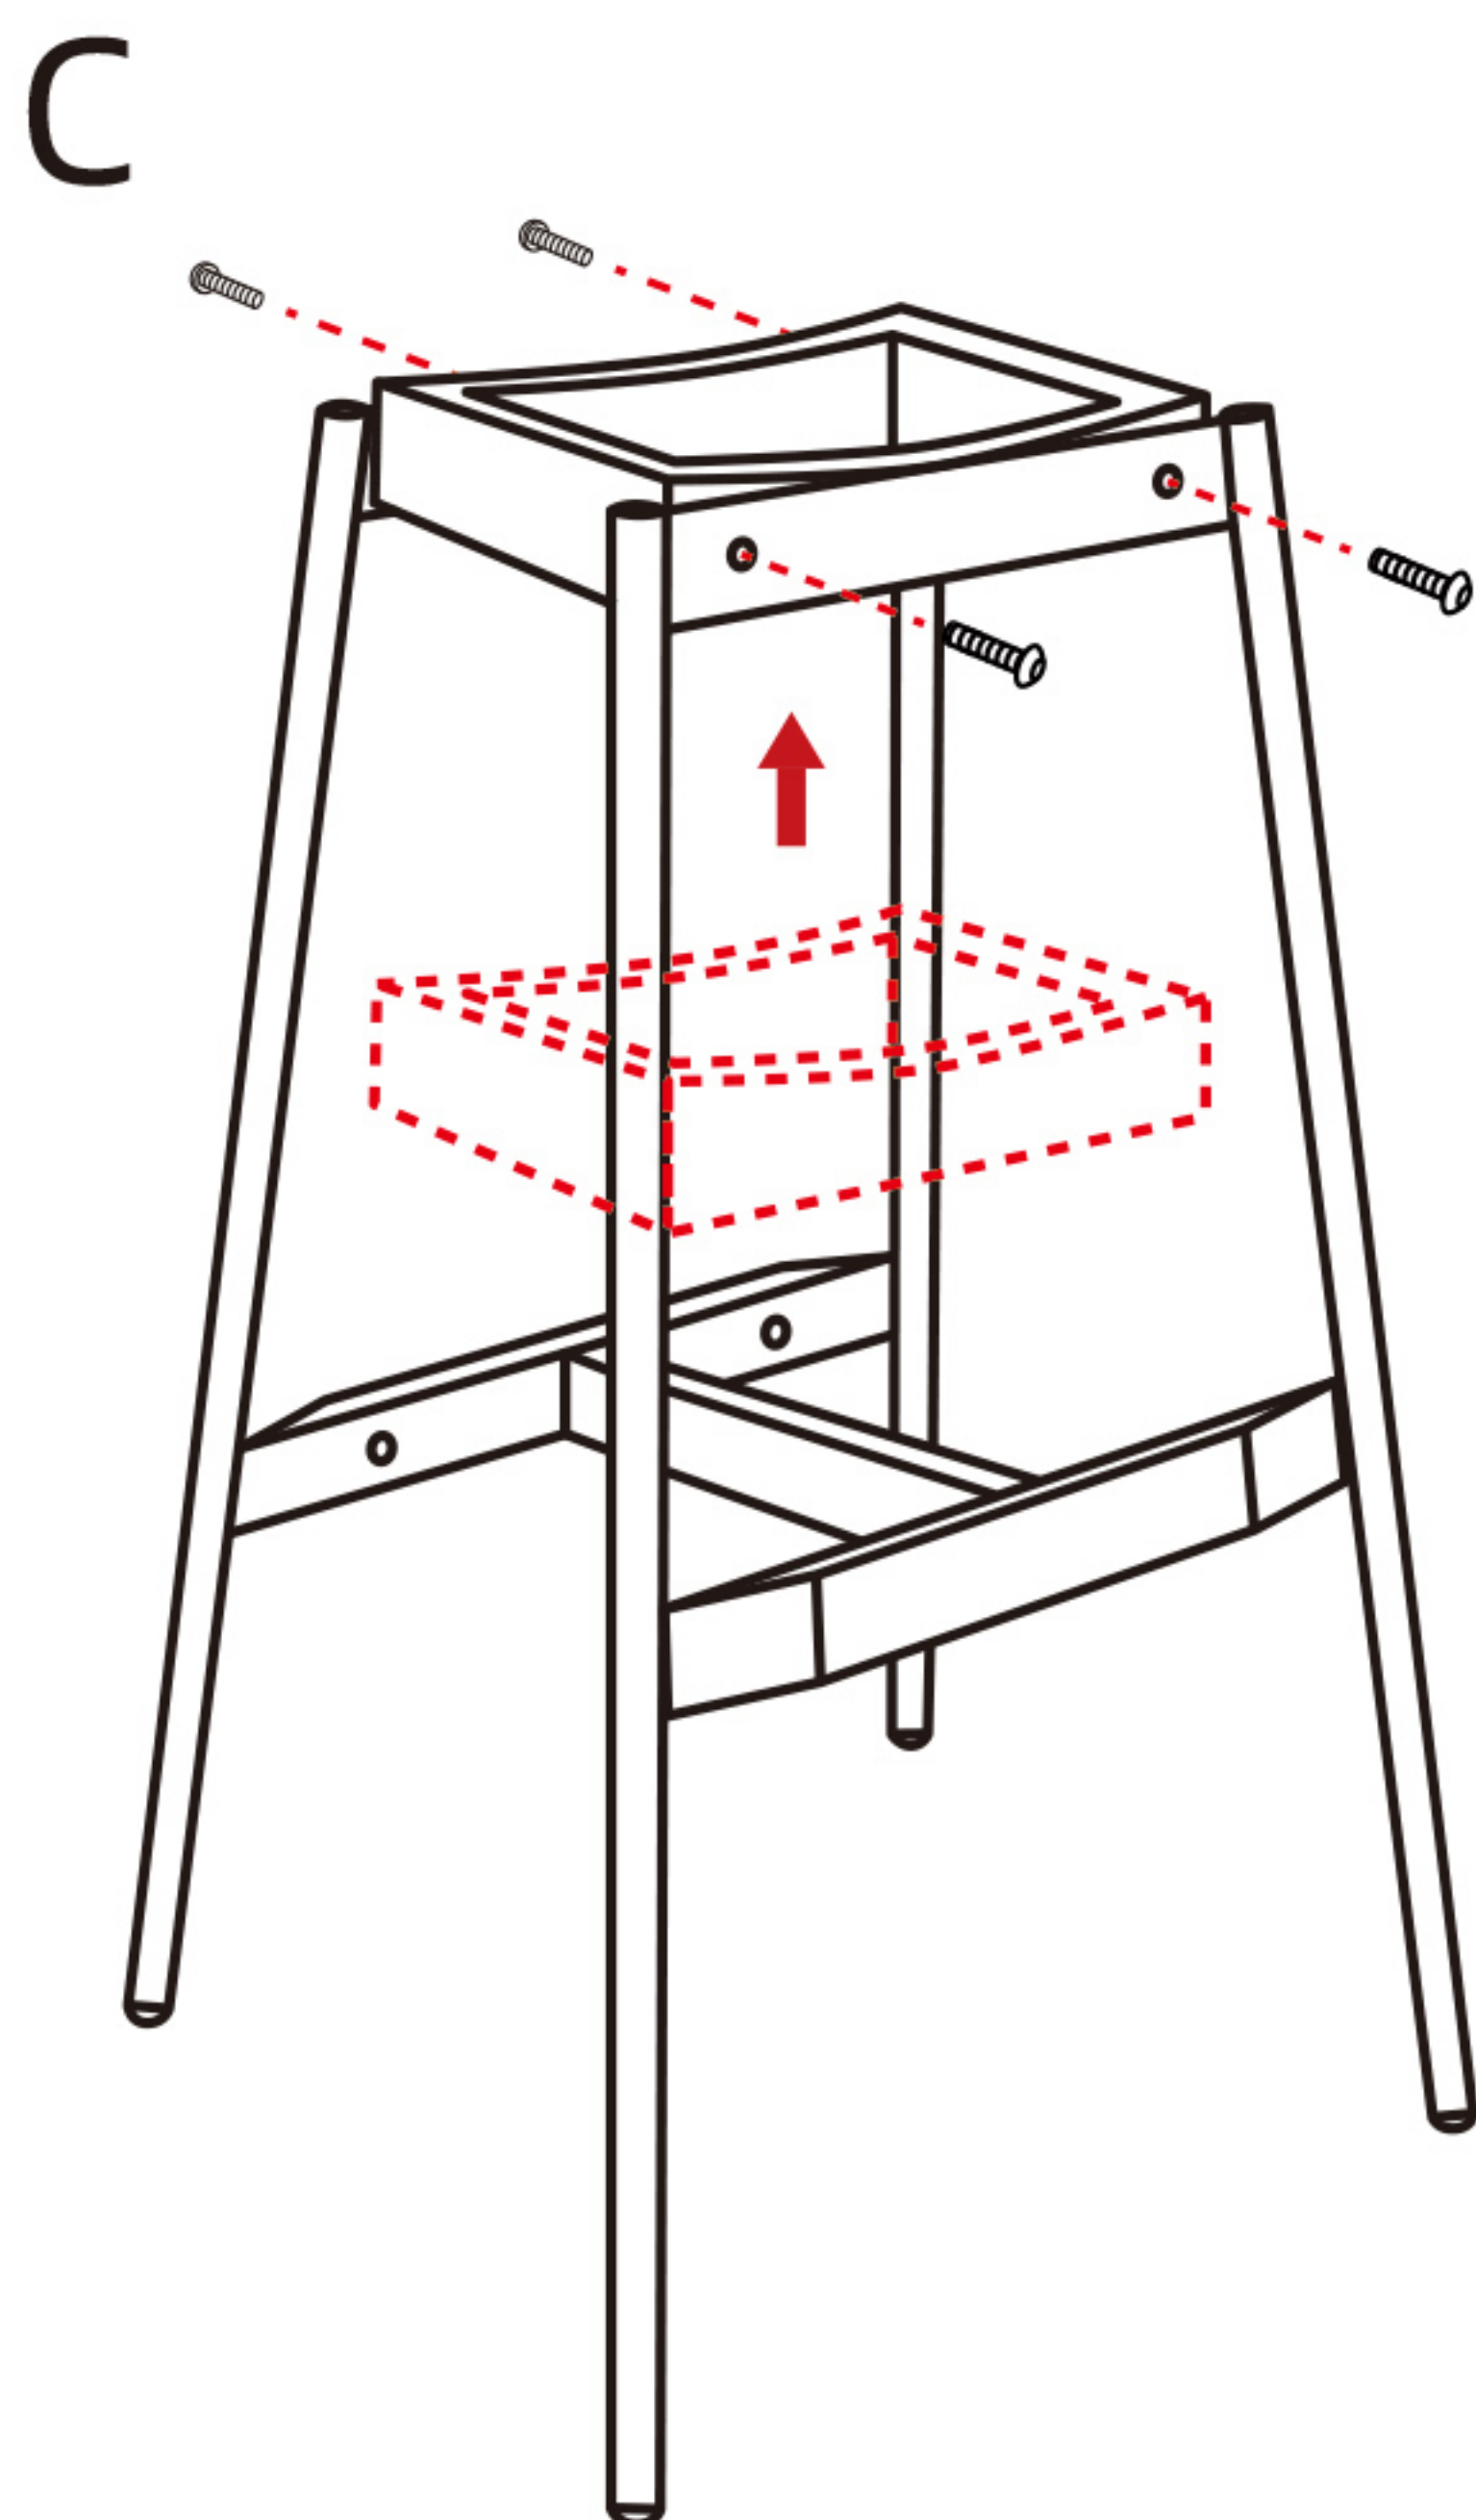

3、 Move the square wooden frame upward into the middle of the iron frame, and secure it in place using screws.

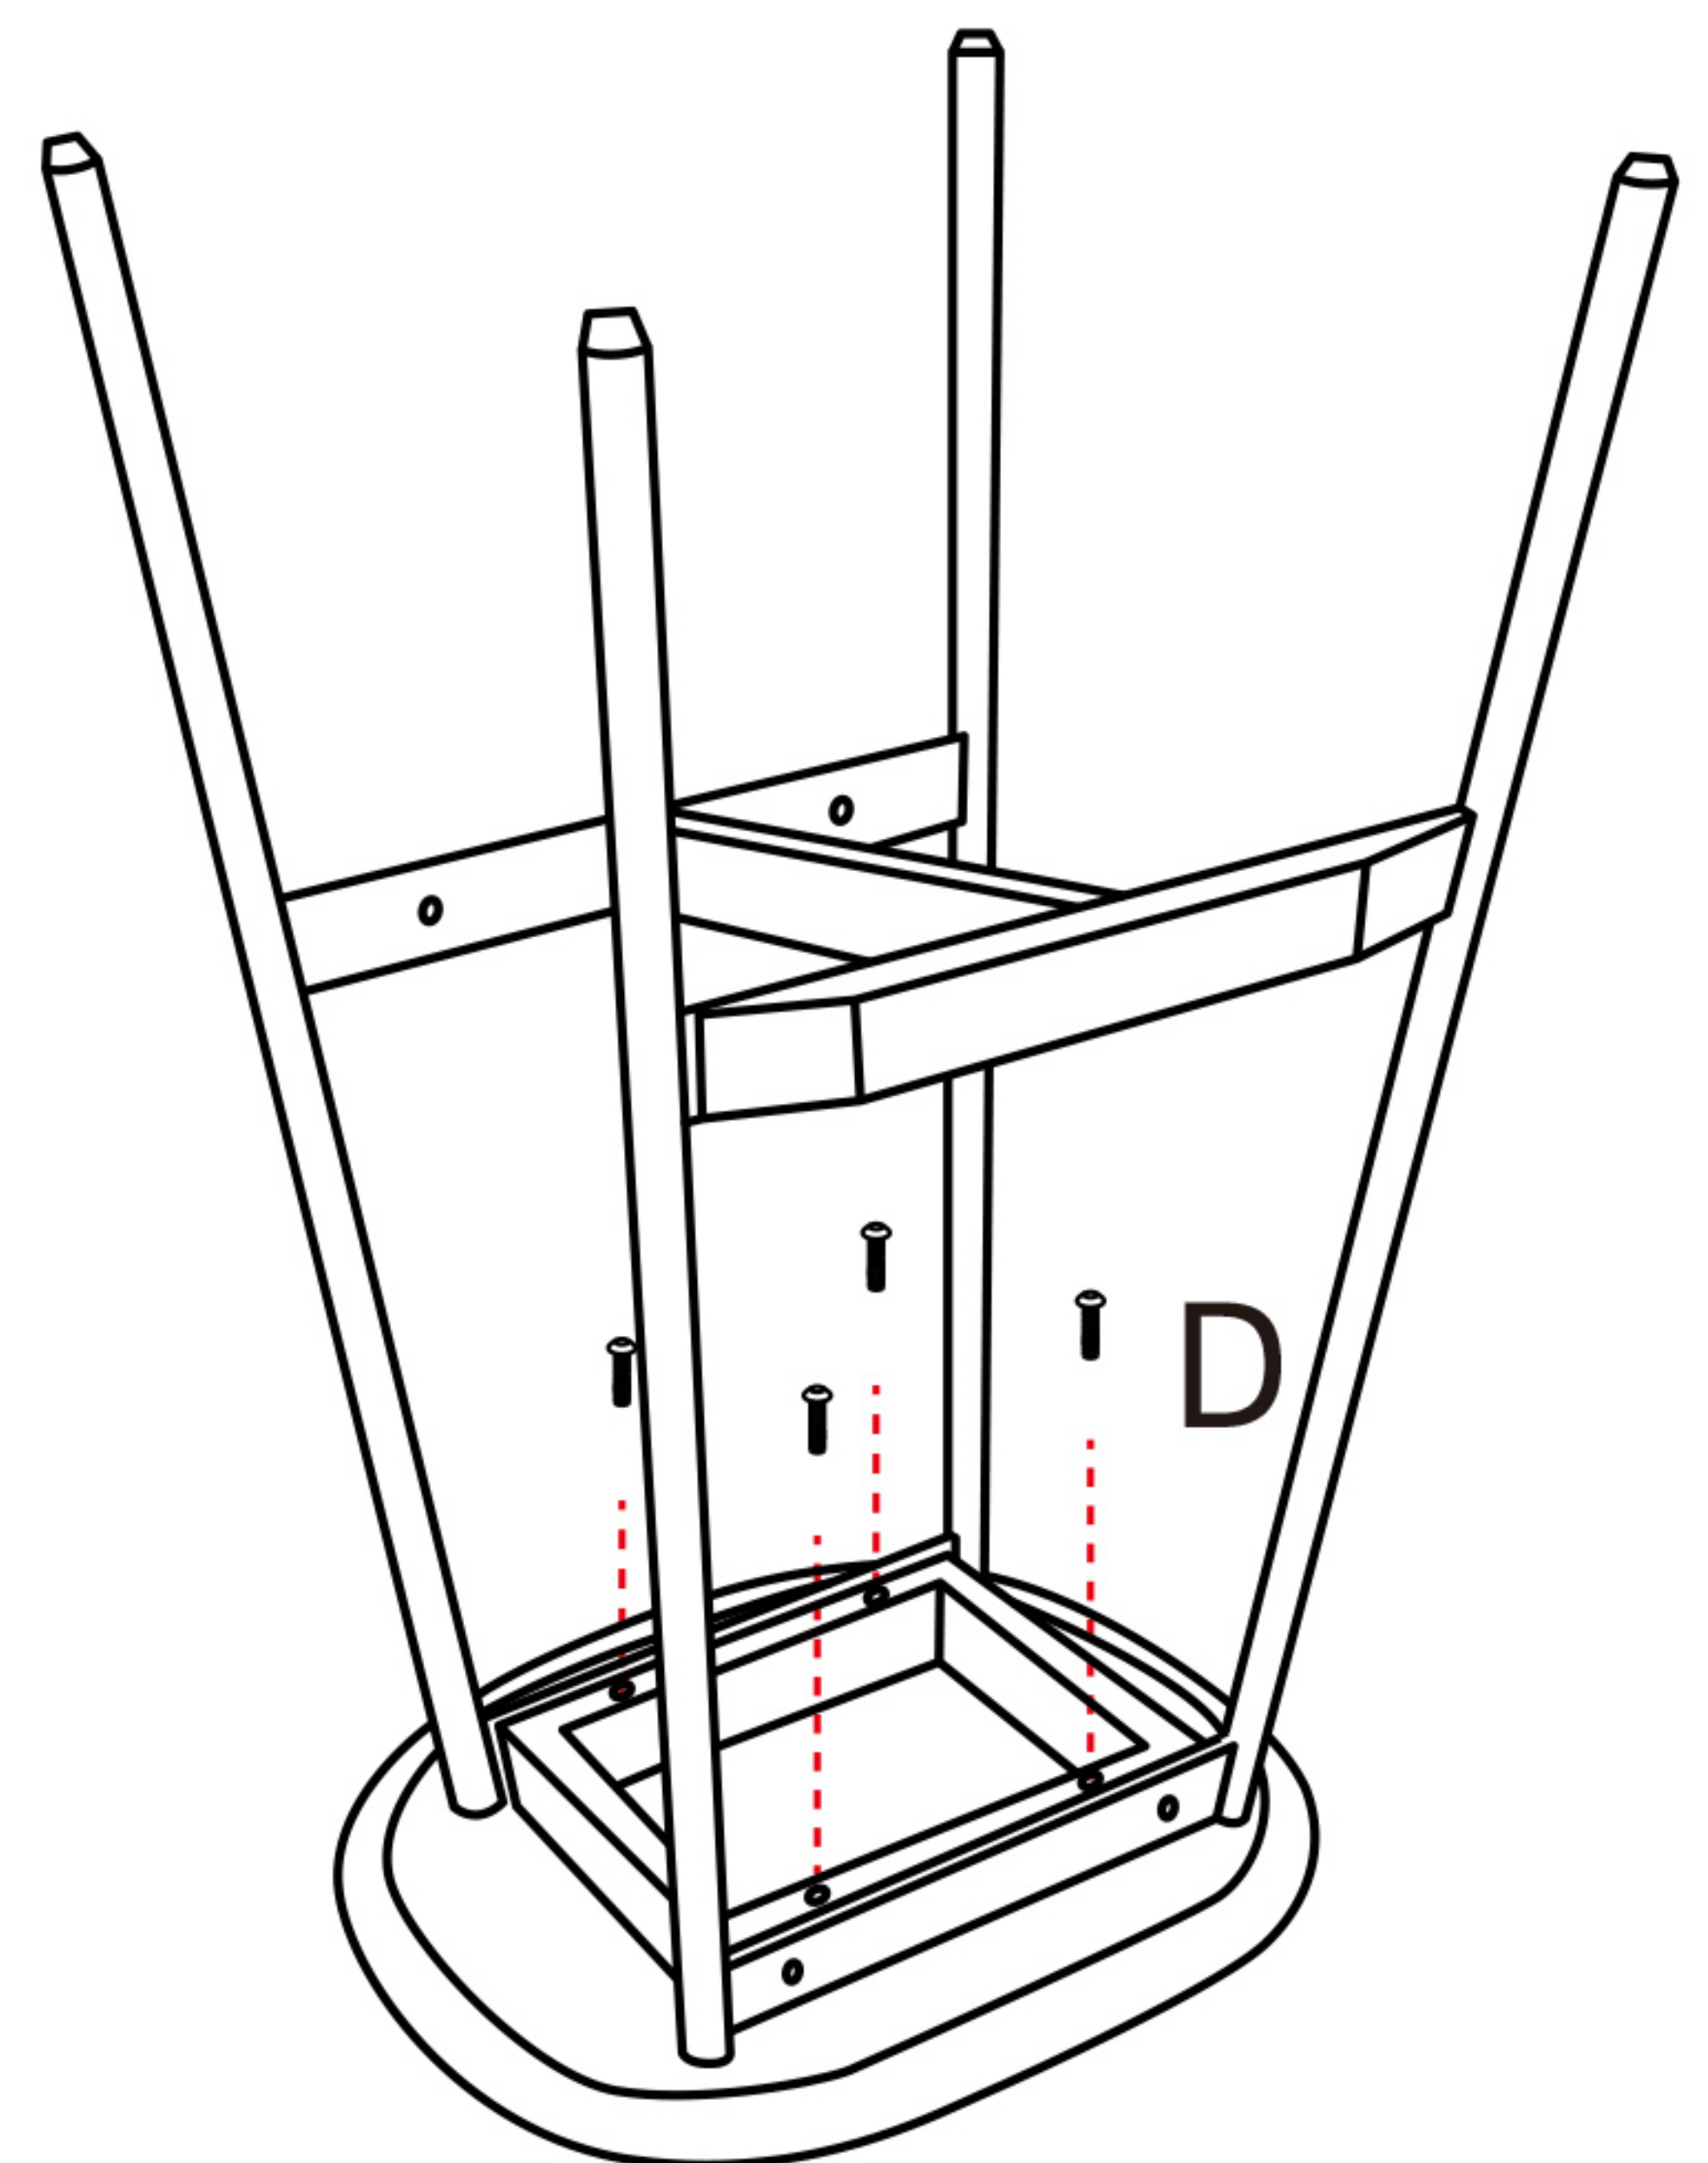

4、 Invert the seat board, place washers onto the screws, and install the iron legs onto the bottom of the seat board.