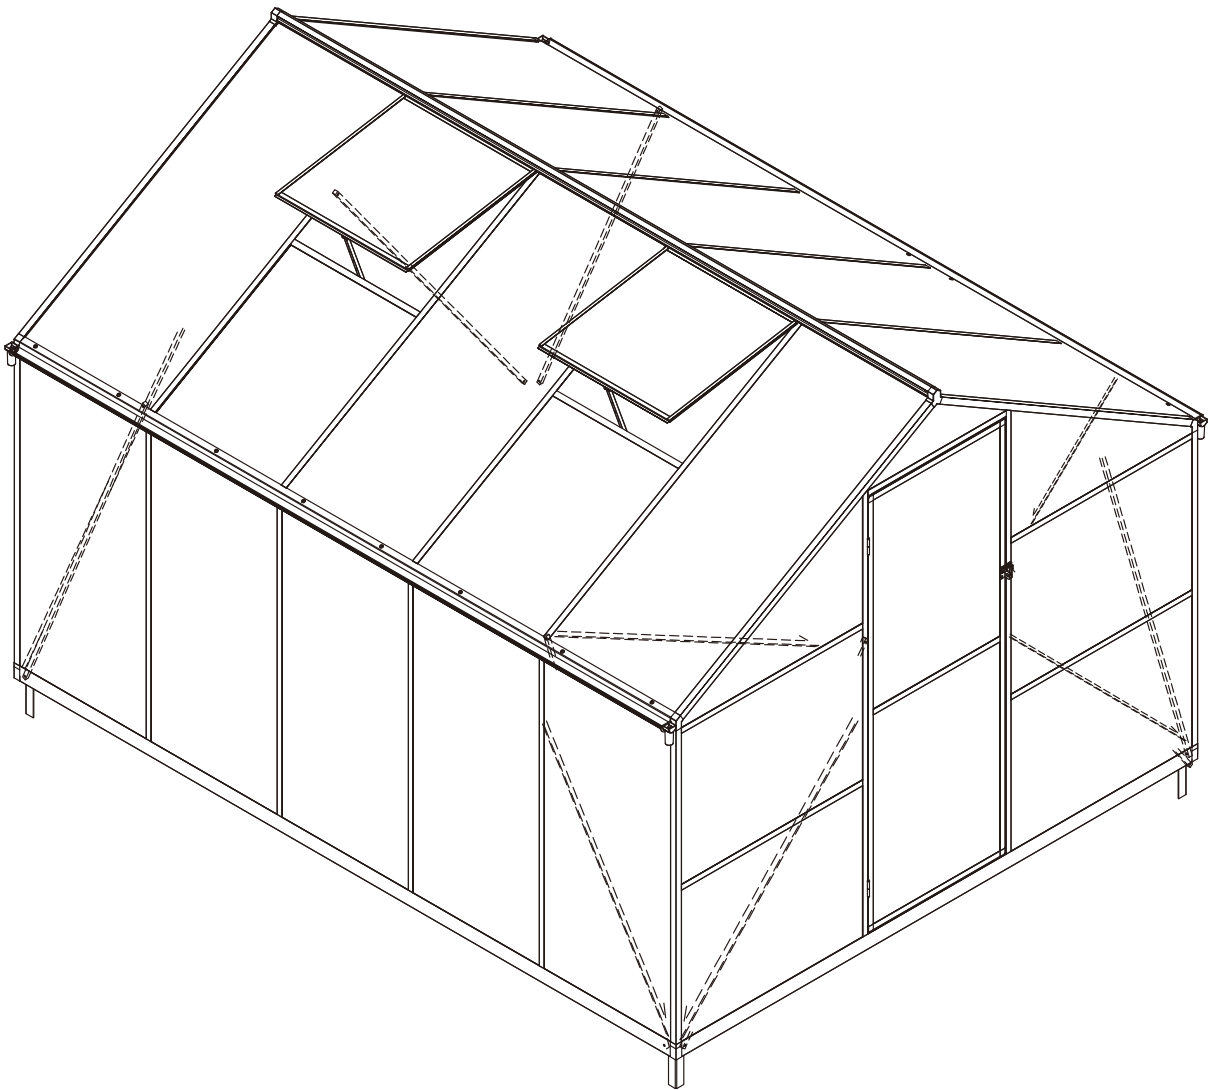


Aluminium Greenhouse

ASSEMBLY INSTRUCTIONS

8X10 ft Greenhouse



 **EASYHAWKservice@outlook.com**

Our team is available 24/7 to help with any product questions. Contact us anytime!

STOP

Missing Parts, Questions on Assembly?

Email me: EASYHAWKservice@outlook.com

Do not return to dealer they are not
equipped to handle your requests.

We will reply to you within 1 business day.

Get Ready: Think Ahead!

Prep Work: Before you dive into setting up your new metal carport- make sure to check out your local building codes. These codes might have specific guidelines on footings, placement, and other key details. Don't skip this step!

Understand the Guide: We've put together detailed instructions for you. Take some time to go through them. They're packed with crucial info and handy tips that'll make your installation smoother and even more satisfying.


Tools & Supplies: You're going to need some basic tools and materials. The anchoring method and foundation type you choose will determine what exactly you'll need. So, make a comprehensive list- based on your plan to stay organized.

Before You Start Assembling











Instruction Manual: This manual's got everything you need for setting up your carport. Go through all the instructions before starting. As you assemble, following the steps in order is key to getting it right.











Check Your Parts: Make sure you've got all the necessary parts and the right quantities as listed. They should all be in your package- neatly packed within the carton. We've thrown in some extra fasteners too, just to make things easier for you.

Exploded View Diagram: This diagram shows all the parts (except screws and bolts). Look over everything before you start. Getting familiar with the hardware and fasteners now will save you time and hassle during installation.











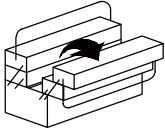
					
Toolbox	Hammer	Glove	Power drill	Tape Measure	Bitbits

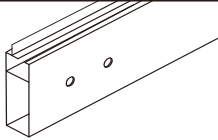
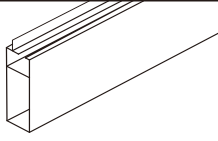
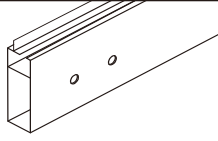
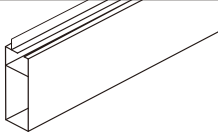
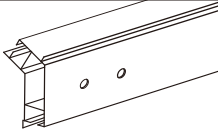
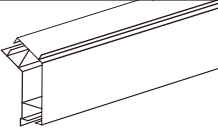
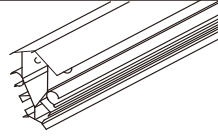



Aluminum Parts :

No.	Picture	Qty.	USE
A1-1		x2	STEP 1
A1-2		x2	STEP 1
A2-1		x2	STEP 1
A2-2		x2	STEP 1
A3-1		x2	STEP 13
A3-2		x2	STEP 13
A4		x2	STEP 14
A5-1		x2	STEP 3
A5-2		x2	STEP 3
A6-1		x1	STEP 7

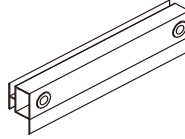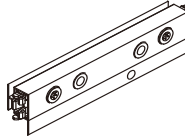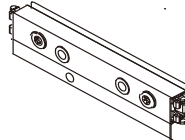No.	Picture	Qty.	USE
A6-2		x1	STEP 7
A7-1		x1	STEP 12
A7-2		x1	STEP 12
A8-1		x1	STEP 4
A8-2		x1	STEP 4
A9		x1	STEP 6
A10-1		x2	STEP 16
A10-2		x2	STEP 16
A11-1		x1	STEP 8
A11-2		x1	STEP 9

Aluminum Parts :

No.	Picture	Qty.	USE
A12		x4	STEP 5 2pcs STEP 10 2pcs
A13		x4	STEP 6 2pcs STEP 11 2pcs
A15		x8	STEP 15
A16		x4	STEP 16
A17		x2	STEP 16
A18-1		x1	STEP 23
A18-2		x1	STEP 23
A19		x1	STEP 23
A20		x2	STEP 22
A21-1		x2	STEP 17
A21-2		x2	STEP 17
A22		x4	STEP 2
A23		x8	STEP 26

No.	Picture	Qty.	USE
A24		x2	STEP 2
A25		x4	STEP 27
A26		x4	STEP 1
A27		x2	STEP 13
A28		x1	STEP 14
A30-2		x2	STEP 14
A31		x1	STEP 10
A32		x8	STEP 27
A33		x2	STEP 7 STEP 12 1pc
A34		x2	STEP 14
A35		x2	STEP 6 1pc STEP 11 1pc
A36		x4	STEP 26
A37		x8	STEP 28



Plastic Parts:

No.	Picture	Qty.	USE
H1		x4	STEP 2
H2		x2	STEP 6 1pcs STEP 11 1pcs
H3		x2	STEP 7 1pc STEP 12 1pc

No.	Picture	Qty.	USE
H4		x2	STEP 24
H5		x2	STEP 17
H20		x4	STEP 17
H21		x4	STEP 6 2pcs STEP 11 2pcs


Hardware:

No.	Picture	Qty.	Size
H6		x22	M6x30
H7		x1	
H8		x86	M6x12
H9		x30	M6
H11		x20	ST4x8
H12		x20	ST5x16
H13		x2	M4x 35

No.	Picture	Qty.	Size
H14		x1	
H15		x1	
H16		x2	
H17		x4	
H18		x12	M6x20
H19		x2	
A30-1		x2	

Twin PC Board:

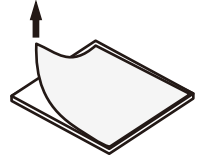
The white film faces
outwards if applicable.



No.	Picture	Qty.	Size	USE
B		B1	4PCS	STEP 4 2pcs STEP 5 2pcs
		B2	4PCS	STEP 8 1pc STEP 9 1pc STEP 11 2pcs
		B3	10PCS	STEP 15
		B4	8PCS	STEP 16
		B5	2PCS	STEP 16
		B6	2PCS	STEP 23
		B7-1	1PC	STEP 6
		B7-2	1PC	STEP 6
		B8	1PC	STEP 7
		B9-1	1PC	STEP 12
		B9-2	1PC	STEP 12
		B10	1PC	STEP 11
		B11	2PCS	STEP 14
		B12	1PC	STEP 10


Step 1

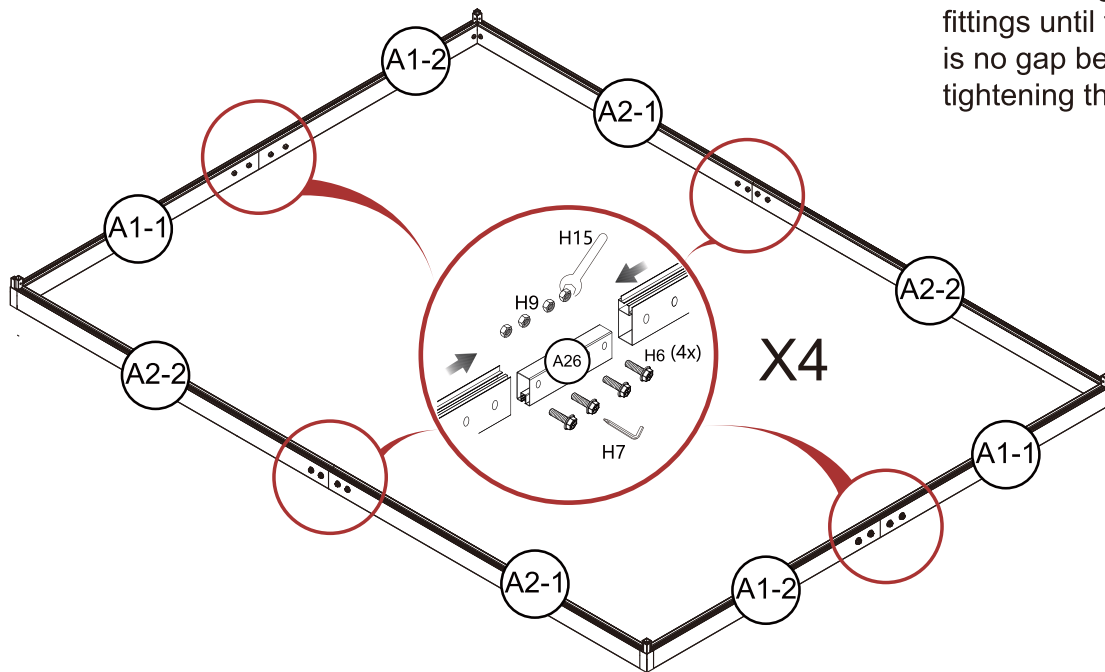Please merge the fittings until there is no gap before tightening the screws.




 M6x30	H6	x16
 M6	H9	x16

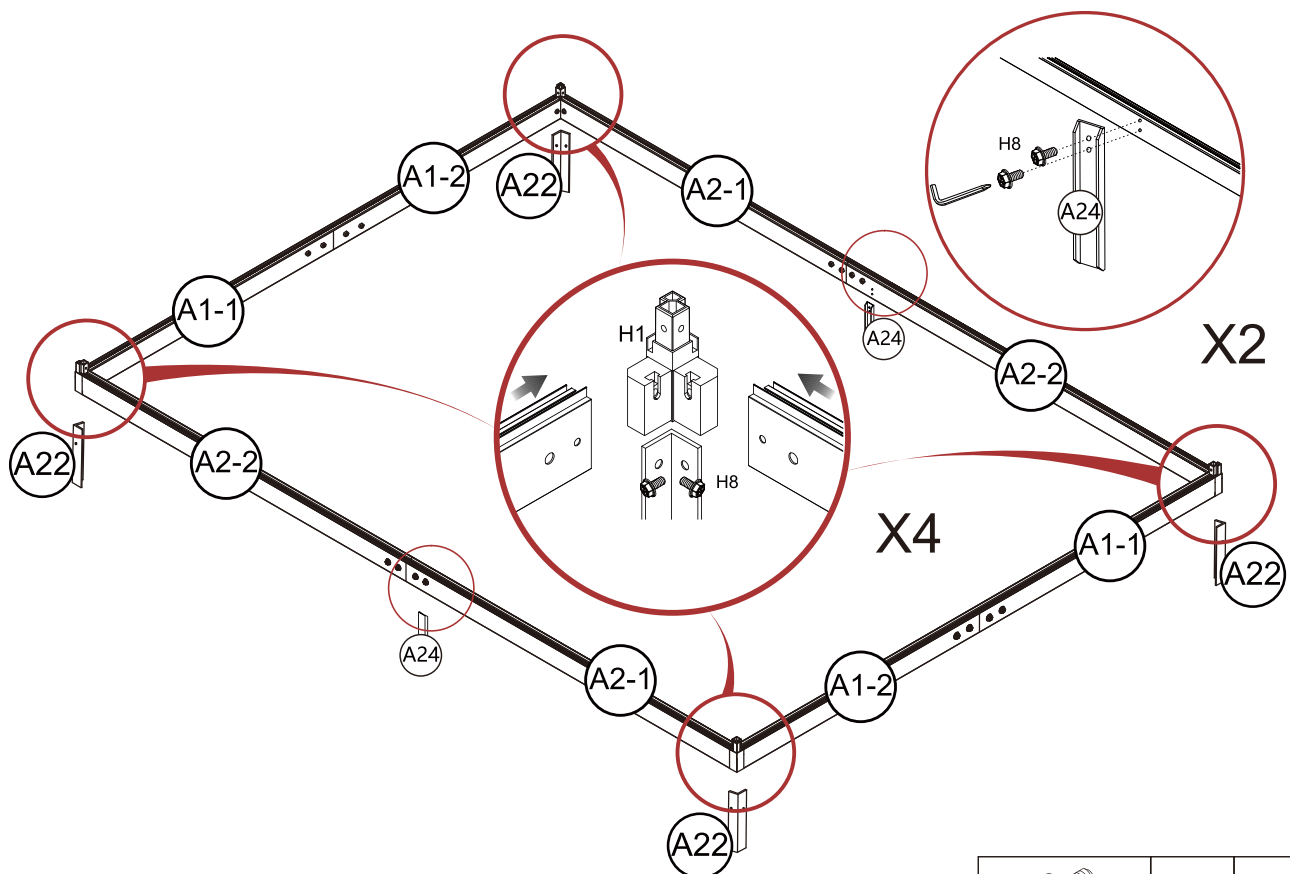Step 2




 M6x12	H8	x12
---	----	-----

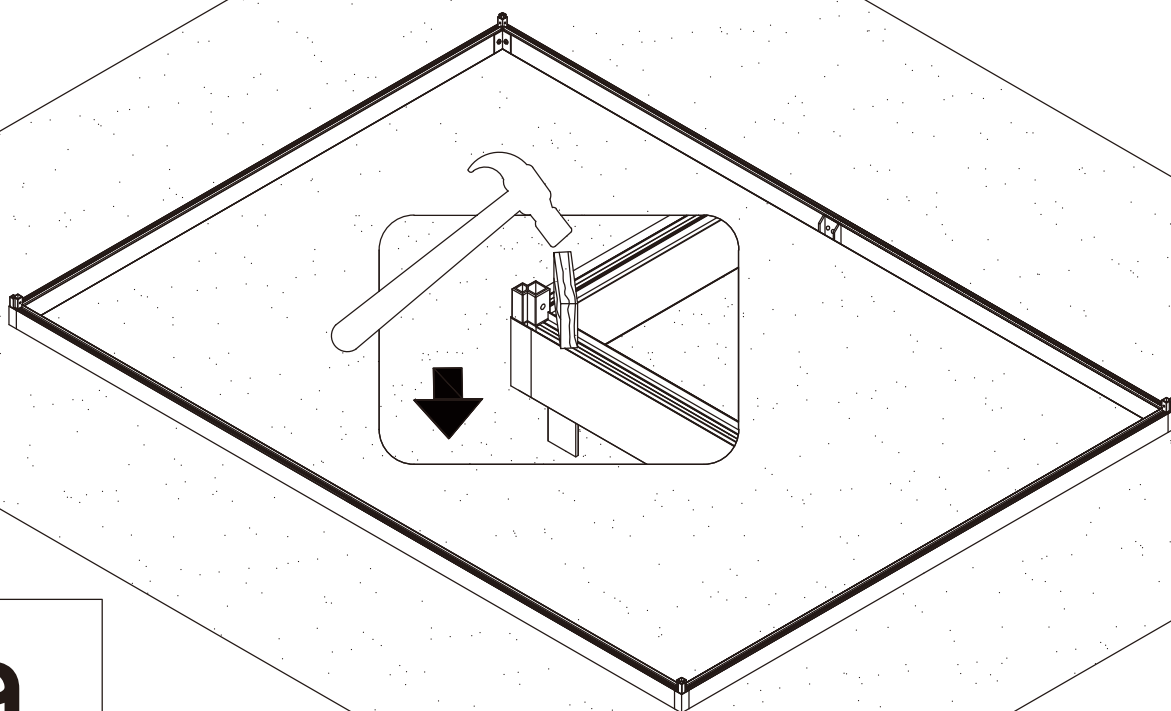


3

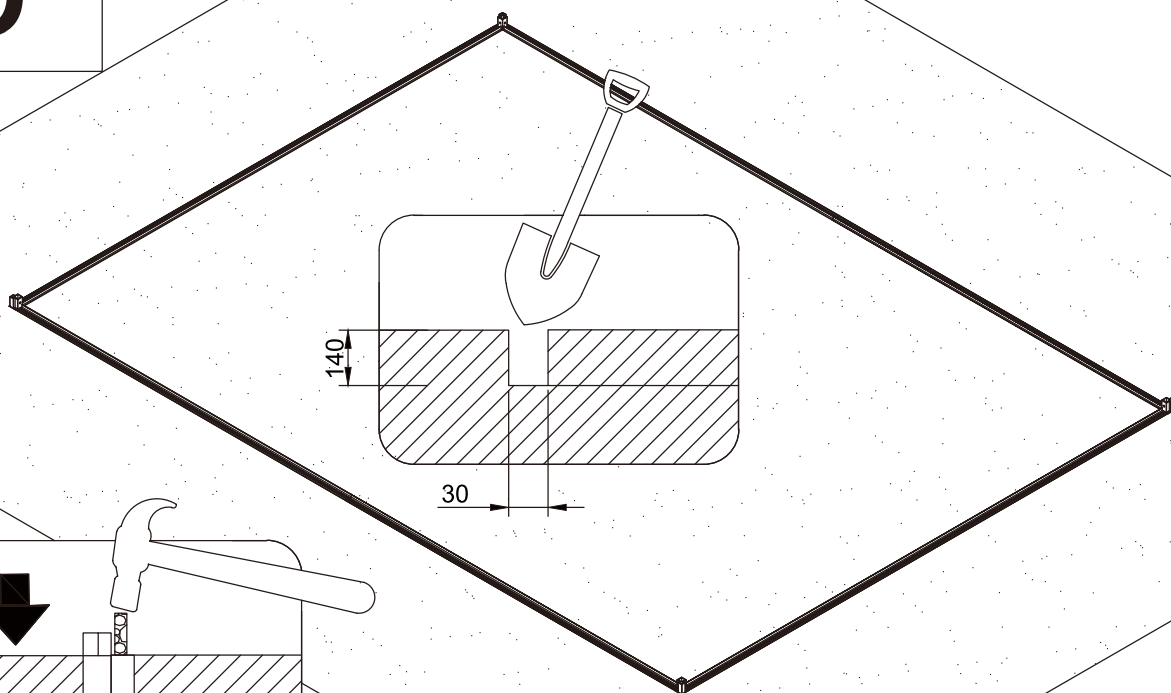
a
or
b



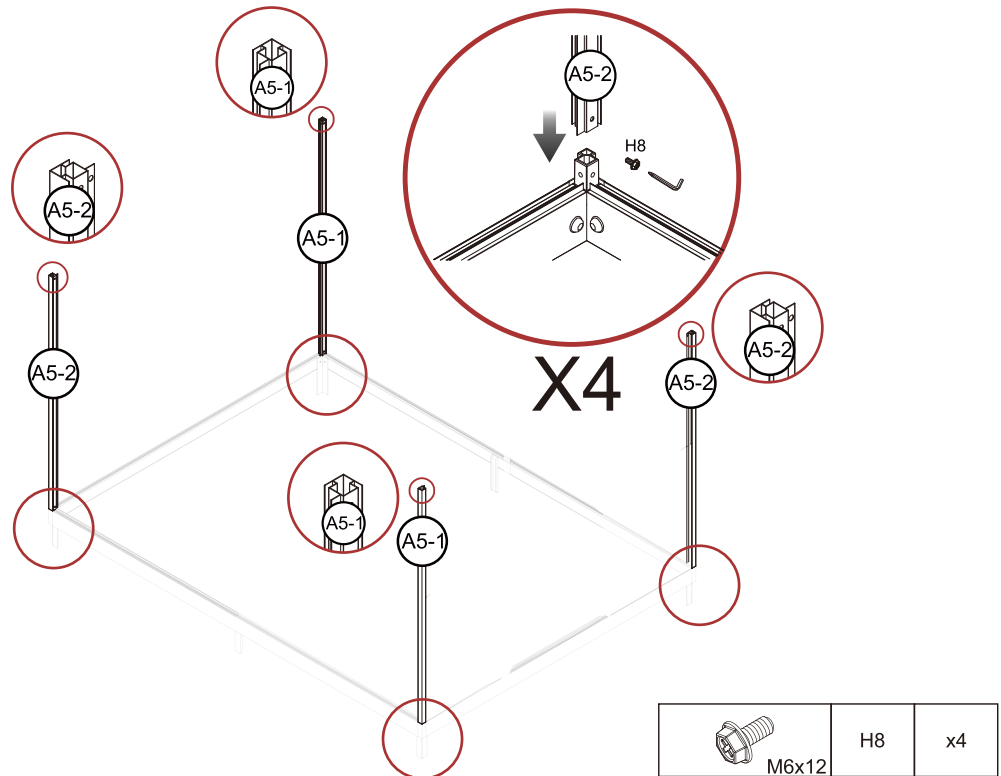
STEP 3



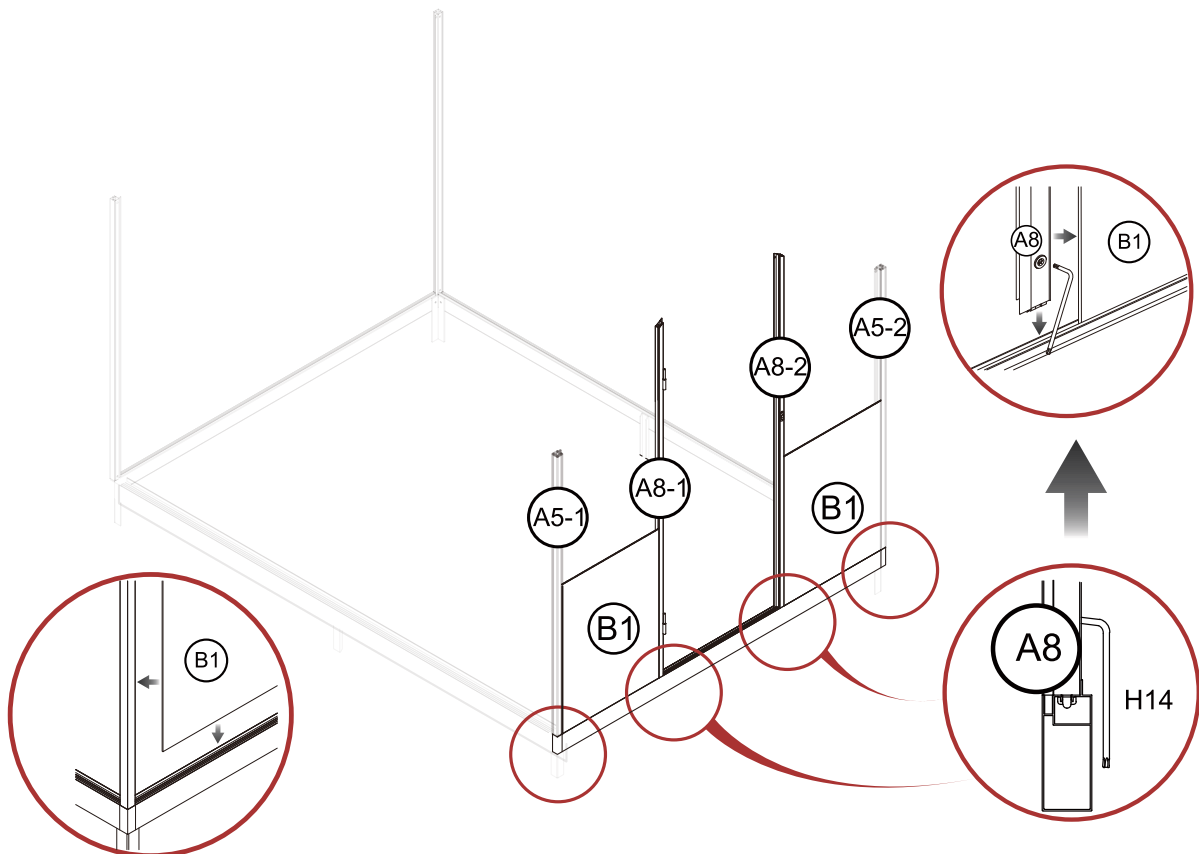STEP 4




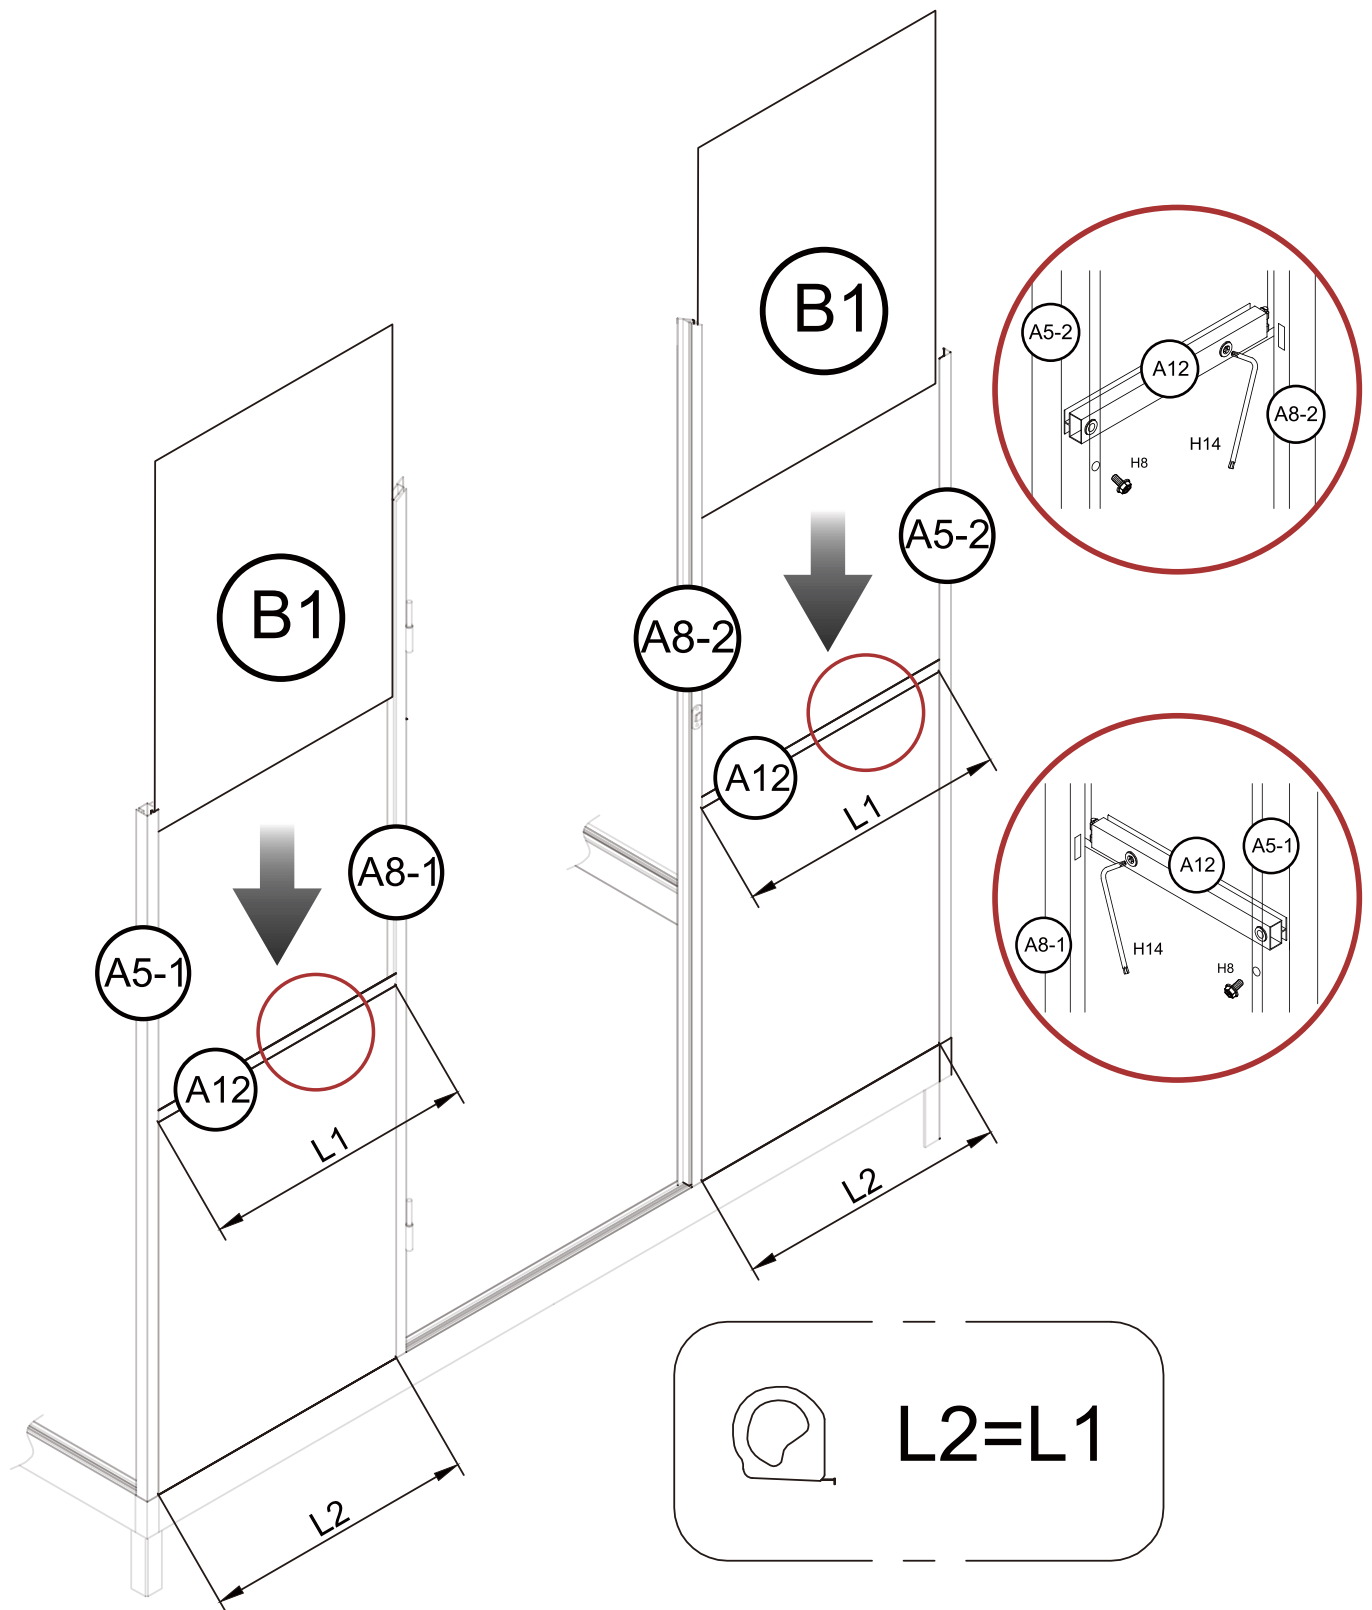STEP 5





	H8	x2
M6x12		

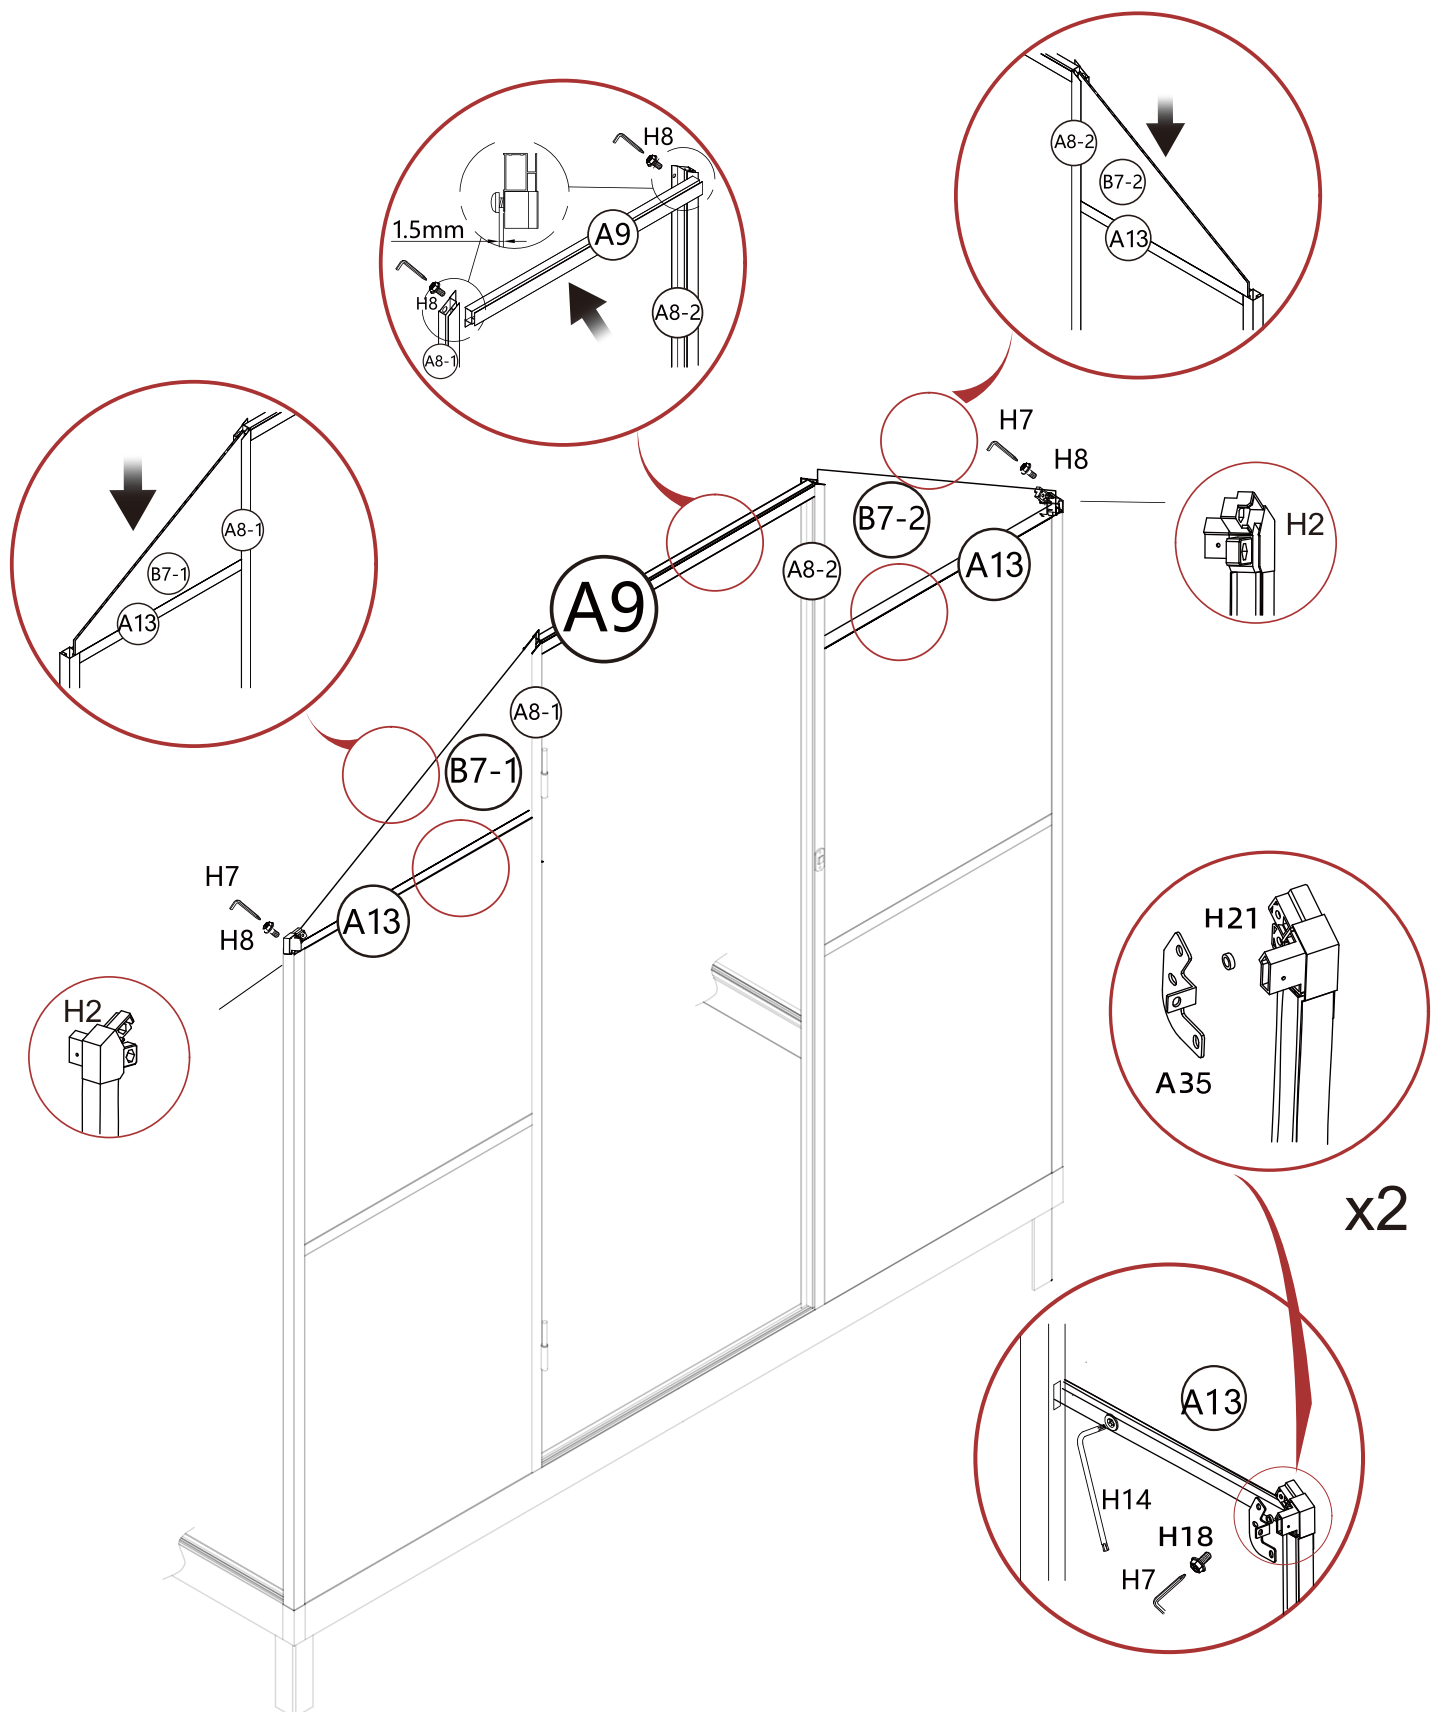Step 6






 M6x12	H8	x4
 M6x20	H18	x2

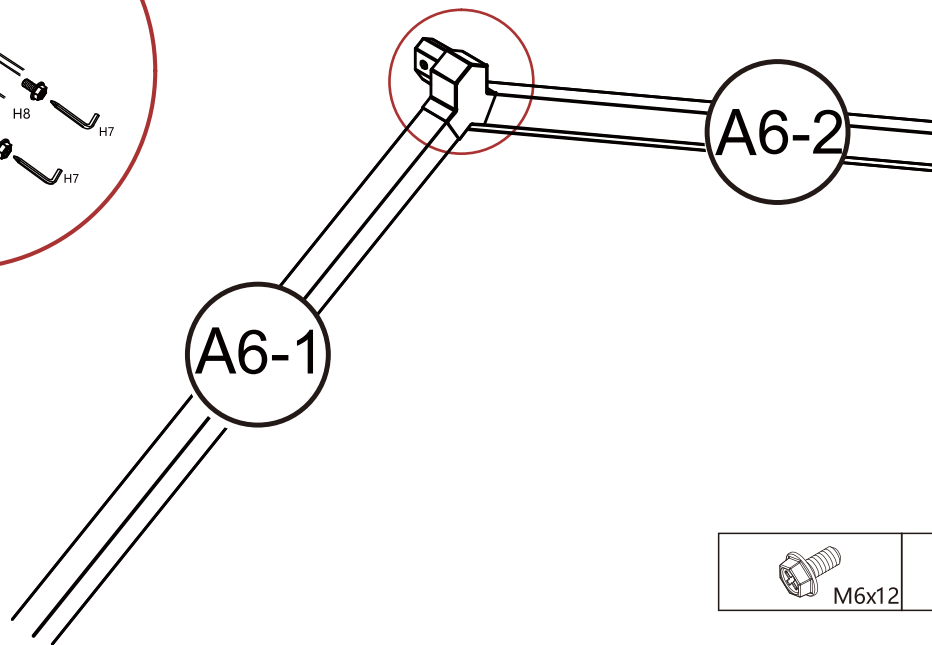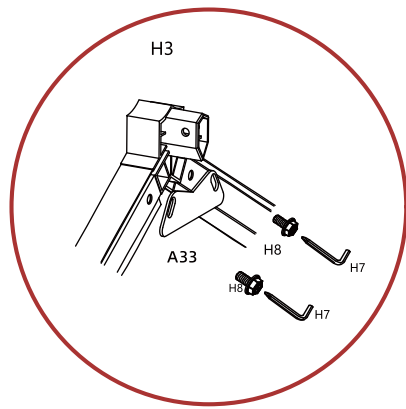STEP 7




	M6x12	H8	x2
---	-------	----	----

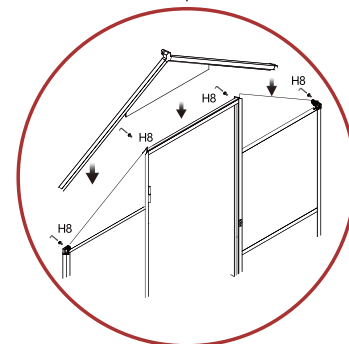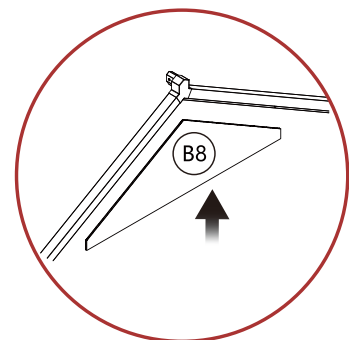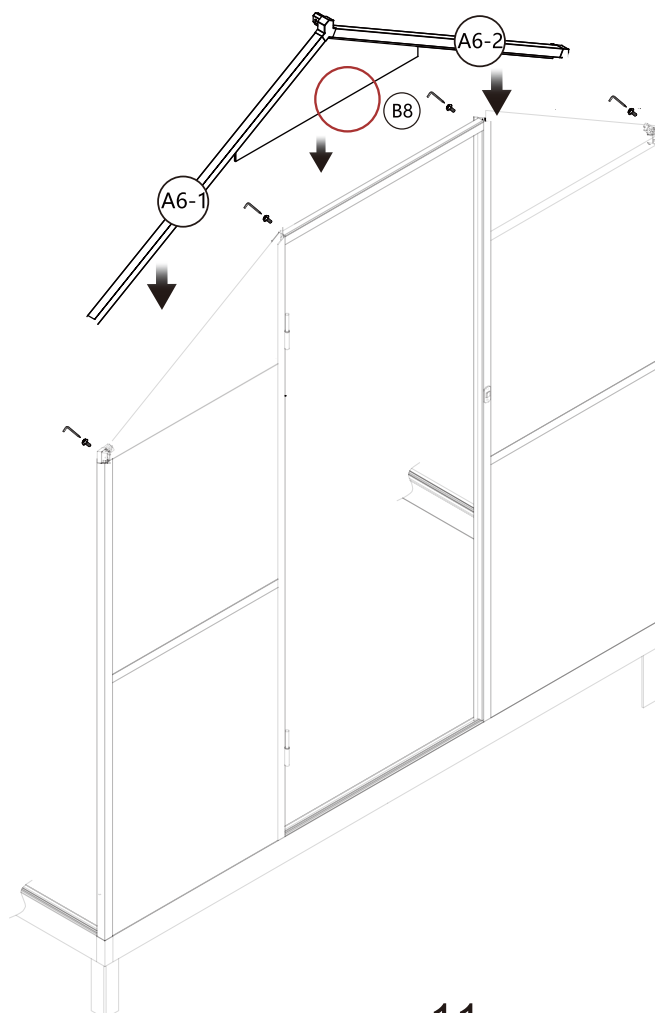


	M6x12	H8	x4
---	-------	----	----

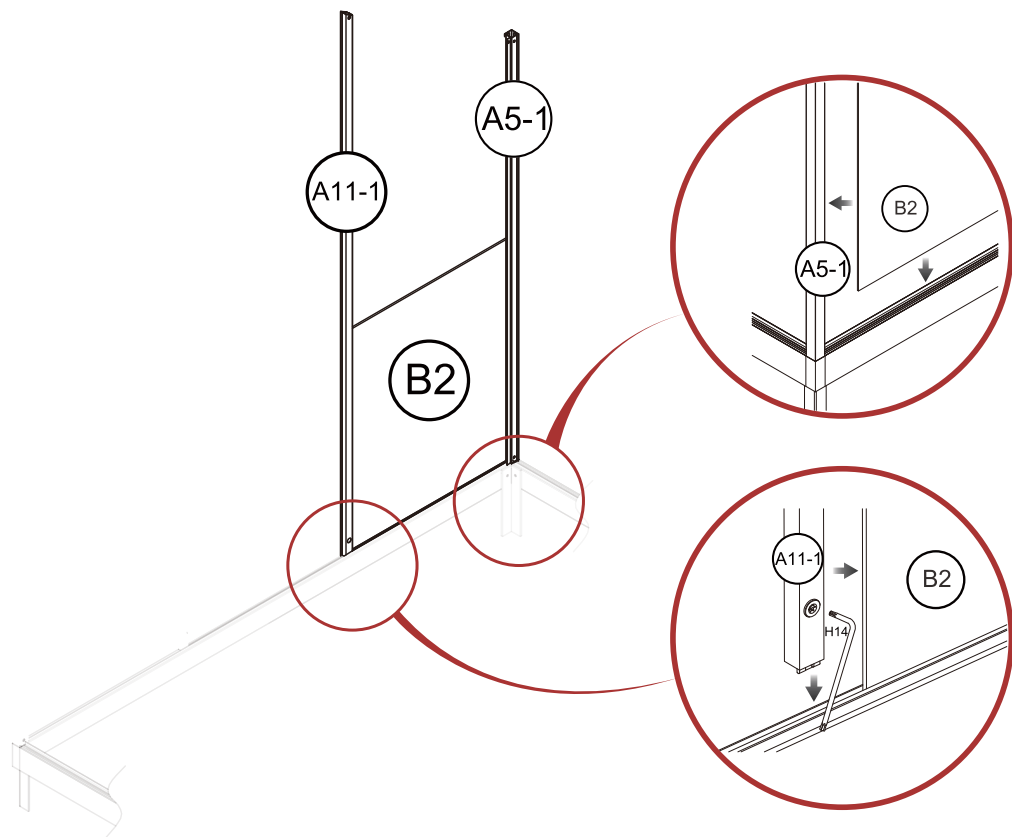
STEP 8



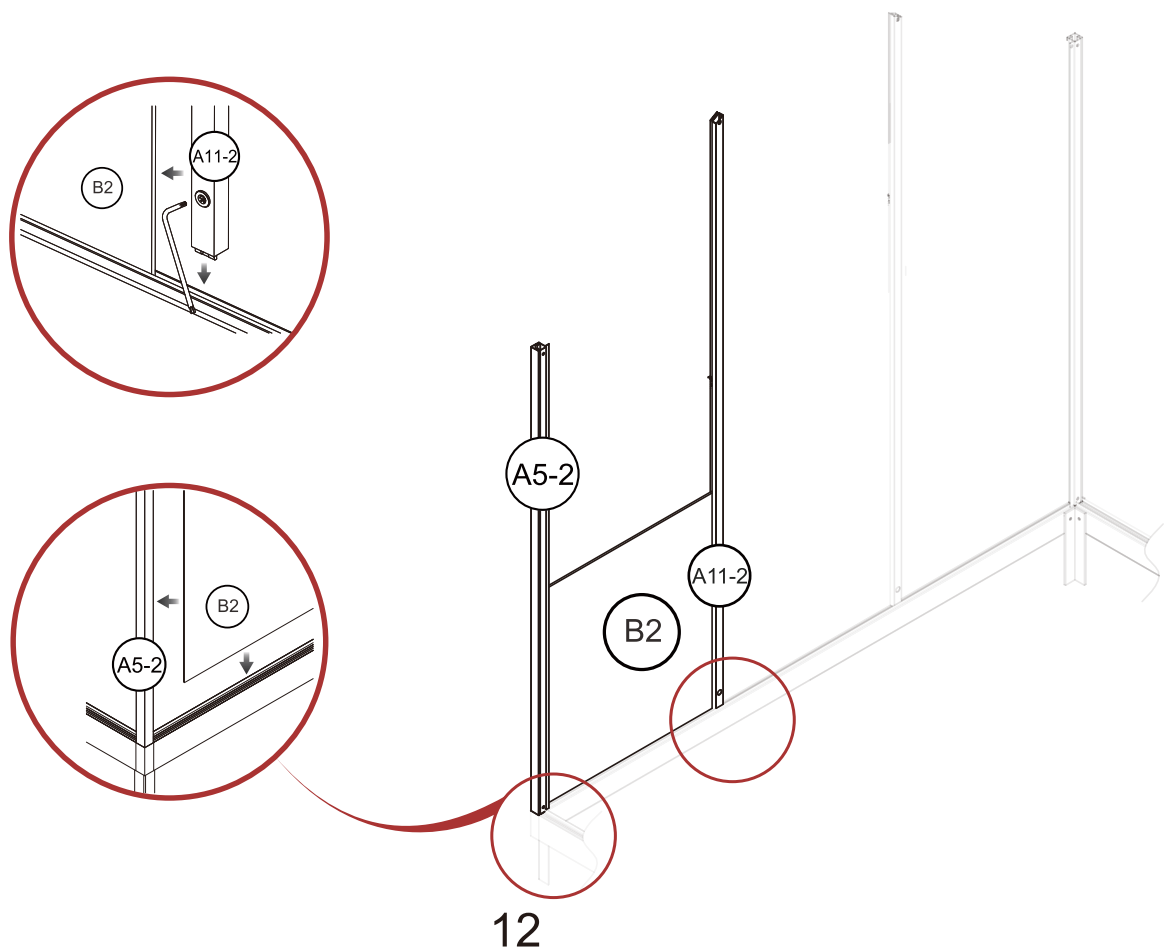STEP 9




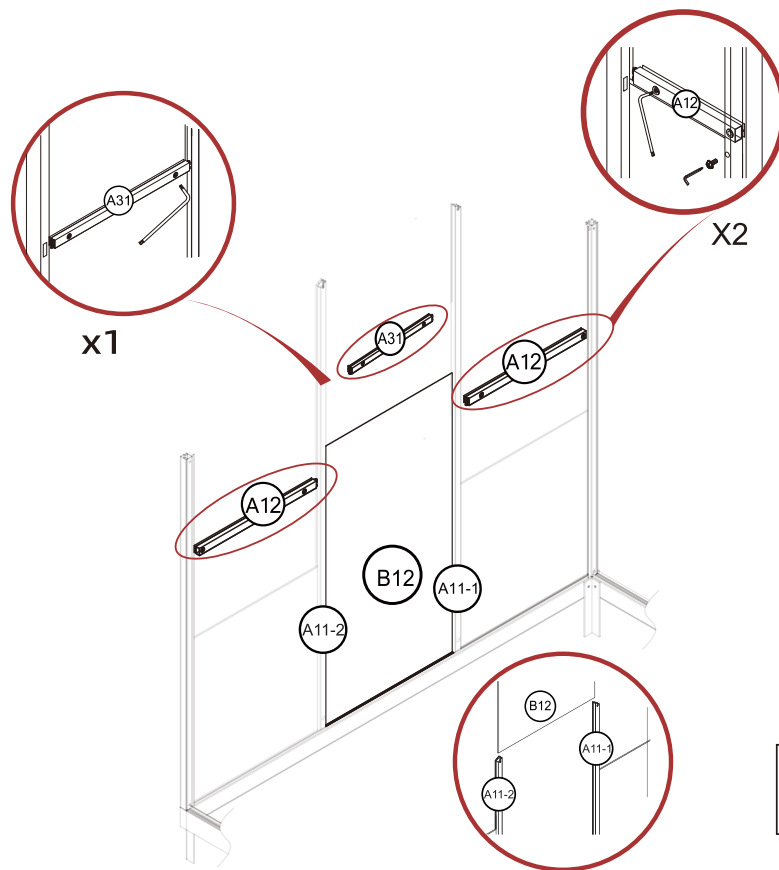STEP 10




	H8	x2
M6x12		

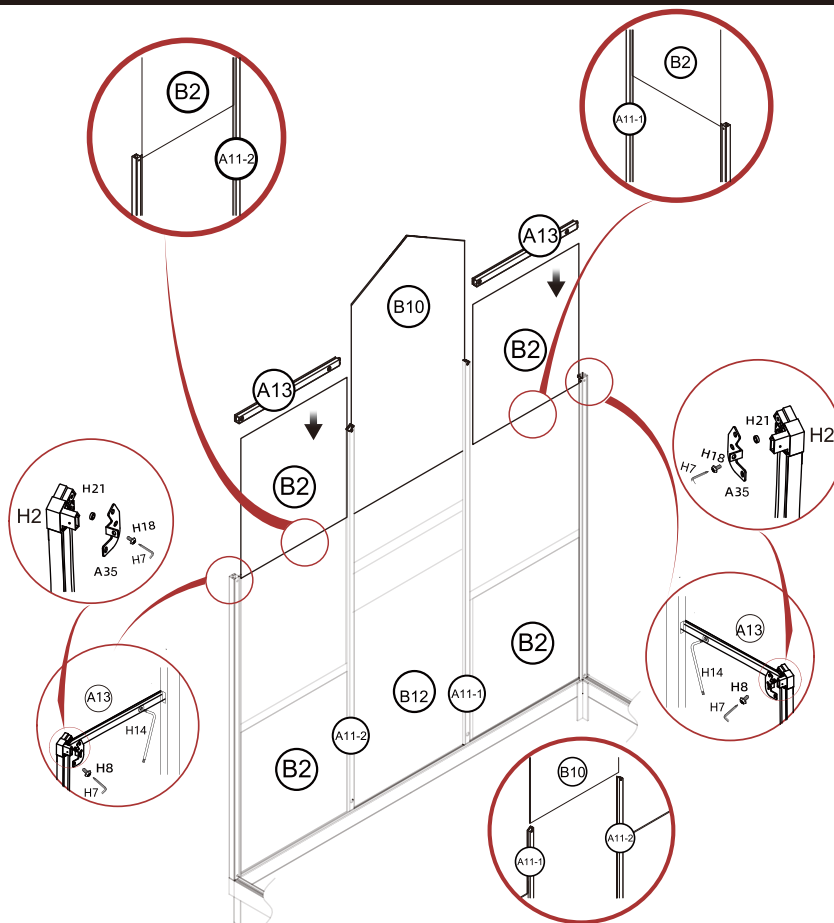STEP 11




	H8	x2
M6x12		
	H18	x2
M6x20		

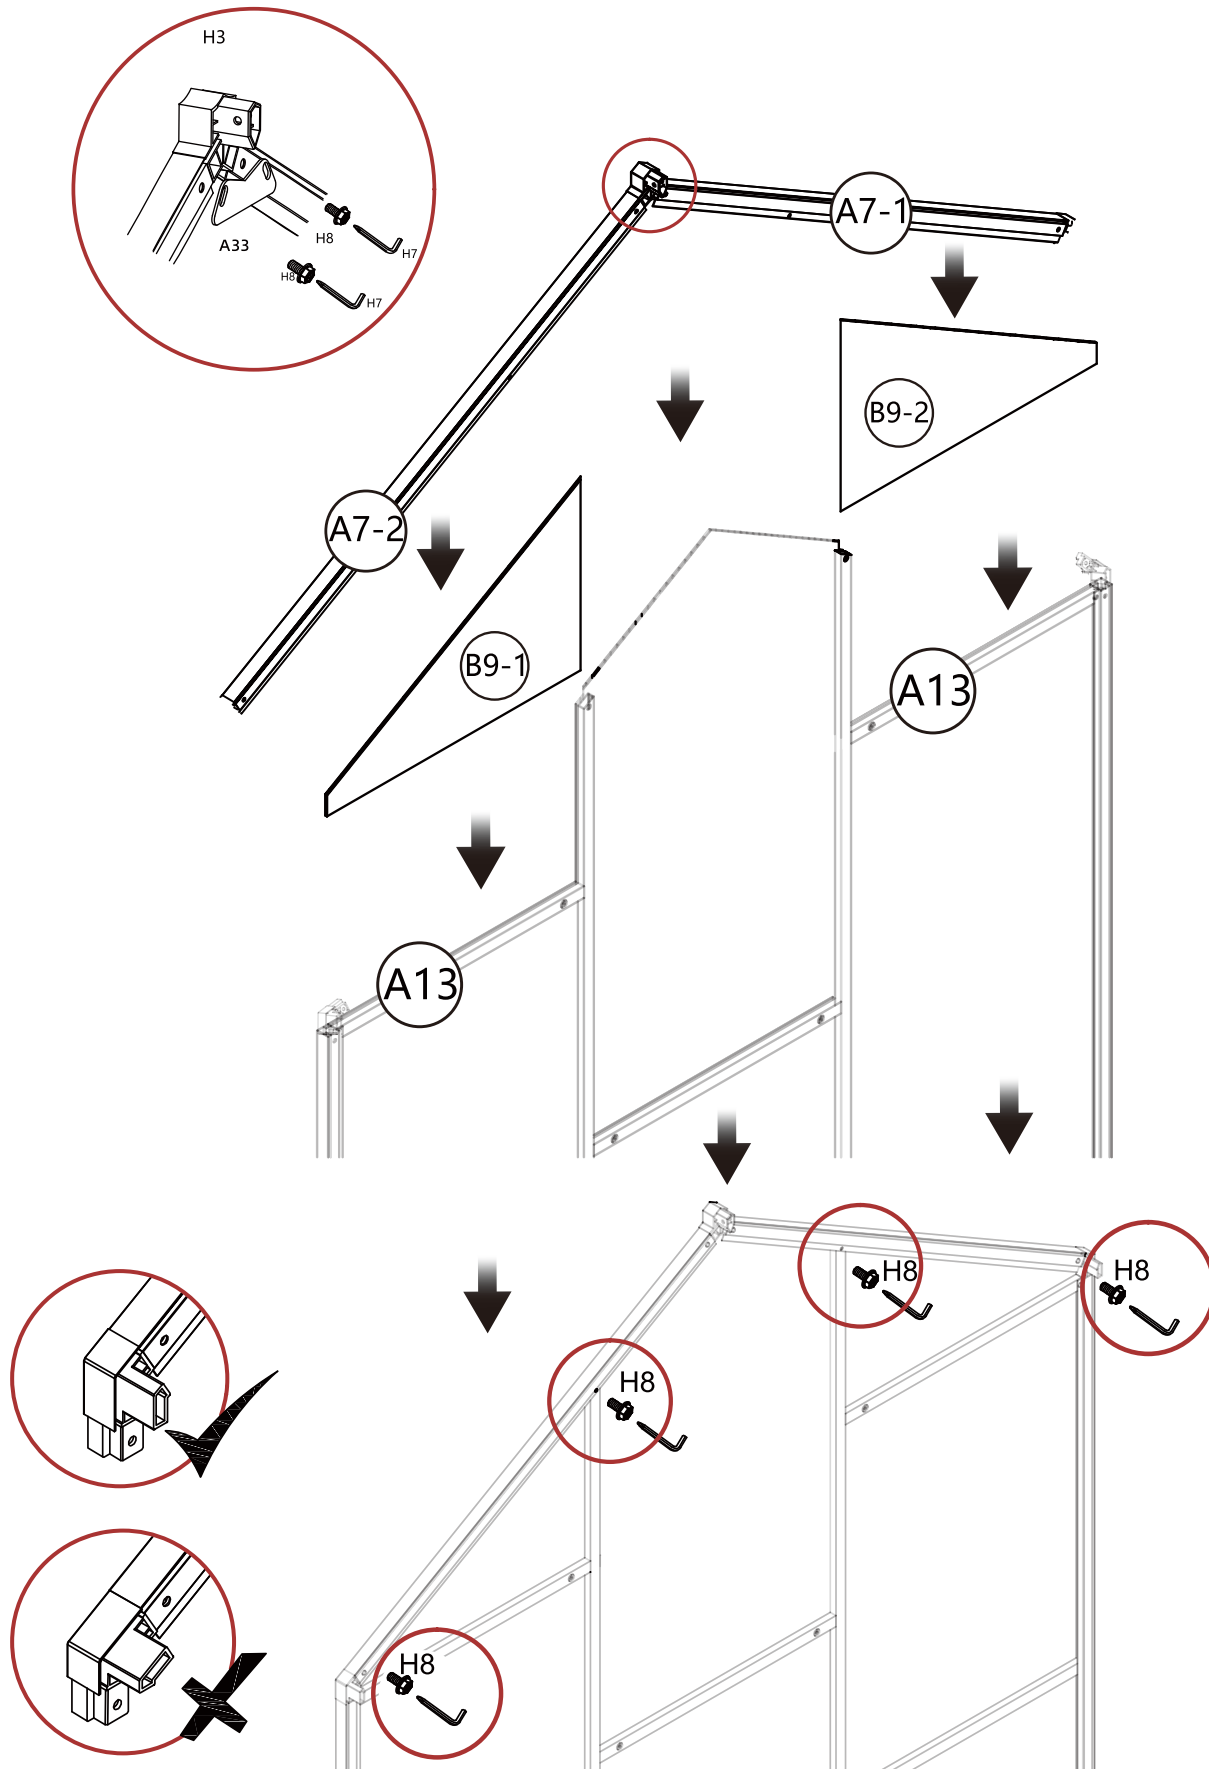STEP 12






	H8	x6
M6x12		

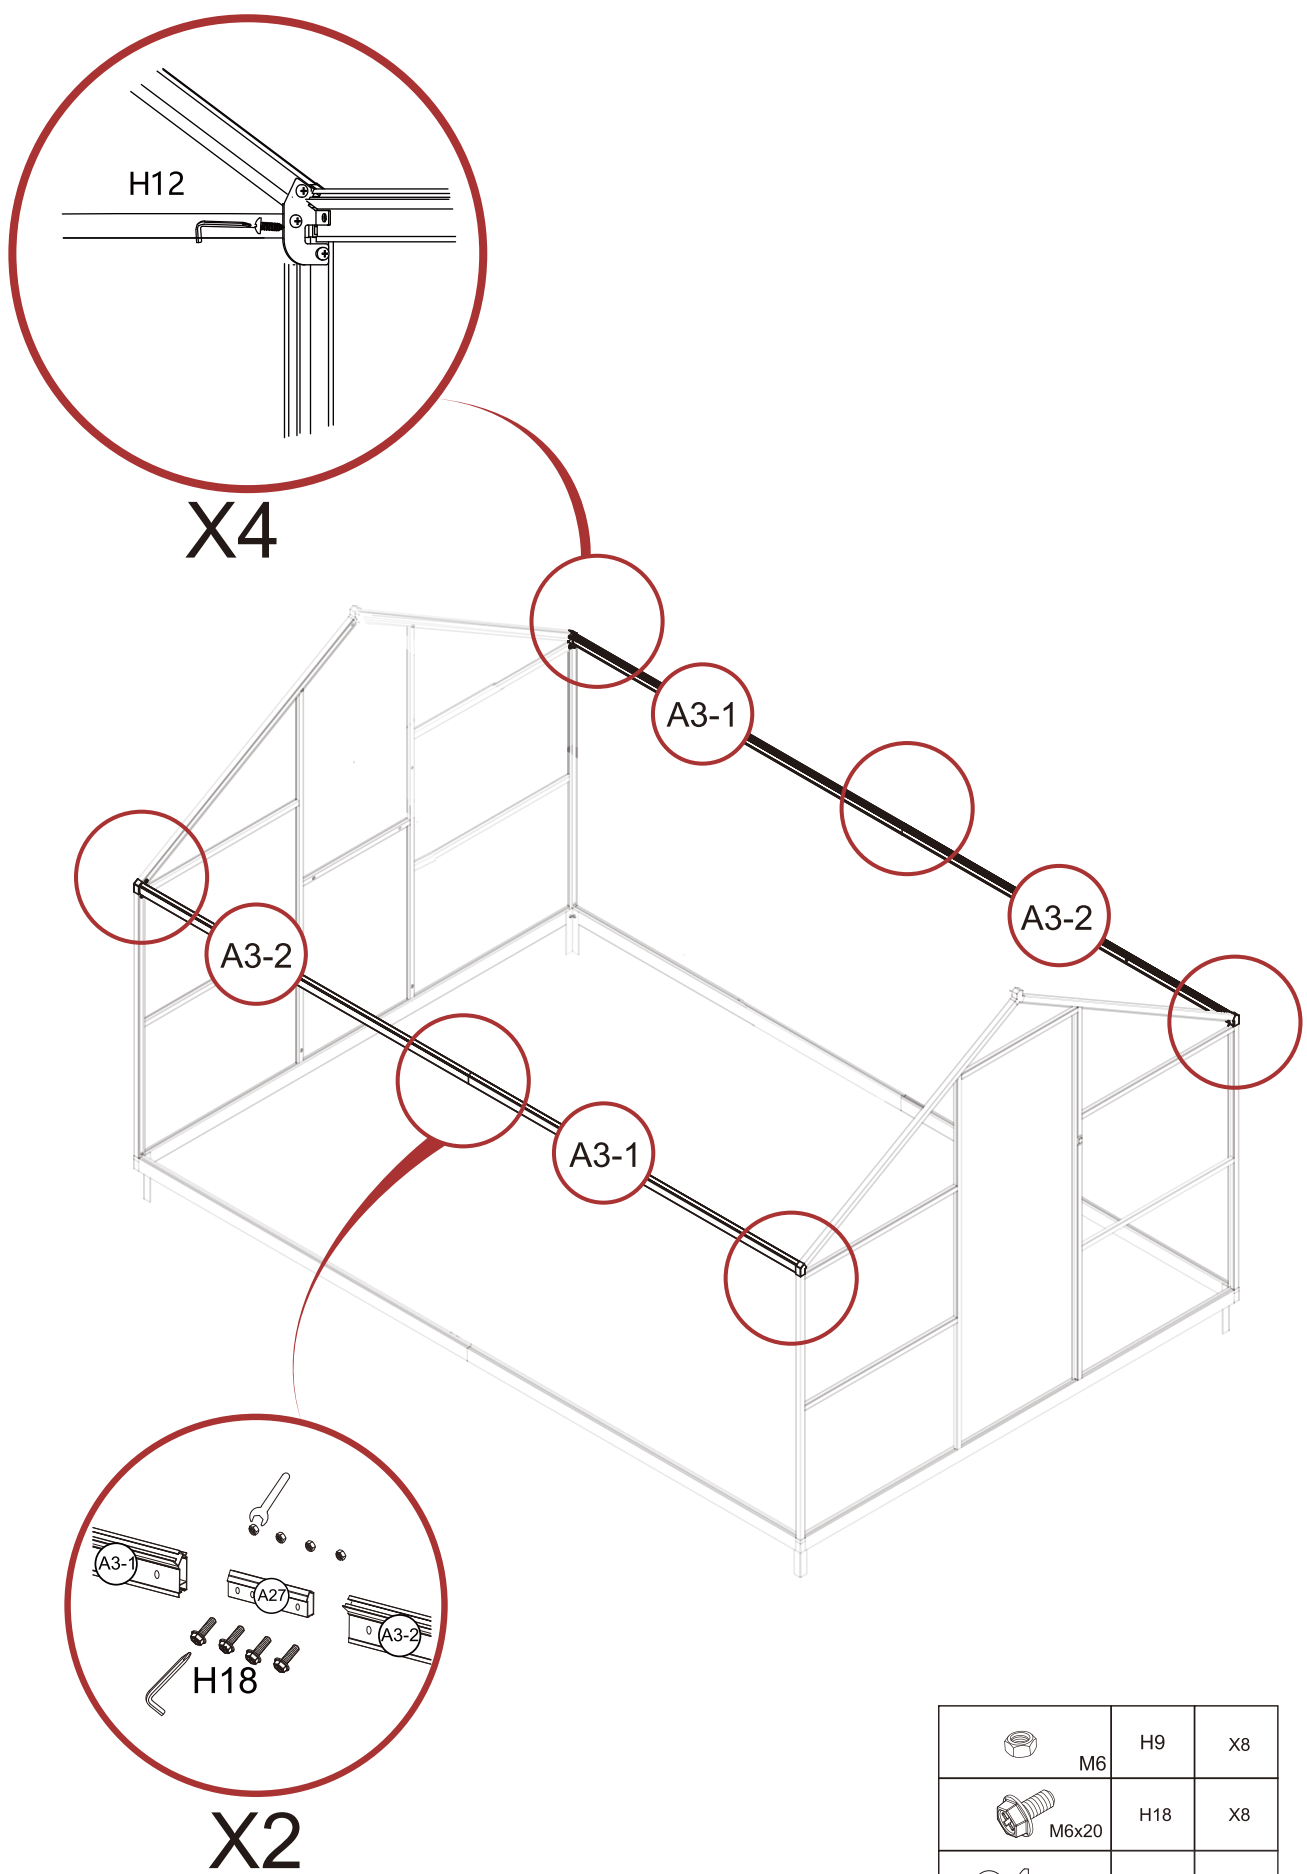STEP 13




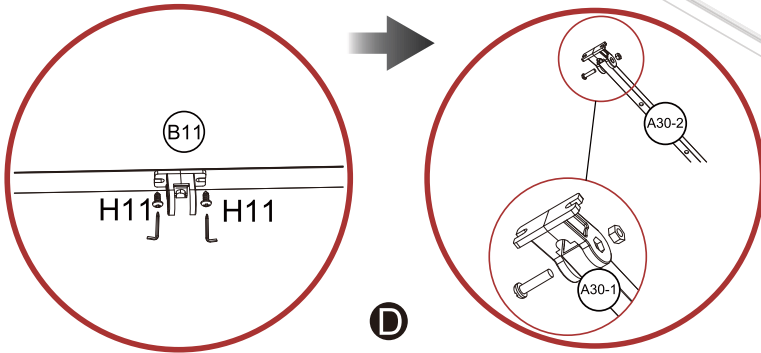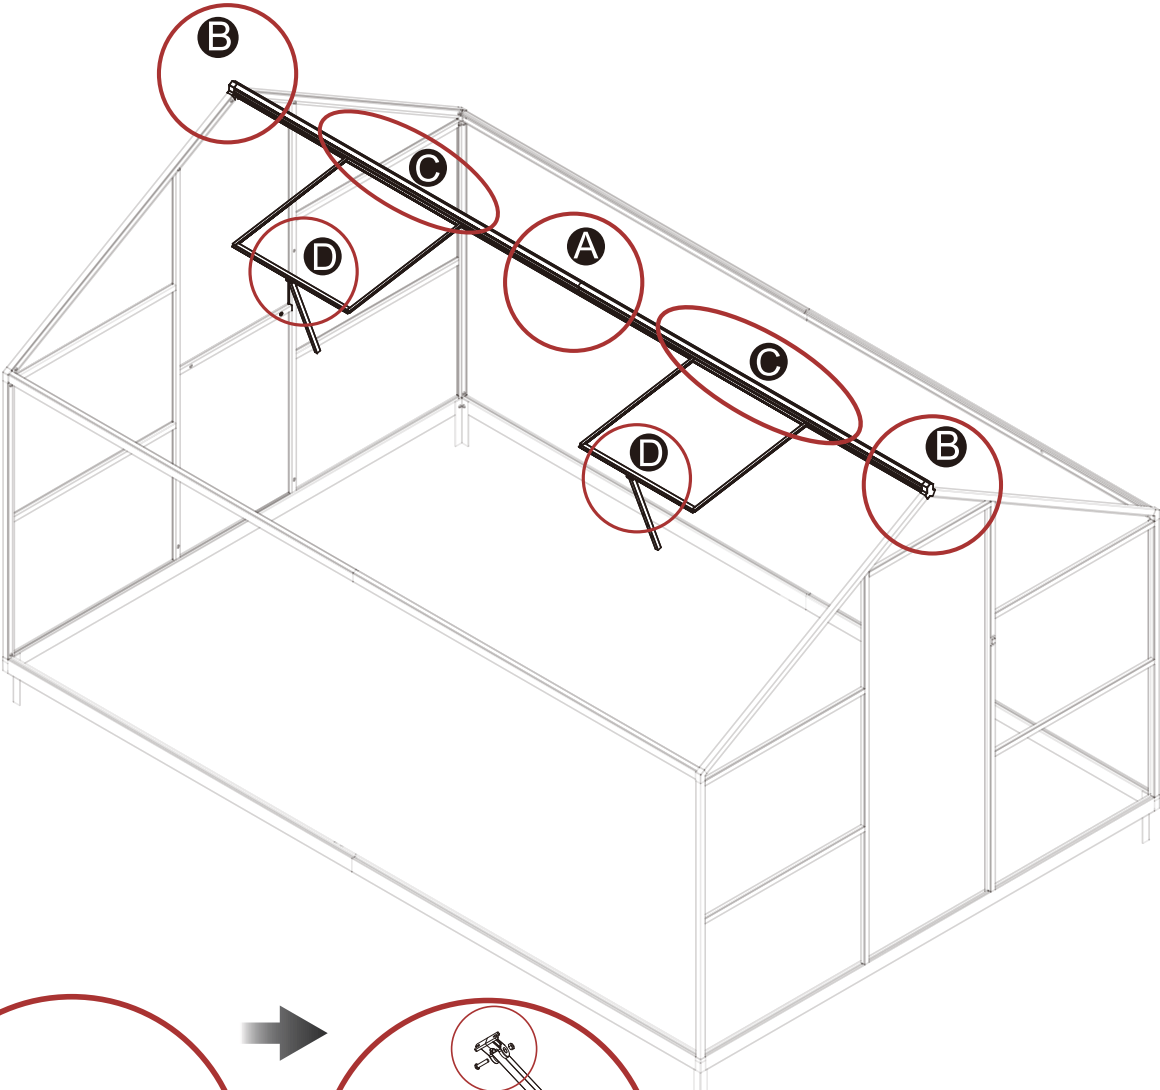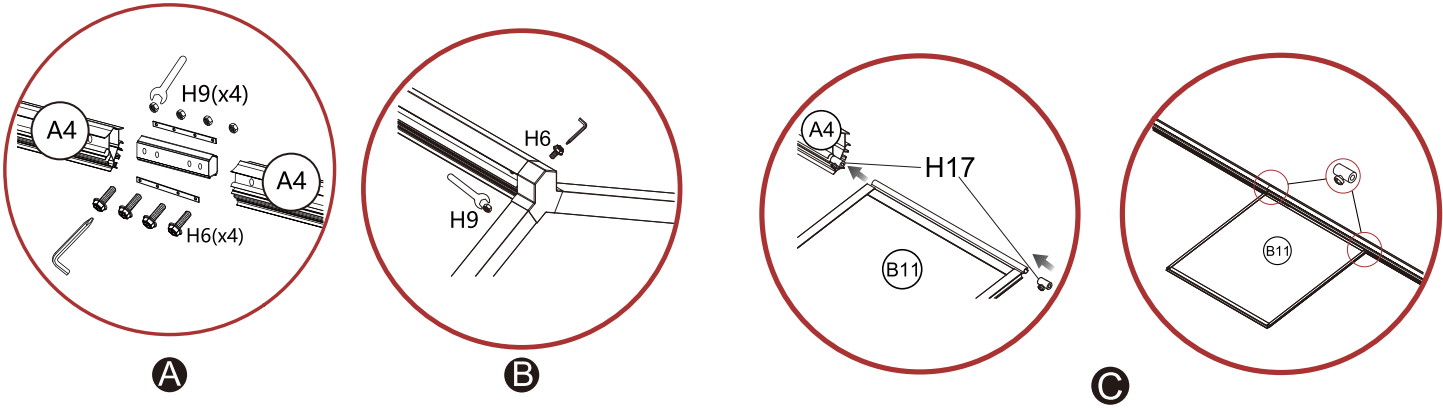STEP 14





	H9	X6
M6x30	H6	X6
4x8	H11	X4

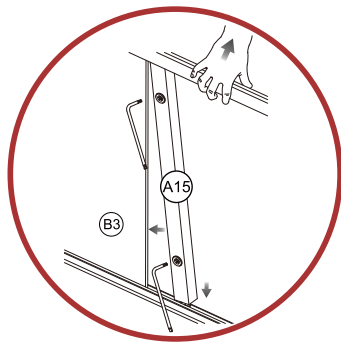STEP 15




X8

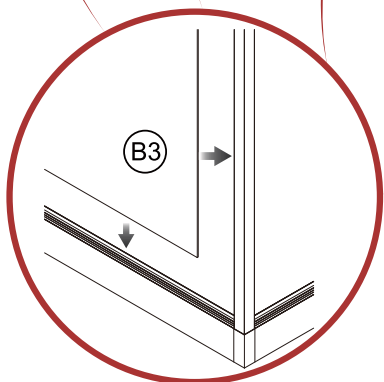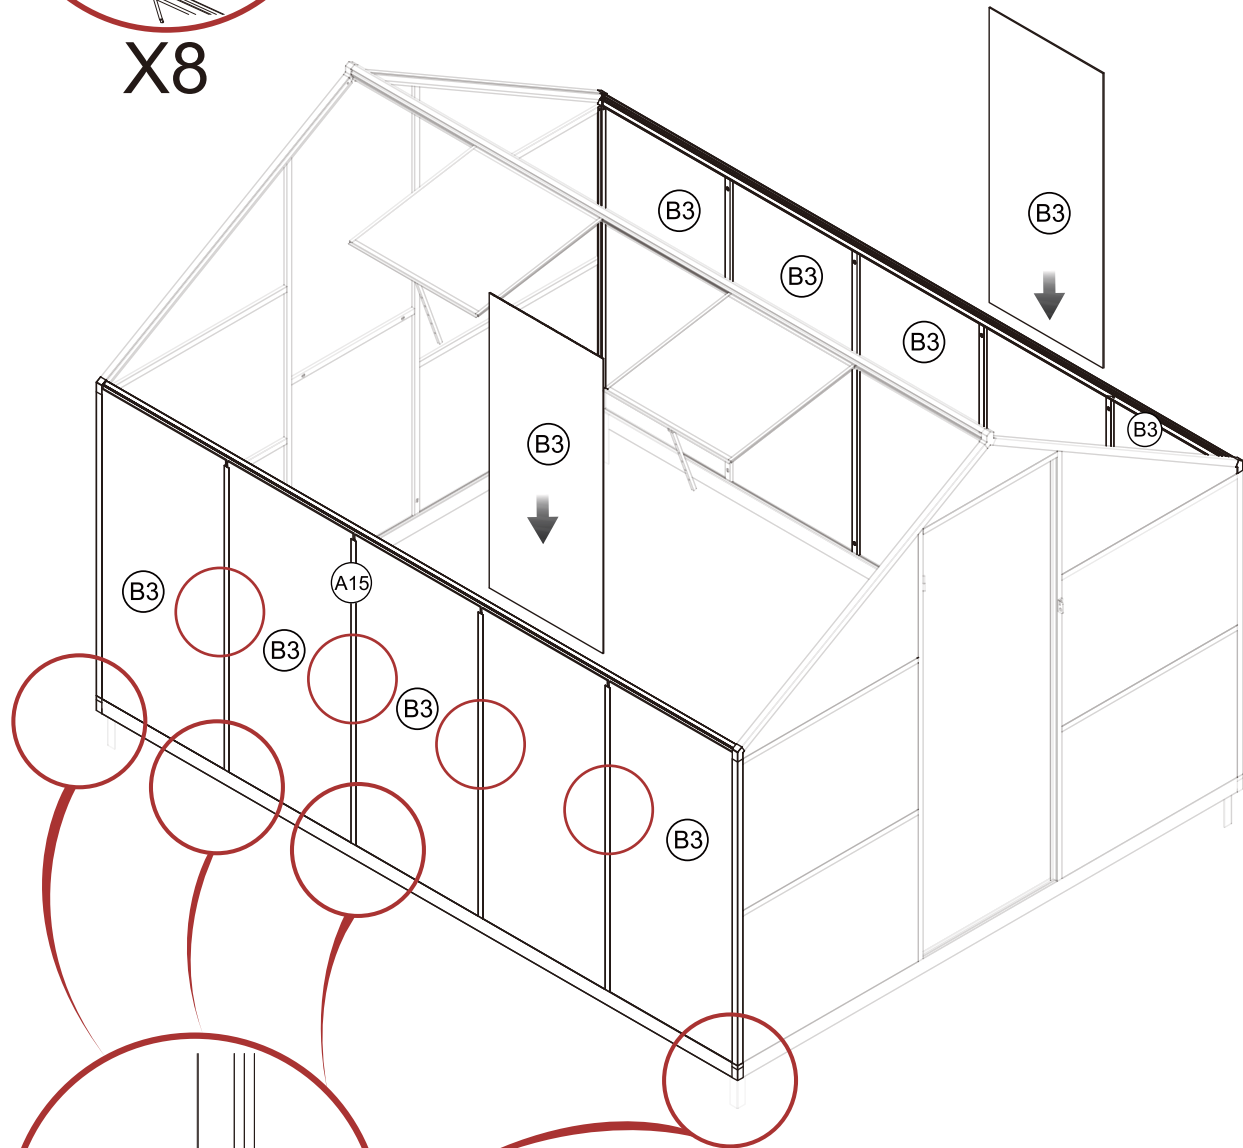


X10

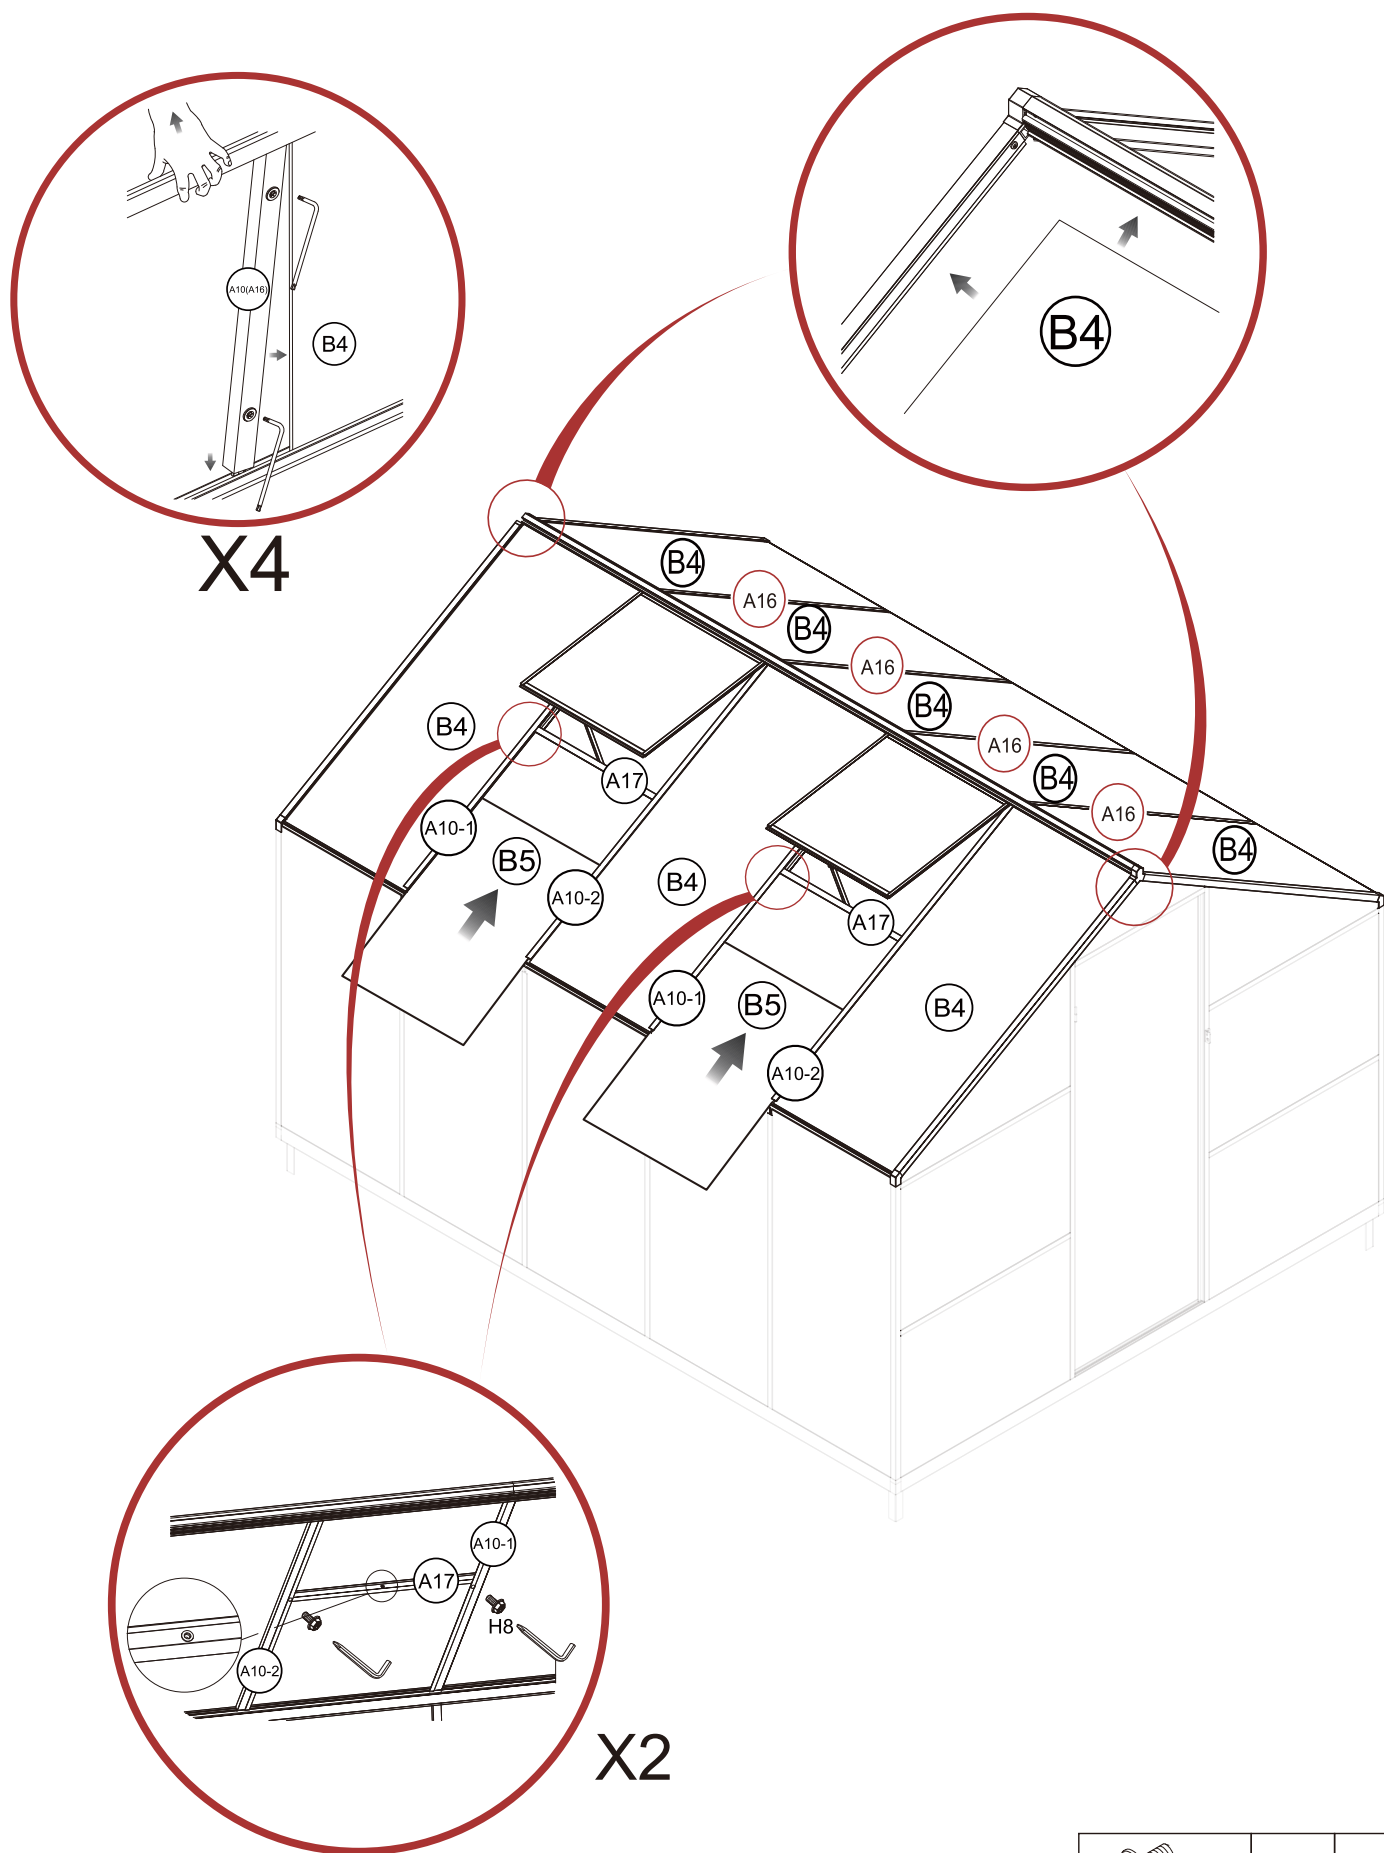STEP 16




	M6x12	H8	X4
---	-------	----	----

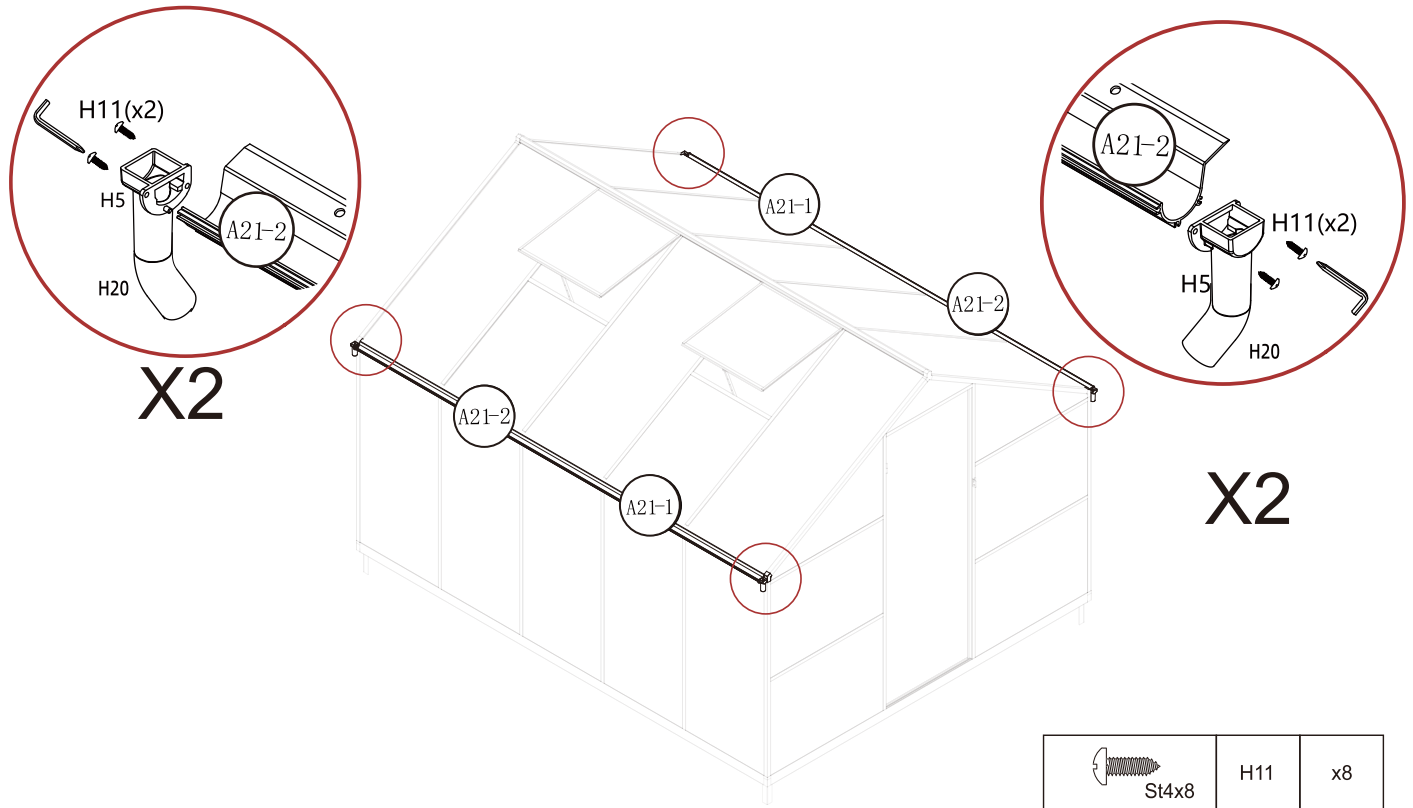
STEP 17



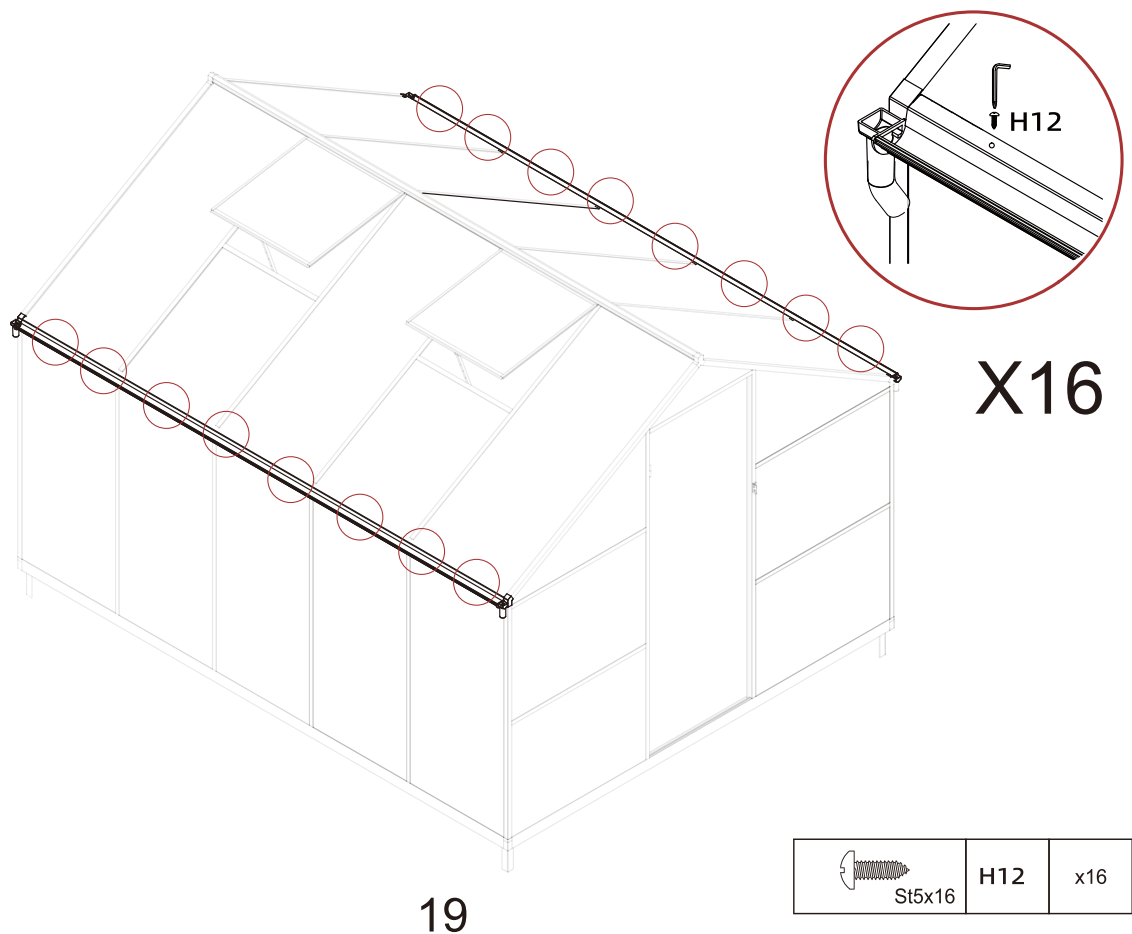
STEP 18



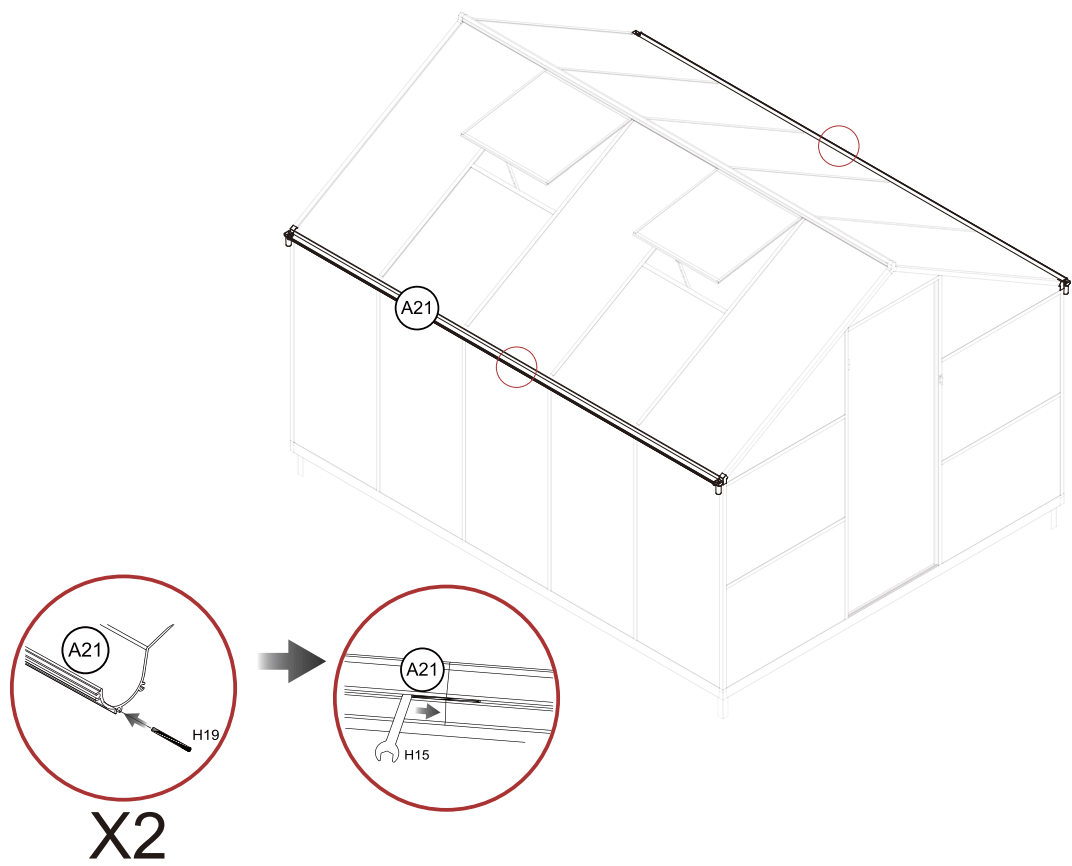STEP 19




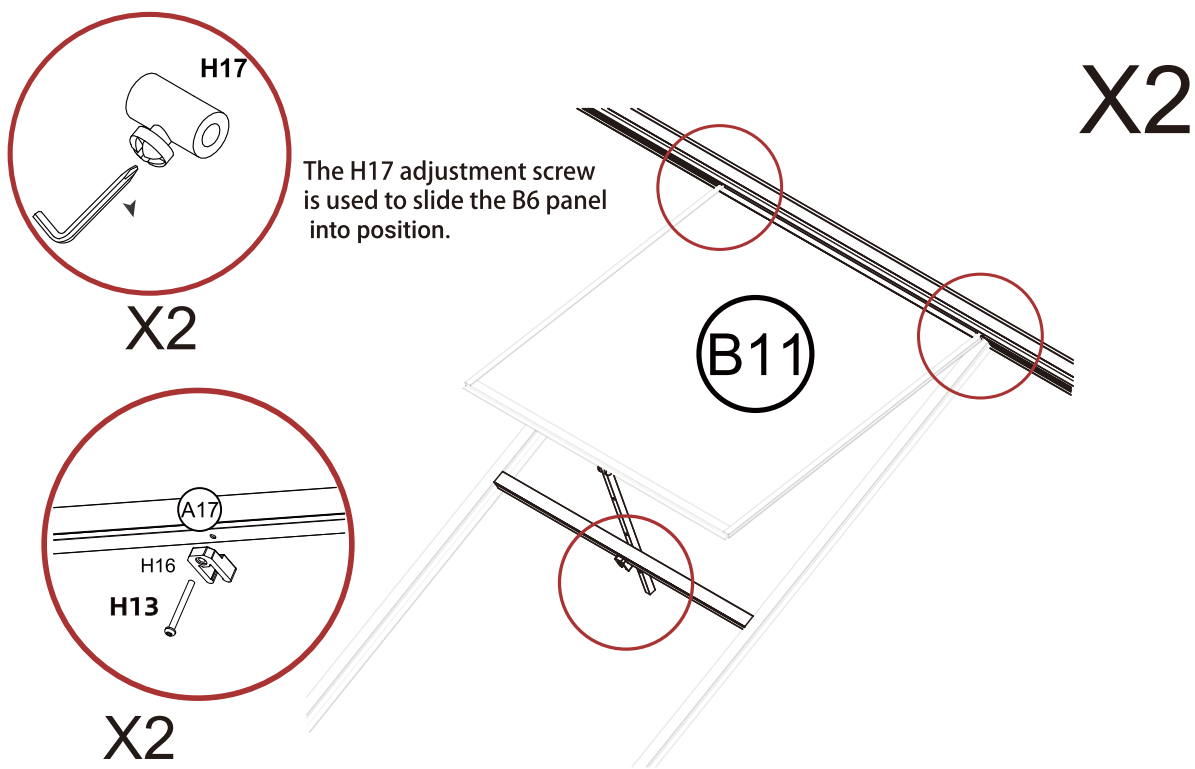STEP 20




 M4x35	H13	x2
---	-----	----

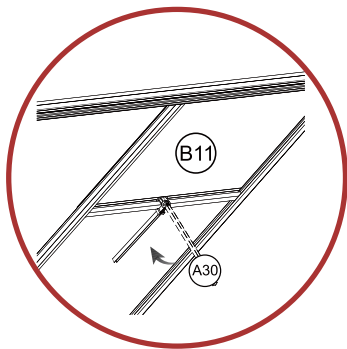
STEP 21




X2

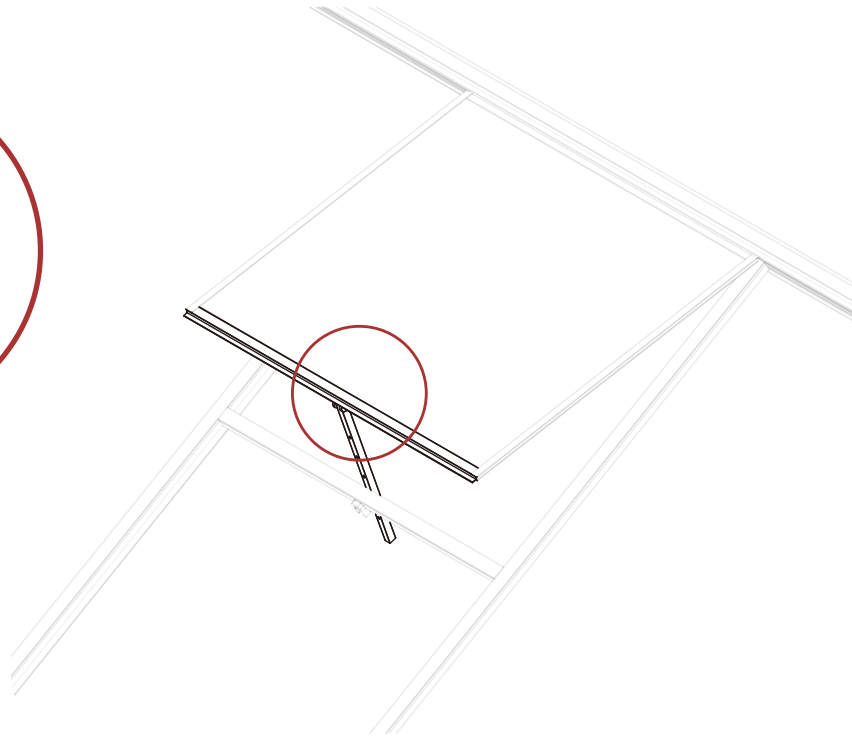

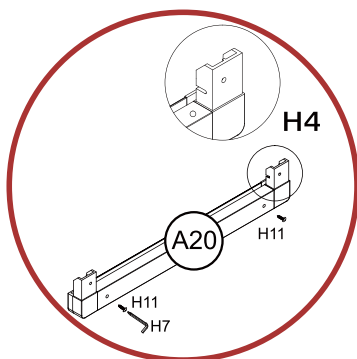STEP 22




X4

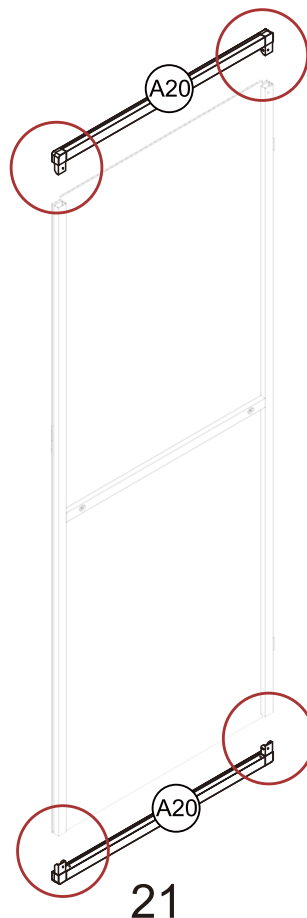


		H11	X4
---	---	-----	----

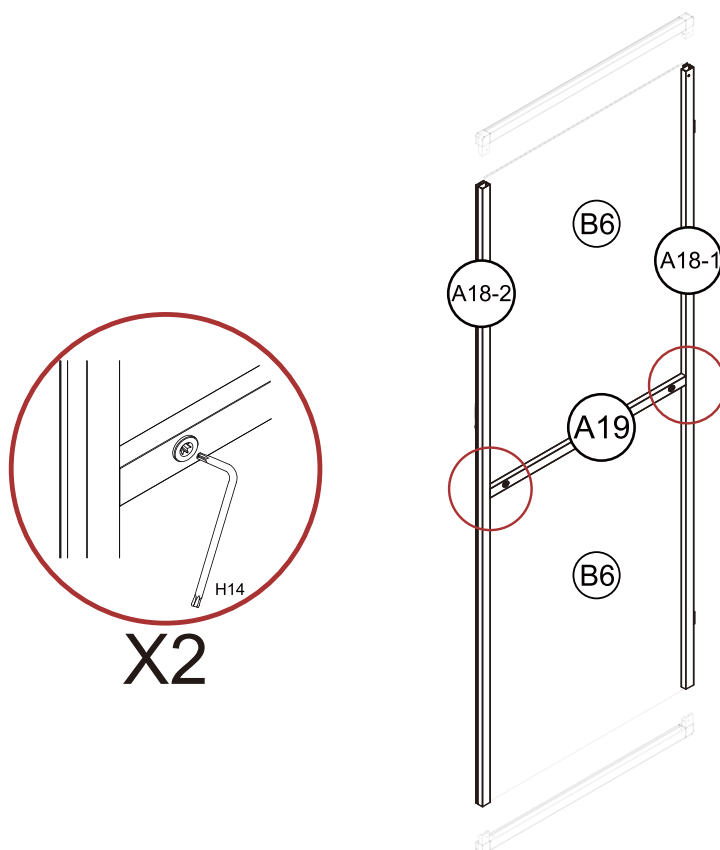STEP 23




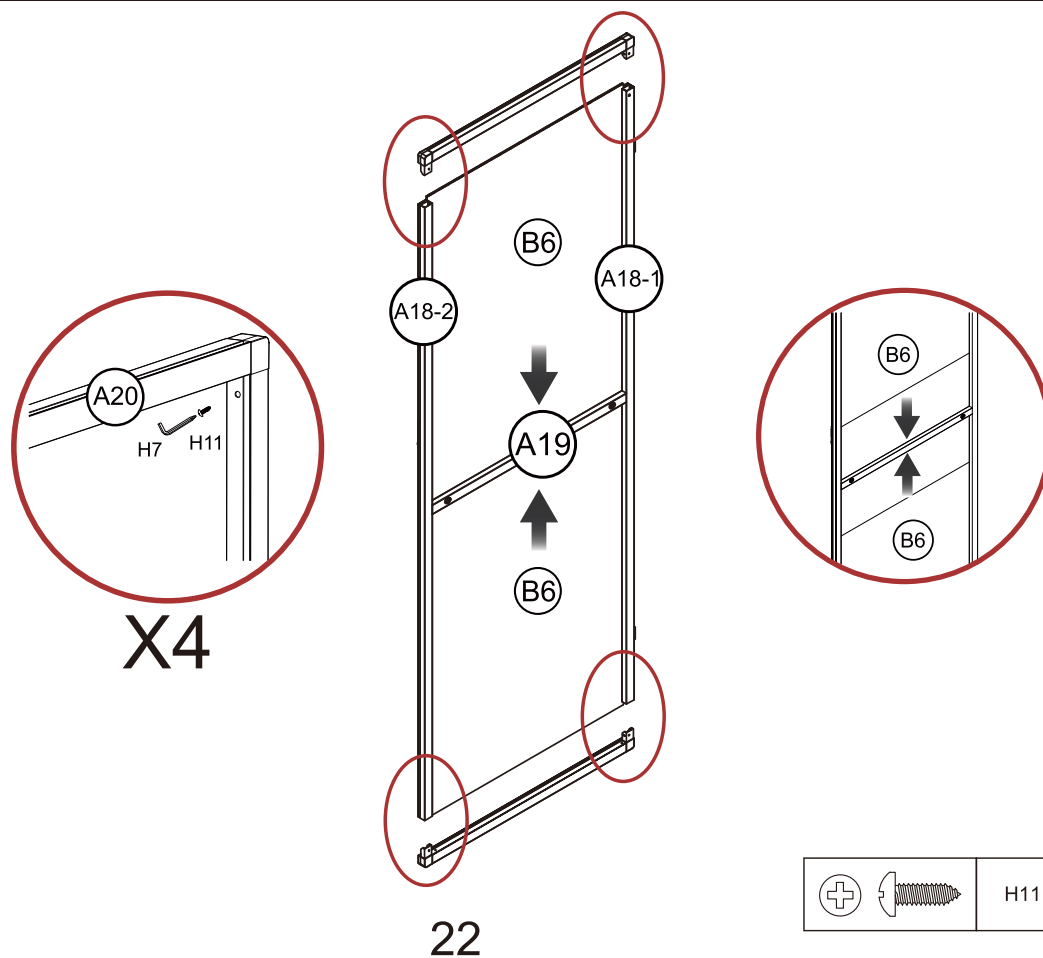STEP 24




		H11	X4
---	---	-----	----

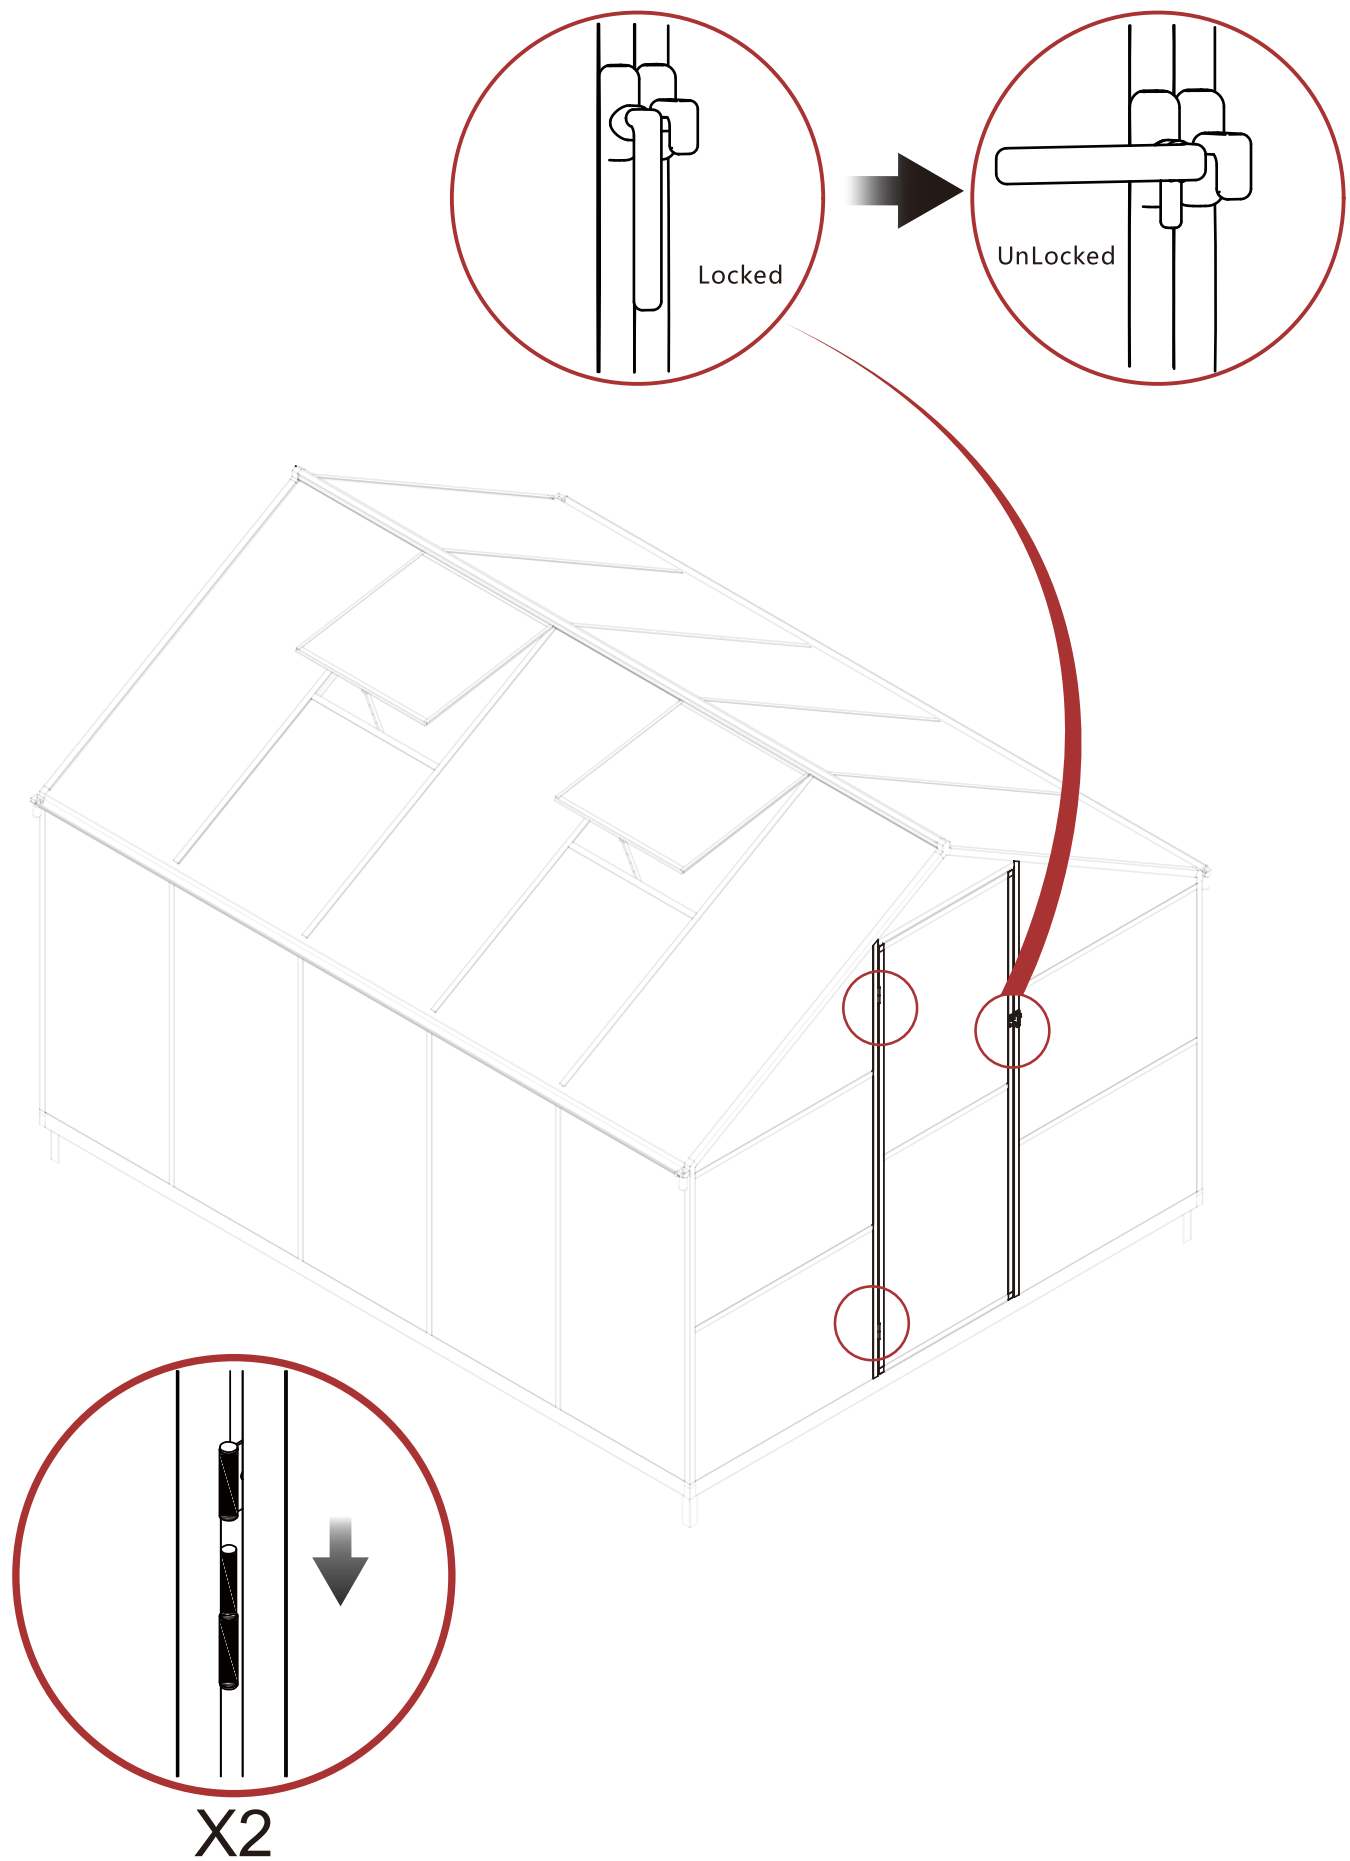STEP 25




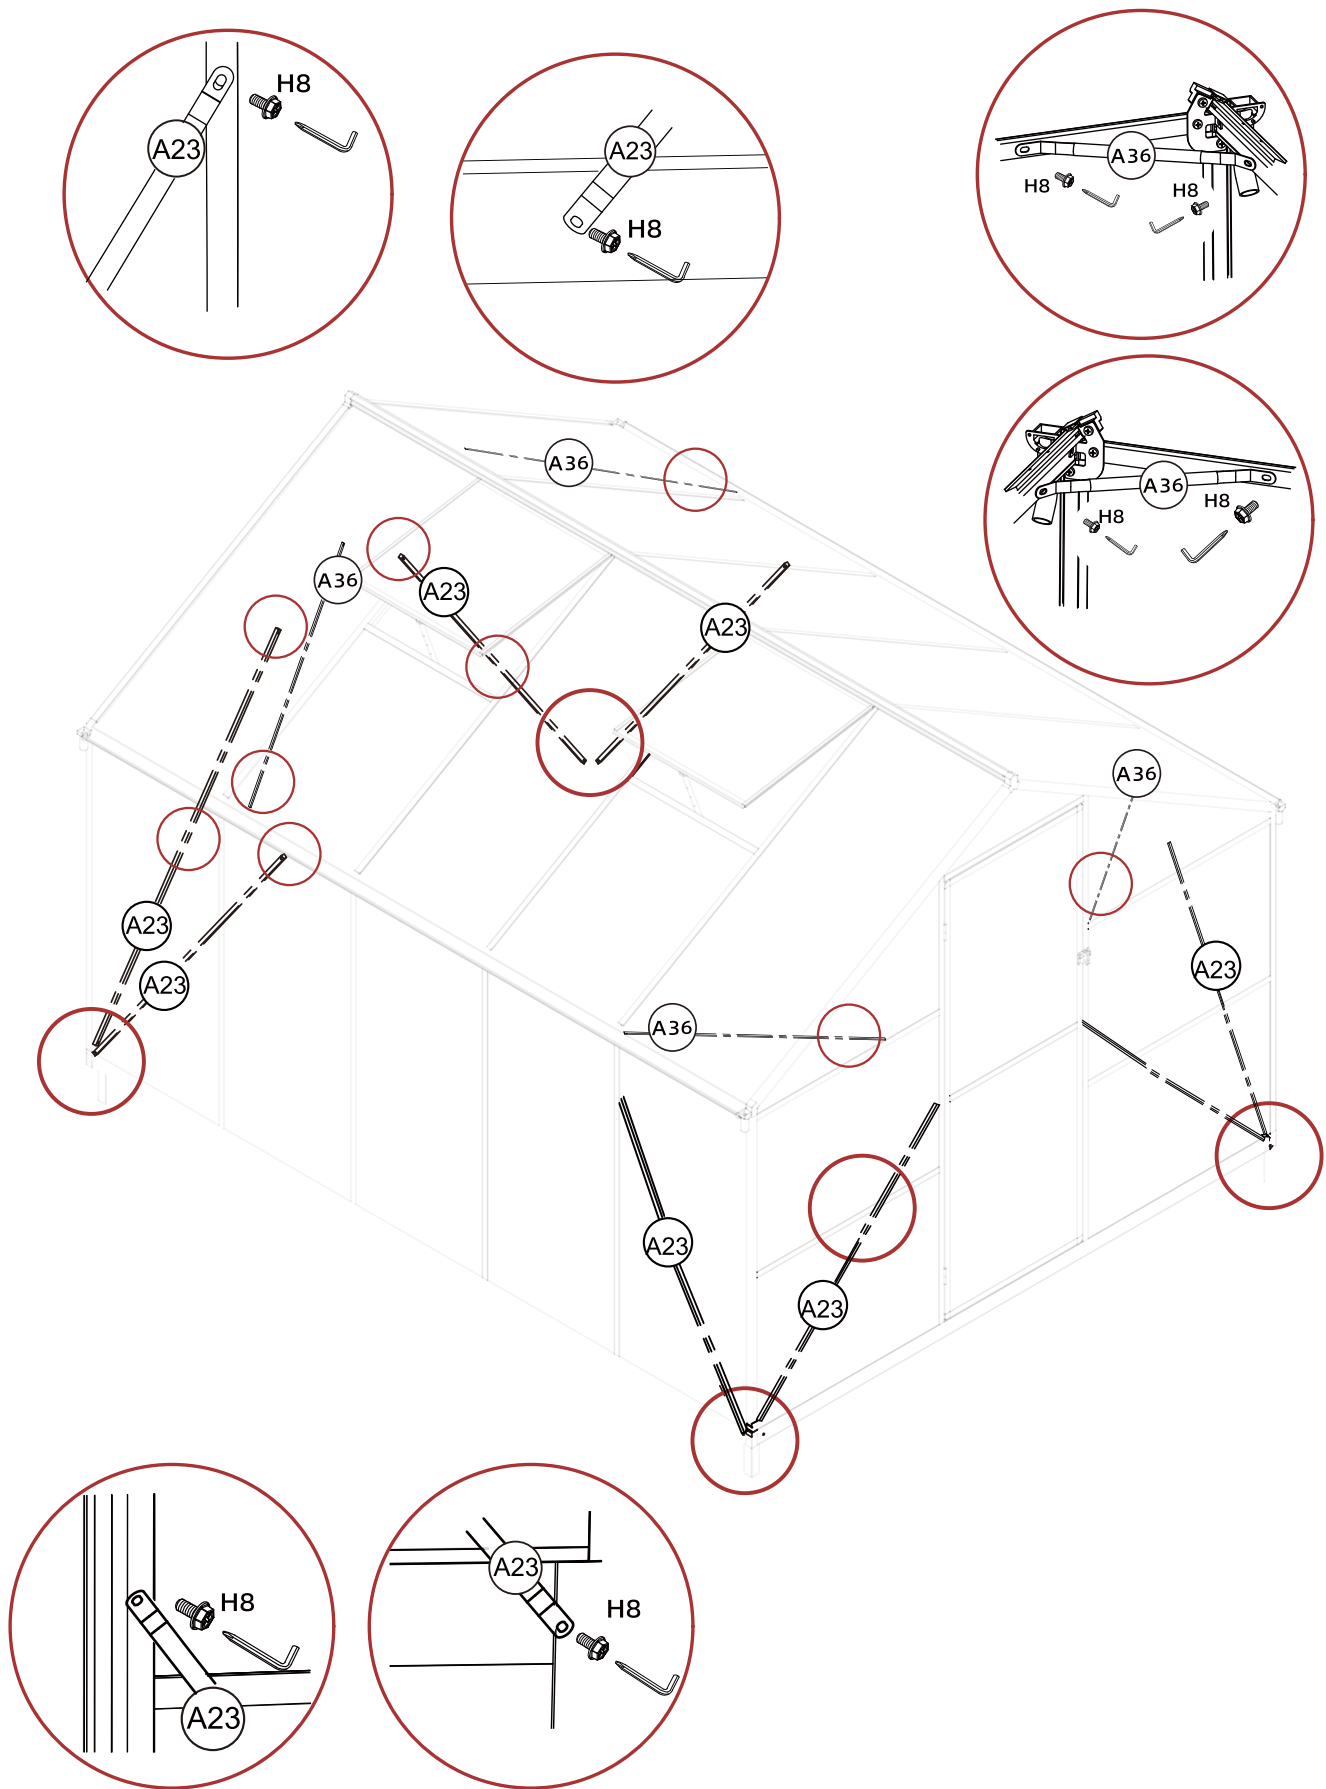STEP 26



	H8	x24
M6x12		

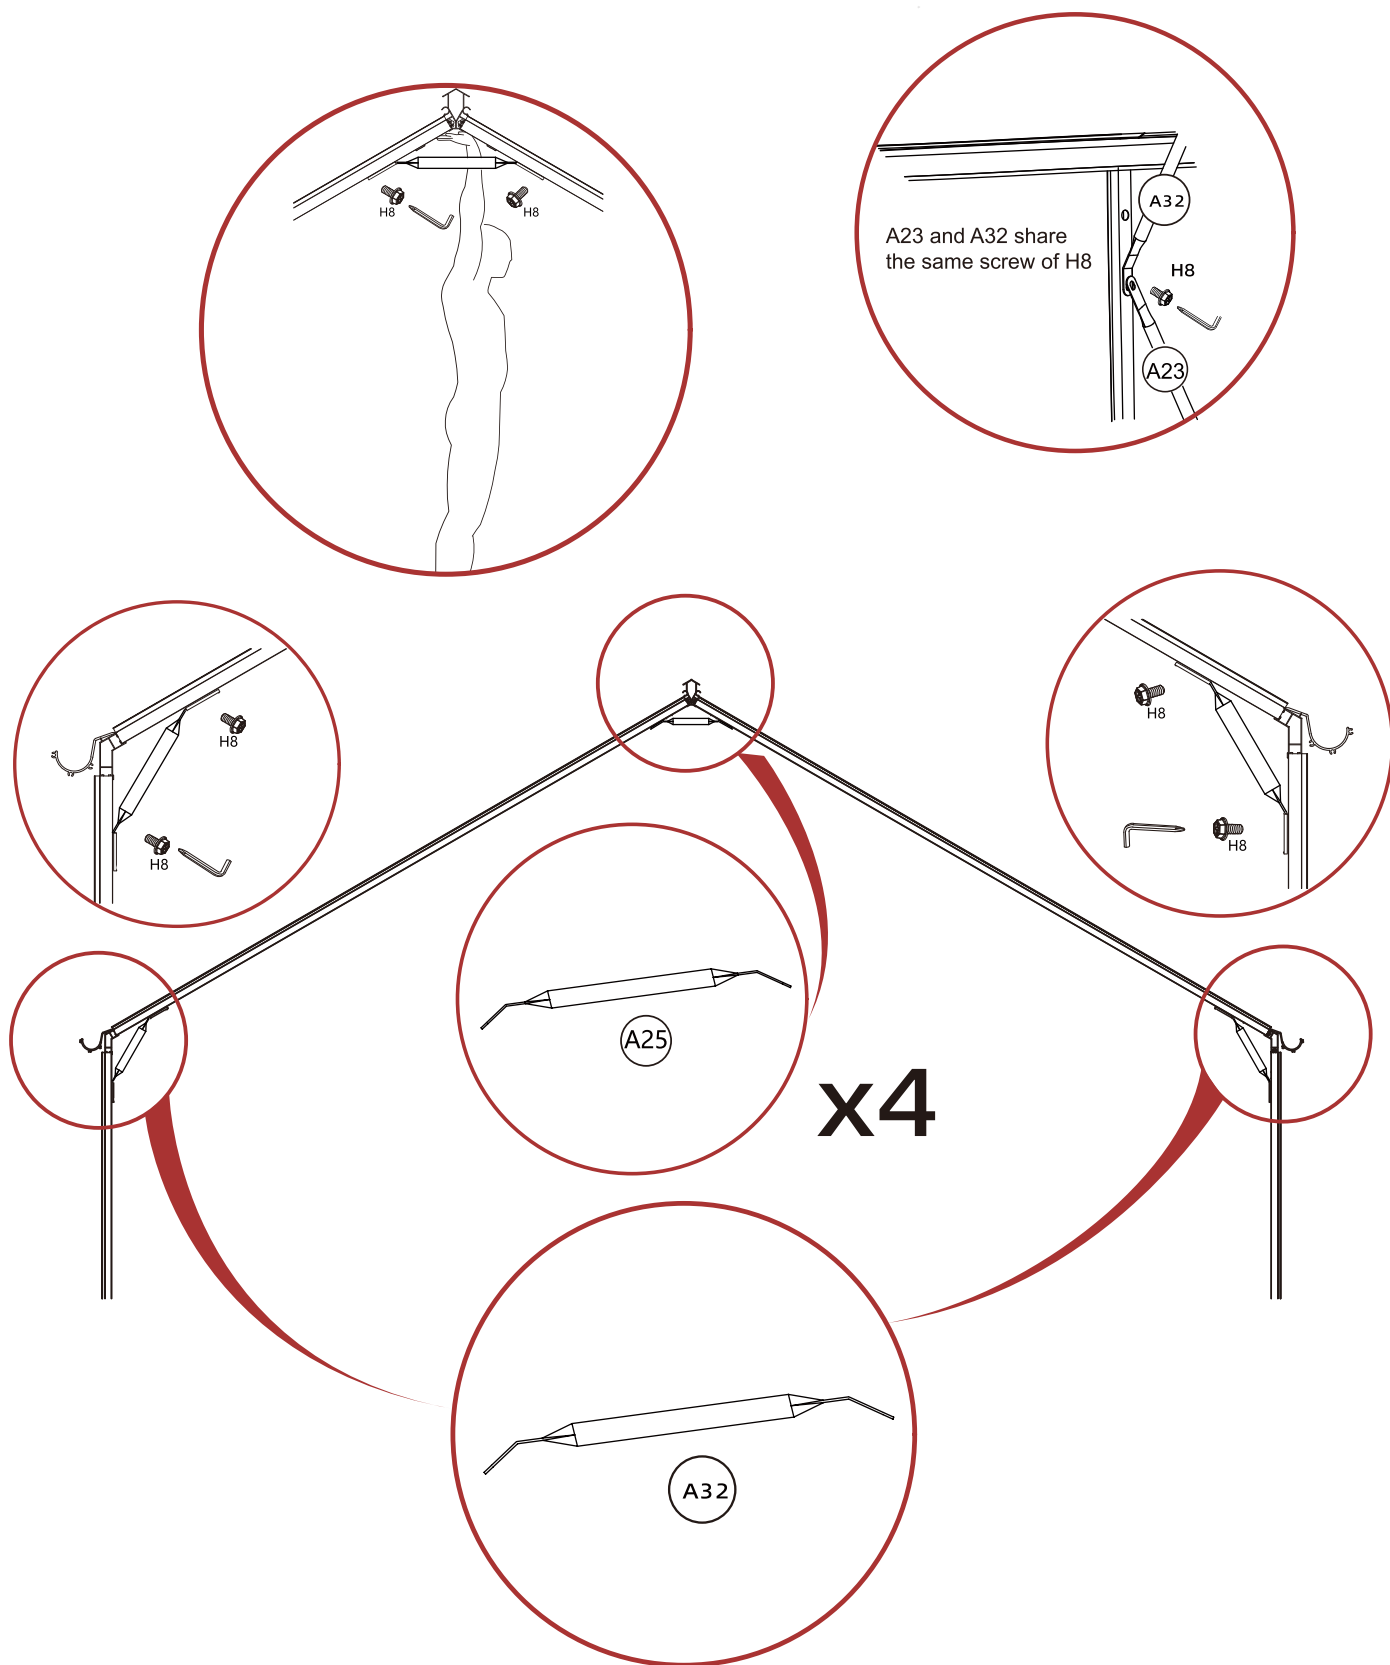STEP 27



	H8	x20
---	----	-----

Step 28

x12

