



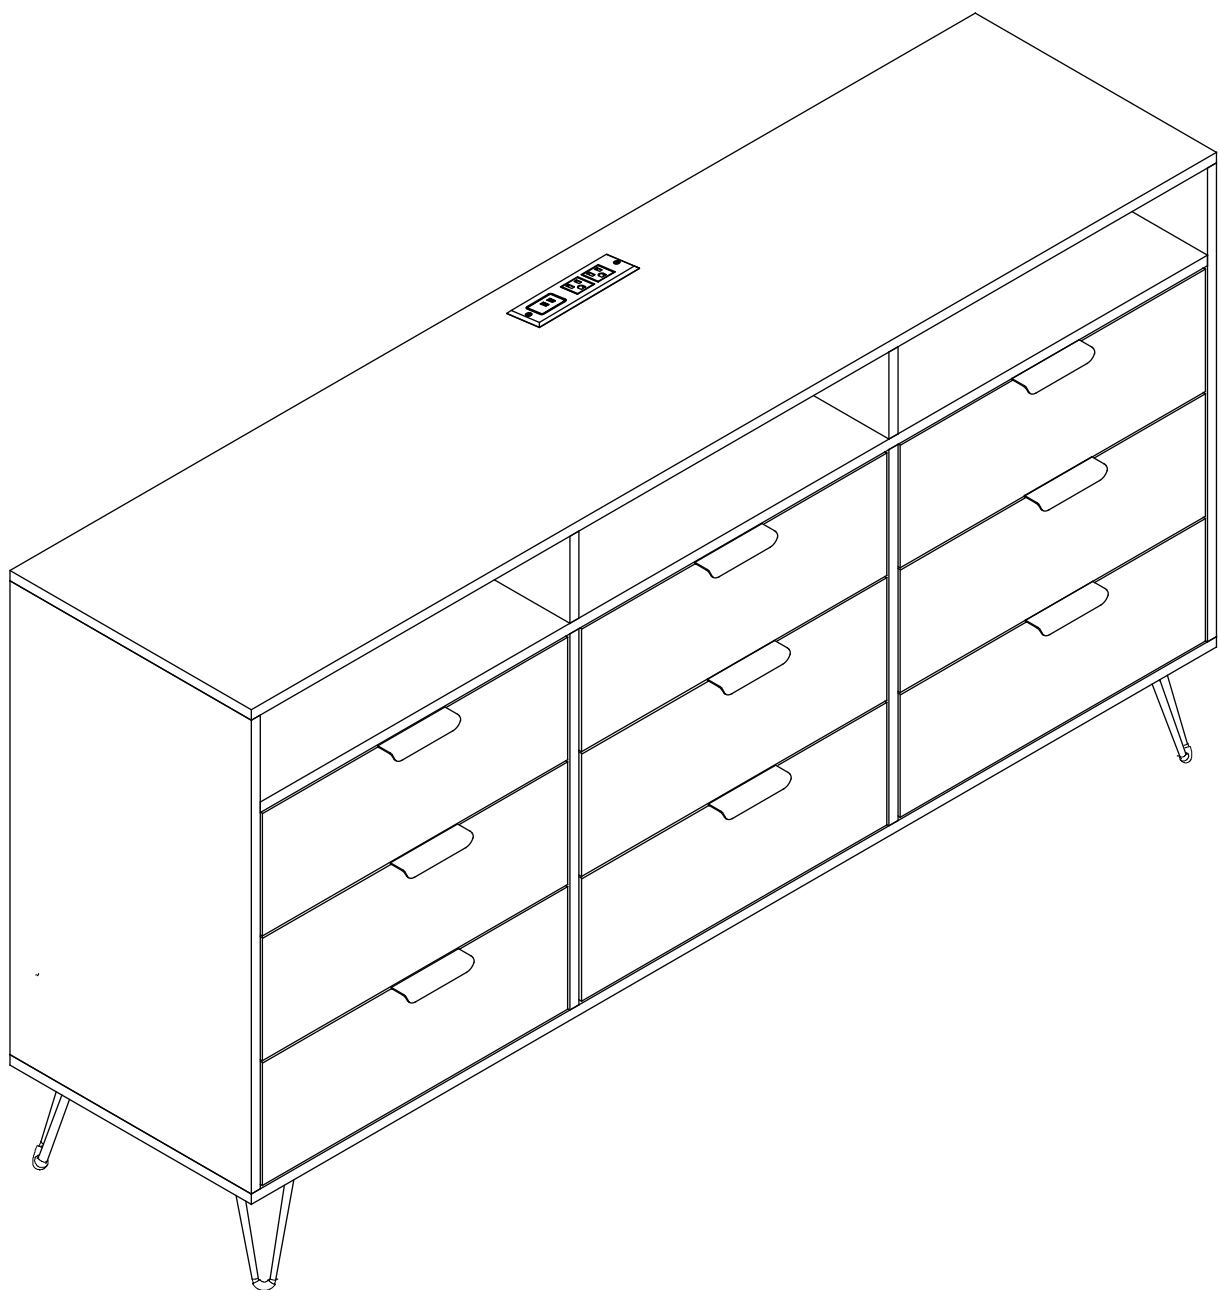

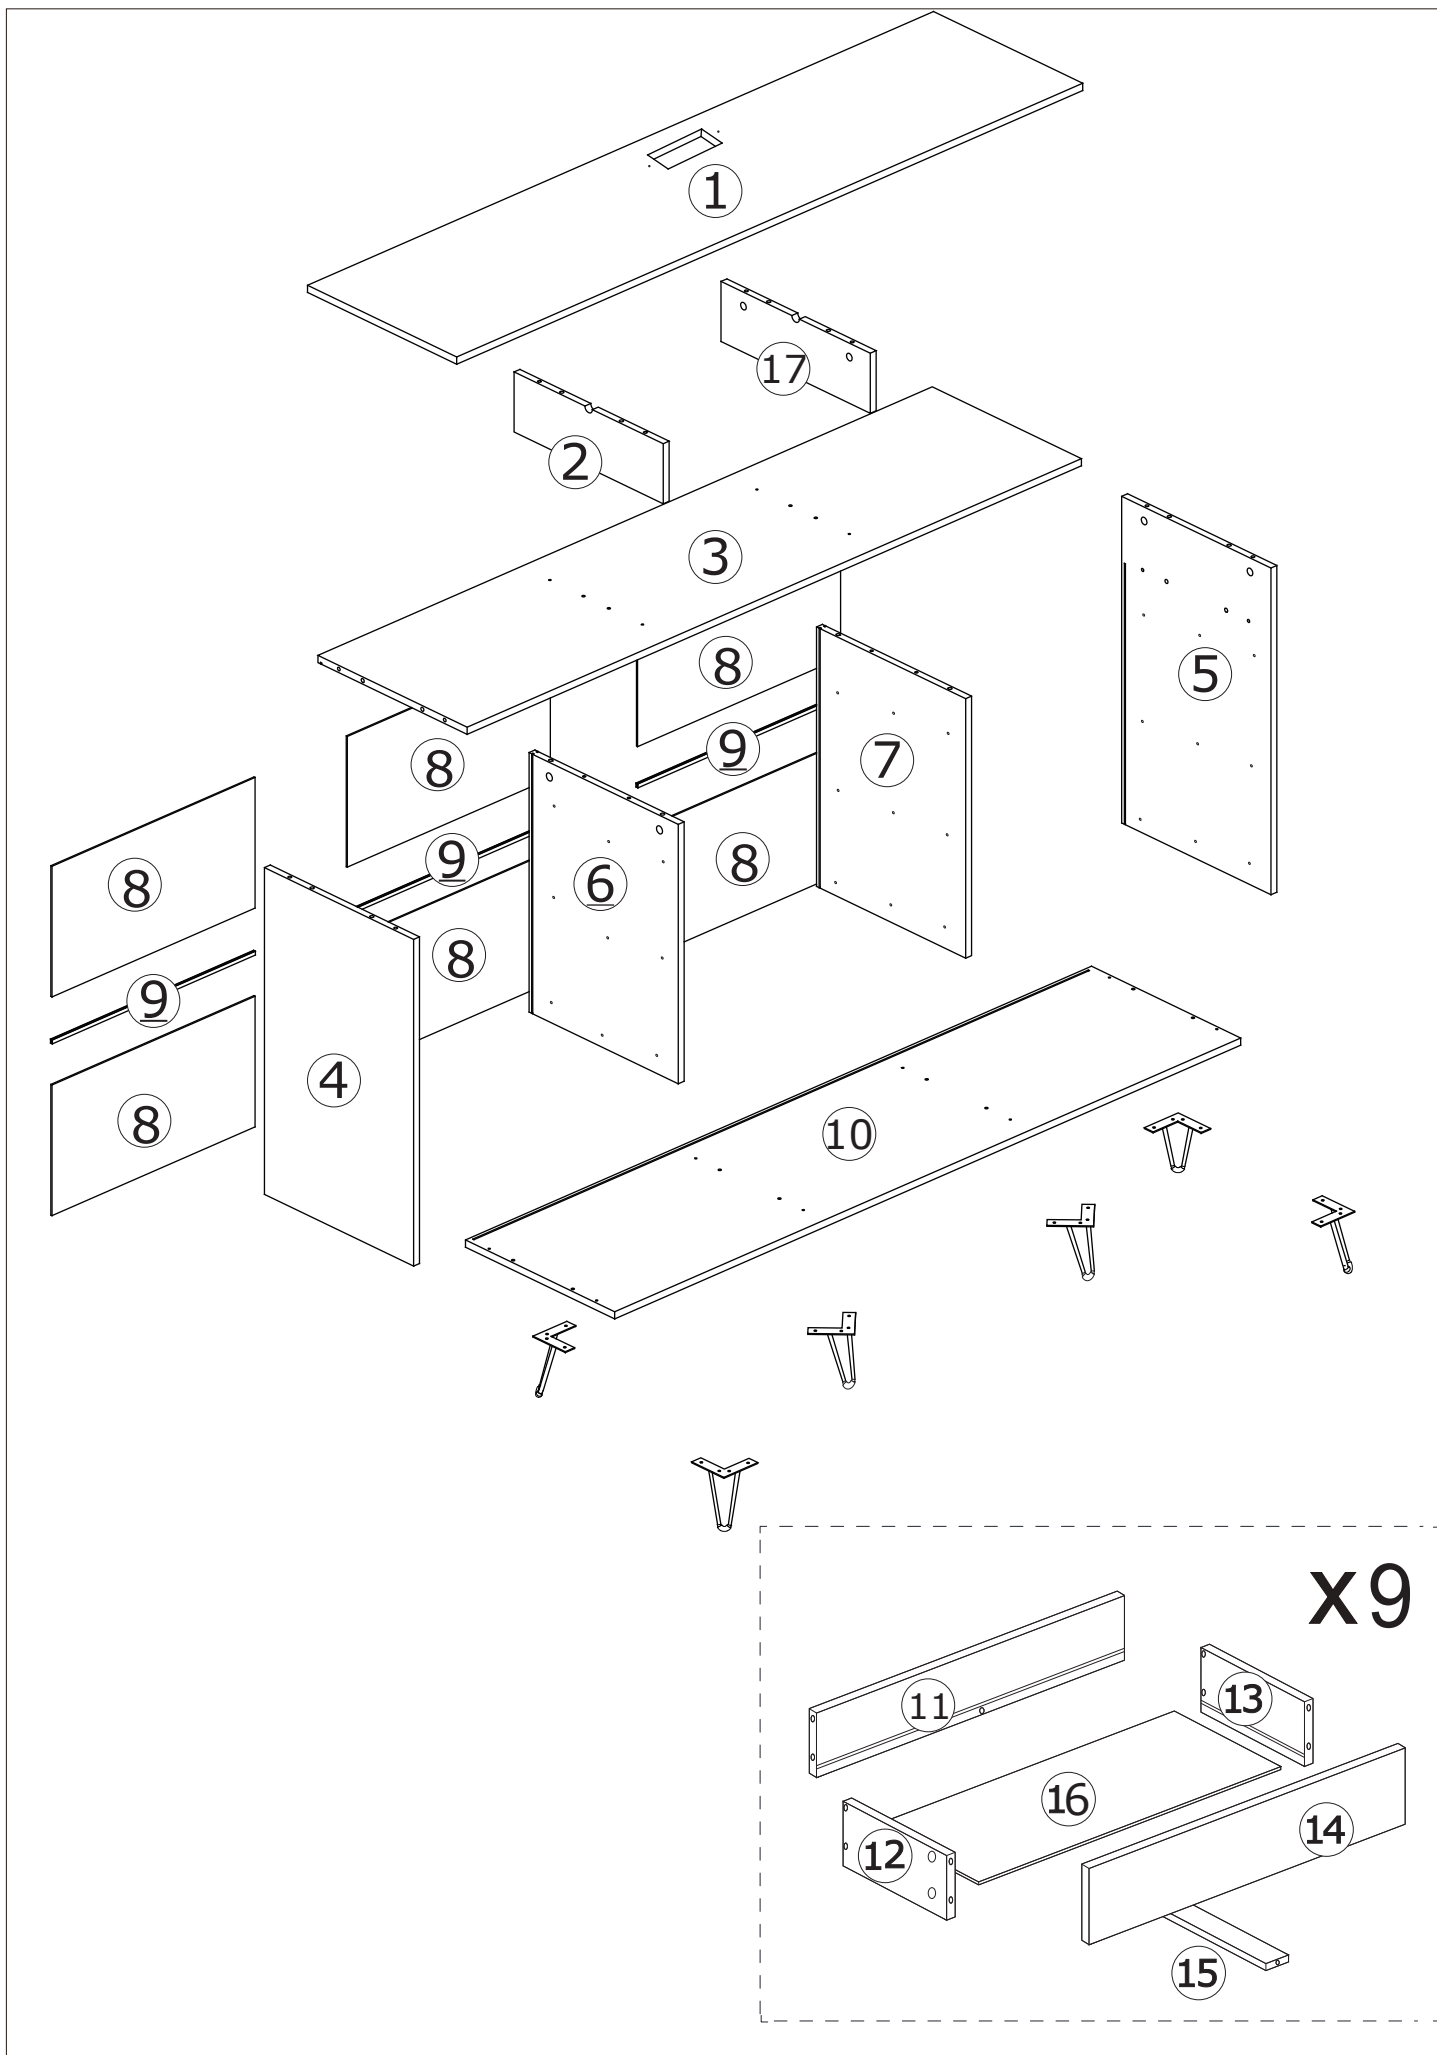






Parts and Operation Elements

① 1pc	② 1pc	③ 1pc	④ 1pc	⑤ 1pc
⑥ 1pc	⑦ 1pc	⑧ 6pcs	⑨ 3pcs	⑩ 1pc
⑪ 9pcs	⑫ 9pcs	⑬ 9pcs	⑭ 9pcs	⑮ 9pcs
		Hardware		
⑯ 9pcs	⑰ 1pc			








A Cam Bolt 61pcs ^{+2pcs}	B Cam Lock 61pcs ^{+2pcs}	C 6x30mm Dowel 28pcs ^{+2pcs}	D 4x40mm Screw 12pcs ^{+2pcs}	E 4x30mm Screw 45pcs ^{+2pcs}	F 3x12mm Screw 140pcs ^{+2pcs}
G 4x14mm Screw 26pcs ^{+2pcs}	H 18pcs ^{+2pcs}	J 3x16mm Screw 18pcs ^{+2pcs}	K 6pcs	L 2pcs	M 2pcs
N 9pcs	P 1pc	Q 7pcs	R 61pcs ^{+2pcs}	S 1pc	T 2pcs
U M4x40mm Screw 2pcs	CL 350mm 9pcs	CR 350mm 9pcs	DL 350mm 9pcs	DR 350mm 9pcs	

Gently screw cam bolt into the threaded anchor.	Insert the wood dowel halfway into hole.		Screw the camlock firmly into locked position.


Please kindly note the following points when you assemble the sliders of the drawers

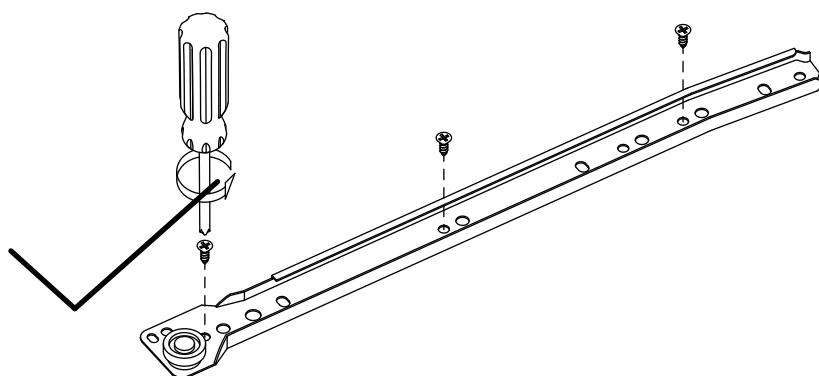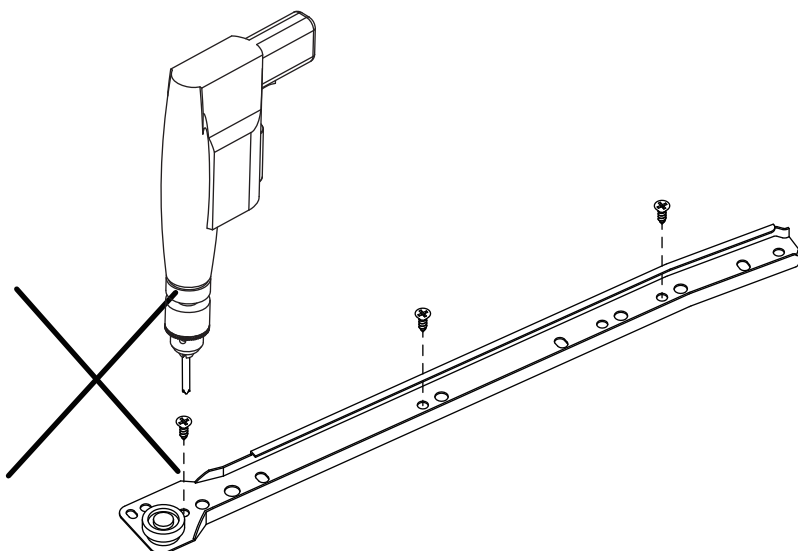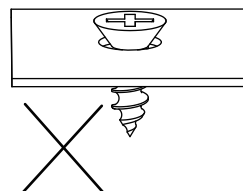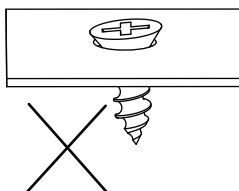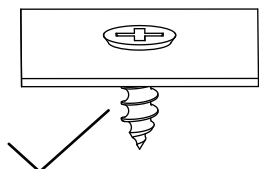


1

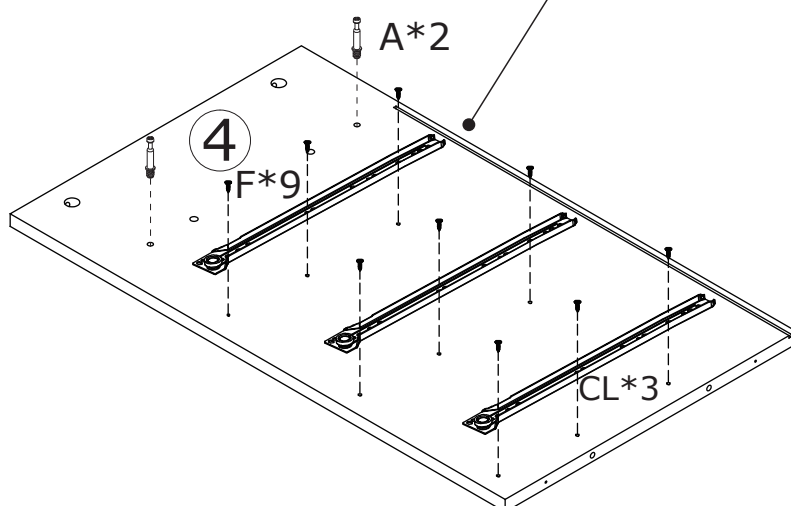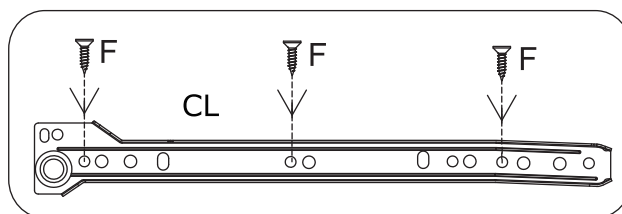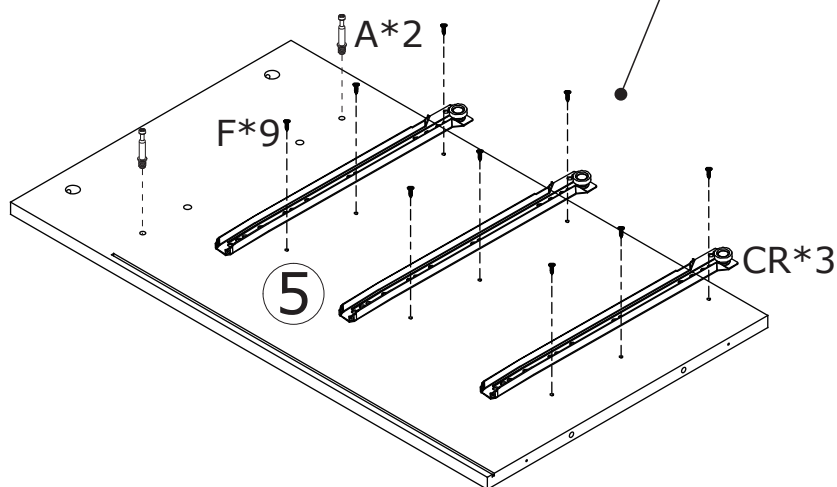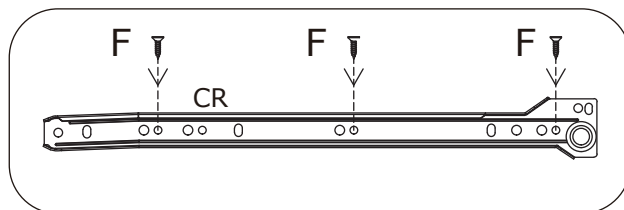




2

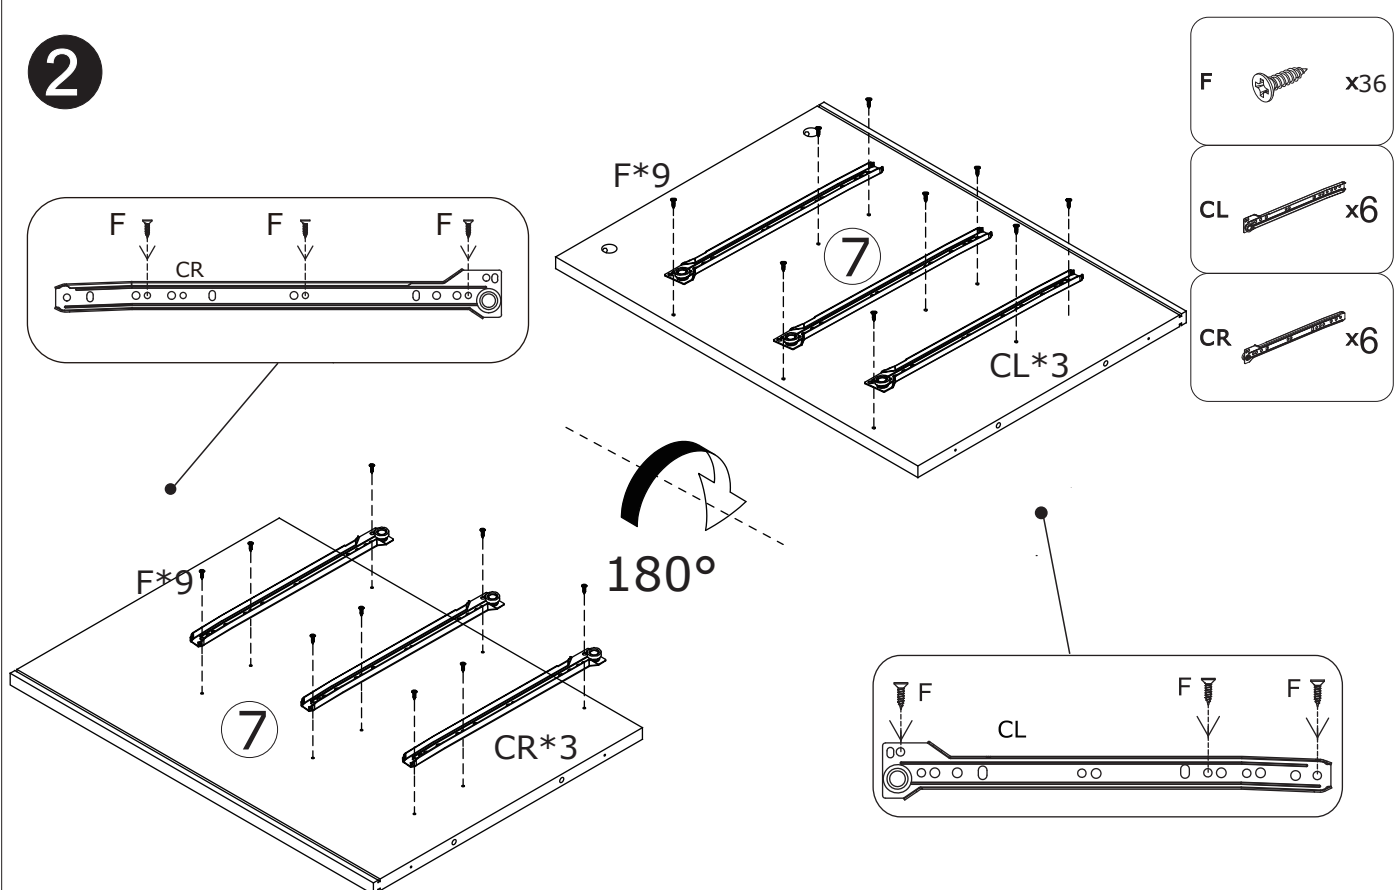


After assembling CR of No.6 and No.7 plates, turn it over by 180 to continue assembling CL part.

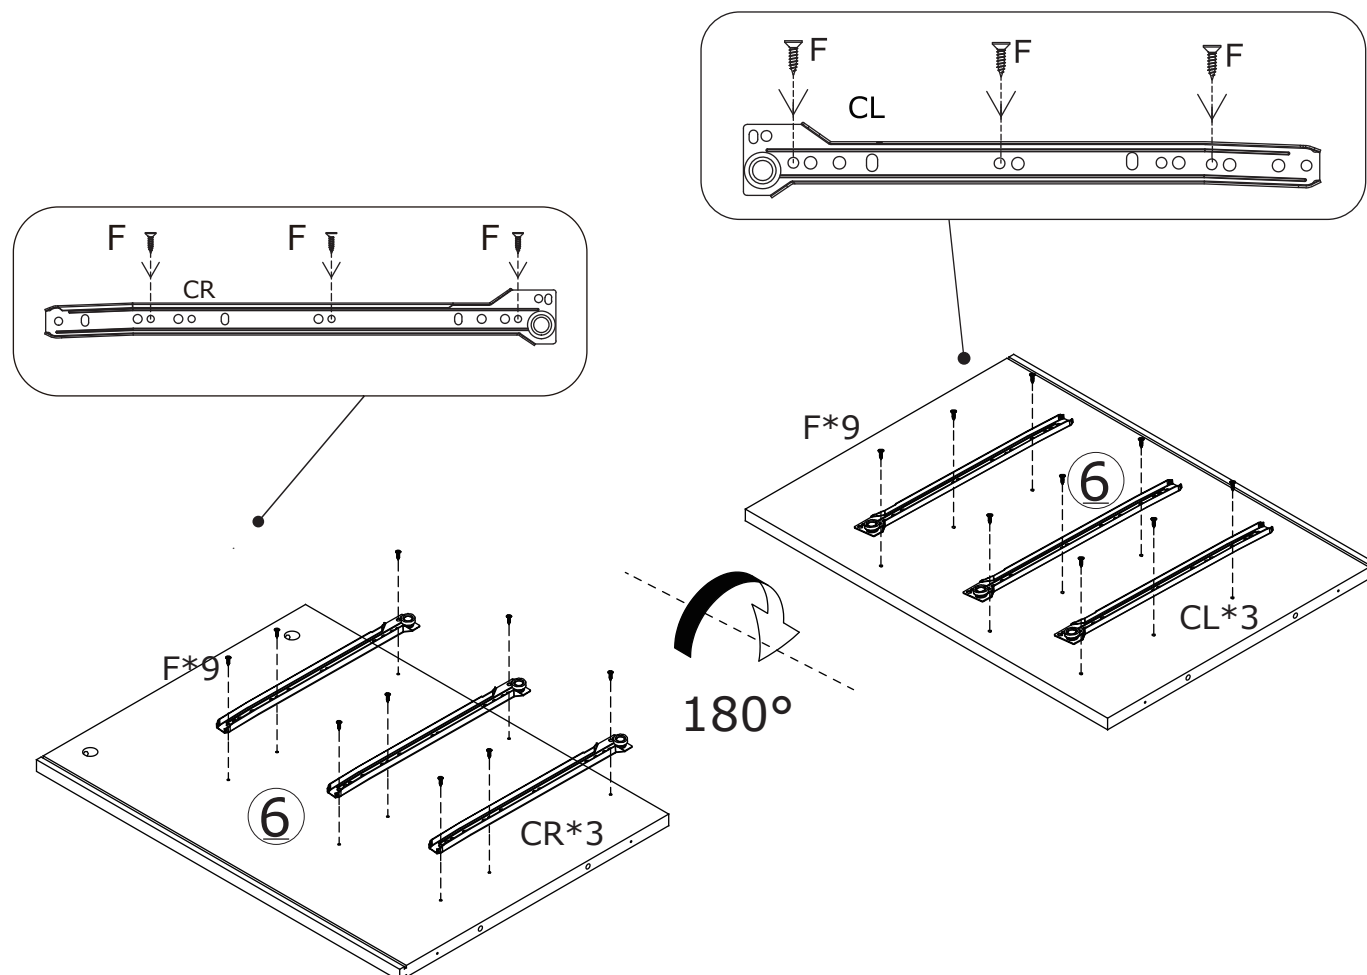

3

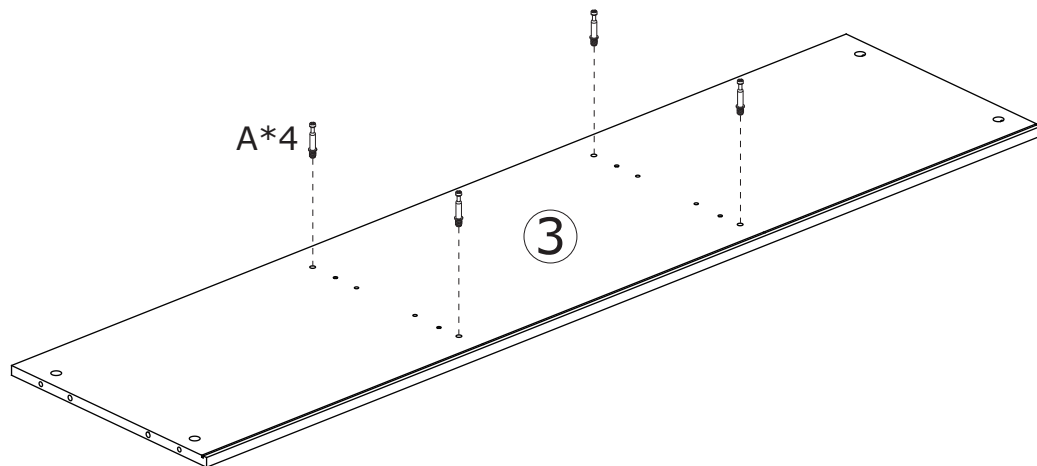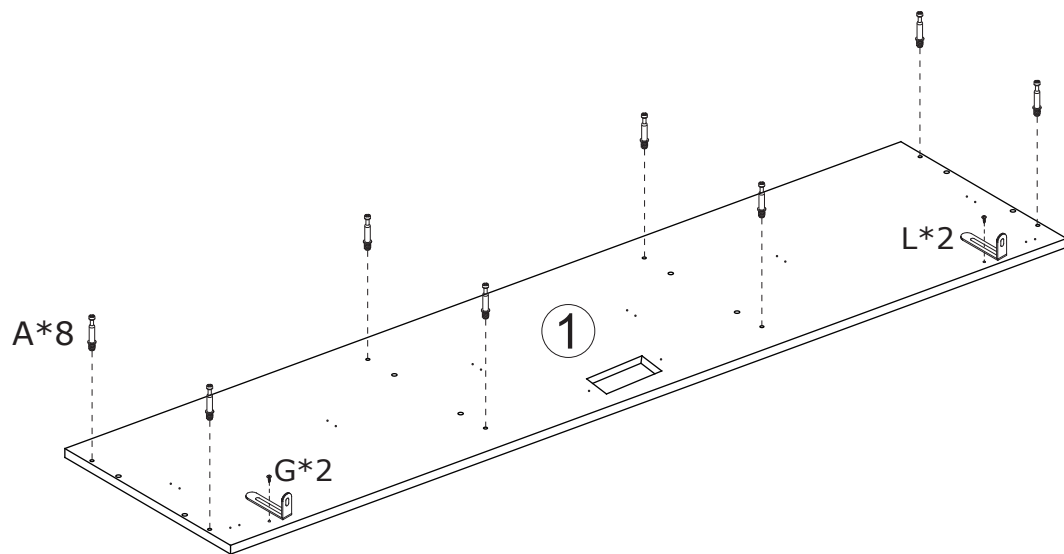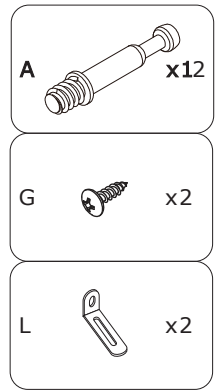




4

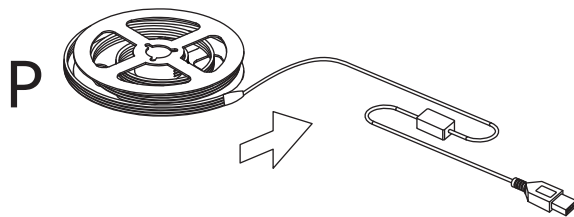


F  x14

P  x1


Q  x7

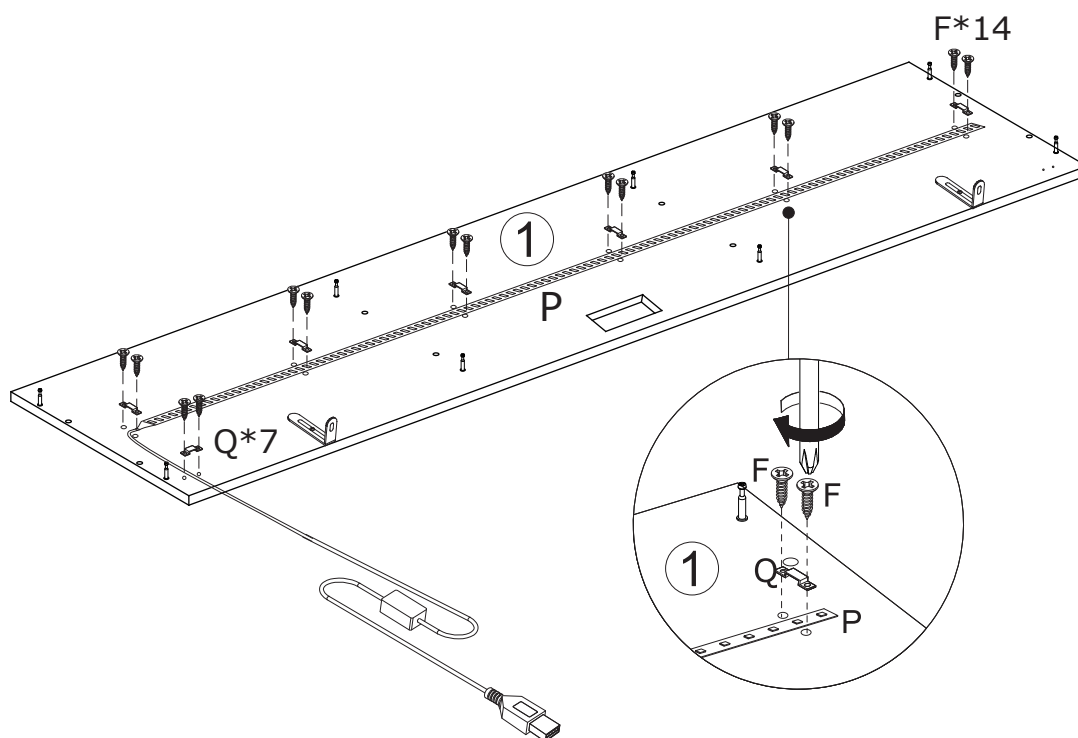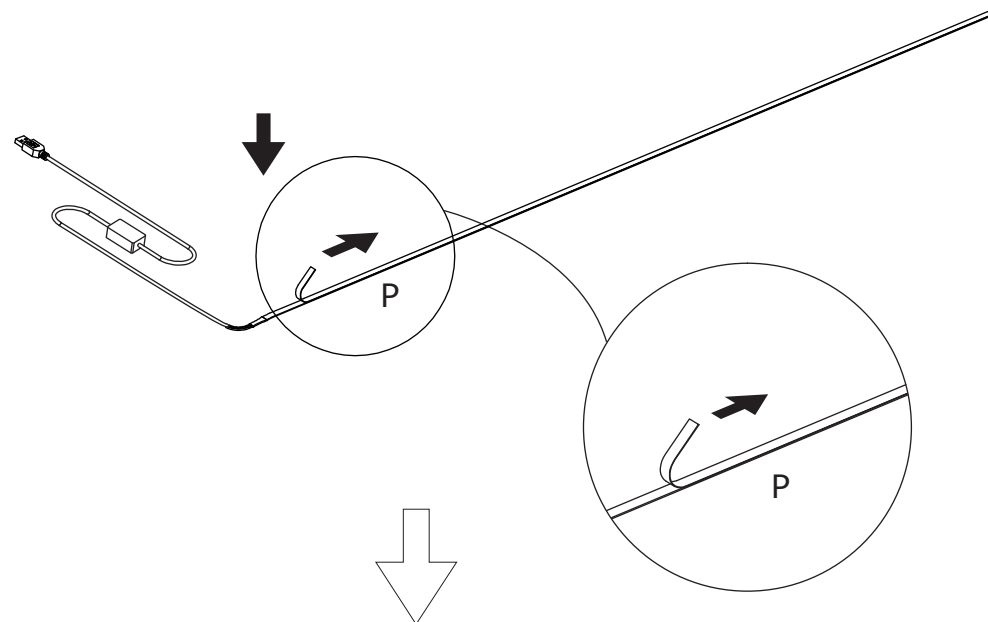


5

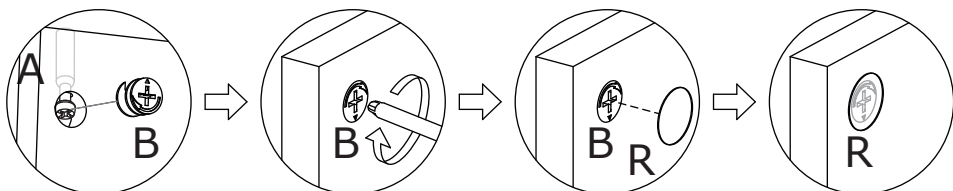


- B  x4
- C  x4
- R  x4

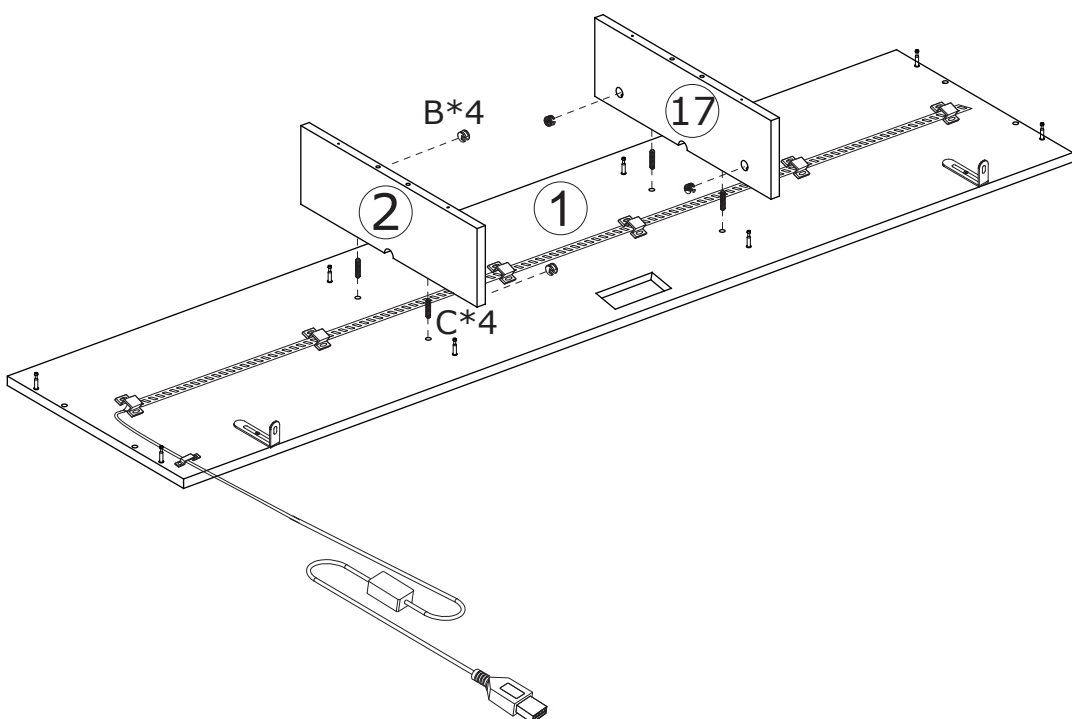



6

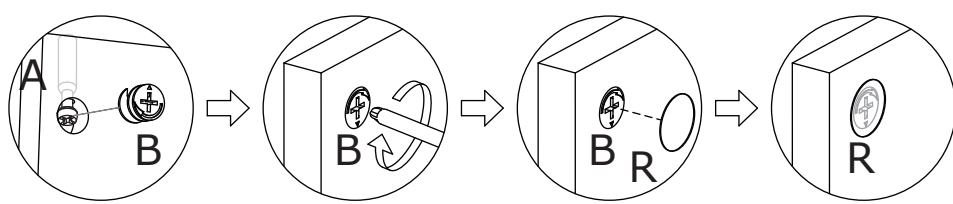

- B  x4
- C  x4
- R  x4

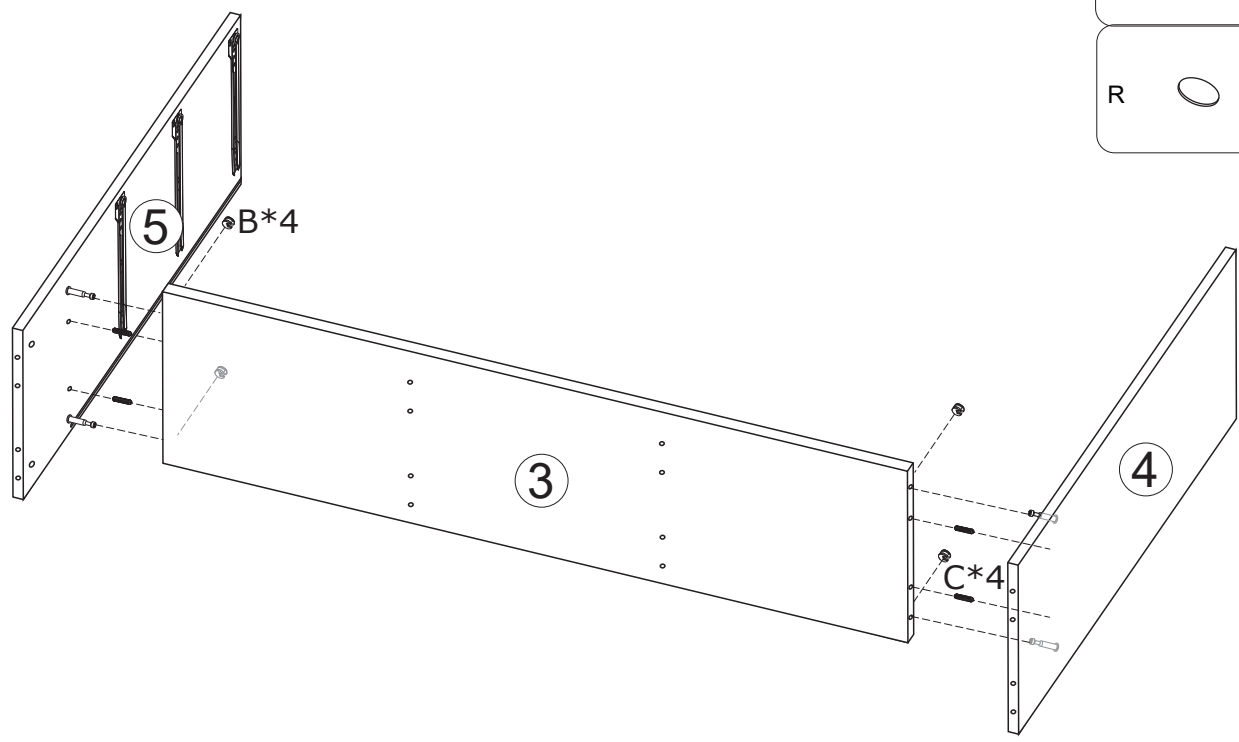

7

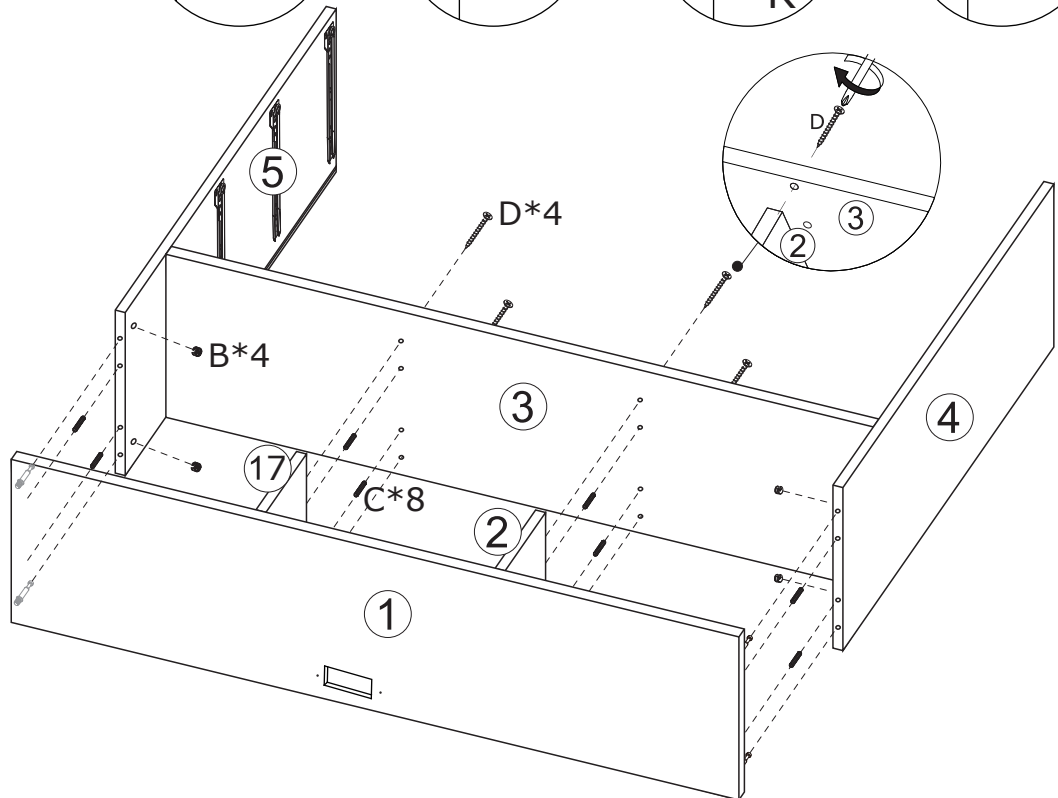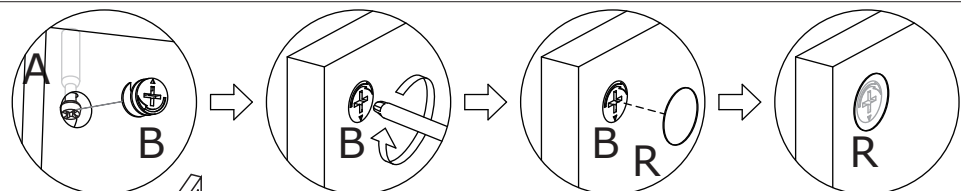



R  x4

B  x4

C  x8

D  x4

8

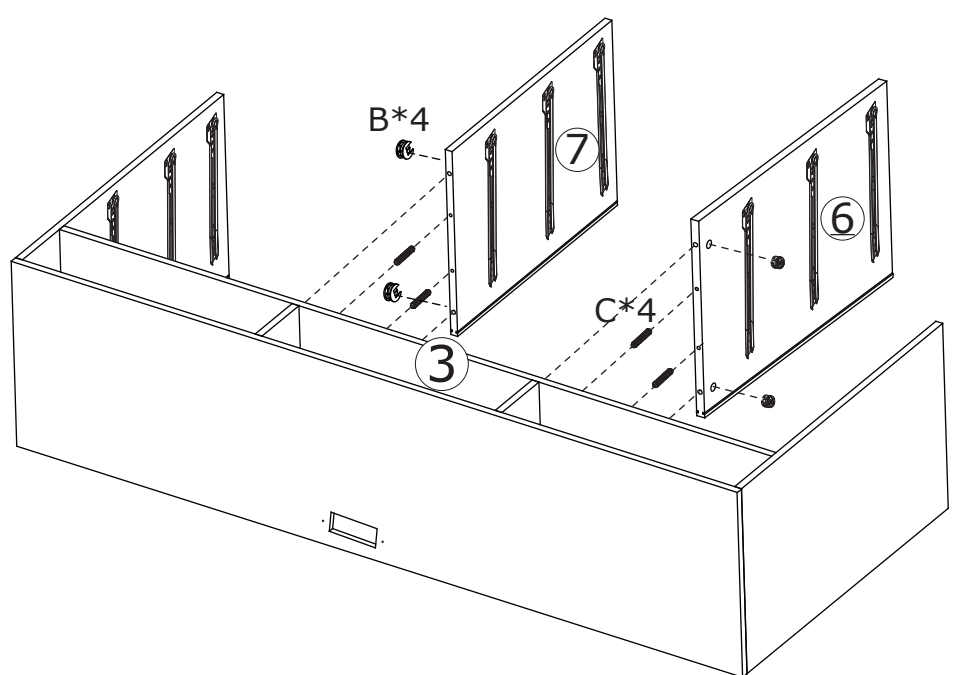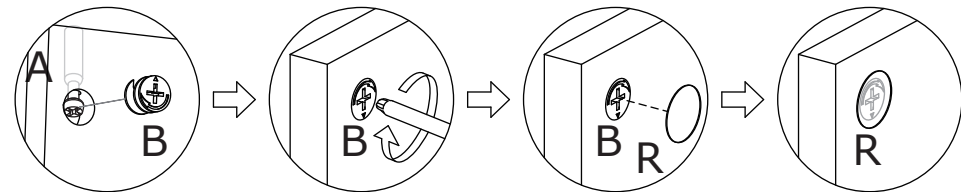


B  x4

C  x4


R  x4

9


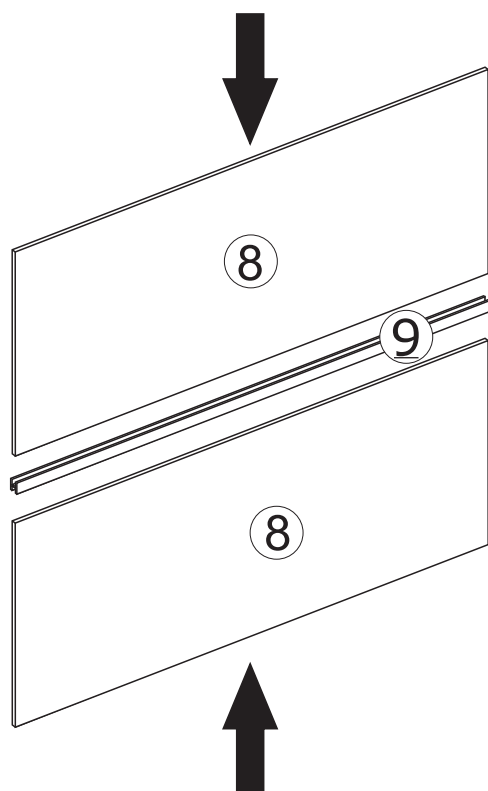


x3

10

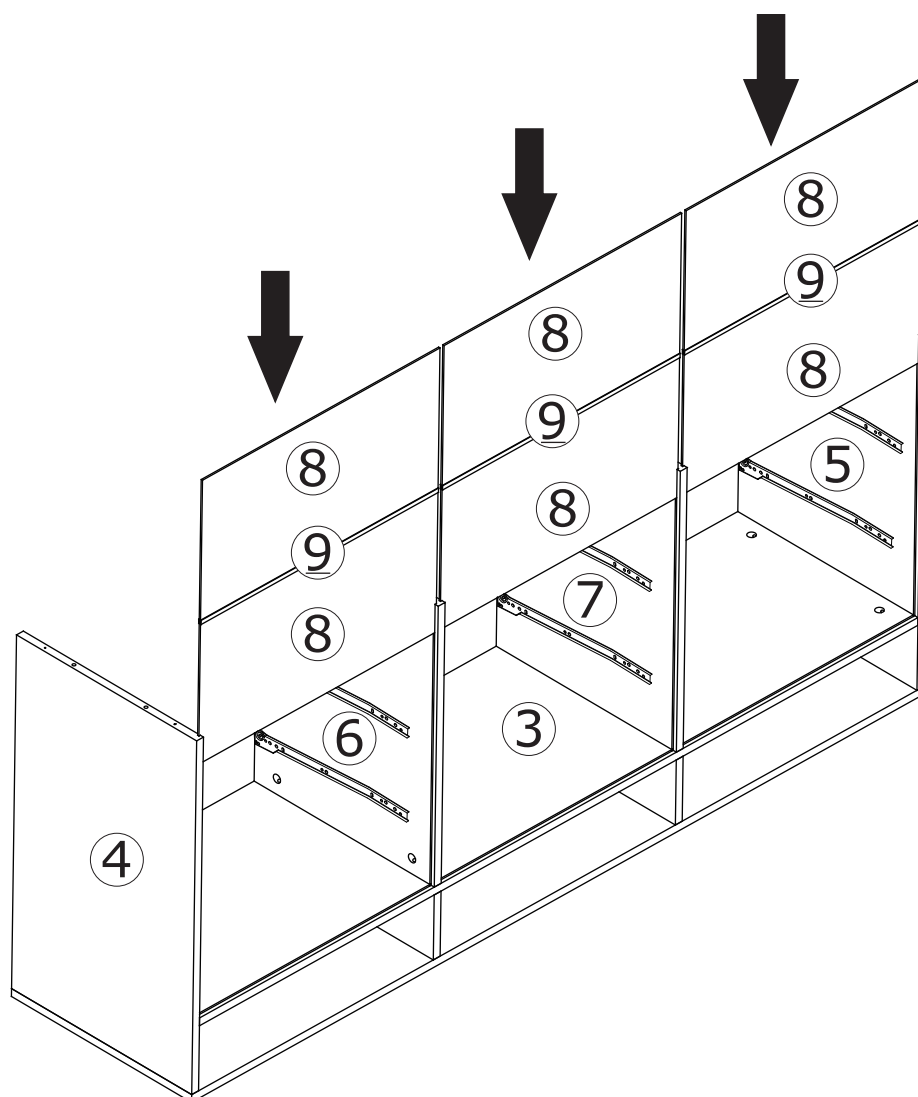

11

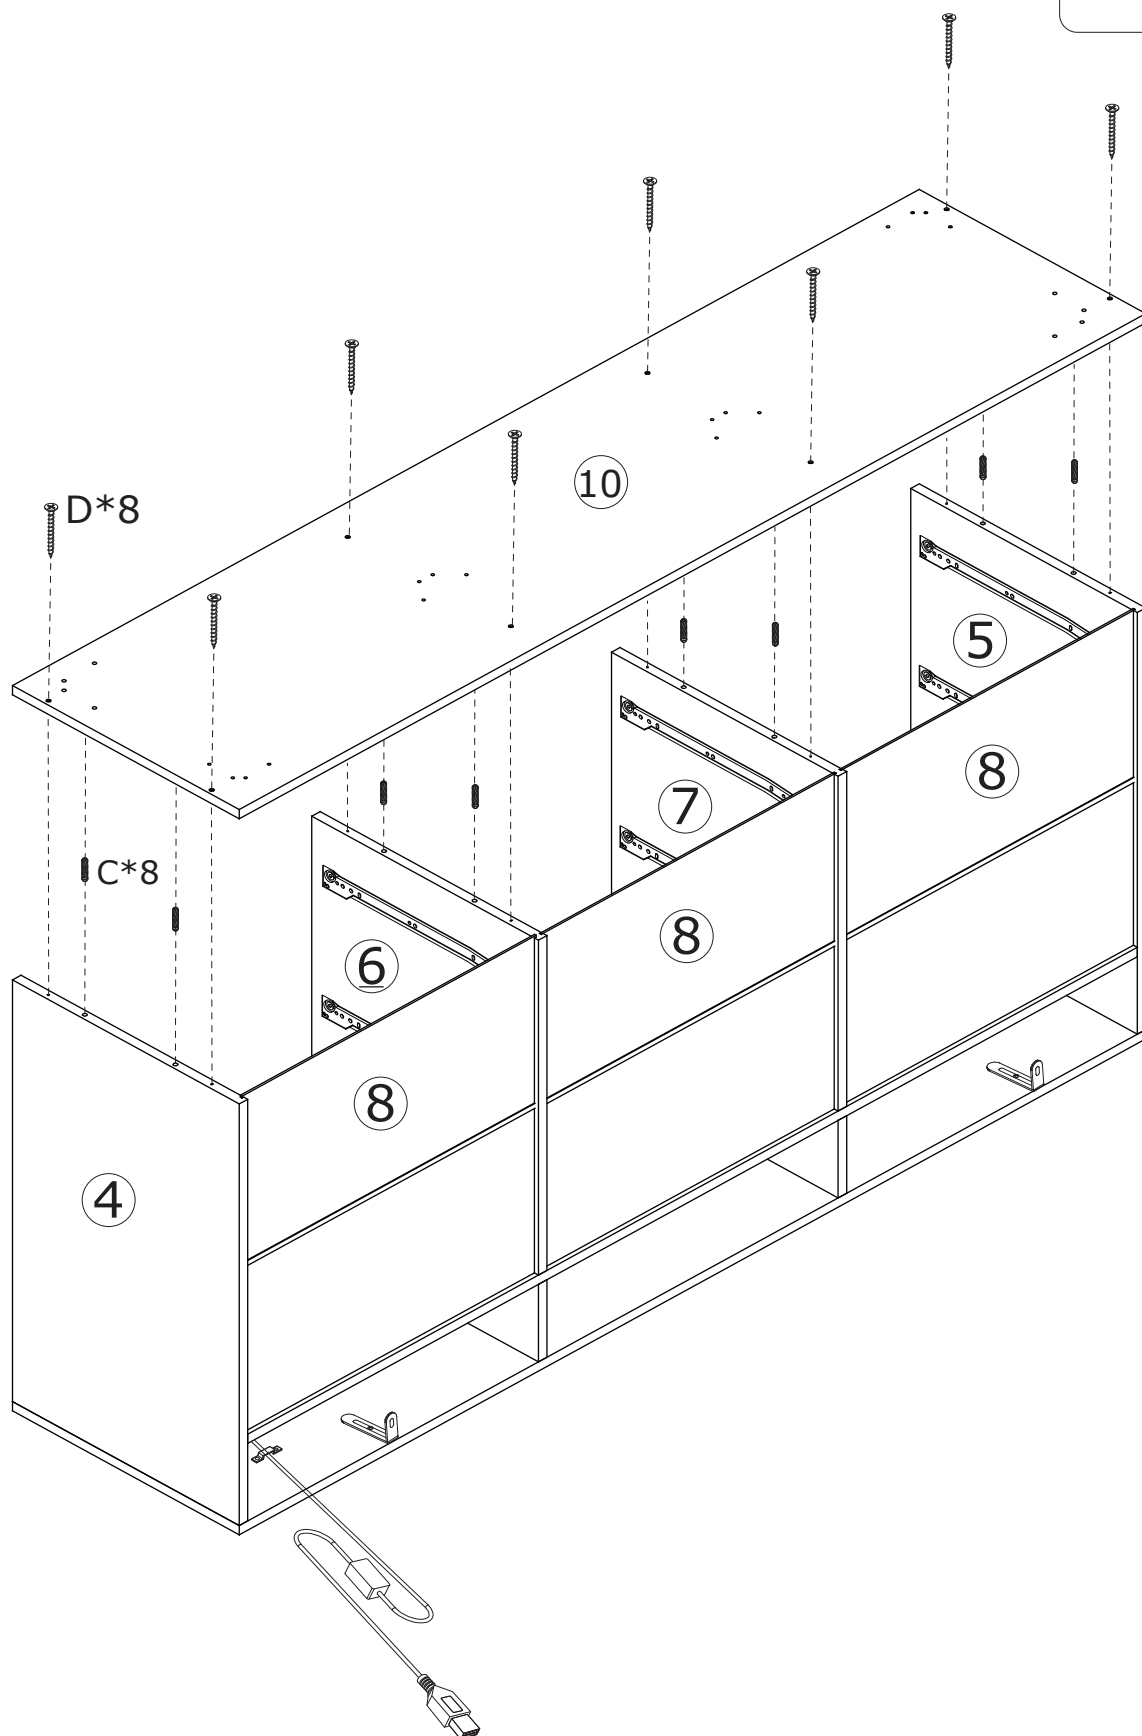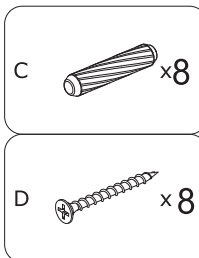


12




If the ground is unbalanced, remove the two plastics in the middle.

G  x24

K  x6

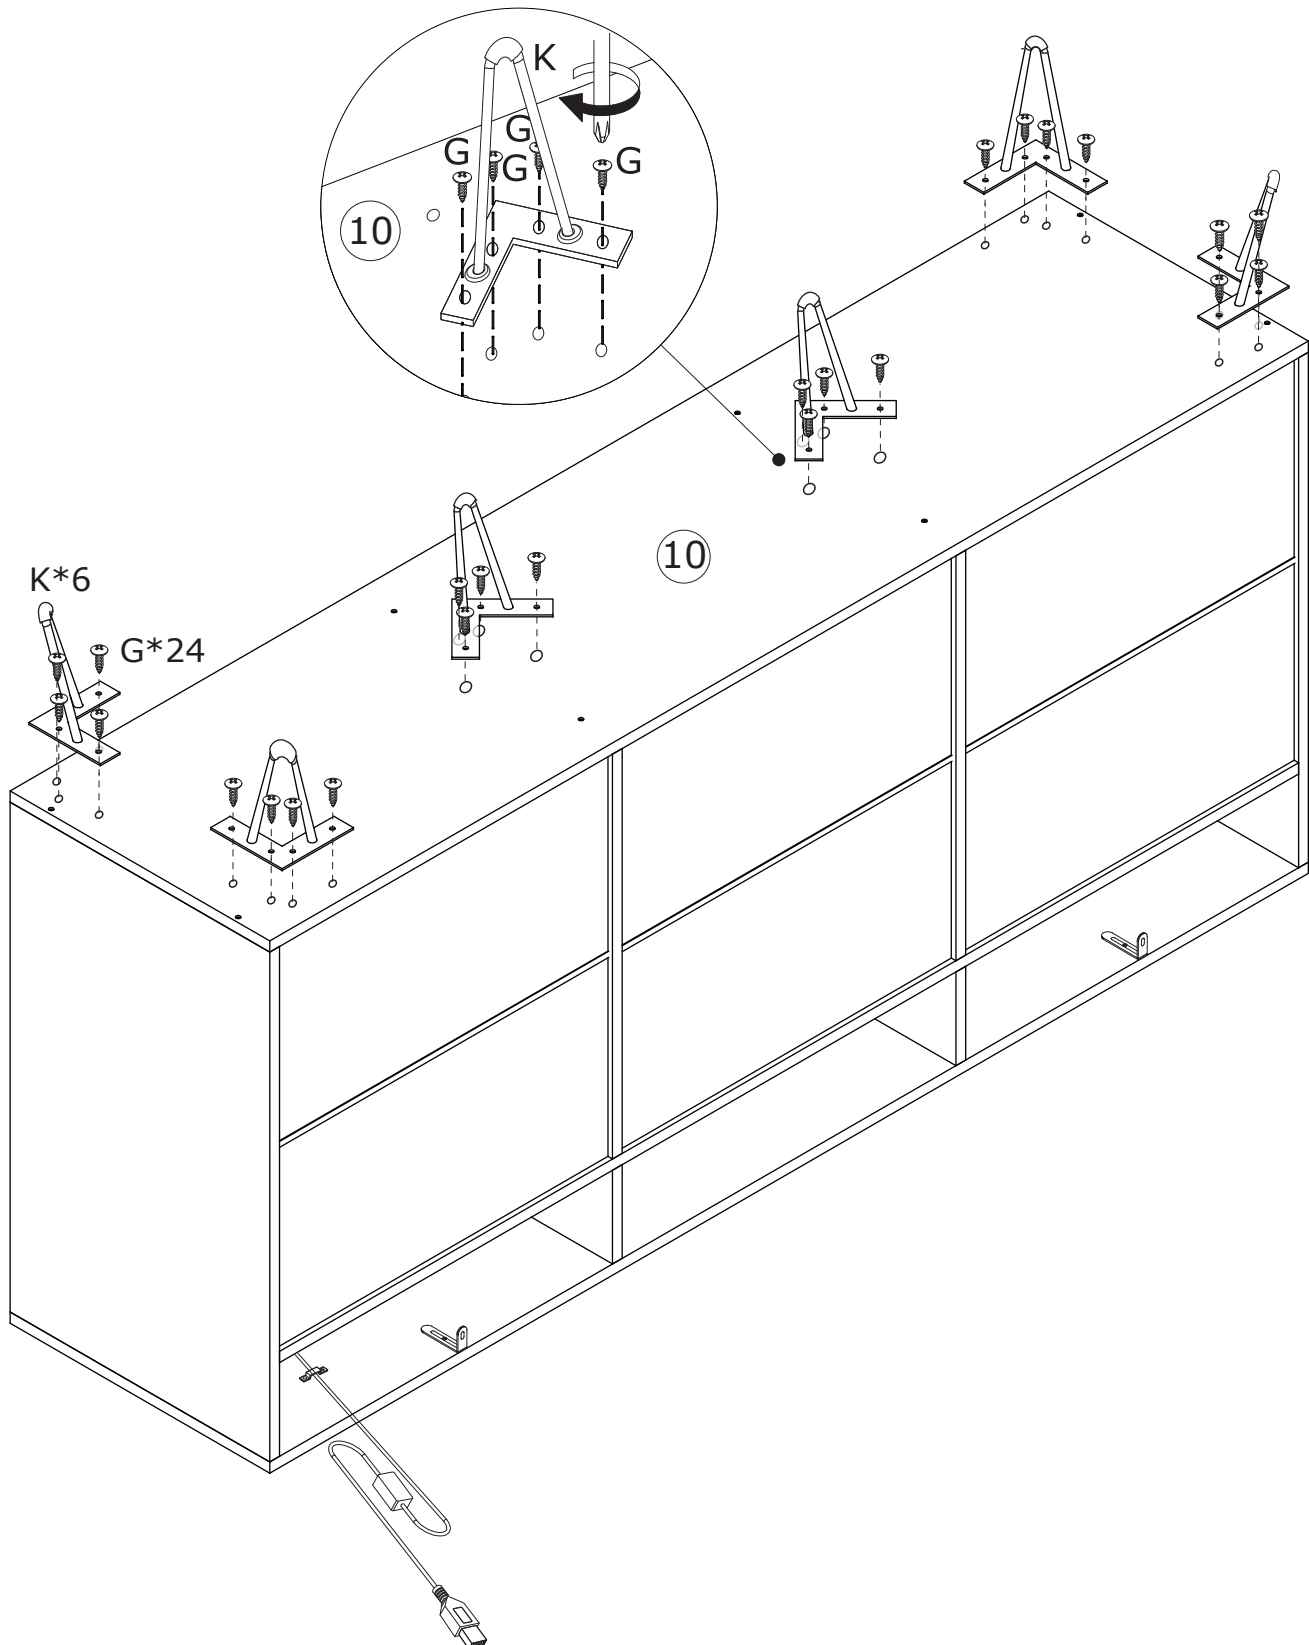


13

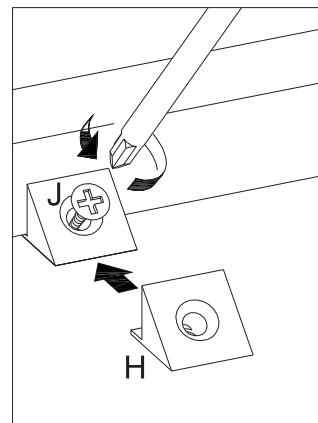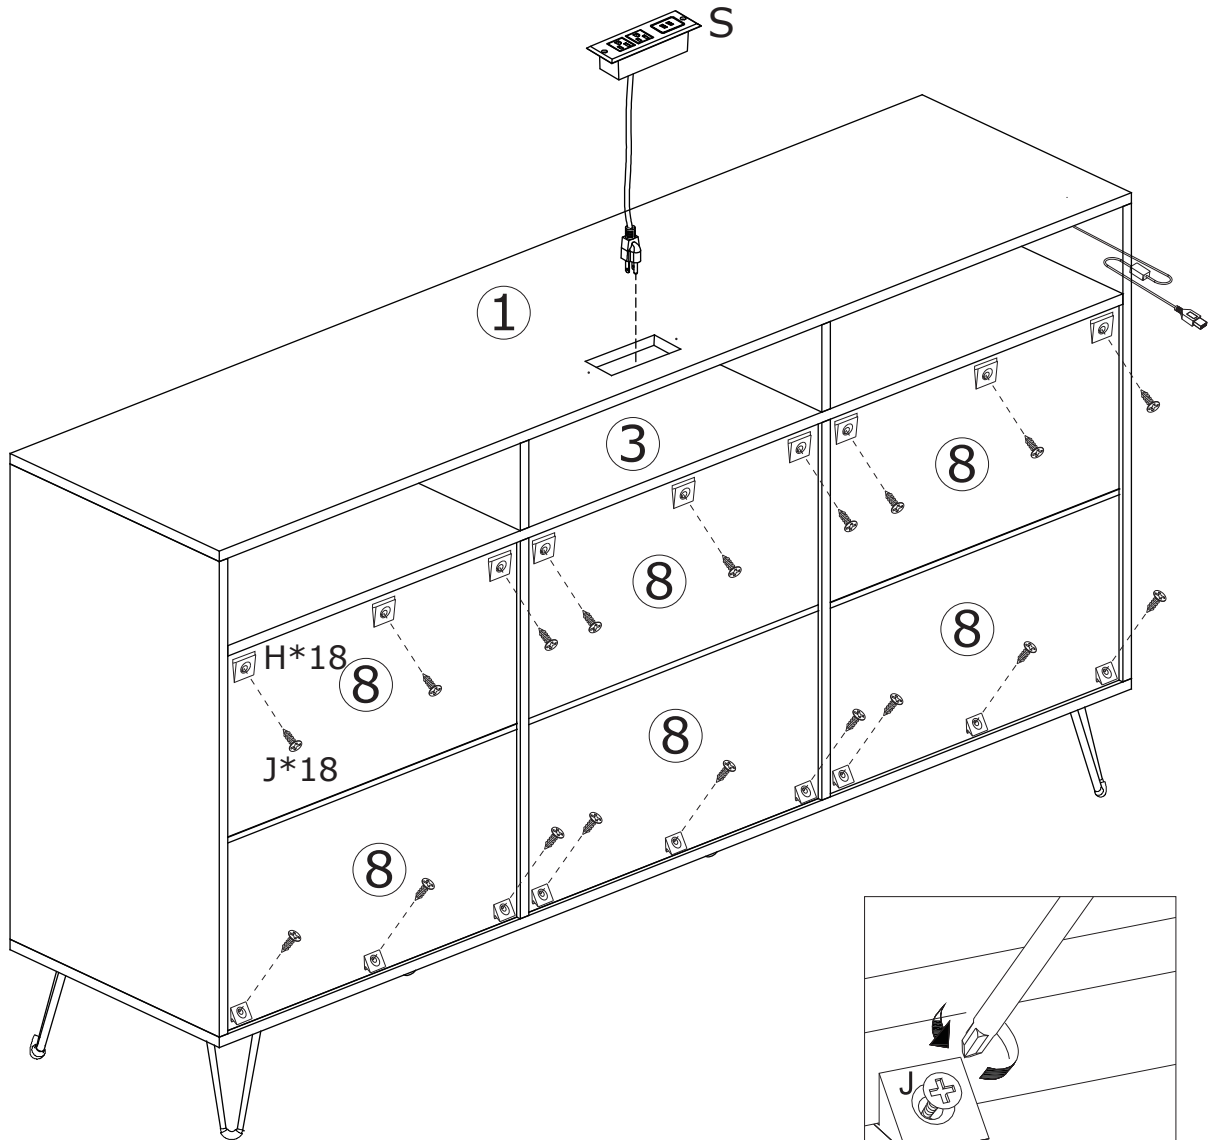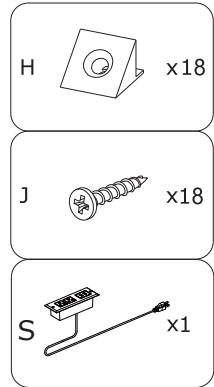


14


T  x2

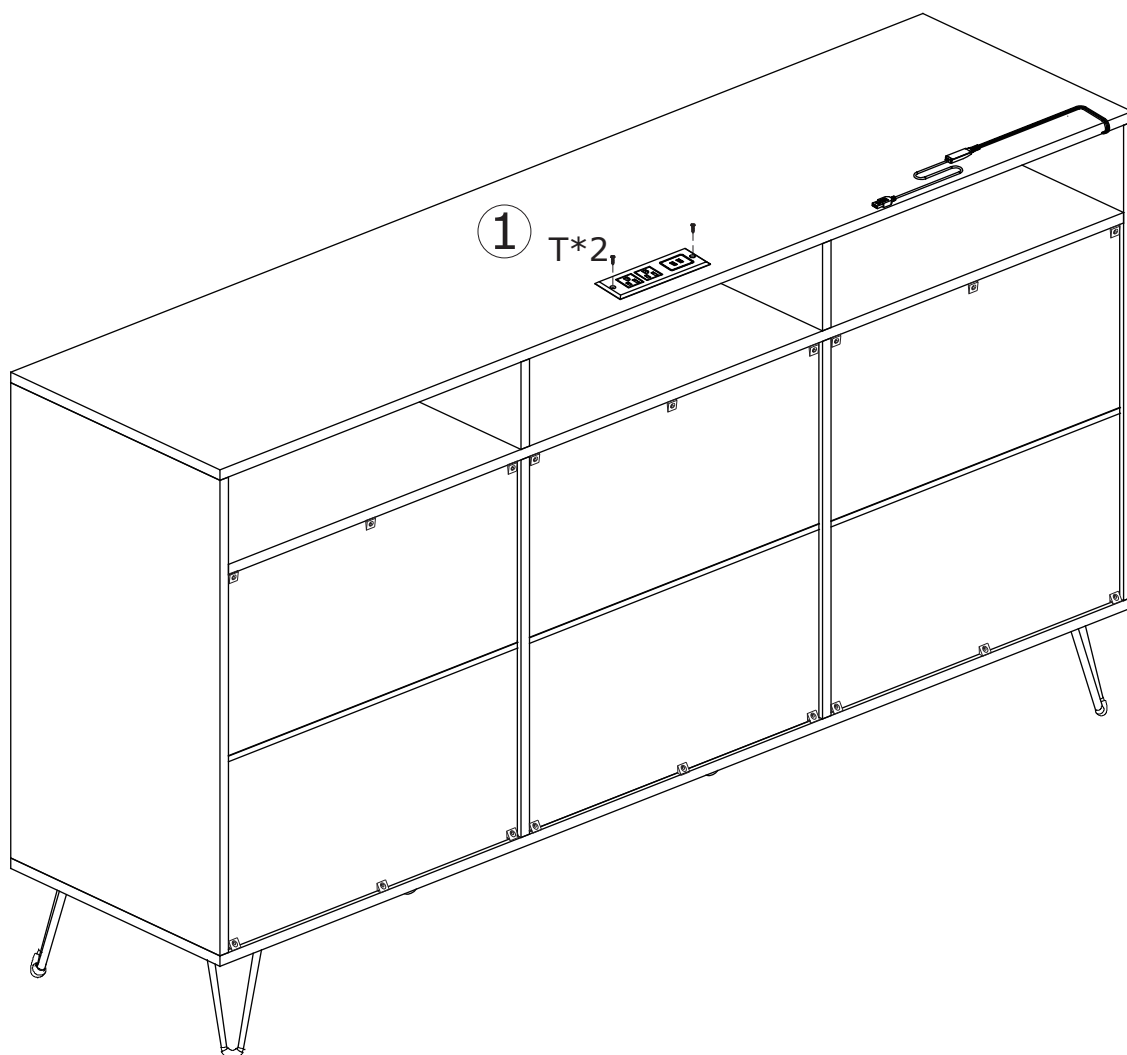




15

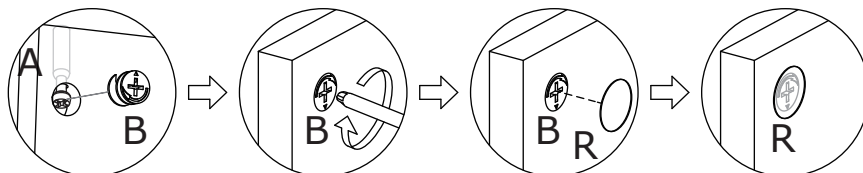

Tear off the film of plates 14 before assembly.

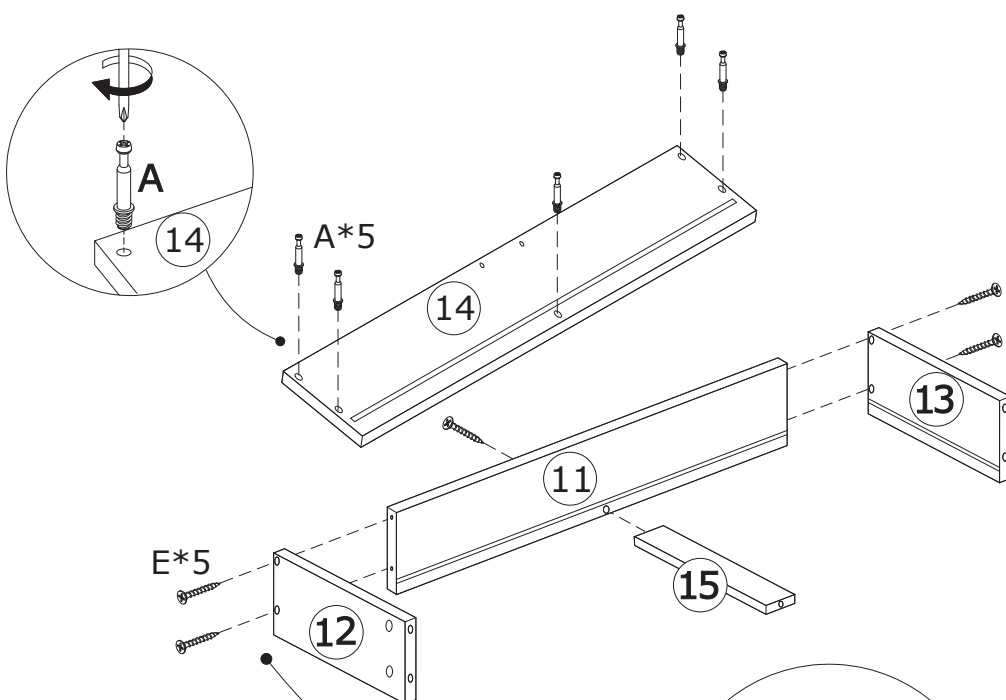


A		x45
B		x45
E		x45
F		x18
N		x9
R		x45

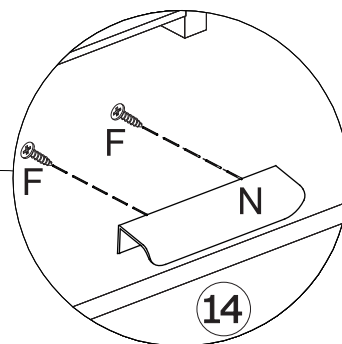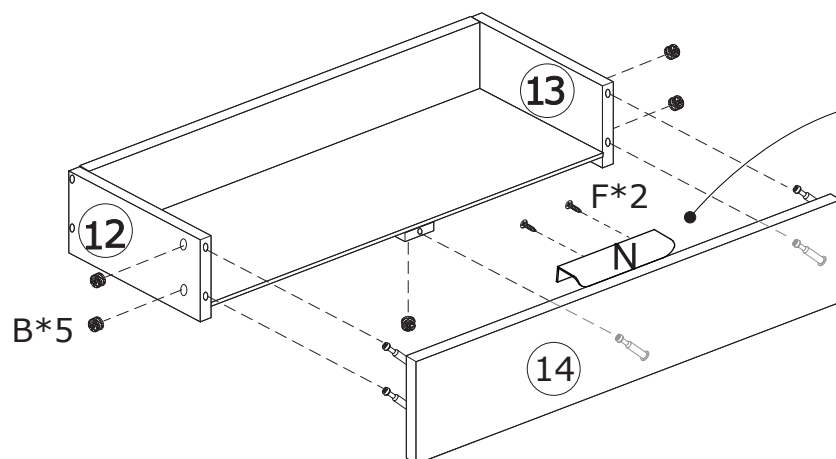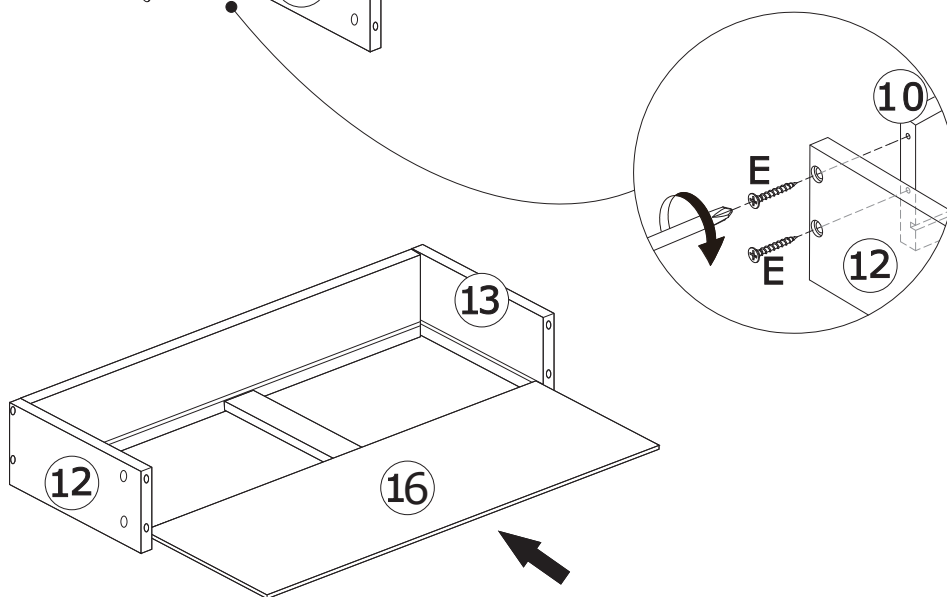




x9

16

F  x54





DL  x9

DR  x9

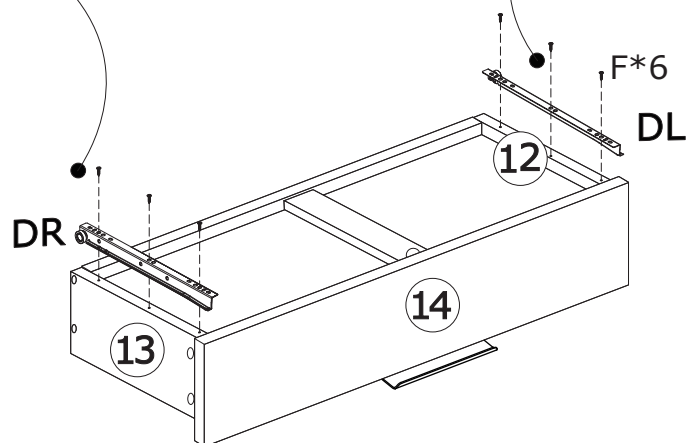
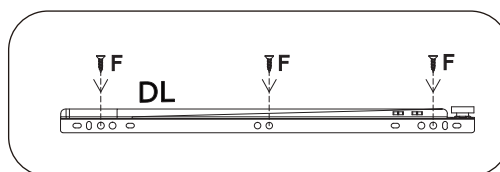
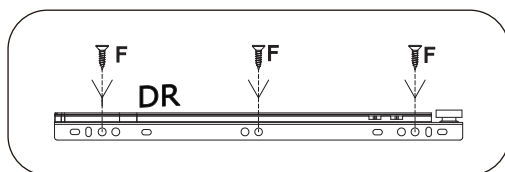


X9

17

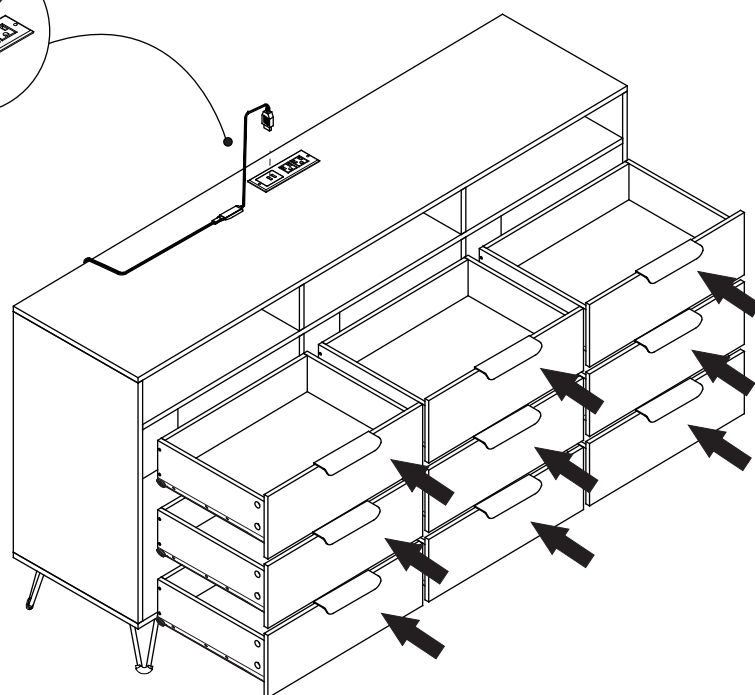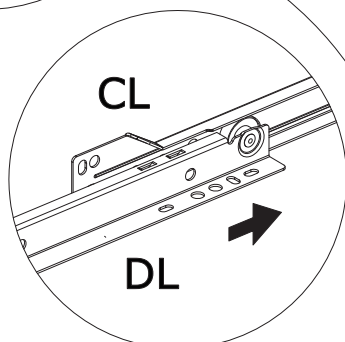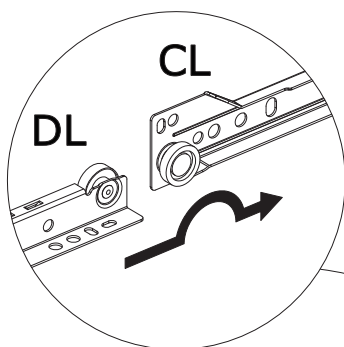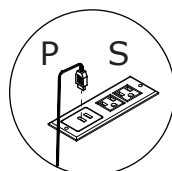

18

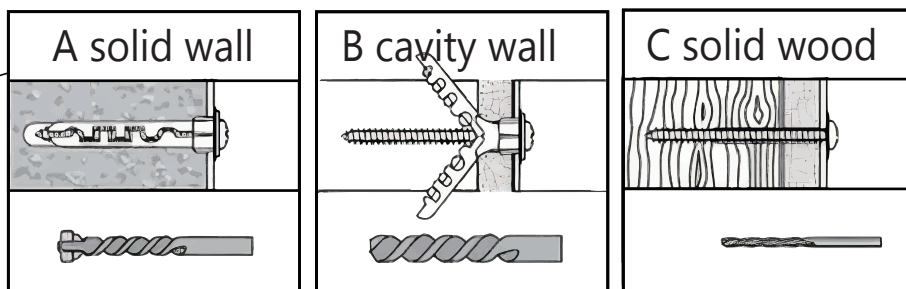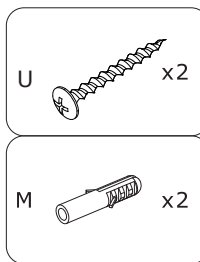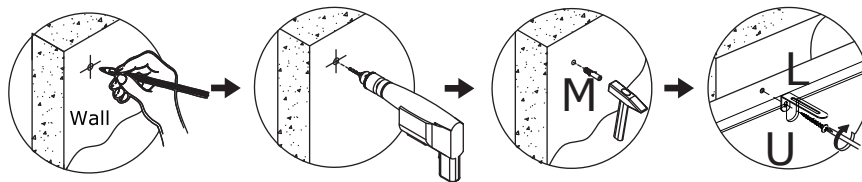

! Warning: If you overturn the furniture, it may cause serious or fatal crushing injuries. We have a wall connection device attached, please use it to hold the furniture following these instructions.

1. Mark the corresponding hole positions where you want to place the furniture;
2. Use a impact drill to drill holes and pay attention to avoid wires and water pipes;
3. Knock the expansion pipes into the wall holes;
4. Place the furniture in the corresponding position and tighten the wall connection device with screws.

