


ROVSUN

ROVSUN STAINLESS STEEL TABLE WITH CABINET ASSEMBLY INSTRUCTION

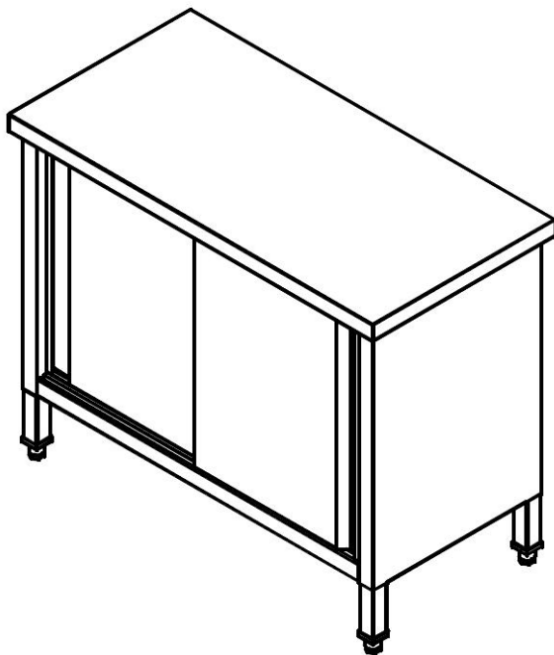

Thank you for purchasing from Rovensun!
If you have any problem, please feel free to contact us via email. We will solve the problem for you as soon as possible after confirmation.




IMPORTANT

THIS INSTRUCTION BOOKLET CONTACTS IMPORTANT SAFETY INFORMATION.
PLEASE READ AND KEEP FOR FUTURE REFERENCE

COMPONENTS


A Upper Back Panel

1PC

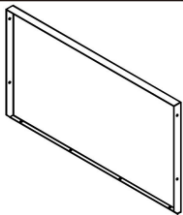


B Lower Back Panel

1PC

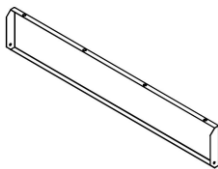


C Shelf Panel

1PC

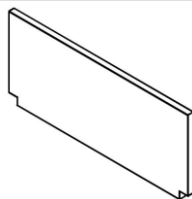


D Slide Rail

1PC

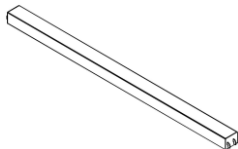


E Bottom Panel

1PC

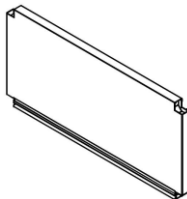


F Top Panel

1PC

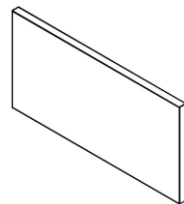


G Right Back Panel

1PC




H Left Back Panel

1PC




I Right Door Panel

1PC




J Left Door Panel

1PC




K Fixed Bracket

1PC



L Metal Shelf Bracket

4PC

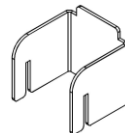

M Hexagonal Cross Wrench

1PC



N M6*10 Screws

14PC




P M6*35 Screws

5PC








Q M4*10 Screws

3PC





Step 1

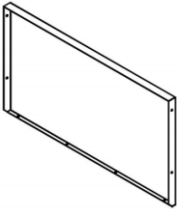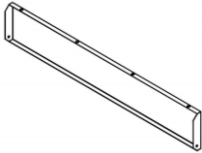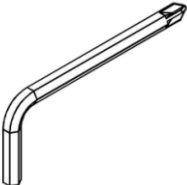A 	B 	N 	M 
Upper Back Panel	Lower Back Panel	M6*10 Screws	Hexagonal Cross Wrench

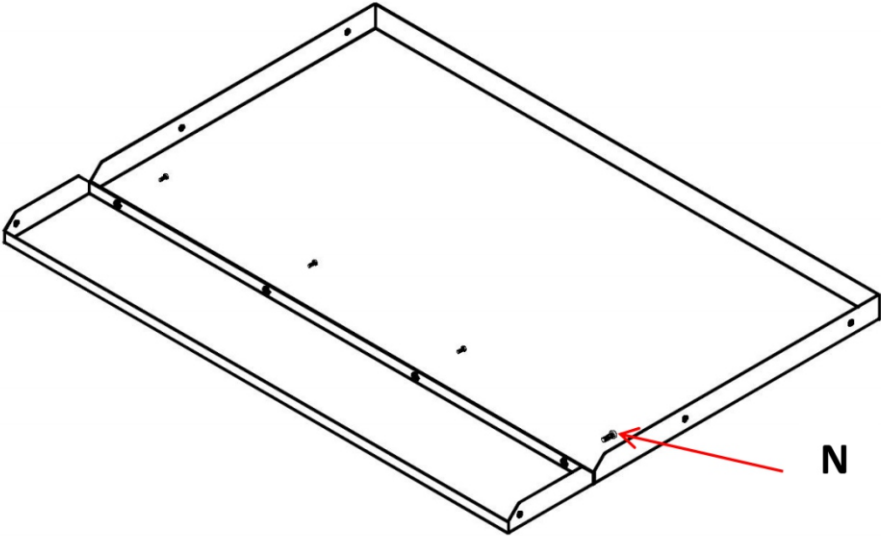


Align the holes of the upper back panel A with the hole of lower back panel B, and fix them with N screws

Step 2

E	H	N	M
			
Bottom Panel	Left Back Panel	M6*10 Screws	Hexagonal Cross Wrench



P


M6*35 Screws * 2

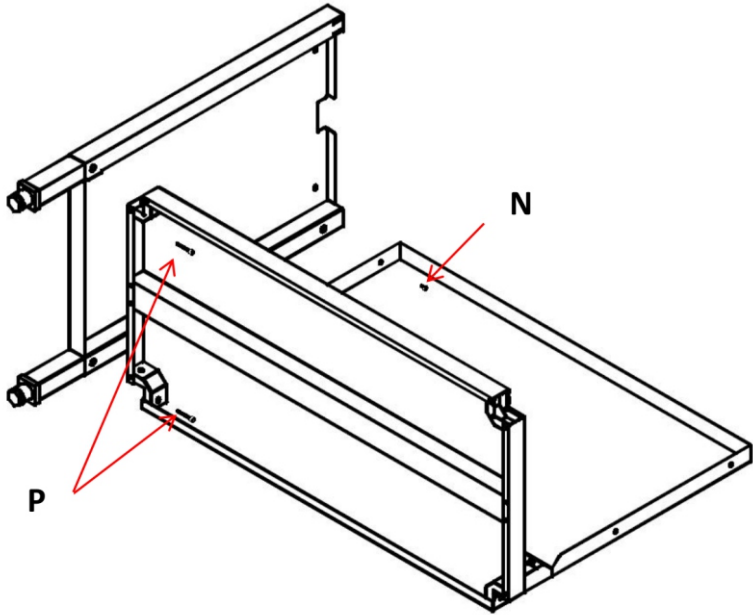

Bottom panel E is placed on the back panel.
Left side panel H near the bottom panel E, align the hole and fix them with screws P.
Align the hole of the back panel with the hole of left side panel H and fix them with screws N.

Step 3


I	P	N	M
			
Right Door Panel	M6*35 Screws	M6*10 Screws	Hexagonal Cross Wrench

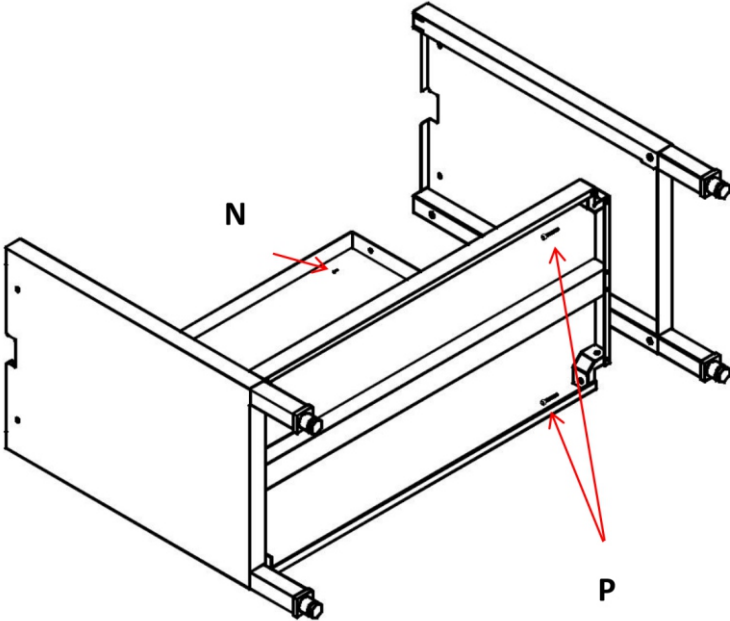


The right side panel G near the bottom plate E , align the hole and then fix them with screws P
Align the hole of the back panel and the hole of right side panel G and fix them with screws N.

Step 4



D

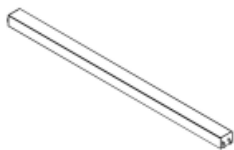

Slide Rail

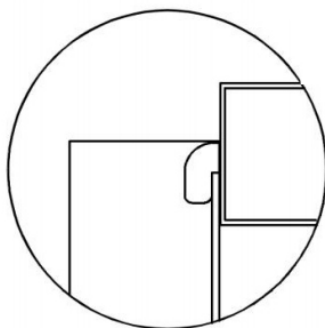

Align the hole position

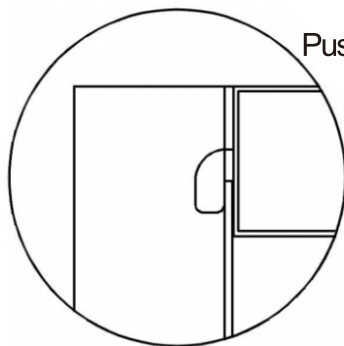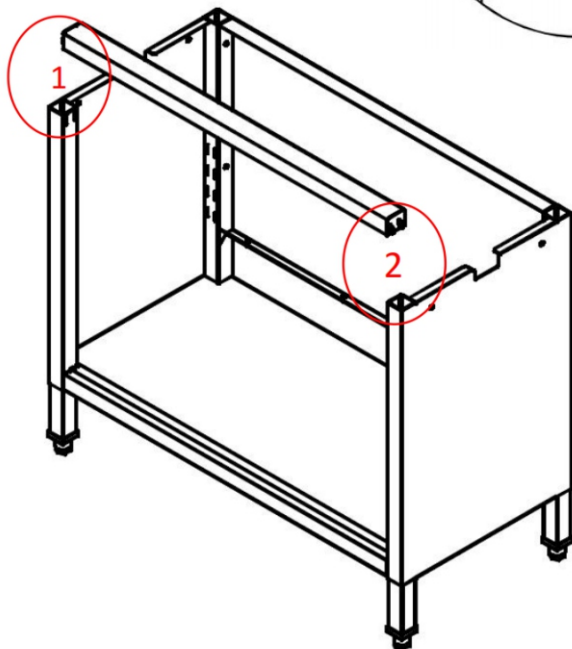



Push down




Align the buckle of the slide rail D with the hole on side 1 and press it down to fix it.

Align the buckle of the slide rail D with the holes on side 2 and press it down to fix it.

Step 5

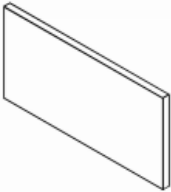
F 	N 	M 
Top Panel	M6*10 Screws	Hexagonal Cross Wrench

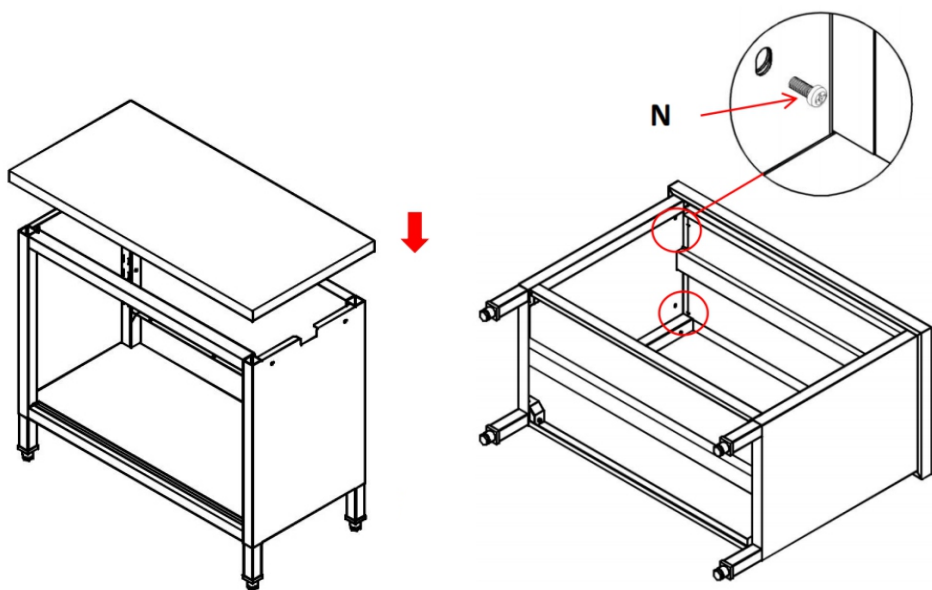


Put the top panel F on the cabinet and align the holes on the inside, and then fix it with screw N

Step 6

L

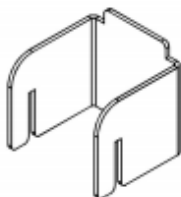


Metal Shelf Bracket 4PC

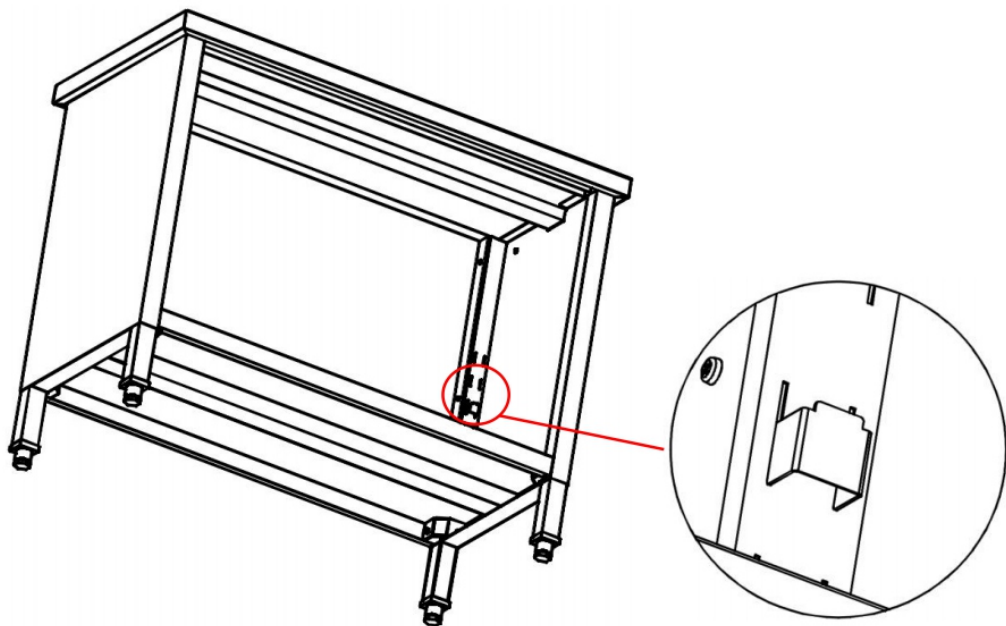



Put the 4 metal shelf bracket L on the tube hole of corresponding height.

Step 7

C

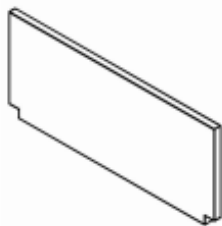

Shelf Panel

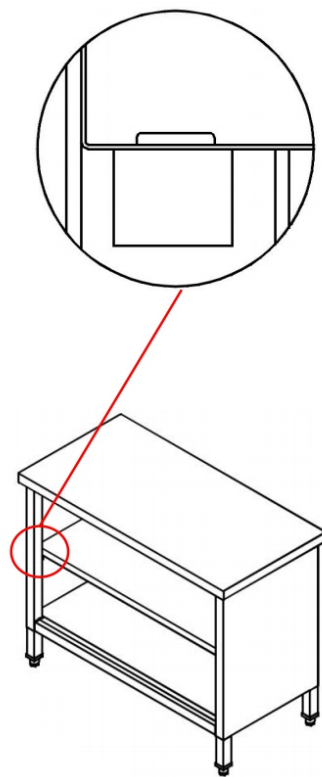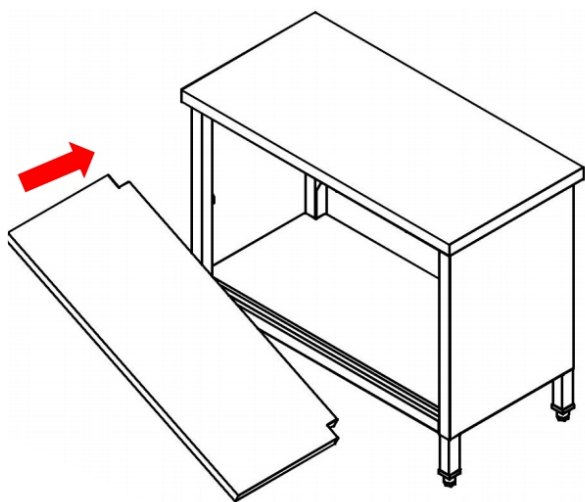

Place shelf panel C diagonally into the cabinet, and then straighten the Shelf Panel C.



Insert the hole of the shelf panel C into metal shelf bracket L.

Step 8

J






Left Door Panel

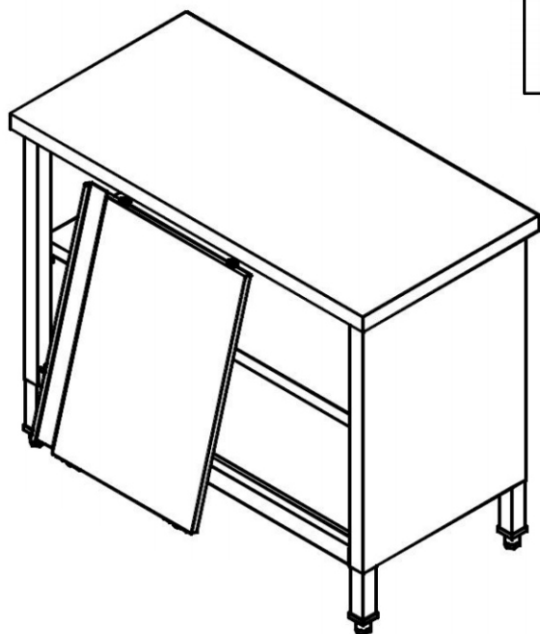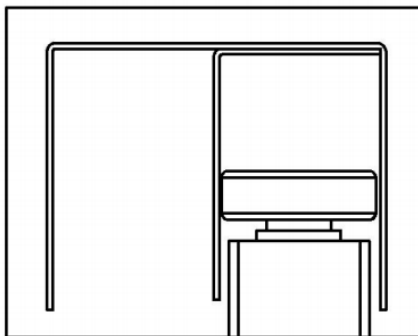

Place the left door panel J diagonally onto the second slide rail ,
and then straighten left door panel J, corresponding to the second slide rail .

Step 9

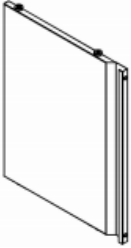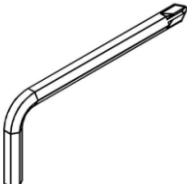
I	K	Q	M
			
Right Door Panel	Fixed Bracket	M4*10 Screws	Hexagonal Cross Wrench

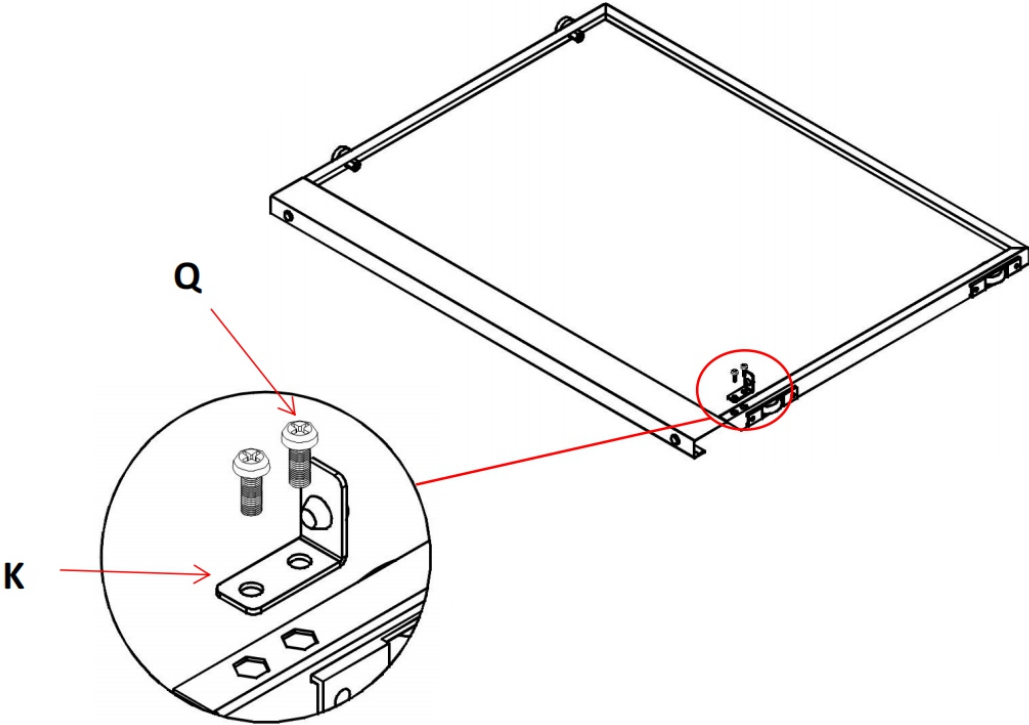



Fix the fixed bracket K to the corresponding hole of the right door panel I with screw Q

Step 10

I

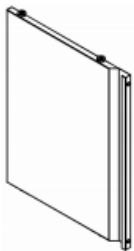

Right Door Panel

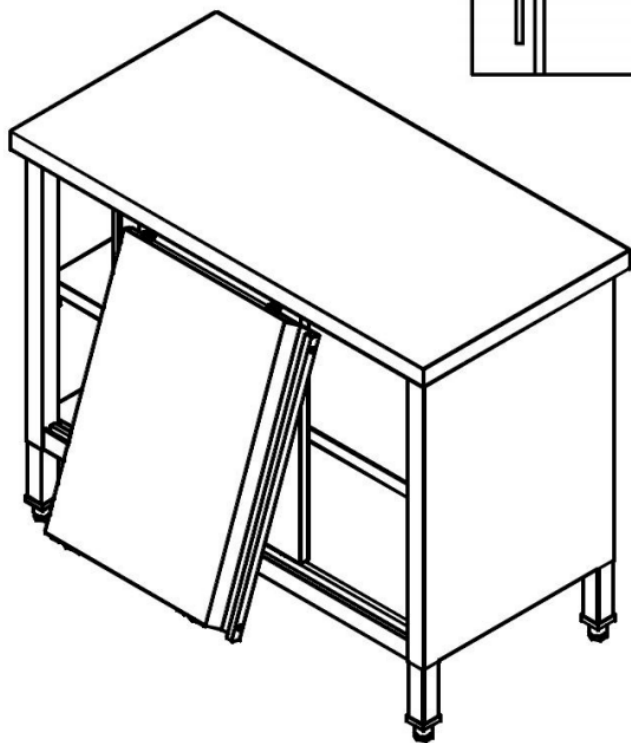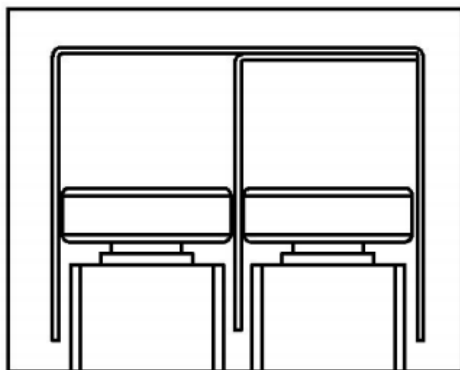

Place the right door panel I diagonally onto the first slide rail ,
and then straighten right door panel I , corresponding to the first slide rail