

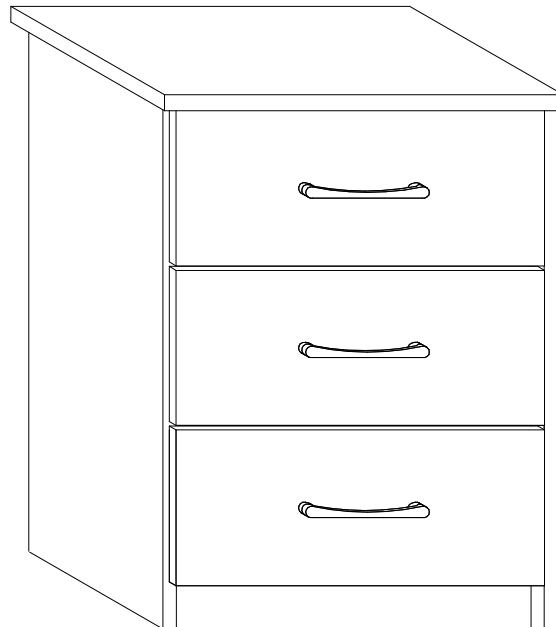
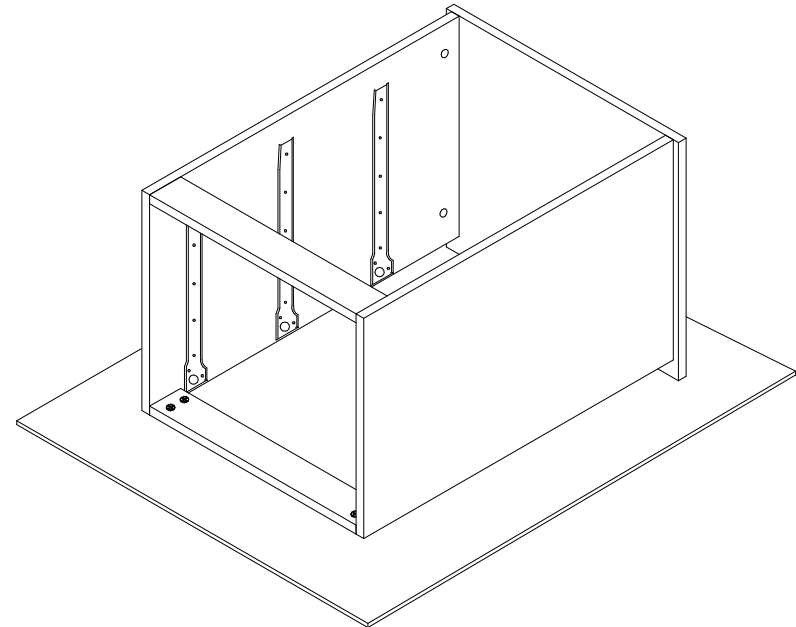



## NIGHT STAND

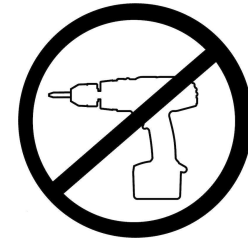

Required Tools : Screwdriver & Hammer

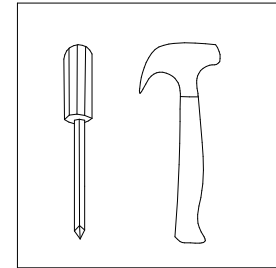


Please place on the carton while installing to prevent damage or scratches.

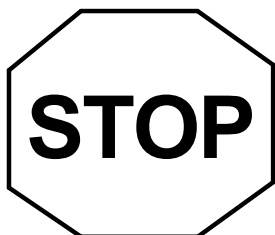

# ASSEMBLY INSTRUCTION ( PART & HARDWARE LIST )


## NIGHT STAND

1.

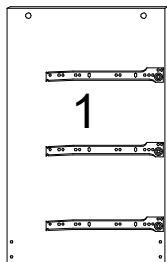

SIDE PANEL (R)

2.

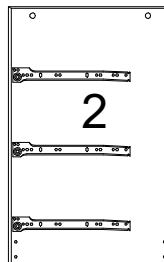

SIDE PANEL (L)

3.


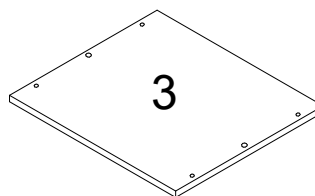



TABLE TOP

4.

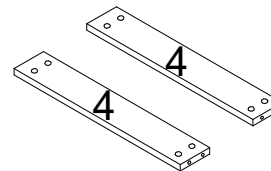

FRONT & BACK  
APRON (2PCS)

5.

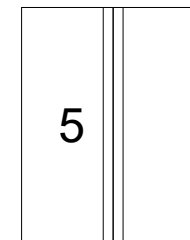


BACK PANEL

6.




DRAWER PANEL  
(3PCS)

7.



DRAWER TOP (3PCS)

8.




DRAWER BACK PANEL  
(3PCS)

9.



DRAWER SIDE PANEL  
R (3PCS)



10.



DRAWER SIDE PANEL  
L (3PCS)


| NO                                    | HARDWARE DESCRIPTION                                                                                       | QTY |
|---------------------------------------|------------------------------------------------------------------------------------------------------------|-----|
| A.                                    | Plastic Handle          | 3   |
| B.                                    | Handle Screw M4 X 40mm  | 6   |
| C.                                    | Wood Dowel M6 X 30mm    | 18  |
| D.                                    | JCBC Bolt M6 X 50mm   | 6   |
| E.                                    | Nail                  | 24  |
| F.                                    | Wood Dowel M8 X 30mm  | 2   |
| G.                                    | Allen Key             | 1   |
| H.                                    | Cam Screw             | 24  |
| I.                                    | Cam Lock              | 24  |
| J.                                    | Barrel Nut M6 X 13mm  | 6   |
| *Screw Driver and Hammer Not Provided |                                                                                                            |     |

# NIGHT STAND

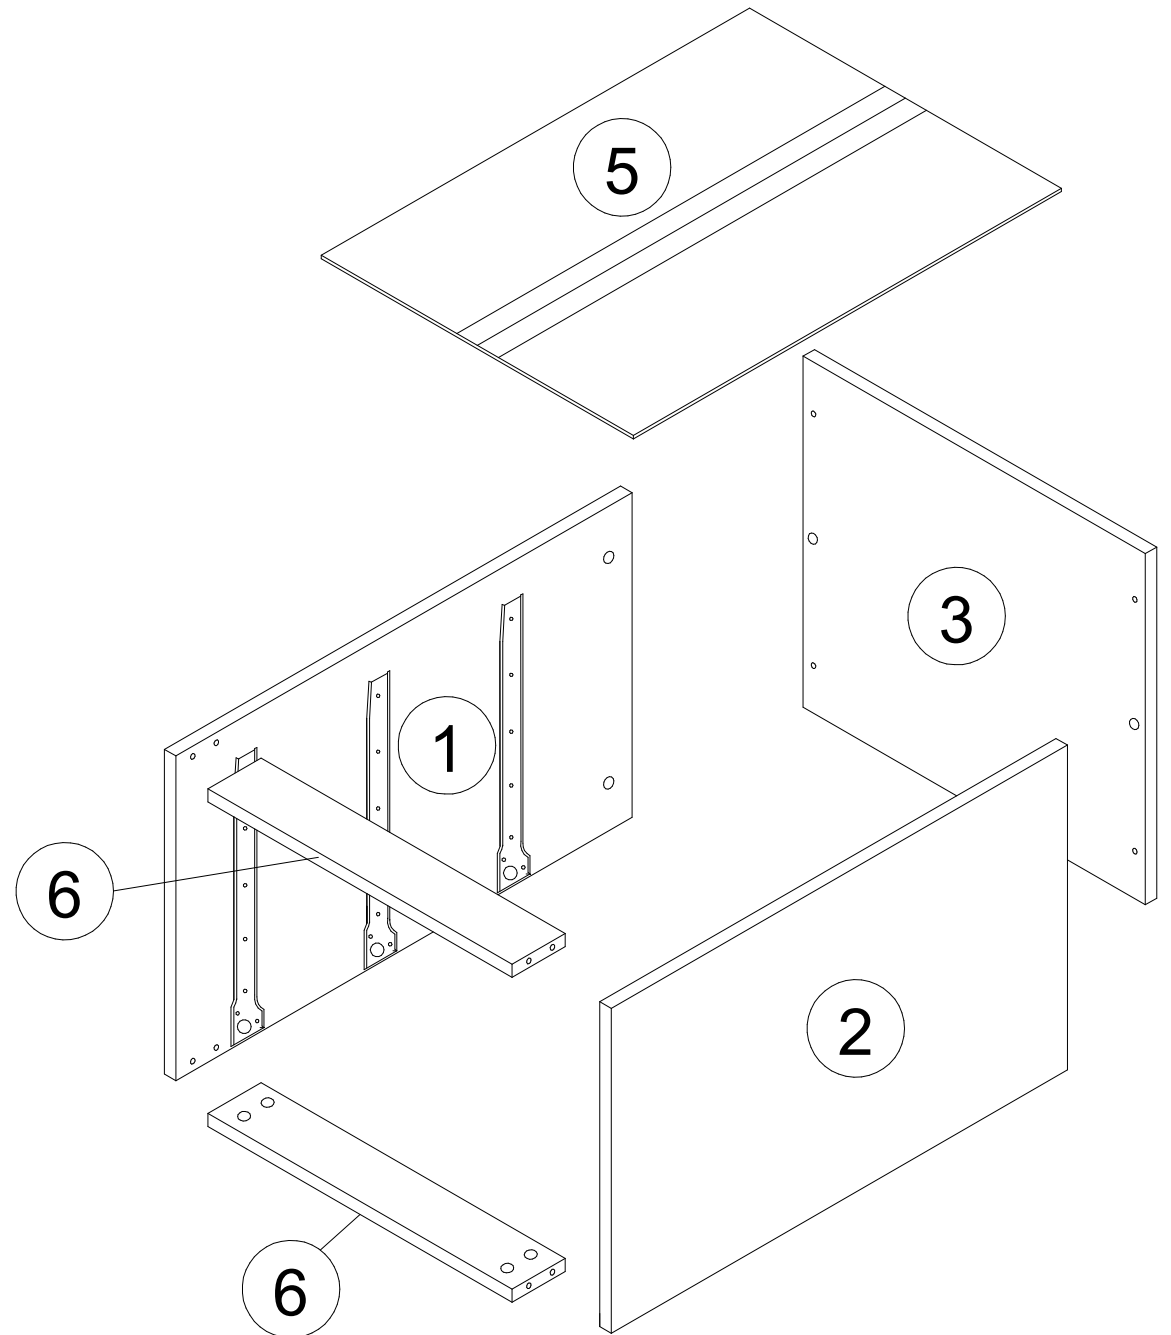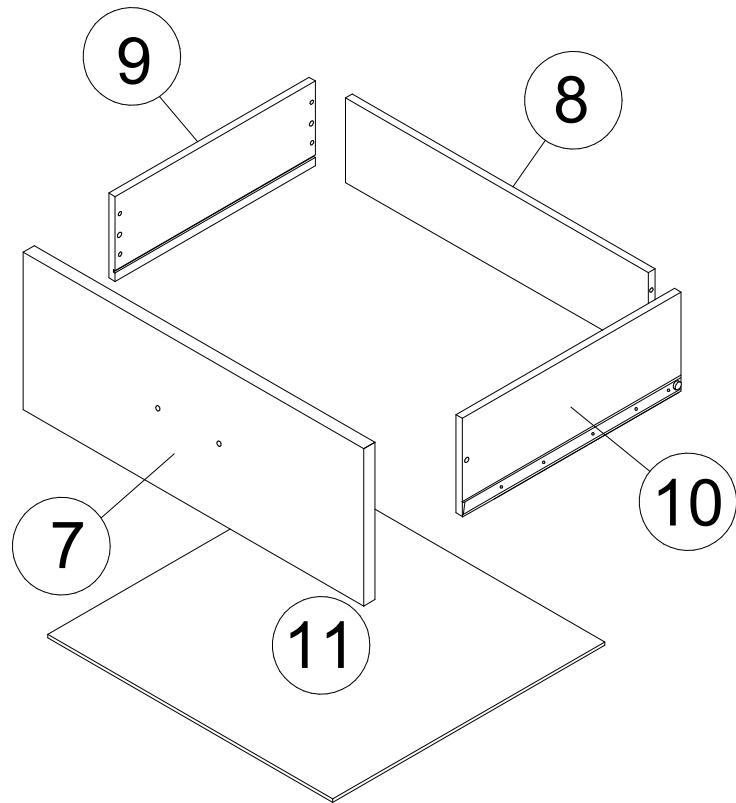


# ASSEMBLY INSTRUCTION NIGHT STAND

## STEP 1.

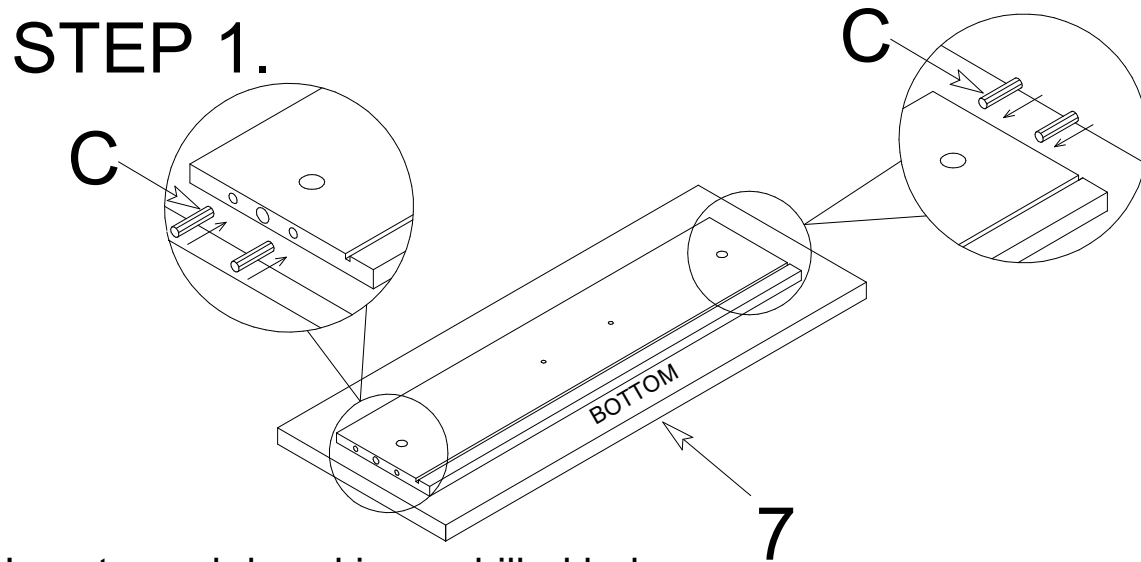


Insert wood dowel in predrilled hole.

## STEP 2.

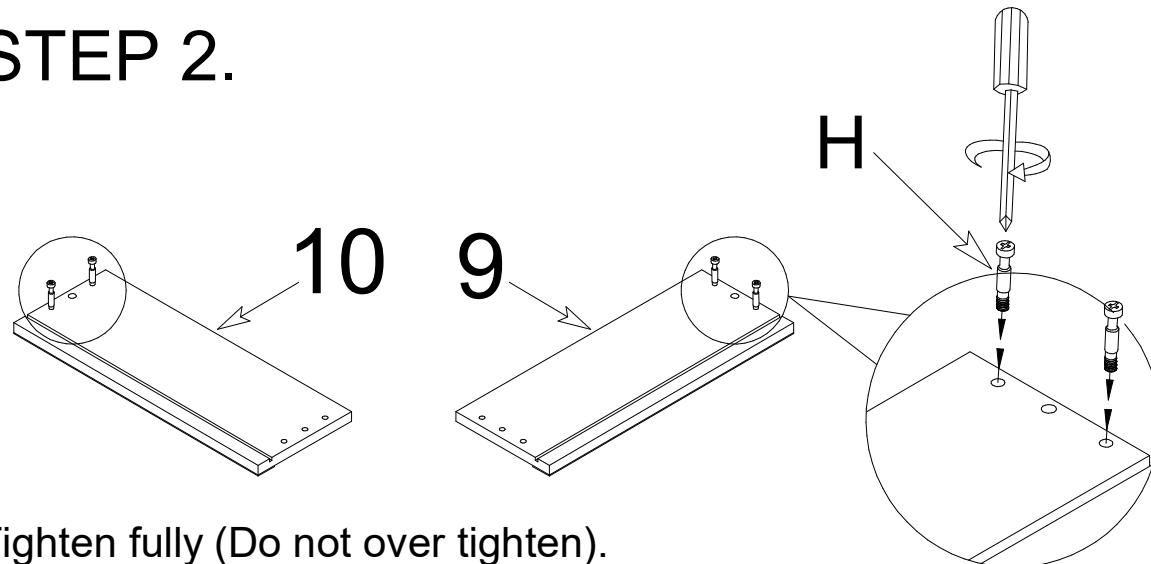

Tighten fully (Do not over tighten).


## STEP 3.

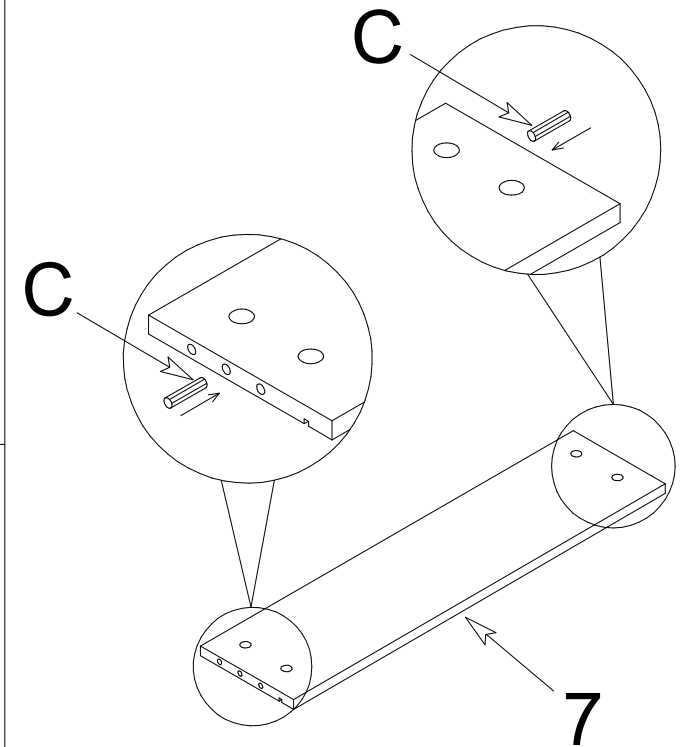


Insert wood dowel in predrilled hole.

# ASSEMBLY INSTRUCTION NIGHT STAND


## STEP 4.

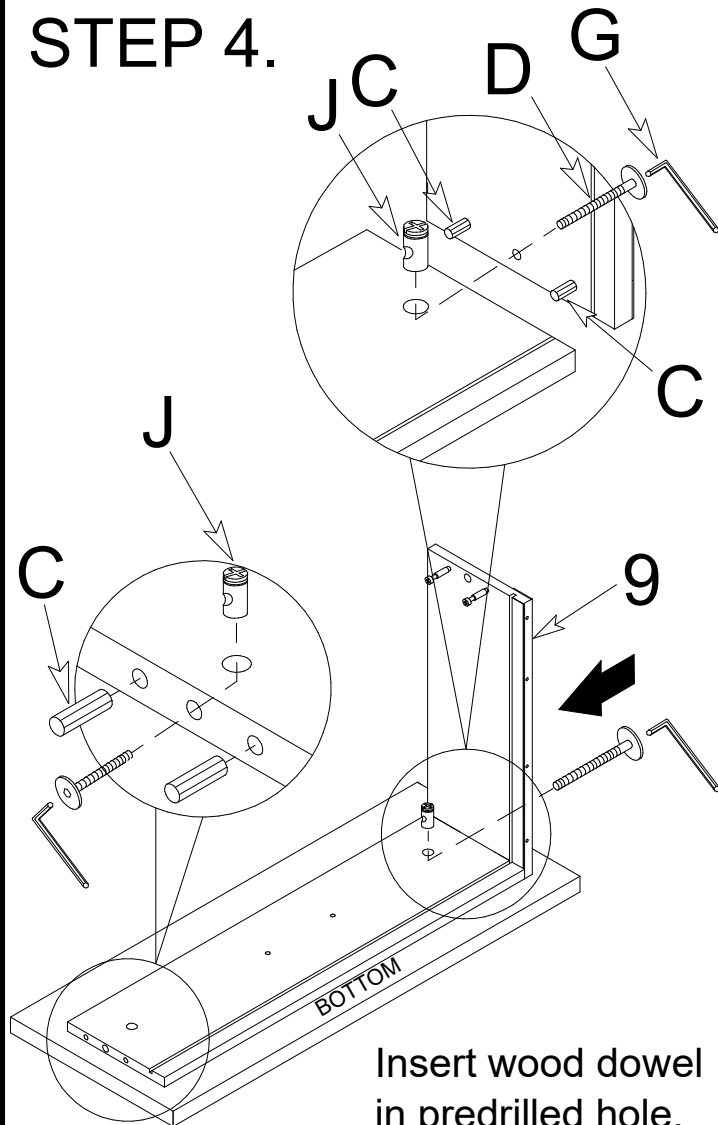

## STEP 5.

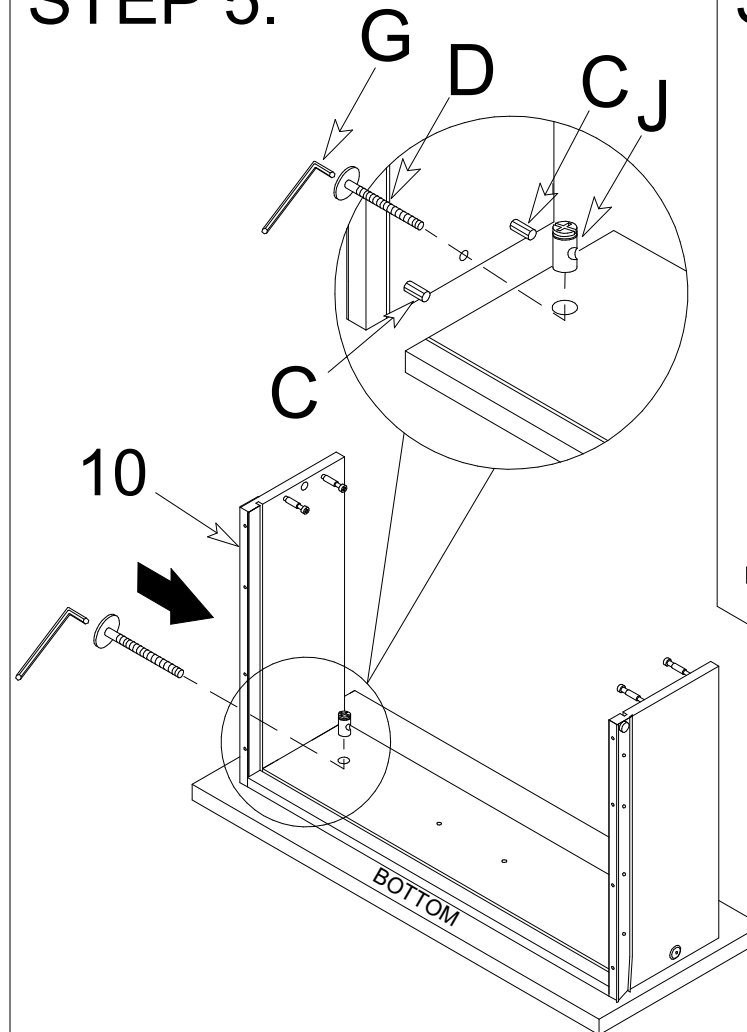


## STEP 6.

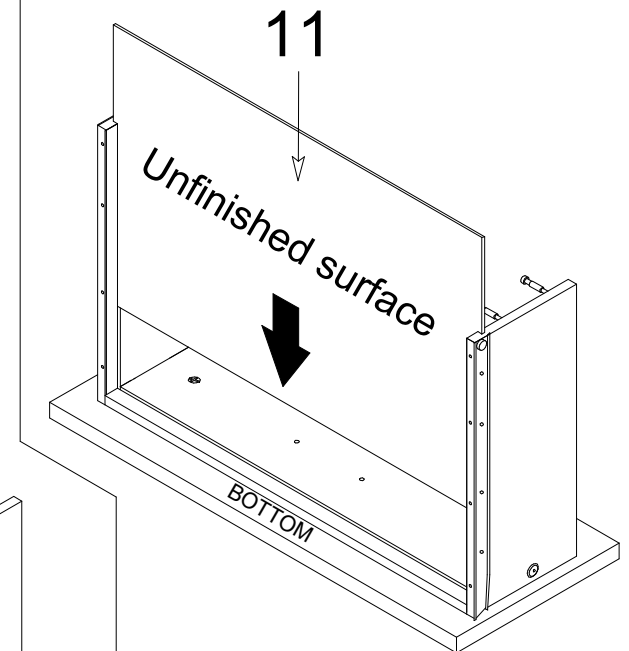


# ASSEMBLY INSTRUCTION NIGHT STAND

## STEP 7.

Tighten fully. (Do not over tighten).

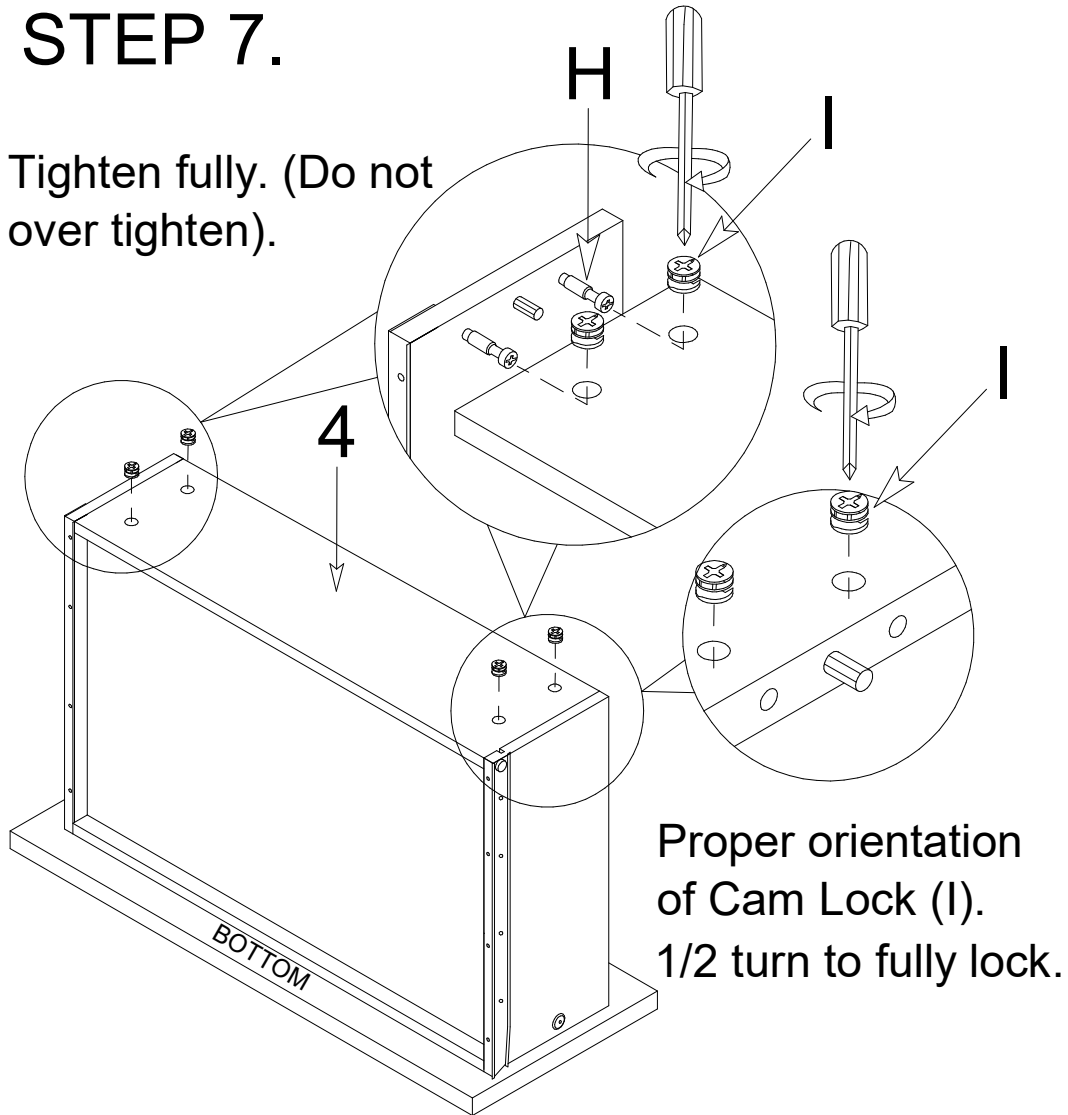

## STEP 8.

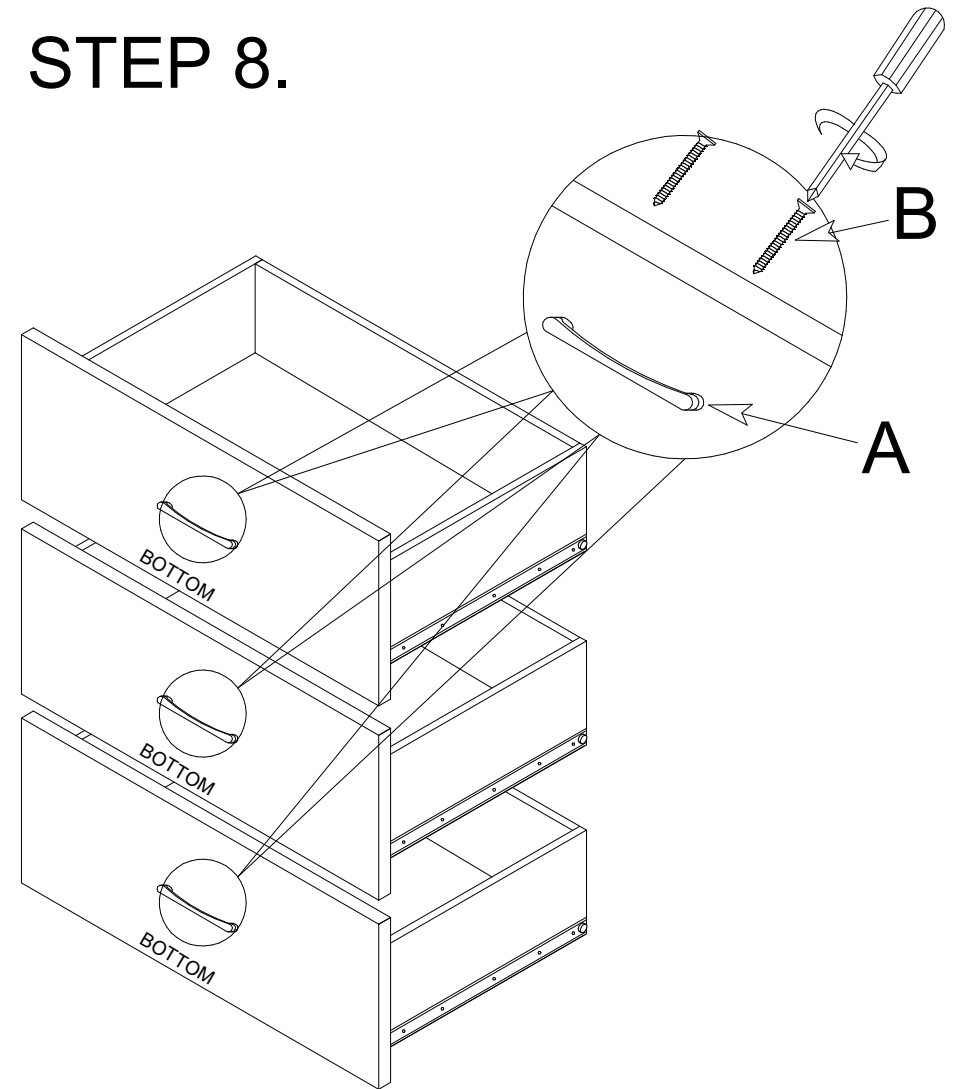


Attach handle using handle screw (B).

# ASSEMBLY INSTRUCTION NIGHT STAND

## STEP 9.


Tighten fully.  
(Do not over tighten).

Insert wood dowel  
in predrilled hole.

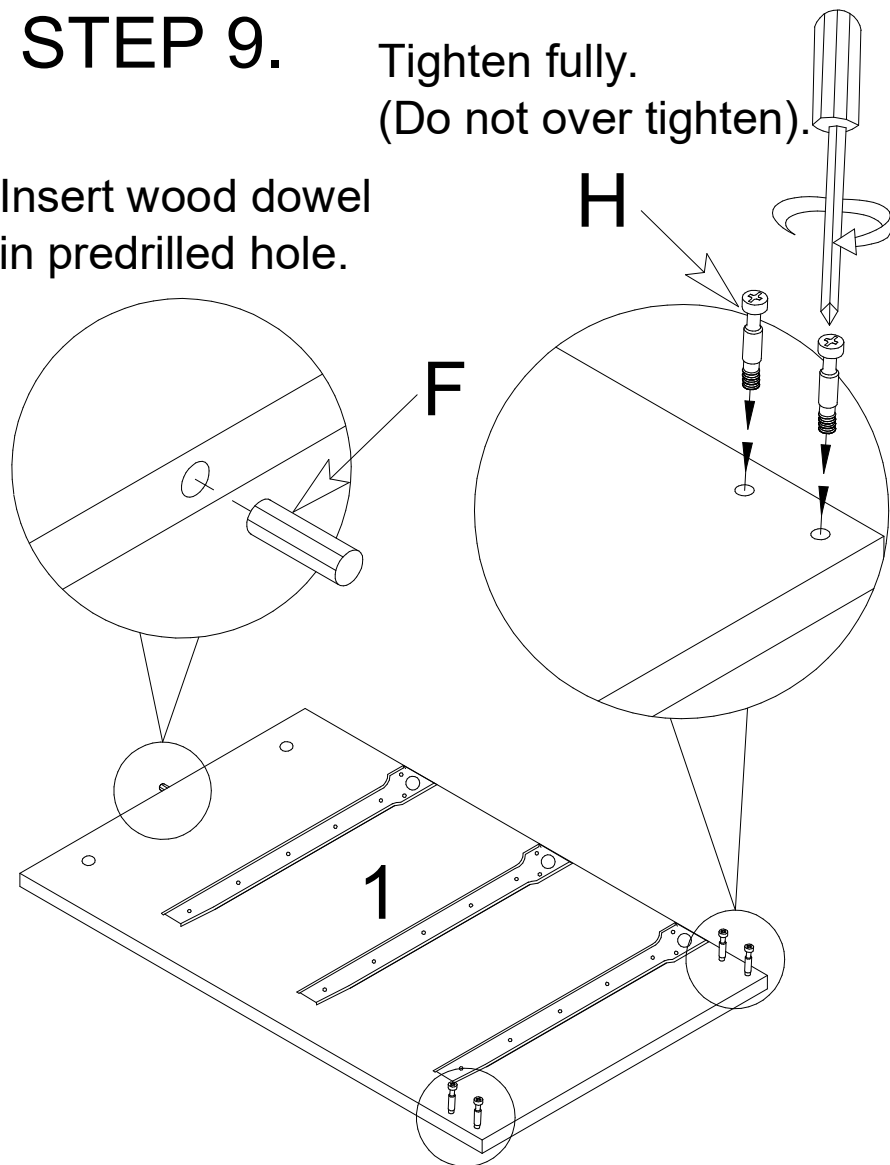


## STEP 10.

Insert wood dowel  
in predrilled hole.

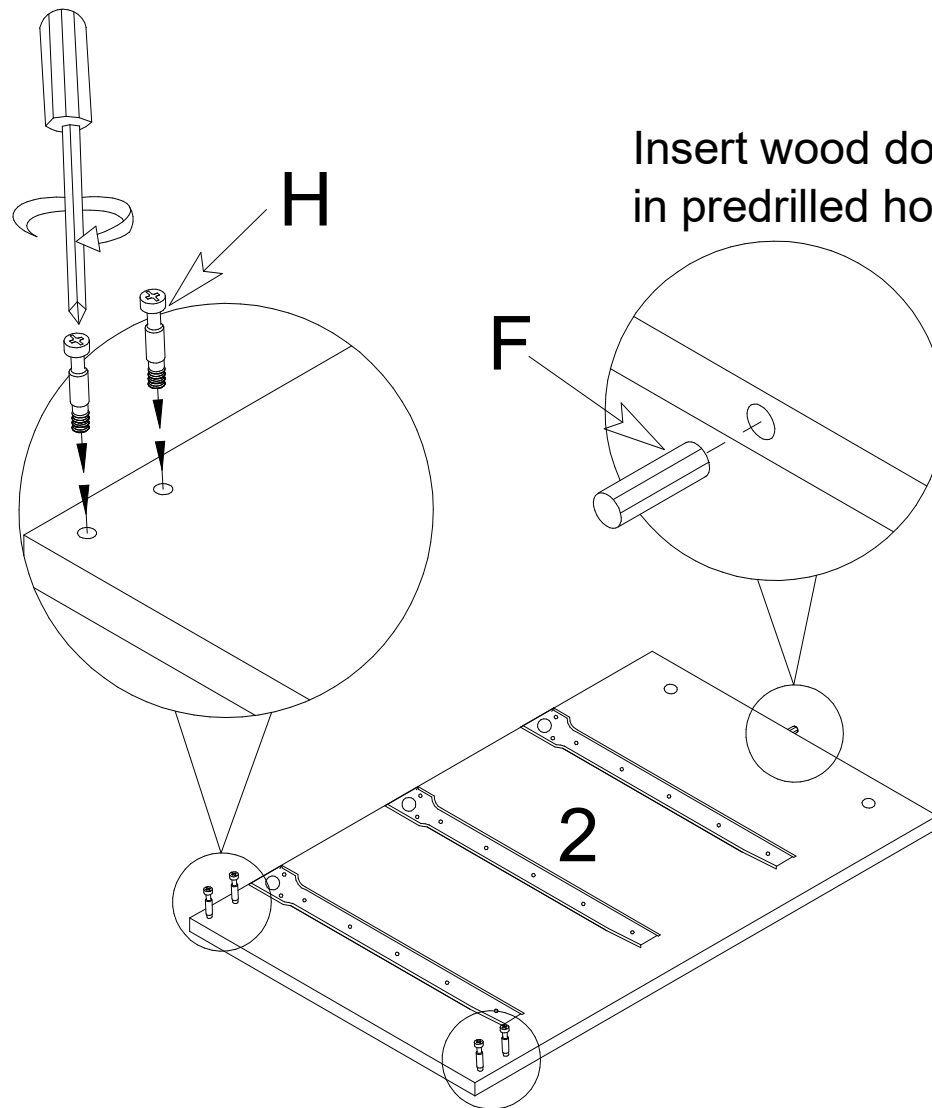


# ASSEMBLY INSTRUCTION NIGHT STAND

## STEP 11.

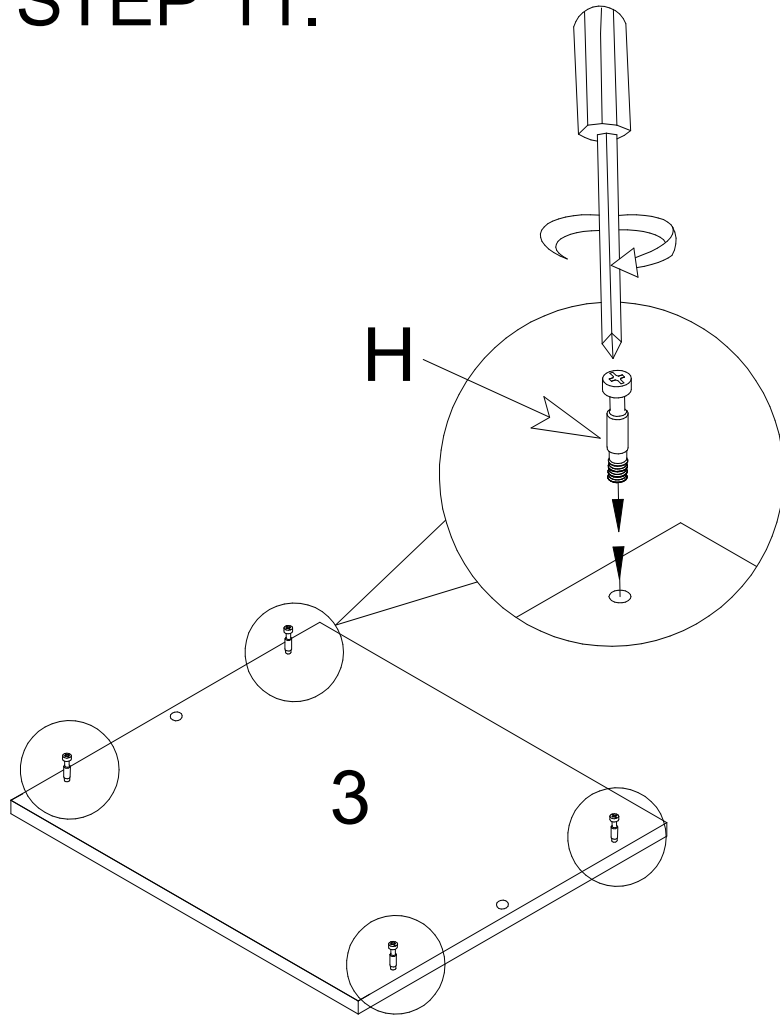

Tighten fully. (Do not over tighten).


## STEP 12.

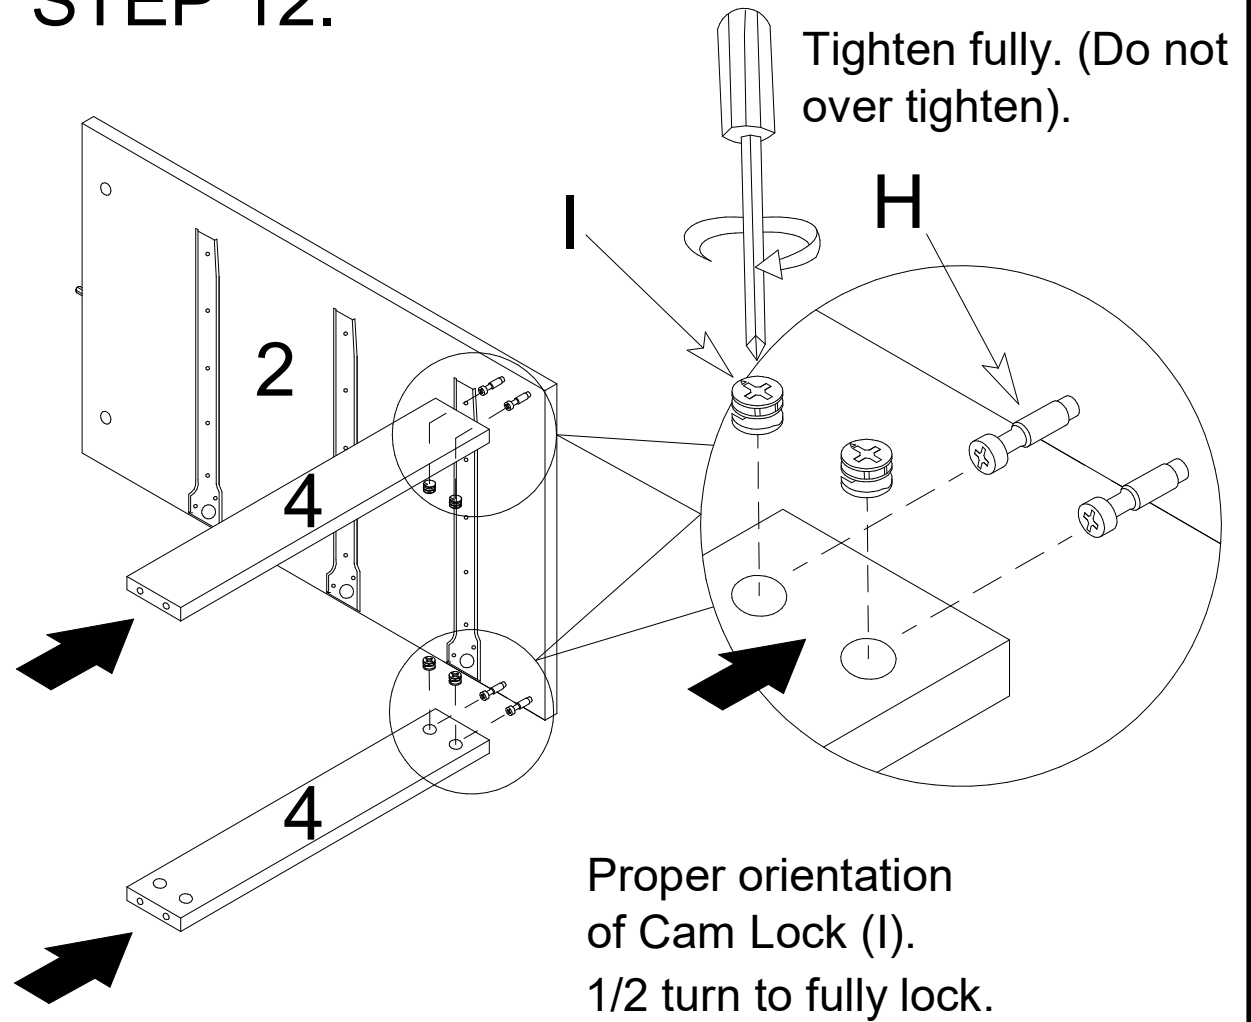

# ASSEMBLY INSTRUCTION NIGHT STAND


## STEP 13.

Tighten fully. (Do not over tighten).

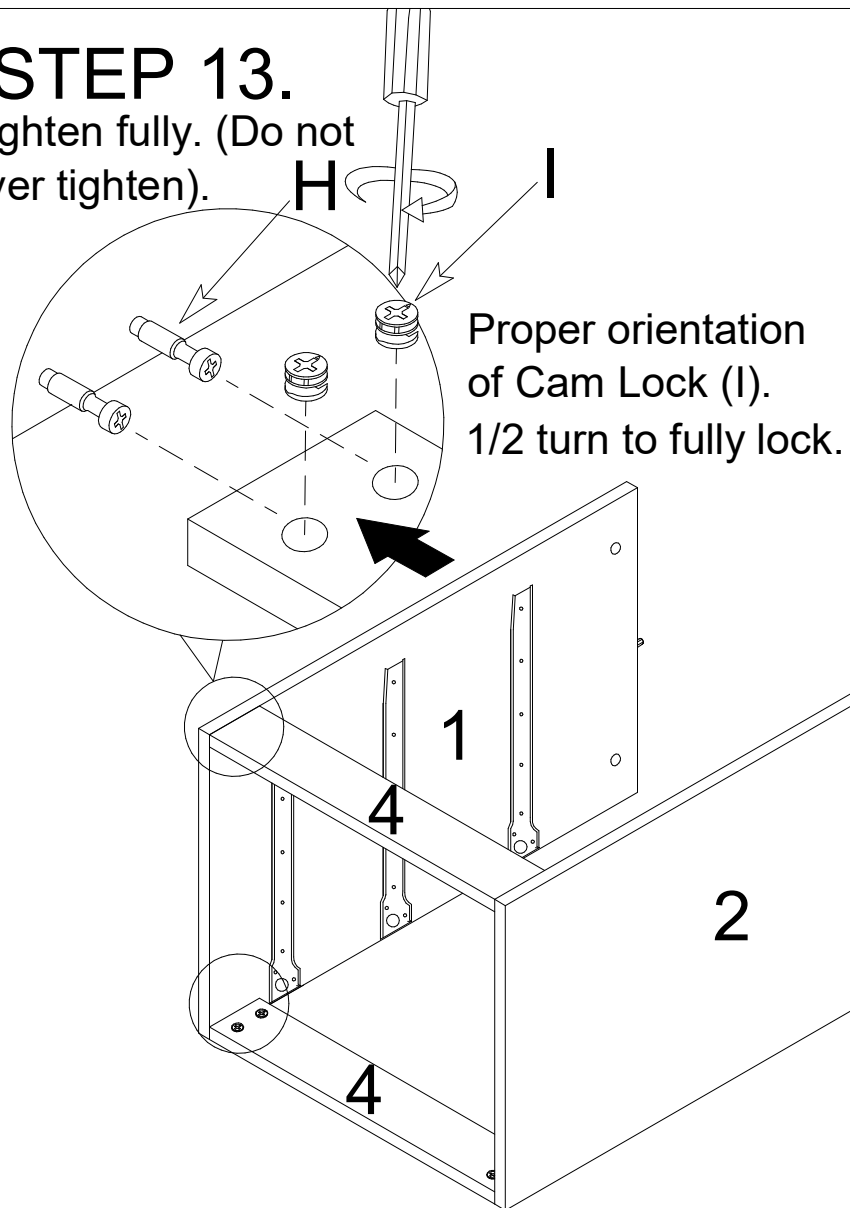

## STEP 14.


Proper orientation  
of Cam Lock (I).  
1/2 turn to fully lock.

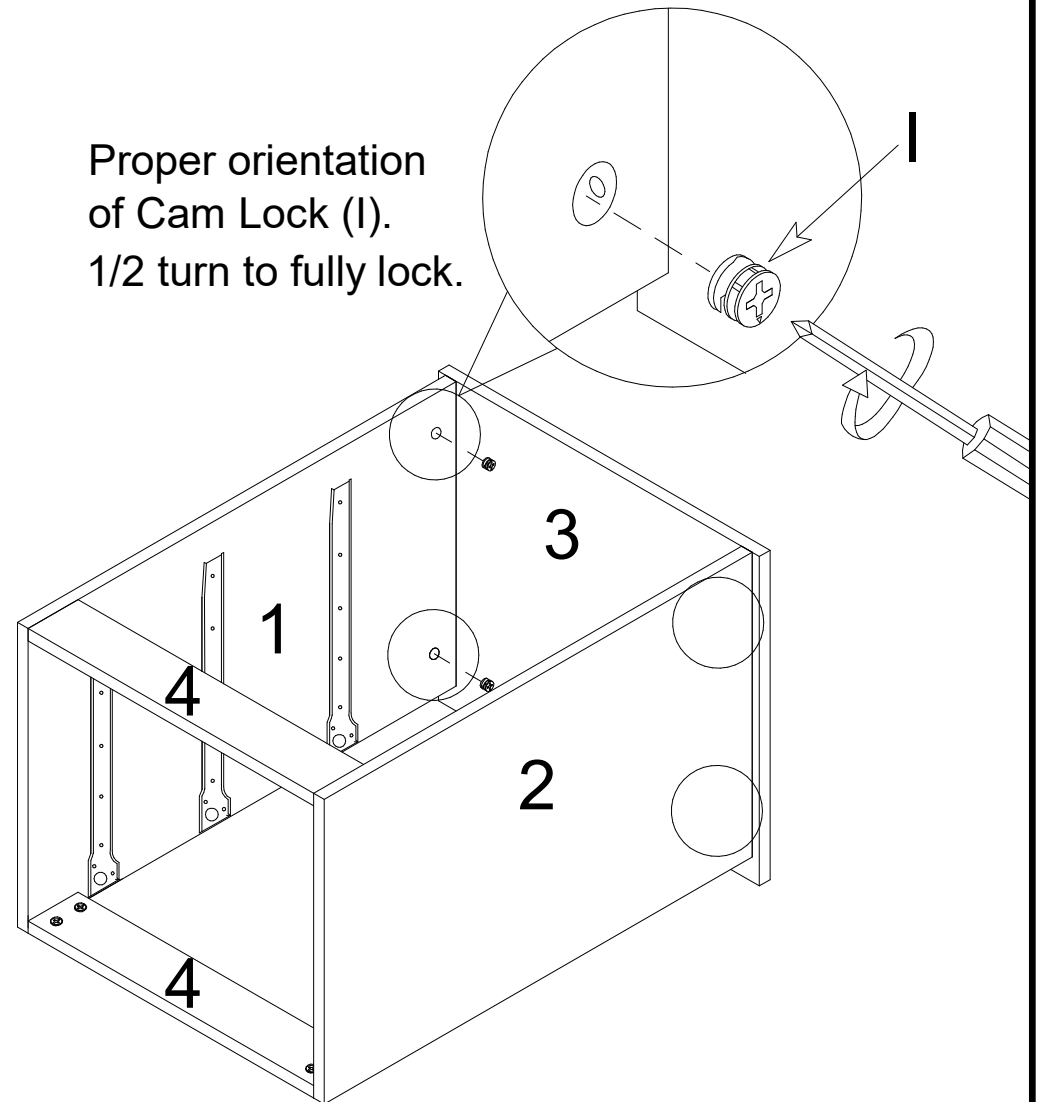


# ASSEMBLY INSTRUCTION

## NIGHT STAND

STEP 15.

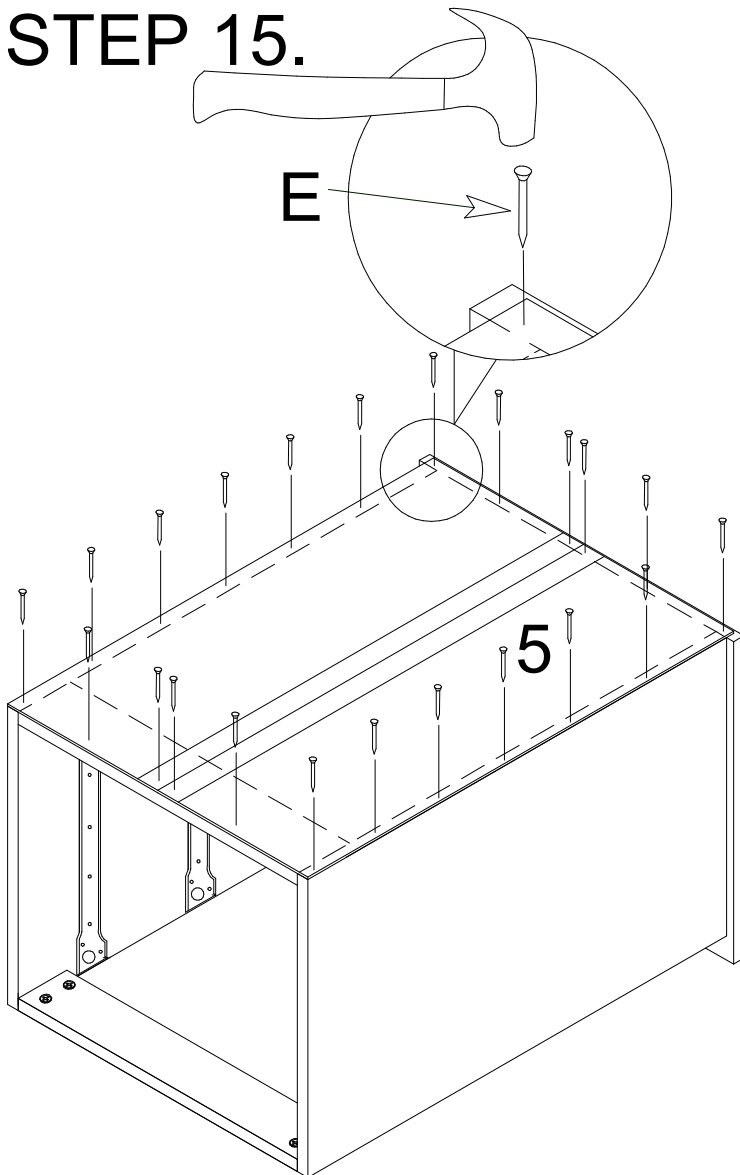

STEP 16.

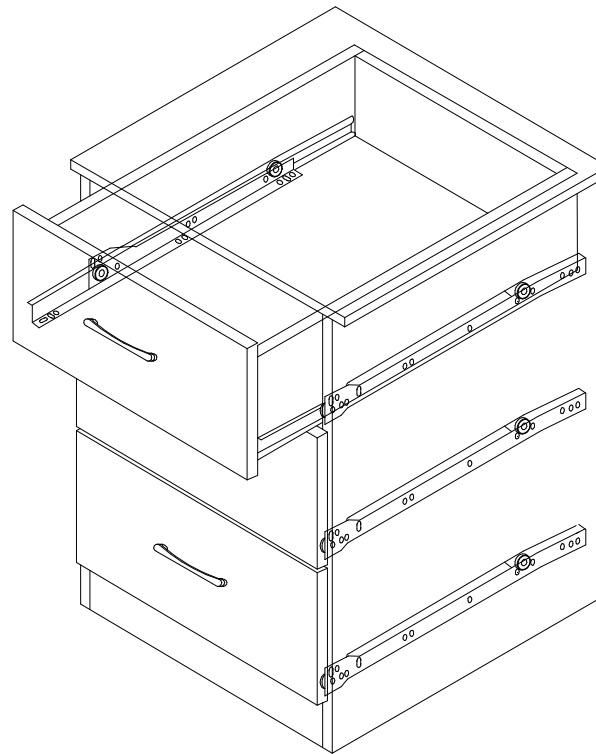

Put in drawer on the track.

