


29x21cm-2019-0921-3


STEP 5

Put the shed upon the established frame.

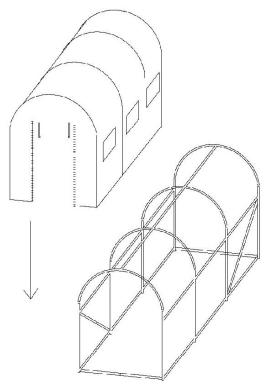

STEP 6

Stick the internal velcro on the tube.

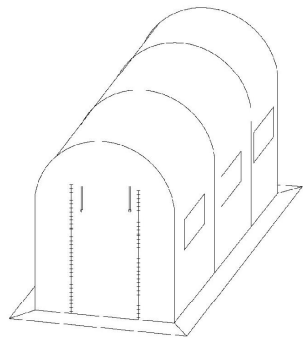

[4]

15' X 7' X 7' GREENHOUSE SHED

Thank you for your purchase. Any problem please don't hesitate to contact with us, we will resolve all your problems ASAP.

Warm Tips: Please do not install it in a place where the wind is too strong.


ACCESSORIES DESCRIPTION

1		4pcs	8		2pcs
2		10pcs	9		2pcs
3		5pcs	M6*60		20pcs
4		8pcs	H		20pcs
5		8pcs	Cover		1pc
6		2pcs			
7		2pcs			

INSTRUCTION STEPS

STEP 1


You need 4 PCS "1" Part
8 PCS "4 " Part
3 PCS "2" Part
1 PCS "3 " Part
4 PCS M6*55



Connect 1 and 4 、 2 and 3 by end to end.


[1]

Insert the M6*55 into every junction like the following picture shows.

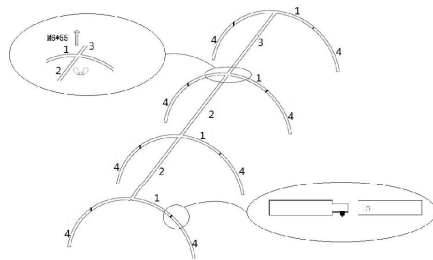


STEP 2

You need 4 PCS 2 Part
2 PCS 3 Part
4 PCS 5 Part
1 PCS 6 Part
1 PCS 7 Part
8 PCS M6*55

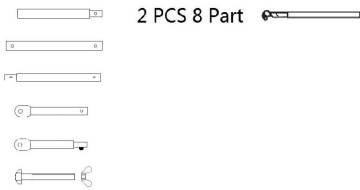


Connect 4 and 5、 2 and 3 、 6 and 7 、 8 part by end to end on the right side.
Insert the M6*55 into every junction like the following instruction shows.

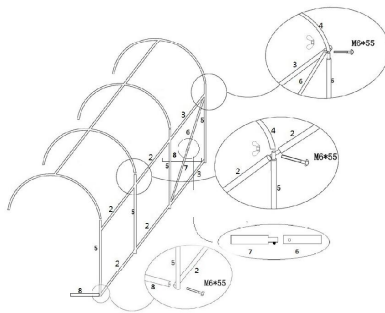


[2]

STEP 3

You need 4 PCS 2 Part
2 PCS 3 Part
4 PCS 5 Part
1 PCS 6 Part
1 PCS 7 Part
8 PCS M6*55

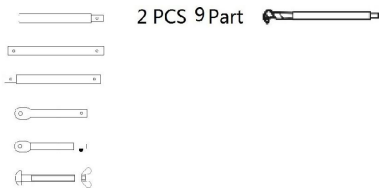

Connect 4 and 5、 2 and 3 、 6 and 7 、 9 part by end to end on the left side.
Repeat the Step 2 on the left side,

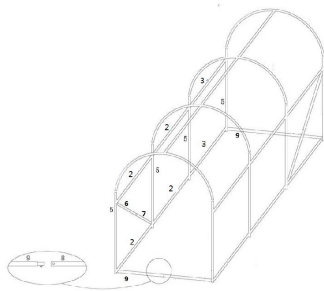

[3]