



Because of the characteristics of compressed sofas, the fabric may show creases when first unpacked. To flatten these out faster, it is recommended to use the following methods:

1

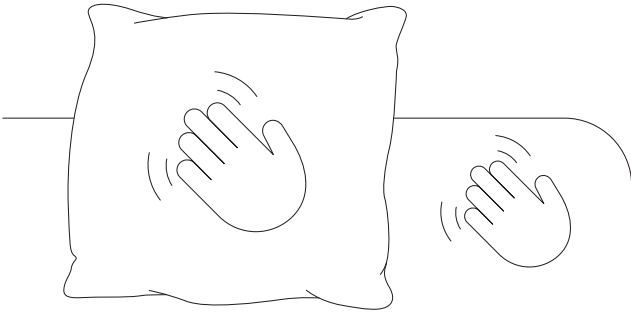

Pat the sofa and the pillow.

2

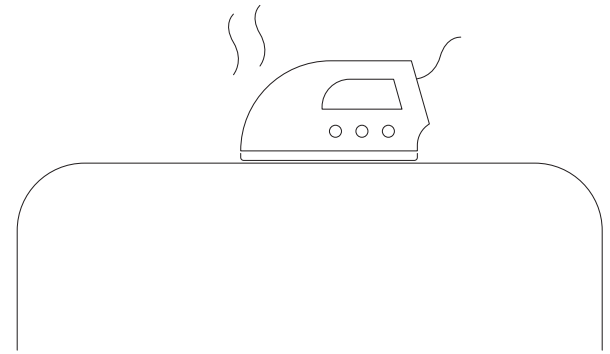


Iron the fabric cover.

3



Let it stand for 72 hours.

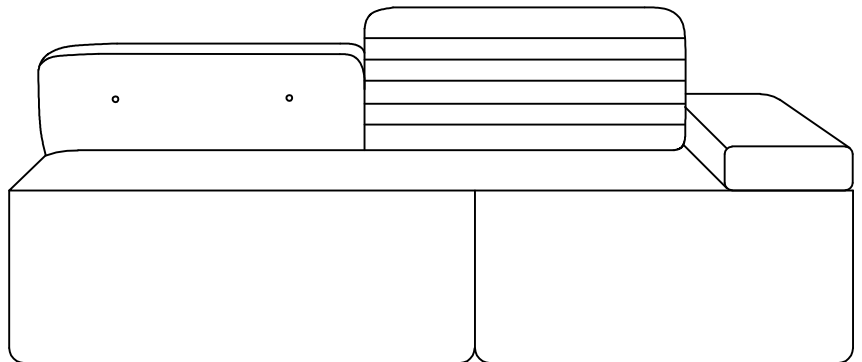

⚠ Note

Please always maintain good indoor ventilation, which helps to quickly dissipate the smell of the product itself. During the use of the sofa, keep the floor from staying damp for a long time to avoid mold growth due to poor air circulation. If the sofa is not used immediately, please unpack it and store it in a dry, well-ventilated environment.