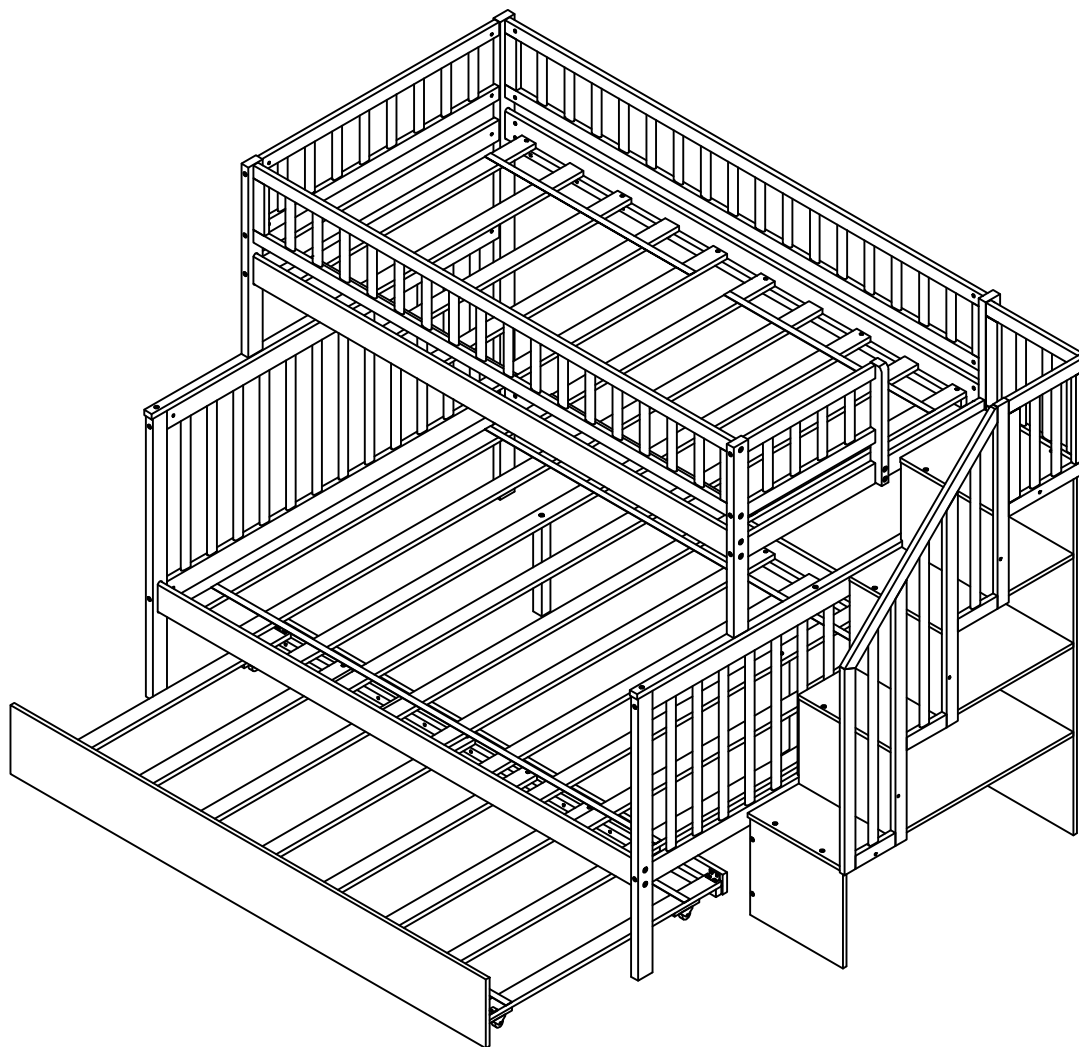


ASSEMBLY INSTRUCTIONS

TWIN/FULL/TRUNDLE SIZE BUNK BED



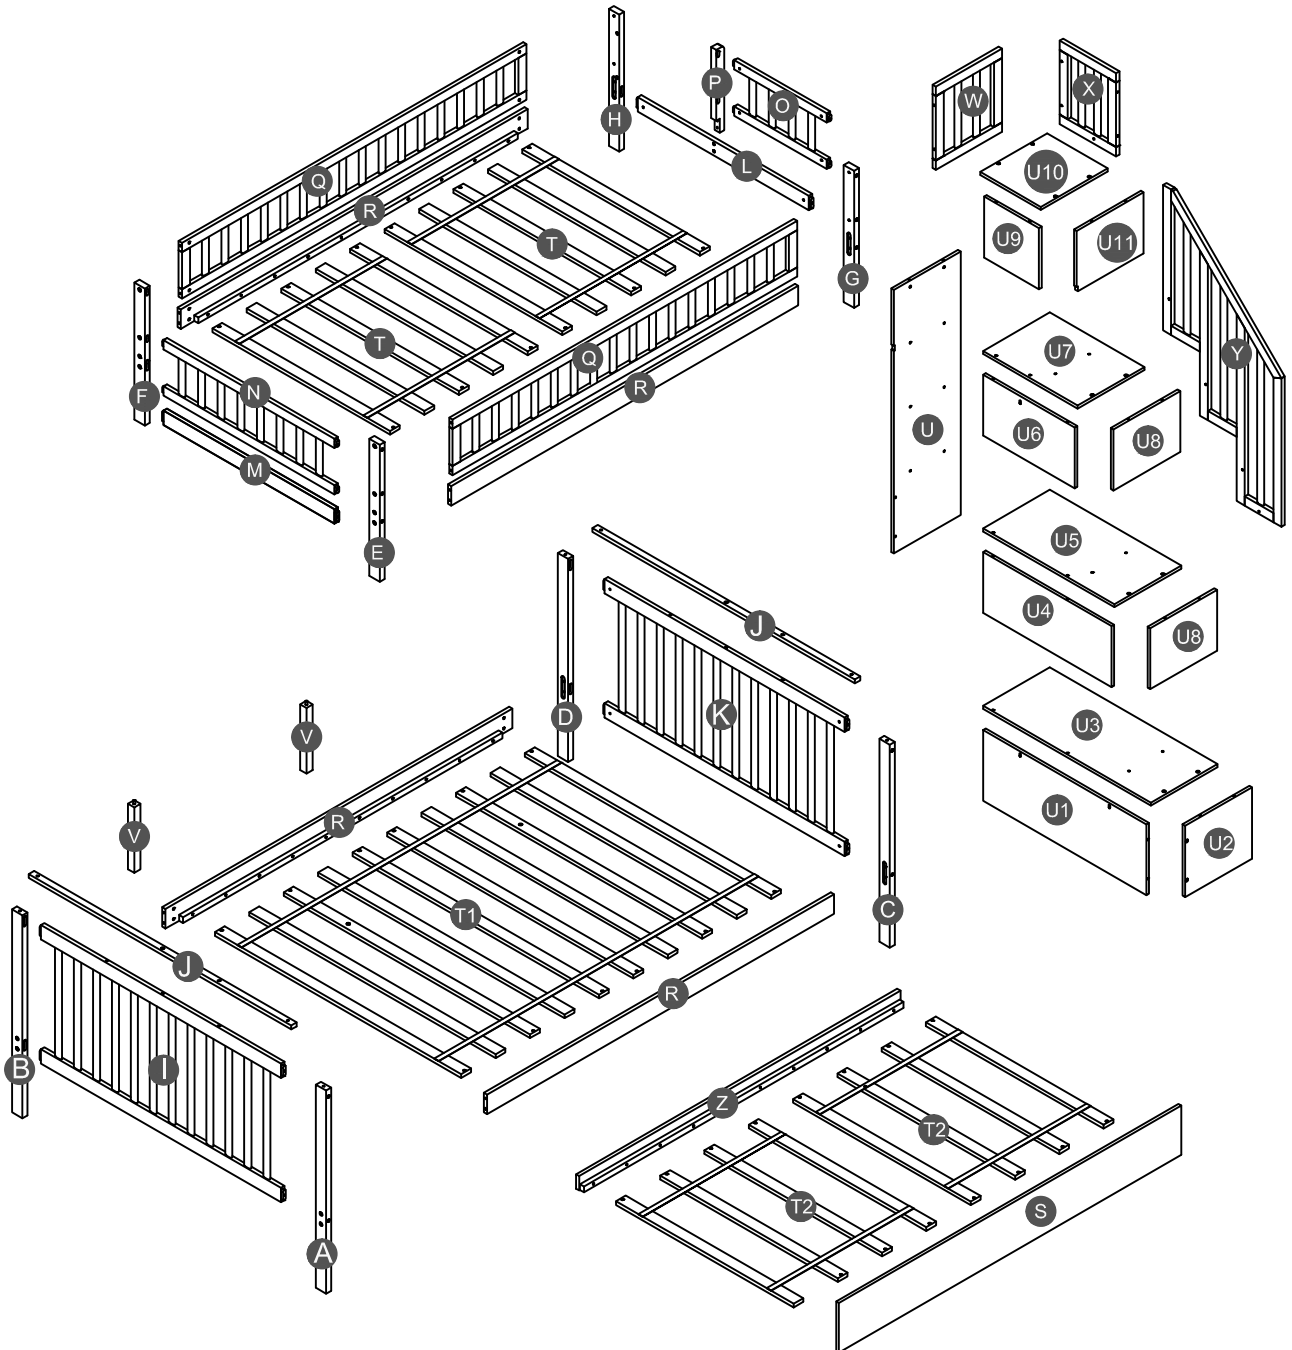
PLEASE DO **NOT** RETURN PRODUCT TO THE STORE.
If you have any problems or concerns, please feel free to contact our customer
service department. We will reply to you at the first time.



E-Mail: csr@merax.com
Tel: 626-912-8886 Ext.100










WF193651/WF193652/WF193653

Detail View












Part List


Hardware List WF193651

A 	B 	C 
Lower leg(Left front) - 1pc	Lower leg (Right back)- 1pc	Lower leg(Right front) - 1pc
D 	E 	F 
Lower leg (Left back)- 1pc	Upper leg(Left front) - 1pc	Upper leg(Right back) - 1pc
G 	H 	J 
Upper leg (Right front)- 1pc	Upper leg (Left back)- 1pc	Cap for lower HB&FB-2pcs
Q 	R 	N 
Upper front & back side rail-2pcs	Lower&upper side rail - 4pcs	Upper HB - 1pc
O 	T 	S 
Upper FB - 1pc	Upper Slat - 10pcs	Trundle front panel - 1pc
Z 		
Trundle back panel - 1pc		










WF193652

U		U1		U2	
Back panel - 1pc		Lower left side panel - 1pc		Lower front panel - 1pc	
U3		U4		U5	
Lower step ladder panel - 1pc		Lower left side panel - 1pc		Lower step ladder panel - 1pc	
U6		U7		U8	
Lower left side panel - 1pc		Lower step ladder panel - 1pc		Lower front panel - 2pcs	
U9		U10		U11	
Upper left side panel - 1pc		Upper step ladder panel - 1pc		Upper front panel - 1pc	








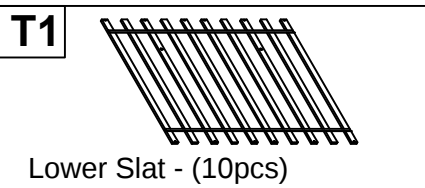
Part List





WF193653

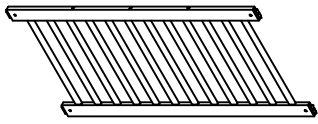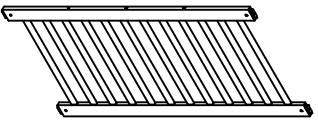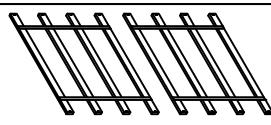I  Lower HB - 1pc	K  Lower FB - 1pc	L  Horizontal upper bar FB-1pc
M  Horizontal upper bar HB-1pc	P  Support guard rail - 1pc	T2  Trundle Slat - (8pcs)
V  Lower slat support- 2pcs	W  Upper guard back - 1pc	X  Upper guard side - 1pc
Y  Guard side - 1pc		

Hardware List

1	 Ø8*30mm Wood dowel (12pcs)	2	 (Ø15)1/4"*100mm Hex-Head bolts (18pcs)	3	 (Ø15)1/4"*80mm Hex-Head bolts (24pcs)
4	 (Ø12)1/4"*70mm Hex-Head bolts (2pcs)	5	 (Ø12)1/4"*60mm Hex-Head bolts (37pcs)	6	 (Ø12)1/4"*35mm Hex-Head bolts (2pcs)
7	 (Ø12)1/4"*30mm Hex-Head bolts (3pcs)	8	 1/4"*15 (9.5mm) Horizontal-Hole bolts(79pcs)	9	 Ø9*90mm Connecting bar (4pcs)
10	 (Ø12)1/4"*40mm Hex-Head bolts (4pcs)	11	 (1/4")4.5*58mm Allen key (1pc)	12	 Ø4*30mm Wood screws (48pcs)
13	 Ø1/4"*19*2mm Flat Washer (3pcs)	14	 95*95*18*3mm Metal bracket (2pcs)	15	 Ø3.5*15mm Wood screws (16pcs)
16	 100*63*20mm Wheels (4pcs)	17	 40*18*18*2mm Metal bracket (2pcs)		

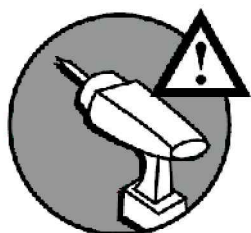
ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




DO NOT USE POWER TOOLS TO ASSEMBLE THIS PRODUCT !

Remark: We recommend you assemble your bed in the flat ground.

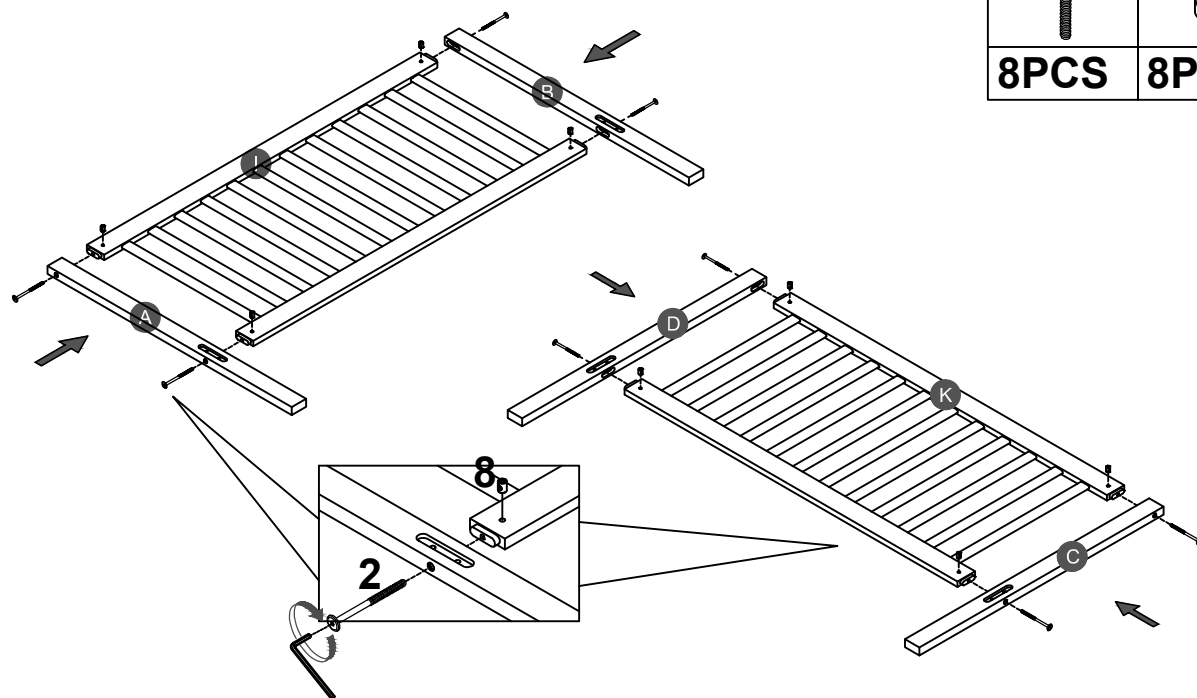
STEP 1:



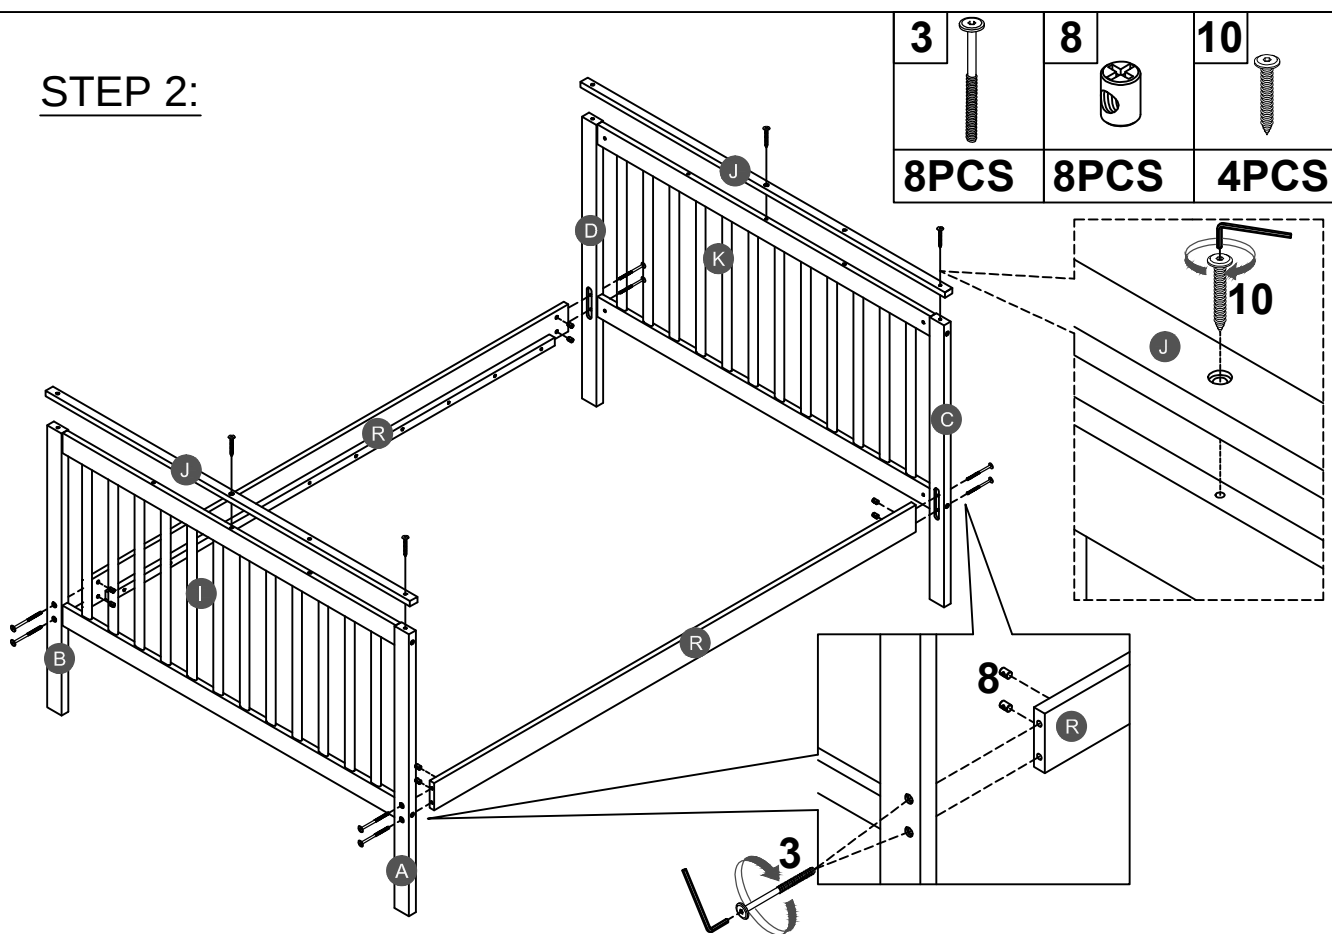
STEP 2:



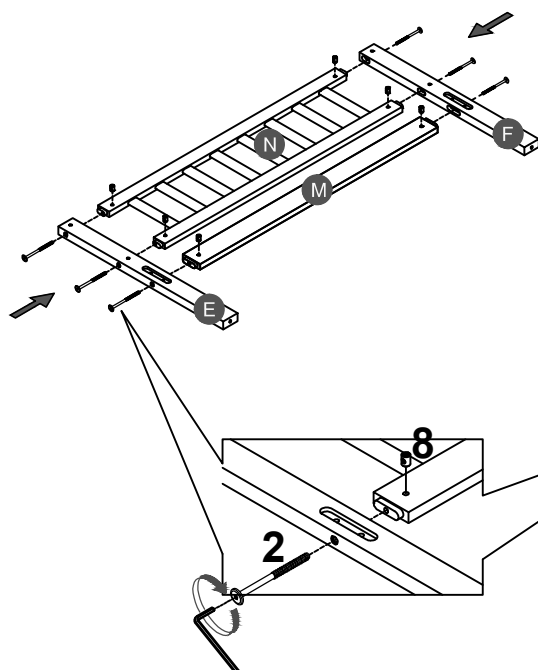STEP 3:




2		4		6		8	
10PCS		2PCS		2PCS		12PCS	

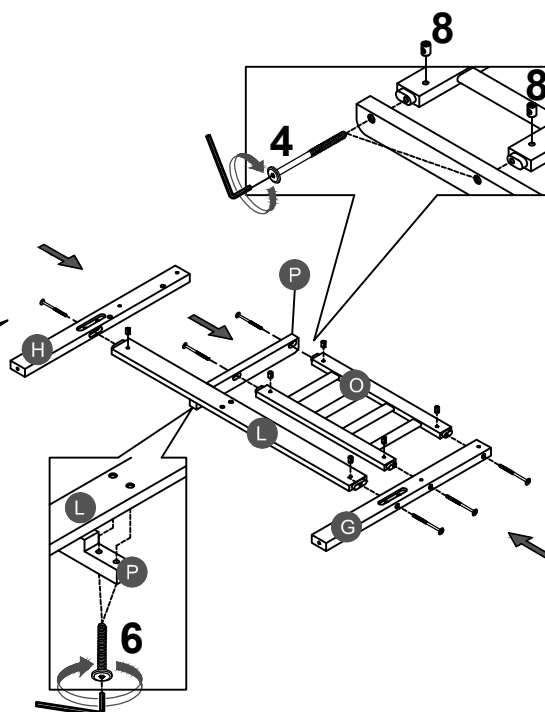

STEP 4:

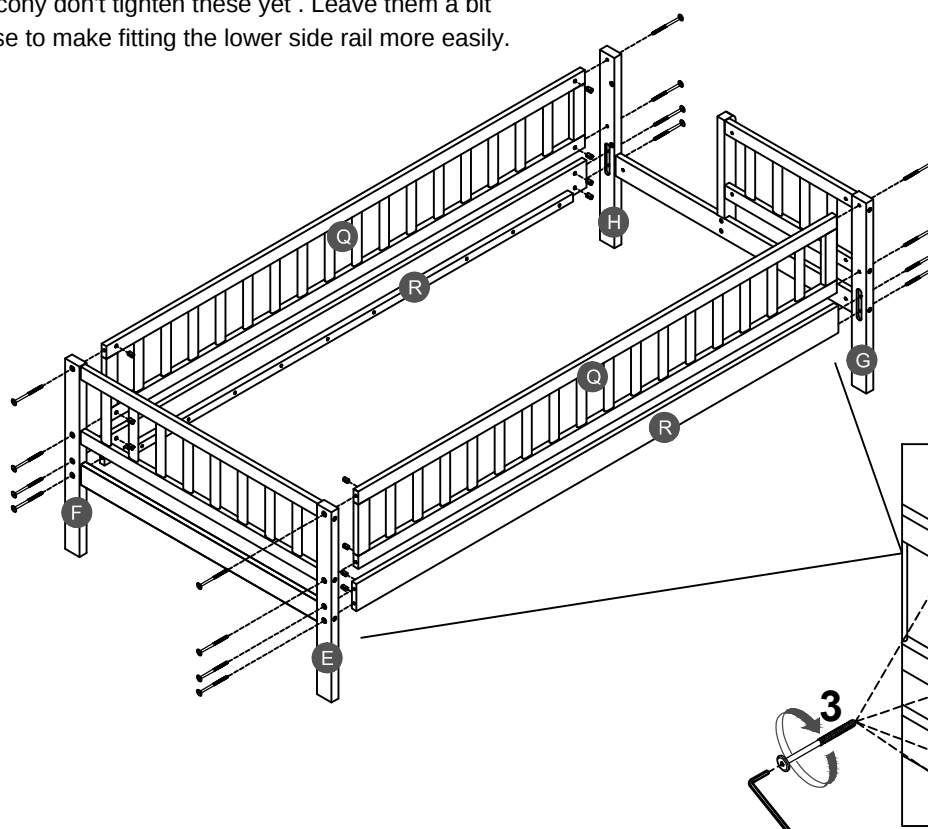Balcony don't tighten these yet . Leave them a bit loose to make fitting the lower side rail more easily.





3		8	
16PCS		16PCS	

STEP 5:

9




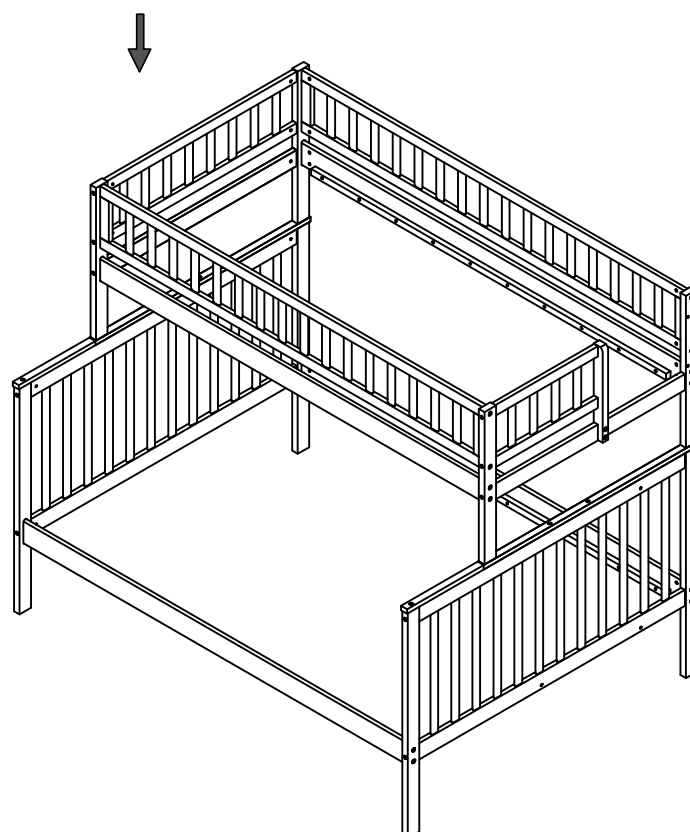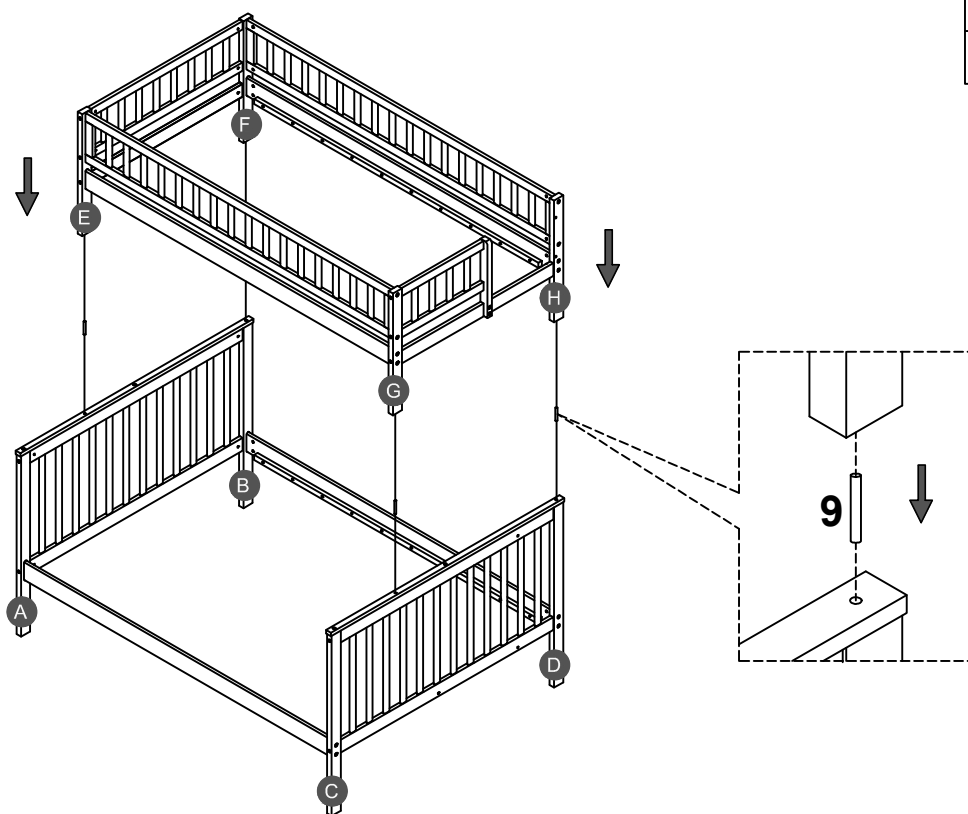4PCS




STEP 6:


1	5	8
		
12PCS	26PCS	26PCS

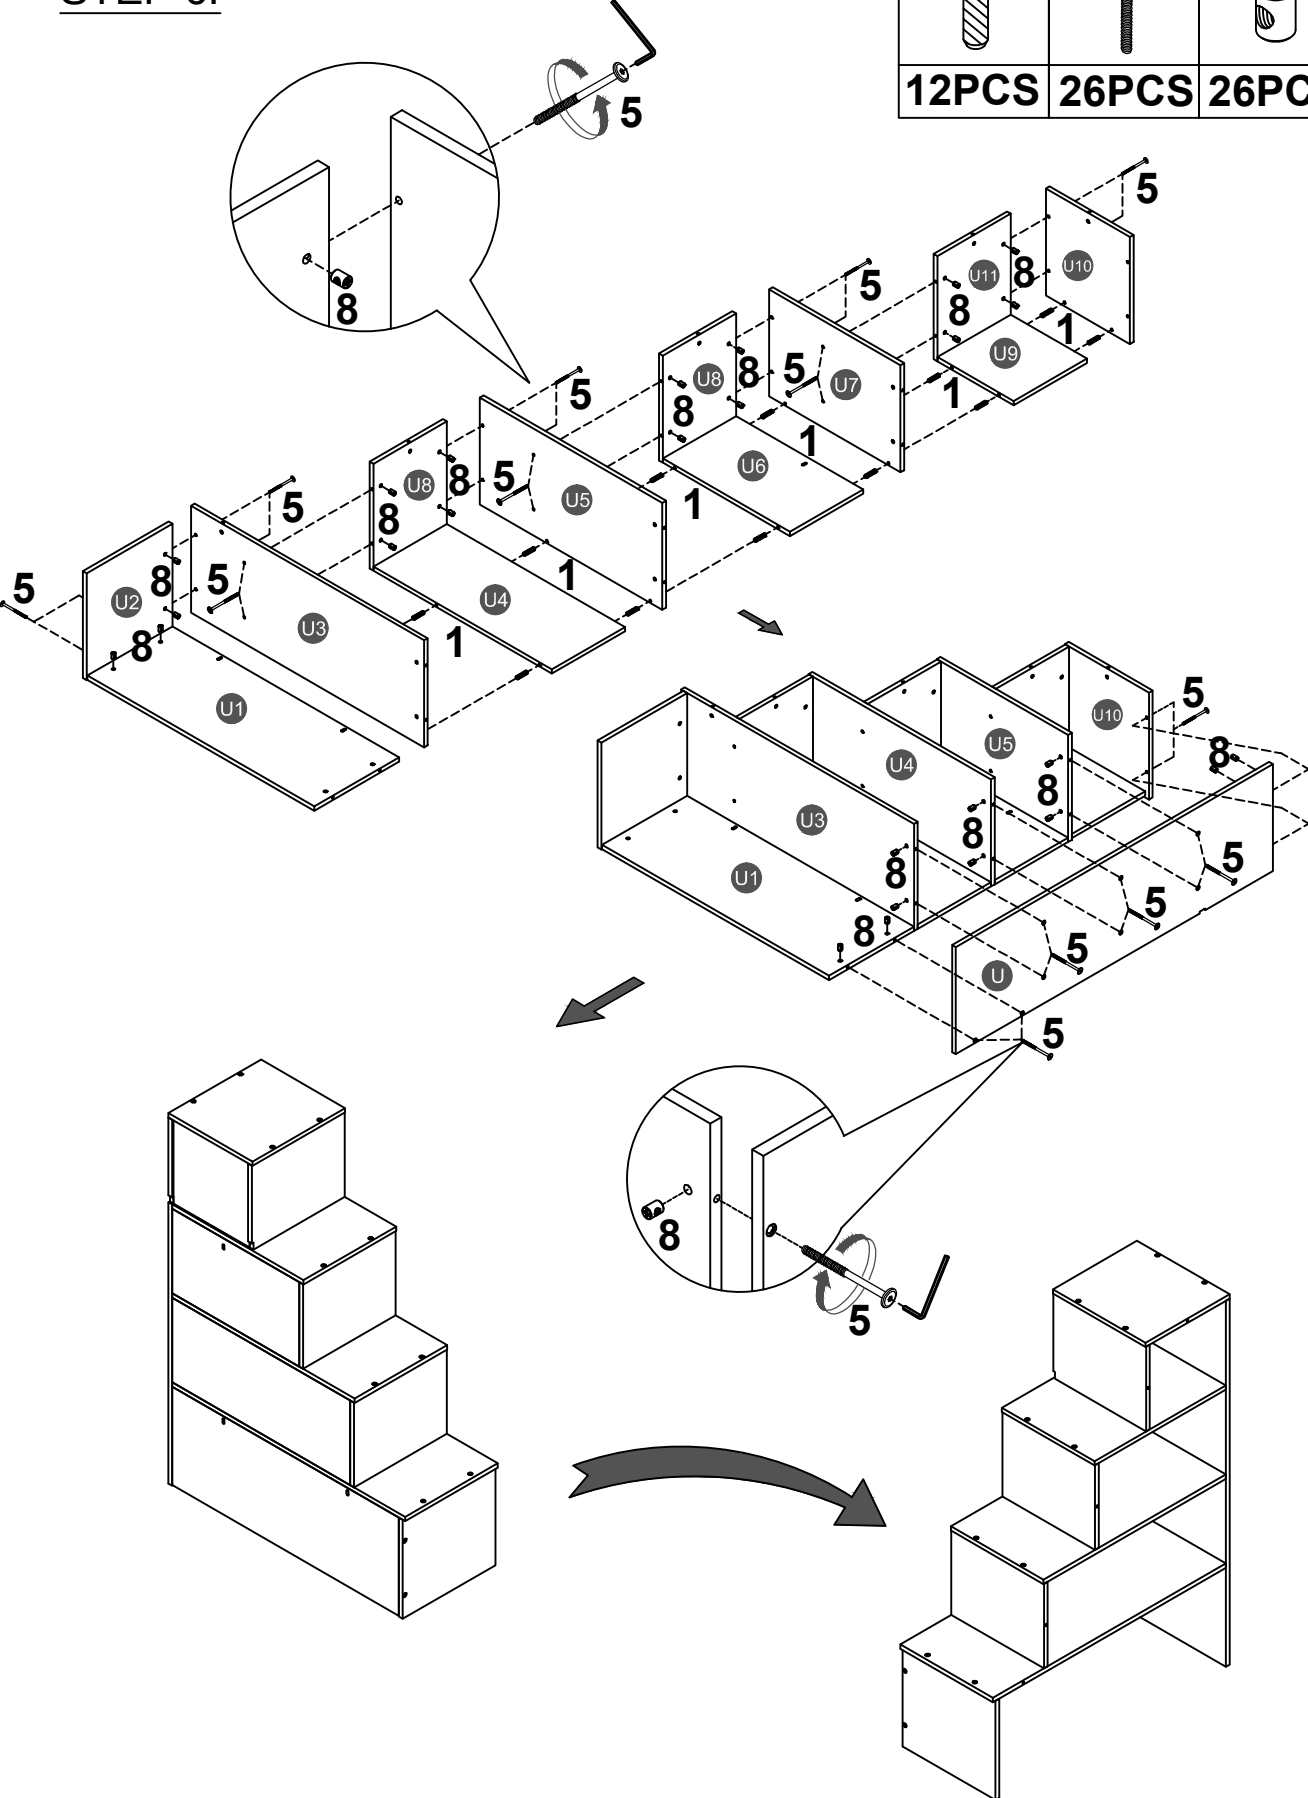

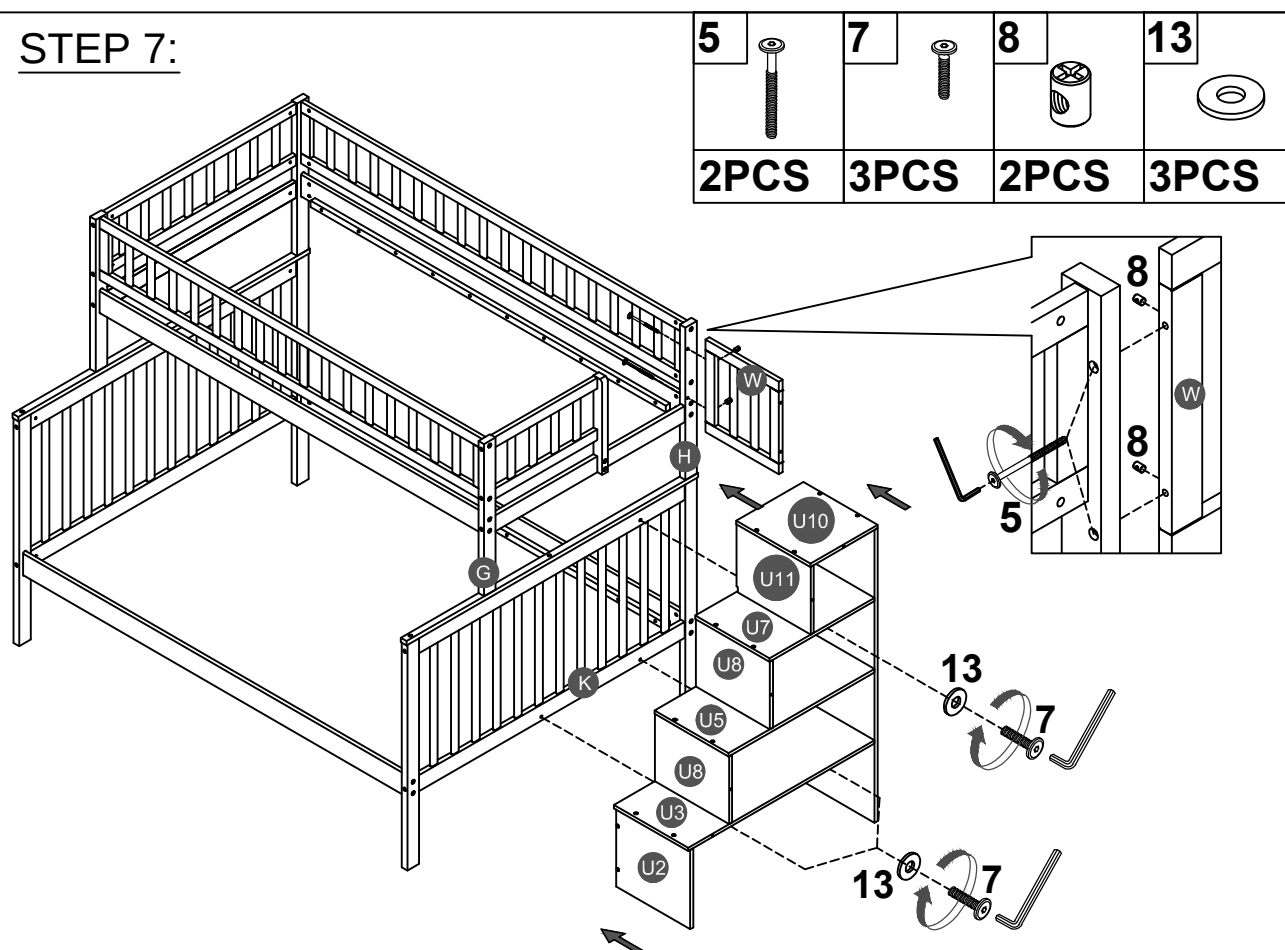
STEP 7:



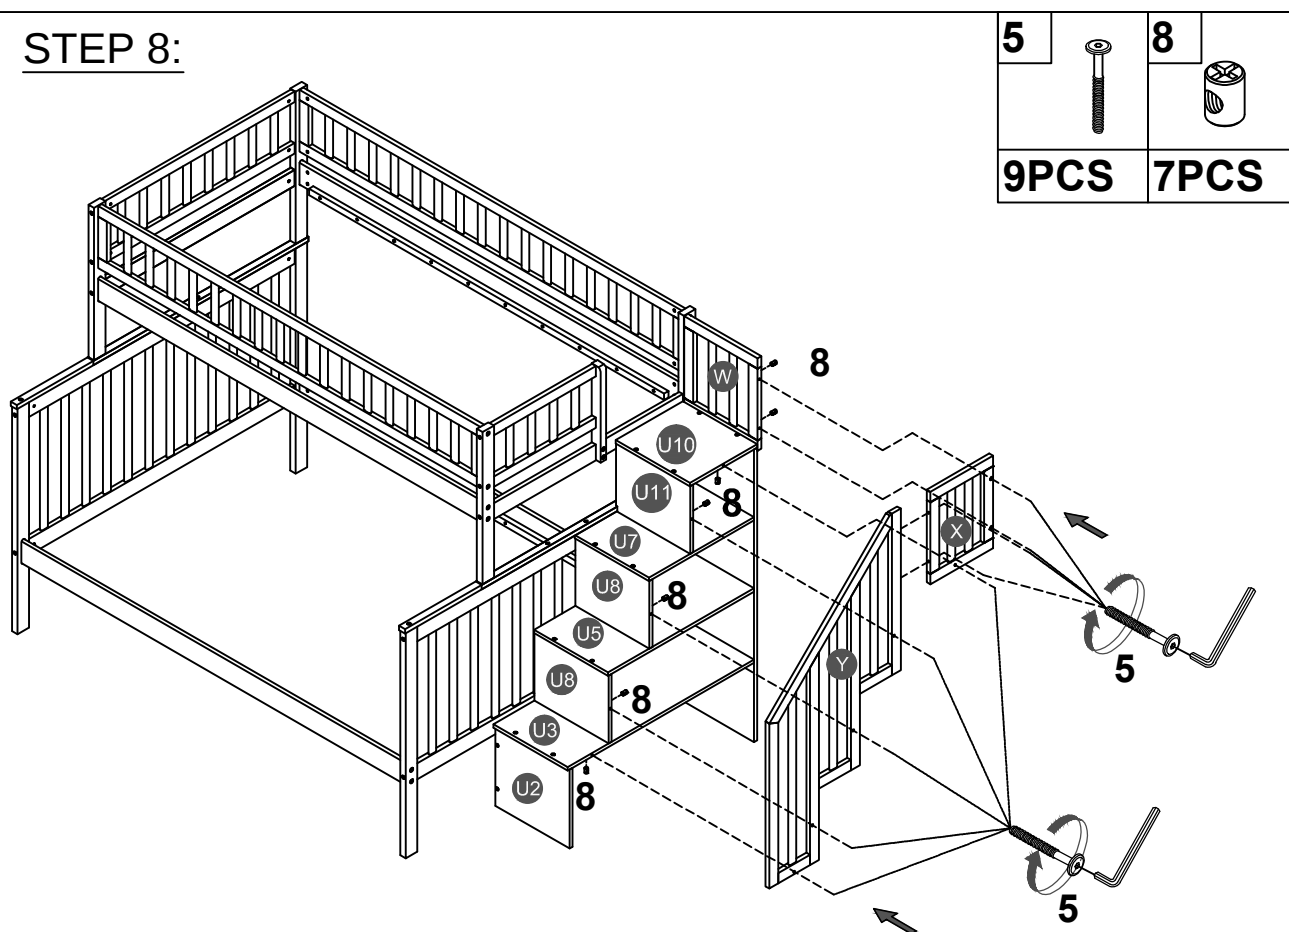STEP 8:



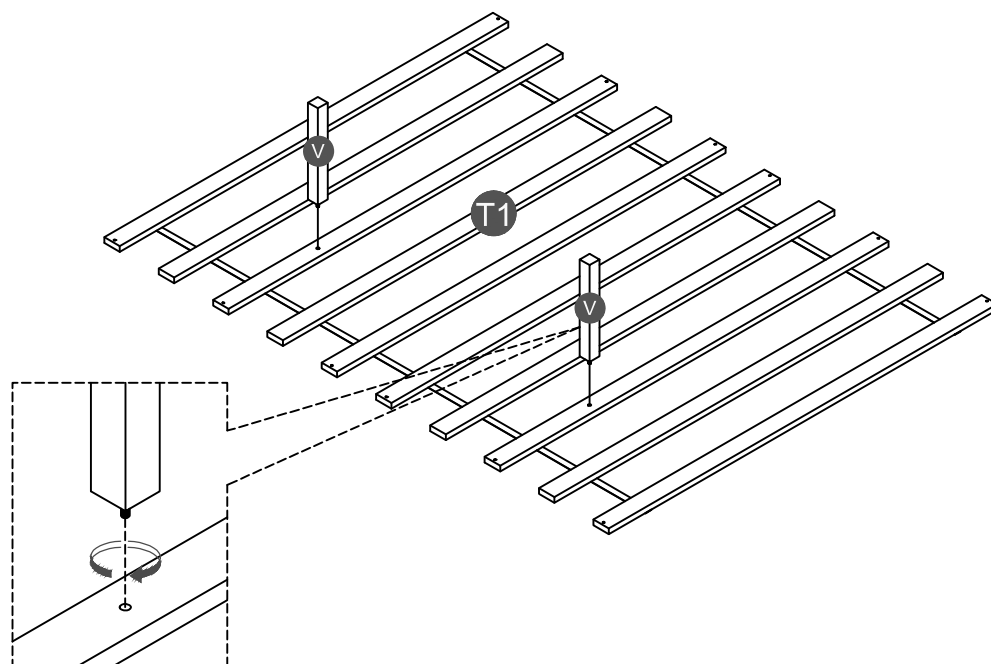STEP 9:




STEP 10:

12




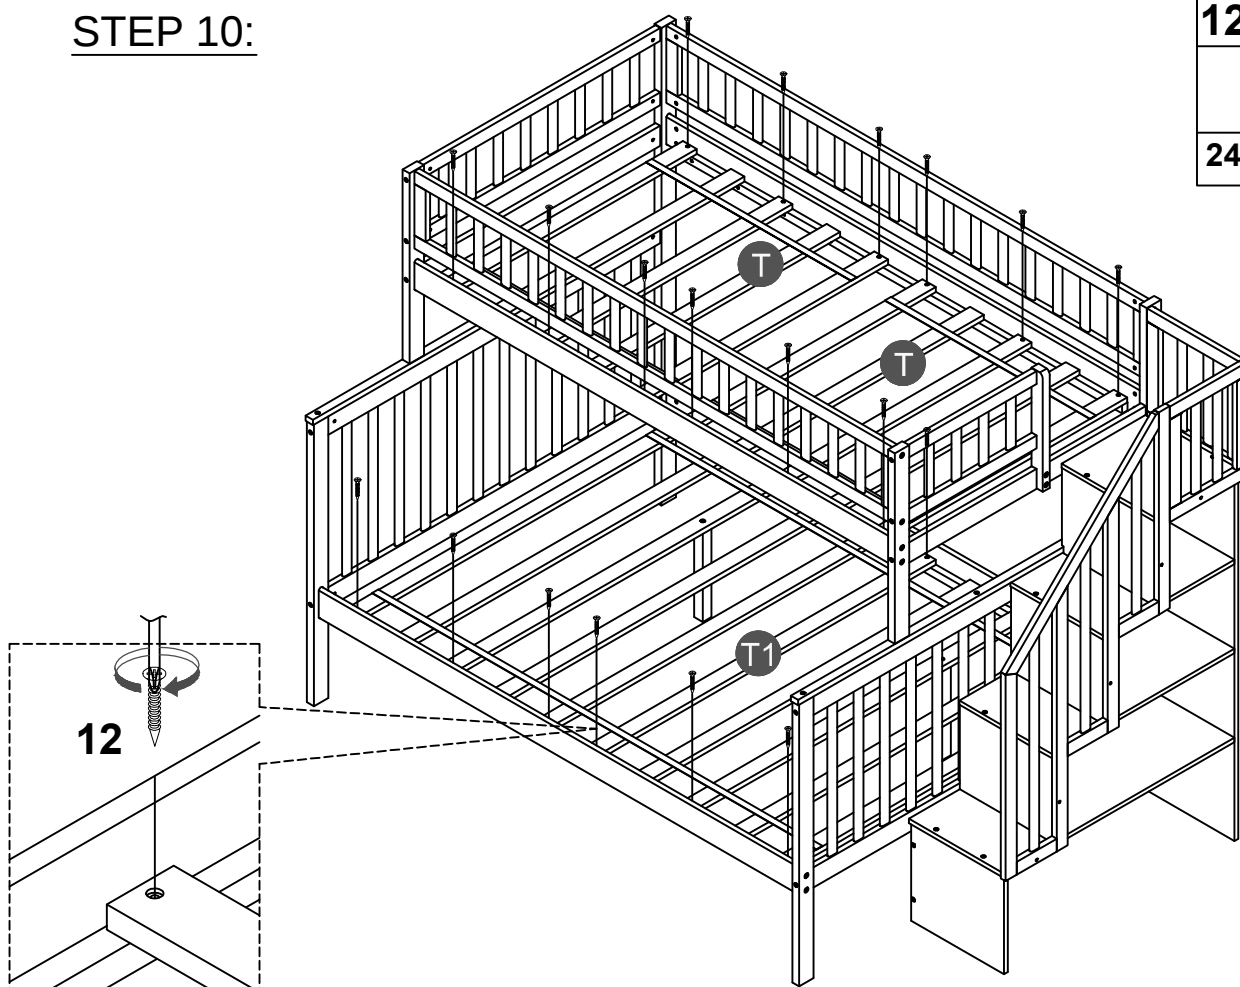24PCS



STEP 11:


16	12
	
4PCS	8PCS

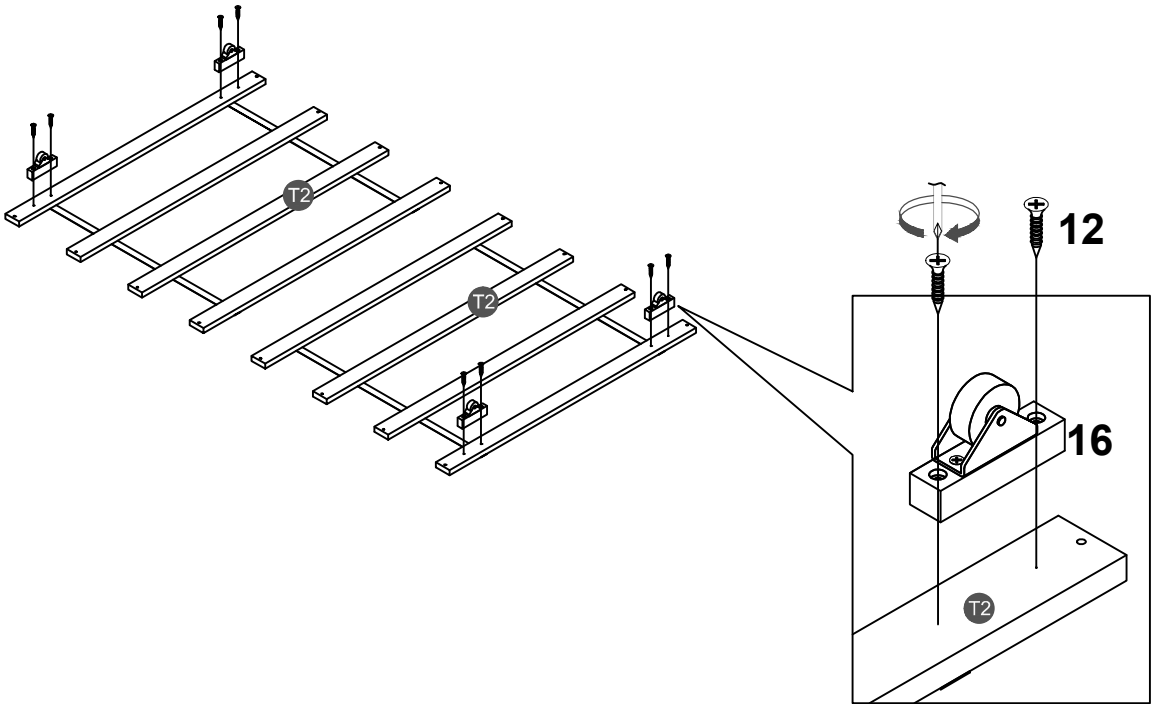

STEP 12:


12

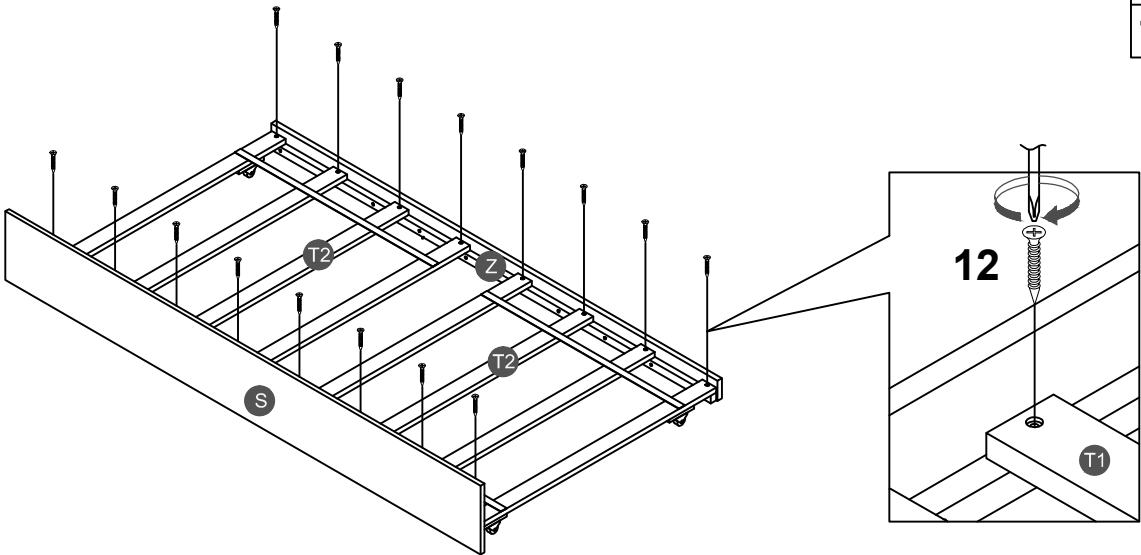16PCS




STEP 13:

14	15
	
2PCS	8PCS

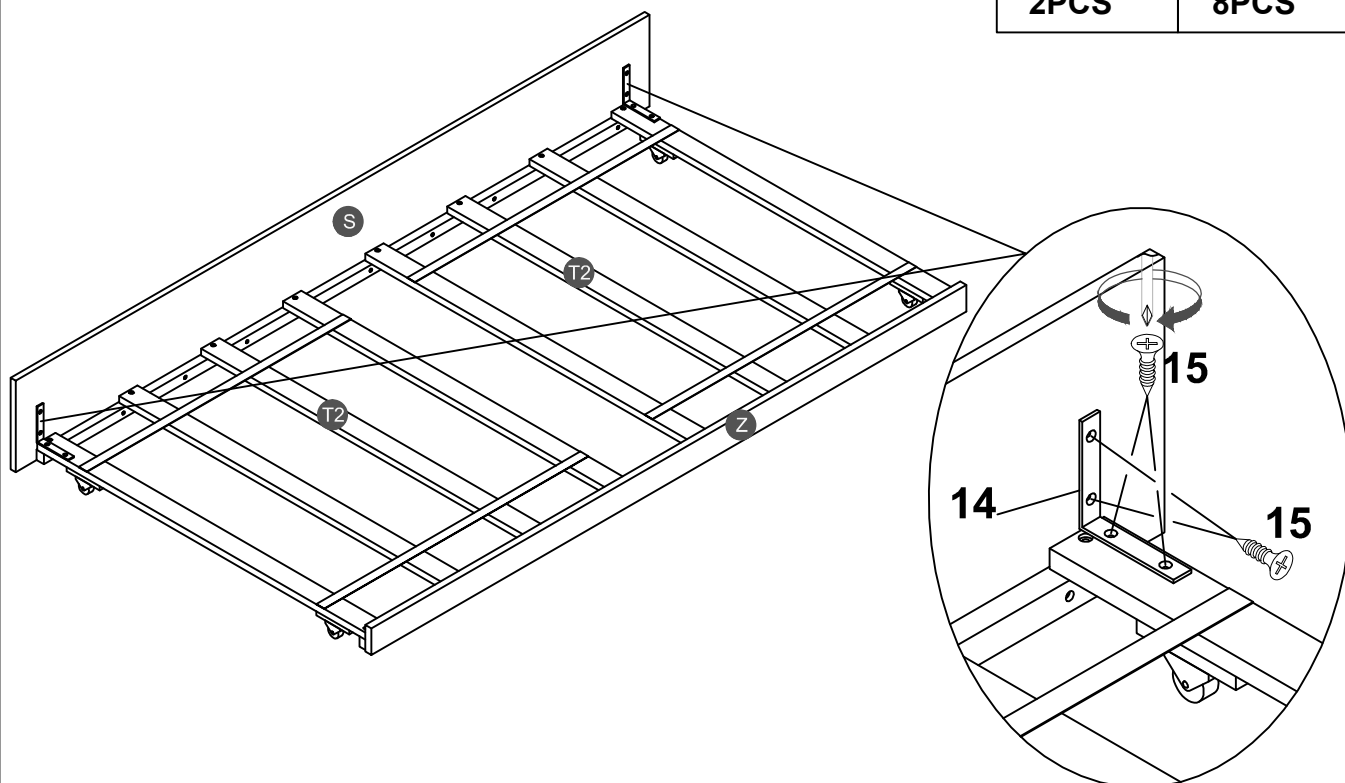


STEP 14:

15	17
	
8PCS	2PCS

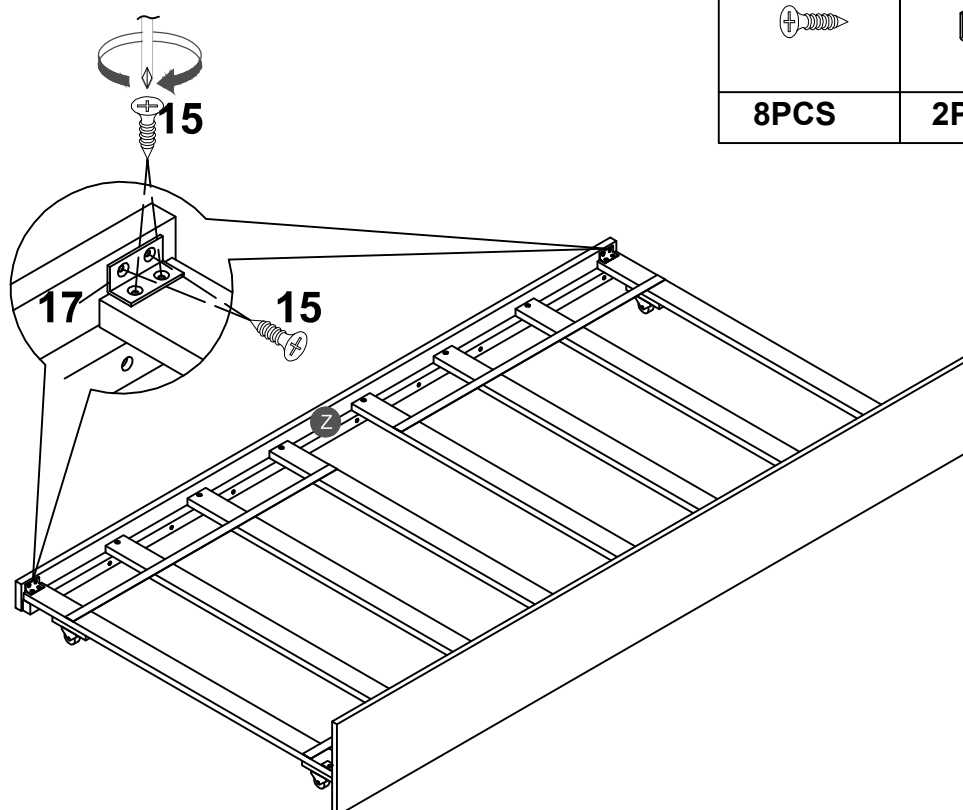

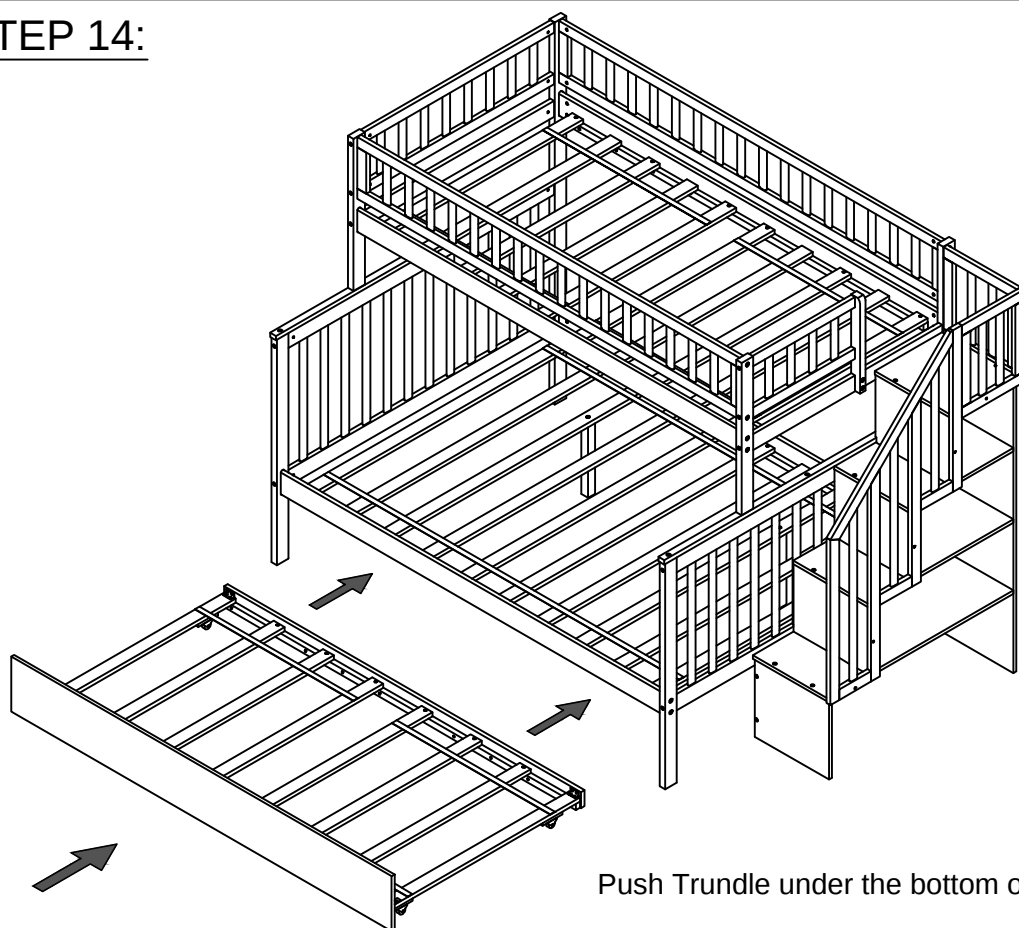STEP 14:



Push Trundle under the bottom of Bunkbed.

