
Parts List For Daybed

HARDWARE BAG FOR DAYBED


- (1) 1/4-20 X 2 1/2" FLAT ALLEN HEAD SCREW-12
- (2) 1 1/4" LONG BRASS WOOD SCREW-10
- (3) ALLEN WRENCH-1
- (9) 3" X 1 1"WOOD DOWEL-4


DAYBED PARTS:

- (4) LEFT SIDE-1
- (5) RIGHT SIDE-1
- (6) BACK PANEL-1
- (7) SIDE RAIL-2
- (8) DECK-1
- (10)FINIAL-4

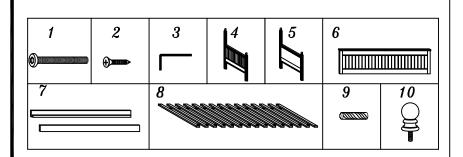

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

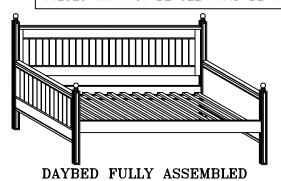




3

OF

Instruction Sheet

- NOTES: For ease of assembly you will need a helper.
 - Periodically retighten all screws.


Step 1- Attachment of Side Rails to Daybed sides

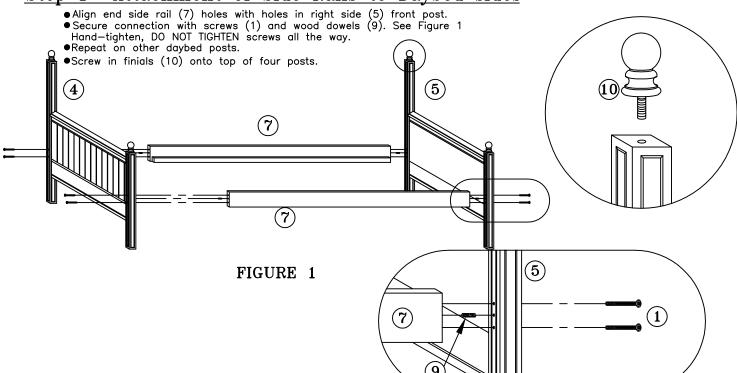



Instruction Sheet

Step 2- Attachment of Back Panel to Daybed sides

- •Align end holes of back panel (6) to holes in right side (5) back post. See Figure 2
- $\bullet\,\mbox{Secure}$ panel to post by using screws (1). DO NOT TIGHTEN SCREWS.



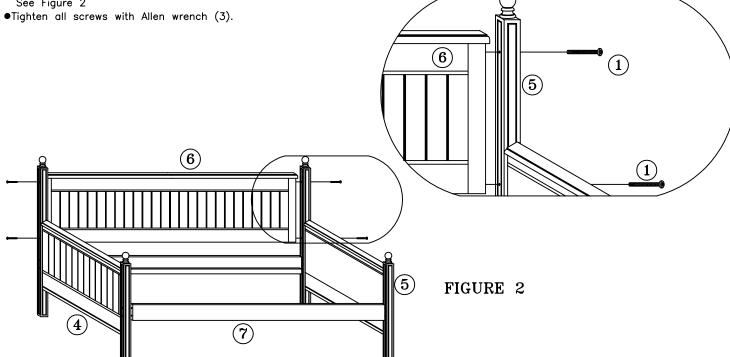

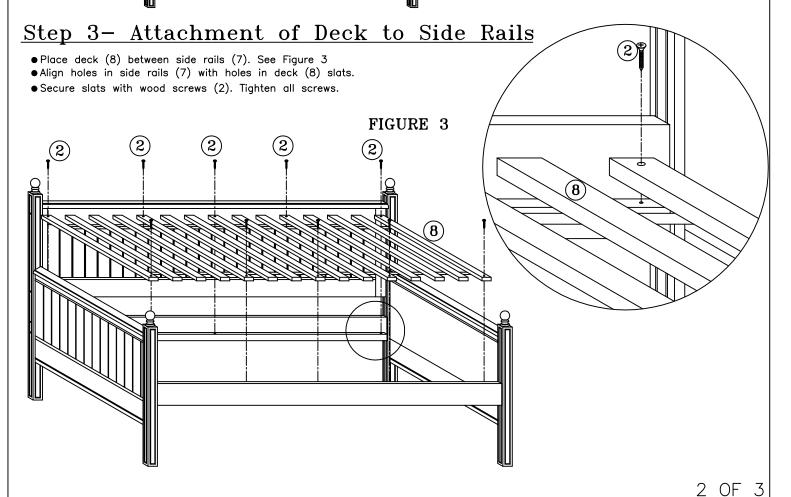

Instruction Sheet 0 U) U **OPTIONAL**

FIGURE 4

FOR ASSISTANCE IN ASSEMBLY ONLY OF THIS PRODUCT. CALL OUR HELP DESK. PLEASE HAVE THE STYLE NUMBER AVAILABLE BEFORE YOU CALL. (STYLE # OR NAME CAN BE FOUND ON PACKING CARTON OR SALES RECEIPT.) OUR PRODUCT IS INSPECTED TO ENSURE IT IS IN GOOD CONDITION. IF YOUR FURNITURE APPEARS TO HAVE BEEN DAMAGED IN SHIPMENT OR YOU ARE IN NEED OF REPLACEMENT PARTS PLEASE CONTACT THE DEALER FROM WHOM YOU PURCHASED THE PRODUCT.


Parts List For Trundle

- HARDWARE BAG FOR TRUNDLE
 1/4-20 X 1 1/2" FLAT ALLEN HEAD SCREW-8
 1" LONG BRASS WOOD SCREW-38


- (2) 1" LONG BRASS W (3) CASTER-8 (4) ALLEN WRENCH-1
- (11) 3" 1 3" WOOD DOWEL-2

TRUNDLE BED PARTS:

- (5) LEFT SIDE-1 (6) RIGHT SIDE-1
- (7) SLAT-4
- (8) FRONT PANEL-1
- (9) BACK PANEL-1
- (10) SUPPORTS-5

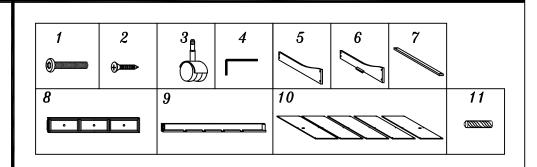

SAVE ALL PACKAGING MATERIALS UNTIL PRODUCT IS FULLY ASSEMBLED. HARDWARE AND SMALL PIECES MAY NOT BE SEEN AND BE ACCIDENTALLY DISCARDED WITH PACKAGING MATERIALS.

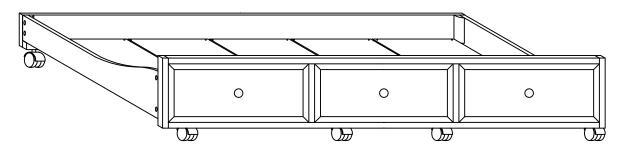

Instruction Sheet NOTES: •For ease of assembly you will need a helper.


• Periodically retighten all screws.

Step 1- Attachment of Side to Front & Back Panels

- Align left side (5) holes with holes in back panel (9).
- Secure connection with screws (1). See Figure 1
 Hand—tighten, DO NOT TIGHTEN screws all the way.

 Repeat on all corners. Use wood dowels (11) for front connections.

 Tighten all screws.

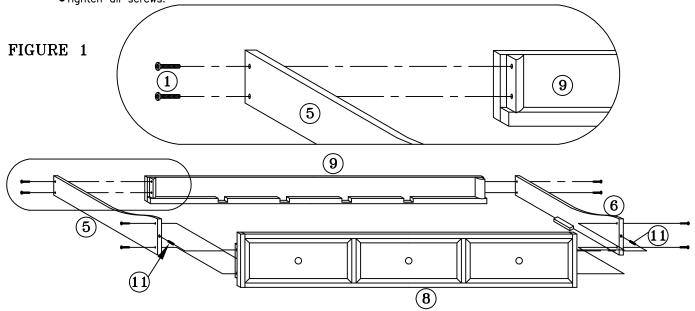



Instruction Sheet

Step 2- Attachment of Caster into Bottom Trundle

• Secure casters (3) into bottom of trundle unit. See Figure 2

FIGURE 2

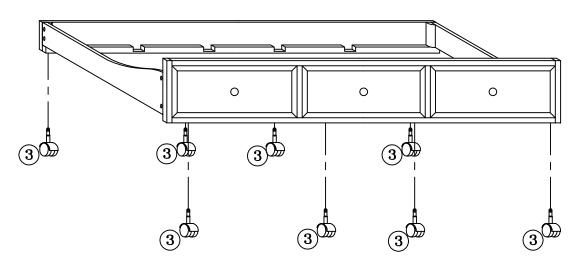

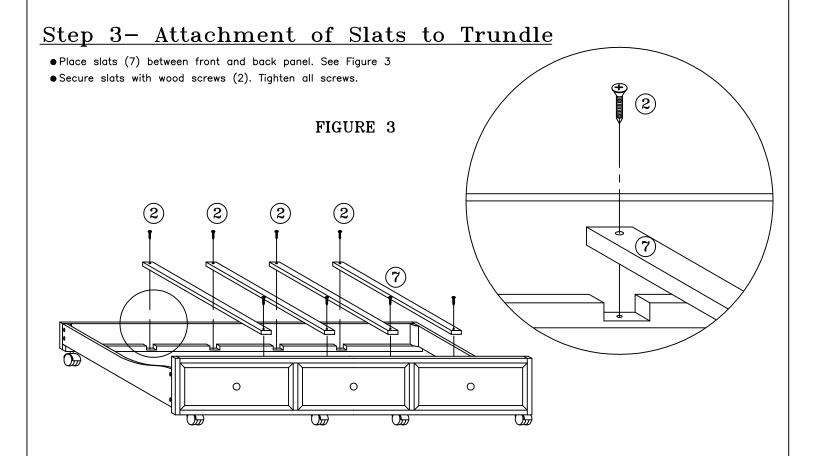

Instruction Sheet

Step 4- Drop In Supports into Trundle

- Place supports (10) inside of trundle unit. See Figure 4
- Secure supports (10) with screws (2). See Figure 4

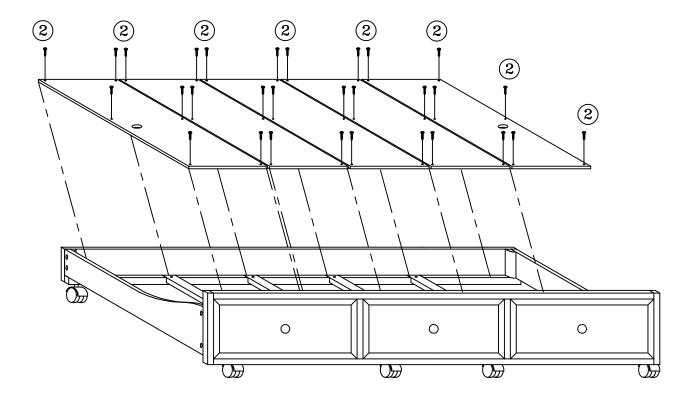


FIGURE 4

FOR ASSISTANCE IN ASSEMBLY ONLY OF THIS PRODUCT. CALL OUR HELP DESK. PLEASE HAVE THE STYLE NUMBER AVAILABLE BEFORE YOU CALL. (STYLE # OR NAME CAN BE FOUND ON PACKING CARTON OR SALES RECEIPT.) OUR PRODUCT IS INSPECTED TO ENSURE IT IS IN GOOD CONDITION. IF YOUR FURNITURE APPEARS TO HAVE BEEN DAMAGED IN SHIPMENT OR YOU ARE IN NEED OF REPLACEMENT PARTS PLEASE CONTACT THE DEALER FROM WHOM YOU PURCHASED THE PRODUCT.