
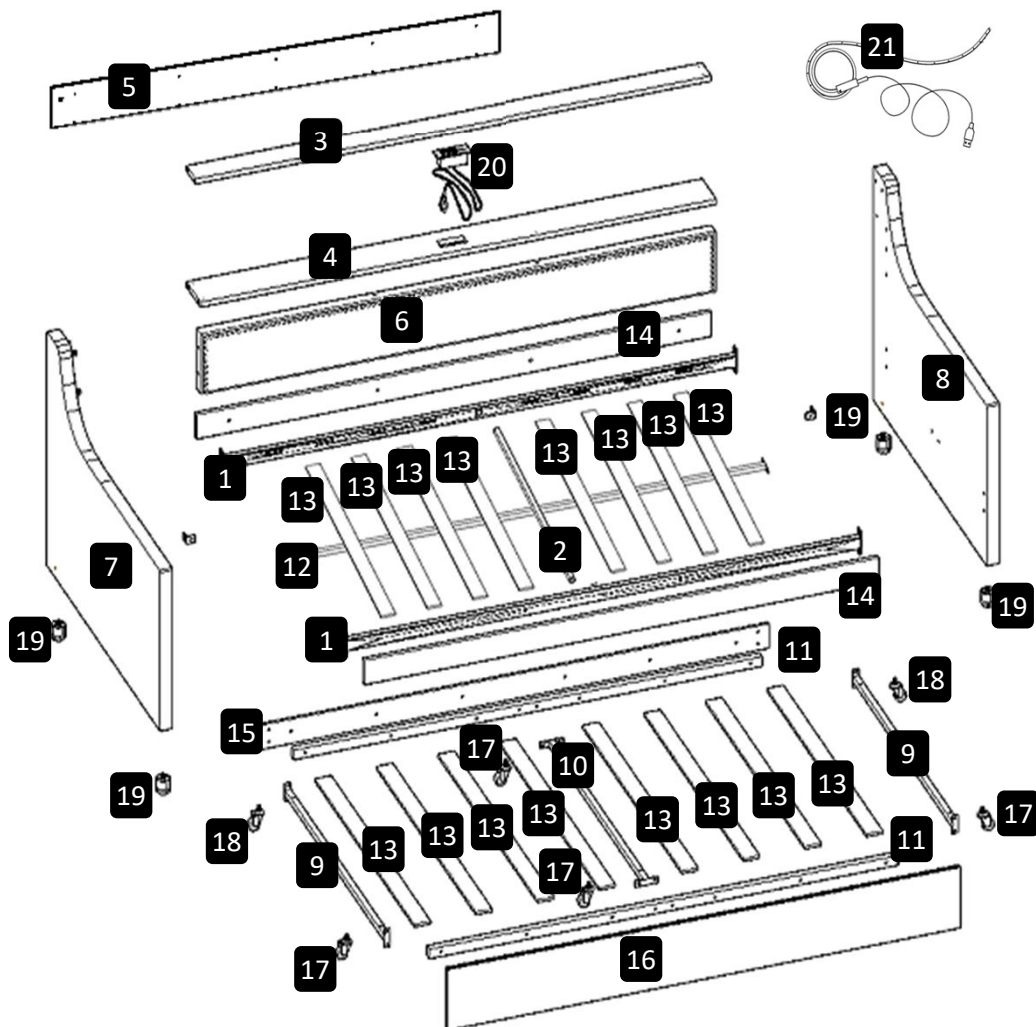

















ASSEMBLY INSTRUCTION

TIPS



1. This bed fit standard twin mattress 75" L x 39" W.
2. Always use the recommended size mattresses or mattress supports, or both, to help prevent the likelihood of entrapment or falls.
3. Do not allow horseplay on or under the bed and prohibit jumping on the bed.
4. Do not use substitute part. Contact the manufacture or dealer for replacement part.

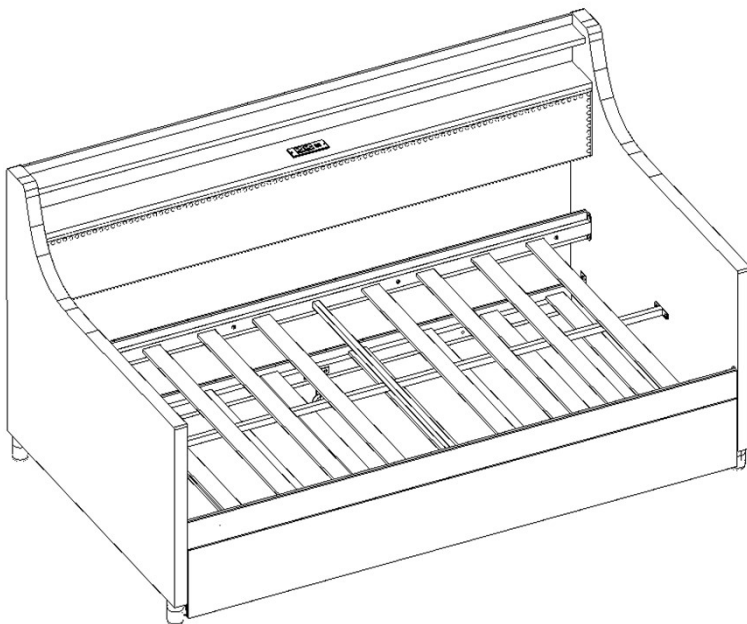



Part List

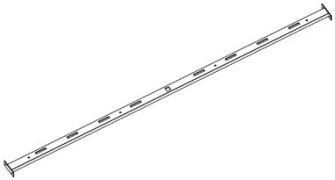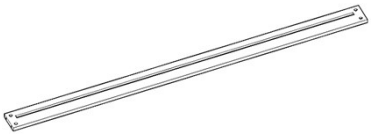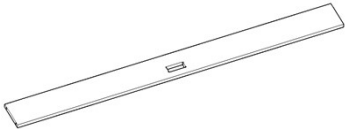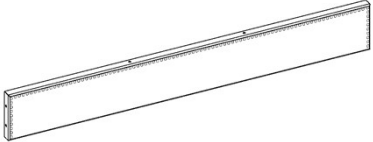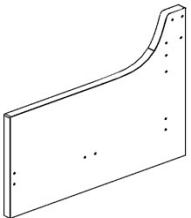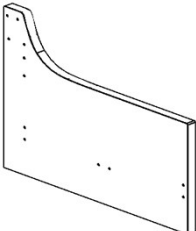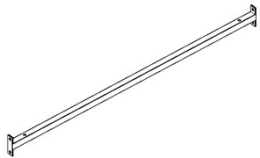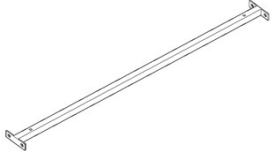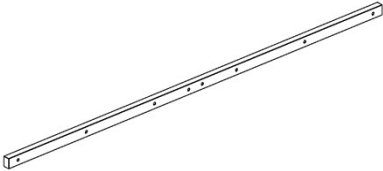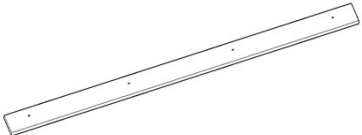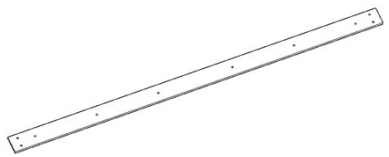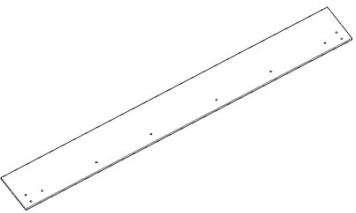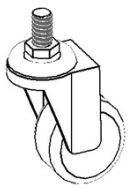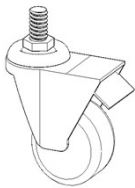1		2		3	
	Metal Slat Frame x2		Rail x1		Panel x1
4		5		6	
	Panel x1		Backboard x1		Headboard x1
7		8		9	
	Left Handrail x1		Right Handrail x1		Side Support Iron x2
10		11		12	
	Middle Support Iron x1		Support Slat x2		Long Support Iron x1
13		14		15	
	Slats x16		Panel x2		Back Trundle Panel x1
16		17		18	
	Front Trundle Panel x1		Caster x4		Brake Caster x2

Part List

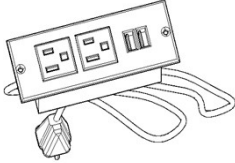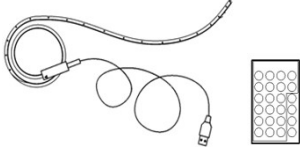
19		20		21	
	Plastic Feet x4		Socket X1		Lamp Strip Kit x1

Hardware List



A		B		C	
	Bolts(M6X10mm) X8		Bolts(M6X16mm) X32		Bolts(M6X30mm) X8
D		E		F	
	Bolts(M6X35mm) X17		Angle iron x2		Angle iron x8
G		H		I	
	Allen Key X1		Flat Gasket X16		Screws (M3X12mm) X9
J		K		L	
	Screws (M4X25mm) X10		P-Shaped Iron Sheet x3		Foam Pad X8

Step1

Attention: Do not tighten the screws before completing the entire installation. If you have any difficulty with the installation process, please feel free to contact us.

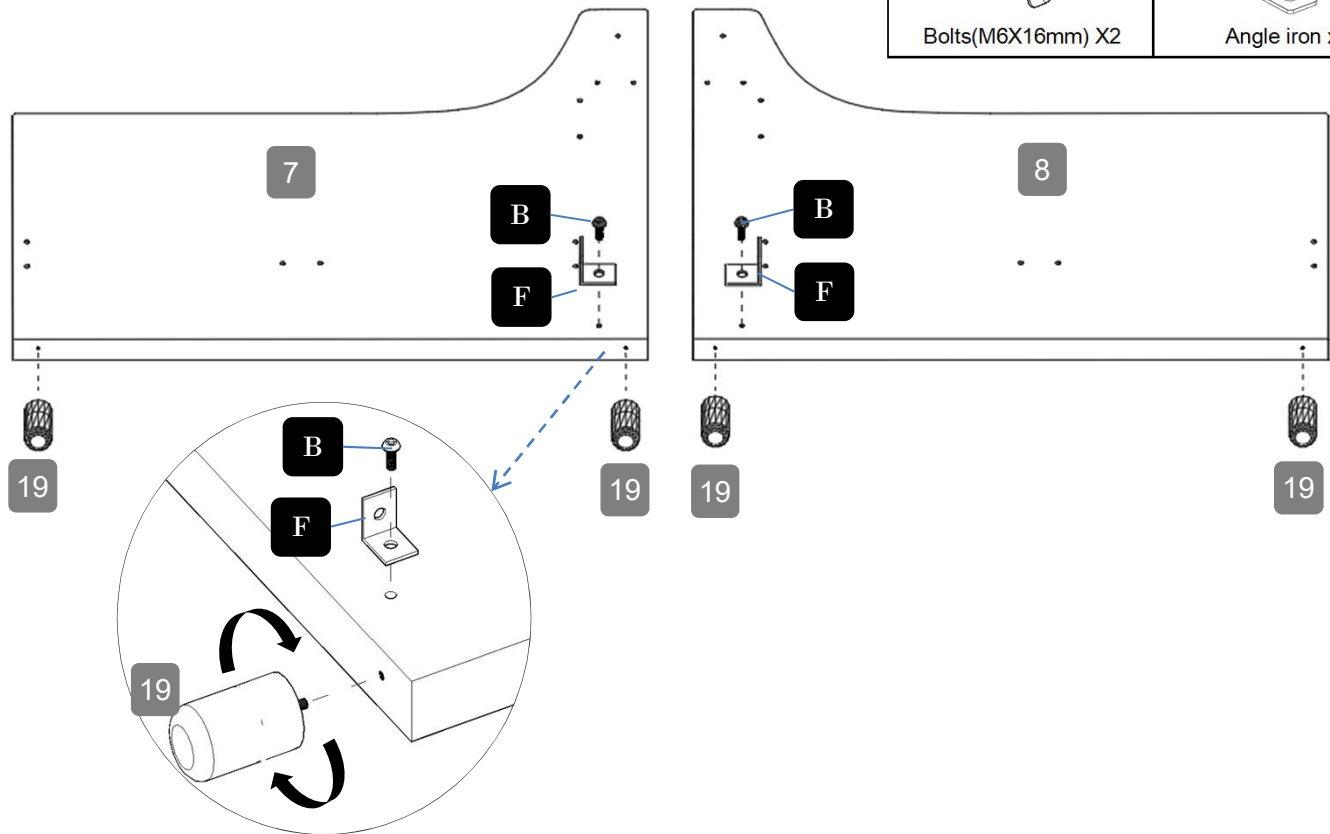

Step2

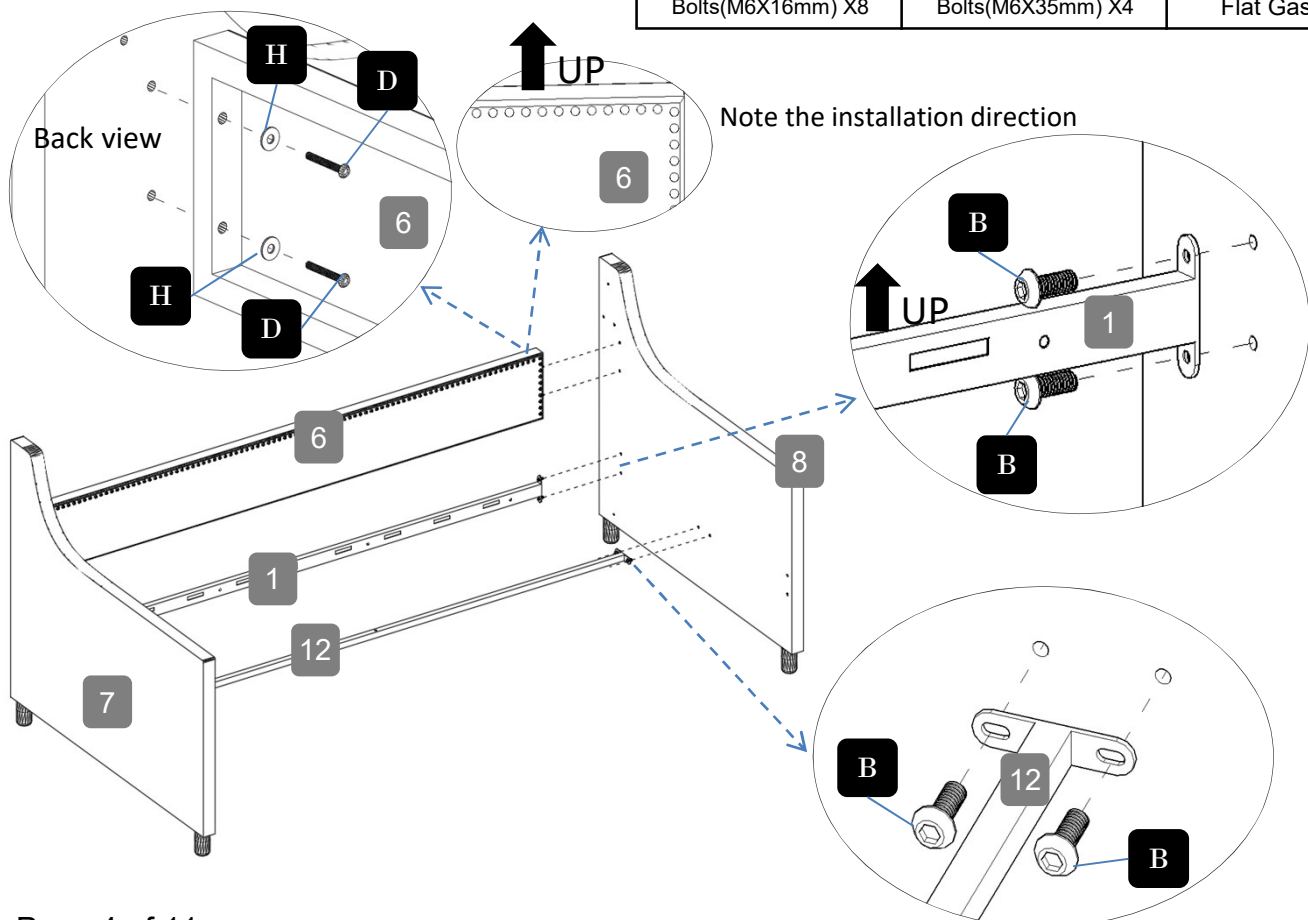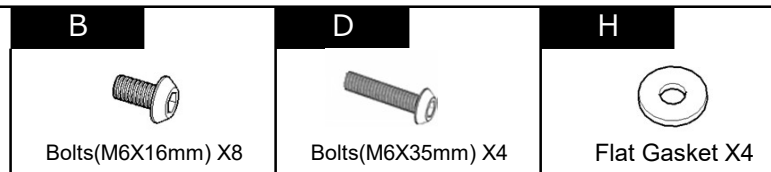

Step3

B



Bolts(M6X16mm) X2

F



Angle iron x2

I



Screws (M3X12mm) X3


K





P-Shaped Iron Sheet x3



Paste the LED strip into the light slot

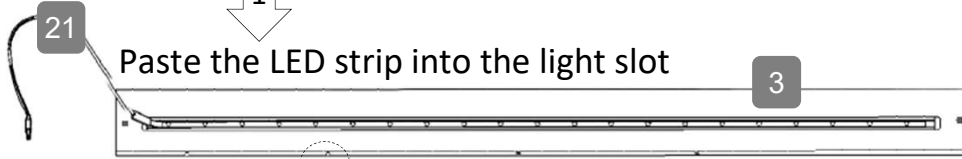

Watch the direction. There are screw holes on the edge of the board

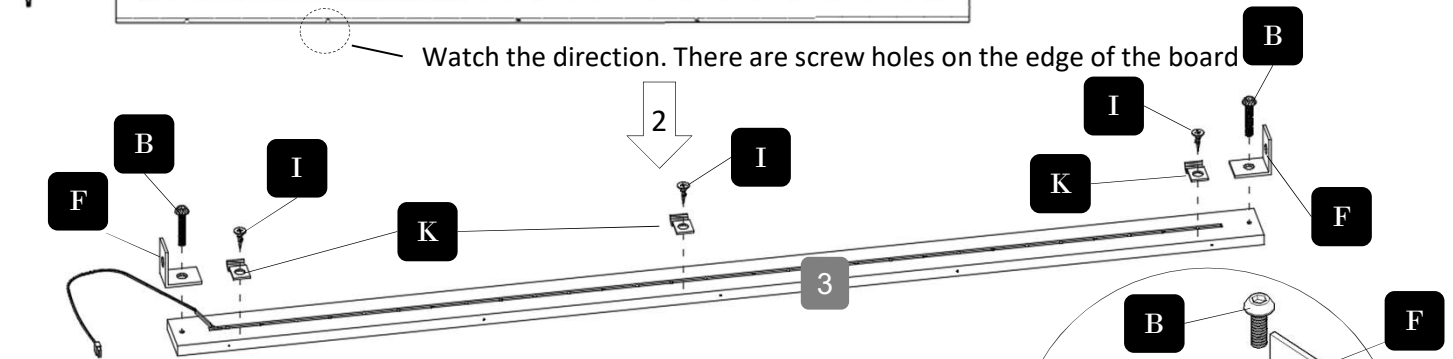

Assembly Tools Required(Not Included)

Be careful not to install on the LED

Step4

B



Bolts(M6X16mm) X4

F







Angle iron x4

I



Screws (M3X12mm) X2

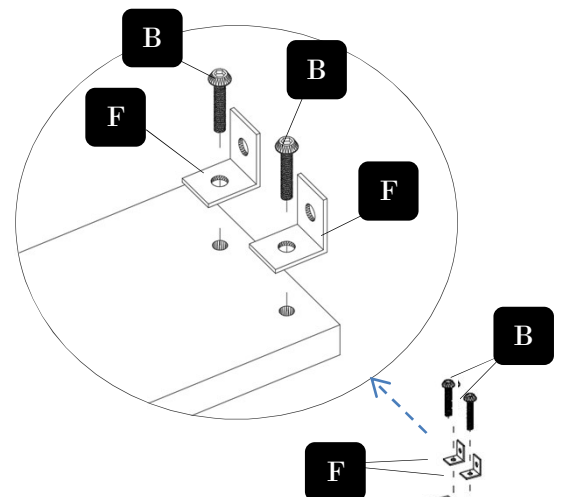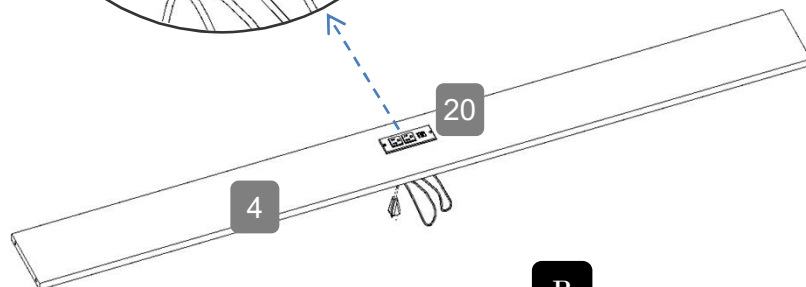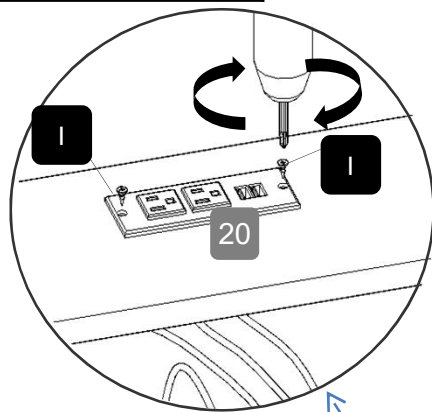

Assembly Tools Required(Not Included)

Page 5 of 11

Step5

B



Bolts(M6X16mm) X6

E









Angle iron x2

I



Screws (M3X12mm) X4

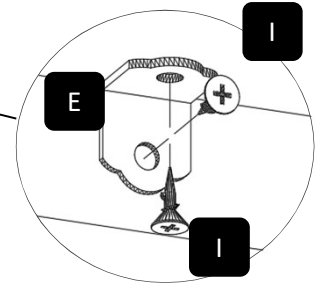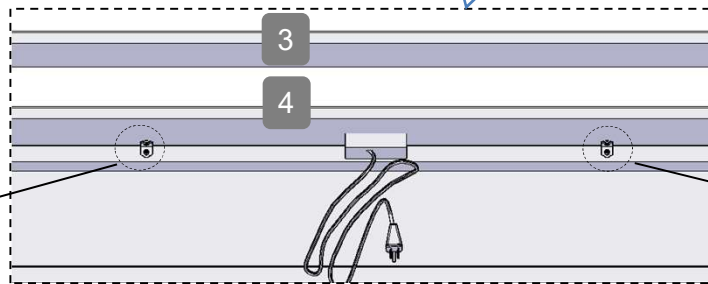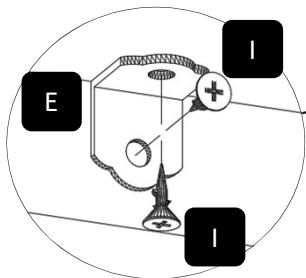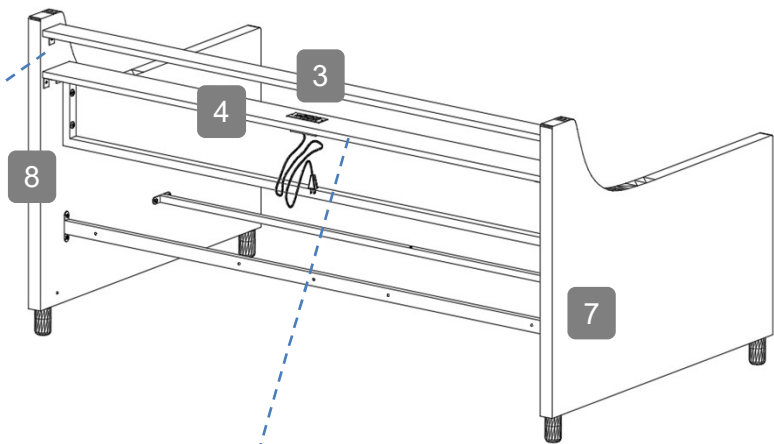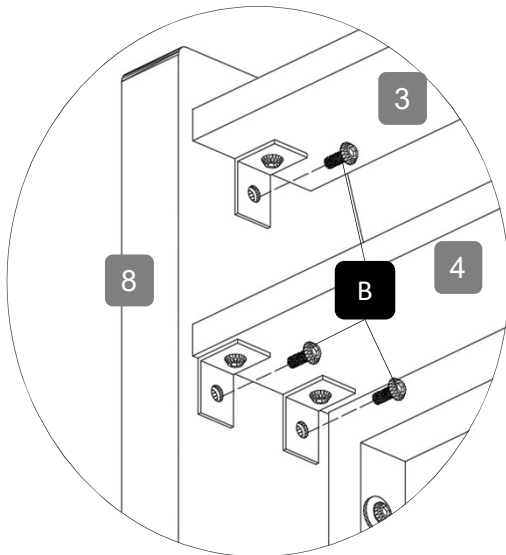




Assembly Tools Required(Not Included)

Step6

J



Screws (M4X25mm) X10

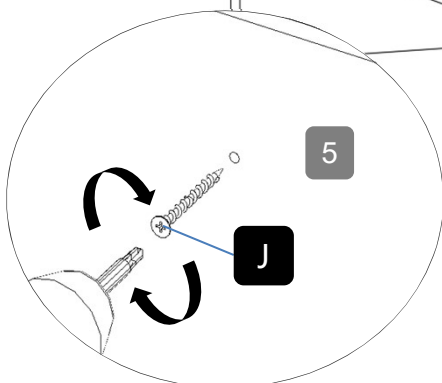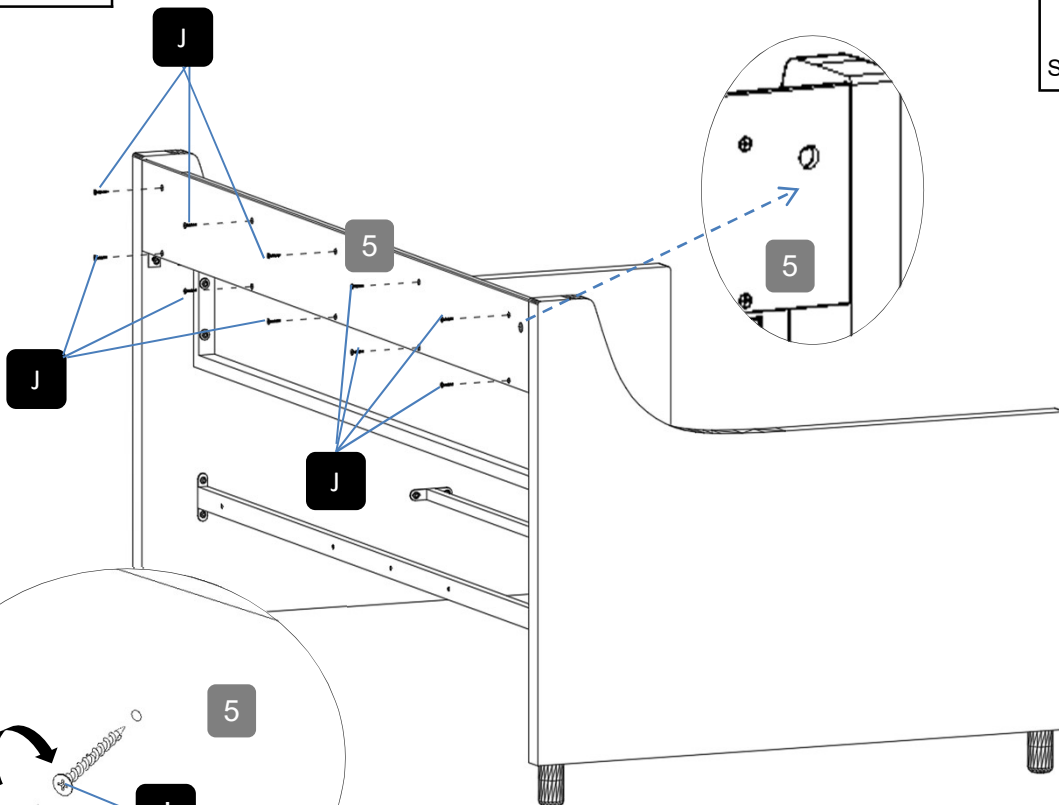

Step7

B




Bolts(M6X16mm) X1

D



Bolts(M6X35mm) X1

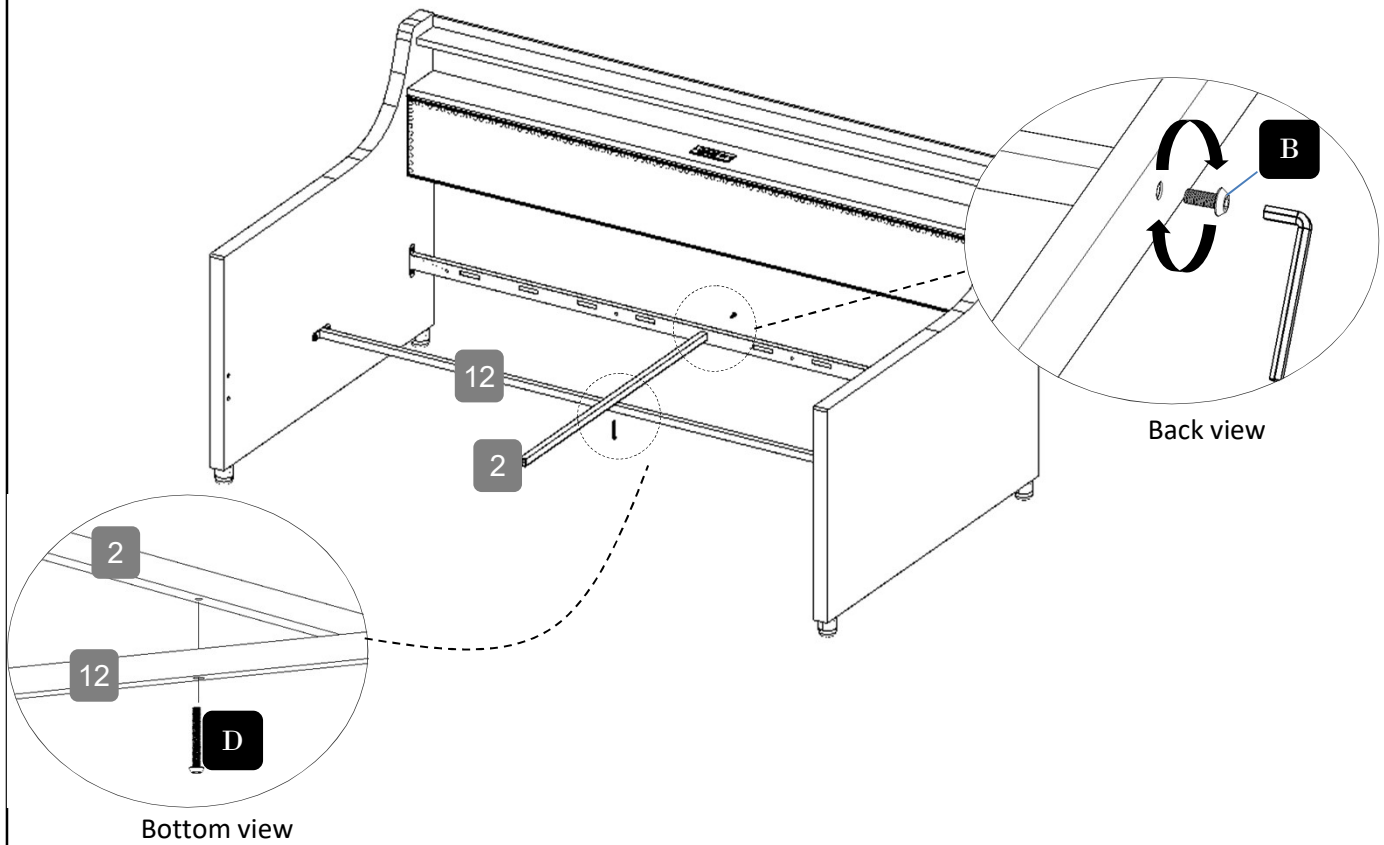


Step8

L



Foam Pad X8

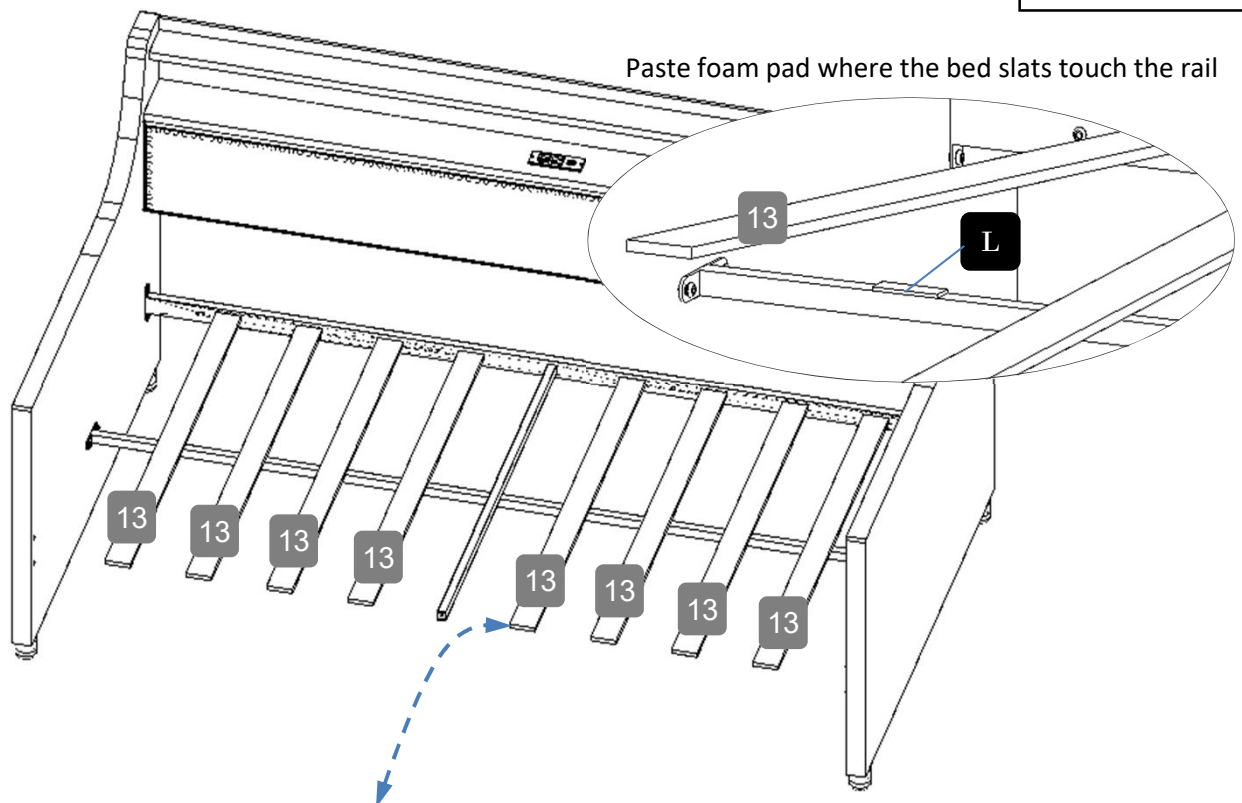




Please note that the bottom of these 8 slats is without felt,
and the bottom of the other 8 slats with felt is used in step 14 of the installation diagram

Step9



B



Bolts(M6X16mm) X5

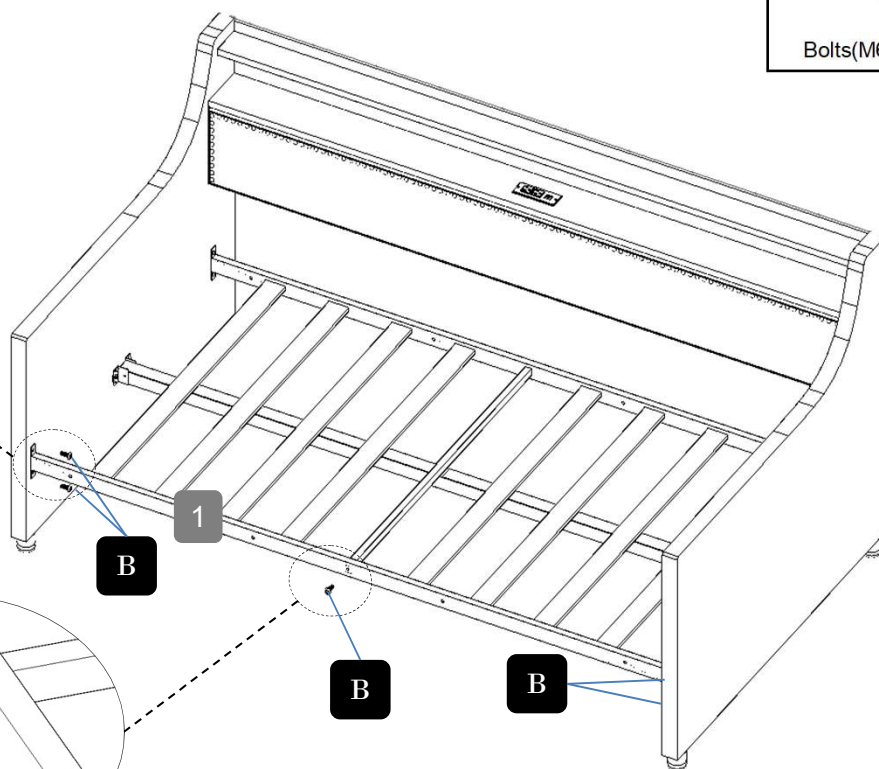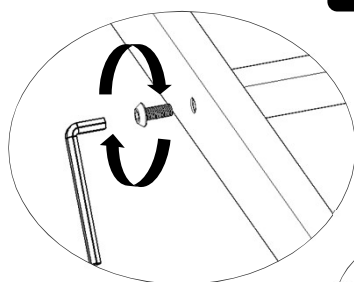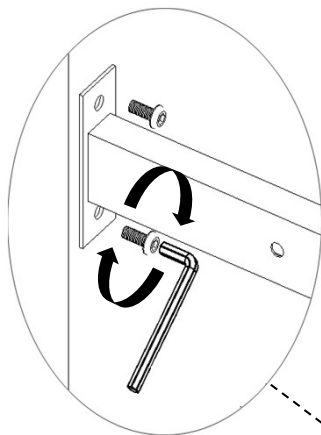

Note the installation direction of metal slat frame NO.1

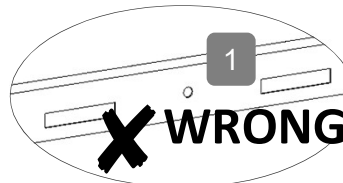
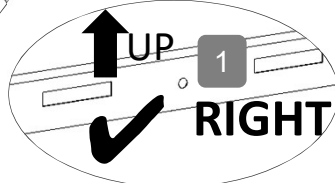


Step10

C




Bolts(M6X30mm) X8

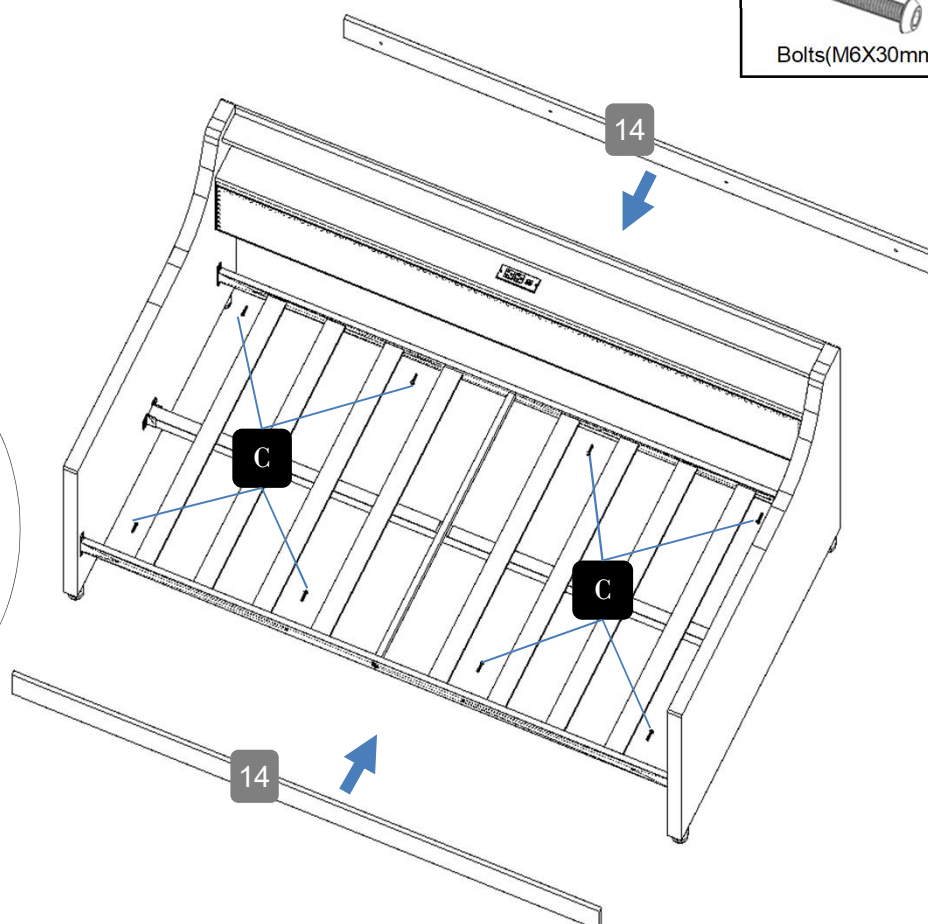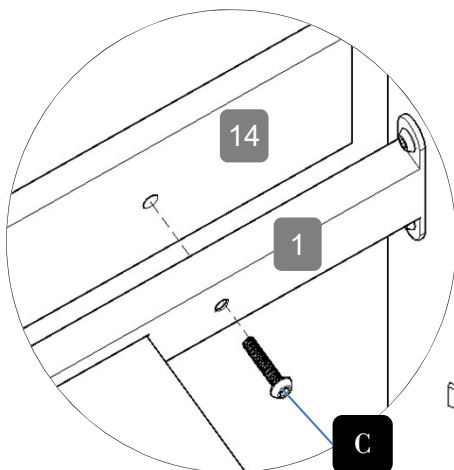


After this step, you can lock the other bolts tightly
Page 8 of 11

Step11

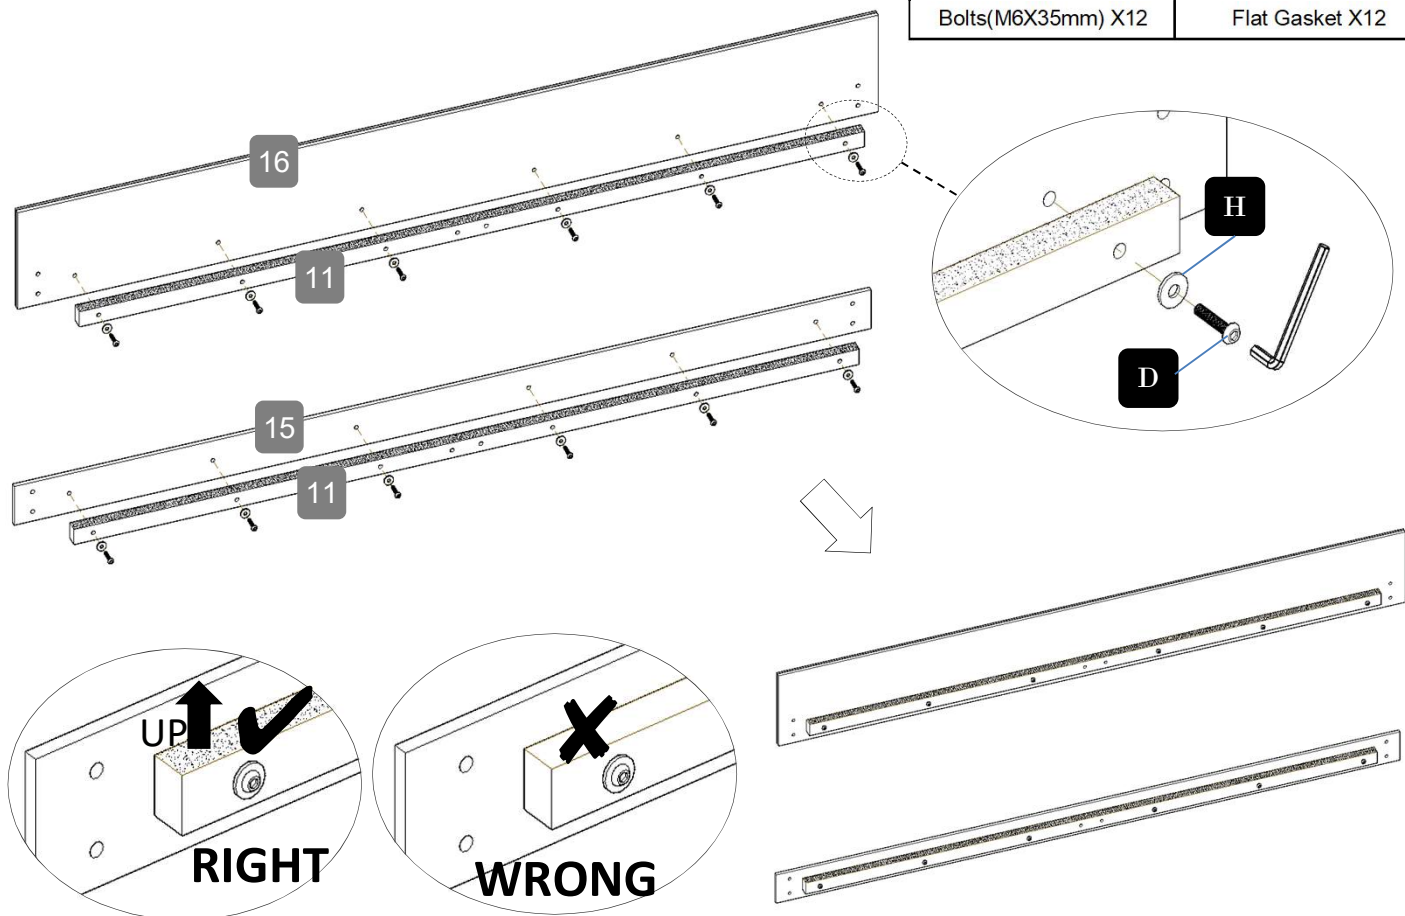


Step12

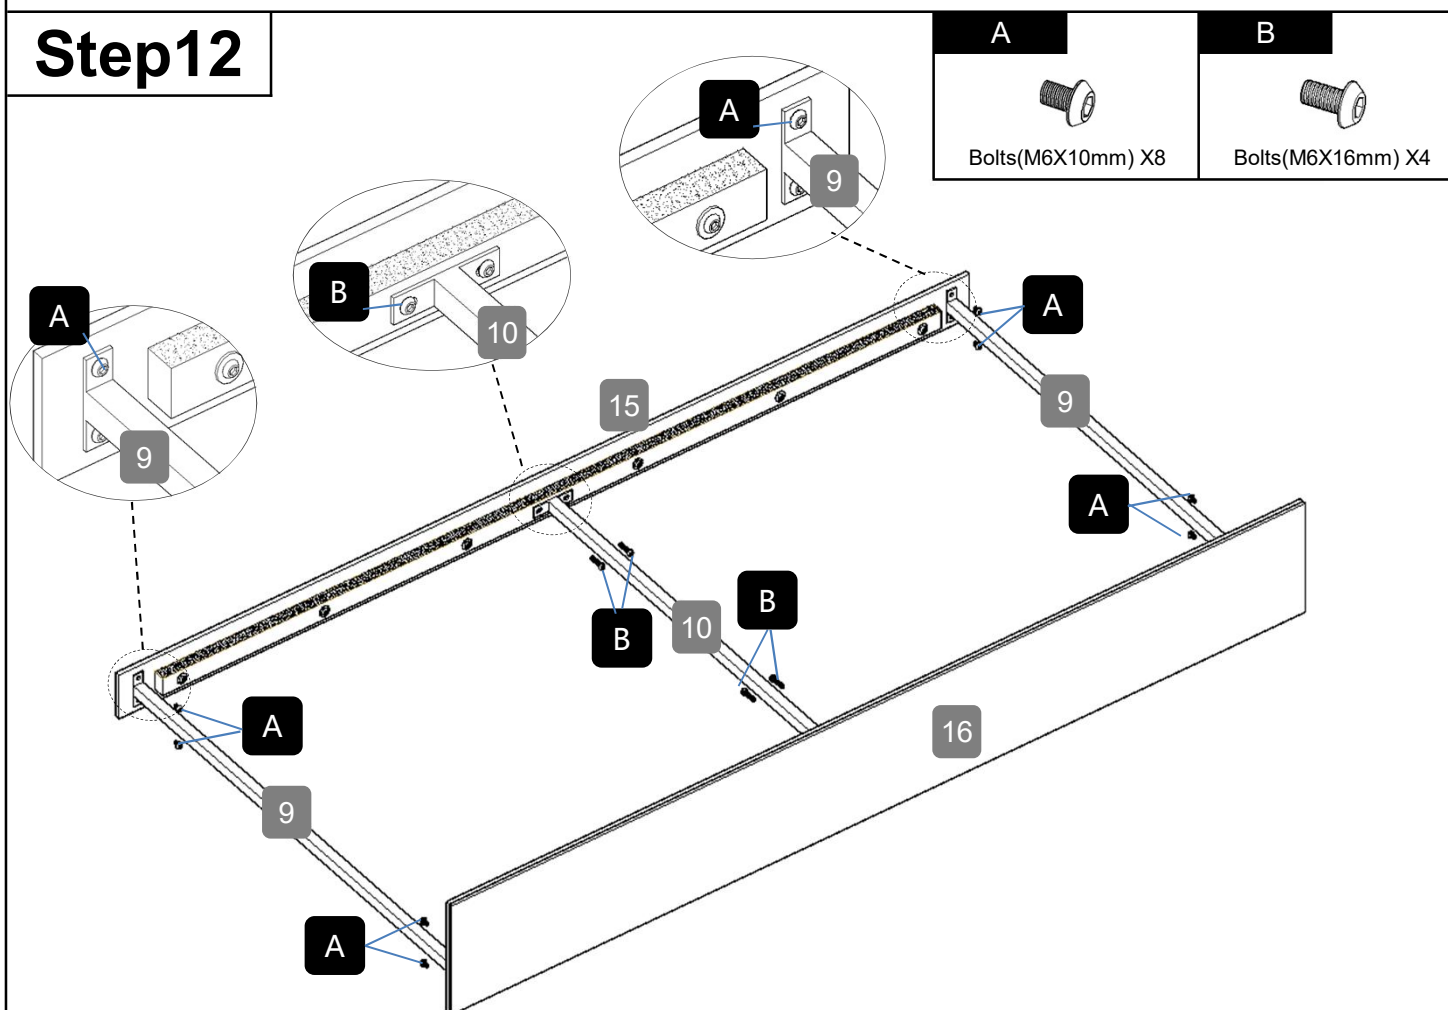


Step13

Tip: You can press and hold the brake of part18 to keep the bed in place

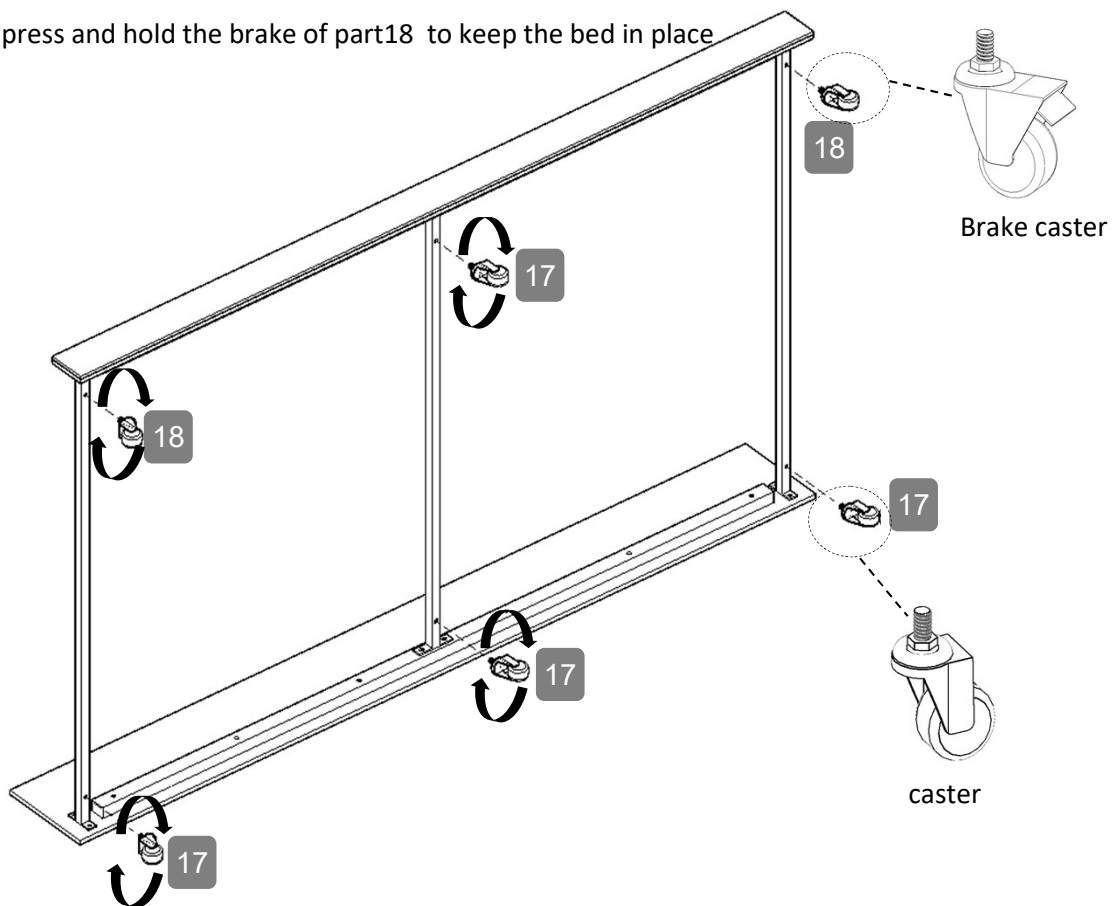



Step14

Please note that these 8 slats have felt on the bottom

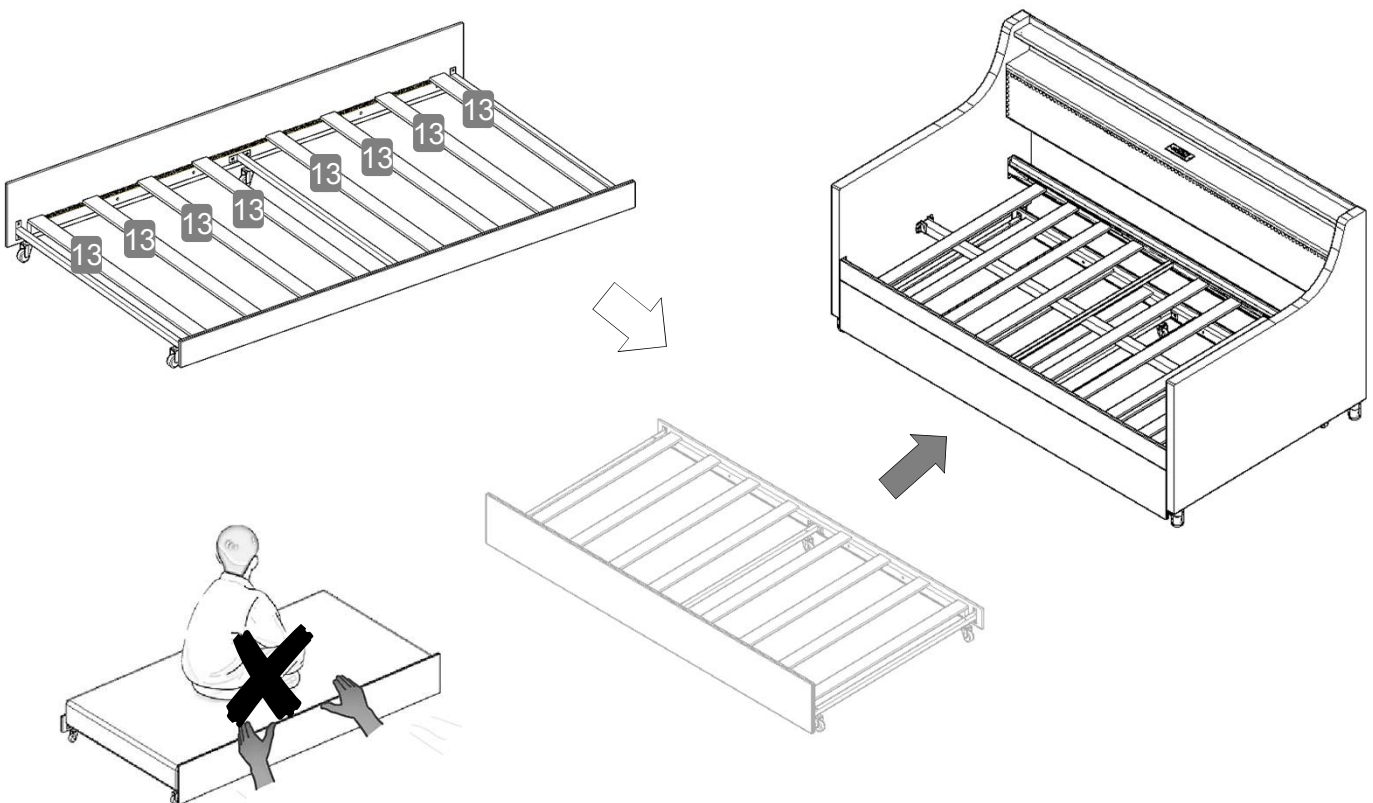

Note: Please don't move the bed when someone is in it

Step15

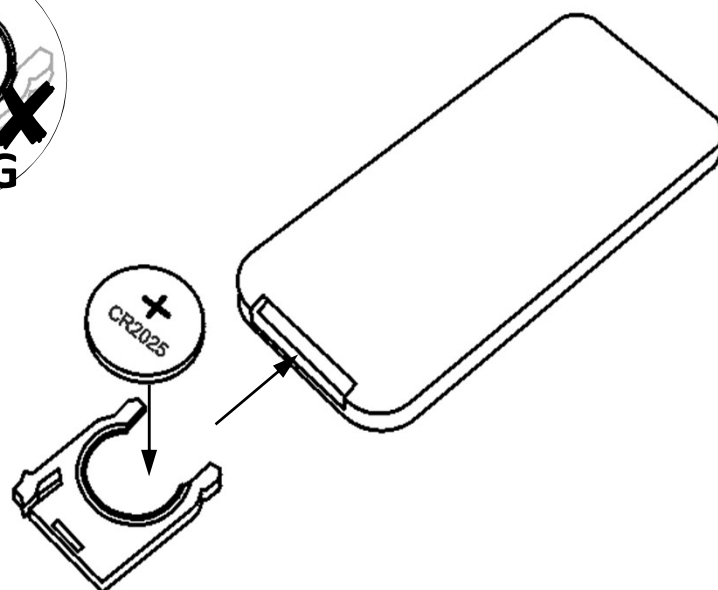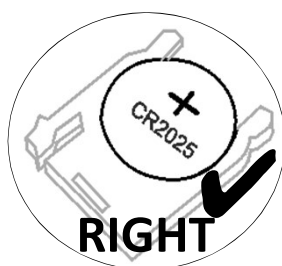

Remote control does not contain batteries, please buy your own a CR2025 button battery installed into the remote control