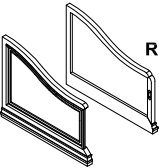


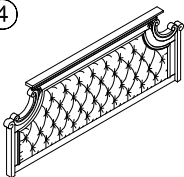

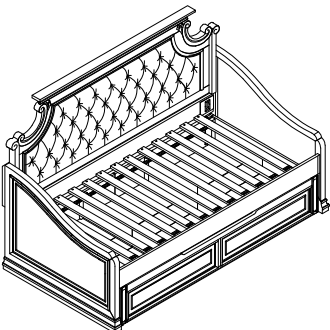
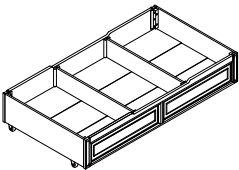


ASSEMBLY INSTRUCTION


DESCRIPTION: TWIN DAY BED HB & FB
DAYBED SIDE RAILS
DAYBED UPH BACK
TWIN DAYBED SLAT ROLL
TWIN TRUNDLE UNIT

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Identify and count all parts and compare with the parts List Below:


PART LIST:

① LEFT RIGHT 	② 	③ 	④ 	⑤ 																																				
HEADBOARD - FOOTBOARD: 2PCS	SIDE RAIL : 2PCS	SLATS ROLL: 1SET	UPH BACK: 1PC	WOOD SUPPORTS: 2PCS																																				
		⑥ HARDWARE LIST <table><tr><th>NO.</th><th>Drawing</th><th>Description</th><th>Q'ty</th></tr><tr><td>A</td><td></td><td>Threaded Bolt Ø5/16" X3-1/2"</td><td>8pcs</td></tr><tr><td>B</td><td></td><td>Bolt Ø5/16"x 1-3/4"</td><td>12pcs</td></tr><tr><td>C</td><td></td><td>Flat washer (Ø5/16"x19mm)</td><td>20pcs</td></tr><tr><td>D</td><td></td><td>Spring washer (Ø5/16")</td><td>20pcs</td></tr><tr><td>E</td><td></td><td>Hex Nut (Ø5/16")</td><td>8pc</td></tr><tr><td>F</td><td></td><td>Wood screw Ø8 x 1"</td><td>26pcs</td></tr><tr><td>G</td><td></td><td>Ø5/16" Wrench(12mm)</td><td>1pc</td></tr><tr><td>H</td><td></td><td>Allen wrench(5mm)</td><td>1cs</td></tr></table>			NO.	Drawing	Description	Q'ty	A		Threaded Bolt Ø5/16" X3-1/2"	8pcs	B		Bolt Ø5/16"x 1-3/4"	12pcs	C		Flat washer (Ø5/16"x19mm)	20pcs	D		Spring washer (Ø5/16")	20pcs	E		Hex Nut (Ø5/16")	8pc	F		Wood screw Ø8 x 1"	26pcs	G		Ø5/16" Wrench(12mm)	1pc	H		Allen wrench(5mm)	1cs
		NO.	Drawing	Description	Q'ty																																			
A		Threaded Bolt Ø5/16" X3-1/2"	8pcs																																					
B		Bolt Ø5/16"x 1-3/4"	12pcs																																					
C		Flat washer (Ø5/16"x19mm)	20pcs																																					
D		Spring washer (Ø5/16")	20pcs																																					
E		Hex Nut (Ø5/16")	8pc																																					
F		Wood screw Ø8 x 1"	26pcs																																					
G		Ø5/16" Wrench(12mm)	1pc																																					
H		Allen wrench(5mm)	1cs																																					
TWIN TRUNDLE UNIT 																																								


STEP 1

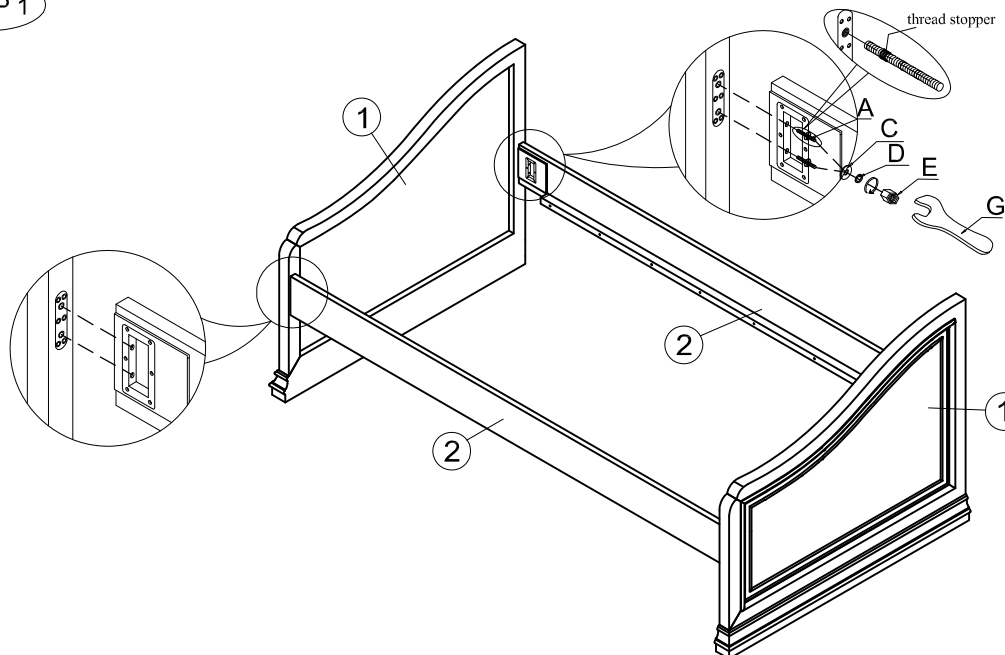


STEP 2

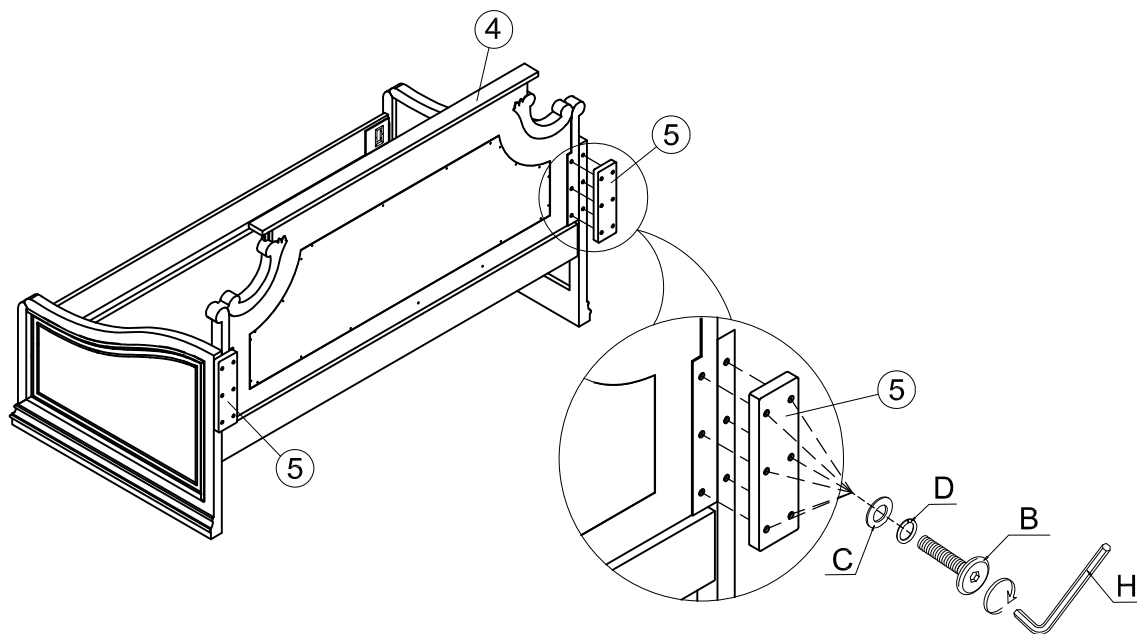

STEP 3

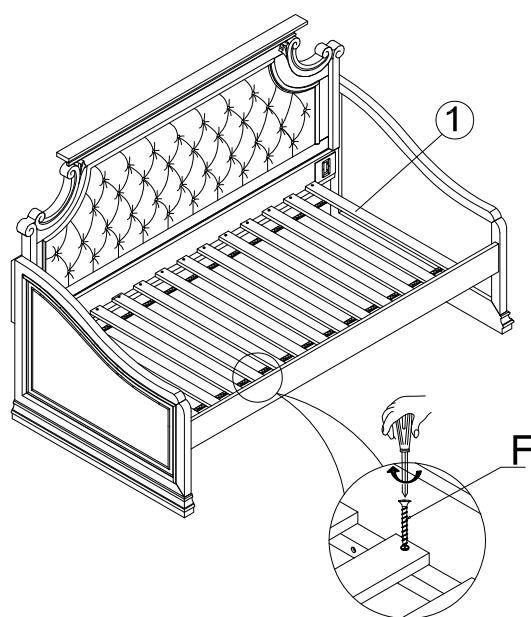

STEP 4

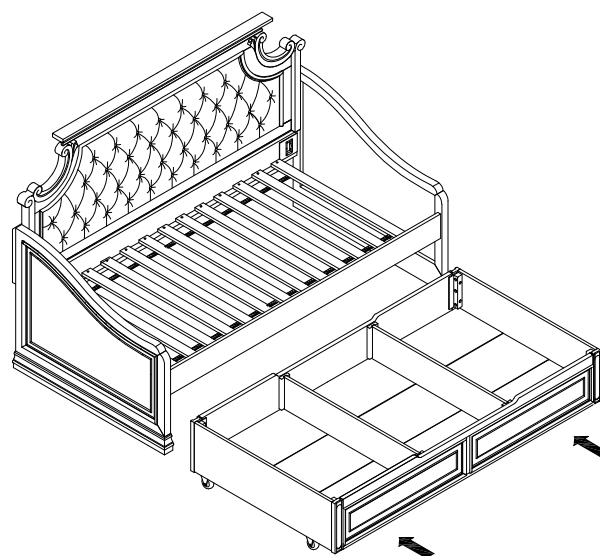

CLEANING INSTRUCTION

Clean the Day Bed surface with a furniture polish and a soft cloth.