

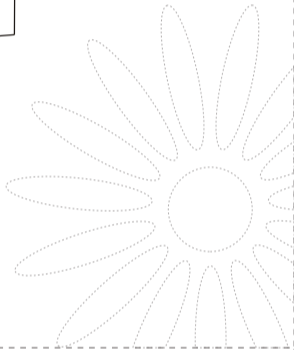
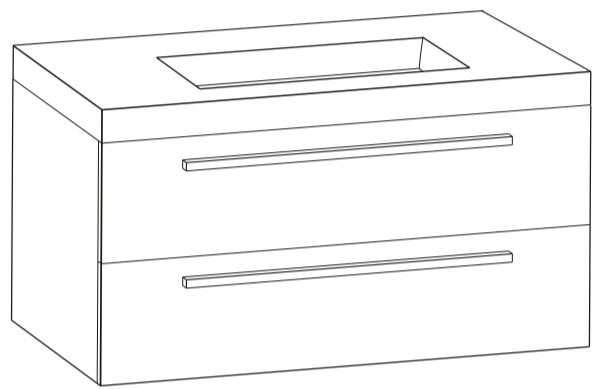



Installation Guide

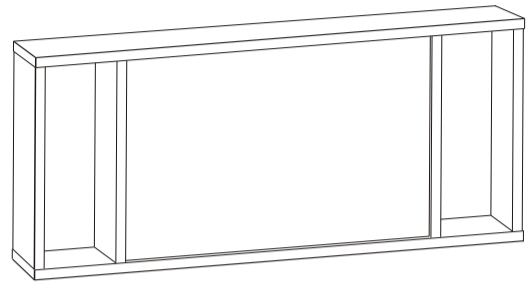


MIRROR



6B




6C

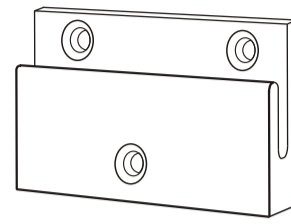


2D


1

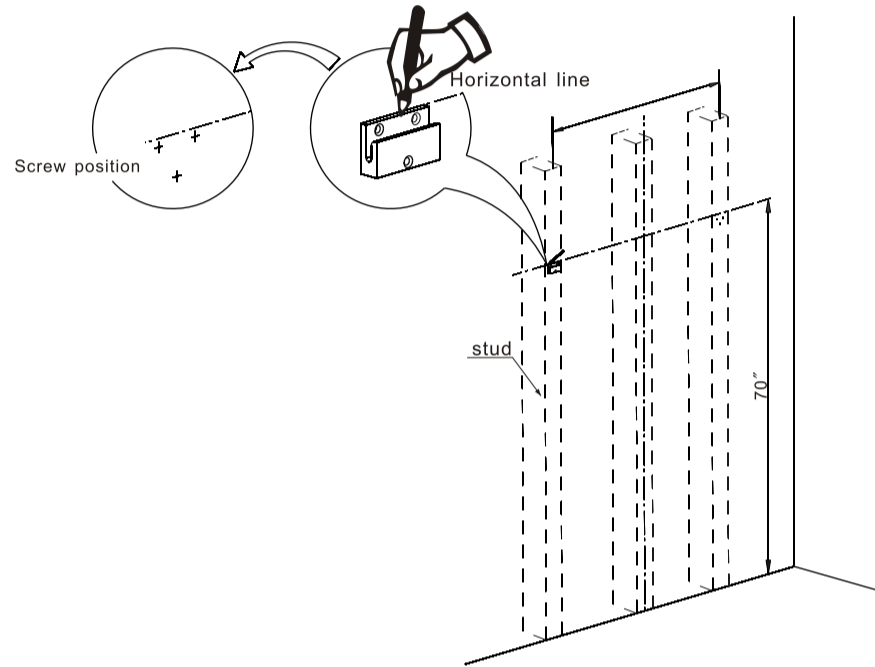


4

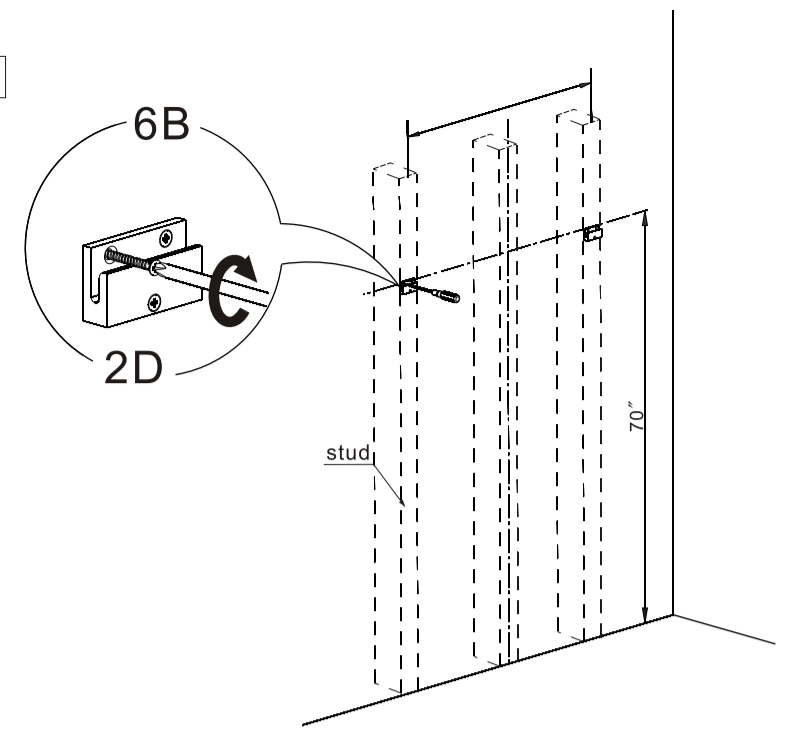



5

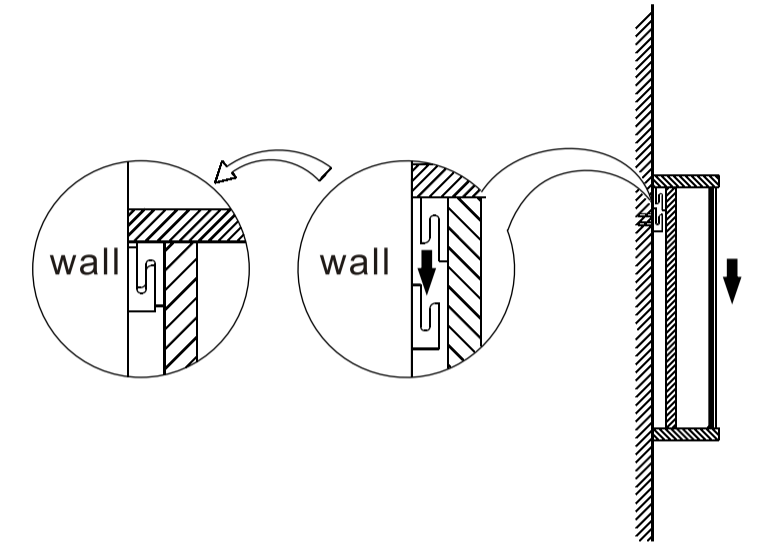


2

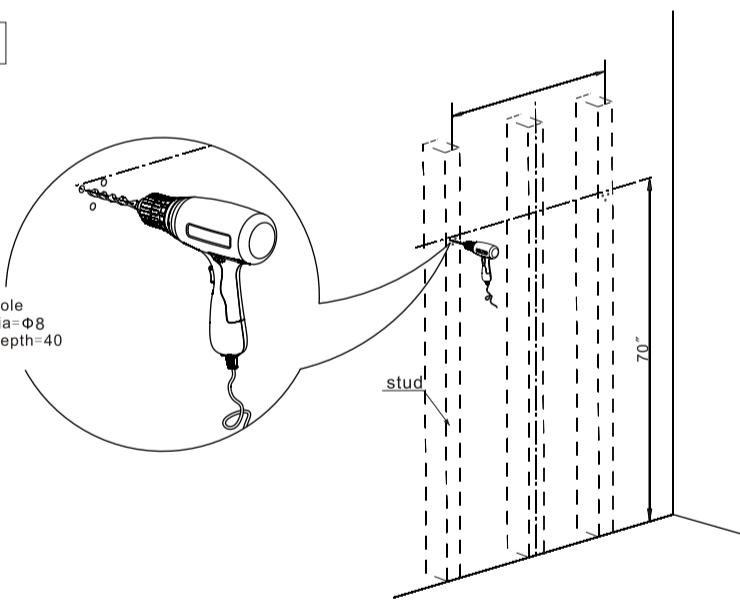


3

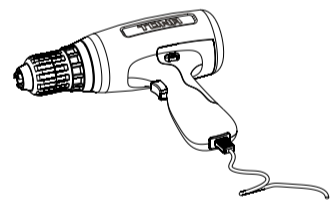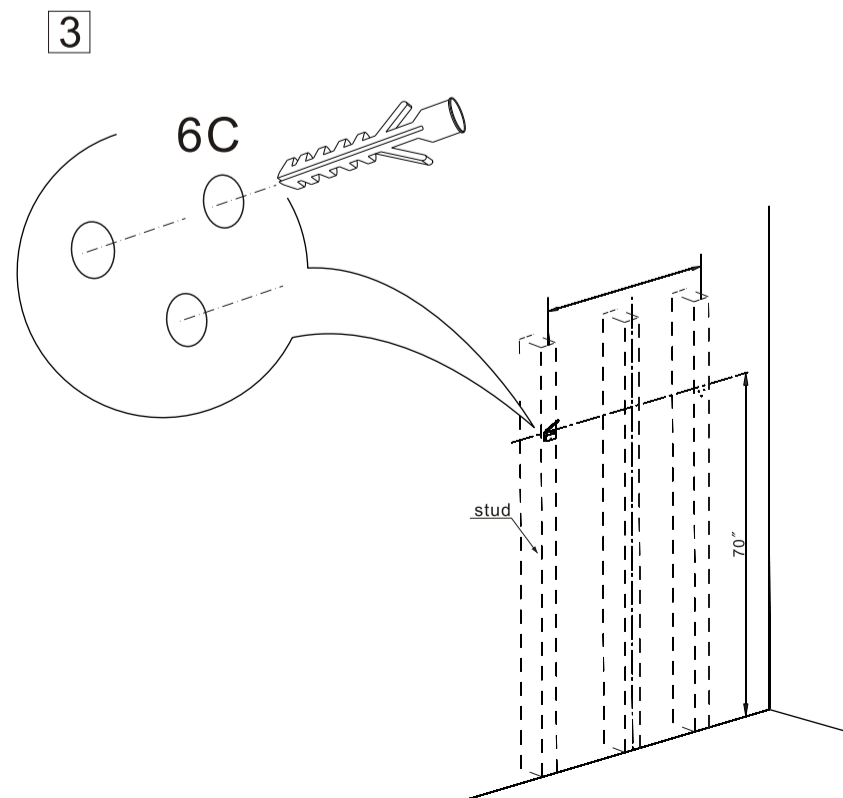


Electric drill



Drill bit
(Φ8)




Tape measure
(3m~5m)



Silicone




Pencil






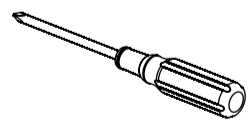


Screwdriver

Tools required for installation




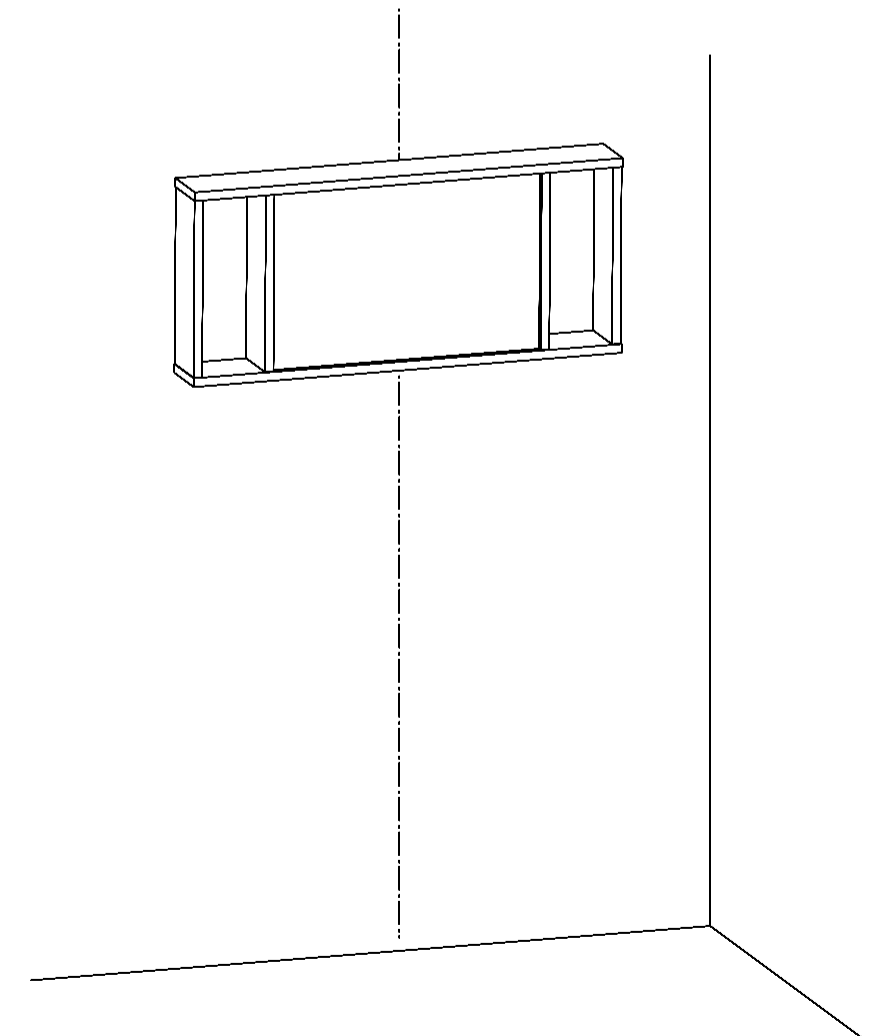


CABINET

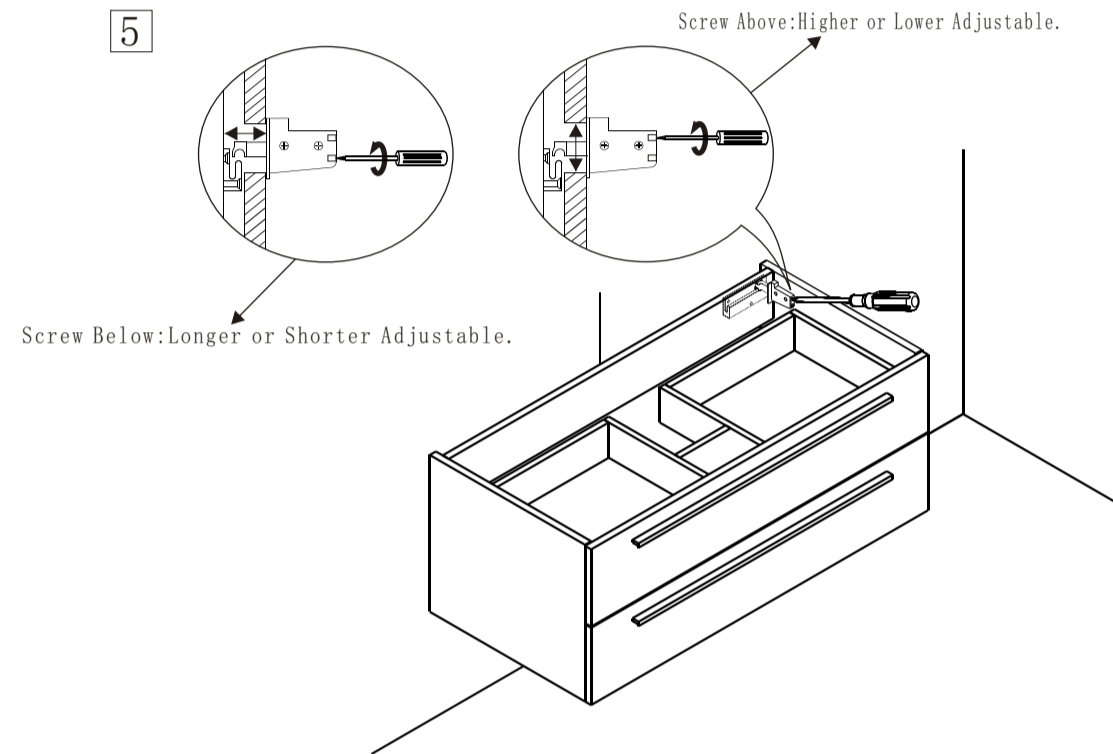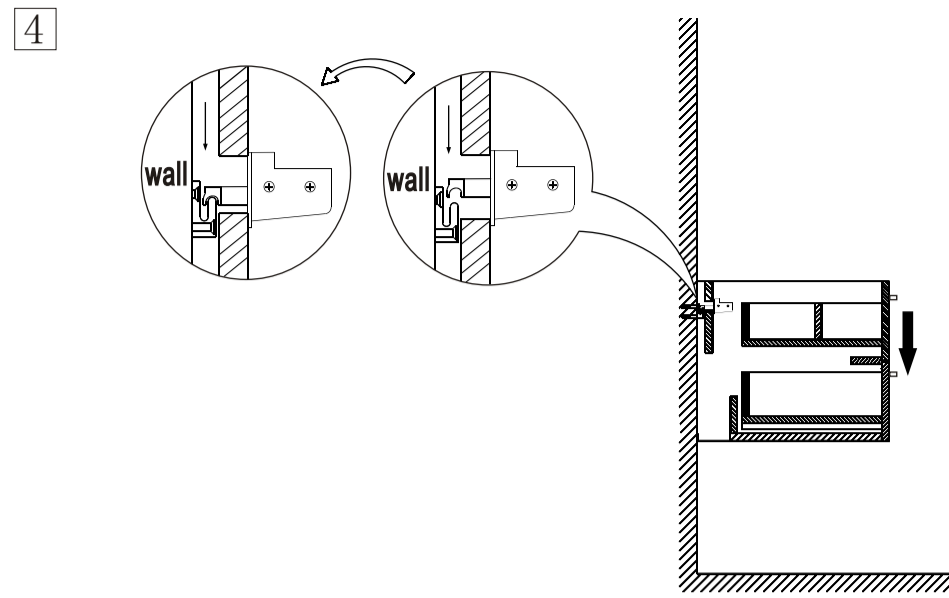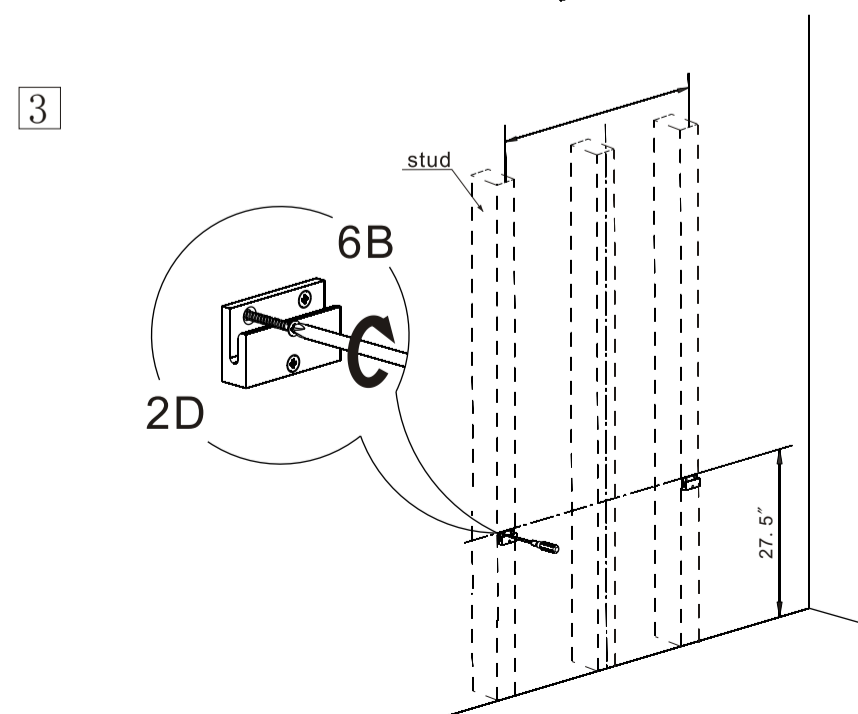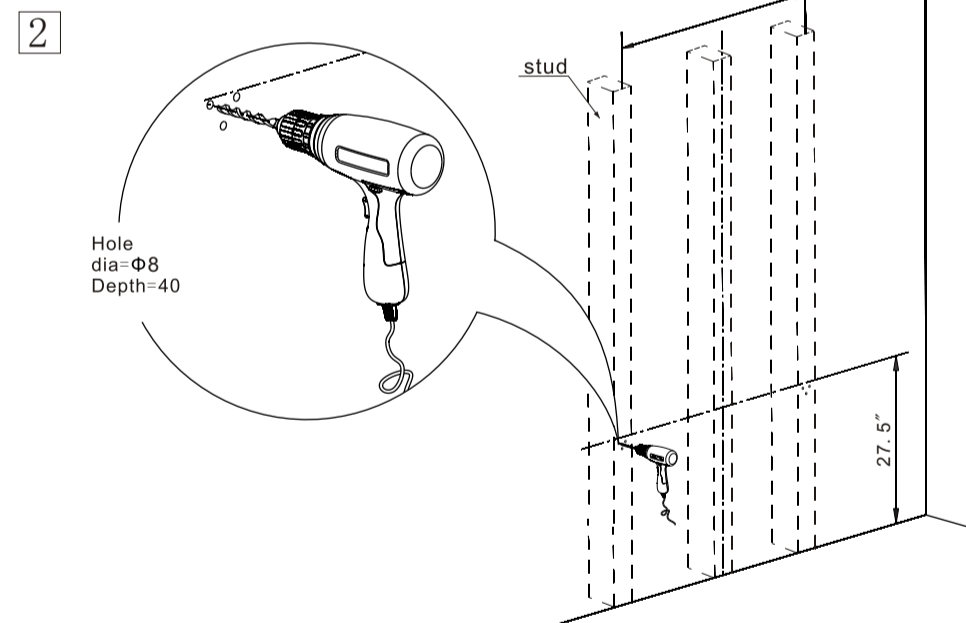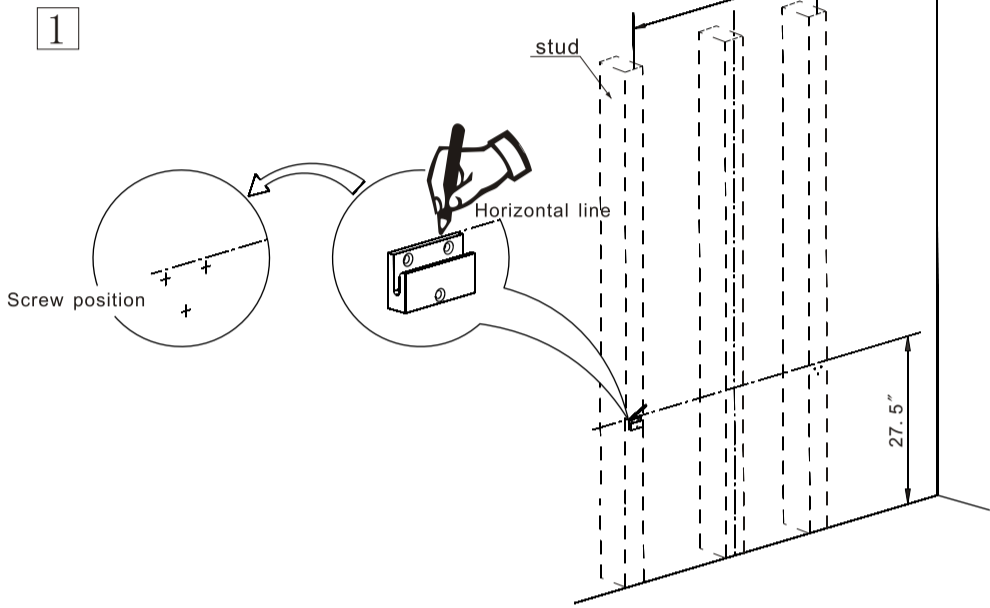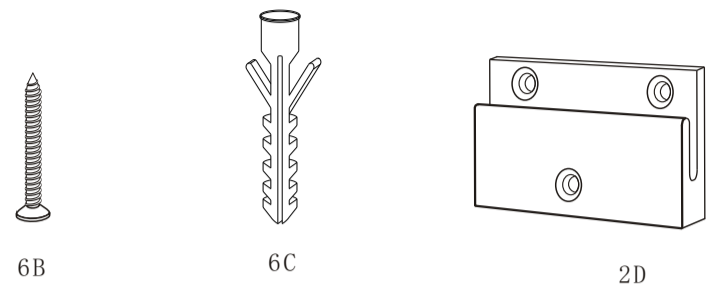

STORAGE

(Select)

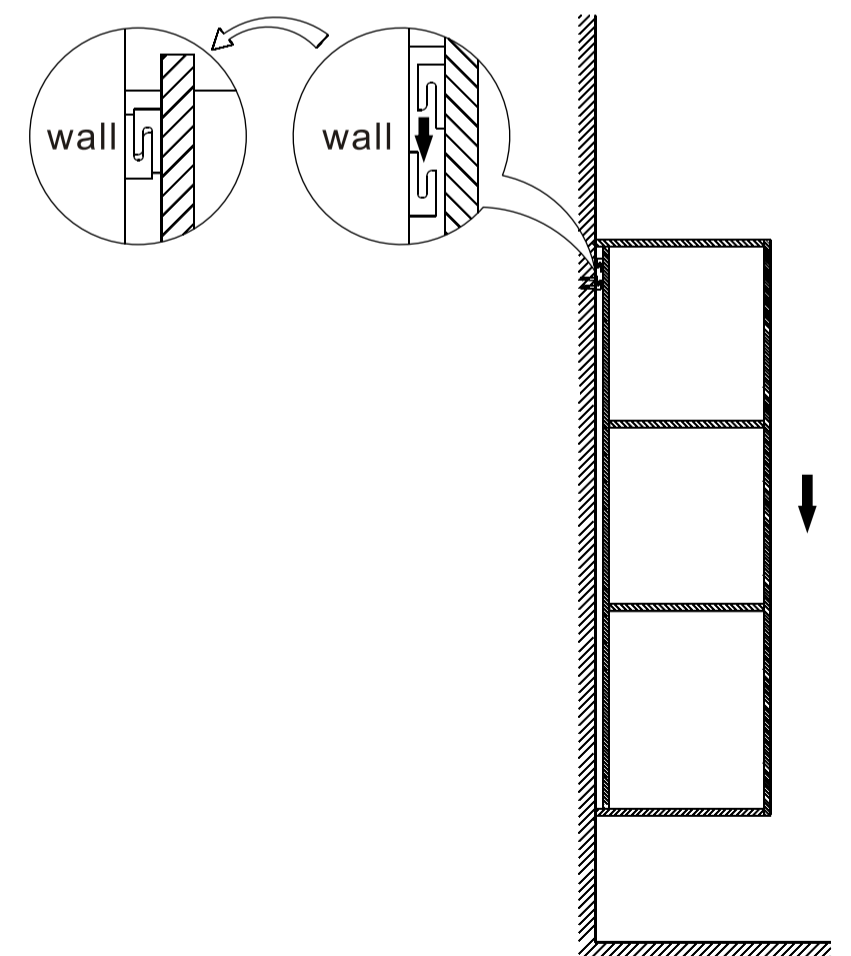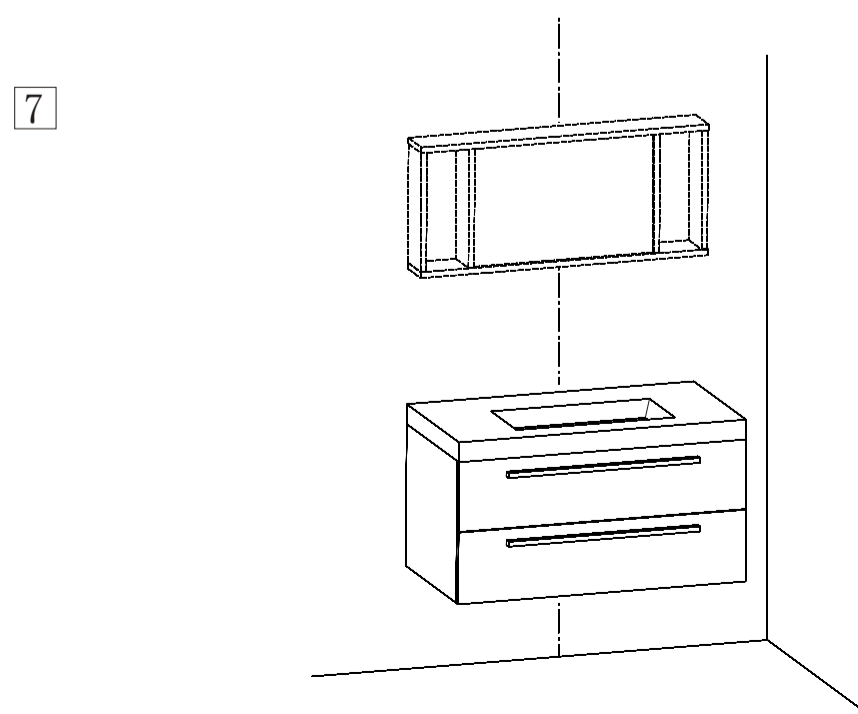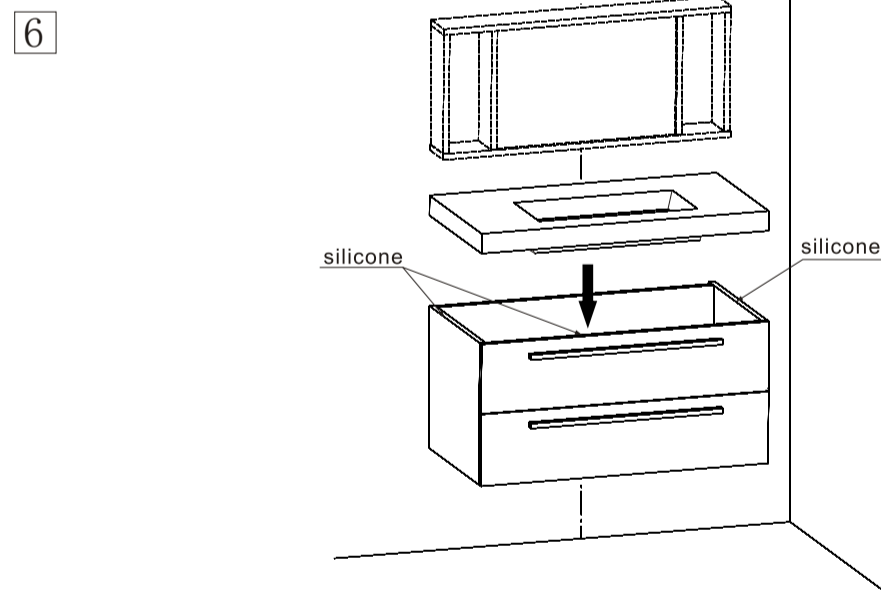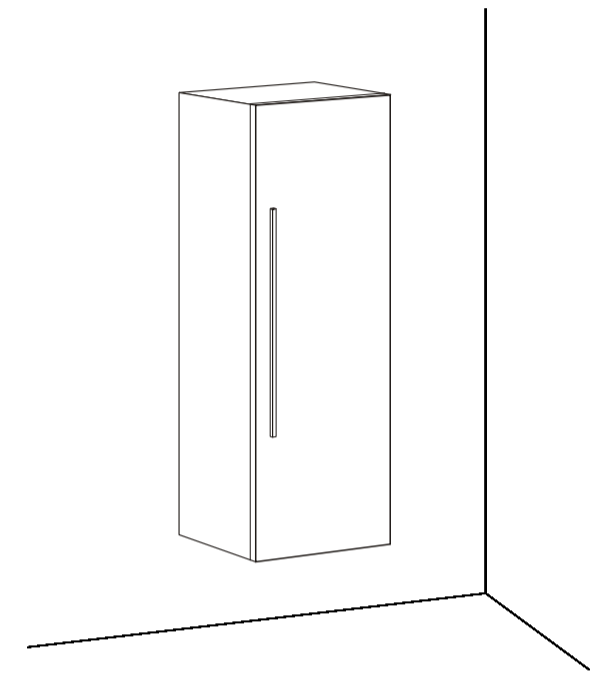

Remark: if there is logical adjustment.
It will not be another notify.