



ASSEMBLY INSTRUCTIONS

CAPTAINS BED WITH TRUNDLE

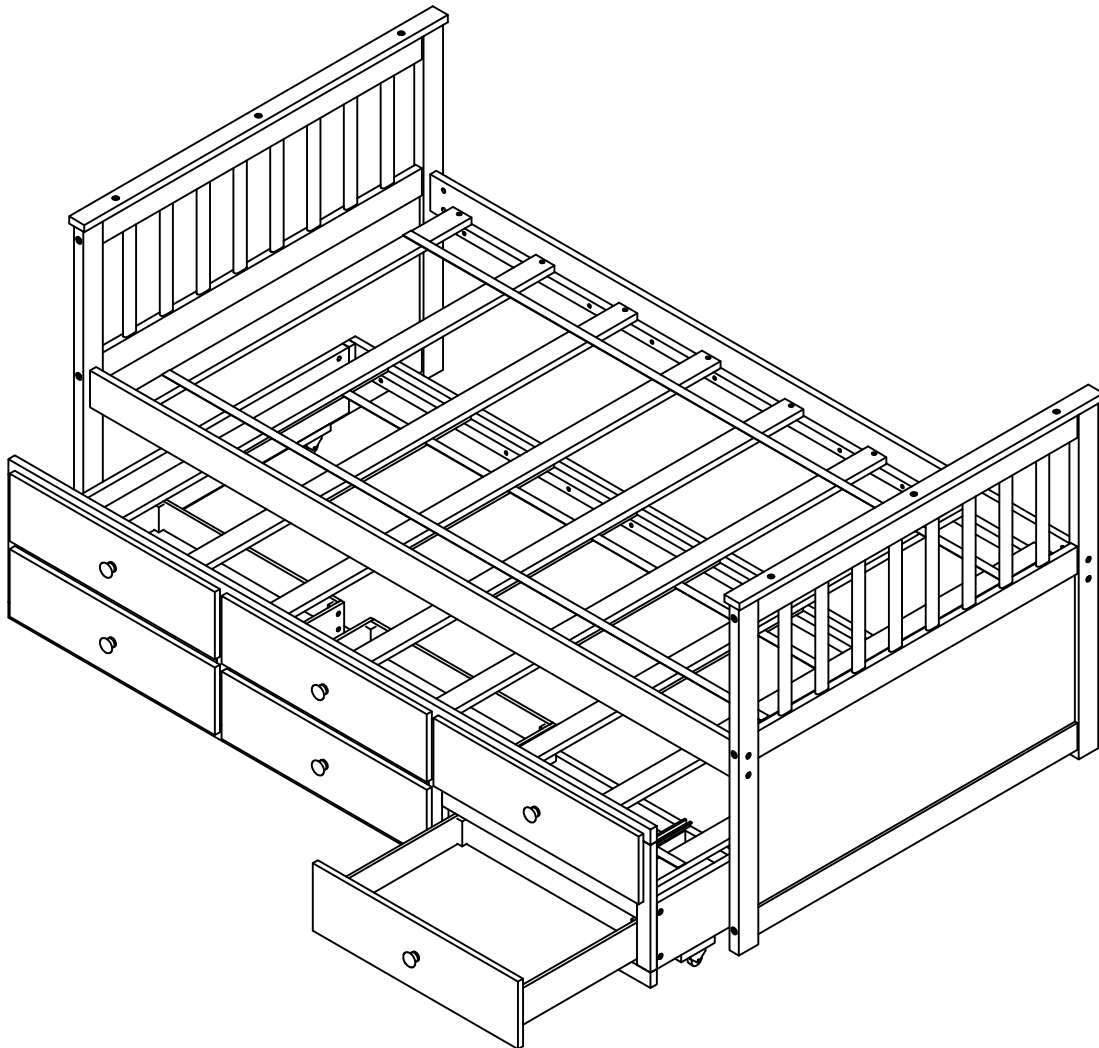







This set is included 2 boxes if don't receive full 2 boxes please contact our customer service team.

Detail View




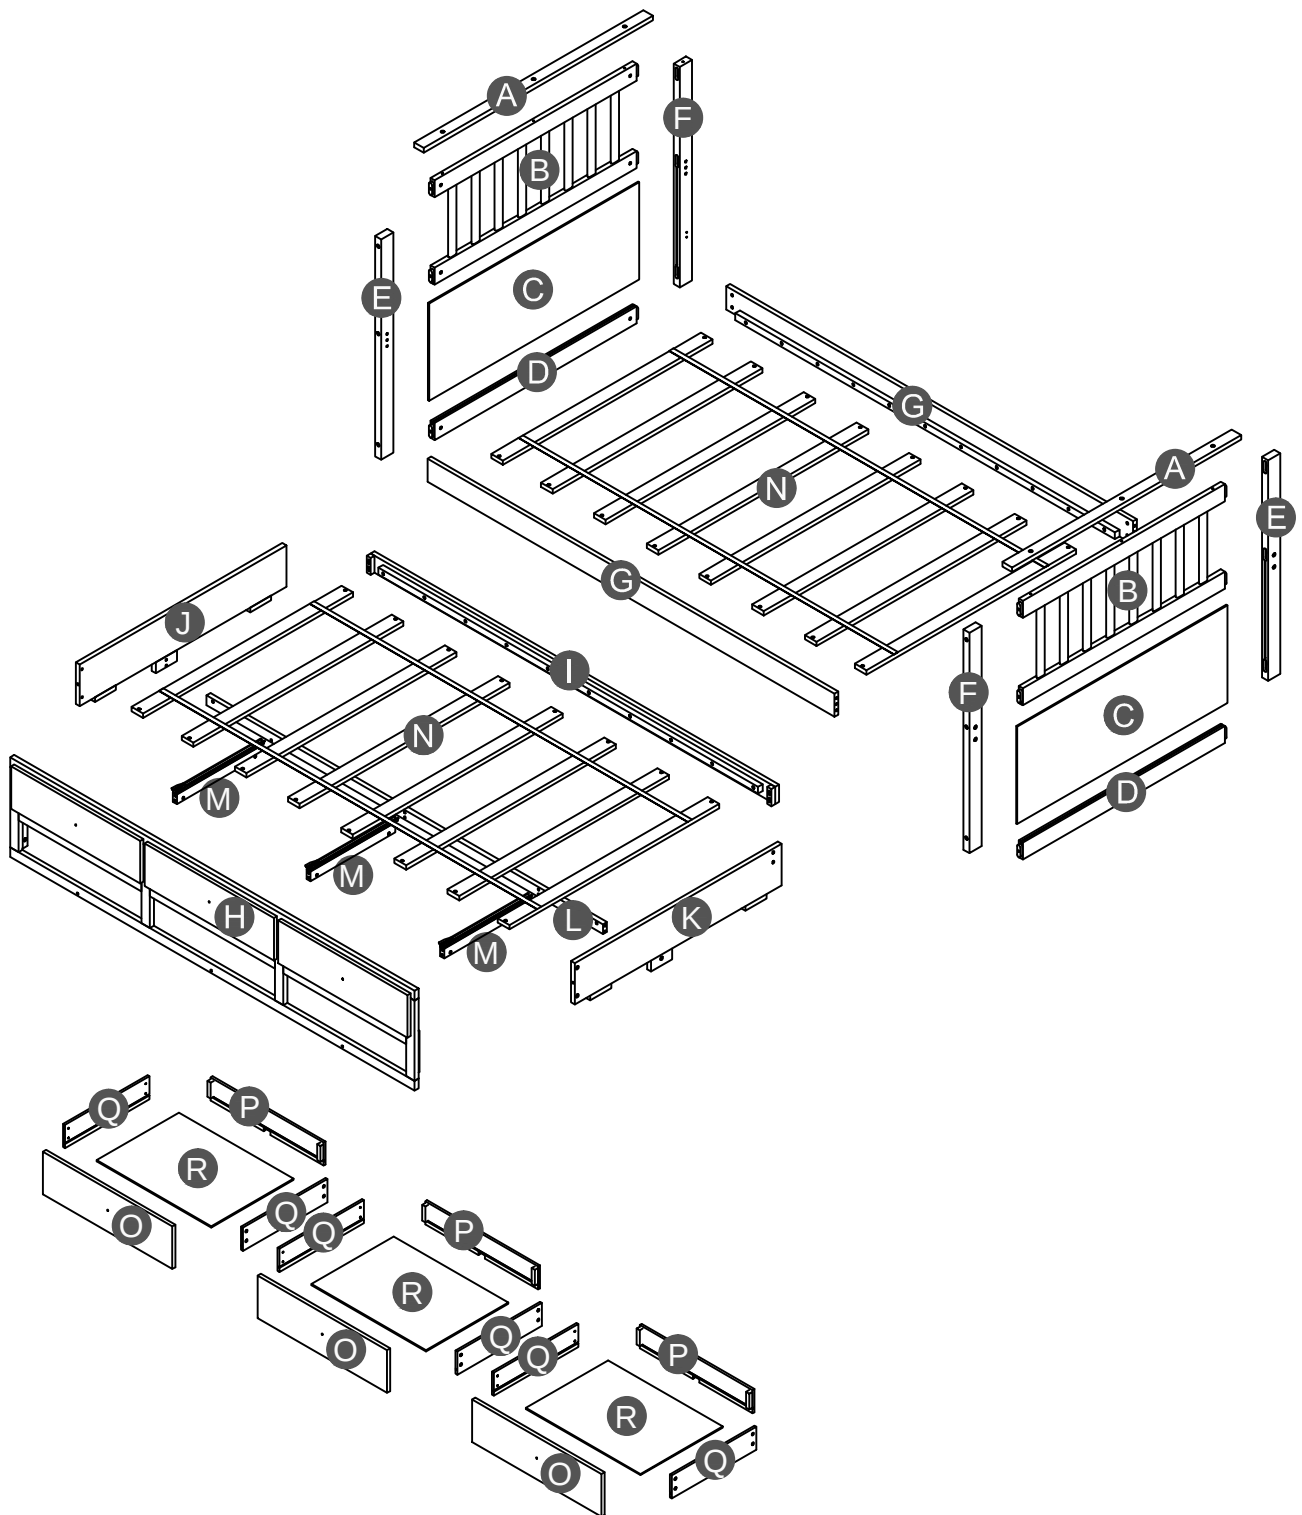


Part List





Hardware List (WF194124)

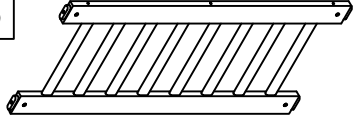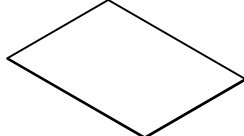B  HB & FB - 2pcs	C  Side panel - 2pcs	D  Horizontal bar - 2pcs
E  Leg HB & FB (Left) - 2pcs	F  Leg HB & FB (Right) - 2pcs	J  Left side panel of trundle -1pc
K  Right side panel of trundle -1pc	M  Support drawer -3pcs	Q  Left / right drawer panel - 6pcs
R  Drawer bottom - 3pcs		


WF194125

A  Cap for HB & FB - 2pcs	G  Side rail(Back & Front)-2pcs	H  Front panel - 1pc
I  Back panel side rail of trundle -1pc	L  Support rail of trundle -1pc	O  Front drawer panel - 3pcs
P  Back drawer panel - 3pcs	N  Slats - 2set (8pcs/set)	

Hardware List


1  Ø8*30mm Wood dowel (8pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (12pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (12pcs)
4  (Ø12)1/4"*60mm Hex-Head bolts (8pcs)	5  (Ø12)1/4"*30mm Hex-Head bolts (4pcs)	6  1/4"*15 (9.5mm) Horizontal-Hole bolts(32pcs)
7  Ø38*31mm Pine Knob (6pcs)	8  3/16"*25mm Ph zinc(Knob) (3pcs)	9  3/16"*30mm Ph zinc(Knob) (3pcs)
10  400*30mm Upper slider drawer (3pcs)	11  (1/4")4.5*58mm Allen key (1pc)	12  45*20*35mm Caster (4pcs)
13  Ø3.5*19mm Wood screws (24pcs)	14  (Ø12)1/4"*40mm Wood screws (6pcs)	15  Ø4*30mm Wood screws (32pcs)
16  Ø3.5*12mm Wood screws (9pcs)	17  Ø3*19mm Wood screws (8pcs)	

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !


STEP 1:

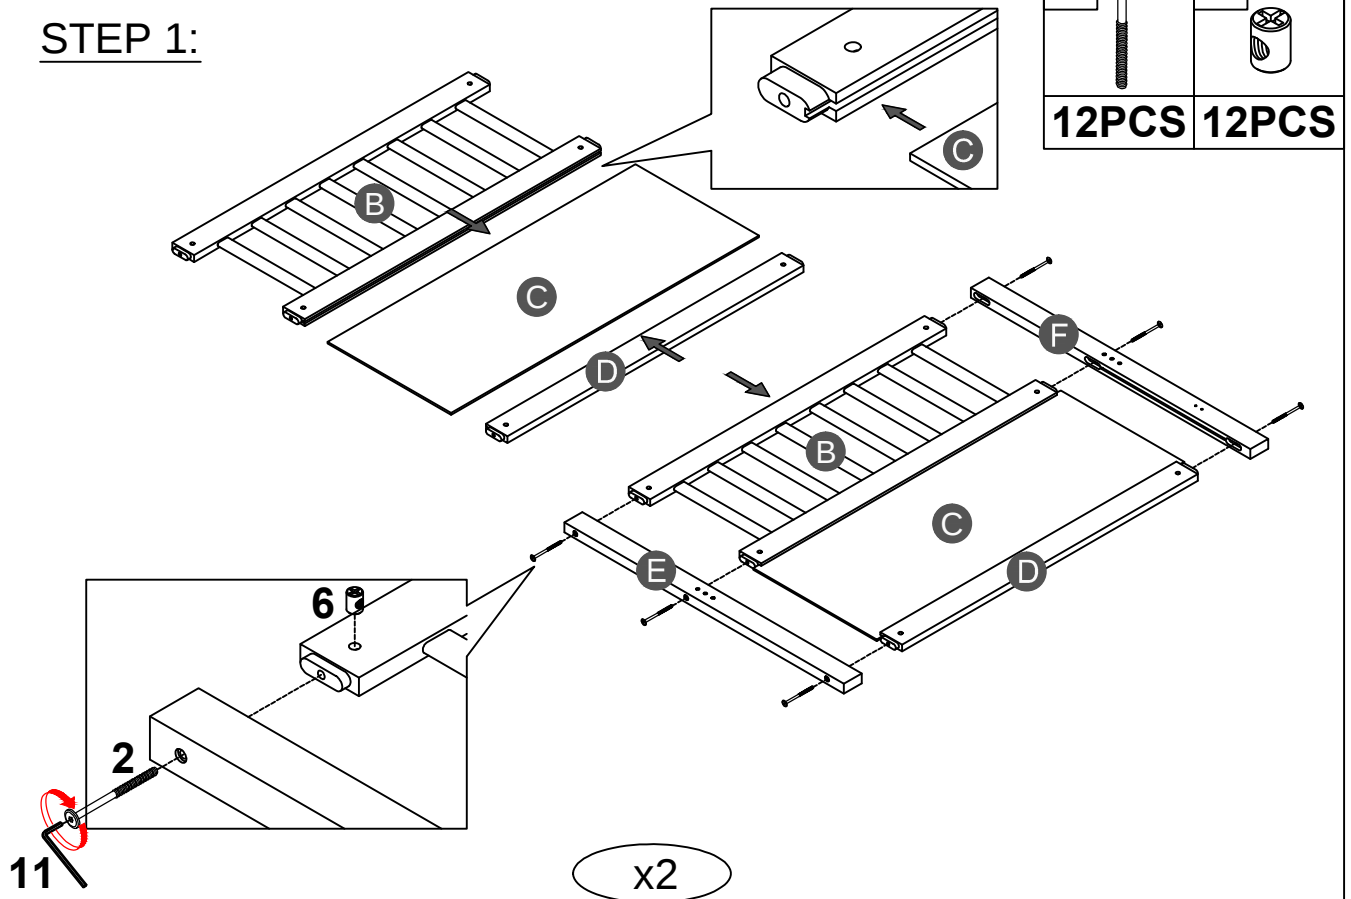

STEP 2:

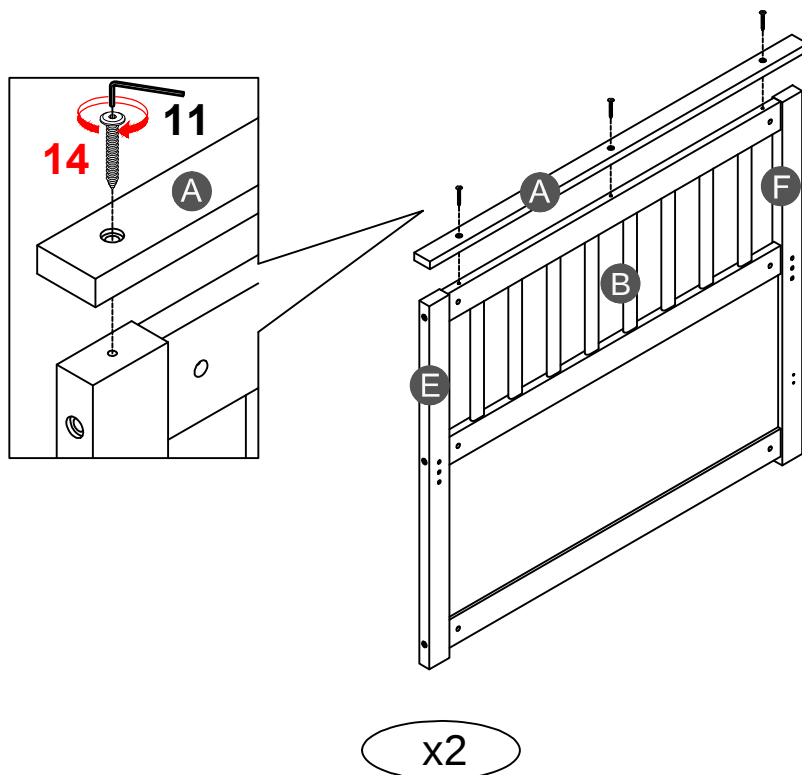


STEP 3:

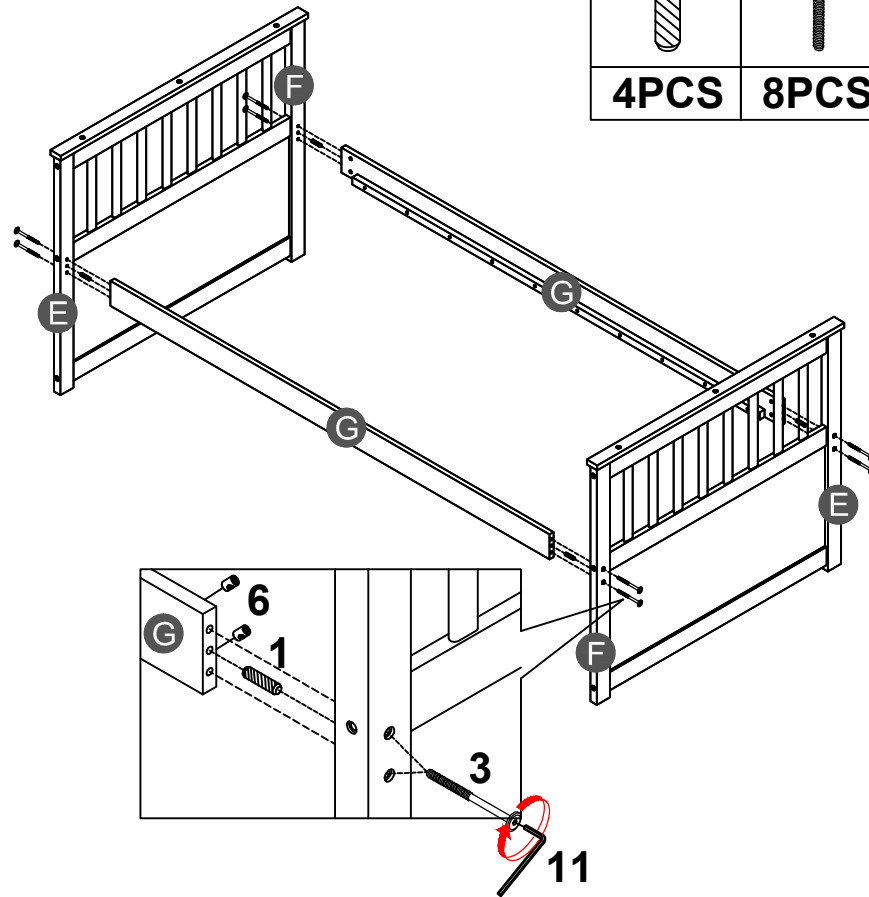

1	3	6
		
4PCS	8PCS	8PCS

STEP 4:

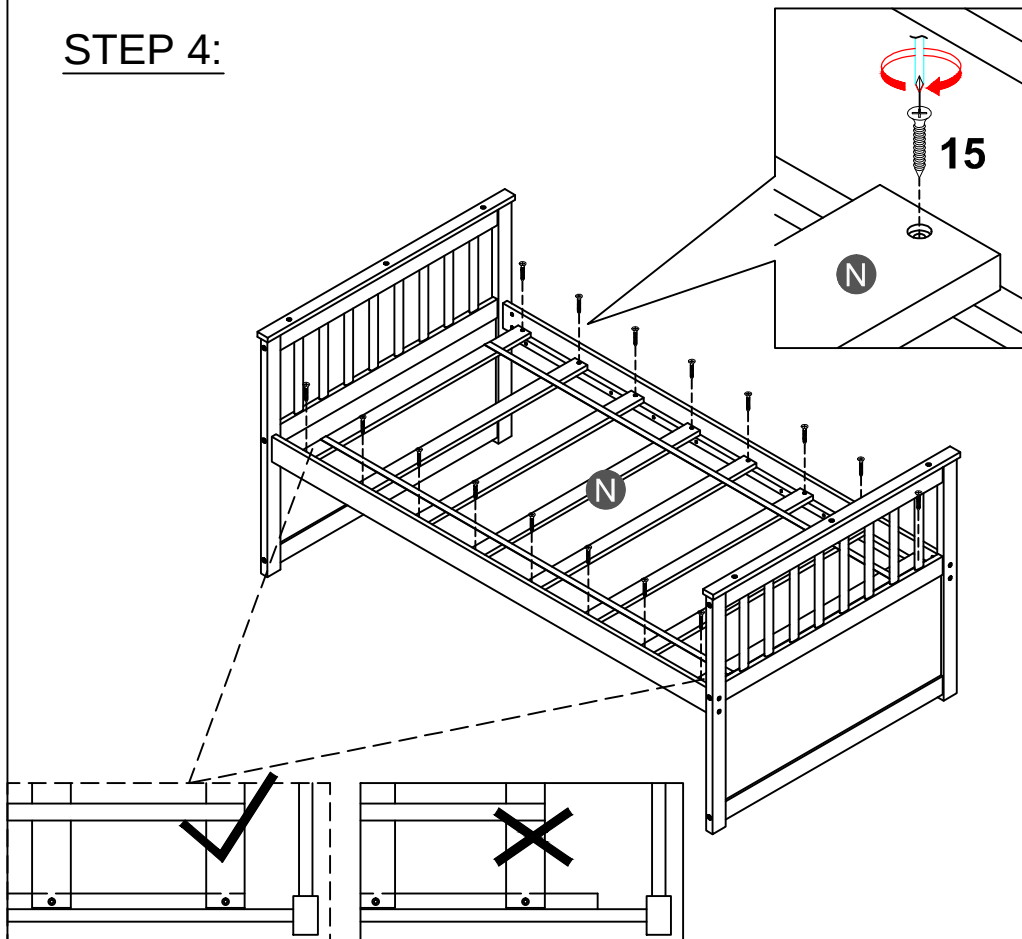


15

16PCS


STEP 5:

12	17
	
4PCS	8PCS

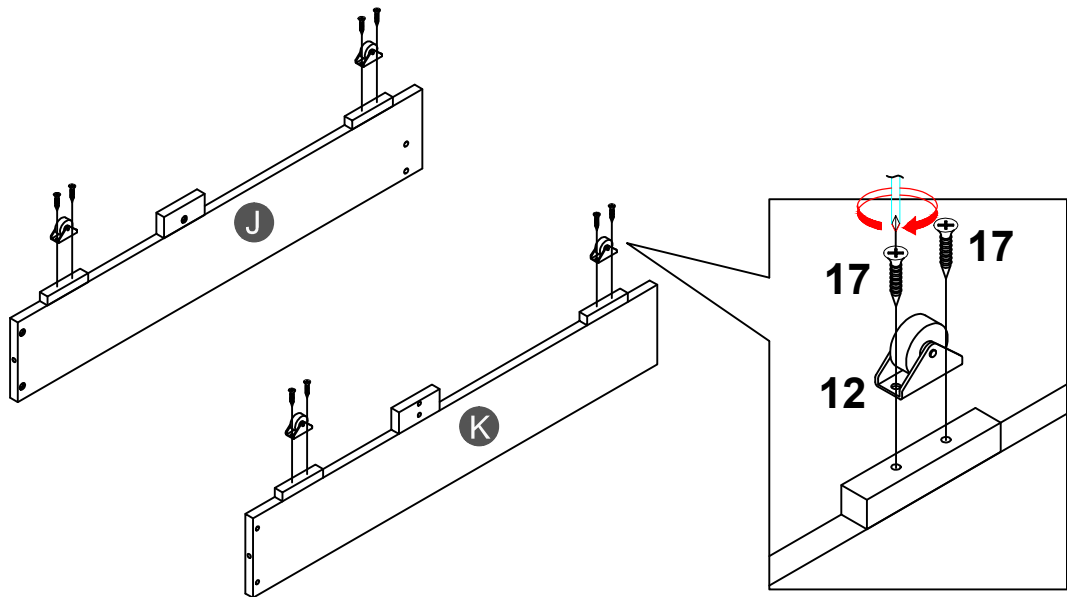


STEP 6:

1	3	4	6
			
2PCS	4PCS	2PCS	6PCS

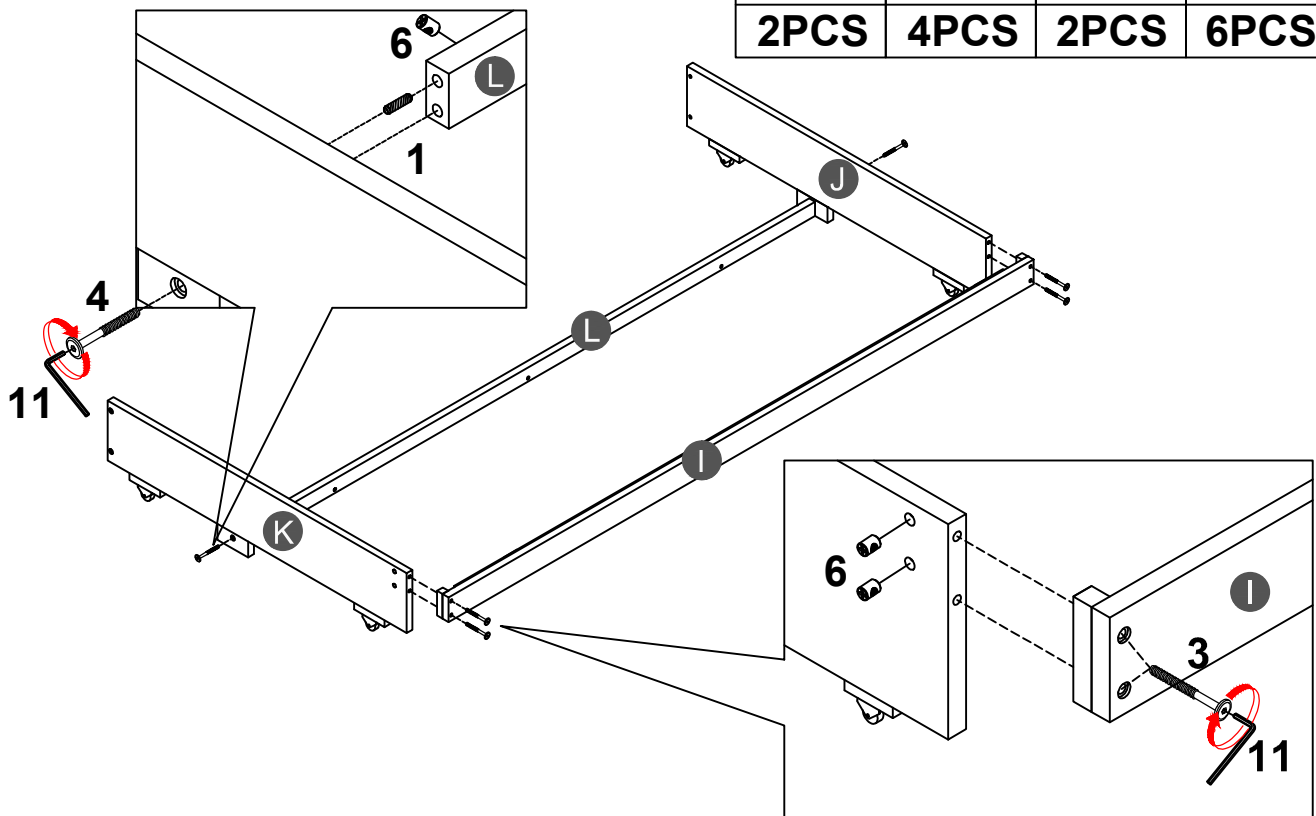


STEP 7:

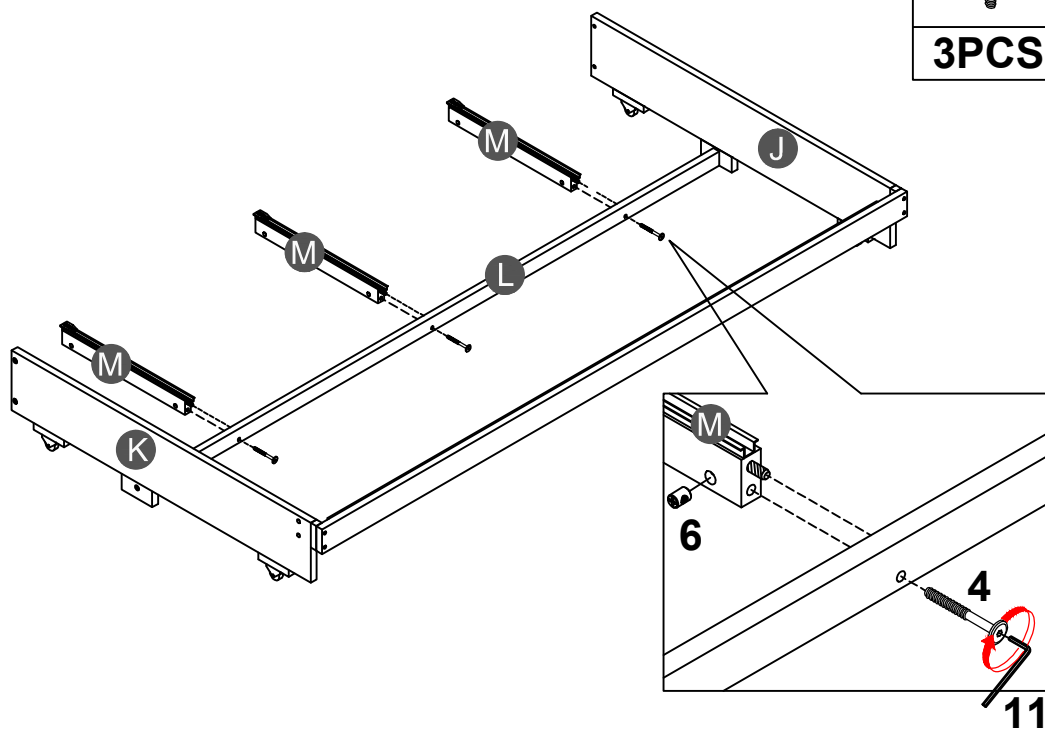

4		6	
3PCS		3PCS	

STEP 8:

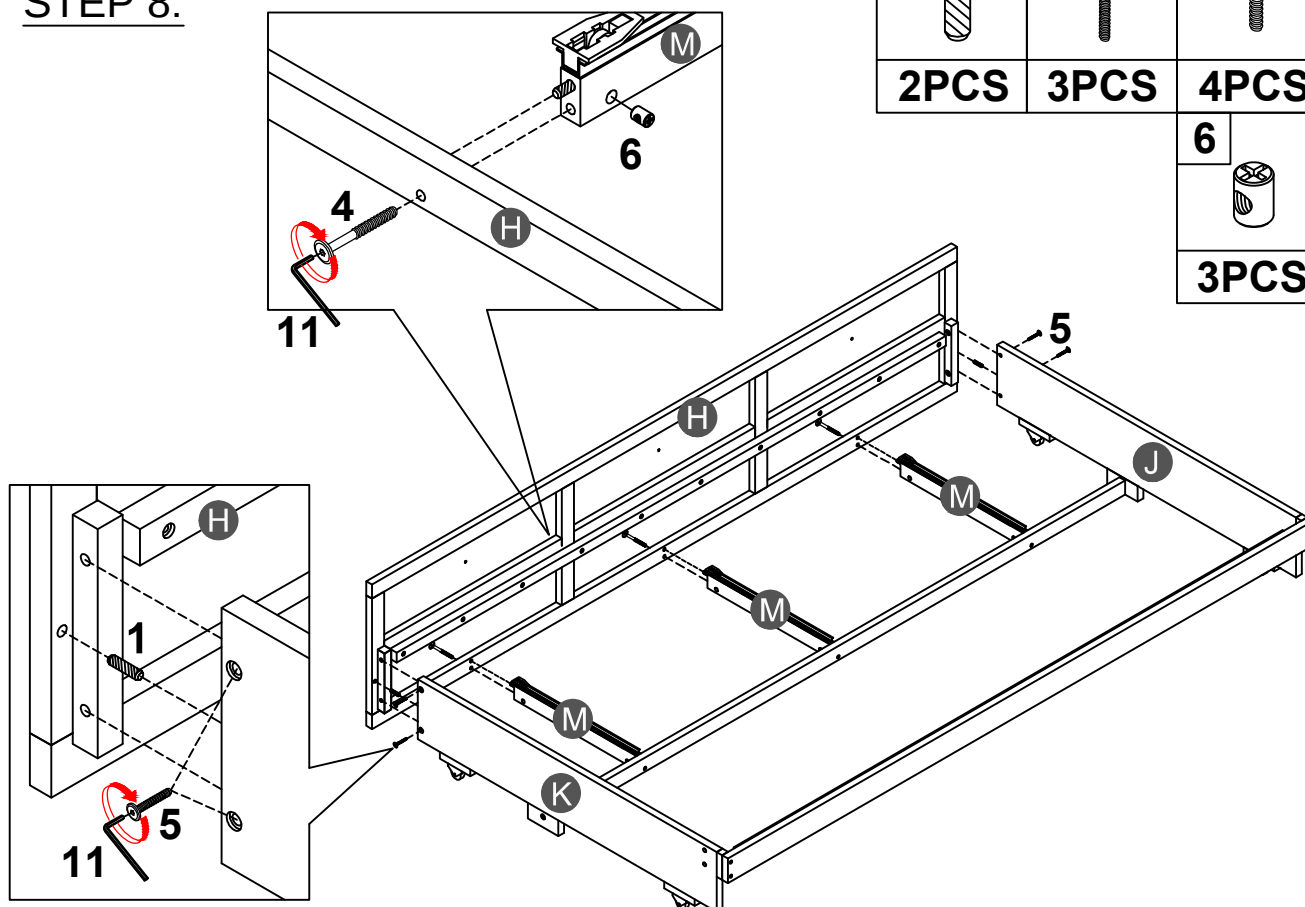




1		4		5	
2PCS		3PCS		4PCS	
				6	
				3PCS	

STEP 9:

15



16PCS

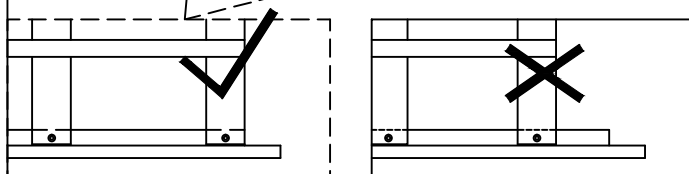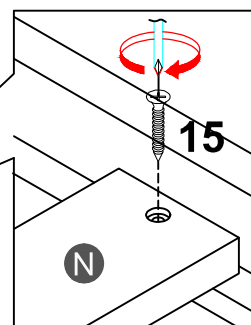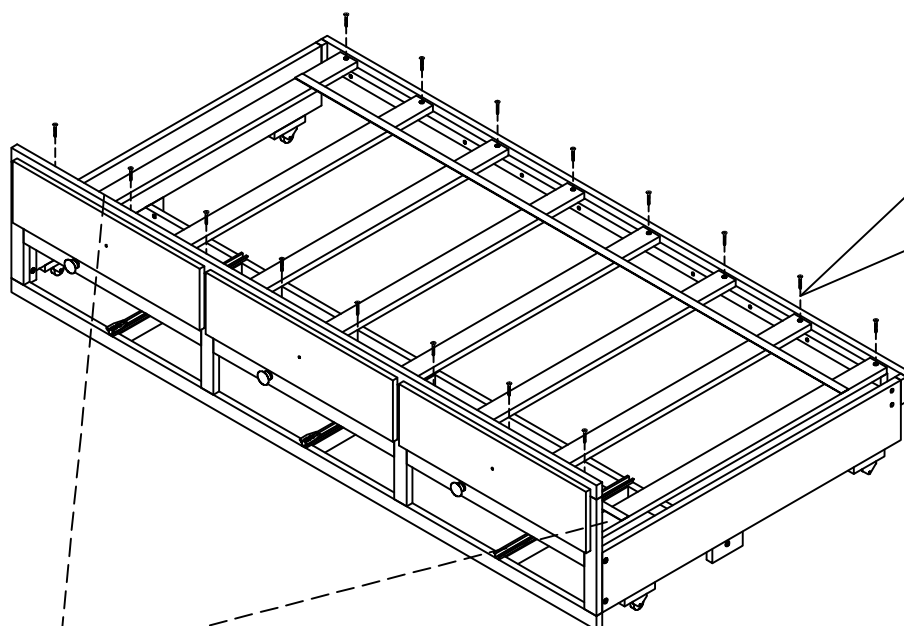


STEP 10:

13



12PCS

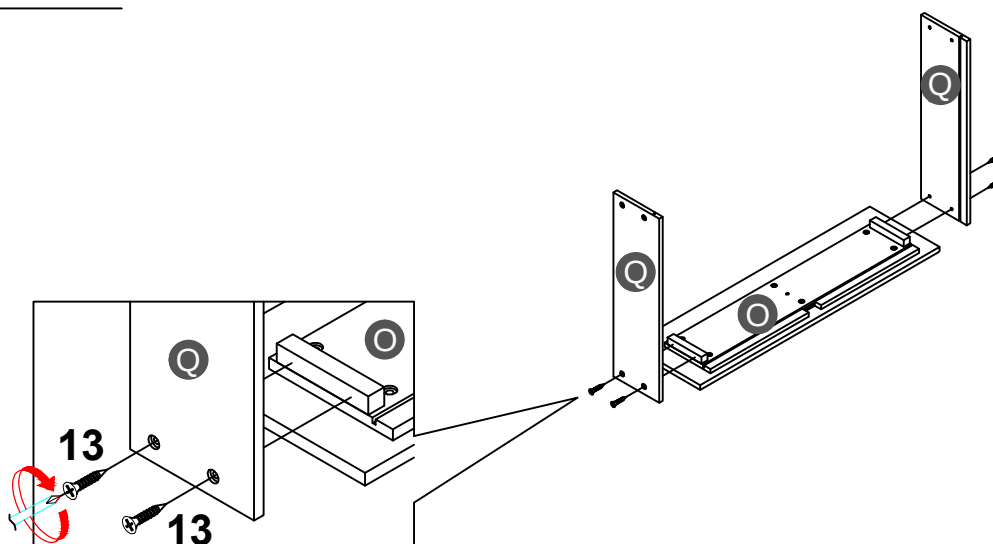


3 PCS

STEP 11:

13



12PCS

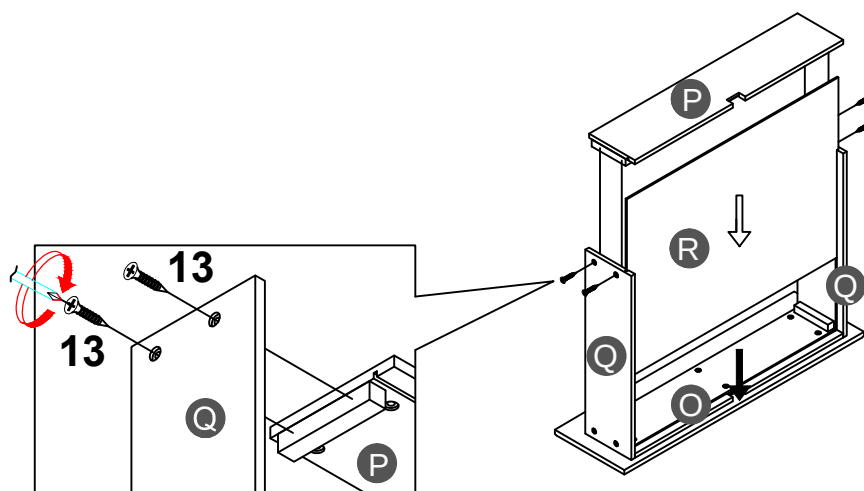

3 PCS

STEP 12:

10




3PCS

16




9PCS

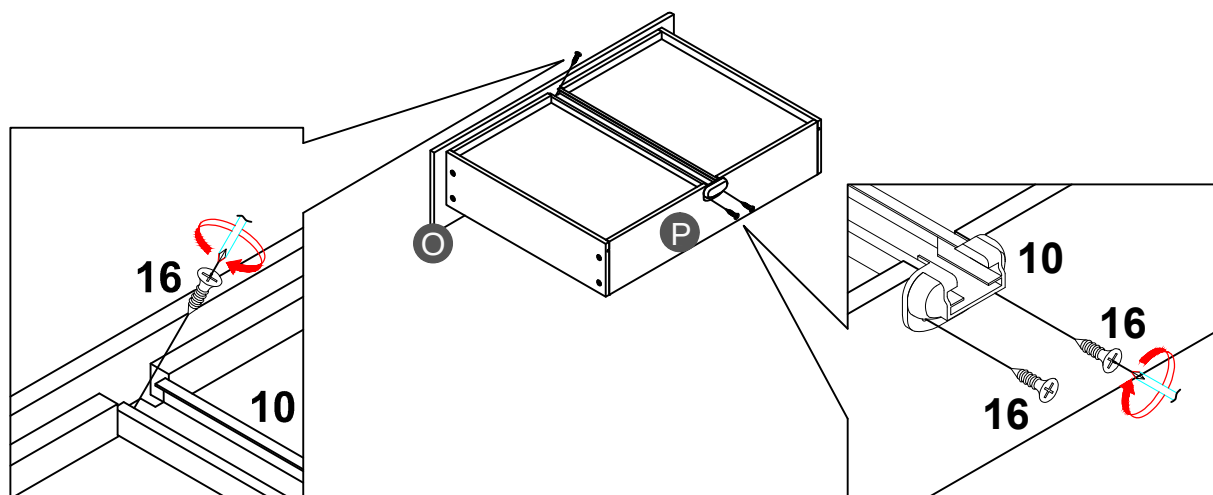

3 PCS


STEP 13:

7	9
	
3PCS	3PCS

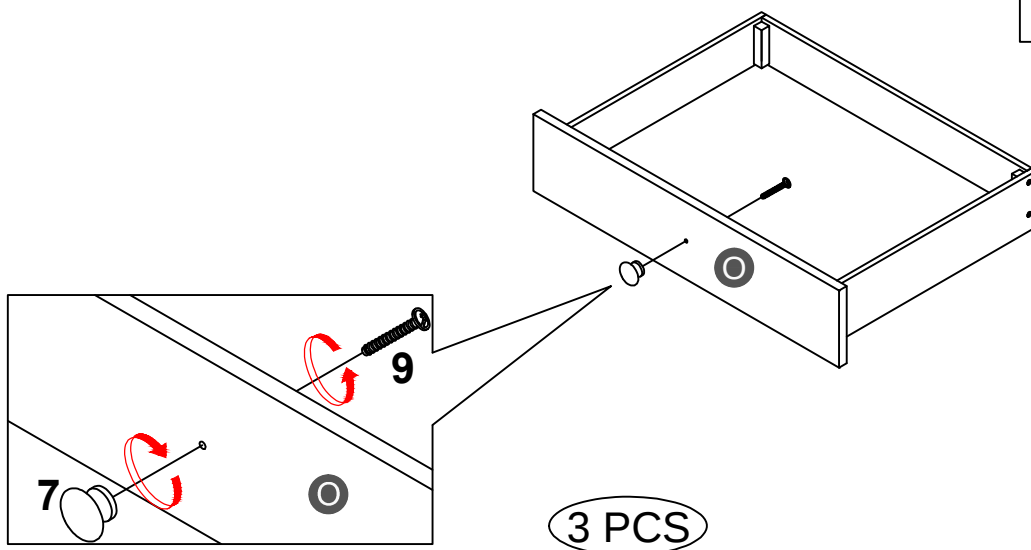


STEP 14:

7	8
	
3PCS	3PCS

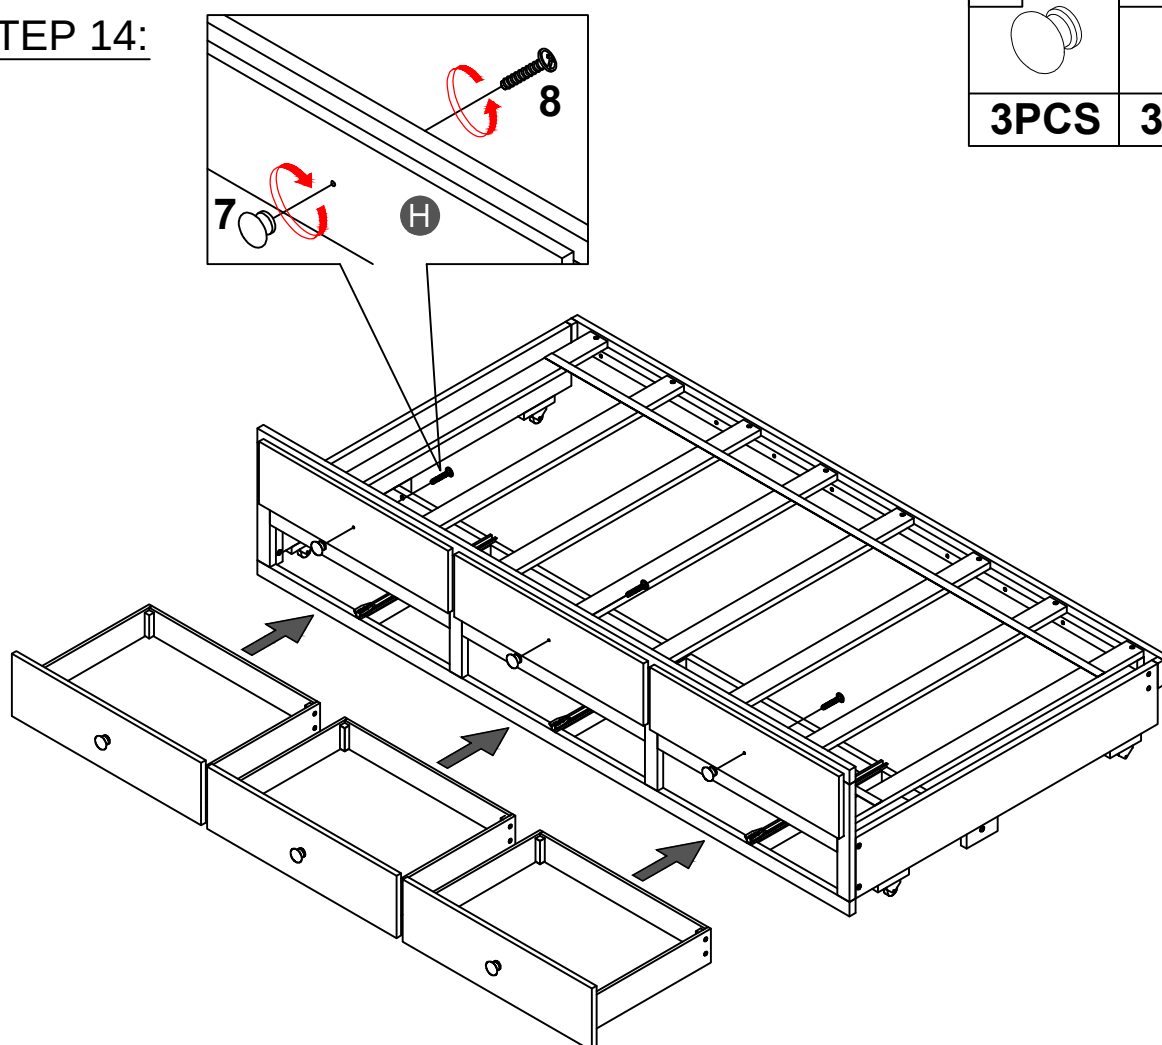

STEP 15:

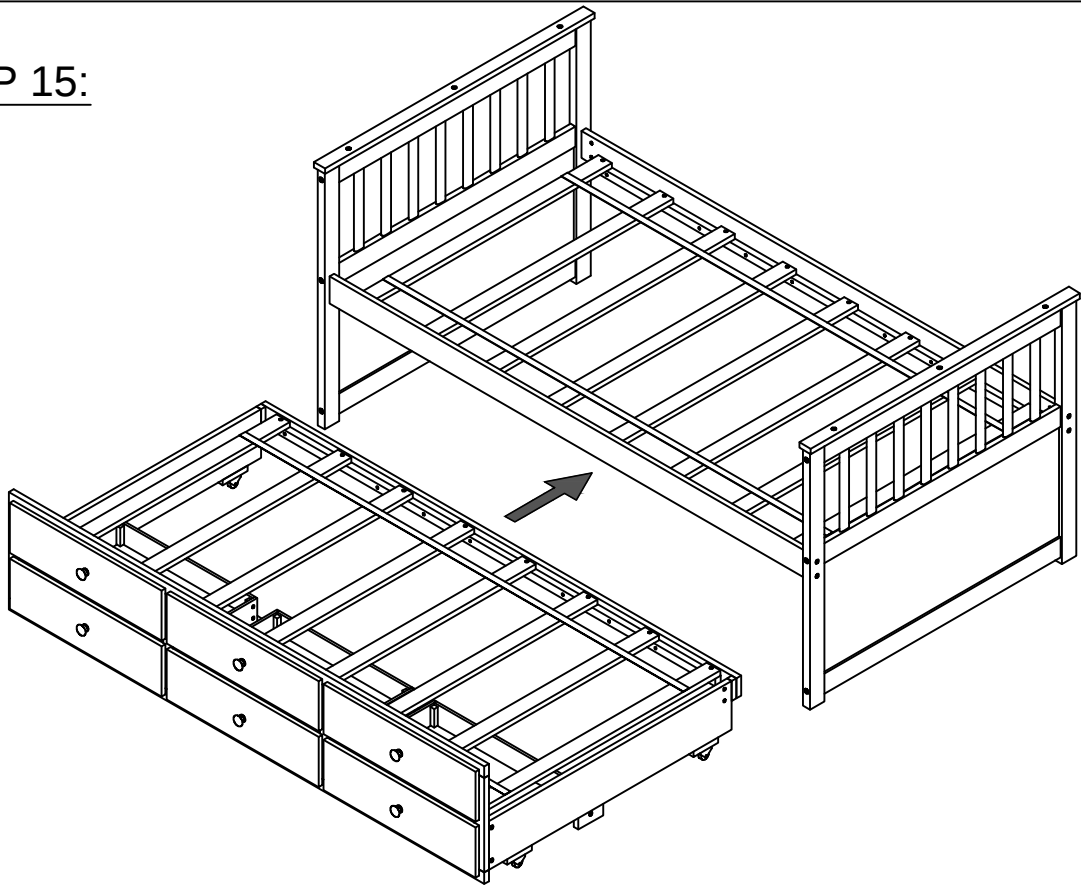

Push Trundle under the bottom of Twin bed.

